

EXPLODED VIEWS AND PARTS LIST

PACKING(Page 48)

PACKING SECTION PARTS LIST

Mark	No.	Description	DEH-8018ZT/XUUC	DEH-8228ZT/XUUC
	4-2	Owner's Manual(English)	CRB3644	CRB3881
	7	Contain Box	CHL7521	CHL7792

EXTERIOR(1)(Page 50)

EXTERIOR(1) SECTION PARTS LIST

*:Non spare part

Mark	No.	Description	DEH-8018ZT/XUUC	DEH-8228ZT/XUUC
	14	Grille Unit	CXE3851	CXE5373
	29	Panel Assy	CPN4268	CPN5003

EXTERIOR(2)(Page 52)

EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	DEH-8018ZT/XUUC	DEH-8228ZT/XUUC
	14	Sub Assy	CWN5553	CWN6669
	16	Main Unit	CWN6077	CWN6668
	25	Heat Cond Sheet	CNN4057	CNM9256(Sheet)

ELECTRICAL PARTS LIST(Page 95)

MAIN UNIT

Circuit Symbol and No.	Part Name	DEH-8018ZT/XUUC	DEH-8228ZT/XUUC
R930		RS1/8S511J	RS1/4SA511J
R932		RS1/10S100J	RS1/8SQ100J
R962		RS1/8S511J	RS1/4SA511J

KEYBOARD UNIT

Circuit Symbol and No.	Part Name	DEH-8018ZT/XUUC	DEH-8228ZT/XUUC
R1532		RS1/16S511J	RS1/10SR511J
R1549		RS1/16S5R1J	RS1/10SR5R1J
R1561		RS1/16S181J	RS1/10SR181J
R1562		RS1/16S182J	RS1/10SR182J
R1567		RS1/16S101J	RS1/10SR101J
R1568		RS1/16S102J	RS1/10SR102J
R1573		RS1/16S101J	RS1/10SR101J
R1574		RS1/16S102J	RS1/10SR102J
R1575		RS1/16S681J	RS1/10SR681J
R1576		RS1/16S182J	RS1/10SR182J
R1577		RS1/16S181J	RS1/10SR181J
R1578		RS1/16S182J	RS1/10SR182J
R1579		RS1/16S471J	RS1/10SR471J
R1580		RS1/16S681J	RS1/10SR681J
R1581		RS1/16S471J	RS1/10SR471J
R1582		RS1/16S681J	RS1/10SR681J
R1583		RS1/16S271J	RS1/10SR271J
R1584		RS1/16S272J	RS1/10SR272J
R1585		RS1/16S820J	RS1/10SR820J
R1586		RS1/16S152J	RS1/10SR152J
R1587		RS1/16S471J	RS1/10SR471J
R1588		RS1/16S681J	RS1/10SR681J
R1591		RS1/16S471J	RS1/10SR471J
R1592		RS1/16S681J	RS1/10SR681J
R1611		RS1/16S271J	RS1/10SR271J
R1612		RS1/16S272J	RS1/10SR272J
R1613		RS1/16S271J	RS1/10SR271J
R1614		RS1/16S272J	RS1/10SR272J

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.