

Service Manual

ORDER NO.
CRT3501

HIGH POWER CD/MP3/WMA PLAYER WITH FM/AM TUNER

DEH-27MP /XN/UC



This service manual should be used together with the following manual(s) listed below. For the parts numbers, adjustments, etc. which are not shown in this manual, refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
DEH-2750MP/XN/GS	CRT3396		
CX-3158	CRT3394	S10.1AAC	CD Mech. Module : Circuit Description, Mech. Description, Disassembly

SAFETY INFORMATION

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65


EXPLODED VIEWS AND PARTS LIST

PACKING(Page 8)

● PACKING SECTION PARTS LIST

* : Non spare part

Mark	No.	Description	DEH-2750MP/XN/GS	DEH-27MP/XN/UC
	1	Accessory Assy	CEA4850	CEA4610
	2	Screw Assy	CEA3849	CEA4611
	10	Polyethylene Bag	CEG-162	CEG1173
	11	Carton	CHG5434	CHG5578
	12	Contain Box	CHL5434	CHL5578
	15-1	Owner's Manual	CRD3939	CRD4001
	15-2	Installation Manual	CRD3940	CRD4002
*	15-4	Caution Card	Not used	CRP1294
*	15-5	Card	Not used	ARY1048
	16	Case Assy	CXB3520	Not used
	18	Screw	Not used	CBA1488

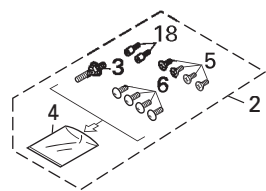


● Owner's Manual, Installation Manual

Part No.	Language
CRD4001	English, French, Spanish
CRD4002	English, French, Spanish

EXTERIOR(Page 10)

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	DEH-2750MP/XN/GS	DEH-27MP/XN/UC
	9	Tuner Amp Unit	CWM9693	CWN1393
	36	Screw	IMS20P030FZK	IMS20P030FTB
	38	Detach Grille Assy	CXC3748	CXC5516(Grille Assy)
	39	Screw	BPZ20P100FZK	BPZ20P100FTB
	56	Grille Unit	CXC3643	CXC5479
	61	Panel	YNS5045	CNS8046
	62	Screw	Not used	BMZ40P140FTC
	63	Holder	Not used	CNV7619

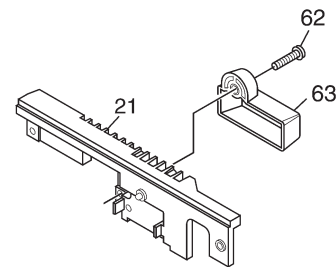

ELECTRICAL PARTS LIST(Page 42)

TUNER AMP UNIT

Circuit Symbol and No.	DEH-2750MP/XN/GS	DEH-27MP/XN/UC
IC601 IC	PE5447A	PE5523A
R151, 152	RD1/4PU471J	Not used
R153, 154	RS1/16S471J	RS1/16S0R0J
R353, 354	RS1/16S331J	RS1/16S821J