



EXPLODED VIEW (MECHANISM)

A	φ2x3.5	: N09-4126-05
B	φ2x2.5(BLK)	: N09-4288-05
C	φ2x5	: N86-2005-46
D	φ1.7x1.5(BLK)	: N09-4189-05
E	φ2x6	: N09-4154-05
F	M1.7x3	: N09-4181-05
G	M1.7x2.2	: N39-1722-46
H	φ2x3.5	: N09-4349-05
J	WASHER φ3.8	: N19-2105-14
K	WASHER φ4	: N19-2058-04
L	WASHER φ3.8	: N19-2080-14
M	WASHER φ3.5	: N19-2028-04

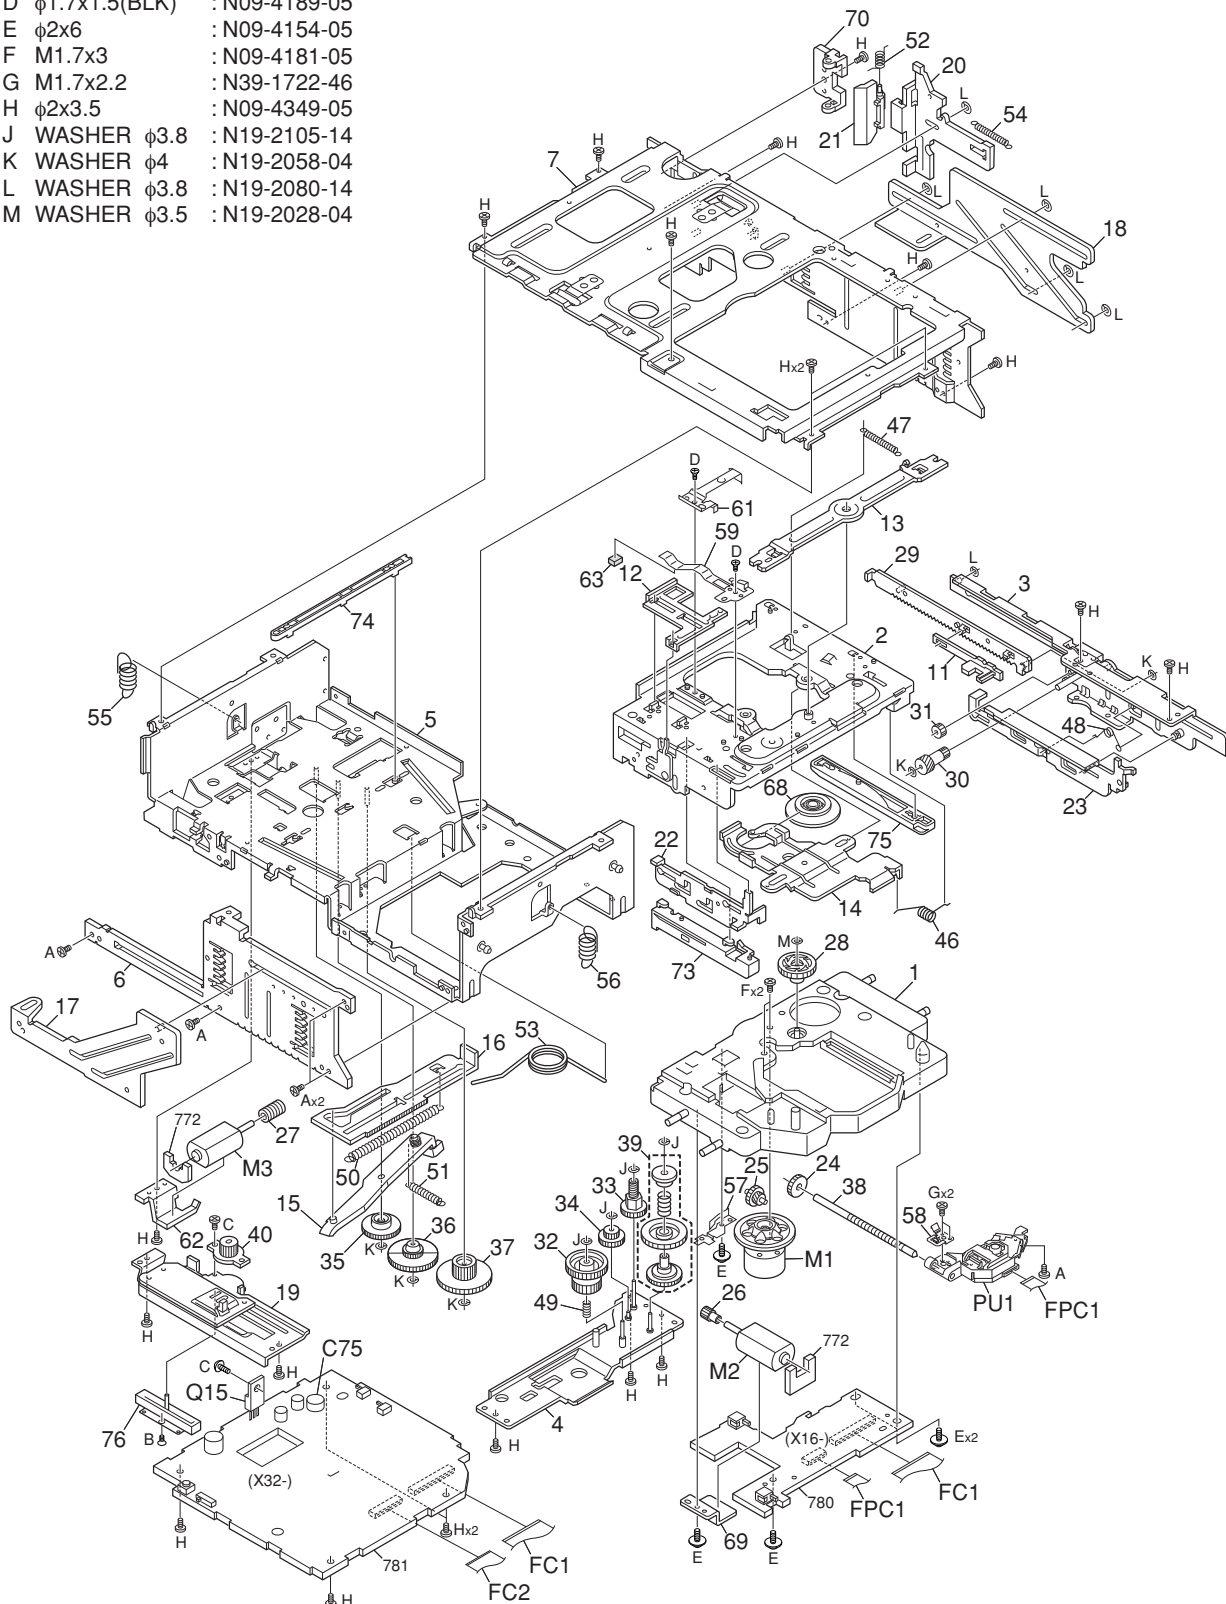


EXPLODED VIEW (UNIT)

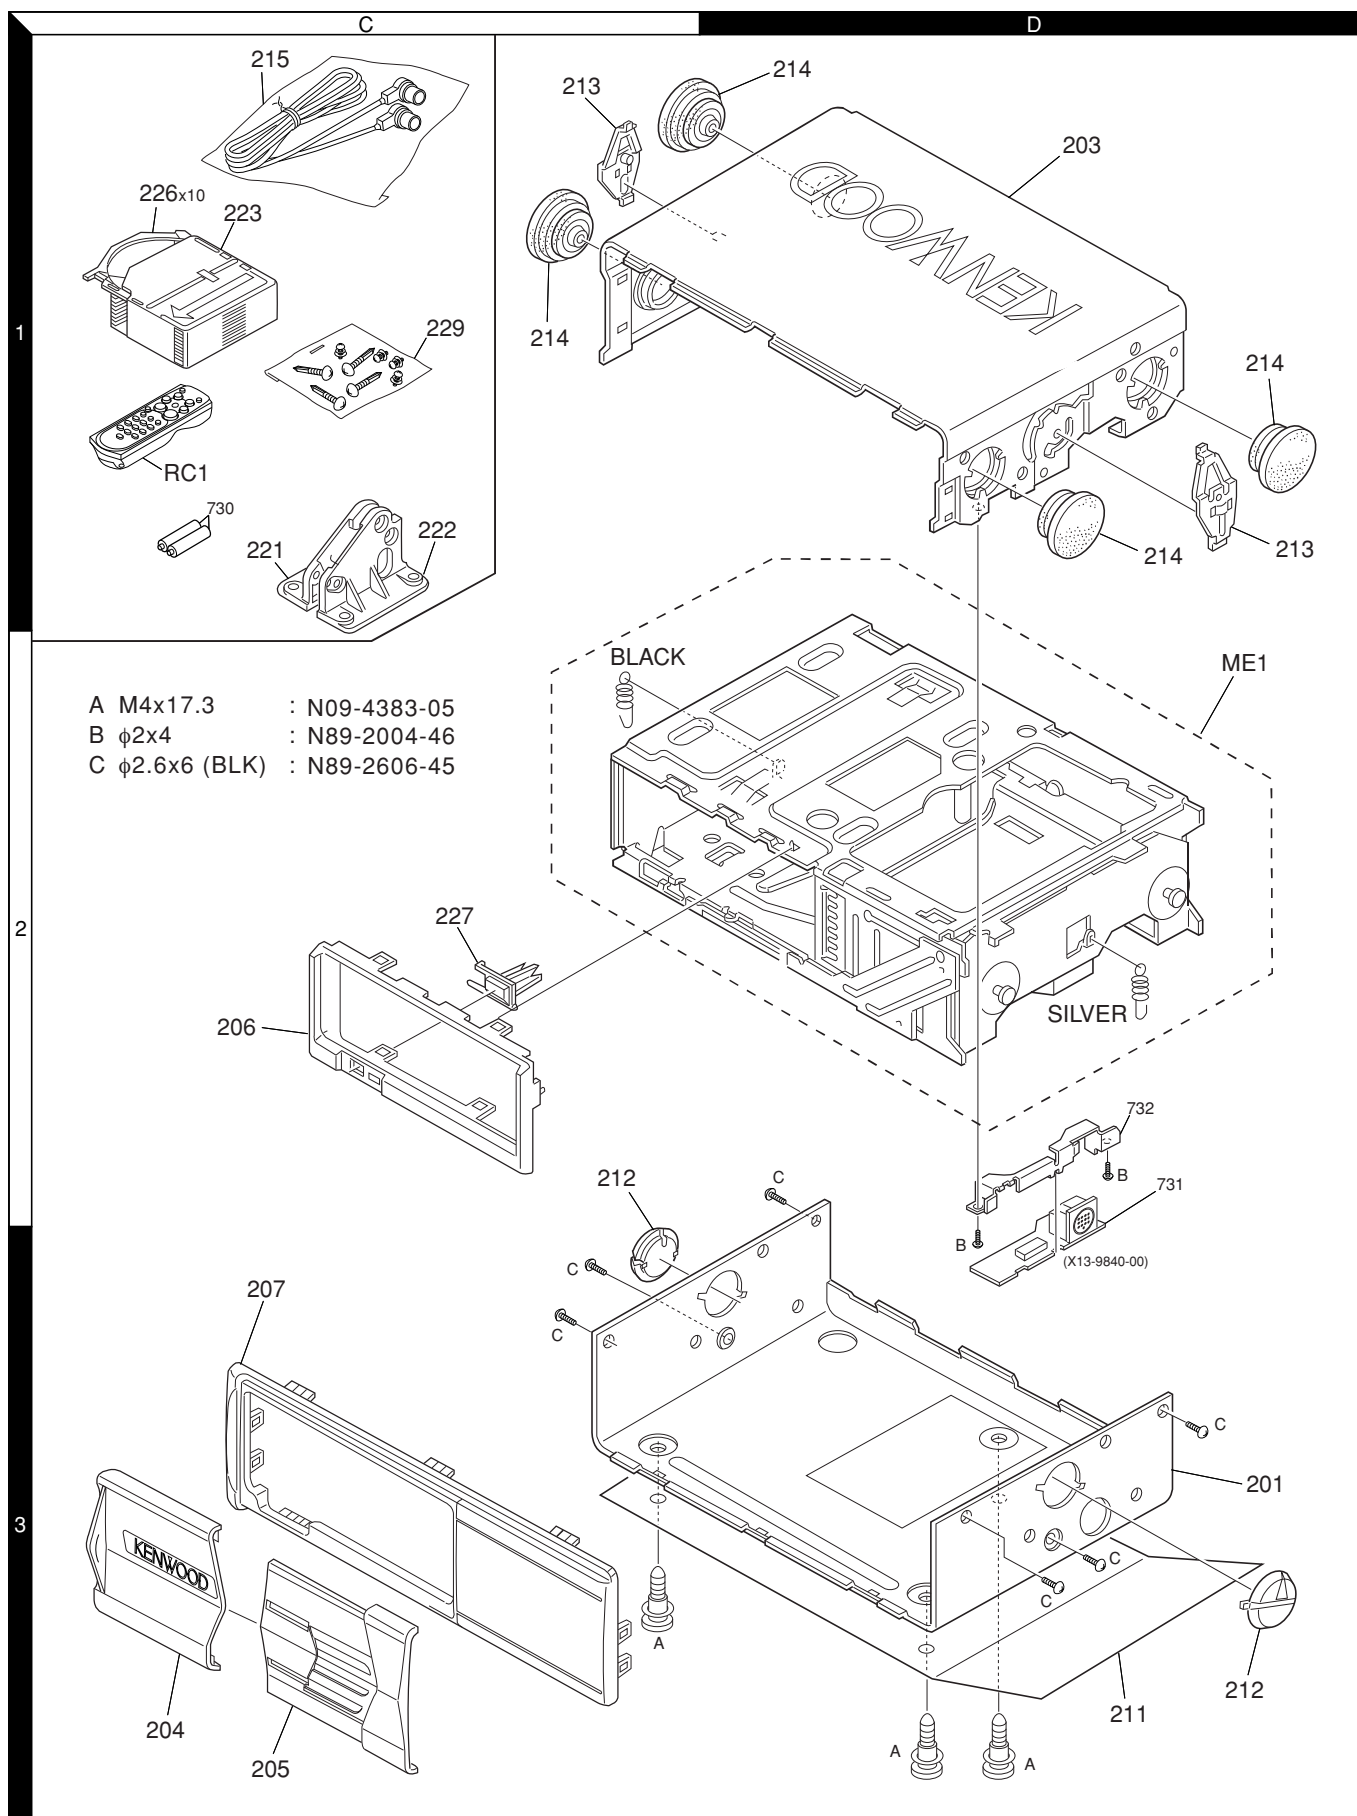

A M4x17.3 : N09-4383-05
B $\phi 2 \times 4$: N89-2004-46
C $\phi 2.6 \times 6$ (BLK) : N89-2606-45

EXPLODED VIEW (RF MODULATOR / DISPLAY UNIT)

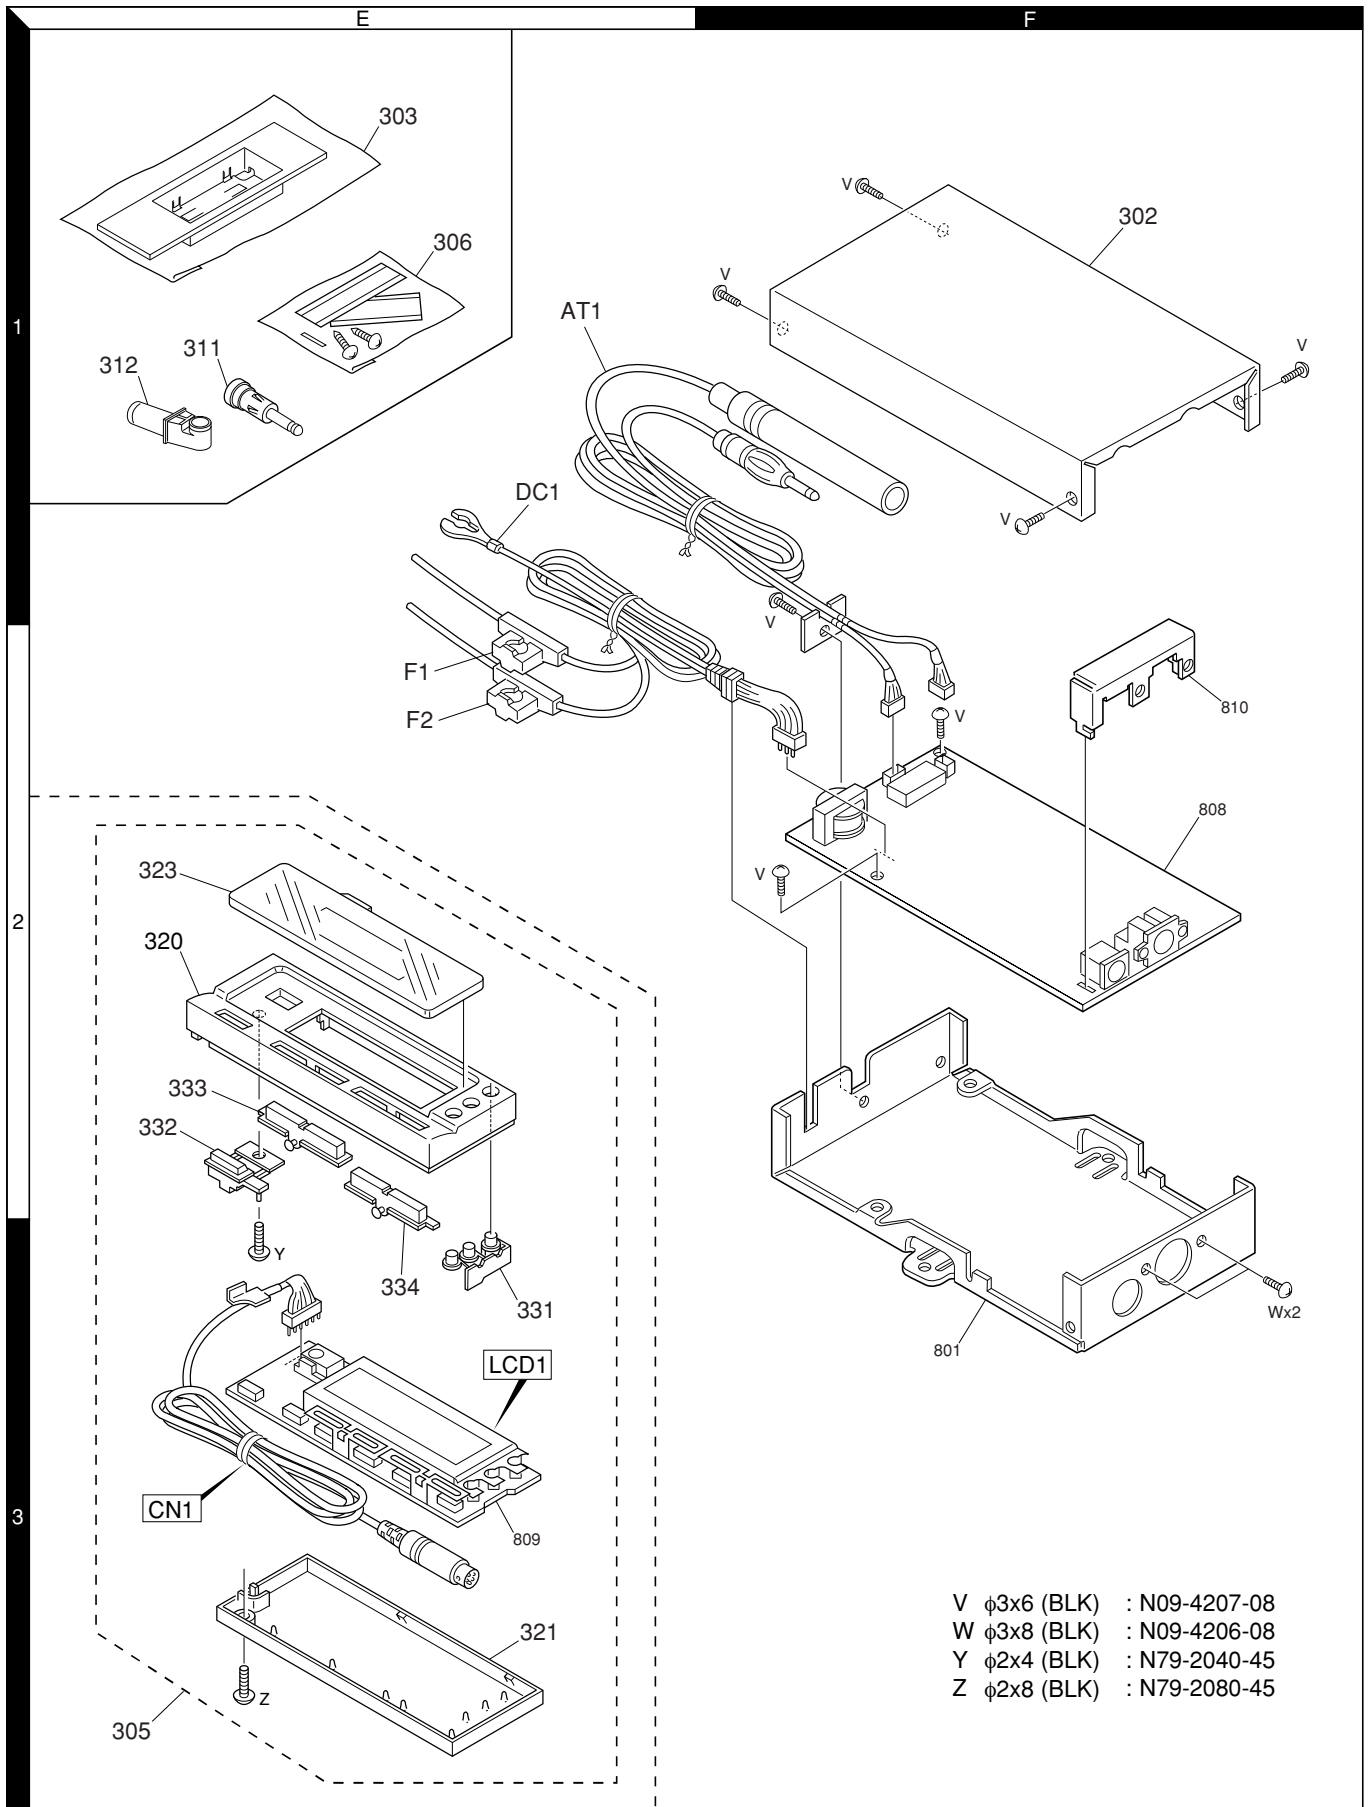

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Added	New	Parts No.	Description	Destination
KDC-C469/Y/FM/FMA, C669/Y					
201	3D		A10-4736-01	CHASSIS	E3E4E5
201	3D		A10-4736-01	CHASSIS	E6
201	3D		A10-4736-01	CHASSIS	M1E1E2
201	3D		A10-4837-01	CHASSIS	KK1K2
201	3D	*	A10-4876-01	CHASSIS	KK1K2
203	1D		A01-2727-11	METALLIC CABINET	E3E4E5
203	1D		A01-2727-11	METALLIC CABINET	E6
203	1D		A01-2727-11	METALLIC CABINET	M1E1E2
203	1D		A01-2744-11	METALLIC CABINET	KK1K2
203	1D	*	A01-2768-01	METALLIC CABINET	KK1K2
204	3C		A21-3530-12	DRESSING PANEL	E3E4E5
204	3C		A21-3530-12	DRESSING PANEL	M1E1E2
204	3C		A21-4080-02	DRESSING PANEL	KK1K2
205	3C		A21-3532-12	DRESSING PANEL	E3E4E5
205	3C		A21-3532-12	DRESSING PANEL	M1E1E2
205	3C		A21-4081-02	DRESSING PANEL	KK1K2
206	2C	*	A22-2845-02	SUB PANEL	
207	3C	*	A64-2904-01	PANEL	M1E1E3
207	3C	*	A64-2905-01	PANEL	E2E4
207	3C	*	A64-2906-01	PANEL	E5E6
207	3C	*	A64-2957-01	PANEL	K
207	3C	*	A64-2958-01	PANEL	K1
207	3C	*	A64-3111-01	PANEL	K2
RC1	1C		A70-2032-05	REMOTE CONTROLLER (RC-504FM)	E5E6
-			B46-0100-50	WARRANTY CARD	
-			B46-0182-14	ID CARD	E1E2E3
-			B46-0182-14	ID CARD	E4E5E6
-			B58-1236-04	CAUTION CARD (CORD)	
-			B58-1275-04	CAUTION CARD	
-			B58-1285-04	CAUTION CARD (O-N FORMAT SW)	E4E5E6
-			B58-1285-04	CAUTION CARD (O-N FORMAT SW)	KK1K2
-			B58-1285-04	CAUTION CARD (O-N FORMAT SW)	M1E2E3
-			B58-1289-04	CAUTION CARD (O-N FORMAT SW)	E1E2
-		*	B64-2346-00	INST.MANUAL(ENG,FRE,SPA,POR)	E4
-		*	B64-2346-00	INST.MANUAL (ENG,FRE,SPA,POR)	KK1K2E3
-		*	B64-2347-00	INST.MANUAL (ENG,FRE,SPA,POR)	K2E5E6
-		*	B64-2350-00	INST.MANUAL (ENG,T-CHI)	M1
-		*	B64-2351-00	INST.MANUAL (ARA)	M1
-		*	B64-2355-00	INST.MANUAL (ENG,RUS,POL)	E1E2
-		*	B64-2356-00	INST.MANUAL (CZE,HUN,CRO)	E1E2
-		*	B64-2365-00	INST.MANUAL (GER,DUT,ITA)	E3E4
-		*	B64-2369-00	INST.MANUAL (GER,DUT,ITA)	E5E6
211			B38-1275-04	CAUTION CARD (TRANSPORT)	
212	3D		D10-4515-03	ARM	
213	1C		D10-4516-04	LEVER	
214	1C		D39-0242-05	DAMPER	
215	1C		E30-4291-05	CORD WITH PLUG	E1E2E3
215	1C		E30-4291-05	CORD WITH PLUG	E4E5E6
215	1C		E30-4291-05	CORD WITH PLUG	K1K2K3
215	1C		E30-4291-05	CORD WITH PLUG	M1
215	1C	*	E30-4954-15	CORD WITH PLUG	E1E2E3
215	1C	*	E30-4954-15	CORD WITH PLUG	E4E5E6

Ref. No.	Added	New	Parts No.	Description	Destination
215	1C	*	E30-4954-15	CORD WITH PLUG	K1K2K3
215	1C	*	E30-4954-15	CORD WITH PLUG	M1
-			H02-0828-03	INNER CARTON CASE	
-			H10-4730-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E2E3E4
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E5E6
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	K2M1E1
-			H25-1115-04	PROTECTION BAG	KK1
-		*	H54-2599-04	ITEM CARTON CASE	KE3
-		*	H54-2600-04	ITEM CARTON CASE	K1E4
-		*	H54-2601-04	ITEM CARTON CASE	K2E5E6
-		*	H54-2602-04	ITEM CARTON CASE	M1
-		*	H54-2603-04	ITEM CARTON CASE	E1
-		*	H54-2604-04	ITEM CARTON CASE	E2
221	1C		J19-5020-03	BRACKET (L)	
222	1C		J19-5021-03	BRACKET (R)	
223	1C		J19-5149-02	HOLDER ASS'Y	
226	1C	*	J99-0614-01	TRAY	
227	2C		K24-3629-04	KNOB	
228	1C		N99-1645-15	SCREW SET	
A	3D		N09-4383-05	STEPPED SCREW	
B	2D		N89-2004-46	BINDING HEAD TAPTITE SCREW	
C	3D		N89-2606-45	BINDING HEAD TAPTITE SCREW	
ME1	2D	*	X92-4770-00	MECHANISM ASS'Y (CHM-2080W)	E3
ME1	2D	*	X92-4770-00	MECHANISM ASS'Y (CHM-2080W)	KM1E1
ME1	2D	*	X92-4770-01	MECHANISM ASS'Y (CHM-2081W)	K2E5E6
ME1	2D	*	X92-4770-02	MECHANISM ASS'Y (CHM-2082W)	K1E2E4
SUB-CIRCUIT UNIT (X13-9840-00)					
CN1			E40-9555-05	FLAT CABLE CONNECTOR (16PIN)	
J1			E56-0825-05	FLAT CABLE CONNECTOR	
SUB-CIRCUIT UNIT (X16-1010-00)					
CN1			E40-9487-05	FLAT CABLE CONNECTOR (23PIN)	
CN2			E40-9536-05	FLAT CABLE CONNECTOR (16PIN)	
W1,2			R92-2053-05	CHIP R 0 J 1/8W	
S1,2			S74-0811-05	MICRO SWITCH	
CD PLAYER UNIT (X32-5470-0x)					
C2			C92-0628-05	CHIP-TAN 10UF 10WV	
C3			CK73GB1H682K	CHIP C 6800PF K	
C4			CK73GB1H152K	CHIP C 1500PF K	
C5			CC73GCH1H470J	CHIP C 47PF J	
C6			CC73GCH1H680J	CHIP C 68PF J	
C7			CC73GCH1H040C	CHIP C 4.0PF C	
C8			CC73GCH1H180J	CHIP C 18PF J	
C9			CK73GB1A224K	CHIP C 0.22UF K	
C10			CK73GB1H222K	CHIP C 2200PF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12,13			CK73GB1H103K	CHIP C 0.010UF K	
C14-16			CK73GB1C104K	CHIP C 0.10UF K	
C17			CK73FB1A225K	CHIP C 2.2UF K	
C19			CK73FB1A225K	CHIP C 2.2UF K	

K : KDC-C669 **E1** : KDC-C669Y **E5** : KDC-C469FM
K1 : KDC-C469 **E2** : KDC-C469Y **E6** : KDC-C469FMA
K2 : KDC-C469FM **E3** : KDC-C669
M1 : KDC-C669 **E4** : KDC-C469

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5470-0x)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C21			CK73GB1H681K	CHIP C 680PF K		R21			RK73GB2A123J	CHIP R 12K J 1/10W	
C23			CK73EB1A475K	CHIP C 4.7UF K		R22			RK73GB2A183J	CHIP R 18K J 1/10W	
C24			CK73GB1H102K	CHIP C 1000PF K		R25			RK73GB2A113J	CHIP R 11K J 1/10W	
C34			C92-0628-05	CHIP-TAN 10UF 10WV		R26			RK73EB2E123J	CHIP R 12K J 1/4W	
C46,47			C92-1393-05	ELECTRO 10UF 16WV		R53,54			RK73GB2A681J	CHIP R 680 J 1/10W	
C48,49			CK73GB1H681K	CHIP C 680PF K		R57,58			RK73GB2A223J	CHIP R 22K J 1/10W	
C52			CK73EB1A475K	CHIP C 4.7UF K		R59			RK73GB2A914J	CHIP R 910K J 1/10W	
C55			C92-0628-05	CHIP-TAN 10UF 10WV		R60,61			RK73EB2E101J	CHIP R 100 J 1/4W	
C56			CK73EB1A475K	CHIP C 4.7UF K		R67			RK73GB2A124J	CHIP R 120K J 1/10W	
C59			C92-1390-05	ELECTRO 100UF 6.3WV		R68			RK73EB2E124J	CHIP R 120K J 1/4W	
C60			CK73EB1A475K	CHIP C 4.7UF K		R69,70			RK73GB2A303J	CHIP R 30K J 1/10W	
C61			CK73GB1C104K	CHIP C 0.10UF K		R71			RK73GB2A912J	CHIP R 9.1K J 1/10W	
C62			C92-1392-05	ELECTRO 100UF 10WV		R72,73			RK73GB2A101J	CHIP R 100 J 1/10W	
C63			CK73EB1A475K	CHIP C 4.7UF K		R74,75			RK73GB2A223J	CHIP R 22K J 1/10W	
C64			C92-1388-05	ELECTRO 470UF 16WV		R76			RK73GB2A104J	CHIP R 100K J 1/10W	
C67-69			CK73GB1C104K	CHIP C 0.10UF K		R77			RK73GB2A183J	CHIP R 18K J 1/10W	
C70			CC73GCH1H101J	CHIP C 100PF J		R78			RK73GB2A104J	CHIP R 100K J 1/10W	
C71,72			CK73FB1A225K	CHIP C 2.2UF K		R79			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C73			CK73GB1C104K	CHIP C 0.10UF K		R80			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C73			CK73GB1C104K	CHIP C 0.10UF K	E3E1 KM1	R81			RK73GB2A103J	CHIP R 10K J 1/10W	
C85			CK73FB1A225K	CHIP C 2.2UF K		R82-84			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C192			CK73GB1H681K	CHIP C 680PF K		R85-87			RK73GB2A104J	CHIP R 100K J 1/10W	
C200-206			CK73GB1C104K	CHIP C 0.10UF K		R93			RK73GB2A224J	CHIP R 220K J 1/10W	
C300			C92-0712-05	CHIP-TAN 22UF 6.3WV		R95,96			RK73GB2A104J	CHIP R 100K J 1/10W	
C301			CK73GB1C104K	CHIP C 0.10UF K		R97,98			RK73GB2A103J	CHIP R 10K J 1/10W	
CN1			E40-9338-05	FLAT CABLE CONNECTOR		R99			RK73GB2A104J	CHIP R 100K J 1/10W	
CN2			E40-9404-05	FLAT CABLE CONNECTOR		R100,101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L2			L92-0322-05	CHIP FERRITE		R102			RK73GB2A104J	CHIP R 100K J 1/10W	
X1			L78-0596-05	RESONATOR (16.93MHz)		R105,106			RK73GB2A102J	CHIP R 1.0K J 1/10W	
X2			L78-0568-05	RESONATOR (12.5MHz)		R107			RK73GB2A101J	CHIP R 100 J 1/10W	
CP1			R90-0720-05	MULTI-COMP 100K X4		R108			RK73GB2A104J	CHIP R 100K J 1/10W	
CP3			R90-0720-05	MULTI-COMP 100K X4		R110,111			RK73GB2A104J	CHIP R 100K J 1/10W	
CP5,6			R90-1014-05	MULTI-COMP 100 X4		R114			RK73GB2A103J	CHIP R 10K J 1/10W	
CP7,8			R90-0720-05	MULTI-COMP 100K X4		R120			RK73GB2A393J	CHIP R 39K J 1/10W	
CP9			R90-0725-05	MULTI-COMP 1K X2		R121			RK73GB2A103J	CHIP R 10K J 1/10W	
CP10,11			R90-1014-05	MULTI-COMP 100 X4		R122,123			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CP10,11			R90-1014-05	MULTI-COMP 100 X4	E1E3 KM1	R124			RK73GB2A223J	CHIP R 22K J 1/10W	
CP12			R90-1014-05	MULTI-COMP 100 X4		R127			RK73GB2A104J	CHIP R 100K J 1/10W	
CP14,15			R90-0720-05	MULTI-COMP 100K X4		R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CP16			R90-0724-05	MULTI-COMP 1K X4		R133,134			RK73GB2A104J	CHIP R 100K J 1/10W	
CP17			R90-0720-05	MULTI-COMP 100K X4		R135-138			RK73GB2A101J	CHIP R 100 J 1/10W	
R4			RK73GB2A391J	CHIP R 390 J 1/10W		R139-143			RK73GB2A104J	CHIP R 100K J 1/10W	
R5			RK73GB2A302J	CHIP R 3.0K J 1/10W		R148,149			RK73GB2A101J	CHIP R 100 J 1/10W	
R7			RK73GB2A302J	CHIP R 3.0K J 1/10W		R150			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R8			RK73EB2E100J	CHIP R 10 J 1/4W		R152			RK73GB2A913J	CHIP R 91K J 1/10W	
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W		R153,154			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W		R155,156			RK73GB2A101J	CHIP R 100 J 1/10W	
R11-14			RK73GB2A103J	CHIP R 10K J 1/10W		R157			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4E5E6 K1K2E2
R15			RK73GB2A104J	CHIP R 100K J 1/10W		R157			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R16			RK73GB2A562J	CHIP R 5.6K J 1/10W		R161			RK73GB2A163J	CHIP R 16K J 1/10W	
R17			RK73EB2E103J	CHIP R 10K J 1/4W		R162			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18			RK73GB2A103J	CHIP R 10K J 1/10W		R190			RK73GB2A223J	CHIP R 22K J 1/10W	
R19			RK73GB2A333J	CHIP R 33K J 1/10W		R191			RK73GB2A123J	CHIP R 12K J 1/10W	
R20			RK73GB2A104J	CHIP R 100K J 1/10W		R205			RK73EB2E102J	CHIP R 1.0K J 1/4W	
						R206			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K : KDC-C669
K1 : KDC-C469
K2 : KDC-C469FM
M1 : KDC-C669

E1 : KDC-C669Y
E2 : KDC-C469Y
E3 : KDC-C669
E4 : KDC-C469

E5 : KDC-C469FM
E6 : KDC-C469FMA

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5470-0x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W2 W3 W5-7			R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W	
S1 S2 S3			S68-0823-05 S70-0838-05 S68-0823-05	PUSH SWITCH TACT SWITCH PUSH SWITCH	
D1 D3,4 D5 D7 D8			DAP202K MA3056-M MA8075-M MA3056-M MA8062-M	DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D9,10 D11 D12 D14 D15			M1F60 1SR154-400 DA204U MA8091-M DAP202K	DIODE DIODE DIODE ZENER DIODE DIODE	
D16 D21,22 D23,24 IC1 IC4			DAP202U DAN202K DAN202U UPD63711AGC KIA78L05F	DIODE DIODE DIODE MOS-IC ANALOGUE IC	
IC5 IC7 IC8 IC8 IC8			LA6576 UPD784214GC098 BR24C02F-W CAT24WC02JI M24C02-WMN6T	ANALOGUE IC MI-COM IC MEMORY IC MEMORY IC MEMORY IC	
IC8 IC8 IC9 IC11 IC11			S-24C02BFJA 24LC02BT-ISN S-80830CNNB LC3564BT-70 LC3564BT-70	MEMORY IC MEMORY IC MOS-IC MEMORY IC MEMORY IC	E1E3 KM1
Q1 Q4 Q5 Q6,7 Q8			MCH6101 DTA124EK DTA124EUA DTC343TK DTA124EK	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q9 Q10 Q11 Q13 Q14			2SB1202 2SB1295 DTC124EK DTC124EUA DTA143EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q16 Q17 Q18,19 Q20 Q21			2SC4081 DTA143EK DTC124EUA DTC124EK 2SB1202	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q22 Q30 Q31			2SC4081 DTC114YUA DTC124EUA	TRANSISTOR TRANSISTOR TRANSISTOR	
MECHANISM ASSY (X92-4770-0x)					
1	2B		A10-4745-13	CHASSIS ASS'Y	
2	2B		A10-4748-02	CHASSIS CALKING ASS'Y	
3	2B		A10-4751-03	CHASSIS CALKING ASS'Y	
4	3A		A10-4754-04	CHASSIS CALKING ASS'Y	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
5 6 7	2A 2A 1A		A10-4763-02 A10-4765-02 A10-4766-02	CHASSIS CALKING ASS'Y CHASSIS CHASSIS CALKING ASS'Y	
C75 C75 C75	3A 3A 3A		C90-2945-05 C90-2945-05 C90-2945-05	ELECTRO 0.047F 5.5WV ELECTRO 0.047F 5.5WV ELECTRO 0.047F 5.5WV	E1E2E3 E4 KK1M1
11 12 13 14 15	2B 2A 2B 2B 3A		D10-4546-03 D10-4527-03 D10-4528-03 D10-4529-03 D10-4531-04	ARM SLIDER ARM LEVER LEVER ASS'Y	
16 17 18 19 20	2A 2A 1B 3A 1B		D10-4533-03 D10-4541-04 D10-4543-13 D10-4537-04 D10-4545-13	LEVER SLIDER ASS'Y SLIDER SLIDER ASS'Y ARM	
21 22 23 24 25	1B 2B 2B 3B 3B		D10-4548-03 D12-0630-02 D12-0631-02 D13-2185-04 D13-2186-04	LEVER CAM CAM GEAR GEAR	
26 27 28 29 30	3B 3A 2B 2B 2B		D13-2187-04 D13-2188-04 D13-2092-04 D13-2093-04 D13-2095-04	GEAR WORM GEAR GEAR ASS'Y GEAR	
31 32 33 34 35	2B 3A 3A 3A 3A		D13-2096-04 D13-2099-04 D13-2100-04 D13-2101-04 D13-2102-04	GEAR GEAR GEAR GEAR GEAR	
36 37 38 39 40	3A 3A 3B 3A 3A		D13-2103-04 D13-2104-04 D19-0636-04 D19-0637-04 D39-0225-05	GEAR GEAR LEAD SCREW CLUTCH ASS'Y DAMPER	
FC1 FC2	3A 3A		E39-0172-15 E39-0173-15	FLAT CABLE (23PIN) FLAT CABLE (16PIN)	
46 47 48 49 50	2B 1B 2B 3A 3A		G01-3036-04 G01-3037-04 G01-3038-04 G01-3039-04 G01-3040-04	TORSION COIL SPRING EXTENSION SPRING TORSION COIL SPRING COMPRESSION SPRING EXTENSION SPRING	
51 52 53 54 55	3A 1B 2A 1B 2A		G01-3041-04 G01-3042-04 G01-3043-04 G01-3044-04 G01-3046-04	EXTENSION SPRING TORSION COIL SPRING TORSION COIL SPRING EXTENSION SPRING EXTENSION SPRING (SILVER)	
56 57 58 59 61	2A 3B 3B 2B 2B		G01-3047-04 G02-1374-04 G02-1375-03 G02-1376-03 G02-1378-14	EXTENSION SPRING (BROWN) FLAT SPRING FLAT SPRING FLAT SPRING FLAT SPRING	

K : KDC-C669 **E1** : KDC-C669Y **E5** : KDC-C469FM
K1 : KDC-C469 **E2** : KDC-C469Y **E6** : KDC-C469FMA
K2 : KDC-C469FM **E3** : KDC-C669
M1 : KDC-C669 **E4** : KDC-C469

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

MECHANISM ASSY (X92-4770-0x)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
62	3A		G02-1380-04	FLAT SPRING		C9,10			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
63	2A		G10-1045-14	FELT		C11,12			CC73FCH1H220J	CHIP C 22PF J	K2E5E6
						C13-17			CK73FB1H102K	CHIP C 1000PF K	K2E5E6
68	2B		J11-0637-03	CLAMPER		C19			CE04DW1A101M	ELECTRO 100UF 10WV	K2E5E6
69	3B		J21-9592-04	MOUNTING HARDWARE		C20			CE04DW1E221M	ELECTRO 220UF 25WV	K2E5E6
70	1B		J21-9597-03	MOUNTING HARDWARE							
FPC1	3B		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD		C24			CE04DW1C471M	ELECTRO 470UF 16WV	K2E5E6
A	2A		N09-4126-05	MACHINE SCREW		C30			CE04DW1A102M	ELECTRO 1000UF 10WV	K2E5E6
B	3A		N09-4288-05	TAPTITE SCREW		C31			CE04DW1A221M	ELECTRO 220UF 10WV	K2E5E6
C	3A		N86-2005-46	BINDING HEAD TAPTITE SCREW		C32			CE04DW1A101M	ELECTRO 100UF 10WV	K2E5E6
D	2B		N09-4189-05	TAPTITE SCREW		C33			C90-2583-05	ELECTRO 1000UF 16WV	K2E5E6
E	3B		N09-4154-05	TAPTITE SCREW							
F	2B		N09-4181-05	MACHINE SCREW		C34			CE04NW1H010M	ELECTRO 1.0UF 50WV	K2E5E6
G	3B		N39-1722-46	PAN HEAD MACHIN SCREW		C35			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
H	1A		N09-4349-05	TAPTITE SCREW		C36			C90-2689-05	ELECTRO 3300UF 16WV	K2E5E6
J	3A		N19-2105-14	FLAT WASHER		C103			CK73FB1H103K	CHIP C 0.010UF K	K2
K	3A		N19-2058-04	FLAT WASHER		C103			CK73FB1H472K	CHIP C 4700PF K	E5E6
L	1B		N19-2080-14	FLAT WASHER							
M	2B		N19-2028-04	FLAT WASHER		C104			CE04NW1C100M	ELECTRO 10UF 16WV	K2E5E6
						C105			CE04DW1A221M	ELECTRO 220UF 10WV	K2E5E6
						C106			CE04NW1C100M	ELECTRO 10UF 16WV	K2E5E6
M1	3B		T42-0797-04	DC MOTOR ASSY		C107			CC73FCH1H271J	CHIP C 270PF J	K2E5E6
M2,3	3A		T42-0788-05	DC MOTOR		C108			CK73FB1H102K	CHIP C 1000PF K	K2
Q15	3A		2SB1548(P)	TRANSISTOR		C108			CK73FB1H681K	CHIP C 680PF K	E5E6
Q15	3A		2SB1565(E,F)	TRANSISTOR		C109,110			CK73FF1H104Z	CHIP C 0.10UF Z	K2E5E6
						C111			CE04NW1H010M	ELECTRO 1.0UF 50WV	K2E5E6
						C112			CK73FB1H332K	CHIP C 3300PF K	K2E5E6
						C113			CC73FCH1H181J	CHIP C 180PF J	K2E5E6
PU1	3B	*	X93-2000-00	OPTICAL PICKUP ASS'Y							
RF MODULATOR											
302	1F		A01-2819-08	CASE	K2	C206			CE04NW1C100M	ELECTRO 10UF 16WV	K2E5E6
302	1F		A01-2824-08	CASE	E5E6	C207			CC73FCH1H271J	CHIP C 270PF J	K2E5E6
303	1E		B07-2138-08	HOLDER ASSY	K2E5E6	C208			CK73FB1H102K	CHIP C 1000PF K	K2
AT1	1E		E30-4310-08	ANTENNA CORD ASSY	K2E5E6	C208			CK73FB1H681K	CHIP C 680PF K	E5E6
DC1	1E		E30-4733-08	DC CORD	K2E5E6	C209,210			CK73FF1H104Z	CHIP C 0.10UF Z	K2E5E6
F1,2	2E		F06-3026-05	FUSE (3A)	K2E5E6						
V	1F		N09-4207-08	SCREW (3X6,Ni-B)	K2E5E6	C211			CE04NW1H010M	ELECTRO 1.0UF 50WV	K2E5E6
W	3F		N09-4206-08	SCREW (for CN102 x2)(3X8)	K2E5E6	C212			CK73FB1H332K	CHIP C 3300PF K	K2E5E6
305	3E		T95-0244-08	DISPLAY UNIT ASSY	E5	C213			CC73FCH1H181J	CHIP C 180PF J	K2E5E6
305	3E		T95-0247-08	DISPLAY UNIT ASSY	K2	C214			CK73FB1H153K	CHIP C 0.015UF K	K2E5E6
305	3E		T95-0251-08	DISPLAY UNIT ASSY	E6	C301			CE04NW1C100M	ELECTRO 10UF 16WV	K2E5E6
311	1E		T90-0512-05	ANTENNA ADAPTOR	E5E6						
312	1E		T90-0521-05	ANTENNA ADAPTOR	E5E6						
306	1E		W01-0763-08	MAGICTAPE ASSY	K2E5E6						
RF MODULATOR UNIT											
C1			C90-2583-05	ELECTRO 1000UF 16WV	K2E5E6	C302			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
C2			CK73FB1H223K	CHIP C 0.022UF K	K2E5E6	C303			CC73FCH1H221J	CHIP C 220PF J	K2E5E6
C3			CE04NW1H4R7M	ELECTRO 4.7UF 50WV	K2E5E6	C304			CC73FCH1H100D	CHIP C 10PF D	K2E5E6
C6			CE04NW1C100M	ELECTRO 10UF 16WV	K2E5E6	C305			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
C7			CE04NW1H010M	ELECTRO 1.0UF 50WV	K2E5E6	C306			CC73FCH1H221J	CHIP C 220PF J	K2E5E6
C8			CK73FB1H102K	CHIP C 1000PF K	K2E5E6						
						C308			CK73FB1H333K	CHIP C 0.033UF K	K2E5E6
						C310			CC73FCH1H330J	CHIP C 33PF J	K2E5E6
						C312			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
						C314			CE04NW1HR22M	ELECTRO 0.22UF 50WV	K2E5E6
						C315			CE04DW1A101M	ELECTRO 100UF 10WV	K2E5E6
						C316			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
						C317			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	K2E5E6
						C318,319			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
						C320			CC73FCH1H181J	CHIP C 180PF J	K2E5E6
						C321			CE04NW1H010M	ELECTRO 1.0UF 50WV	K2E5E6

K : KDC-C669
K1 : KDC-C469
K2 : KDC-C469FM
M1 : KDC-C669

E1 : KDC-C669Y
E2 : KDC-C469Y
E3 : KDC-C669
E4 : KDC-C469

E5 : KDC-C469FM
E6 : KDC-C469FMA

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

RF MODULATOR UNIT

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C322			CC73FUJ1H221J	CHIP C 220PF J	K2E5E6
C323			CC73FUJ1H680J	CHIP C 68PF J	K2E5E6
C324			CC73FUJ1H150J	CHIP C 15PF J	K2E5E6
C325			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
C326			CE04DW1E470M	ELECTRO 47UF 25WV	K2E5E6
C327			CC73FUJ1H150J	CHIP C 15PF J	K2E5E6
C328			CC73FCH1H020C	CHIP C 2.0PF C	K2E5E6
C329			CC73FCH1H150J	CHIP C 15PF J	K2E5E6
C330			CK73FB1H103K	CHIP C 0.010UF K	K2E5E6
C331			CC73FCH1H010C	CHIP C 1.0PF C	K2E5E6
C332			CC73FCH1H050C	CHIP C 5.0PF C	K2E5E6
C333,334			CC73FCH1H330J	CHIP C 33PF J	K2E5E6
C335			CE04NW1H4R7M	ELECTRO 4.7UF 50WV	K2E5E6
C336			CK73FB1H222K	CHIP C 2200PF K	K2E5E6
C338			CC73FCH1H050C	CHIP C 5.0PF C	K2E5E6
VC301			C05-0513-08	TRIMMER 20P	K2E5E6
CN101			E56-0811-05	CONNECTOR (8P)	K2E5E6
CN102			E56-0833-08	CONNECTOR (13P)	K2E5E6
CN104,105			E40-3237-05	PIN ASSY	K2E5E6
L1			L33-0934-08	CHOKING COIL	K2E5E6
L301			L33-1043-08	SMALL FIXED INDUCTOR (0.22uH)	K2E5E6
L302,303			L33-0976-08	SMALL FIXED INDUCTOR (2.2uH)	K2E5E6
L304			L33-1043-08	SMALL FIXED INDUCTOR (0.22uH)	K2E5E6
L305			L33-1042-08	SMALL FIXED INDUCTOR (0.12uH)	K2E5E6
X301			L77-2716-08	CRYSTAL RESONATOR (38KHz)	K2E5E6
X302			L77-2062-08	CRYSTAL RESONATOR (4.5MHz)	K2E5E6
R1			RD14BB2C242J	RD 2.4K J 1/6W	K2E5E6
R2			RD14BB2C222J	RD 2.2K J 1/6W	K2E5E6
R6			RK73FB2A223J	CHIP R 22K J 1/10W	K2E5E6
R7			R92-2148-08	CHIP R 22 J 2W	K2E5E6
R8			RD14BB2C223J	RD 22K J 1/6W	K2E5E6
R9			RD14BB2C222J	RD 2.2K J 1/6W	K2E5E6
R11			RD14BB2C102J	RD 1.0K J 1/6W	K2E5E6
R12			RD14BB2C103J	RD 10K J 1/6W	K2E5E6
R13			RD14BB2C104J	RD 100K J 1/6W	K2E5E6
R14			RD14BB2C332J	RD 3.3K J 1/6W	K2E5E6
R15			RD14BB2C104J	RD 100K J 1/6W	K2E5E6
R16			RD14BB2C332J	RD 3.3K J 1/6W	K2E5E6
R17			RD14BB2C102J	RD 1.0K J 1/6W	K2E5E6
R18			RK73FB2A104J	CHIP R 100K J 1/10W	K2E5E6
R19			RD14BB2C332J	RD 3.3K J 1/6W	K2E5E6
R20			RD14BB2C102J	RD 1.0K J 1/6W	K2E5E6
R21			RD14BB2C472J	RD 4.7K J 1/6W	K2E5E6
R22,23			RD14BB2C102J	RD 1.0K J 1/6W	K2E5E6
R24			RD14BB2C472J	RD 4.7K J 1/6W	K2E5E6
R25,26			RD14BB2C102J	RD 1.0K J 1/6W	K2E5E6
R27,28			RK73FB2A103J	CHIP R 10K J 1/10W	K2E5E6
R31			RK73FB2A473J	CHIP R 47K J 1/10W	K2E5E6
R33			RK73FB2A473J	CHIP R 47K J 1/10W	K2E5E6
R34			RK73FB2A182J	CHIP R 1.8K J 1/10W	K2E5E6
R35			RK73FB2A151J	CHIP R 150 J 1/10W	K2E5E6
R102			RK73FB2A152J	CHIP R 1.5K J 1/10W	K2E5E6
R103			RK73FB2A682J	CHIP R 6.8K J 1/10W	K2E5E6

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R104			RK73FB2A103J	CHIP R 10K J 1/10W	K2E5E6
R105-108			R92-0363-05	CHIP R 10K F 1/10W	K2E5E6
R109			RK73FB2A182J	CHIP R 1.8K J 1/10W	K2E5E6
R110			RK73FB2A391J	CHIP R 390 J 1/10W	K2E5E6
R111			RK73FB2A102J	CHIP R 1.0K J 1/10W	K2E5E6
R112			RK73FB2A753J	CHIP R 75K J 1/10W	K2E5E6
R113			RK73FB2A104J	CHIP R 100K J 1/10W	K2E5E6
R114-116			RK73FB2A682J	CHIP R 6.8K J 1/10W	K2E5E6
R202			RK73FB2A152J	CHIP R 1.5K J 1/10W	K2E5E6
R203			RK73FB2A682J	CHIP R 6.8K J 1/10W	K2E5E6
R204			RK73FB2A103J	CHIP R 10K J 1/10W	K2E5E6
R205-208			R92-0363-05	CHIP R 10K F 1/10W	K2E5E6
R209			RK73FB2A182J	CHIP R 1.8K J 1/10W	K2E5E6
R210			RK73FB2A391J	CHIP R 390 J 1/10W	K2E5E6
R212			RK73FB2A753J	CHIP R 75K J 1/10W	K2E5E6
R213			RK73FB2A104J	CHIP R 100K J 1/10W	K2E5E6
R214-216			RK73FB2A682J	CHIP R 6.8K J 1/10W	K2E5E6
R301			RK73FB2A154J	CHIP R 150K J 1/10W	K2E5E6
R302			RK73FB2A123J	CHIP R 12K J 1/10W	K2E5E6
R306			RK73FB2A103J	CHIP R 10K J 1/10W	K2E5E6
R307			RK73FB2A472J	CHIP R 4.7K J 1/10W	K2E5E6
R308			RK73FB2A124J	CHIP R 120K J 1/10W	E5E6
R308			RK73FB2A154J	CHIP R 150K J 1/10W	K2
R314			RK73FB2A473J	CHIP R 47K J 1/10W	K2E5E6
R316			RK73FB2A122J	CHIP R 1.2K J 1/10W	K2E5E6
R317			RK73FB2A242J	CHIP R 2.4K J 1/10W	K2E5E6
R318			RK73FB2A332J	CHIP R 3.3K J 1/10W	K2E5E6
R319			RD14BB2C122J	RD 1.2K J 1/6W	K2E5E6
R320			RK73FB2A103J	CHIP R 10K J 1/10W	K2E5E6
R322			RD14BB2C472J	RD 4.7K J 1/6W	K2E5E6
R323			RK73FB2A471J	CHIP R 470 J 1/10W	K2E5E6
R325,326			RK73FB2A223J	CHIP R 22K J 1/10W	K2E5E6
R327			RK73FB2A473J	CHIP R 47K J 1/10W	K2E5E6
R328			RK73FB2A271J	CHIP R 270 J 1/10W	K2E5E6
R329			RK73FB2A470J	CHIP R 47 J 1/10W	K2E5E6
R330			RK73FB2A331J	CHIP R 330 J 1/10W	K2E5E6
R331			RK73FB2A473J	CHIP R 47K J 1/10W	K2E5E6
R332			RK73FB2A101J	CHIP R 100 J 1/10W	K2E5E6
R333			RK73FB2A470J	CHIP R 47 J 1/10W	K2E5E6
R334			RK73FB2A472J	CHIP R 4.7K J 1/10W	K2E5E6
R337,338			RK73FB2A472J	CHIP R 4.7K J 1/10W	K2E5E6
R339,340			RK73FB2A391J	CHIP R 390 J 1/10W	K2E5E6
R343			RK73FB2A101J	CHIP R 100 J 1/10W	K2E5E6
R346			RK73FB2A472J	CHIP R 4.7K J 1/10W	K2E5E6
R348			RK73FB2A224J	CHIP R 220K J 1/10W	K2E5E6
VR301			R32-0208-08	TRIMING POT. 33K(B)	K2E5E6
VR303			R32-0207-08	TRIMING POT. 10K(B)	K2E5E6
RL1			S76-0802-08	MAGNET RELAY	K2E5E6
D1			DSK10C-ET1	DIODE	K2E5E6
D2			DSK10C-BT	DIODE	K2E5E6
D5			DSK10C-ET1	DIODE	K2E5E6
D8,9			1SS131	DIODE	K2E5E6
D12,13			1SS131	DIODE	K2E5E6

K : KDC-C669 **E1** : KDC-C669Y **E5** : KDC-C469FM
K1 : KDC-C469 **E2** : KDC-C469Y **E6** : KDC-C469FMA
K2 : KDC-C469FM **E3** : KDC-C669
M1 : KDC-C669 **E4** : KDC-C469

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

RF MODULATOR UNIT

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D14			DSK10C-ET1	DIODE	K2E5E6	R16,17			RK73GB1J102J	CHIP R 1.0K J 1/16W	K2E5E6
D15			DSK10C-BT	DIODE	K2E5E6	SW1-9			S70-0828-08	TACT SWITCH	K2E5E6
D16			1SS131	DIODE	K2E5E6						
D101			DA204K	DIODE	K2E5E6	D1-5			DA204K	DIODE	K2E5E6
D201			DA204K	DIODE	K2E5E6	IC1			LC75852W	IC (LCD DRIVER)	K2E5E6
D302			DA204K	DIODE	K2E5E6	IC2			PNA4602M	IC (REMOTE SENSOR)	K2E5E6
IC1		*	UPC7805AHF	IC (VOLTAGE REGULATOR/ +5V)	K2E5E6	Q1			DTC144EK	DIGITAL TRANSISTOR	K2E5E6
IC2			LC72329-9B24	IC (MICRO COMPUTER)	K2E5E6	Q2			DTB123YK	DIGITAL TRANSISTOR	K2E5E6
IC4			NJM78L05UA	IC (VOLTAGE REGULATOR/ +5V)	K2E5E6						
IC101			NJM2060M	IC (OP AMP X4)	K2E5E6	Q3			DTA144EK	DIGITAL TRANSISTOR	K2E5E6
IC102			NJM4565MD	IC (OP AMP X2)	K2E5E6	Q4			DTC144EK	DIGITAL TRANSISTOR	K2E5E6
IC301			BA1405F	IC (MPX)	K2E5E6	Q5			DTA144EK	DIGITAL TRANSISTOR	K2E5E6
IC302			NJM4565MD	IC (OP AMP X2)	K2E5E6						
Q1			DTC124EK	DIGITAL TRANSISTOR	K2E5E6						
Q2			2SA1782(T,U)	TRANSISTOR	K2E5E6						
Q3			DTC124EK	DIGITAL TRANSISTOR	K2E5E6						
Q4,5			DTC143TK	DIGITAL TRANSISTOR	K2E5E6						
Q6			DTA124EK	DIGITAL TRANSISTOR	K2E5E6						
Q8			DTC143TK	DIGITAL TRANSISTOR	K2E5E6						
Q9			2SC4640(T,U)	TRANSISTOR	K2E5E6						
Q101			2SK2158	FET	K2E5E6						
Q201			2SK2158	FET	K2E5E6						
Q303			2SA1162(GR)	TRANSISTOR	K2E5E6						
Q304,305			2SK2158	FET	K2E5E6						
Q306			2SK508L	FET	K2E5E6						
Q307			2SC2714(Y)	TRANSISTOR	K2E5E6						
Q308-310			2SK2158	FET	K2E5E6						
VD301			HVU306A-3	VARIABLE DIODE	K2E5E6						
ZD1-7			MTZ6.2J(B)	ZENER DIODE	K2E5E6						
DISPLAY UNIT											
320			A02-1460-08	FRONT CASE	K2E5E6						
321			A02-1446-08	REAR CASE	K2E5E6						
323			B10-3055-08	FRONT GLASS ASSY	K2E5						
323			B10-4108-08	FRONT GLASS ASSY	E6						
LCD1			B38-0643-08	LCD	K2E5E6						
LED1-18			B30-1459-08	LED	K2E5						
LED1-18			B30-1626-08	LED (RED) E6							
C1			C92-0047-05	CHIP-ELE 47UF 6.3WV	K2E5E6						
C2			CK73GB1H681K	CHIP C 680PF K	K2E5E6						
C3			C92-0037-05	CHIP-ELE 10UF 16WV	K2E5E6						
C4,5			CK73FB1H223K	CHIP C 0.022UF K	K2E5E6						
CN1			E30-4309-08	DIN CORD ASSY (8P)	K2E5E6						
331			K25-0713-08	KNOB (REP, RDM, PLAY/PAUSE)	K2E5E6						
332			K29-5576-08	KNOB ASSY (PWR, RESET)	K2E5E6						
333			K29-5585-08	KNOB (TRACK)	K2E5E6						
334			K29-5586-08	KNOB (DISC)	K2E5E6						
Y			N79-2040-45	SCREW (POWER-KEY x1)	K2E5E6						
Z			N79-2080-45	SCREW (REAR CASE x1)	K2E5E6						
R1-3			RK73GB1J222J	CHIP R 2.2K J 1/16W	K2E5E6						
R4			RK73GB1J101J	CHIP R 100 J 1/16W	K2E5E6						
R5			RK73GB1J222J	CHIP R 2.2K J 1/16W	K2E5E6						
R6			RK73GB1J513J	CHIP R 51K J 1/16W	K2E5E6						
R7-15			RK73FB2A470J	CHIP R 47 J 1/10W	K2E5E6						

K : KDC-C669
K1 : KDC-C469
K2 : KDC-C469FM
M1 : KDC-C669

E1 : KDC-C669Y
E2 : KDC-C469Y
E3 : KDC-C669
E4 : KDC-C469

E5 : KDC-C469FM
E6 : KDC-C469FMA

△ Indicates safety critical components.