

2. EXPLODED VIEWS AND PARTS LIST


NOTES : • Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

• Screw adjacent to ▽ mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

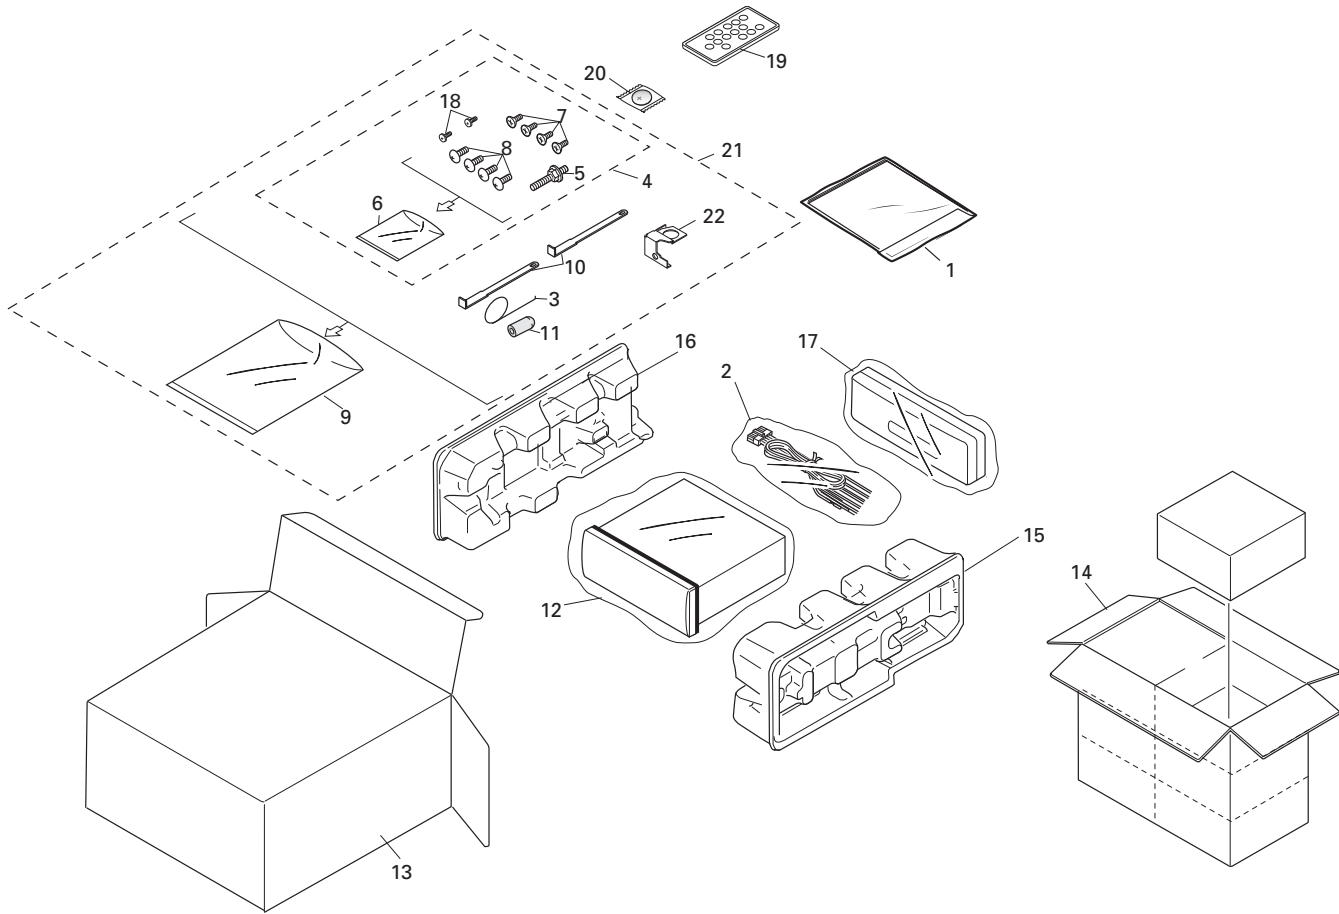

PACKING PARTS LIST


Mark	NO	Symbol and Description	DEH-P440/XN/UC	DEH-P4400/XN/UC	DEH-P44/XN/UC
	1-1	Owner's Manual	CRD3542	CRD3543	CRD3543
	1-2	Installation Manual	CRD3556	CRD3557	CRD3557
*	1-3	Card	Not used	ARY1048	ARY1048
*	1-4	Warranty Card	CRY1070	Not used	Not used
	1-5	Polyethylene Bag	CEG1116	CEG1116	CEG1116
	2	Cord Assy	CDE6436	CDE6436	CDE6436
	3	Spring	CBH1650	CBH1650	CBH1650
	4	Screw Assy	CEA2796	CEA2796	CEA2796
	5	Screw	CBA1002	CBA1002	CBA1002
*	6	Polyethylene Bag	CEG-127	CEG-127	CEG-127

Mark	NO	Symbol and Description	DEH-P440/XN/UC	DEH-P4400/XN/UC	DEH-P44/XN/UC
	7	Screw	CRZ50P090FMC	CRZ50P090FMC	CRZ50P090FMC
	8	Screw	TRZ50P080FMC	TRZ50P080FMC	TRZ50P080FMC
*	9	Polyethylene Bag	CEG-158	CEG-158	CEG-158
	10	Handle	CNC5395	CNC5395	CNC5395
	11	Bush	CNV3930	CNV3930	CNV3930
	12	Polyethylene Bag	CEG1173	CEG1173	CEG1173
	13	Carton	CHG4557	CHG4553	CHG4556
	14	Contain Box	CHL4557	CHL4553	CHL4556
	15	Protector	CHP2251	CHP2251	CHP2251
	16	Protector	CHP2252	CHP2252	CHP2252
	17	Case Assy	CXB3520	CXB3520	Not used
	18	Screw	BPZ20P060FZK	BPZ20P060FZK	BPZ20P060FZK
	19	Remote Control Unit	CXB8743	CXB8743	CXB6797
*	20	Battery	CEX1065	CEX1065	CEX1065
	21	Accessory Assy	CEA2773	CEA2773	CEA2773
	22	Earth Plate	CNC9450	CNC9450	CNC9450

Owner's Manual, Installation Manual

Part No.	Language
CRD3542, CRD3543, CRD3556, CRD3557	English, French, Spanish

2.2 EXTERIOR

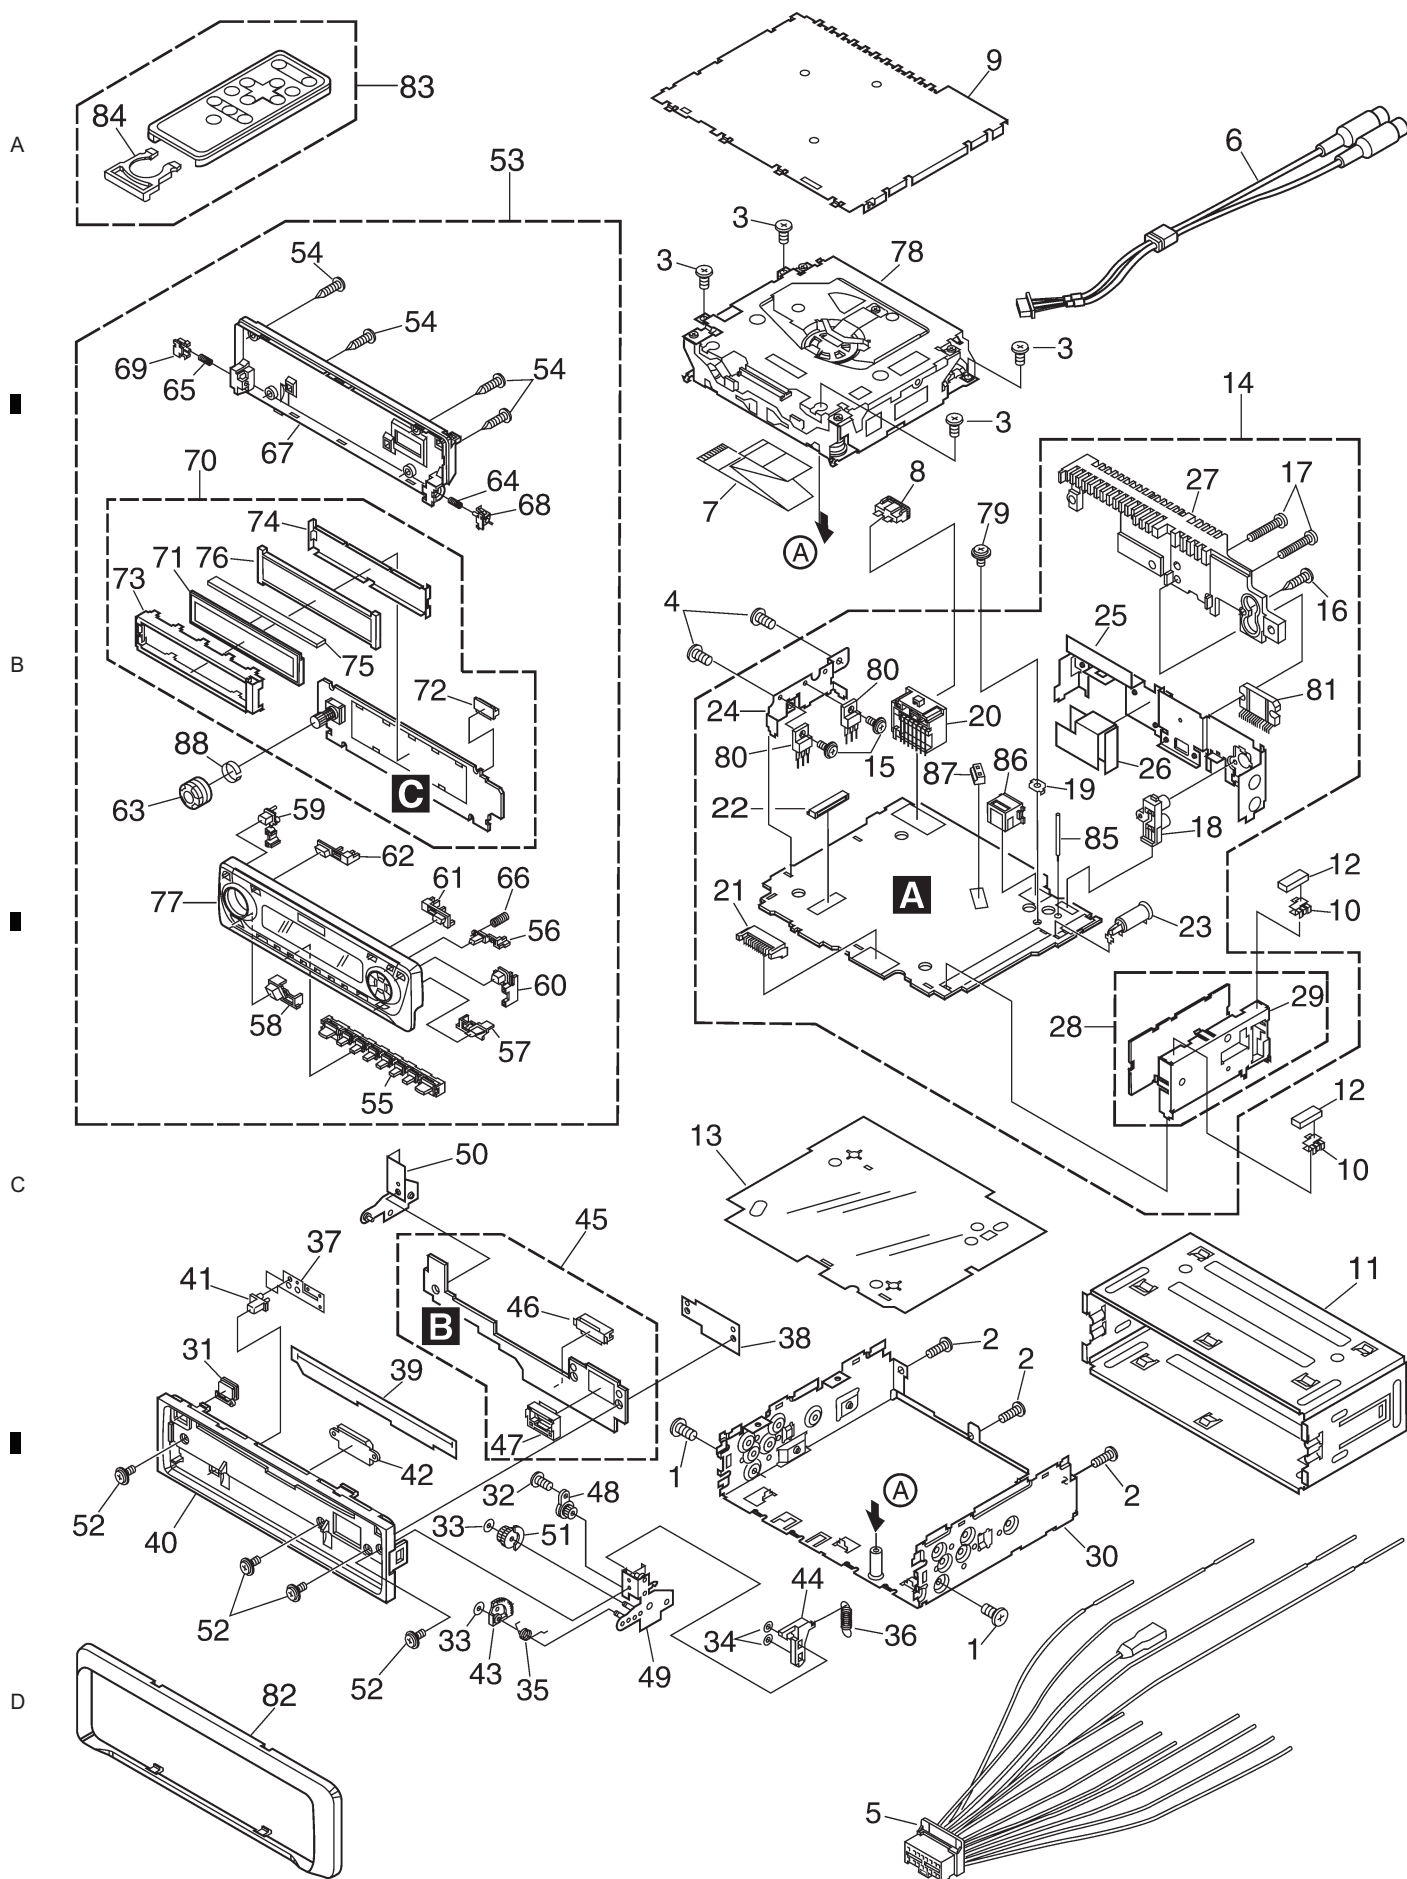

(1)EXTERIOR PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK		46	Socket(CN1950)	CKS3550
	2	Screw	BMZ30P100FMC		47	Connector(CN1951)	CKS4206
	3	Screw	BSZ26P060FMC		48	Damper Unit	CXB5070
	4	Screw	BSZ30P060FMC		49	Holder Unit	CXB6356
	5	Cord Assy	CDE6436		50	Holder Unit	CXB6357
	6	Cord Assy	CDE6494		51	Clutch Unit	CXB6358
	7	Cable	CDE6610		52	Screw	IMS20P045FZK
	8	Fuse(10A)	CEK1136		53	Detach Grille Assy	See Contrast table(2)
	9	Case	CNB2686		54	Screw	BPZ20P100FZK
	10	Holder	CNC5704		55	Button(1-6,SOURCE)	CAC7225
	11	Holder	CNC8659		56	Button(OPEN)	CAC7227
	12	Cushion	CNM4870		57	Button(SFEQ)	CAC7221
	13	Insulator	CNM6948		58	Button(EQ)	CAC7231
	14	Tuner Amp Unit	See Contrast table(2)		59	Button(CLK)	CAC7233
	15	Screw	ASZ26P060FMC		60	Button(AUDIO)	CAC7234
	16	Screw	BPZ26P120FMC		61	Button(LOCAL)	CAC7235
	17	Screw	BSZ26P160FMC		62	Button(BSM)	CAC7236
	18	Pin Jack(CN351)	CKB1035		63	Knob	See Contrast table(2)
	19	Holder(CN403)	CNC5399		64	Spring	CBH2430
	20	Plug(CN901)	CKM1330		65	Spring	CBH2431
	21	Plug(CN750)	CKS3537		66	Spring	CBH2630
	22	Connector(CN501)	CKS3835		67	Cover	CNS6740
	23	Antenna Jack(CN402)	CKX1056		68	Holder	CNV6505
	24	Holder	CNC8615		69	Holder	CNV6506
	25	Holder	CNC9470		70	Keyboard Unit	See Contrast table(2)
	26	Insulator	CNM6949		71	LCD	CAW1628
	27	Heat Sink	CNR1583		72	Connector(CN1901)	CKS4524
	28	FM/AM Tuner Unit	CWE1563		73	Holder	CNC9053
	29	Holder	CNC8815		74	Sheet	CNM7647
	30	Chassis Unit	CXB6100		75	Connector	CNV6440
	31	Button	CAC6839		76	Lighting Conductor	CNV6441
	32	Screw(M2x2)	CBA1176		77	Sub Grille Assy	See Contrast table(2)
	33	Washer	CBF1038		78	CD Mechanism Module(S9ANA)	CXK5501
	34	Washer	CBF1039		79	Screw	ISS26P055FUC
	35	Spring	CBH2428		80	Transistor(Q510,Q910)	2SD2396
	36	Spring	CBH2429		81	IC(IC361)	PAL007A
	37	Spring	CBL1512		82	Panel	CNS6935
	38	Holder	CNC9096		83	Remote Control Unit	CXB8743
	39	Cover	CNM6854		84	Cover	CNS7068
	40	Panel	CNS6278		85	Clamper	CEF1007
	41	Pin	CNV6486		86	Connector(CN701)	CKS3408
	42	Lighting Conductor	CNV6487		87	Connector(CN331)	CKS3598
	43	Gear	CNV6507		88	Spring	CBL1470
	44	Arm	CNV6508				
	45	Panel Unit	CWM7375				

(2) CONTRAST TABLE

DEH-P440/XN/UC, DEH-P4400/XN/UC and DEH-P44/XN/UC are constructed the same except for the following:

Mark	NO	Symbol and Description	DEH-P440/XN/UC	DEH-P4400/XN/UC	DEH-P44/XN/UC
A	14	Tuner Amp Unit	CWM8015	CWM8014	CWM8014
	53	Detach Grille Assy	CXB8406	CXB8407	CXB8408
	63	Knob	CAA2725	CAA2699	CAA2699
	70	Keyboard Unit	CWM8308	CWM8308	CWM8310
	77	Sub Grille Assy	CXB8614	CXB8615	CXB8616

A

B

C

D


2.3 CD MECHANISM MODULE

A

B

C

D

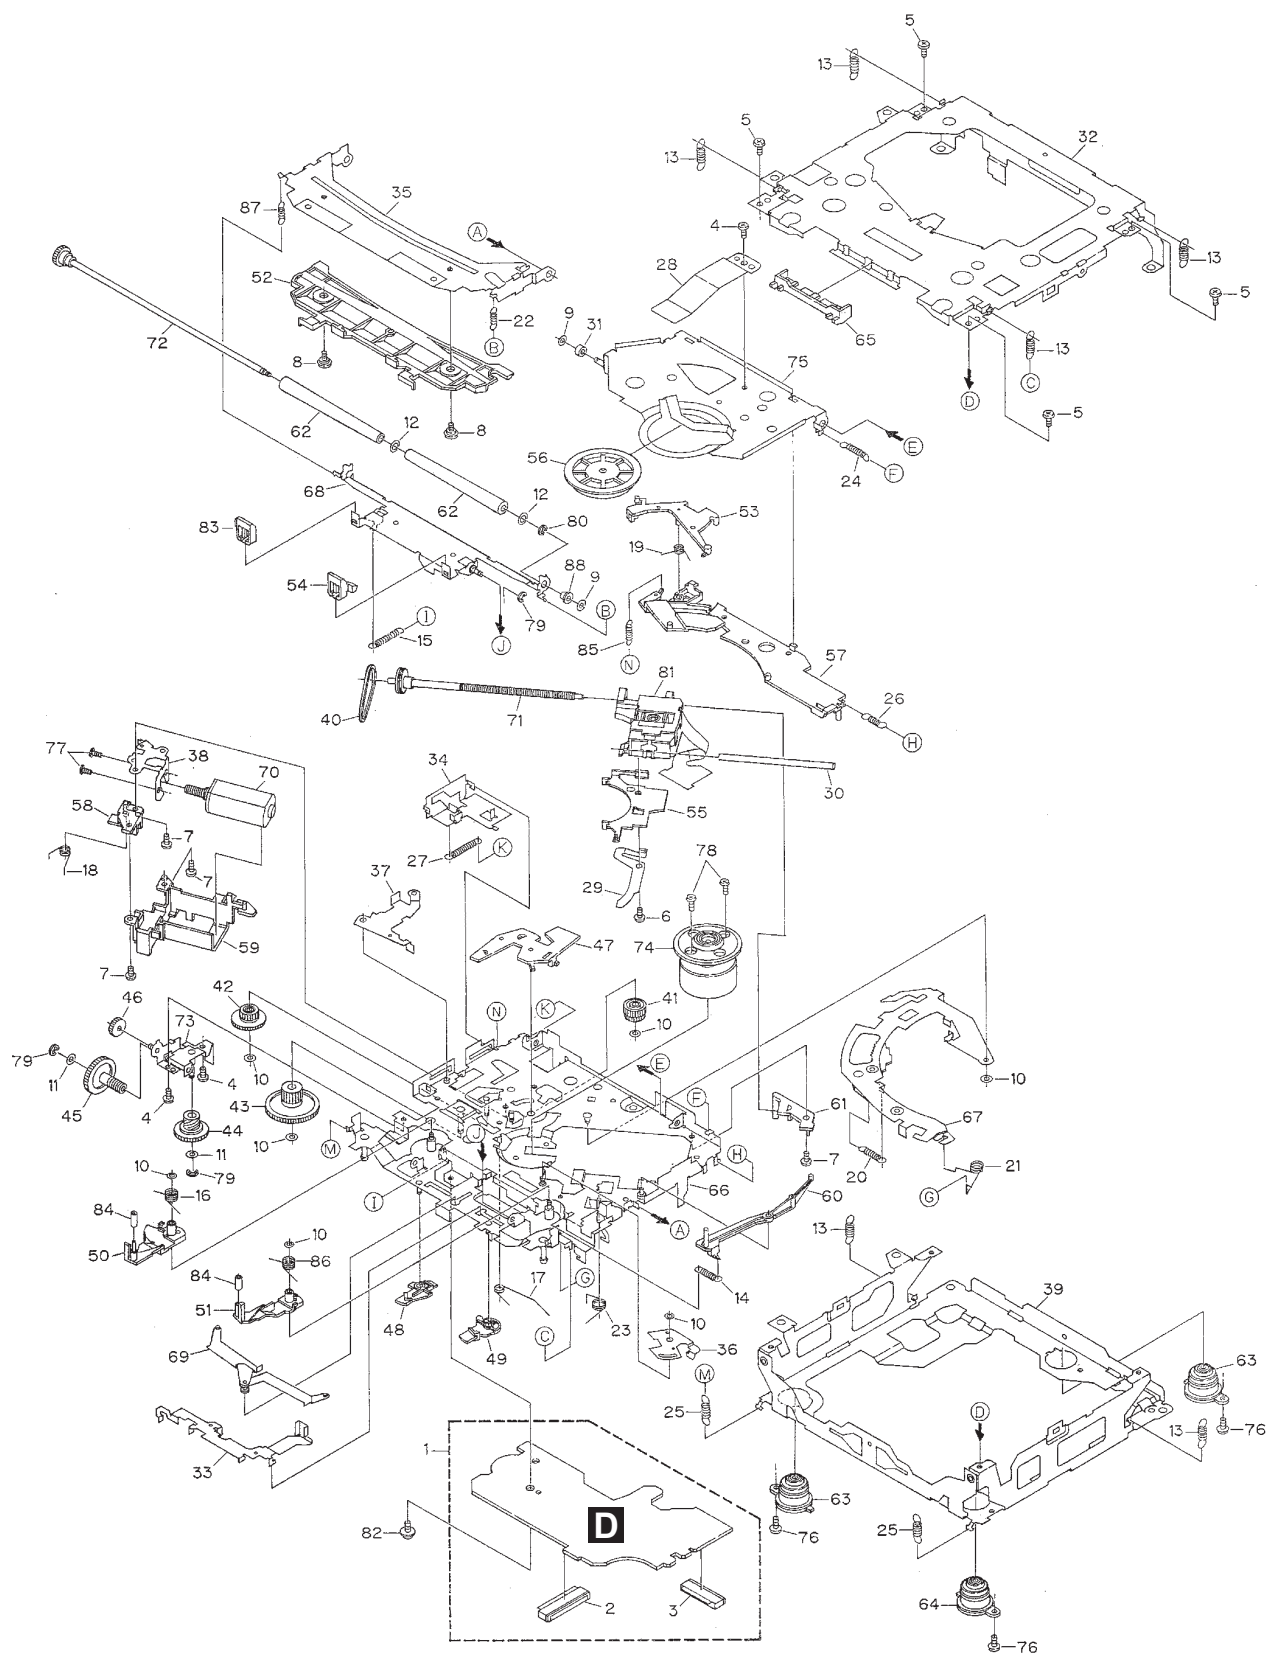

CD MECHANISM MODULE PARTS LIST

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>	
	1	Control Unit	CWX2481		46	Gear	CNV6320	
	2	Connector(CN701)	CKS1959		47	Arm	CNV6322	
	3	Connector(CN101)	CKS3486		48	Arm	CNV6323	
	4	Screw	BMZ20P025FMC		49	Arm	CNV6324	
	5	Screw	BSZ20P040FMC		50	Arm	CNV6888	A
	6	Screw(M2x4)	CBA1362		51	Arm	CNV6889	
	7	Screw(M2x3)	CBA1527		52	Guide	CNV6327	
	8	Screw	CBA1545		53	Arm	CNV6924	
	9	Washer	CBF1037		54	Guide	CNV6921	
	10	Washer	CBF1038		55	Rack	CNV6923	
	11	Washer	CBF1039		56	Clamper	CNV6331	
	12	Washer	CBF1060		57	Arm	CNV6332	
	13	Spring	CBH2378		58	Guide	CNV6333	
	14	Spring	CBH2379		59	Cover	CNV6334	
	15	Spring	CBH2514		60	Arm	CNV6335	
	16	Spring	CBH2533		61	Guide	CNV6336	
	17	Spring	CBH2382		62	Roller	CNV6338	
	18	Spring	CBH2383		63	Damper	CNV6339	B
	19	Spring	CBH2384		64	Damper	CNV6340	
	20	Spring	CBH2527		65	Guide	CNV6925	
	21	Spring	CBH2386		66	Chassis Unit	CXB7980	
	22	Spring	CBH2537	*	67	Arm Unit	CXB7983	
	23	Spring	CBH2390		68	Arm Unit	CXB7984	
	24	Spring	CBH2391		69	Arm Unit	CXB7985	
	25	Spring	CBH2523		70	Motor Unit(M2)	CXB5903	
	26	Spring	CBH2426		71	Screw Unit	CXB5904	
	27	Spring	CBH2444		72	Gear Unit	CXB8076	
	28	Spring	CBL1561		73	Bracket Unit	CXB7982	
	29	Spring	CBL1553		74	Motor Unit(M1)	CXB6007	
	30	Shaft	CLA3845		75	Arm Unit	CXB8504	
	31	Roller	CLA3910		76	Screw(M2x5)	EBA1028	C
	32	Frame	CNC9654		77	Screw	JFZ20P020FMC	
	33	Lever	CNC9664		78	Screw	JGZ17P020FZK	
	34	Lever	CNC8949		79	Washer	YE15FUC	
	35	Arm	CNC9661		80	Washer	YE20FUC	
	36	Arm	CNC9016		81	Pickup Unit(Service)(P9)	CXX1480	
	37	Arm	CNC9017		82	Screw	IMS26P030FMC	
	38	Bracket	CNC9123		83	Guide	CNV6922	
	39	Frame	CNC9656		84	Roller	CNV6887	
	40	Belt	CNT1086		85	Spring	CBH2509	
	41	Gear	CNV6886		86	Spring	CBH2512	
	42	Gear	CNV6316		87	Spring	CBH2536	
	43	Gear	CNV6317		88	Collar	CNV6906	
	44	Gear	CNV6318					
	45	Gear	CNV6319					D

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

Circuit Symbol and No. Part Name Parts No.

Circuit Symbol and No. Part Name Parts No.

D 510	Diode	HZS9L(B1)
D 750	Diode	1SS270
D 751	Diode	1SS270
D 752	Diode	DAP202U
D 753	Diode	DAN202U

D 754	Diode	DAP202K
D 755	Diode	DAN202K
D 762	Diode	DAN202U
D 763	Diode	DAP202U
D 910	Diode	HZS9L(B3)

D 911	Diode	HZS6L(B2)
D 912	Diode	S5688G
D 913	Diode	HZS7L(C2)
D 914	Diode	HZS7L(A1)
D 919	Diode	S5688G

D 920	Diode	S5688G
D 925	Diode	1SS270
D 926	Diode	HZS9L(A2)
L 311	Ferri-Inductor	LAU4R7K
L 361	Choke Coil 600μH	CTH1221

L 410	Ferri-Inductor	LAU4R7K
L 411	Ferri-Inductor	LAU2R2K
L 412	Ferri-Inductor	LAU2R2K
L 612	Inductor	LAU100K
L 621	Inductor	CTF1346

L 710	Ferri-Inductor	LAU2R2K
L 750	Ferri-Inductor	LAU2R2K
TH 610	Thermistor	CCX1037
X 610	Radiator 12.58291MHz	CSS1402
S 750	Switch(DETACH SENSE)	CSN1039

BZ 610	FM/AM Tuner Unit	CWE1563
AR 410	Buzzer	CPV1050
	Arrester	DSP-201M

RESISTORS

R 311		RS1/16S101J
R 312		RS1/16S101J
R 313		RS1/16S101J
R 314		RS1/16S101J
R 315	(DEH-P440)	RS1/16S101J
R 316	(DEH-P440)	RS1/16S101J
R 321	(DEH-P440)	RS1/16S0R0J
R 322	(DEH-P440)	RS1/16S0R0J
R 327		RS1/16S222J
R 328		RS1/16S222J

Unit Number:CWM8015(DEH-P440)

:CWM8014(DEH-P4400,P44)

Unit Name:Tuner Amp Unit

MISCELLANEOUS

IC 301	IC(DEH-P440)	PML009A
IC 301	IC(DEH-P4400,P44)	PML008A
IC 361	IC	PAL007A
IC 601	IC	PE5246A
IC 603	IC	S-80834ANY

IC 710	IC	HA12187FP
Q 341	Transistor	IMH3A
Q 351	Transistor	IMH3A
Q 359	Transistor	DTA124EK
Q 361	Transistor	DTC124EK

Q 362	Transistor	DTC114EK
Q 410	Transistor	2SC2412K
Q 510	Transistor	2SD2396
Q 511	Transistor	RN46A1
Q 610	Transistor	DTA114EK

Q 710	Transistor	2SA1037K
Q 711	Transistor	DTC114EK
Q 750	Transistor	2SA1037K
Q 751	Transistor	2SA1036K
Q 752	Transistor	DTC114EK

Q 753	Transistor	DTC114EK
Q 754	Transistor	2SA1037K
Q 755	Transistor	DTC114EK
Q 909	Transistor	RN46A1
Q 910	Transistor	2SD2396

Q 911	Transistor	2SB1243
Q 912	Transistor	DTC114EK
Q 913	Transistor	2SD1760F5
Q 914	Transistor	2SC2412K
Q 915	Transistor	2SC2412K

Q 917	Transistor	2SC2412K
Q 918	Transistor	2SC2412K
D 320	Diode	DAN202U
D 361	Diode	S5688G
D 362	Diode	S5688G

Circuit Symboland No. Part Name Parts No.			Circuit Symboland No. Part Name Parts No.			
R 332	(DEH-P440)	RS1/16S821J	R 611	(DEH-P4400,P44)	RS1/16S473J	A
R 341		RS1/16S223J	R 612		RS1/16S2202F	
R 342		RS1/16S821J	R 613		RS1/16S102J	
R 343		RS1/16S821J	R 614		RS1/16S821J	
R 344		RS1/16S223J	R 615		RS1/16S102J	
R 351		RS1/16S821J	R 616		RS1/16S0R0J	
R 352	(DEH-P4400,P44)	RS1/16S821J	R 620		RS1/16S473J	
R 353		RS1/16S223J	R 621		RS1/16S0R0J	
R 354		RS1/16S223J	R 622		RS1/16S101J	
R 361		RS1/16S103J	R 624		RS1/16S104J	
R 362		RS1/16S103J	R 625		RS1/16S0R0J	
R 363		RS1/16S331J	R 626		RS1/16S473J	
R 364		RS1/16S153J	R 627		RS1/16S473J	
R 365		RD1/4PU182J	R 628		RS1/16S473J	
R 409		RS1/16S0R0J	R 630		RAB4C102J	
R 410		RS1/16S222J	R 631		RS1/16S0R0J	
R 411		RS1/16S222J	R 710		RS1/16S101J	
R 413		RS1/16S473J	R 711		RS1/16S620J	
R 414		RS1/16S473J	R 712		RS1/16S101J	
R 415		RS1/16S393J	R 713		RS1/16S103J	
R 417		RS1/16S681J	R 714		RS1/16S102J	B
R 418		RS1/16S681J	R 715		RS1/16S102J	
R 419		RS1/16S681J	R 716		RS1/16S473J	
R 420		RS1/16S103J	R 717		RS1/16S473J	
R 421		RS1/16S681J	R 718		RS1/16S102J	
R 422		RS1/16S473J	R 719		RS1/16S102J	
R 423		RS1/16S472J	R 720		RS1/16S223J	
R 424		RS1/16S473J	R 721		RS1/16S223J	
R 429		RS1/16S681J	R 722		RS1/16S821J	
R 430		RS1/16S681J	R 723		RS1/16S821J	
R 431		RS1/16S473J	R 724		RS1/16S222J	
R 432		RS1/16S473J	R 725		RS1/16S223J	
R 437		RS1/16S0R0J	R 726		RS1/16S472J	
R 438		RS1/16S0R0J	R 750		RS1/16S104J	
R 445		RS1/16S272J	R 751		RS1/16S103J	
R 446		RS1/16S272J	R 752		RS1/16S153J	C
R 447		RS1/16S162J	R 753		RS1/16S153J	
R 448		RS1/16S162J	R 754		RS1/16S222J	
R 454		RS1/16S0R0J	R 756		RS1/16S433J	
R 510		RD1/4PU221J	R 757		RS1/16S473J	
R 511		RD1/4PU221J	R 758		RS1/16S102J	
R 512		RS1/16S472J	R 759		RD1/4PU222J	
R 513		RS1/16S222J	R 760		RS1/16S102J	
R 516		RS1/16S104J	R 763		RS1/16S222J	
R 517		RS1/16S222J	R 764		RS1/16S131J	
R 519		RS1/16S102J	R 765		RS1PMF390J	
R 520		RS1/16S0R0J	R 766		RS1/10S270J	
R 521		RS1/16S222J	R 767		RS1/16S103J	
R 523		RS1/16S0R0J	R 768		RS1/16S152J	
R 525		RS1/16S222J	R 769		RS1/16S152J	
R 526		RS1/16S222J	R 771		RS1/16S473J	D
R 527		RS1/16S222J	R 773		RD1/4PU222J	
R 528		RD1/4PU0R0J	R 774		RS1/16S102J	
R 529		RD1/4PU0R0J	R 775		RS1/16S102J	
R 530		RS1/16S0R0J	R 776		RS1/16S220J	
R 531		RS1/16S0R0J	R 777		RS1/16S0R0J	
R 532		RS1/16S0R0J	R 778		RS1/16S103J	
R 536		RS1/16S102J	R 779		RS1/16S472J	
R 537		RS1/16S104J	R 781		RS1/16S104J	
R 610		RS1/16S473J	R 782		RS1/16S131J	

Circuit Symbol and No. Part Name Parts No.

R	783	RS1/16S131J
R	784	RS1/10S392J
R	786	RS1/16S102J
R	787	RS1/10S472J
R	788	RS1/10S222J

A

R	789	RS1/10S222J
R	909	RD1/4PU0R0J
R	910	RS1/16S0R0J
R	911	RD1/4PU121J
R	912	RS1/16S102J

R	913	RD1/4PU102J
R	914	RS1/16S103J
R	915	RS1/16S222J
R	916	RS1/16S133J
R	917	RS1/16S104J

R	918	RS1/16S104J
R	919	RS1/16S223J
R	920	RS1/16S473J
R	921	RS1/16S103J
R	922	RS1/16S473J

B

R	923	RD1/4PU102J
R	924	RS1/16S472J
R	927	RS1/16S102J
R	928	RS1/16S473J
R	929	RS1/16S104J

R	930	RS1/16S103J
R	931	RS1/16S103J
R	932	RD1/4PU102J
R	933	RS1/16S473J
R	934	RS1/16S103J

R	935	RS1/16S223J
R	936	RD1/4PU152J

CAPACITORS

C	310	CKSRYB102K50
C	311	CEJA1R0M50
C	312	CEJA1R0M50
C	314	CKSRYB105K6R3
C	315	CKSRYB105K6R3

C

C	316	CKSRYB104K16
C	317	CKSRYB104K16
C	318	CKSRYB105K6R3
C	319	CKSRYB105K6R3
C	320	CKSRYB105K6R3

C	321	CKSRYB105K6R3
C	322	(DEH-P440) CKSRYB105K6R3
C	323	(DEH-P440) CKSRYB105K6R3
C	324	(DEH-P440) CKSRYB103K50
C	325	CKSRYB102K50

D

C	326	CEJA100M16
C	328	CKSRYB104K16
C	329	CEJA470M10
C	331	(DEH-P440) CEJA2R2M50
C	332	(DEH-P440) CEJA2R2M50

C	342	CEJA2R2M50
C	343	CEJA2R2M50
C	351	(DEH-P4400,P44) CEJA2R2M50
C	352	(DEH-P4400,P44) CEJA2R2M50
C	361	4700μF/16V CCH1367

Circuit Symbol and No. Part Name Parts No.

C	362	CKSQYB104K16
C	363	CKSQYB474K16
C	364	CKSQYB474K16
C	365	CKSQYB474K16
C	366	CKSQYB474K16

C	367	CKSQYB474K16
C	368	CKSQYB474K16
C	369	CKSQYB474K16
C	370	CKSQYB474K16
C	371	CEJA330M10

C	373	CKSQYB225K10
C	374	CKSQYB225K10
C	375	CEJA100M16
C	410	CKSQYB103K50
C	412	CKSRYB223K25

C	413	CKSRYB102K50
C	414	CEJA220M10
C	415	CKSRYB223K25
C	418	CEAL101M10
C	419	CKSRYB473K16

C	424	CKSRYB183K25
C	425	CKSRYB183K25
C	431	CKSRYB102K50
C	510	CKSRYB473K16
C	511	CKSRYB102K50

C	512	CEJA101M16
C	615	CEAL2R2M50
C	616	CCSRCH200J50
C	617	CCSRCH200J50
C	618	CKSRYB105K6R3

C	619	CEAL4R7M35
C	620	CKSRYB103K50
C	621	CCSRCH101J50
C	624	CKSRYB223K25
C	629	CCSRCH101J50

C	630	CKSRYB103K50
C	631	CCSRCH101J50
C	632	CCSRCH101J50
C	633	CKSRYB103K50
C	634	CKSRYB472K50

C	710	CKSRYB104K16
C	711	CKSRYB473K16
C	712	CEJA1R0M50
C	713	CEJA1R0M50
C	714	CEJA1R0M50

C	715	CEJA1R0M50
C	750	CKSRYB103K25
C	751	CKSQYB104K16
C	765	CKSQYB103K50
C	799	CKSQYB473K16

C	910	330μF/16V CCH1326
C	911	CKSRYB103K25
C	912	CEJA101M16
C	913	CEJA101M10
C	914	CKSRYB473K16

C	915	CKSRYB103K25
C	916	470μF/16V CCH1331
C	920	CKSRYB104K16

C

Unit Number:CWM8308(DEH-P440,P4400)

:CWM8310(DEH-P44)

Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1902	HIC	RS-140
IC 1903	IC	PD6294A
Q 1905	Transistor	DTC114EK
D 1901	Diode	MA152WK
D 1902	Diode	MA152WA
D 1917	LED	NSSW440-9159
D 1918	LED	NSSW440-9159
D 1928	LED(DEH-P440,P4400)	SML-310PT
D 1928	LED(DEH-P44)	SML-310DT
D 1930	LED(DEH-P440,P4400)	SML-310PT
D 1930	LED(DEH-P44)	SML-310DT
D 1931	LED(DEH-P440,P4400)	SML-310PT
D 1931	LED(DEH-P44)	SML-310DT
D 1932	LED(DEH-P440,P4400)	SML-310PT
D 1932	LED(DEH-P44)	SML-310DT
D 1938	LED(DEH-P440,P4400)	SML-310PT
D 1938	LED(DEH-P44)	SML-310DT
D 1939	LED(DEH-P440,P4400)	SML-310PT
D 1939	LED(DEH-P44)	SML-310DT
D 1941	LED(DEH-P440,P4400)	SML-310PT
D 1941	LED(DEH-P44)	SML-310DT
X 1901	Ceramic Resonator 5MHz	CSS1547
S 1901	Switch(DEH-P440,P4400)	CSG1107
S 1901	Switch(DEH-P44)	CSG1117
S 1902	Switch(DEH-P440,P4400)	CSG1107
S 1902	Switch(DEH-P44)	CSG1117
S 1903	Push Switch	CSG1111
S 1903	Switch(DEH-P44)	CSG1117
S 1904	Switch(DEH-P440,P4400)	CSG1107
S 1904	Switch(DEH-P44)	CSG1117
S 1906	Switch(DEH-P440,P4400)	CSG1107
S 1906	Switch(DEH-P44)	CSG1117
S 1907	Switch(DEH-P440,P4400)	CSG1107
S 1907	Switch(DEH-P44)	CSG1117
S 1908	Push Switch	CSG1111
S 1909	Switch(DEH-P440,P4400)	CSG1107
S 1909	Switch(DEH-P44)	CSG1117
S 1910	Switch(DEH-P440,P4400)	CSG1107
S 1910	Switch(DEH-P44)	CSG1117
S 1911	Switch(DEH-P440,P4400)	CSG1107
S 1911	Switch(DEH-P44)	CSG1117
S 1912	Switch(DEH-P440,P4400)	CSG1107
S 1912	Switch(DEH-P44)	CSG1117
S 1913	Switch(DEH-P440,P4400)	CSG1107
S 1913	Switch(DEH-P44)	CSG1117

Circuit Symbol	and No.	Part Name	Parts No.
S	1914	Switch(DEH-P440,P4400)	CSG1107
S	1914	Switch(DEH-P44)	CSG1117
S	1915	Switch(DEH-P440,P4400)	CSG1107
S	1915	Switch(DEH-P44)	CSG1117
S	1916	Switch(DEH-P440,P4400)	CSG1107
S	1916	Switch(DEH-P44)	CSG1117
S	1917	Switch(DEH-P440,P4400)	CSG1107
S	1917	Switch(DEH-P44)	CSG1117
S	1918	Switch(DEH-P440,P4400)	CSG1107
S	1918	Switch(DEH-P44)	CSG1117
S	1919	Switch(DEH-P440,P4400)	CSG1107
S	1919	Switch(DEH-P44)	CSG1117
S	1922	Encoder LCD	CSD1059 CAW1628

RESISTORS

R 1901	RS1/16S222J
R 1902	RS1/16S222J
R 1903	RS1/16S470J
R 1904	RS1/16S470J
R 1905	RS1/16S121J
R 1906	RS1/16S2R2J
R 1910	RS1/16S151J
R 1911	RS1/16S151J
R 1912	RS1/16S151J
R 1913	RS1/16S151J
R 1914	RS1/16S151J
R 1915	RS1/16S151J
R 1917	RS1/16S151J
R 1919	RS1/16S151J
R 1920	RS1/16S151J
R 1927	RS1/16S472J
R 1929	RS1/16S0R0J
R 1930	RS1/16S101J
R 1931	RS1/16S101J
R 1935	RS1/16S393J
R 1936	RS1/16S151J
R 1939	RS1/16S151J
R 1941	RS1/16S151J
R 1942	RS1/16S151J
R 1943	RS1/16S151J
R 1945	RS1/16S121J
R 1958	RS1/16S151J
R 1961	RS1/16S121J
R 1971	RS1/16S0R0J
R 1973	RS1/16S0R0J
R 1976	RS1/16S151J

CAPACITORS

C 1902	CKSRYB104K16
C 1903	CSZS100M6R3
C 1905	CKSRYB104K16
C 1906	CKSRYB104K16
C 1907	CKSRYB104K16
C 1923	CKSQYF104Z50
C 1930	CKSQYF104Z50

Circuit Symboland No. Part Name Parts No.

Circuit Symboland No. Part Name Parts No.

B

Unit Number:CWM7375

Unit Name:Panel Unit

D	1950	LED	CL220PGC
S	1950	Push Switch(EJECT)	CSG1112
R	1952		RS1/16S101J
R	1953		RS1/16S101J

D

Unit Number:CWX2481

Unit Name:Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101	RS1/16S222J
R	102	RS1/8S120J
R	103	RS1/8S100J
R	201	RS1/16S513J
R	202	RS1/16S513J
R	203	RS1/16S823J
R	204	RS1/16S823J
R	206	RS1/16S823J
R	208	RS1/16S124J
R	209	RS1/16S183J
R	210	RS1/16S153J
R	211	RS1/16S103J
R	212	RS1/16S103J
R	213	RS1/16S124J
R	215	RS1/16S0R0J
R	216	RS1/16S471J
R	301	RS1/16S333J
R	302	RS1/16S332J
R	303	RS1/16S332J
R	304	RS1/16S514J

R	306	RS1/16S102J
R	307	RS1/16S102J
R	312	RS1/16S103J
R	313	RS1/16S473J
R	315	RS1/16S334J

R	321	RS1/16S331J
R	322	RS1/16S0R0J
R	323	RS1/16S332J
R	401	RS1/16S684J
R	402	RS1/16S103J

R	403	RS1/16S103J
R	404	RS1/16S183J
R	405	RS1/16S123J
R	407	RS1/16S622J
R	408	RS1/16S622J

R	409	RS1/16S113J
R	410	RS1/16S752J
R	701	RS1/16S102J
R	702	RS1/16S221J
R	703	RS1/16S221J

R	704	RS1/16S221J
R	705	RS1/16S221J
R	706	RS1/16S221J
R	707	RS1/16S221J
R	708	RS1/16S102J

R	709	RS1/16S102J
R	710	RS1/16S102J
R	901	RS1/16S104J
R	902	RS1/16S473J
R	903	RS1/16S273J

CAPACITORS

C	101	CEV470M6R3
C	102	CKSRYB102K50
C	103	CKSRYB104K16
C	104	CKSRYB224K16
C	105	CEV470M6R3

C	106	CKSRYB104K16
C	107	CKSRYB105K6R3
C	201	CKSRYB104K16
C	202	CCSRCH560J50
C	204	CKSRYB224K16

C	205	CKSRYB224K16
C	206	CKSRYB273K25
C	207	CKSRYB273K25
C	208	CKSRYB104K16
C	209	CKSRYB104K16

C	210	CCSRCK2R0C50
C	211	CCSRCH220J50
C	301	CKSRYB153K25
C	302	CKSRYB104K16
C	303	CKSRYB103K50

C	304	CKSRYB103K50
C	305	CKSRYB104K16
C	306	CKSRYB104K16
C	307	CKSRYB333K16
C	308	CKSRYB104K16

Circuit Symbol and No. Part Name Parts No.

C	309		CKSRYB473K16
C	310		CKSRYB473K16
C	311		CKSRYB104K16
C	312		CKSRYB104K16
C	315		CEV220M6R3
C	317		CKSRYB104K16
C	318		CKSRYB104K16
C	319		CKSRYB104K16
C	320		CCSRCH470J50
C	325		CKSRYB471K50
C	328		CKSRYB472K50
C	329		CKSRYB104K16
C	330		CKSRYB104K16
C	331		CKSRYB104K16
C	401		CKSRYB221K50
C	402		CKSRYB221K50
C	403		CKSRYB153K25
C	404		CKSRYB103K50
C	405		CEV101M10
C	702		CKSRYB104K16
C	703		CKSRYB104K16
C	801	10μF/10V	CCH1349
C	802		CEV101M10
C	803		CKSRYB224K16

A

B

Miscellaneous Parts List

	Pickup Unit(Service)(P9)	CXX1480
M 1	Motor Unit(SPINDLE)	CXB6007
M 2	Motor Unit(LOADING/CARRIAGE)	CXB5903

C

D