


KDC-MP4032

EXPLODED VIEW (UNIT)

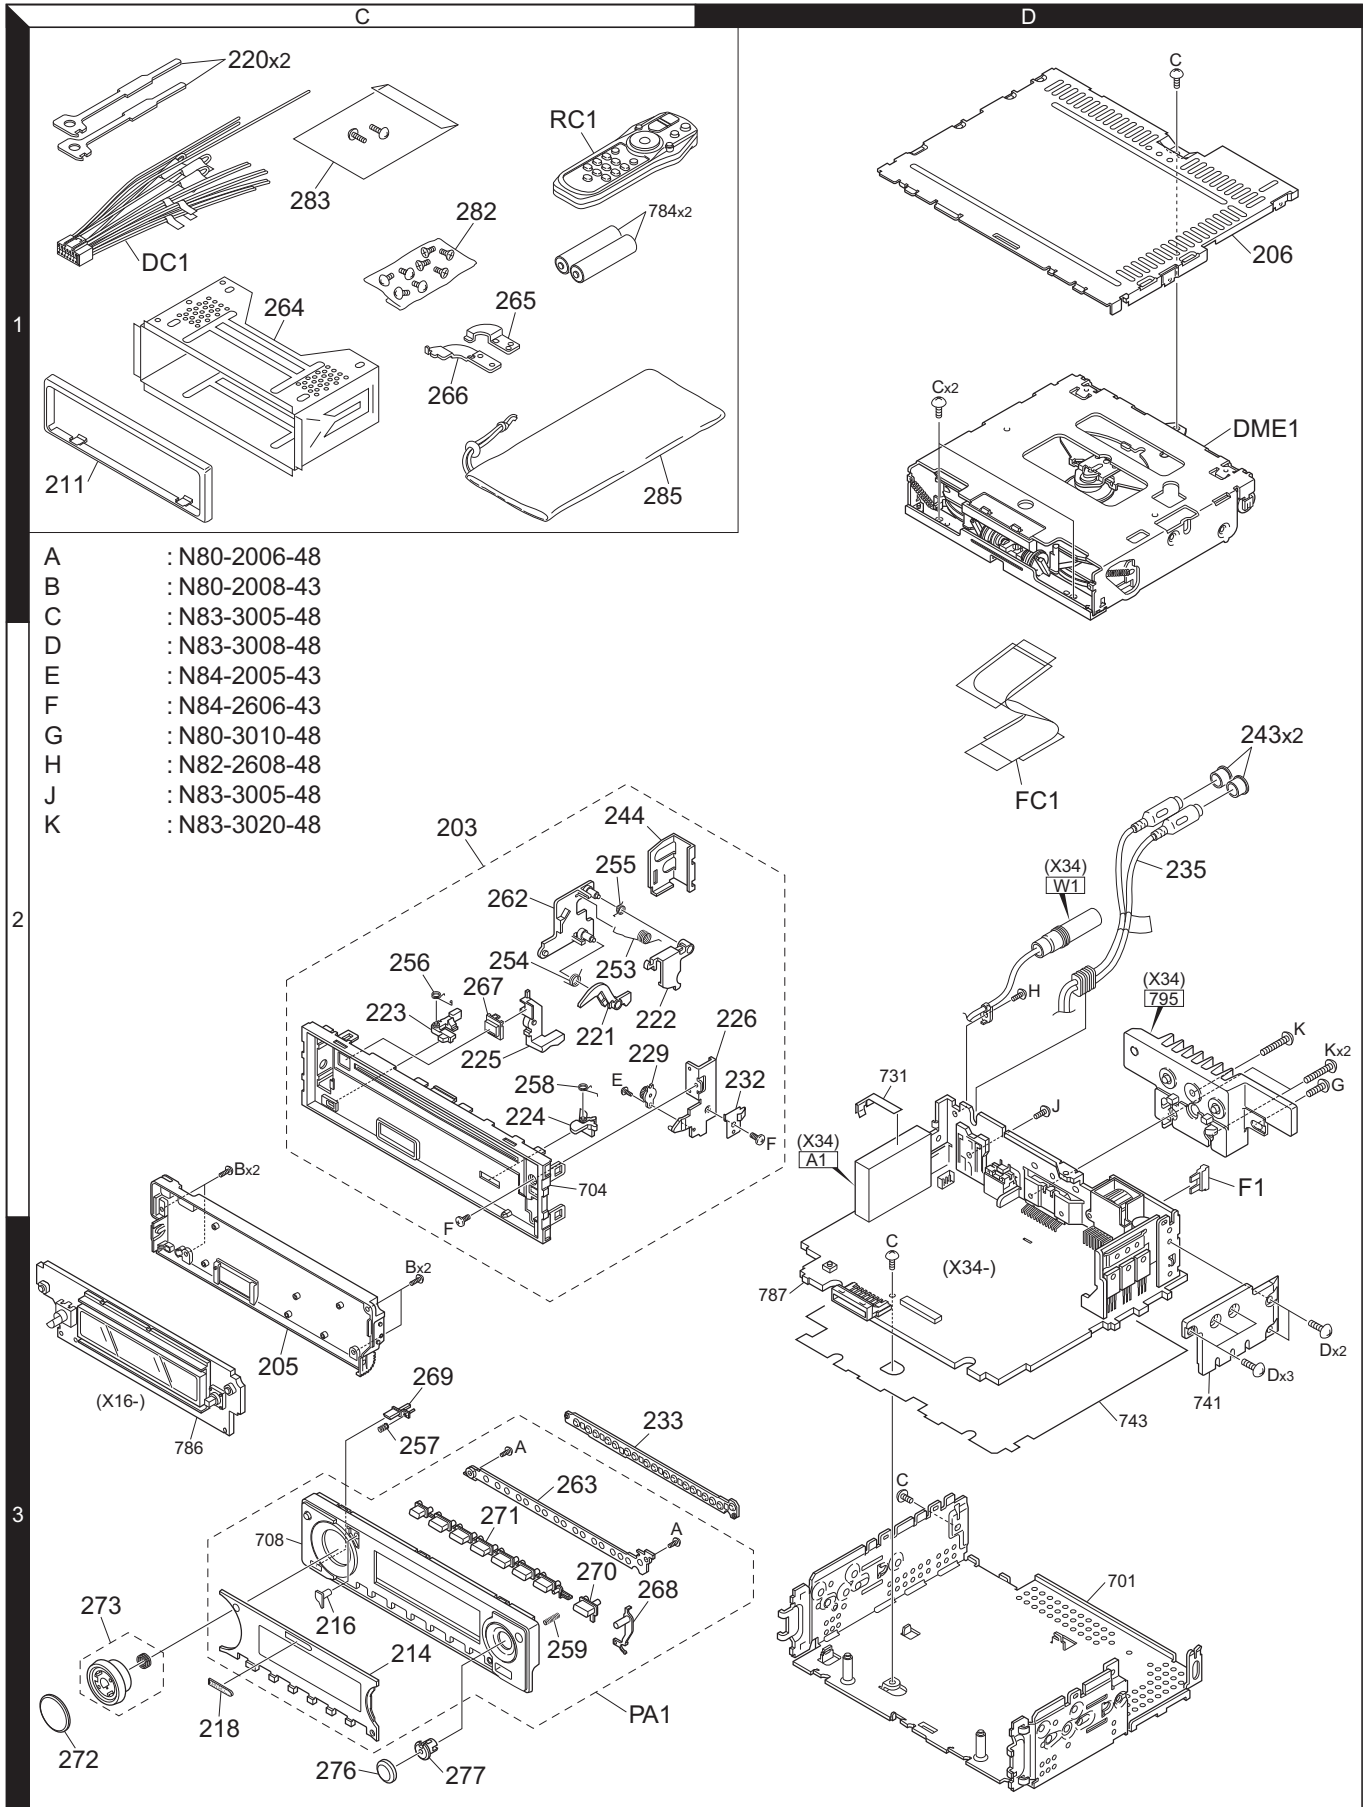

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP4032					
203	2C		A22-3059-12	SUB PANEL ASSY	
205	3C	*	A46-1833-01	REAR COVER	
206	1D		A52-0862-02	TOP PLATE	
PA1	3C	*	A64-3753-01	PANEL ASSY	
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	
-			B46-0681-04	ID CARD	
-			B46-0682-00	WARRANTY CARD	
-			B58-1426-04	CAUTION CARD	
-		*	B64-3263-00	INST. MANUAL (ENG,FRE,SPA)	
211	1C		B07-3125-01	ESCUTCHEON	
214	3C	*	B10-4756-02	FRONT GLASS	
216	3C	*	B19-2364-04	LIGHTING BOARD (REMOTE)	
218	3C		B43-1518-04	BADGE	
220	1C		D10-4589-04	LEVER	
221	2C		D10-4865-03	LEVER (PUSH)	
222	2C		D10-4866-03	LEVER (HOOK)	
223	2C		D10-4867-04	LEVER (LOCK)	
224	2C		D10-4868-04	LEVER (DETECT)	
225	2C		D10-4869-03	LEVER (EJECT)	
226	2D		D10-4870-04	ARM ASSY	
229	2C		D39-0255-05	DAMPER	
232	2D		E29-2028-04	LEAD PLATE	
233	3C	*	E29-2067-03	CONDUCTIVE RUBBER	
235	2D		E30-6426-05	CORD WITH PINPLUG	
△ DC1	1C		E30-6428-05	DC CORD	
FC1	2D		E39-0736-05	FLAT CABLE	
243	2D		F29-0626-04	INSULATING COVER	
244	2C		F31-0716-04	REINFORCING HARDWARE	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
253	2C		G01-3246-04	TORSION COIL SPRING	
254	2C		G01-3247-04	TORSION COIL SPRING	
255	2C		G01-3248-04	TORSION COIL SPRING	
256	2C		G01-3249-04	TORSION COIL SPRING	
257	3C	*	G01-4611-04	COMPRESSION SPRING	
258	2C		G01-3270-04	TORSION COIL SPRING	
259	3C	*	G01-3291-04	COMPRESSION SPRING	
-			H10-4919-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-3624-03	ITEM CARTON CASE	
262	2C		J19-7049-03	HOLDER	
263	3C	*	J19-7112-02	HOLDER	
264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
267	2C		K24-4282-04	PUSH KNOB (EJECT)	
268	3C	*	K24-4460-03	PUSH KNOB (AME)	
269	3C	*	K24-4464-03	PUSH KNOB (RELEASE)	
270	3C	*	K24-4462-03	PUSH KNOB (SRC)	
271	3C	*	K25-1784-02	PUSH KNOB (PRESET)	
272	3C	*	K28-0103-03	KEY TOP (VOL)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
273	3C	*	K29-7200-03	KNOB ASSY (VOL)	
276	3C	*	K28-0106-03	KEY TOP (FM/AM)	
277	3C	*	K28-0122-03	KNOB BASE (FM/AM)	
282	1C		N99-1757-05	SCREW SET	
283	1C	*	N99-1780-05	SCREW SET	
A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
D	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
285	1C		W01-1661-05	CARRYING CASE	
DME1	1D	*	X92-5470-00	MECHANISM ASSY (DXM-6680W)	
SWITCH UNIT (X16-3490-10)					
D1-3			B30-1567-05	LED (1608,RED)	
D7-9			B30-1567-05	LED (1608,RED)	
D13-15			B30-1567-05	LED (1608,RED)	
D19			B30-1567-05	LED (1608,RED)	
D20-23			B30-1729-05	LED (1608,BLUE)	
D25			B30-1567-05	LED (1608,RED)	
C8			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C13-16			CK73GB1H103K	CHIP C 0.010UF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A447J	CHIP R 4.7 J 1/10W	
R13,14			RK73GB2A101J	CHIP R 100 J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51			RK73FB2B471J	CHIP R 470 J 1/8W	
R52-54			RK73EB2E681J	CHIP R 680 J 1/4W	
R55,56			RK73EB2E301J	CHIP R 300 J 1/4W	
R59,60			RK73EB2E821J	CHIP R 820 J 1/4W	
R73			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R80			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R81			RK73GB2A223J	CHIP R 22K J 1/10W	
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
W5			R92-1252-05	CHIP R 0 OHM J 1/16W	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

KDC-MP4032

PARTS LIST

SWITCH UNIT (X16-3490-10)

Ref. No.	Add	New	Parts No.	Description	Destination
W7,8 W10			R92-1252-05 R92-2053-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W	
S2 S10 S27		*	S70-0106-05 S70-0939-05 S70-0939-05	TACT SWITCH TACT SWITCH TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
D102 D110 ED1 IC2 Q4		*	UDZS5.6B DA204U 3-BT-2351NK PNA4S22M02KW DTA114EE	ZENER DIODE DIODE FLUORESCENT INDICATOR TUBE ANALOGUE IC DIGITAL TRANSISTOR	
Q5 Q12-14 Q20			KTC4075EP(Y,GR) KTA2014EP(Y,GR) DTC144EE	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	

CD PLAYER UNIT (X32-5860-00)

C1,2 C3,4 C5,6 C7,8 C9			CK73GB1A105K CC73GCH1H681J CC73GCH1H680J CK73GB1H222K CK73GB1H104K	CHIP C 1.0UF K CHIP C 680PF J CHIP C 68PF J CHIP C 2200PF K CHIP C 0.10UF K	
C10 C11 C12 C20 C21			CK73FB0J106K CK73GB1H103K CK73GB1A105K CC73GCH1H391J CK73GB1H472K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 390PF J CHIP C 4700PF K	
C22 C23 C24 C25 C30			CK73GB1H152K CC73GCH1H391J CK73EB1A475K CK73FB0J106K CK73GB1H104K	CHIP C 1500PF K CHIP C 390PF J CHIP C 4.7UF K CHIP C 10UF K CHIP C 0.10UF K	
C31 C32 C34 C35 C38-40			CK73GB1A105K CK73GB1H104K CK73FB0J475K CK73GB1H104K CK73GB1H104K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C41 C42 C43 C46 C50			CK73GB0J225K CK73GB1A105K C92-1792-05 CK73GB1H104K CK73GB1H104K	CHIP C 2.2UF K CHIP C 1.0UF K ELECTRO 22UF 6.3WV CHIP C 0.10UF K CHIP C 0.10UF K	
C51 C52 C53,54 C55 C56,57			CK73GB1H102K CK73GB0J225K CK73GB0J475K CK73FB0J106K CK73GB1H104K	CHIP C 1000PF K CHIP C 2.2UF K CHIP C 4.7UF K CHIP C 10UF K CHIP C 0.10UF K	
C58 C60 C61 C62 C63			CK73FB0J475K CK73GB0J225K CK73GB1H104K CK73FB0J475K CK73GB0J225K	CHIP C 4.7UF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 2.2UF K	
C64 C65,66 C67			CK73GB1H152K CK73GB1H102K CK73GB1H152K	CHIP C 1500PF K CHIP C 1000PF K CHIP C 1500PF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C68 C69 C70 C71 C72			CK73GB1H103K CK73GB1H332K CK73GB1H682K CK73GB1H104K CK73GB1H103K	CHIP C 0.010UF K CHIP C 3300PF K CHIP C 6800PF K CHIP C 0.10UF K CHIP C 0.010UF K	
C73 C74 C75 C76 C77			CC73GCH1H120J CC73GCH1H060D CK73GB1H104K CC73GCH1H030C CC73GCH1H020C	CHIP C 12PF J CHIP C 6.0PF D CHIP C 0.10UF K CHIP C 3.0PF C CHIP C 2.0PF C	
C78 C79,80 C81,82 C83 C85			CK73GB0J225K CK73GB1H104K CC73GCH1H470J CK73GB1H103K CK73FB0J106K	CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 47PF J CHIP C 0.010UF K CHIP C 10UF K	
C96 C100 C101			CK73GB0J475K CK73GB1C224K CK73GB1H103K	CHIP C 4.7UF K CHIP C 0.22UF K CHIP C 0.010UF K	
CN1 CN2			E41-2083-15 E41-2297-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
X1 X2			L78-0862-05 L78-0851-05	RESONATOR (16.00MHZ) RESONATOR (16.93MHZ)	
CP1 CP2 CP4,5 CP6,7 CP8-11			RK74GA1J101J RK74GA1J472J RK74GA1J101J RK74HB1J103J RK74HB1J101J	CHIP-COM 100 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 100 J 1/16W	
CP12 CP13 CP14 CP27 CP28			RK74GA1J101J RK74GA1J103J RK74GA1J101J RK74GB1J472J RK74GB1J103J	CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 10K J 1/16W	
R1,2 R3,4 R5,6 R7,8 R9,10			RK73GH2A103D RK73GB2A272J RK73GB2A752J RK73GB2A333J RK73GH2A103D	CHIP R 10K D 1/10W CHIP R 2.7K J 1/10W CHIP R 7.5K J 1/10W CHIP R 33K J 1/10W CHIP R 10K D 1/10W	
R11,12 R14-16 R20 R21 R22,23			RK73GB2A331J RK73GB2A2R2J RK73GB2A123J RK73GB2A133J RK73GB2A123J	CHIP R 330 J 1/10W CHIP R 2.2 J 1/10W CHIP R 12K J 1/10W CHIP R 13K J 1/10W CHIP R 12K J 1/10W	
R24 R25 R26 R27 R28			RK73GB2A432J RK73GB2A472J RK73GB2A183J RK73GB2A163J RK73GB2A133J	CHIP R 4.3K J 1/10W CHIP R 4.7K J 1/10W CHIP R 18K J 1/10W CHIP R 16K J 1/10W CHIP R 13K J 1/10W	
R29 R30 R31 R40-44 R48			RK73GB2A102J RK73GB2A101J RK73GB2A133J RK73GB2A103J RK73GB2A472J	CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 13K J 1/10W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W	
R50-52			RK73GB2A103J	CHIP R 10K J 1/10W	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5860-00)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R55			RK73GB2A103J	CHIP R 10K J 1/10W		C8			CD04AT1A221M	ELECTRO 220UF 10WV	
R56			RK73GB2A101J	CHIP R 100 J 1/10W		C9			CD04AS1C101M	ELECTRO 100UF 16WV	
R57			RK73GB2A472J	CHIP R 4.7K J 1/10W		C11			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W		C12			CD04BF1V470M	ELECTRO 47UF 35WV	
R71			RK73GB2A101J	CHIP R 100 J 1/10W		C14			CD04AS1C101M	ELECTRO 100UF 16WV	
R72			RK73GB2A333J	CHIP R 33K J 1/10W		C15			CD04AS1C220M	ELECTRO 22UF 16WV	
R74			RK73GB2A333J	CHIP R 33K J 1/10W		C16			CD04AS1C470M	ELECTRO 47UF 16WV	
R75			RK73GB2A750J	CHIP R 75 J 1/10W		C18			CD04BF1E101M	ELECTRO 100UF 25WV	
R78			RK73GB2A103J	CHIP R 10K J 1/10W		C19			CK73GB1A105K	CHIP C 1.0UF K	
R79			RK73GB2A333J	CHIP R 33K J 1/10W		C20			CD04BK1E101M	ELECTRO 100UF 25WV	
R80,81			RK73GB2A682J	CHIP R 6.8K J 1/10W		C101			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
R88			RK73GB2A472J	CHIP R 4.7K J 1/10W		C102			CK73GB1A105K	CHIP C 1.0UF K	
R89			RK73GB2A104J	CHIP R 100K J 1/10W		C103			CK73GB1H104K	CHIP C 0.10UF K	
R90			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		C104			CK73GB1H103K	CHIP C 0.010UF K	
R91			RK73GB2A910J	CHIP R 91 J 1/10W		C105			CK73GB1H223K	CHIP C 0.022UF K	
R92			RK73GB2A225J	CHIP R 2.2M J 1/10W		C106			CK73FB1C105K	CHIP C 1.0UF K	
R93			RK73GB2A103J	CHIP R 10K J 1/10W		C107			CK73GB1H102K	CHIP C 1000PF K	
R100			RK73GB2A470J	CHIP R 47 J 1/10W		C108-110			CK73GB1H103K	CHIP C 0.010UF K	
R101			RK73GB2A102J	CHIP R 1.0K J 1/10W		C201			CD04AS0J470M	ELECTRO 47UF 6.3WV	
R102			RK73GB2A272J	CHIP R 2.7K J 1/10W		C202			CK73GB1H103K	CHIP C 0.010UF K	
R103,104			RK73GB2A223J	CHIP R 22K J 1/10W		C203,204			CC73GCH1H220J	CHIP C 22PF J	
R112,113			RK73GB2A100J	CHIP R 10 J 1/10W		C205			CK73GB1H104K	CHIP C 0.10UF K	
R150			RK73GB2A103J	CHIP R 10K J 1/10W		C206,207			CK73GB1H103K	CHIP C 0.010UF K	
R151			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		C208			CK73GB1H102K	CHIP C 1000PF K	
R152			RK73EB2E3R3J	CHIP R 3.3 J 1/4W		C209			CK73GB1H103K	CHIP C 0.010UF K	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W		C302-305			CK73GB1H103K	CHIP C 0.010UF K	
W20,21			R92-1252-05	CHIP R 0 OHM J 1/16W		C306			CD04AS1V100M	ELECTRO 10UF 35WV	
S1,2			S68-0863-05	PUSH SWITCH		C307			CK73GB1H103K	CHIP C 0.010UF K	
S3			S68-0862-05	PUSH SWITCH		C308			CD04AS1V100M	ELECTRO 10UF 35WV	
D1			DAP202U	DIODE		C309			CK73GB1H103K	CHIP C 0.010UF K	
IC1			TAR5S33-F	ANALOGUE IC		C310			CD04BF1V470M	ELECTRO 47UF 35WV	
IC2			NJM4580V-ZB	ANALOGUE IC		C311			CK73GB1H103K	CHIP C 0.010UF K	
IC3			BA5824FP	ANALOGUE IC		C312			CD04BK1E101M	ELECTRO 100UF 25WV	
IC4		*	703030BYGJC21A	MICROCONTROLLER IC		C313			CD04AS1V100M	ELECTRO 10UF 35WV	
IC5			XC6219B332MR	ANALOGUE IC		C320,321			CK73GB1H103K	CHIP C 0.010UF K	
IC6			BA33BC0WFP	ANALOGUE IC		C322			CD04AS1V100M	ELECTRO 10UF 35WV	
IC7		*	UPD63763CGJ	MOS-IC		C401			CD04AS1C470M	ELECTRO 47UF 16WV	
IC9			BR24L02FV-W	ROM IC		C402,403			CD04AS1H010M	ELECTRO 1UF 50WV	
IC11			TC7SET32FU-F	MOS-IC		C404			CK73GB1A105K	CHIP C 1.0UF K	
C405						C405			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
Q1			2SA1576A	TRANSISTOR		C406,407			CK73FB1A335K	CHIP C 3.3UF K	
Q4			2SB0970	TRANSISTOR		C410			CK73GB1H103K	CHIP C 0.010UF K	
Q5			DTA143XUA	DIGITAL TRANSISTOR		C411			CD04AS1C470M	ELECTRO 47UF 16WV	
Q6			DTC143XUA	DIGITAL TRANSISTOR		C412			CD04AS1V100M	ELECTRO 10UF 35WV	
Q7			DTA143XUA	DIGITAL TRANSISTOR		C413,414			CK73FB1E474K	CHIP C 0.47UF K	
Q8			DTC143XUA	DIGITAL TRANSISTOR		C415,416			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
ELECTRIC UNIT (X34-4180-10)						C417-422			CD04AS1C220M	ELECTRO 22UF 16WV	
D302			B30-1710-05	LED (RED)		C423,424			CC73GCH1H101J	CHIP C 100PF J	
C1			C90-6746-05	ELECTRO 3300UF 16WV		C431			CD04AS1V100M	ELECTRO 10UF 35WV	
C3			C90-5692-05	ELECTRO 220UF 16WV		C501			CK73FB1C105K	CHIP C 1.0UF K	
C5			CD04AS1V100M	ELECTRO 10UF 35WV		C503-506			C90-5700-05	NP-ELEC 4.7UF 16WV	
C6			CD04AS0J101M	ELECTRO 100UF 6.3WV		C507			CK73FB1C105K	CHIP C 1.0UF K	
C7			CK73FB1C105K	CHIP C 1.0UF K		C510,511			CK73FB1E474K	CHIP C 0.47UF K	
						C512			CD04AS0J470M	ELECTRO 47UF 6.3WV	
						C513			CK73GB1H103K	CHIP C 0.010UF K	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

KDC-MP4032

PARTS LIST

ELECTRIC UNIT (X34-4180-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C529			C90-5700-05	NP-ELEC 4.7UF 16WV	
C802			CK73GB1H102K	CHIP C 1000PF K	
C953,954			CD04AS1V100M	ELECTRO 10UF 35WV	
C955			CK73GB1H103K	CHIP C 0.010UF K	
C957,958			CK73GB1H102K	CHIP C 1000PF K	
C959			CD04AS1C470M	ELECTRO 47UF 16WV	
C960			CK73GB1H104K	CHIP C 0.10UF K	
C961			CD04AS1V100M	ELECTRO 10UF 35WV	
C999			CD04AS1C101M	ELECTRO 100UF 16WV	
CN1			E41-2244-05	FLAT CABLE CONNECTOR	
CN4			E41-2446-05	PIN ASSY	
J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J2			E56-0855-05	CYLINDRICAL RECEPTACLE	
J3			E63-0896-05	PIN JACK	
J4			E58-0992-05	RECTANGULAR RECEPTACLE	
W1	2D		E30-6218-15	CORD WITH PLUG	
L1			L33-1988-05	CHOKE COIL ASSY	
L2			L33-1925-05	CHOKE COIL	
L3			L33-2262-05	CHOKE COIL	
L201			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
L202			L92-0075-05	CHIP FERRITE	
L301			L33-2260-05	CHOKE COIL	
L302-304			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
X1			L77-2880-05	CRYSTAL RESONATOR (32.768KHZ)	
X2			L78-0872-05	RESONATOR (12MHZ)	
G	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
H	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
J	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
K	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
CP201,202			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP203			RK74GA1J471J	CHIP-COM 470 J 1/16W	
CP204			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP206			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP207,208			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP209			RK74GB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73FB2B153J	CHIP R 15K J 1/8W	
R2			RK73GB2A101J	CHIP R 100 J 1/10W	
R3			RK73GB2A223J	CHIP R 22K J 1/10W	
R4			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R5			RK73FB2B221J	CHIP R 220 J 1/8W	
R6			RK73GB2A153J	CHIP R 15K J 1/10W	
R7			RK73GH2A243D	CHIP R 24K D 1/10W	
R8			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R9			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R11			RK73GB2A123J	CHIP R 12K J 1/10W	
R12			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R13			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R15			RK73GB2A473J	CHIP R 47K J 1/10W	
R17,18			RK73GB2A223J	CHIP R 22K J 1/10W	
R20			RK73GB2A473J	CHIP R 47K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R22			RK73SB3A220J	CHIP R 22 J 1W	
R23			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R24			RK73GB2A513J	CHIP R 51K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R25,26			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R27			RK73GB2A221J	CHIP R 220 J 1/10W	
R28,29			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R30			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R31			RK73SB3A9R1J	CHIP R 9.1 J 1W	
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R102,103			RK73EB2E103J	CHIP R 10K J 1/4W	
R104			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R105			RK73SB3A471J	CHIP R 470 J 1W	
R106			RK73GB2A223J	CHIP R 22K J 1/10W	
R107			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R108			R92-5024-05	CHIP R 1K J 1/2W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W	
R110			R92-5024-05	CHIP R 1K J 1/2W	
R112			RK73GB2A223J	CHIP R 22K J 1/10W	
R113			RK73GB2A473J	CHIP R 47K J 1/10W	
R114			RK73GB2A104J	CHIP R 100K J 1/10W	
R115			RK73FB2B683J	CHIP R 68K J 1/8W	
R116			RK73GB2A393J	CHIP R 39K J 1/10W	
R117			RK73FB2B203J	CHIP R 20K J 1/8W	
R118			RK73GB2A104J	CHIP R 100K J 1/10W	
R119			RK73GB2A103J	CHIP R 10K J 1/10W	
R120			RK73GB2A474J	CHIP R 470K J 1/10W	
R121			RK73GB2A101J	CHIP R 100 J 1/10W	
R122,123			RK73GB2A103J	CHIP R 10K J 1/10W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W	
R126			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W	
R127			RK73EB2E333J	CHIP R 33K J 1/4W	
R128,129			RK73GB2A103J	CHIP R 10K J 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R201			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R202			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W	
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R205			RK73GB2A103J	CHIP R 10K J 1/10W	
R207,208			RK73GB2A103J	CHIP R 10K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W	
R213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R215			RK73GB2A104J	CHIP R 100K J 1/10W	
R216			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R224			RK73GB2A473J	CHIP R 47K J 1/10W	
R227,228			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R229,230			RK73GB2A473J	CHIP R 47K J 1/10W	
R233			RK73GB2A101J	CHIP R 100 J 1/10W	
R234,235			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R236,237			RK73GB2A473J	CHIP R 47K J 1/10W	
R239			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R240			RK73GB2A101J	CHIP R 100 J 1/10W	
R241			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R244			RK73GB2A473J	CHIP R 47K J 1/10W	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4180-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R246			RK73GB2A473J	CHIP R 47K J 1/10W		R516,517			RK73EB2E100J	CHIP R 10 J 1/4W	
R248-250			RK73GB2A473J	CHIP R 47K J 1/10W		R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R253			RK73GB2A222J	CHIP R 2.2K J 1/10W		R519			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W		R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W		R801			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R259,260			RK73GB2A104J	CHIP R 100K J 1/10W		R802			RK73GB2A5R6J	CHIP R 5.6 J 1/10W	
R261			RK73GB2A333J	CHIP R 33K J 1/10W		R920			RK73GB2A391J	CHIP R 390 J 1/10W	
R262,263			RK73GB2A473J	CHIP R 47K J 1/10W		R921			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R301			RK73EB2E102J	CHIP R 1.0K J 1/4W		R922			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R302,303			RK73EB2E101J	CHIP R 100 J 1/4W		R924			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R304			RK73EB2E102J	CHIP R 1.0K J 1/4W		R925			RK73GB2A101J	CHIP R 100 J 1/10W	
R305-309			RK73EB2E101J	CHIP R 100 J 1/4W		R926			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R310			RK73EB2E102J	CHIP R 1.0K J 1/4W		R927			RK73GB2A113J	CHIP R 11K J 1/10W	
R311			RK73GB2A222J	CHIP R 2.2K J 1/10W		R928			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R312			RK73GB2A473J	CHIP R 47K J 1/10W		R929			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R313			RK73GB2A472J	CHIP R 4.7K J 1/10W		R930			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R316			RK73GB2A104J	CHIP R 100K J 1/10W		R932			RK73GB2A100J	CHIP R 10 J 1/10W	
R317			RK73GB2A471J	CHIP R 470 J 1/10W		R933			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R318			RK73GB2A104J	CHIP R 100K J 1/10W		R934			RK73GB2A104J	CHIP R 100K J 1/10W	
R319			RK73GB2A471J	CHIP R 470 J 1/10W		R935			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R320			RK73FB2B102J	CHIP R 1.0K J 1/8W		R936			RK73GB2A103J	CHIP R 10K J 1/10W	
R321			RK73GB2A223J	CHIP R 22K J 1/10W		R937			RK73GB2A101J	CHIP R 100 J 1/10W	
R322			RK73GB2A471J	CHIP R 470 J 1/10W		R941-944			RK73GB2A471J	CHIP R 470 J 1/10W	
R323			RK73GB2A472J	CHIP R 4.7K J 1/10W		R945-949			RK73GB2A103J	CHIP R 10K J 1/10W	
R324			RK73GB2A471J	CHIP R 470 J 1/10W		R950			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R325			RK73GB2A472J	CHIP R 4.7K J 1/10W		R951			RK73GB2A100J	CHIP R 10 J 1/10W	
R326			RK73GB2A222J	CHIP R 2.2K J 1/10W		R952			RK73GB2A431J	CHIP R 430 J 1/10W	
R327			RK73GB2A681J	CHIP R 680 J 1/10W		R953			RK73GB2A510J	CHIP R 51 J 1/10W	
R332			RK73GB2A241J	CHIP R 240 J 1/10W		W3			R92-1252-05	CHIP R 0 OHM J 1/16W	
R336			RK73GB2A474J	CHIP R 470K J 1/10W		W14			R92-2053-05	CHIP R 0 OHM J 1/8W	
R337,338			RK73GB2A102J	CHIP R 1.0K J 1/10W		W931,932			R92-1252-05	CHIP R 0 OHM J 1/16W	
R339			RK73GB2A474J	CHIP R 470K J 1/10W		W997,998			R92-1252-05	CHIP R 0 OHM J 1/16W	
R401			RK73GB2A103J	CHIP R 10K J 1/10W		S3			S74-0822-05	MICRO SWITCH	
R402,403			RK73GB2A361J	CHIP R 360 J 1/10W		S4			S70-0931-05	TACT SWITCH	
R404,405			RK73GB2A223J	CHIP R 22K J 1/10W		D1			S2V60*A	DIODE	
R406,407			RK73GB2A361J	CHIP R 360 J 1/10W		D2			RB160L-40	DIODE	
R408,409			RK73GB2A223J	CHIP R 22K J 1/10W		D3			02DZ5.6F-Y	ZENER DIODE	
R410,411			RK73GB2A361J	CHIP R 360 J 1/10W		D4			02DZ8.2F-Y	ZENER DIODE	
R412,413			RK73GB2A223J	CHIP R 22K J 1/10W		D8			02DZ12F-X	ZENER DIODE	
R414-419			RK73FB2B181J	CHIP R 180 J 1/8W		D9			1SR154-400	DIODE	
R426			RK73GB2A222J	CHIP R 2.2K J 1/10W		D10			SFPB-54VNF	DIODE	
R427			RK73GB2A472J	CHIP R 4.7K J 1/10W		D101	*		1SR139-400T64	DIODE	
R428			RK73GB2A102J	CHIP R 1.0K J 1/10W		D102-105			1SR154-400	DIODE	
R429			RK73GB2A473J	CHIP R 47K J 1/10W		D107			02DZ4.7F-Y	ZENER DIODE	
R431			RK73GB2A100J	CHIP R 10 J 1/10W		D108,109			02DZ6.8F-Y	ZENER DIODE	
R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		D110	*		BAV70W	DIODE	
R433,434			RK73GB2A101J	CHIP R 100 J 1/10W		D111			02DZ6.2F-Y	ZENER DIODE	
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W		D303			02DZ9.1F-Z	ZENER DIODE	
R503			RK73GB2A302J	CHIP R 3.0K J 1/10W		D401-403	*		BAW56W	DIODE	
R505,506			RK73GB2A223J	CHIP R 22K J 1/10W		D404			STZ6.8N	ZENER DIODE	
R507			RK73GB2A221J	CHIP R 220 J 1/10W		D407			02DZ5.6F-Y	ZENER DIODE	
R508			RK73EB2E472J	CHIP R 4.7K J 1/4W		D411	*		BAW56W	DIODE	
R509			RK73EB2E101J	CHIP R 100 J 1/4W		D501,502	*		BAW56W	DIODE	
R510			RK73EB2E472J	CHIP R 4.7K J 1/4W		D503,504			1SR154-400	DIODE	
R511-515			RK73EB2E101J	CHIP R 100 J 1/4W							

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-4180-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D505,506 D507-510 D511,512 D513-515 D903		*	1SR139-400T64 1SR154-400 STZ6.8N STZ6.2N 02DZ6.8F-Y	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D904 D905 IC1 IC2 IC3			DA227 02DZ16F-Y * 30624MGPA76GP * E-TDA7415C M5237ML-CF0J	DIODE ZENER DIODE MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC	
IC4 IC5 IC6 IC7 IC11			E-TDA7560A BA00CCWT-V5 SN74HC02APWR S-80836CNNB-J TA75S558F-F	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC	
IC12 IC902 Q1 Q2 Q3,4			SI-8050JF3NF NJM4565V-ZB 2SB1565 2SC4155A(Q,R,S KTA2014P(Y,GR)	ANALOGUE IC ANALOGUE IC TRANSISTOR TRANSISTOR TRANSISTOR	
Q5 Q6 Q7 Q8 Q9			2SB1565 UMC2N 2SB1565 2SC4155A(Q,R,S DTC124EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q11 Q12 Q13 Q14,15 Q16			DTC124EUA DTC144EUA KTA2014P(Y,GR) 2SC4155A(Q,R,S 2SB1443	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q101 Q102 Q103 Q104 Q105			2SB1188(Q,R) DTC114YUA 2SB1188(Q,R) KTA2014P(Y,GR) DTA114EUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q106 Q108 Q109 Q110 Q111,112			DTC114YUA DTC144EUA 2SC4155A(Q,R,S KTA2014P(Y,GR) 2SC4155A(Q,R,S	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q113 Q114 Q115,116 Q299 Q300			KTA2014P(Y,GR) DTA144EE DTA124EUA UMC2N 2SB1689	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
Q301 Q302 Q303 Q304 Q305			DTC124EUA 2SB1565 2SC4155A(Q,R,S DTC114YUA 2SA1577	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q306 Q400-405 Q905 Q906 Q907			DTC144EUA DTC143TUA 2SC2873-F DTA124EUA KTA2014P(Y,GR)	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
TH1			PRF21BD471QB2	POSITIVE RESISTOR	
A1	2D		X86-3840-11	FRONT-END UNIT	
MECHANISM ASSY (X92-5470-00)					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2381-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
46	2A		G13-1258-04	CUSHION	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-15	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-6317-05	TAPTITE SCREW (M1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (BIND P 2X5)	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-5470-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW							
J	1B		N09-6108-15	MACHINE SCREW (M2X3.5)							
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)							
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)							
DM2	2B		T42-1067-14	DC MOTOR (LOADING)							
DPU1	2B		X93-2130-00	OPTICAL PICKUP ASSY							

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.