

9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.


• The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

• Screw adjacent to  mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

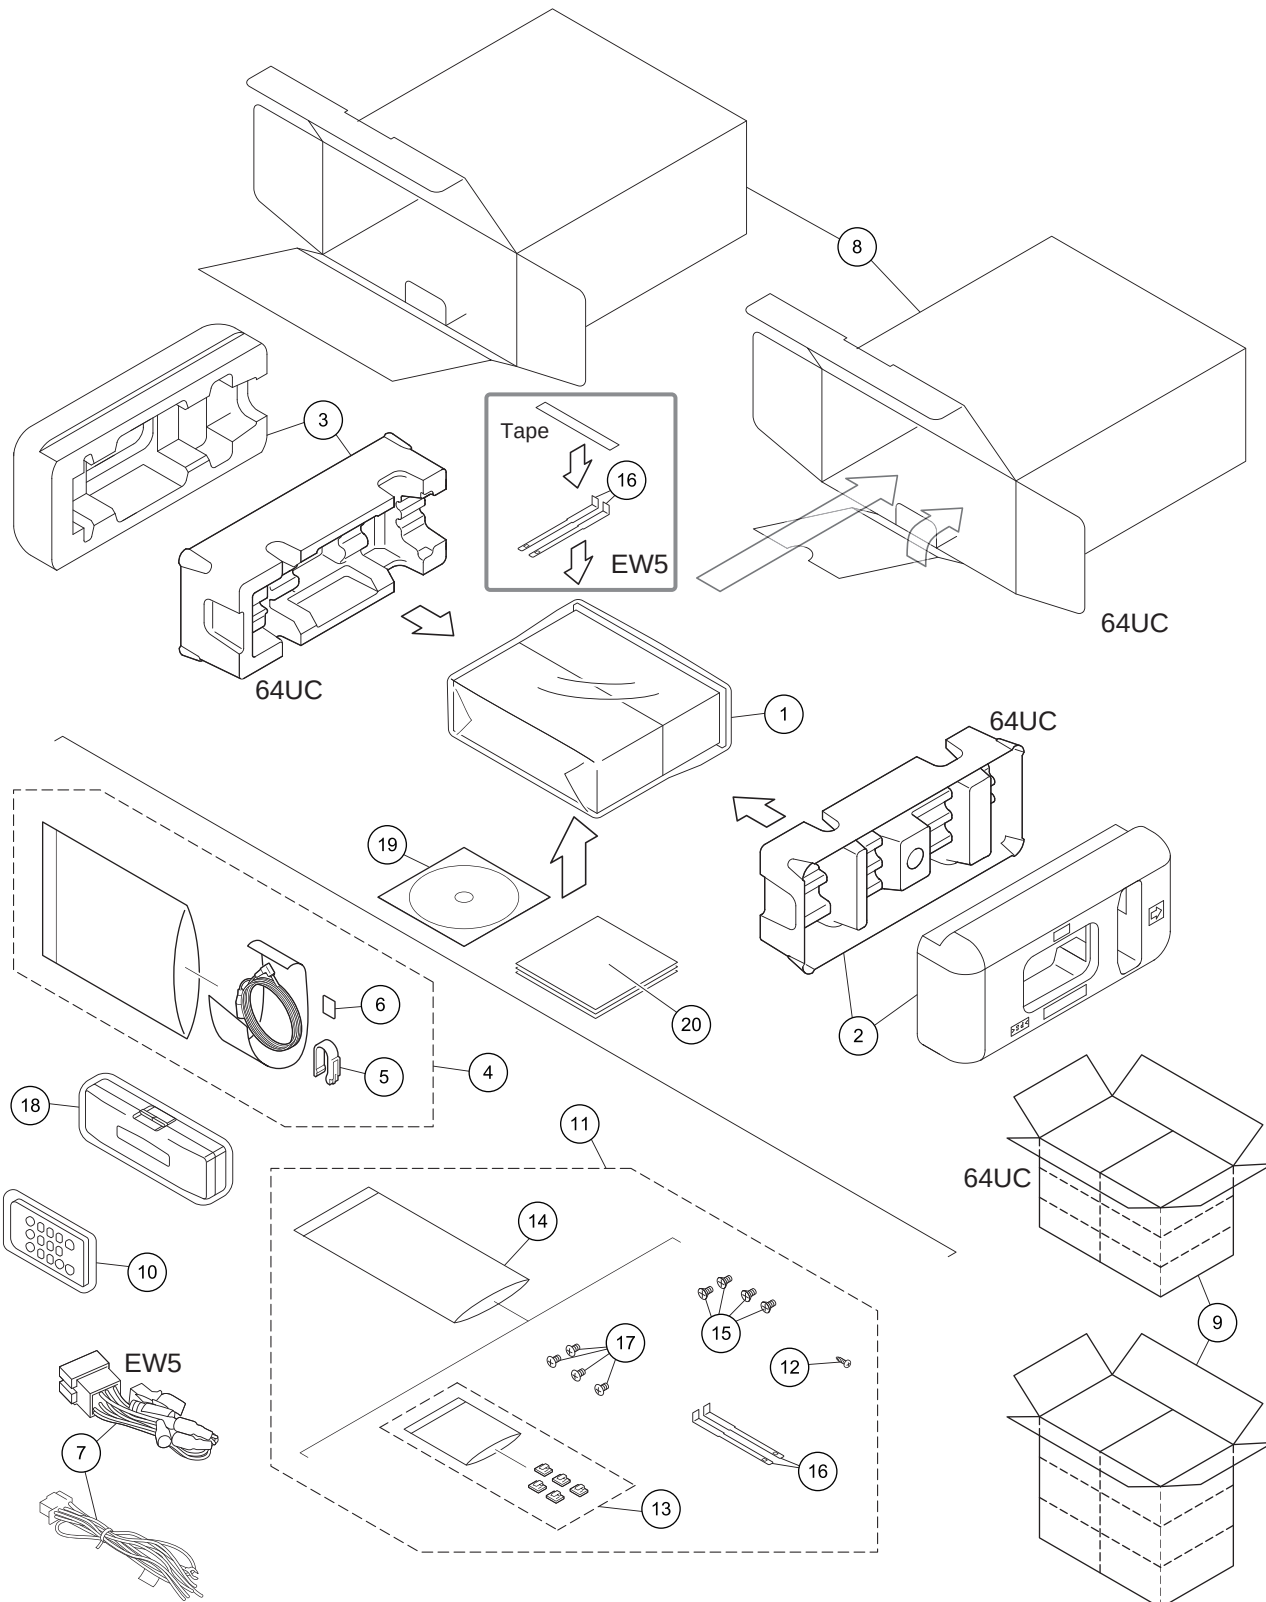

Mark	No.	Description	DEH-64BT/ XNUC	DEH-6400BT/ XNUC	DEH-5400BT/ XNUC	DEH-4400BT/ XNEW5	DEH-4450BT/ XNES	DEH-4490BT/ XNID	
	1	Polyethylene Bag	CEG1173	CEG1173	CEG1173	QEG3001	QEG3001	QEG3001	A
	2	Protector	CHP4103	QHP3016	QHP3016	QHP3016	QHP3016	QHP3016	
	3	Protector	CHP4104	QHP3016	QHP3016	QHP3016	QHP3016	QHP3016	
	4	Microphone Assy	CPM1083	CPM1083	CPM1083	CPM1083	CPM1083	CPM1083	
	5	Holder	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192	
	6	Cushion	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193	B
	7	Cord Assy	QDP3013	QDP3013	QDP3013	QDP3014	QDP3013	QDP3013	
	8	Unit Box	QHG3136	QHG3135	QHG3134	QHG3132	QHG3133	QHG3137	
	9	Contain Box	QHL3136	QHL3135	QHL3134	QHL3132	QHL3133	QHL3137	
	10	Card type RC Unit	QXE1044	QXE1044	QXE1044	Not used	QXE1044	QXE1044	
*	11	Accessory Assy	YEA5100	YEA5100	YEA5100	Not used	YEA5099	YEA5099	C
	12	Screw	BPZ20P060FTC	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used	Not used	
	13	Attachment Assy	CEA4636	CEA4636	CEA4636	CEA4636	CEA4636	CEA4636	
	14	Polyethylene Bag	CEG1160	CEG1160	CEG1160	Not used	CEG1160	CEG1160	
	15	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC	Not used	Not used	Not used	
	16	Handle	QNC3021	QNC3021	QNC3021	QNC3021	QNC3021	QNC3021	D
	17	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC	Not used	TRZ50P080FTC	TRZ50P080FTC	
	18	Case Assy	Not used	Not used	Not used	QXA3129	QXA3129	QXA3129	
	19	IM CD-ROM	Not used	Not used	Not used	QPJ3009	Not used	Not used	
	20-1	Owner's Manual	QRD3096	QRD3096	QRD3096	Not used	QRD3097	QRB3193	
	20-2	Quick Start Guide	Not used	Not used	Not used	QRD3094	Not used	Not used	E
	20-3	Installation Manual	Not used	Not used	Not used	QRD3095	Not used	Not used	
*	20-4	Warranty Card	QRY3001	QRY3001	QRY3001	CRY1316	Not used	CRY1304	
*	20-5	Caution Card	Not used	Not used	Not used	QRP3009	Not used	Not used	
	20-6	Service Network	Not used	Not used	Not used	Not used	Not used	CRY1305	

Owner's Manual, Installation Manual


Part No.	Language
QRD3096	English, French, Spanish(Espanol)
QRD3094	English, French, Italian, Spanish(Espanol), German ,Dutch, Russian
QRD3095	English, French, Italian, Spanish(Espanol), German ,Dutch, Russian
QRD3097	English, Spanish(Espanol), Portuguese(B), Arabic, Persian, Traditional Chinese
QRB3193	English
QRB3194	Portuguese(B)

CONTENTS OF CD-ROM (Operation Manual), QPJ3009


Part No.	Language
* QRB3179	English
* QRB3180	French
* QRB3181	Italian
* QRB3182	Spanish(Espanol)
* QRB3183	German
* QRB3184	Dutch
* QRB3185	Russian
* QRB3186	Swedish
* QRB3187	Norwegian
* QRB3188	Finnish
* QRB3189	Danish
* QRB3190	Portuguese
* QRB3191	Greek
* QRB3192	Turkish

All operation manuals are supplied in PDF files by the CD-ROM.
Regarding the availability of paper manual, contact Pioneer Service representative in your region.

9.2 EXTERIOR

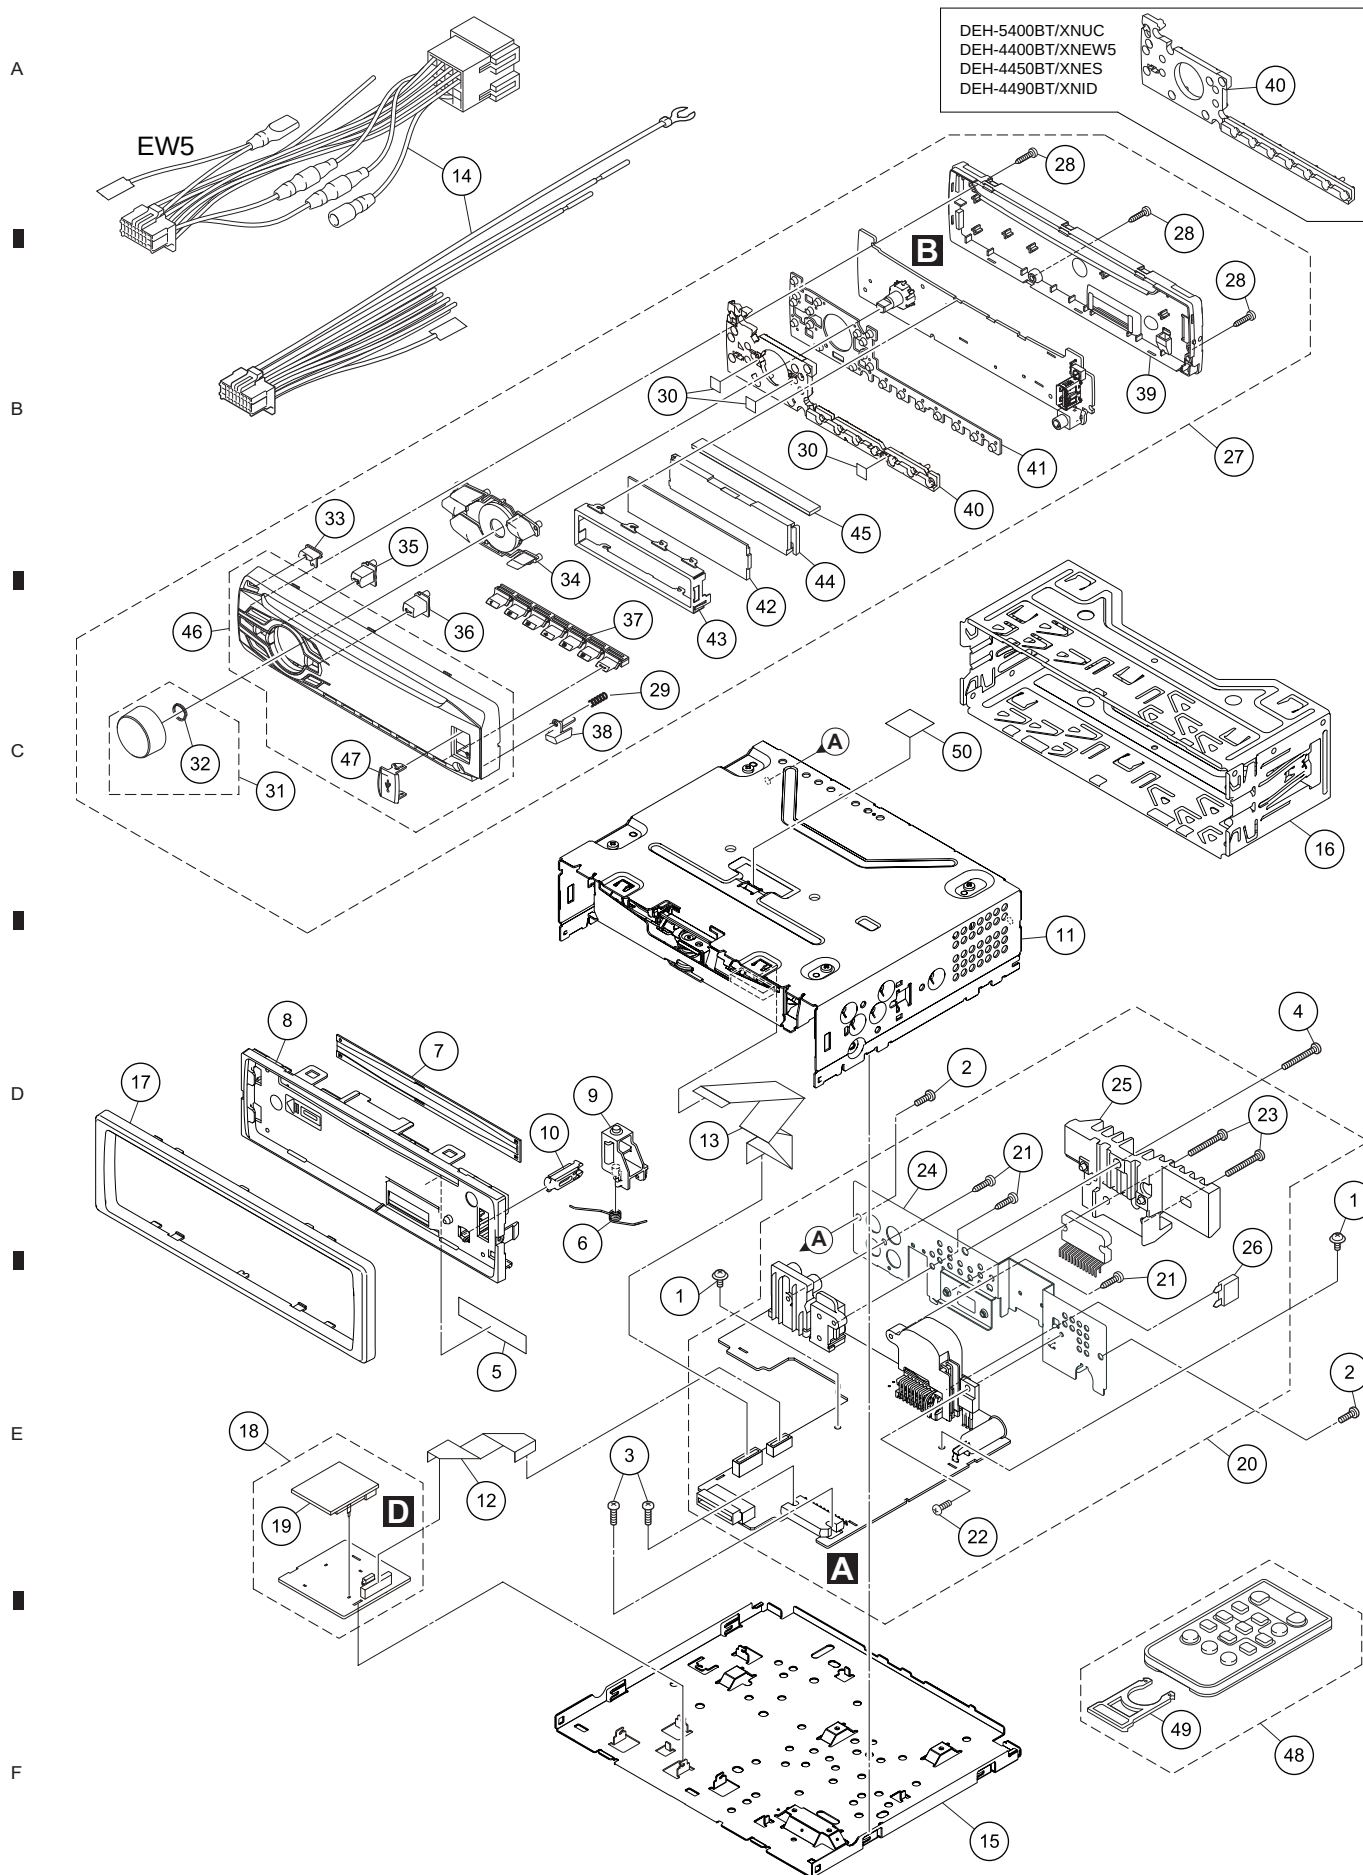

9.3 CD MECHANISM MODULE

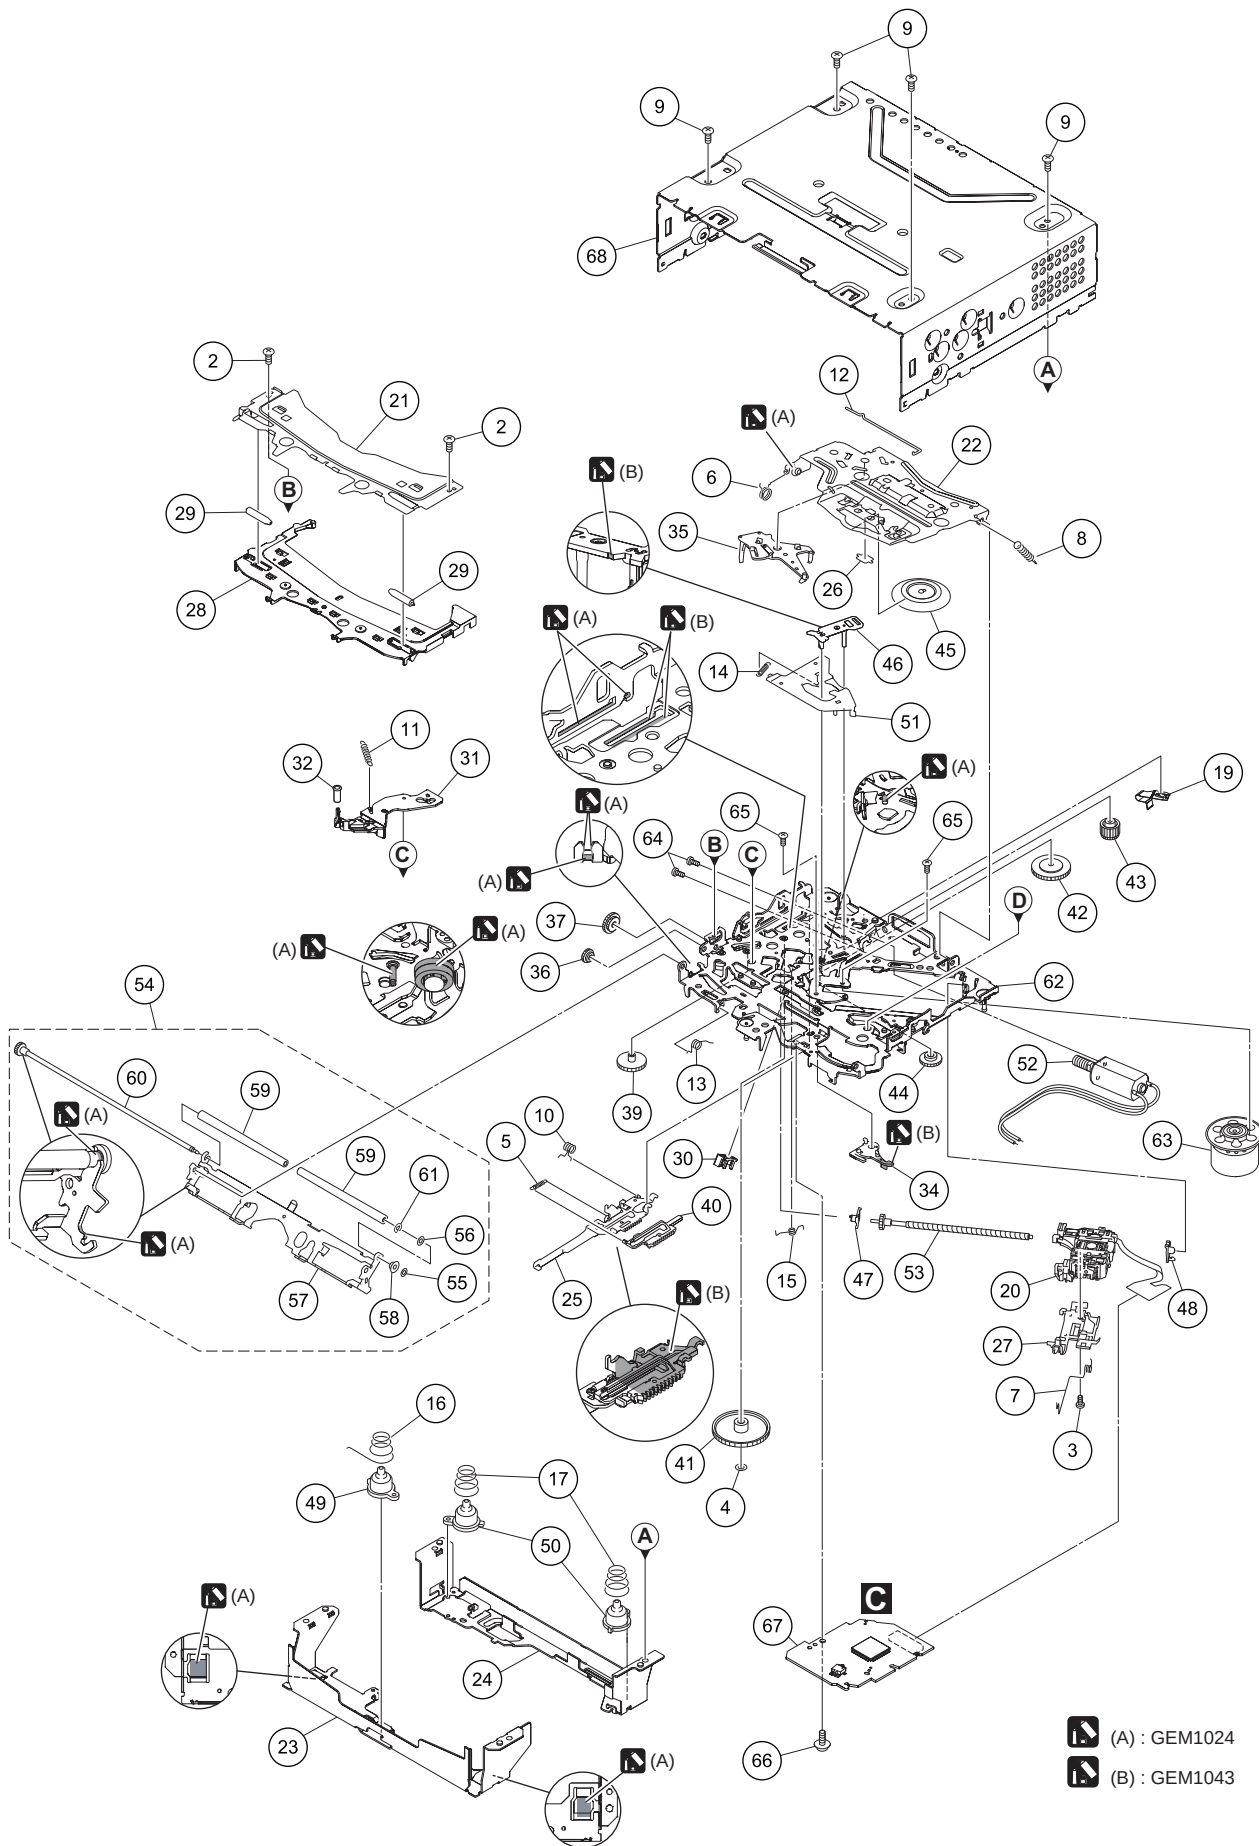

DEH-64BT/XNUC

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE5027	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXC8893	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30	Holder	CNW1195				
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				F
47	Holder	CNW1193				
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

$$RS1/\bigcirc S\bigcirc\bigcirc\bigcirc J, RS1/\bigcirc\bigcirc S\bigcirc\bigcirc\bigcirc J$$

Chip Capacitor (except for CQS.....)

CKS..... CCS..... CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A:DEH-64BT/XNUC		: QWM3298(D)	
B:DEH-6400BT/XNUC		: QWM3301(E)	
C:DEH-5400BT/XNUC		: QWM3302(F)	
D:DEH-4400BT/XNEW5		Unit Name : Tuner Amp Unit	
E:DEH-4450BT/XNES		MISCELLANEOUS	
F:DEH-4490BT/XNID		IC 201 (A,98,112) IC PML022A	
Unit Number: QWM3362(A)		IC 231 (A,144,57) D/A Converter PCM1753DBQ	
: QWM3300(B)		IC 301 (A,78,141) IC PAL007E	
: QWM3299(C)		IC 401 (A,150,90) IC TDA7706	
: QWM3298(D)		IC 501 (A,20,113) IC BD9008F	
: QWM3301(E)			
: QWM3302(F)			
Unit Name : Tuner Amp Unit		IC 510 (A,107,30) IC BD2232G-G	
Unit Number: (A,B)		IC 551 (A,115,90) IC 341S2162	
Unit Name : Keyboard Unit		IC 601 (A,118,65) IC R5S7266ZD144FP	
Unit Number: CWX4023		IC 651 (A,98,53) IC S-80827CNMC-B8M	
Unit Name : CD Core Unit (S11.6STD)		IC 671 (A,126,85) Flash ROM Unit(A,B) PEB009A8	
Unit Number: (C,E,F)		(A,126,85) Flash ROM Unit(C) PEB008A8	
: (D)		(A,126,85) Flash ROM Unit(D,E,F) PEB029A8	
Unit Name : Keyboard Unit			
Unit Number: QWM3365		IC 801 (A,108,19) L-MOS And Gate TC7SET08FUS1	
Unit Name : BT Unit		IC 912 (A,145,28) IC BA49182-V12	
		IC 961 (A,95,76) IC NJM4558MD	
		Q 251 (A,23,130) Chip Transistor RN1910	
		Q 252 (A,13,129) Chip Transistor RN1910	
		Q 351 (A,88,127) Chip Transistor RN4983	
		Q 551 (A,122,93) Transistor LSA1576UB	
		Q 751 (A,142,138) Transistor 2SD2396	
		Q 752 (A,140,133) Chip Transistor RN4983	
		Q 871 (A,146,69) Transistor(C,D,E,F) 2SD1767	
		Q 872 (A,159,77) Chip Transistor(C,D,E,F) RN4983	
		Q 873 (A,161,73) Transistor LTC143EUB	
		Q 874 (A,151,70) Transistor(A,B) 2SA1577	
		Q 931 (A,118,104) Transistor LSC4081UB	
		D 301 (A,100,126) Diode CRG03	
		D 302 (A,96,126) Diode CRG03	
		D 401 (A,158,106) Diode KP2311E	
		D 402 (A,158,99) Diode KP2311E	
		D 501 (A,29,109) Diode RB160L-40	
		D 502 (A,20,124) Diode CRG03	
		D 503 (A,20,122) Diode CRG03	
		D 601 (A,117,81) Diode RB551V-30	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 602	(A,127,50) Diode	RB751S-40
D 751	(A,138,134) Diode	RKZ8.2KG(B2)
D 801	(A,114,13) Diode	DZ2S068C
D 802	(A,117,12) Diode	DZ2S068C
D 803	(A,121,12) Diode	DZ2S068C
D 804	(A,126,12) Diode	DZ2S068C
D 805	(A,122,12) Diode(A,B)	DZ2S068C
D 807	(A,113,13) Diode(A,B)	DZ2S068C
D 809	(A,96,14) Diode	DZ2S068C
D 810	(A,108,14) Diode	DZ2S068C
D 811	(A,102,14) Diode	DZ2S068C
D 872	(A,154,76) Diode(C,D,E,F)	RKZ7.5KG(B2)
D 875	(A,118,29) Diode(A,B)	CRG03
D 876	(A,122,26) Diode(A,B)	CRG03
D 901	(A,139,125) Diode	1SR154-400
D 902	(A,136,125) Diode	1SR154-400
D 911	(A,158,65) Diode	1SR154-400
D 912	(A,162,65) Diode	1SR154-400
D 931	(A,116,107) Diode(A,B,C,E,F)	HZU7L(A1)
	(A,116,107) Diode(D)	HZU7L(C3)
L 401	(A,159,102) Chip Coil	LCTAWR15J2520
L 402	(A,151,101) Inductor	CTF1786
L 403	(A,146,102) Inductor	CTF1786
L 404	(A,155,103) Chip Coil(A,B,C,D)	LCTAWR27J2520
	(A,155,103) Chip Coil(E,F)	LCTAWR39J2520
L 405	(A,142,103) Inductor(A,B,C,D)	CTF1389
L 406	(A,139,101) Inductor(A,B,C,D)	LCTAW220J2520
	(A,139,101) Chip Coil(E,F)	LCTAW1R5J2520
L 407	(A,162,95) Inductor	CTF1786
L 408	(A,162,94) Inductor	CTF1786
L 409	(A,137,93) Chip Coil(A,B,C,D)	LCTAW470J2520
	(A,137,93) Inductor(E,F)	LCTAW2R2J2520
L 415	(A,146,81) Inductor	CTF1786
L 416	(A,154,79) Inductor(D)	CTF1786
L 417	(A,138,107) Chip Coil(E,F)	LCTAWR39J2520
L 418	(A,142,105) Chip Coil(E,F)	LCTAWR27J2520
L 420	(A,145,106) Inductor(A,B,C)	LCYB68NJ1608
L 501	(A,34,109) Coil	CTH1475
L 671	(A,131,81) Inductor	CTF1786
L 801	(A,116,15) Inductor	CTF1713
L 901	(A,112,140) Choke Coil 600 uH	CTH1432
X 401	(A,161,87) Oscillator 36.48 MHz	CSS1805
X 601	(A,134,59) Ceramic Resonator 16.934 MHz	CSS1603
X 602	(A,114,49) Oscillator 12 MHz	YSS5005
⚠ P251	(A,7,128) Fuse 3 A	CEK1286
P 401	(A,155,108) Surge Protector	IMSA-6802-01Y900
VA891	(A,51,137) Varistor	VR105C5R0AAA
VA892	(A,34,137) Varistor	VR105C5R0AAA
VA893	(A,48,133) Varistor	VR105C5R0AAA
VA894	(A,36,133) Varistor	VR105C5R0AAA
CN701	(A,92,38) Connector	VKN1192
CN801	(A,109,3) Connector	CKS6288
CN961	(A,93,64) Connector	VKN1189
JA251	(A,19,137) Pin Jack	CKB1099
JA401	(A,158,128) Antenna Jack	YKS5041
JA891	(A,42,140) Jack	YKS5035
JA901	(A,113,140) Plug	CKM1586
⚠	Fuse(10 A)	YEK5001

R 201	(A,100,59)	RAB4CQ102J
R 231	(A,147,56)	RS1/16SS821J
R 232	(A,148,56)	RS1/16SS821J
R 251	(A,19,130)	RS1/16SS821J
R 252	(A,29,131)	RS1/16SS821J
R 253	(A,9,129)	RS1/16SS821J
R 254	(A,18,130)	RS1/16SS821J
R 255	(A,21,130)	RS1/16SS223J
R 256	(A,26,130)	RS1/16SS223J
R 257	(A,11,129)	RS1/16SS223J
R 258	(A,15,130)	RS1/16SS223J
R 303	(A,86,122)	RS1/16SS103J
R 304	(A,86,125)	RS1/16SS473J
R 331	(A,74,125)	RS1/16SS471J
R 332	(A,81,125)	RS1/16SS471J
R 333	(A,75,125)	RS1/16SS471J
R 334	(A,80,125)	RS1/16SS471J
R 351	(A,91,127)	RS1/16SS103J
R 352	(A,90,127)	RS1/16SS103J
R 353	(A,91,128)	RS1/16SS221J
R 401	(A,161,106)	RS1/16SS221J
R 402	(A,161,99)	RS1/16SS751J
R 403	(A,139,103) (A,B,C,D)	RS1/16SS152J
	(A,139,103) (E,F)	RS1/16SS331J
R 405	(A,142,99)	RS1/16SS105J
R 406	(A,137,96) (A,B,C,D)	RS1/16SS471J
	(A,137,96) (E,F)	RS1/16SS361J
R 407	(A,139,95)	RS1/16SS330J
R 408	(A,138,91) (A,B,C,D)	RS1/16SS681J
	(A,138,91) (E,F)	RS1/16SS391J
R 410	(A,136,79)	RS1/4SA8R2J
R 412	(A,137,84)	RS1/4SA8R2J
R 413	(A,145,107)	RS1/16SS105J
R 419	(A,139,70)	RS1/16SS103J
R 420	(A,141,70)	RS1/16SS103J
R 421	(A,153,79) (A,B,C,E,F)	RS1/16SS0R0J
R 427	(A,142,84)	RS1/16SS102J
R 428	(A,139,86)	RS1/16SS0R0J
R 431	(A,137,104) (A,B,C)	RS1/16SS0R0J
R 433	(A,141,90) (A,B,C,D)	RS1/16SS0R0J
R 434	(A,144,97) (E,F)	RS1/16SS0R0J
R 501	(A,22,119)	RS1/10SR471J
R 502	(A,24,117)	RS1/16SS6202D
R 503	(A,22,117)	RS1/16SS3601D
R 504	(A,20,119)	RS1/16SS1202D
R 505	(A,27,113)	RS1/16SS183J
R 506	(A,15,114)	RS1/16SS513J
R 508	(A,104,64)	RS1/16SS103J
R 551	(A,115,95)	RS1/16SS473J
R 552	(A,116,85)	RS1/16SS103J
R 553	(A,117,85)	RS1/16SS103J
R 556	(A,119,91)	RS1/16SS272J
R 557	(A,120,90)	RS1/16SS472J
R 558	(A,122,90)	RS1/16SS472J
R 559	(A,115,85)	RS1/16SS101J
R 560	(A,118,85)	RS1/16SS101J
R 601	(A,116,83)	RS1/16SS103J
R 602	(A,114,80)	RS1/16SS473J
R 603	(A,115,83)	RS1/16SS104J

RESISTORS

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 604 (A,104,76)	RAB4CQ473J	R 812 (A,120,18) (A,B)	RS1/10SR222J
R 607 (A,104,70)	RS1/16SS473J	R 813 (A,105,14) (A,B)	RS1/10SR222J
R 608 (A,104,69)	RS1/16SS473J	R 814 (A,105,11) (C,D,E,F)	RS1/10SR0R0J
R 609 (A,132,66)	RS1/16SS101J	R 815 (A,123,18)	RS1/10SR101J
R 610 (A,103,65)	RS1/16SS222J		
		R 816 (A,124,16)	RS1/16SS223J
R 611 (A,139,64)	RS1/16SS101J	R 817 (A,121,16)	RS1/16SS223J
R 612 (A,106,76)	RS1/16SS473J	R 818 (A,127,18)	RS1/10SR222J
R 613 (A,142,64)	RS1/16SS101J	R 851 (A,96,16)	RS1/16SS472J
R 615 (A,103,63)	RS1/16SS104J	R 871 (A,154,67) (A,B)	RS1/10SR473J
R 617 (A,132,62)	RS1/16SS221J	(A,154,67) (C,D,E,F)	RS1/10SR222J
R 619 (A,135,55)	RAB4CQ473J	R 872 (A,125,26) (A,B)	RS1/16SS1R0J
R 620 (A,105,57)	RS1/16SS473J	R 873 (A,163,78) (C,D,E,F)	RS1/4SA151J
R 621 (A,131,52)	RS1/16SS473J	R 874 (A,154,71) (A,B)	RS1/16SS122J
R 622 (A,106,50)	RS1/16SS473J	R 875 (A,125,39) (A,B)	RS1/16SS0R0J
R 623 (A,113,51)	RS1/16SS152J		
		R 876 (A,124,40) (C,D,E,F)	RS1/16SS0R0J
R 624 (A,108,50)	RS1/16SS473J	R 877 (A,151,74) (A,B)	RS1/16SS103J
R 626 (A,121,51)	RS1/16SS5601F	R 879 (A,158,73) (C,D,E,F)	RS1/10SR473J
R 628 (A,127,51)	RS1/16SS103J	R 880 (A,154,73) (C,D,E,F)	RS1/10SR181J
R 629 (A,106,54)	RS1/16SS102J	R 882 (A,121,28) (A,B)	RS1/16SS0R0J
		R 884 (A,122,28) (C,D,E,F)	RS1/16SS1R0J
R 630 (A,125,50) (A,E,F)	RS1/16SS473J	R 885 (A,157,72) (A,B)	RS1/16SS152J
R 631 (A,125,52) (B,C,D)	RS1/16SS473J		
(A,125,52) (E)	RS1/16SS103J	R 891 (A,54,133)	RS1/10SR102J
(A,125,52) (F)	RS1/16SS223J	R 892 (A,58,136)	RS1/10SR102J
		R 911 (A,140,40)	RS1/10SR1R0J
R 632 (A,121,43)	RS1/16SS103J	R 912 (A,144,41)	RS1/10SR1R0J
R 633 (A,117,43)	RS1/16SS101J	R 931 (A,121,105)	RS1/16SS223J
R 636 (A,109,51)	RS1/16SS473J		
R 641 (A,113,79)	RS1/16SS473J	R 932 (A,118,106)	RS1/16SS473J
R 642 (A,92,53)	RS1/16SS473J	R 933 (A,115,106) (A,B,C,E,F)	RS1/16SS472J
		(A,115,106) (D)	RS1/16SS473J
R 651 (A,101,53)	RS1/16SS104J	R 934 (A,115,113)	RS1/4SA102J
R 671 (A,131,86)	RS1/10SR473J	R 961 (A,92,80)	RS1/10SR473J
R 672 (A,126,91)	RS1/10SR473J	R 962 (A,101,73)	RS1/16SS822J
R 701 (A,97,43)	RS1/16SS473J		
R 702 (A,97,37)	RS1/16SS104J	R 963 (A,90,75)	RS1/16SS822J
		R 964 (A,91,54)	RS1/16SS102J
R 703 (A,99,41)	RS1/16SS104J	R 965 (A,90,71)	RS1/16SS0R0J
R 704 (A,97,47)	RAB4CQ472J	R 966 (A,97,57)	RS1/16SS102J
R 707 (A,97,44)	RS1/16SS221J	R 967 (A,90,77)	RS1/16SS103J
R 708 (A,97,42)	RS1/16SS221J		
R 709 (A,97,41)	RS1/16SS101J	R 968 (A,100,74)	RS1/16SS103J
		R 969 (A,91,77)	RS1/16SS103J
R 710 (A,97,40)	RS1/16SS221J	R 970 (A,101,75)	RS1/16SS103J
R 711 (A,97,39)	RS1/16SS101J	R 971 (A,100,81)	RS1/10SR473J
R 712 (A,97,38)	RS1/16SS102J	R 972 (A,105,83)	RS1/16SS103J
R 713 (A,97,35)	RS1/16SS151J		
R 714 (A,97,34)	RS1/16SS151J	R 973 (A,104,84)	RS1/16SS103J
R 715 (A,97,33)	RS1/16SS151J	<u>CAPACITORS</u>	
R 716 (A,96,31)	RS1/16SS221J	C 201 (A,106,108) 10 uF	CCG1192
R 717 (A,97,32)	RS1/16SS104J	C 202 (A,100,105)	CCSSCH100D50
R 751 (A,97,45)	RS1/16SS473J	C 203 (A,103,108) 4.7 uF	CCG1201
R 752 (A,99,45)	RS1/16SS103J	C 204 (A,100,106)	CCSSCH100D50
		C 205 (A,93,105)	CKSRYB105K10
R 753 (A,143,133)	RS1/10SR821J		
R 801 (A,121,18)	RS1/10SR101J	C 206 (A,93,118)	CKSRYB105K10
R 802 (A,124,18)	RS1/10SR101J	C 207 (A,97,106)	CKSRYB105K10
R 803 (A,102,18)	RS1/10SR222J	C 208 (A,97,118)	CKSRYB105K10
R 804 (A,109,14)	RS1/10SR222J	C 209 (A,99,106)	CKSRYB105K10
		C 210 (A,99,118)	CKSRYB105K10
R 805 (A,117,18)	RS1/10SR8R2J		
R 806 (A,118,18)	RS1/10SR8R2J	C 211 (A,94,104)	CKSRYB105K10
R 807 (A,125,18)	RS1/10SR222J	C 212 (A,95,118)	CKSRYB105K10
R 808 (A,100,18)	RS1/10SR222J	C 213 (A,123,103) (D)	CCSSCH101J50
R 809 (A,104,18)	RS1/16SS822J	C 215 (A,102,107)	CCSSCH100D50
		C 216 (A,96,118)	CKSRYB105K10
R 810 (A,99,19)	RS1/10SR222J		
R 811 (A,114,16) (A,B)	RS1/10SR222J		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 217	(A,96,105)	CKSRYB105K10
C 232	(A,144,52)	CKSSYB103K16
C 233	(A,149,54) 10 uF	CCG1192
C 234	(A,145,63) 10 uF	CCG1192
C 237	(A,148,60)	CCSRCH182J50
C 238	(A,149,64)	CCSRCH182J50
C 239	(A,147,58)	CKSSYB102K50
C 251	(A,31,129) 4.7 uF	CCG1201
C 252	(A,35,130) 4.7 uF	CCG1201
C 253	(A,31,126) 4.7 uF	CCG1201
C 254	(A,35,127) 4.7 uF	CCG1201
C 255	(A,20,130)	CCSSCH101J50
C 256	(A,28,130)	CCSSCH101J50
C 257	(A,10,129)	CCSSCH101J50
C 258	(A,17,130)	CCSSCH101J50
C 259	(A,33,135)	CKSSYB102K50
C 301	(A,74,128)	CKSRYB474K10
C 302	(A,81,128)	CKSRYB474K10
C 303	(A,76,128)	CKSRYB474K10
C 304	(A,79,128)	CKSRYB474K10
C 305	(A,74,131)	CKSRYB474K10
C 306	(A,81,131)	CKSRYB474K10
C 307	(A,76,131)	CKSRYB474K10
C 308	(A,79,131)	CKSRYB474K10
C 309	(A,135,134)	CKSRYB104K16
C 310	(A,83,128) 2.2 uF	CCG1205
C 311	(A,82,131) 2.2 uF	CCG1205
C 312	(A,98,127)	CKSRYB104K16
C 313	(A,67,128)	CEVW100M16
C 314	(A,61,135)	CCSSCH101J50
C 315	(A,84,130)	CCSSCH101J50
C 317	(A,62,136)	CCSSCK1R0C50
C 318	(A,107,129)	CCSRCH100D50
C 319	(A,103,129)	CCSRCH100D50
C 320	(A,96,133)	CCSRCH100D50
C 321	(A,92,136)	CCSRCH100D50
C 351	(A,93,127) 10 uF	CCG1192
C 401	(A,155,106)	CCSSCH330J50
C 402	(A,158,104)	CCSSCH6R0D50
C 403	(A,161,104)	CKSSYB103K16
C 404	(A,150,100)	CKSSYB104K10
C 405	(A,147,99)	CKSSYB104K10
C 406	(A,160,101)	CKSSYB103K16
C 407	(A,148,100)	CKSSYB104K10
C 408	(A,141,107) (E,F)	CCSSCH150J50
C 409	(A,162,101)	CKSSYB103K16
C 410	(A,148,98)	CKSSYB103K16
C 411	(A,145,100)	CKSSYB103K16
C 412	(A,144,100) 10 uF	CCG1192
C 413	(A,155,101)	CKSSYB103K16
C 414	(A,152,102)	CKSRYB105K10
C 415	(A,141,99)	CKSSYB103K16
C 416	(A,159,96)	CKSRYB224K16
C 417	(A,160,95)	CKSSYB104K10
C 418	(A,139,98) 10 uF	CCG1192
C 419	(A,158,93)	CKSRYB105K10
C 420	(A,139,96)	CKSSYB104K10
C 421	(A,137,95) (A,B,C,D)	CCSSCH101J50
	(A,137,95) (E,F)	CCSSCH220J50
C 422	(A,140,92)	CKSSYB104K10

C 423	(A,136,95)	CKSSYB103K16
C 424	(A,162,91)	CKSSYB472K25
C 425	(A,162,92)	CKSSYB472K25
C 426	(A,158,90)	CKSSYB104K10
C 427	(A,138,90) (A,B,C,D)	CCSSCH820J50
	(A,138,90) (E,F)	CCSSCK2R0C50
C 428	(A,161,89)	CCSSCH9R0D50
C 429	(A,161,84)	CCSSCH9R0D50
C 430	(A,139,85) (A,B,C,D)	CKSRYB474K10
C 431	(A,158,84) (A,B,C,D)	CKSSYB104K10
C 432	(A,157,82) 2.2 uF(E,F)	CCG1205
C 433	(A,140,83) (E,F)	CKSSYB104K10
C 437	(A,156,81)	CKSSYB104K10
C 439	(A,145,79) (E,F)	CKSRYB104K16
C 440	(A,147,82)	CKSSYB104K10
C 441	(A,152,81) 2.2 uF	CCG1205
C 443	(A,145,104) (D,E,F)	CKSSYB103K16
C 444	(A,139,104) (E,F)	CCSSCH8R0D50
C 445	(A,142,101)	CKSSYB223K16
C 447	(A,142,85)	CKSSYB102K50
C 452	(A,134,90) (A,B,C)	CKSSYB105K6R3
C 455	(A,137,88) (A,B,C)	CCSSCH100D50
C 457	(A,139,89) (A,B,C)	CKSSYB105K6R3
C 458	(A,148,107) (A,B,C)	CCSSCJ3R0C50
C 503	(A,32,119)	CEVQW221M6R3
C 505	(A,11,119) Capacitor	CEVW221M16
C 506	(A,27,114)	CKSSYB153K16
C 507	(A,14,112)	CKSRYB105K16
C 508	(A,26,114)	CCSSCH220J50
C 509	(A,24,109)	CKSRYB105K16
C 510	(A,40,121)	CKSRYB105K10
C 512	(A,113,29)	CKSRYB105K10
C 514	(A,32,114) 10 uF	CCG1192
C 551	(A,116,95)	CKSSYB104K10
C 552	(A,119,90)	CKSSYB104K10
C 601	(A,121,78)	CKSSYB104K10
C 602	(A,118,78)	CKSSYB104K10
C 603	(A,114,78)	CKSSYB104K10
C 604	(A,106,73)	CKSSYB104K10
C 605	(A,131,72)	CKSSYB104K10
C 606	(A,104,72)	CKSSYB104K10
C 607	(A,132,71)	CKSSYB104K10
C 608	(A,106,67)	CKSSYB104K10
C 609	(A,132,67)	CKSSYB104K10
C 610	(A,105,66)	CKSSYB104K10
C 612	(A,136,66)	CKSSYB104K10
C 616	(A,105,62)	CKSSYB104K10
C 617	(A,133,63) (A,B,C,E,F)	CCSSCH100D50
C 618	(A,104,60)	CKSSYB104K10
C 619	(A,132,61)	CKSSYB104K10
C 620	(A,138,58)	CKSSYB104K10
C 621	(A,106,57)	CKSSYB104K10
C 622	(A,130,52)	CKSSYB104K10
C 623	(A,124,51)	CKSSYB104K10
C 624	(A,123,50)	CKSSYB104K10
C 625	(A,122,51)	CKSSYB104K10
C 626	(A,120,51)	CKSSYB104K10
C 627	(A,118,51)	CKSSYB104K10
C 628	(A,114,51)	CKSSYB104K10
C 629	(A,108,52)	CKSSYB104K10
C 630	(A,128,52)	CKSSYB104K10

1

2

3

4

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 632	(A,115,47)		CCSSCH120J50			Q 1859	(B,21,23) Transistor		LSC4081UB		
C 633	(A,113,47)		CCSSCH120J50			Q 1860	(B,60,28) Transistor		LSC4081UB		
C 638	(A,122,43)		CKSRYB105K10			Q 1861	(B,53,16) Transistor		LSC4081UB		
C 651	(A,105,53)		CKSRYB105K10			Q 1862	(B,48,27) Transistor		LSC4081UB		A
C 671	(A,131,83)		CKSSYB104K10								
C 701	(A,100,41)		CKSSYB103K16			Q 1863	(B,21,17) Transistor		LSC4081UB		
C 751	(A,147,131) 10 uF		CCG1192			Q 1864	(B,21,25) Transistor		LSC4081UB		
C 754	(A,141,135)		CKSSYB104K10			Q 1865	(B,68,27) Transistor		LSC4081UB		
C 802	(A,93,20) (A,B)		CKSRYB104K16			Q 1866	(B,57,24) Transistor		LSC4081UB		
C 803	(A,90,14) (A,B)		CKSRYB104K16			Q 1867	(B,63,23) Transistor		LSC4081UB		
C 808	(A,113,18)		CKSRYB104K16			Q 1868	(B,69,25) Transistor		LSC4081UB		
C 809	(A,125,9)		CKSRYB104K16			D 1851	(A,50,21) LED		SMLV56RGB1U1(Q)		
C 810	(A,100,15)		CCSRCH221J50			D 1852	(A,112,6) LED		SMLV56RGB1U1(Q)		
C 811	(A,98,13)		CCSRCH221J50			D 1853	(A,22,21) LED		SMLV56RGB1U1(Q)		
C 812	(A,123,12)		CKSRYB105K16			D 1854	(A,64,22) Chip LED		NSSM038A-6430		
C 817	(A,108,17)		CKSSYB104K10			X 1801	(B,83,10) Ceramic Resonator 5.00 MHz	CSS1547			B
C 818	(A,124,6)		CKSRYB104K16			S 1842	(A,36,21) Encoder(ROTARY COMMANDER)	CSD1168			
C 871	(A,160,75) (C,D,E,F)		CKSSYB104K16			CN1821	(B,108,10) Connector	CKS6287			
C 872	(A,154,69) (A,B)		CKSRYB104K16			CN1911	(A,155,22) Connector	CKS6267			
	(A,154,69) (C,D,E,F)		CKSRYB105K16			JA1921	(A,154,8) Jack	CKN1090			
C 901	(A,133,124) 3 300 uF/16 V	CCH1732				V 1801	(A,106,23) Segment LCD	CAW2017			
C 913	(A,141,40)	CKSSYB102K50				<u>RESISTORS</u>					
C 914	(A,141,42) 4.7 uF	CCG1201				R 1801	(B,88,7)		RS1/10SR222J		
C 916	(A,150,41) 4.7 uF	CCG1201				R 1802	(B,88,8)		RS1/10SR222J		
C 917	(A,138,40) 4.7 uF	CCG1201				R 1803	(B,141,29)		RS1/10SR101J		C
C 918	(A,153,42) 4.7 uF	CCG1201				R 1822	(B,63,8)		RS1/16SS273J		
C 919	(A,144,39)	CKSSYB102K50				R 1851	(B,71,20)		RS1/16SS102J		
C 920	(A,147,42) 4.7 uF	CCG1201				R 1852	(B,49,19)		RS1/16SS101J		
C 921	(A,133,39)	CKSRYB104K16				R 1853	(B,55,30)		RS1/16SS181J		
C 922	(A,157,54) (A,B,C,D)	CEAT102M16				R 1854	(B,55,31)		RS1/16SS181J		
	(A,157,54) 1 000 uF/16 V(E,F)	CCH2024				R 1855	(B,24,14)		RS1/16SS101J		
C 923	(A,154,40)	CKSSYB102K50				R 1856	(B,18,11)		RS1/16SS181J		
C 926	(A,133,41)	CKSRYB102K50									
C 931	(A,114,105)	CKSRYB104K16				R 1857	(B,18,10)		RS1/16SS181J		
C 961	(A,106,84)	CKSRYB105K16				R 1858	(B,24,19)		RS1/16SS101J		
C 962	(A,103,82) 10 uF	CCG1192				R 1859	(B,18,20)		RS1/16SS181J		
C 963	(A,99,68)	CKSRYB105K10				R 1860	(B,18,19)		RS1/16SS181J		D
C 964	(A,97,69)	CKSRYB105K10				R 1861	(B,54,27)		RS1/16SS101J		
C 966	(A,91,75)	CCSSCH221J50				R 1862	(B,63,29)		RS1/16SS181J		
C 967	(A,100,76)	CKSSYB471K50				R 1863	(B,63,27)		RS1/16SS151J		
C 968	(A,90,79)	CKSSYB471K50				R 1864	(B,57,16)		RS1/16SS102J		
C 969	(A,100,73)	CCSSCH221J50				R 1865	(B,46,13)		RS1/16SS101J		
						R 1866	(B,53,30)		RS1/16SS121J		
						R 1867	(B,53,31)		RS1/16SS221J		
						R 1868	(B,24,16)		RS1/16SS101J		
						R 1869	(B,18,15)		RS1/16SS121J		
						R 1870	(B,18,14)		RS1/16SS221J		
						R 1871	(B,24,22)		RS1/16SS101J		E
						R 1872	(B,18,23)		RS1/16SS121J		
						R 1873	(B,18,22)		RS1/16SS221J		
						R 1874	(B,62,25)		RS1/16SS101J		
						R 1875	(B,62,29)		RS1/16SS181J		
						R 1876	(B,62,27)		RS1/16SS181J		
						R 1877	(B,57,17)		RS1/16SS102J		
						R 1878	(B,45,30)		RS1/16SS101J		
						R 1879	(B,51,30)		RS1/16SS181J		
						R 1880	(B,51,31)		RS1/16SS181J		
						R 1881	(B,24,17)		RS1/16SS101J		F
						R 1882	(B,18,18)		RS1/16SS181J		
						R 1883	(B,18,16)		RS1/16SS181J		

B
Unit Number: (A,B)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,85,23) IC	PD6538A
IC 1802	(A,159,37) Remote IC	GP1UXC14RK
IC 1851	(B,62,18) DAC	BU2507FV
Q 1851	(B,51,14) Transistor	LSC4081UB
Q 1852	(B,52,25) Transistor	LSC4081UB
Q 1853	(B,21,11) Transistor	LSC4081UB
Q 1854	(B,21,20) Transistor	LSC4081UB
Q 1855	(B,57,28) Transistor	LSC4081UB
Q 1856	(B,56,14) Transistor	LSC4081UB
Q 1857	(B,51,28) Transistor	LSC4081UB
Q 1858	(B,21,14) Transistor	LSC4081UB

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 1884 (B,24,23) RS1/16SS101J
 R 1885 (B,18,26) RS1/16SS181J
 R 1886 (B,18,25) RS1/16SS181J

R 215 (B,17,28)
 R 216 (B,12,35)

RS1/16SS393J
 RS1/16SS122J

A

R 1887 (B,70,22) RS1/16SS101J
 R 1888 (B,67,29) RS1/16SS181J
 R 1889 (B,69,29) RS1/16SS181J
 R 1890 (B,57,18) RS1/16SS102J
 R 1891 (B,57,20) RS1/16SS102J

R 217 (B,10,32)
 R 218 (B,10,35)
 R 229 (B,12,34)
 R 232 (A,31,54)
 R 237 (B,33,45)

RS1/16SS562J
 RS1/16SS472J
 RS1/16SS471J
 RS1/16SS0R0J
 RS1/16SS221J

R 1892 (B,69,22) RS1/16SS102J
 R 1893 (B,65,13) RS1/10SR222J
 R 1894 (B,63,13) RS1/10SR222J
 R 1895 (B,62,13) RS1/10SR222J

R 240 (B,34,40)
 R 245 (A,34,46)
 R 254 (A,37,56)
 R 260 (B,30,27)
 R 264 (A,22,9)

RS1/16SS473J
 RS1/16SS104J
 RS1/16SS104J
 RS1/16SS103J
 RS1/16SS102J

CAPACITORS

B

C 1801 (B,144,31) 10 uF CCG1192
 C 1802 (B,89,11) CKSRYB105K10
 C 1803 (B,88,10) CKSSYB104K10
 C 1804 (B,89,13) CKSSYB104K10
 C 1805 (B,90,13) CKSSYB104K10

R 281 (B,33,38)
 R 282 (B,33,39)
 R 283 (B,35,38)
 R 291 (B,33,34)
 R 292 (B,33,36)

RS1/16SS560J
 RS1/16SS560J
 RS1/16SS0R0J
 RS1/16SS560J
 RS1/16SS0R0J

C 1851 (B,68,19) CKSRYB105K10
 C 1852 (B,49,22) CKSSYB104K16
 C 1853 (B,57,9) CKSSYB104K16
 C 1854 (B,24,27) CKSSYB104K16
 C 1855 (B,55,27) CKSSYB104K16

R 293 (B,35,39)
 R 294 (B,27,48)
 R 296 (B,34,43)
 R 301 (A,27,9)
 R 302 (A,28,9)

RS1/16SS0R0J
 RS1/16SS471J
 RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/16SS0R0J

C

C 1856 (B,104,19) CCSRCH100D50
 C 1857 (B,103,19) CCSRCH100D50
 C 1858 (B,106,19) CCSRCH100D50
 C 1859 (B,59,14) CKSSYB103K16
 C 1863 (B,59,26) CKSSYB104K16

R 303 (A,27,11)
 R 304 (A,28,11)
 R 305 (A,26,9)
 R 306 (A,26,11)
 R 307 (A,25,9)

RS1/16SS123J
 RS1/16SS123J
 RS1/16SS102J
 RS1/16SS472J
 RS1/16SS102J

D

C 1867 (B,66,24) CKSSYB104K16
 C 1911 (B,142,19) CKSRYB104K16
 C 1912 (B,134,26) CKSRYB104K16

R 308 (A,25,11)
 R 309 (A,35,6)
 R 310 (B,30,9)
 R 311 (B,30,10)
 R 312 (B,30,11)

RS1/16SS472J
 RS1/16SS473J
 RS1/16SS472J
 RS1/16SS472J
 RS1/16SS472J

R 313 (B,30,12)
 R 701 (A,21,38)
 R 702 (A,23,38)
 R 706 (A,32,42)
 R 708 (B,28,26)

RS1/16SS472J
 RS1/16SS101J
 RS1/16SS101J
 RS1/16SS221J
 RS1/16SS0R0J

R 709 (B,29,28)

RS1/16SS0R0J

C**Unit Number: CWX4023****Unit Name : CD Core Unit (S11.6STD)****MISCELLANEOUS**

IC 201 (B,23,37) IC PE5791A
 IC 301 (A,37,11) IC BD8223EFV
 Q 101 (B,11,53) Transistor 2SA1577
 Q 102 (B,15,54) Chip Digital Transistor LTA123JUB
 X 201 (B,25,49) Ceramic Resonator 16.934 MHz CSS1603

CAPACITORS

C 104 (B,12,57) CKSQYB475K6R3
 C 203 (B,22,47) CKSSYB104K10
 C 209 (B,28,47) CKSRYB104K16
 C 210 (B,33,43) CKSSYB104K10
 C 211 (B,33,41) CKSSYB104K10

E

S 901 (A,42,53) Spring Switch(HOME) CSN1080
 S 903 (B,21,12) Spring Switch(DSCSNS) CSN1081
 CN101 (A,16,58) Connector CKS4808
 CN701 (A,25,29) Connector CKS6146

C 212 (B,22,28)
 C 213 (B,18,26)
 C 214 (B,17,26)
 C 215 (B,19,28)
 C 216 (B,12,33)

CKSSYB104K10
 CKSSYB332K50
 CKSSYB473K16
 CKSSYB104K10
 CKSSYB182K50

RESISTORS

R 101 (B,6,57) RS1/10SR2R4J
 R 102 (B,8,57) RS1/10SR2R4J
 R 103 (B,9,57) RS1/10SR2R7J
 R 108 (B,18,55) RS1/16SS105J
 R 109 (B,12,50) RS1/16SS222J

C 217 (B,10,34)
 C 218 (B,10,36)
 C 219 (B,14,34)
 C 220 (A,18,38)
 C 221 (B,14,32)

CCSSCH560J50
 CCSSCH4R0C50
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

F

R 201 (A,24,11) RS1/16SS0R0J
 R 202 (A,23,9) RS1/16SS0R0J
 R 214 (B,18,28) RS1/16SS103J

C 222 (B,13,37)
 C 223 (B,12,42)
 C 224 (B,13,45)
 C 225 (B,13,46)

CKSSYB104K10
 CCSSCH680J50
 CCSSCH470J50
 CKSSYB103K16

1

2

3

4

5		6	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 228	(B,10,33)	CCSSCH270J50	
C 229	(B,9,40)	CKSSYB104K10	
C 233	(B,32,46)	CKSSYB103K16	
C 236	(B,8,40)	CKSSYB104K10	
C 238	(A,25,44)	CKSRYB104K16	
C 299	(A,26,41)	CKSSYB104K10	
C 302	(B,28,12)	CKSSYB102K50	
C 303	(B,29,12)	CKSSYB102K50	
C 304	(B,27,12)	CKSSYB223K16	
C 305	(B,26,12)	CKSSYB104K10	
C 306	(A,31,7)	CKSSYB104K10	
C 307	(A,41,19)	CKSRYB105K10	
C 308	(A,31,15)	CKSRYB105K10	
C 710	(A,34,42)	CKSSYB102K50	

D

Unit Number : (C,E,F)
: (D)

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,85,23) IC	PD6538A
IC 1802	(A,159,37) Remote IC	GP1UXC14RK
D 1851	(A,16,31) LED(C,E,F)	SMLE12BC7T(NP)
	(A,16,31) LED(Red) (D)	SML-D12V8W(PQ)
D 1852	(A,53,31) LED(C,E,F)	SMLE12BC7T(NP)
	(A,53,31) LED(Red) (D)	SML-D12V8W(PQ)
D 1853	(A,17,21) LED(C,E,F)	SMLE12BC7T(NP)
	(A,17,21) LED(Red) (D)	SML-D12V8W(PQ)
D 1854	(A,6,42) LED(C,E,F)	SMLE12BC7T(NP)
	(A,6,42) LED(Red) (D)	SML-D12V8W(PQ)
D 1855	(A,63,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,63,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1856	(A,55,21) LED(C,E,F)	SMLE12BC7T(NP)
	(A,55,21) LED(Red) (D)	SML-D12V8W(PQ)
D 1857	(A,75,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,75,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1858	(A,88,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,88,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1859	(A,53,11) LED(C,E,F)	SMLE12BC7T(NP)
	(A,53,11) LED(Red) (D)	SML-D12V8W(PQ)
D 1860	(A,16,11) LED(C,E,F)	SMLE12BC7T(NP)
	(A,16,11) LED(Red) (D)	SML-D12V8W(PQ)
D 1861	(A,7,20) LED(C,E,F)	SMLE12BC7T(NP)
	(A,7,20) LED(Red) (D)	SML-D12V8W(PQ)
D 1862	(A,101,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,101,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1863	(A,113,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,113,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1864	(A,139,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,139,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1865	(A,126,6) LED(C,E,F)	SMLE12BC7T(NP)
	(A,126,6) LED(Red) (D)	SML-D12V8W(PQ)
D 1866	(A,63,22) White LED	SMLXA4WBETW1(Z1)
X 1801	(B,84,10) Ceramic Resonator 5.00 MHz	CSS1547
S 1842	(A,36,21) Encoder(ROTARY COMMANDER)	CSD1168
CN1821	(B,108,10) Connector	CKS6287

7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
CN1911	(A,155,22) Connector	CKS6267	
JA1921	(A,154,8) Jack	CKN1090	
V 1801	(A,106,23) Segment LCD	CAW2017	

RESISTORS

R 1801	(B,90,8)	RS1/10SR222J
R 1802	(B,88,8)	RS1/10SR222J
R 1803	(B,147,29)	RS1/10SR101J
R 1822	(B,54,16)	RS1/10SR273J
R 1851	(B,20,19) (C,E,F)	RS1/4SA471J
	(B,20,19) (D)	RS1/4SA681J
R 1852	(B,19,12) (C,E,F)	RS1/4SA821J
	(B,19,12) (D)	RS1/4SA102J
R 1853	(B,49,11) (C,E,F)	RS1/4SA821J
	(B,49,11) (D)	RS1/4SA102J
R 1854	(B,59,13) (C,E,F)	RS1/4SA821J
	(B,59,13) (D)	RS1/4SA102J
R 1855	(B,42,10) (C,E,F)	RS1/4SA471J
	(B,42,10) (D)	RS1/4SA561J
R 1856	(B,14,19) (C,E,F)	RS1/4SA681J
R 1857	(B,140,17) (C,E,F)	RS1/4SA821J
	(B,140,17) (D)	RS1/4SA102J
R 1858	(B,144,19) (C,E,F)	RS1/4SA821J
	(B,144,19) (D)	RS1/4SA102J
R 1859	(B,56,17)	RS1/4SA221J
R 1860	(B,59,17)	RS1/4SA221J
R 1869	(B,12,19) (D)	RS1/10SR0R0J
R 1870	(B,11,19) (C,E,F)	RS1/10SR0R0J

CAPACITORS

C 1801	(B,148,33) 10 uF	CCG1192
C 1802	(B,89,11)	CKSRYB105K10
C 1803	(B,89,12)	CKSSYB104K10
C 1804	(B,95,17)	CKSSYB104K10
C 1805	(B,94,17)	CKSSYB104K10
C 1911	(B,133,28)	CKSRYB104K16
C 1912	(B,138,27)	CKSRYB104K16

E

Unit Number : QWM3365
Unit Name : BT Unit

MISCELLANEOUS

IC 21	(A,14,48) IC	NJM2846DL3-18
IC 22	(A,29,47) IC	S-1206B33-U3
CN21	(A,36,27) Connector	CKS6346
CN22	(A,42,45) Connector	VKN1189

RESISTORS

R 28	(A,4,32)	RS1/10SR102J
R 29	(A,5,26)	RS1/10SR102J
R 30	(A,5,24)	RS1/10SR102J

CAPACITORS

C 21	(A,26,41)	CEVQW221M6R3
C 22	(A,7,47)	CEVW220M6R3
C 23	(A,8,39)	CEVW470M6R3
C 24	(A,9,53)	CKSRYB105K10

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>		
	C 26 (A,33,38) 10 uF	CCG1192		
	C 28 (A,23,49)	CEVW470M6R3		
A	C 29 (A,28,51)	CKSRYB105K10		
	C 31 (A,35,46)	CKSRYB103K50		
	C 33 (A,22,54) 10 uF	CCG1192		
	C 34 (A,42,27)	CKSRYB105K10		
	C 36 (A,35,49)	CKSRYB104K16		

■

Miscellaneous Parts List

		Pickup Unit(P10.6)(Service)	CXX3556
M 1		Motor Unit(SPINDLE)	CXE2273
B	M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026

■

C

■

D

■

E

■

F