

SECTION 1 PRECAUTION

Please refer to "KW-XC400 (No.MA235)" about this section.

SECTION 2 SPECIFIC SERVICE INSTRUCTIONS

KW-XC410J

Parts list(General assembly) [P3-4 Block NO.M1MM]

⚠	Item	Parts name	Parts number		Q'ty
			KW-XC400J	KW-XC410J	
	29	FRONT PANEL	GE10129-008A	GE10129-009A	1
	30	FINDER ASSY	GE31801-006A	GE31801-011A	1
	31	PRESET BUTTON	GE31768-001A	GE31768-002A	1
	32	D FUNCTION BTN	GE31769-001A	GE31769-002A	1
	33	BLOCK BUTTON	GE31778-001A	GE31778-002A	1
	34	BUTTON(CDEJ)	GE31779-001A	GE31779-002A	1
	35	CASS EJECT BTN	GE31780-001A	GE31780-002A	1
	36	BUTTON(GROUP)	GE31781-001A	GE31781-002A	1
	37	SEEK BUTTON	GE31782-001A	GE31782-002A	1
	38	DISP BUTTON	GE31783-001A	GE31783-002A	1
	39	VOLUME KNOB	GE31763-001A	GE31763-002A	1
	46	REMOTE SHEET	GE40291-001A	-----	0
	48	DISC GUIDE	LV34662-001A	LV34662-002A	1
	59	NAME PLATE	GE32001-002A	GE31960-001A	1
	61	FFC WIRE	QUQ105-2207AE-E	QUQL05-2207AE-E	1

Parts list(CD mechanism control board) [P3-9 Block NO.04]

⚠	Item	Parts name	Parts number		Q'ty
			KW-XC400J	KW-XC410J	
	IC501	IC	TMP91CW12AF5VD9	TMP91CW12AF6H27	1

Parts list(Packing accessories) [P3-21 Block NO.M3MM]

⚠	Item	Parts name	Parts number		Q'ty
			KW-XC400J	KW-XC410J	
	A2	INST.MANUAL	GET0320-002B	GET0320-002C	1
	P1	CARTON	GE32002-002A	GE31961-001A	1