

● CD Player Service Precautions

1. For pickup unit(CXX1285) handling, please refer to "Disassembly"(see page 48).

During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a short pin).

2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.

3. Please checking the grating after changing the service pickup unit(see page 43).

1. SAFETY INFORMATION

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.


WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

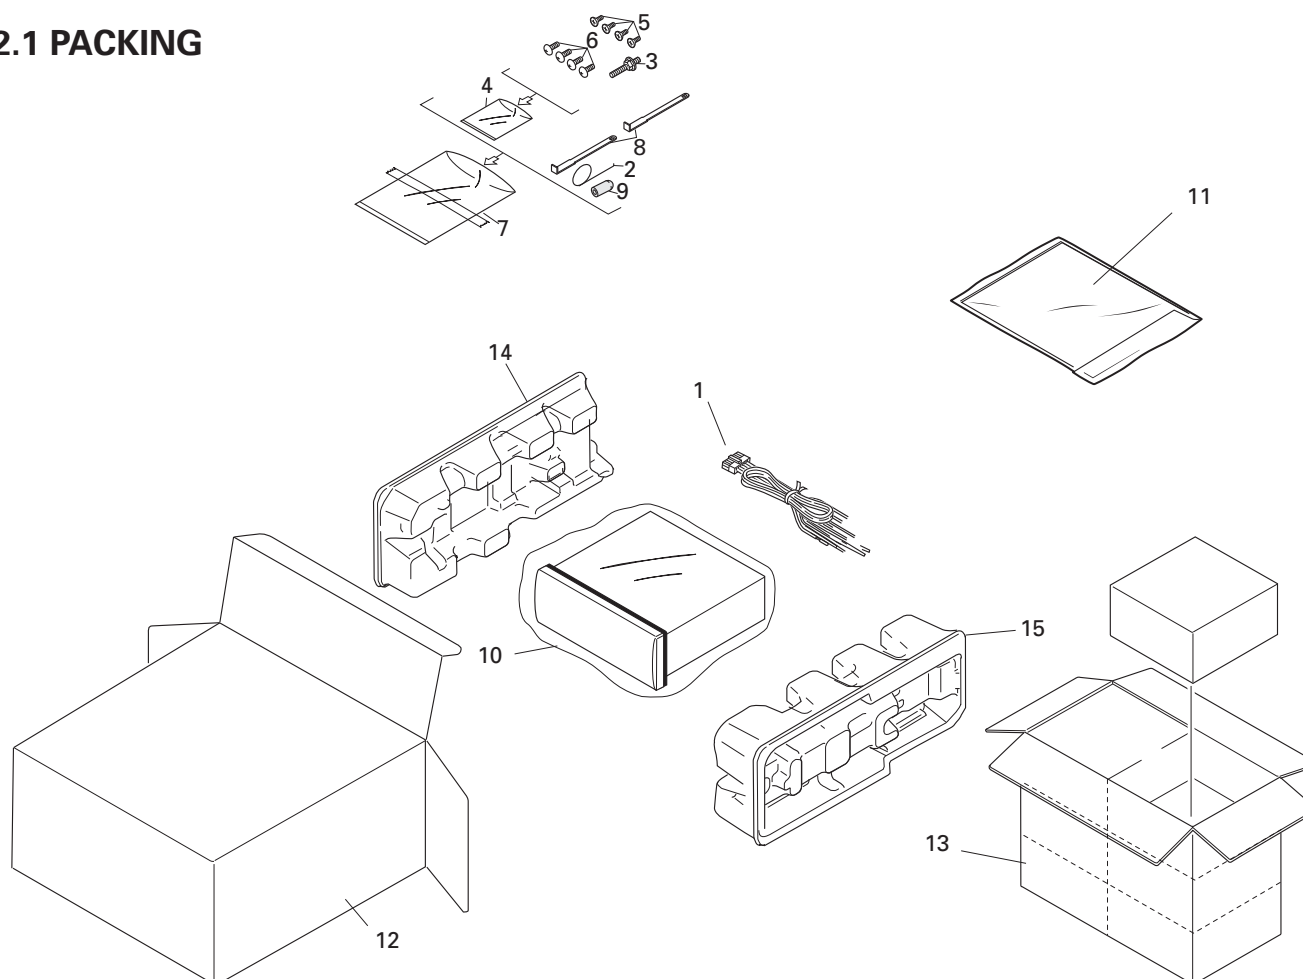

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 Cord Assy	CDE6124	11-1	Polyethylene Bag	CEG1116
	2 Spring	CBH1650	11-2	Owner's Manual	CRD3133
	3 Screw	CBA1002	11-3	Installation Manual	CRD3134
*	4 Polyethylene Bag	CEG-127	* 11-4	Card	ARY1048
	5 Screw	CRZ50P090FMC	12	Carton	See Contrast table(2)
	6 Screw	TRZ50P080FMC	13	Contain Box	See Contrast table(2)
*	7 Polyethylene Bag	CEG-158	14	Protector	CHP2243
	8 Handle	CNC5395	15	Protector	CHP2244
	9 Bush	CNV3930			
	10 Polyethylene Bag	CEG1173			

(2) CONTRAST TABLE


DEH-1100/X1M/UC and DEH-11/X1M/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-1100/X1M/UC	DEH-11/X1M/UC
12	Carton	CHG3953	CHG3954
13	Contain Box	CHL3953	CHL3954

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-1100/X1M/UC	CRD3133	English, French, Spanish
DEH-11/X1M/UC	CRD3134	

2.2 EXTERIOR

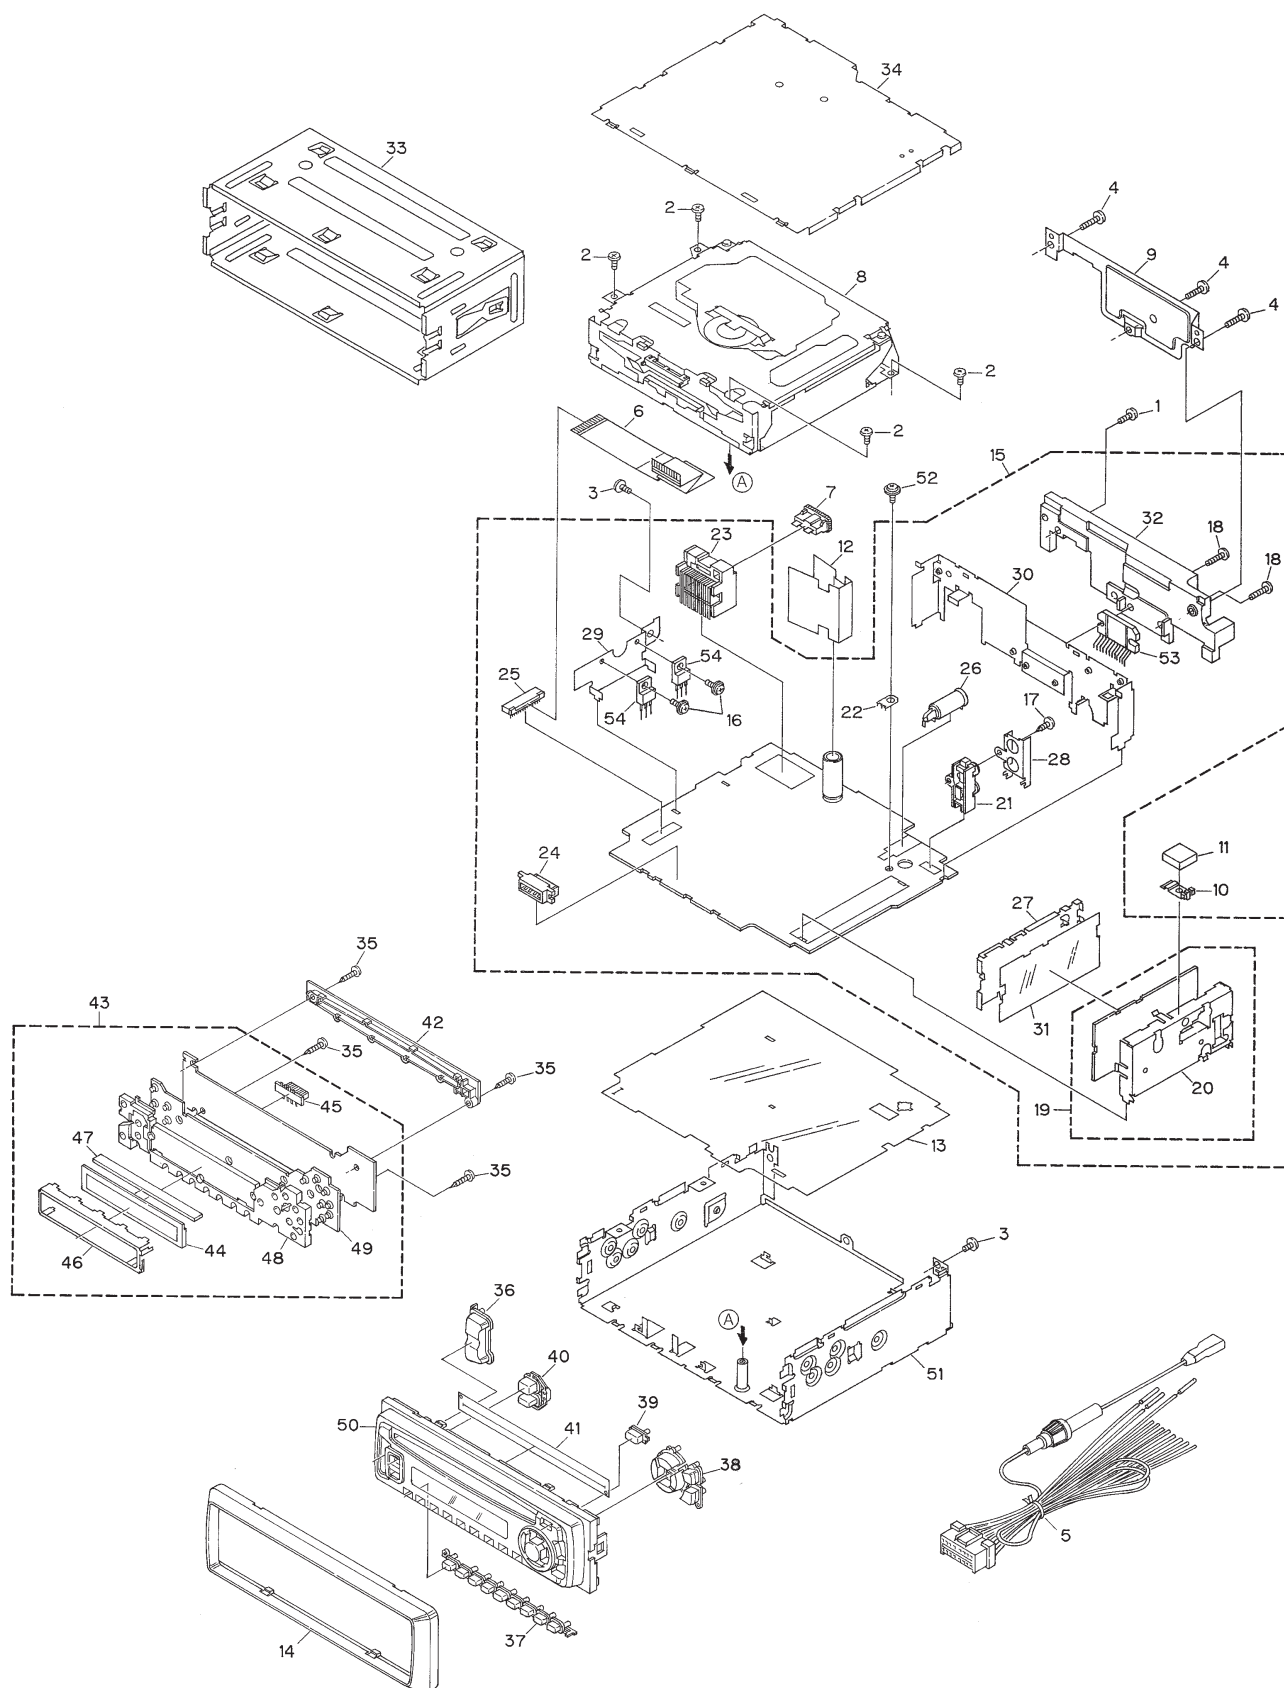

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ26P120FMC	31	Insulator	CNM5967
2	Screw	BSZ26P060FMC	32	Heat Sink	CNR1506
3	Screw	BSZ30P060FMC	33	Holder Unit	CXB2687
4	Screw	BSZ30P120FMC	34	Case Unit	CXB4033
5	Cord Assy	CDE6124	35	Screw	BPZ20P080FMC
6	Cable	CDE6160	36	Button(+, -)	CAC6273
7	Fuse(10A)	CEK1136	37	Button(1-6)	CAC6275
8	CD Mechanism Module(S8.1)	CXK5203	38	Button(B, A, Cross)	CAC6276
9	Cover	CNC8367	39	Button(Eject)	CAC6277
10	Holder	CNC8884	40	Button(Source)	CAC6495
11	Spacer	CNM4913	41	Cover	CNM6434
12	Insulator	CNM6224	42	Holder	CNV5963
13	Insulator	CNM6386	43	Keyboard Unit	See Contrast table(2)
14	Panel	CNS5132	44	LCD(LCD1801)	CAW1560
15	Tuner Amp Assy	CWM6769	45	Connector(CN1801)	CKS3580
16	Screw	ASZ26P080FMC	46	Holder	CNC8517
17	Screw	BPZ26P080FMC	47	Rubber	CNV5954
18	Screw	BSZ26P160FMC	48	Lighting Conductor	CNV5965
19	FM/AM Tuner Unit	CWE1501	49	Rubber	CNV5966
20	Holder	CNC7532	50	Grille Unit	See Contrast table(2)
21	Pin Jack(CN301)	CKB1041	51	Chassis Unit	CXB4625
22	Terminal(CN403)	CKF1059	52	Screw	ISS26P055FUC
23	Connector(CN901)	CKM1299	53	IC(IC302)	TDA7384
24	Connector(CN601)	CKS3581	54	Transistor(Q904, 981)	2SD2396
25	Connector(CN605)	CKS3838			
26	Antenna Jack(CN402)	CKX1056			
27	Holder	CNC7533			
28	Holder	CNC8041			
29	Holder	CNC8043			
30	Holder	CNC8588			

(2) CONTRAST TABLE

DEH-1100/X1M/UC and DEH-11/X1M/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-1100/X1M/UC	DEH-11/X1M/UC
43	Keyboard Unit	CWM6783	CWM6782
50	Grille Unit	CXB4619	CXB4620

2.3 CD MECHANISM MODULE

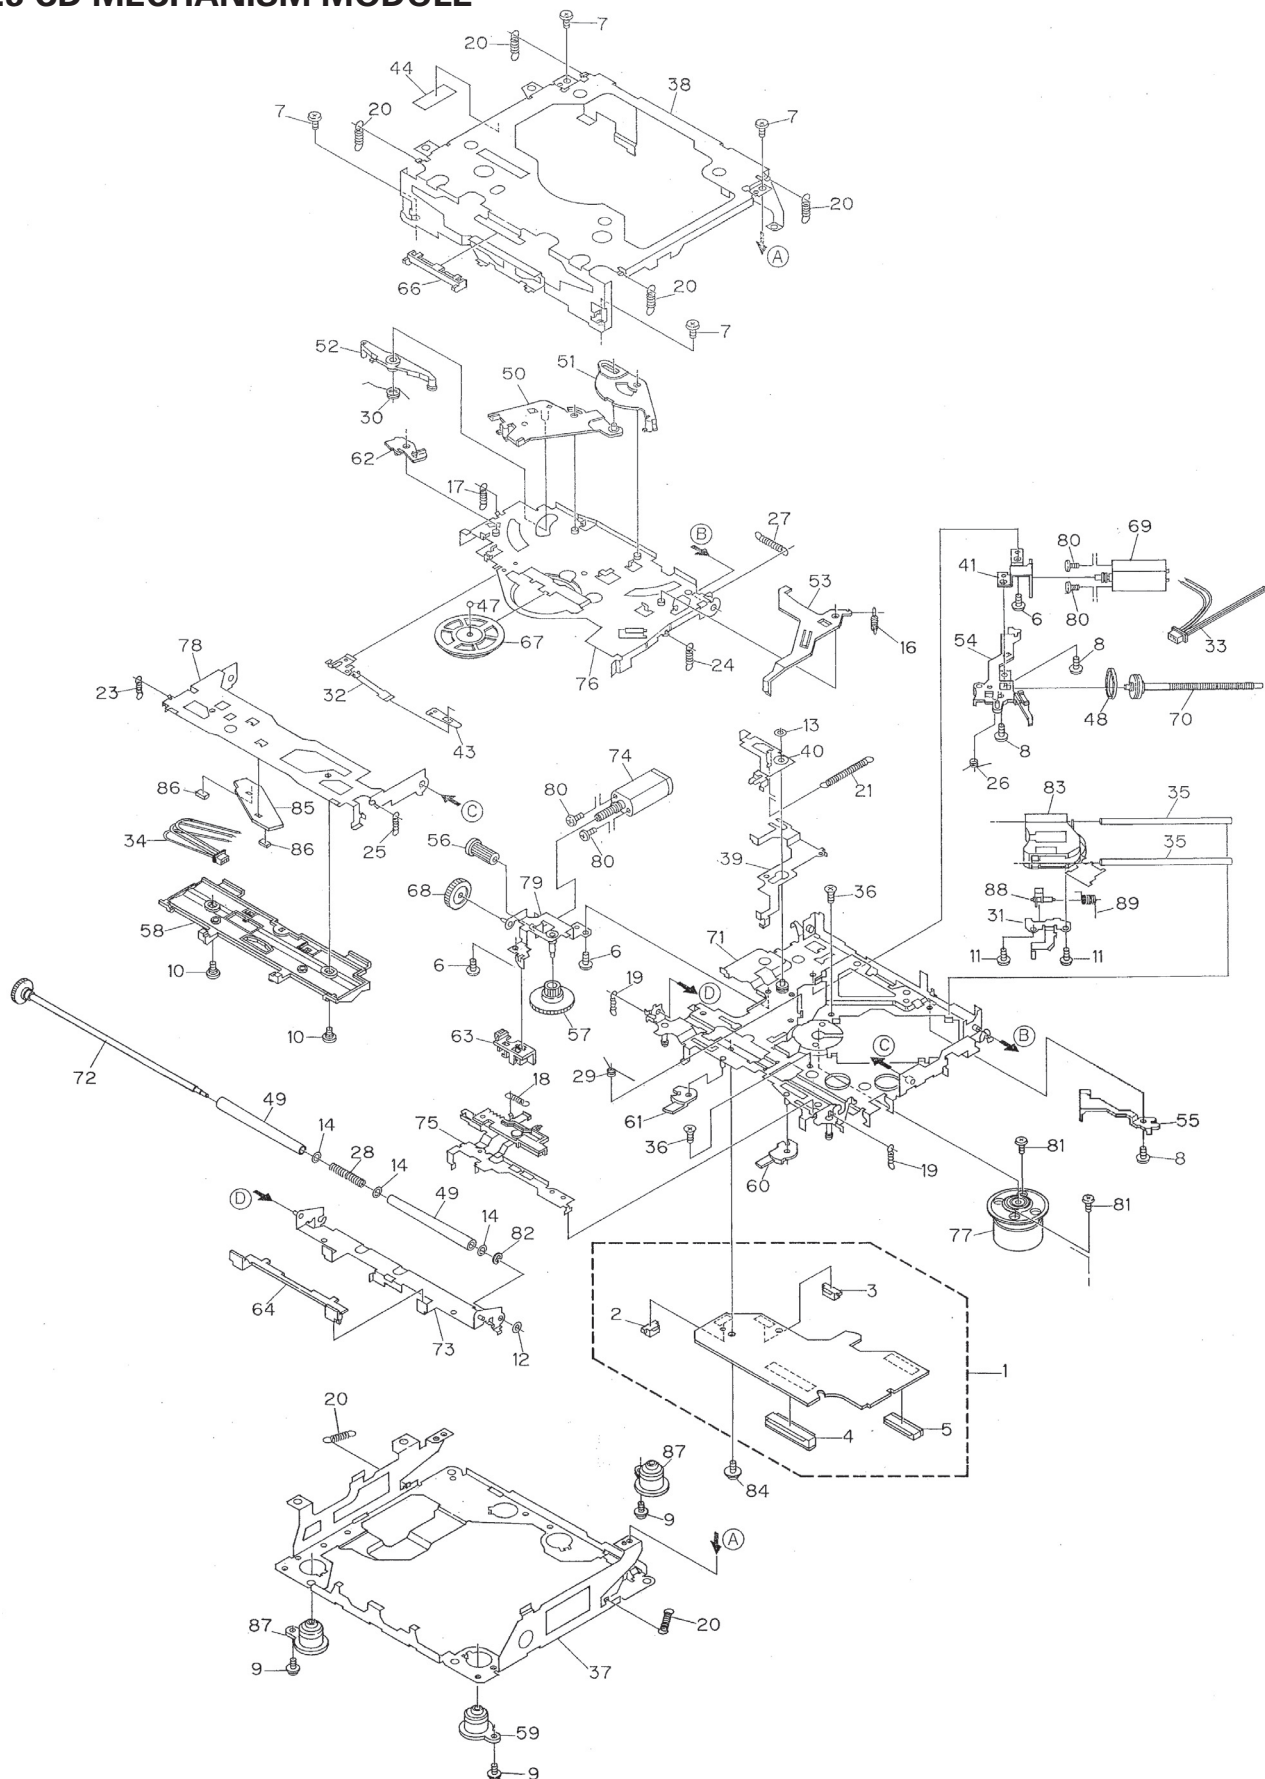

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Control Unit	CWX2411	46	*****	
2	Connector(CN802)	CKS2192	47	Ball	CNR1189
3	Connector(CN801)	CKS2193	48	Belt	CNT1086
4	Connector(CN701)	CKS2773	49	Roller	CNV4509
5	Connector(CN101)	CKS3486	50	Arm	CNV6037
6	Screw	BMZ20P030FMC	51	Arm	CNV5247
7	Screw	BSZ20P040FMC	52	Arm	CNV5248
8	Screw(M2x3)	CBA1077	53	Arm	CNV5249
9	Screw(M2x5)	EBA1028	54	Guide	CNV5254
10	Screw	CBA1243	55	Guide	CNV5255
11	Screw(M2x4)	CBA1362	56	Gear	CNV5257
12	Washer	CBF1037	57	Gear	CNV5256
13	Washer	CBF1038	58	Guide	CNV6176
14	Washer	CBF1060	59	Damper	CNV6174
15	*****		60	Arm	CNV6096
16	Spring	CBH2079	61	Arm	CNV6031
17	Spring	CBH2117	62	Arm	CNV6211
18	Spring	CBH2314	63	Guide	CNV6012
19	Spring	CBH2110	64	Guide	CNV5510
20	Spring	CBH2282	65	*****	
21	Spring	CBH2318	66	Guide	CNV5751
22	*****		67	Clamper	CNV6013
23	Spring	CBH2324	68	Gear	CNV5813
24	Spring	CBH2118	69	Motor Unit(M1)	CXB2190
25	Spring	CBH2161	70	Screw Unit	CXB4726
26	Spring	CBH2163	71	Chassis Unit	CXB4797
27	Spring	CBH2189	72	Gear Unit	CXB4728
28	Spring	CBH2249	73	Arm Unit	CXB4729
29	Spring	CBH2260	74	Motor Unit(M2)	CXB2195
30	Spring	CBH2262	75	Lever Unit	CXB4730
31	Bracket	CNC8568	76	Arm Unit	CXB4731
32	Spring	CBL1369	77	Motor Unit(M3)	CXB2562
33	Connector	CDE5531	78	Arm Unit	CXB4732
34	Connector	CDE5532	79	Bracket Unit	CXB4795
35	Shaft	CLA3304	80	Screw	JFZ20P025FMC
36	Screw(M2.6x6)	CBA1458	81	Screw	JGZ17P025FZK
37	Frame	CNC8565	82	Washer	YE20FUC
38	Frame	CNC8749	83	Pickup Unit(Service)(P8)	CXX1285
39	Lever	CNC7546	84	Screw	IMS26P030FMC
40	Arm	CNC8663	* 85	PCB	CNX2982
41	Bracket	CNC8567	86	Photo-transistor(Q1, 2)	CPT230SX-TU
42	*****		87	Damper	CNV6175
43	Spacer	CNM3315	88	Rack	CNV6014
44	Sheet	CNM6659	89	Spring	CBH2315
45	*****				

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A Unit Number : CWM6769		R 315	RS1/10S151J
Unit Name : Tuner Amp Assy		R 316	RS1/10S0R0J
MISCELLANEOUS		R 317	RS1/10S121J
IC 301 IC	SN761029DL	R 318	RD1/4PU104J
IC 302 IC	TDA7384	R 319	RD1/4PU104J
IC 601 IC	PE5091A	R 320	RS1/10S121J
IC 602 IC	S-80834ANY	R 321	RS1/10S101J
Q 346 Transistor	RN1610	R 322	RS1/10S101J
		R 342	RS1/8S821J
		R 343	RS1/8S821J
Q 351 Transistor	DTC114EK	R 344	RS1/10S223J
Q 353 Transistor	DTA124EK	R 345	RS1/10S223J
Q 411 Transistor	2SC2412K	R 352	RS1/10S103J
Q 650 Transistor	2SA1037K	R 353	RS1/10S103J
Q 901 Transistor	2SC2412K	R 354	RS1/10S331J
Q 902 Transistor	2SC2412K	R 360	RD1/4PU153J
Q 903 Transistor	2SD1859	R 411	RS1/10S681J
Q 904 Transistor	2SD2396	R 412	RS1/10S681J
Q 905 Transistor	2SB1243	R 413	RS1/10S681J
Q 906 Transistor	DTC114EK	R 414	RS1/10S103J
Q 941 Transistor	2SB1243	R 415	RS1/8S681J
Q 942 Transistor	DTC114EK	R 416	RD1/4PU473J
Q 981 Transistor	2SD2396	R 417	RD1/4PU472J
Q 982 Transistor	RN46A1	R 418	RS1/10S473J
D 901 Diode	HZS7L(C2)	R 419	RS1/10S473J
D 902 Diode	S5688G	R 420	RS1/10S473J
D 903 Diode	S5688G	R 421	RS1/10S473J
D 904 Diode	HZS7L(A1)	R 422	RS1/10S473J
D 905 Diode	S5688G	R 423	RS1/10S681J
D 906 Diode	HZS6L(B2)	R 424	RS1/10S681J
D 907 Diode	HZS9L(B3)	R 425	RS1/10S393J
D 941 Diode	S5688G	R 427	RS1/10S222J
D 942 Diode	S5688G	R 428	RS1/10S222J
D 981 Diode	HZS9L(B1)	R 460	RS1/10S272J
L 401 Ferri-Inductor	LAU4R7K	R 461	RS1/10S272J
L 402 Ferri-Inductor	LAU2R2K	R 464	RS1/10S162J
L 403 Inductor	LAU100K	R 465	RS1/10S162J
L 610 Ferri-Inductor	LAU101K	R 468	RS1/10S0R0J
L 611 Ferri-Inductor	LAU2R2K	R 469	RS1/10S0R0J
L 650 Ferri-Inductor	LAU2R2K	R 610	RD1/4PU822J
L 901 Choke Coil 600μH	CTH1221	R 611	RS1/10S433J
TH 601 Thermistor	CCX1031	R 614	RS1/8S0R0J
X 610 Crystal Resonator 4.194304MHz	CSS1023	R 619	RS1/10S682J
AR 946 Arrester	DSP-201M-S00B	R 620	RN1/10SE2202D
FM/AM Tuner Unit	CWE1501	R 622	RD1/4PU222J
RESISTORS		R 623	RD1/4PU222J
R 310	RD1/4PU222J	R 624	RS1/10S473J
R 311	RD1/4PU222J	R 625	RS1/10S473J
R 312	RS1/10S272J	R 626	RS1/10S473J
R 313	RS1/10S272J	R 627	RD1/4PU473J
R 314	RS1/10S151J	R 628	RD1/4PU222J
		R 629	RS1/10S473J
		R 630	RS1/10S822J
		R 649	RS1/8S222J
		R 650	RS1/8S222J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 651	RS1/8S222J	C 363	CEJA100M16
R 655	RS1/10S103J	C 364	CKSYB474K16
R 656	RS1/10S103J	C 365	CKSQYB474K16
R 657	RD1/4PU102J	C 366	CKSYB474K16
R 658	RD1/4PU102J	C 367	CKSQYB474K16
R 660	RS1/10S1R0J	C 368	CKSQYB474K16
R 681	RD1/4PU681J	C 369	CKSYB474K16
R 682	RS1/10S102J	C 370	CKSQYB474K16
R 683	RD1/4PU102J	C 371	CKSYB474K16
R 684	RS1/10S102J	C 372	CKSQYB225K10
R 699	RS1/10S0R0J	C 390	CKSQYB104K16
R 725	RS1/10S0R0J	C 391	CCH1368
R 901	RS1/10S473J	C 411	CKSQYB223K25
R 902	RD1/4PU103J	C 412	CKSQYB223K25
R 903	RD1/4PU103J	C 413	CKSQYB102K50
R 904	RS1/10S473J	C 414	CEJA220M10
R 905	RS1/10S102J	C 415	CKSQYB473K16
R 906	RS1/10S473J	C 416	CEAL101M10
R 907	RS1/10S473J	C 417	CKSQYB472K50
R 908	RS1/10S472J	C 462	CKSQYB183K25
R 909	RD1/4PU103J	C 463	CKSQYB183K25
R 911	RS1/10S122J	C 490	CKSQYB103K50
R 912	RD1/4PU103J	C 499	CKSQYB103K50
R 914	RD1/4PU152J	C 611	CKSQYB104K16
R 916	RS1/10S221J	C 612	CEJA4R7M35
R 918	RS1/10S1R0J	C 613	CKSQYB473K16
R 941	RD1/4PU472J	C 614	CKSQYB102K50
R 942	RD1/4PU152J	C 628	CCSQCH150J50
R 981	RS1/10S472J	C 629	CCSQCH150J50
R 982	RS1/10S222J	C 630	CKSQYB473K16
R 983	RD1/4PU221J	C 631	CEAL2R2M50
R 984	RD1/4PU221J	C 650	CKSQYB104K16
		C 901	CEJA101M10
		C 902	CKSQYB473K16
		C 903	CCH1331
		C 904	CKSQYB473K16
		C 905	CCH1326
		C 906	CKSQYB103K50
		C 907	CEJA101M16
		C 941	CKSQYB473K16
		C 981	CEJA101M10
		C 982	CKSQYB102K50
		C 983	CKSQYB473K16
CAPACITORS		B Unit Number : CWE1501 Unit Name : FM/AM Tuner Unit	
C 310	CKSQYB105K16	MISCELLANEOUS	
C 311	CKSQYB104K16	IC 1	IC
C 312	CEJA2R2M50	IC 2	IC
C 313	CKSQYB105K16	IC 3	IC
C 314	CKSYB104K16	Q 1	Transistor
C 315	CKSQYB102K50	Q 2	Transistor
C 316	CKSQYB102K50	Q 3	FET
C 317	CEJA100M16	Q 51	Transistor
C 318	CEJA100M16	Q 201	FET
C 319	CKSQYB822K50	Q 202	Transistor
C 320	CKSQYB822K50	Q 204	Transistor
C 321	CEAL1R0M50	D 1	Diode
C 322	CEJA1R0M50	D 2	Diode
C 323	CKSQYB183K50	D 6	Diode
C 324	CKSQYB183K50	D 201	Diode
C 325	CKSQYB104K16	D 202	Diode
C 326	CKSQYB104K16	D 903	Diode
C 327	CKSQYB104K16	D 904	Diode
C 328	CKSQYB104K16	L 1	Coil
C 329	CEJA2R2M50	L 3	Inductor
C 330	CEJA4R7M50	L 4	Coil
C 332	CKSQYB473K16		
C 333	CKSQYB104K16		
C 334	CKSQYB104K16		
C 335	CEAL470M10		
C 340	CEAL2R2M50		
C 341	CEJA2R2M50		
C 350	CEJA330M10		
C 361	CEJA2R2M50		
C 362	CKSYB225K16		



Unit Number : CWE1501

Unit Name : FM/AM Tuner Unit

MISCELLANEOUS

IC 1	IC	PML002A
IC 2	IC	PM4008A
IC 3	IC	BR9010FV
Q 1	Transistor	2SC4081
Q 2	Transistor	DTC124EU
Q 3	FET	3SK263
Q 51	Transistor	2SC4081
Q 201	FET	2SK932
Q 202	Transistor	DTC124EU
Q 204	Transistor	2SC4081
D 1	Diode	KV1410(23)
D 2	Diode	1SV248
D 6	Diode	KV1410(23)
D 201	Diode	DAN217U
D 202	Diode	DAN217U
D 903	Diode	KV1410(23)
D 904	Diode	SVC253
L 1	Coil	CTC1155
L 3	Inductor	LCTB1R5K2125
L 4	Coil	CTC1155

====Circuit Symbol and No.===Part Name			Part No.	====Circuit Symbol and No.===Part Name			Part No.
L	201	Inductor	LCTB330K1608	R	904		RS1/16S473J
L	202	Inductor	CTF1287	R	907		RS1/16S103J
L	203	Inductor	LCTA121J3225	R	908		RS1/16S681J
L	901	Coil	CTC1154	R	909		RS1/16S473J
L	902	Inductor	LCTA3R3J3225	R	914		RS1/16S562J
L	904	Inductor	LCTBR47K1608	CAPACITORS			
L	905	Inductor	LCTBR47K1608	C	1		CCSQCH4R0C50
T	51	Coil	CTE1132	C	6		CKSQYB105K10
CF	51	Ceramic Filter	CTF1442	C	8		CKSRYB222K50
CF	52	Ceramic Filter	CTF1442	C	10		CCSRCH220J50
CF	53	Ceramic Filter	CTF1442	C	11		CCSRCH150J50
CF	202	Ceramic Filter	CTF1348	C	12		CCSRCH8R0D50
X	901	Crystal Resonator 10.250MHz	CSS1432	C	14		CCSRCJ3R0C50
RESISTORS				C	15		CKSRYB103K50
R	1		RS1/16S183J	C	16		CKSRYB222K50
R	2		RS1/16S103J	C	17		CKSRYB222K50
R	5		RS1/16S0R0J	C	18		CCSRCJ3R0C50
R	7		RS1/16S273J	C	19		CKSRYB103K50
R	8		RS1/16S473J	C	20		CKSRYB103K50
R	9		RS1/16S223J	C	21		CKSRYB103K50
R	10		RS1/16S473J	C	24		CKSQYB334K16
R	11		RS1/16S221J	C	26		CKSRYB472K50
R	12		RS1/16S103J	C	30		CCSRCH220J50
R	13		RS1/16S104J	C	32		CCSRCH470J50
R	16		RS1/16S223J	C	35		CKSRYB103K50
R	17		RS1/16S221J	C	51		CKSRYB103K50
R	18		RS1/16S221J	C	52		CKSRYB473K16
R	19		RS1/16S473J	C	53		CCSRCK2R0C50
R	20		RS1/16S470J	C	54		CKSRYB103K50
R	31		RS1/16S0R0J	C	55		CKSRYB104K16
R	51		RS1/16S470J	C	56		CKSRYB104K16
R	52		RS1/16S103J	C	58		CKSQYB224K16
R	53		RS1/16S103J	C	101		CEALNP100M10
R	54		RS1/16S331J	C	102		CCSRCH151J50
R	55		RS1/16S331J	C	103		CKSRYB473K16
R	56		RS1/16S560J	C	105		CKSRYB682K25
R	57		RS1/16S560J	C	106		CEALR68M50
R	58		RS1/16S102J	C	107		CKSRYB103K50
R	59		RS1/16S225J	C	108		CKSQYB474K16
R	60		RS1/16S133J	C	109		CKSQYB474K16
R	61		RS1/16S433J	C	110		CKSRYB104K16
R	101		RS1/16S333J	C	111		CKSRYB104K16
R	102		RS1/16S103J	C	112		CKSRYB104K16
R	103		RS1/16S333J	C	113		CKSRYB123K25
R	104		RS1/16S562J	C	114		CEAL220M6R3
R	106		RS1/16S0R0J	C	115		CKSRYB473K16
R	108		RS1/16S0R0J	C	116		CEAL2R2M50
R	110		RS1/16S154J	C	117		CKSRYB102K50
R	111		RS1/16S273J	C	120		CKSRYB183K25
R	113		RS1/16S222J	C	121		CKSRYB332K50
R	114		RS1/16S333J	C	122		CKSRYB562K25
R	115		RS1/16S334J	C	123		CKSRYB681K50
R	116		RS1/16S473J	C	125		CKSRYB103K50
R	202		RS1/16S472J	C	126		CKSRYB103K50
R	203		RS1/16S225J	C	127		CEAL2R2M50
R	204		RS1/16S102J	C	128		CKSRYB103K50
R	205		RS1/16S220J	C	201		CCSRCH471J50
R	206		RS1/16S471J	C	202		CCSRCH100D50
R	208		RS1/16S104J	C	203		CKSRYB104K16
R	209		RS1/16S104J	C	204		CKSRYB332K50
R	210		RS1/16S563J	C	205		CKSRYB103K50
R	213		RS1/16S223J	C	206		CKSRYB104K16
R	251		RS1/16S225J	C	207		CKSRYB473K16
R	902		RS1/16S103J	C	208		CCSRCH560J50
				C	209		CEAL470M6R3
				C	210		CKSRYB103K50

====Circuit Symbol and No.==Part Name

Part No.

C	211	CKSRYB103K50
C	212	CCSRCH101J50
C	215	CKSRYB223K25
C	216	CKSQYB334K16
C	217	CKSRYB103K50
C	219	CKSQYB105K10
C	220	CKSRYB104K16
C	221	CKSRYB473K16
C	222	CKSQYB334K16
C	223	CKSQYB474K16
C	224	CKSRYB104K16
C	225	CKSRYB272K50
C	226	CKSRYB682K25
C	902	CCSRCH270J50
C	904	CKSRYB223K25
C	905	CKSRYB103K50
C	906	CCSRTH100D50
C	907	CCSRTH150J50
C	909	CCSRTH100D50
C	910	CKSRYB332K50
C	912	CKSQYB474K16
C	913	CKSRYB223K25
C	914	CKSRYB682K25
C	915	CKSQYB223K25
C	916	CKSQYB474K16
C	917	CKSYB475K10
C	918	CKSRYB223K25
C	919	CKSQYB225K10
C	920	CCSRCH270J50
C	921	CCSRCH270J50
C	922	CKSYB105K16
C	923	CKSRYB103K50



Unit Number : CWM6783(DEH-1100)

: CWM6782(DEH-11)

Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1801	IC	PD6293A
X	1801	Ceramic Resonator 4.97MHz	CSS1422
IL	1801	Lamp 14V 40mA(DEH-1100)	CEL1547
IL	1801	Lamp 14V 40mA(DEH-11)	CEL1638
IL	1802	Lamp 14V 40mA(DEH-1100)	CEL1547
IL	1802	Lamp 14V 40mA(DEH-11)	CEL1638
IL	1803	Lamp 14V 40mA(DEH-1100)	CEL1547
IL	1803	Lamp 14V 40mA(DEH-11)	CEL1638
IL	1804	Lamp 14V 40mA(DEH-1100)	CEL1547
IL	1804	Lamp 14V 40mA(DEH-11)	CEL1638
LCD	1801	LCD	CAW1560

RESISTORS

R	1801	RS1/8S222J
R	1802	RS1/8S222J
R	1803	RS1/10S471J
R	1804	RS1/10S471J
R	1805	RS1/10S471J
R	1806	RS1/10S471J

CAPACITORS

C	1801	CKSQYB103K25
---	------	--------------

====Circuit Symbol and No.==Part Name

Part No.



Unit Number : CWX2411

Unit Name : Control Unit

MISCELLANEOUS

IC	201	IC	UPD63711GC
IC	301	IC	BA5985FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SB1132
D	801	LED	CL200IRX
D	802	LED	CL200IRX
X	201	Ceramic Oscillator 16.934MHz	CSS1456
S	801	Spring Switch(HOME)	CSN1051
S	802	Spring Switch(CLAMP)	CSN1052

RESISTORS

R	101	RS1/8S120J
R	102	RS1/8S100J
R	103	RS1/16S222J
R	201	RS1/16S104J
R	202	RS1/16S103J
R	203	RS1/16S393J
R	204	RS1/16S103J
R	205	RS1/16S103J
R	206	RS1/16S182J
R	207	RS1/16S123J
R	302	RS1/16S153J
R	303	RS1/16S103J
R	501	RS1/16S102J
R	502	RA4C681J
R	601	RS1/16S102J
R	602	RS1/16S102J
R	605	RS1/16S0R0J
R	606	RS1/16S0R0J
R	801	RS1/8S751J
R	803	RS1/8S751J
R	902	RS1/16S0R0J
R	906	RS1/16S0R0J

CAPACITORS

C	101	CCSRCH102J25
C	102	CKSRYB104K16
C	103	CEV101M6R3
C	104	CEV470M6R3
C	105	CKSQYB334K16
C	106	CKSQYB334K16
C	107	CKSQYB334K16
C	201	CKSRYB104K16
C	202	CKSRYB471K50
C	203	CKSRYB104K16
C	205	CEV101M6R3
C	206	CKSRYB104K16
C	207	CKSRYB104K16
C	208	CKSRYB104K16
C	209	CKSRYB104K16
C	210	CKSRYB332K50
C	211	CKSRYB104K16
C	212	CKSRYB104K16
C	213	CKSRYB392K50
C	214	CKSRYB104K16
C	215	CKSRYB104K16
C	216	CCSRCH270J50
C	217	CCSRCH270J50
C	218	CKSRYB104K16
C	219	CCSRCH181J50

====Circuit Symbol and No.====		Part Name	Part No.
C	220		CCSRCH510J50
C	221		CKSRYB682K25
C	222		CEV220M6R3
C	223		CKSRYB103K25
C	224		CKSRYB224K10
C	301		CEV101M10
C	603		CCSQSL152J50
C	604		CCSQSL152J50
C	702	10μF/10V	CCH1349
C	703		CKSQYB334K16

E Unit Number :
Unit Name : Photo Unit(S8)

Q	1	Photo-transistor	CPT230SX-TU
Q	2	Photo-transistor	CPT230SX-TU

Miscellaneous Parts List

M	1	Pickup Unit(Service)(P8)	CXX1285
M	1	Motor Unit(CARRIAGE)	CXB2190
M	2	Motor Unit(LOADING)	CXB2195
M	3	Motor Unit(SPINDLE)	CXB2562
		Fuse(10A)	CEK1136