


9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 • The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
 Therefore, when replacing, be sure to use parts of identical designation.
 • Screw adjacent to ▽ mark on the product are used for disassembly.
 • For the applying amount of lubricants or glue, follow the instructions in this manual.
 (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

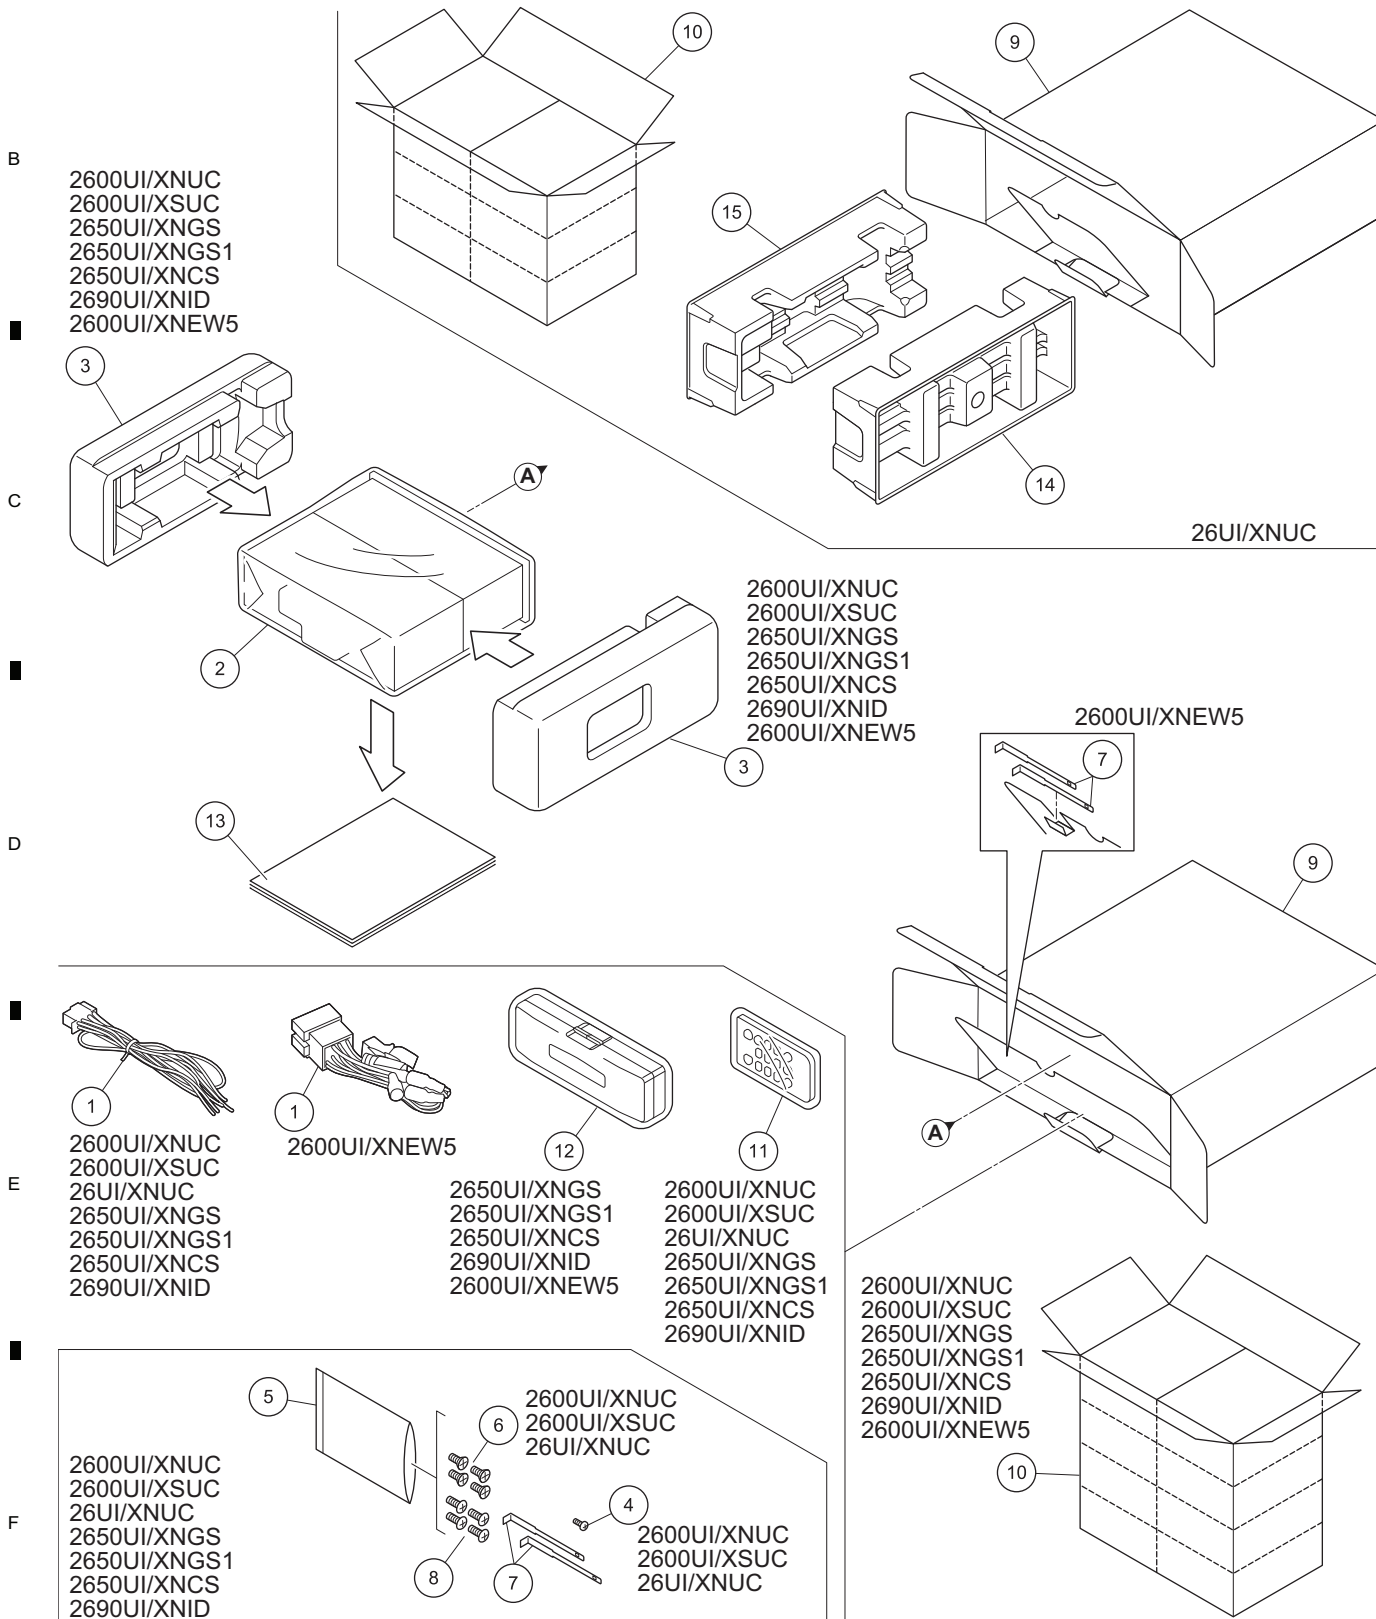

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table (2)	10	Contain Box	See Contrast table (2)
2	Polyethylene Bag	See Contrast table (2)			
3	Protector	See Contrast table (2)	11	Card Remote Control Unit	See Contrast table (2)
4	Screw	See Contrast table (2)	12	Case Assy	See Contrast table (2)
5	Polyethylene Bag	See Contrast table (2)	13-1	Owner's Manual	See Contrast table (2)
			*	13-2 Warranty Card	See Contrast table (2)
6	Screw	See Contrast table (2)	*	13-3 Service Network	See Contrast table (2)
7	Handle	QNC3021			
8	Screw	See Contrast table (2)	14	Protector	See Contrast table (2)
9	Unit Box	See Contrast table (2)	15	Protector	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X2600UI/XNUC, DEH-X2600UI/XSUC, DEH-X26UI/XNUC, DEH-X2650UI/XNGS, DEH-X2650UI/XNGS1, DEH-X2650UI/XNCS, DEH-X2690UI/XNID and DEH-2600UI/XNEW5 are constructed the same except for the following:


Mark	No.	Description	DEH-X2600UI/ XNUC	DEH-X2600UI/ XSUC	DEH-X26UI/ XNUC	DEH-X2650UI/ XNGS	DEH-X2650UI/ XNGS1
	1	Cord Assy	CDP1480	CDP1480	CDP1480	CDP1480	CDP1480
	2	Polyethylene Bag	CEG1173	CEG1173	CEG1173	QEG3001	QEG3001
	3	Protector	CHP4594	CHP4594	Not used	CHP4594	CHP4594
	4	Screw	BPZ20P060FTC	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used
	5	Polyethylene Bag	CEG1160	CEG1160	CEG1160	CEG1160	CEG1160
	6	Screw	CRZ50P090FTC	CRZ50P090FTC	CRZ50P090FTC	Not used	Not used
	8	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
	9	Unit Box	QHG3507	QHG3544	QHG3634	QHG3510	QHG3548
	10	Contain Box	QHL3507	QHL3544	QHL3634	QHL3510	QHL3548
	11	Card Remote Control Unit	QXE1047	QXE1047	QXE1047	QXE1047	QXE1047
	12	Case Assy	Not used	Not used	Not used	QXA3129	QXA3129
	13-1	Owner's Manual	QRD3201	QRD3201	QRD3201	QRD3203	QRD3203
*	13-2	Warranty Card	QRY3001	QRY3001	QRY3001	Not used	CRY1394
*	13-3	Service Network	Not used	Not used	Not used	Not used	CRY1395
	14	Protector	Not used	Not used	CHP4103	Not used	Not used
	15	Protector	Not used	Not used	CHP4104	Not used	Not used

Mark	No.	Description	DEH-X2650UI/ XNCS	DEH-X2690UI/ XNID	DEH-2600UI/ XNEW5
	1	Cord Assy	CDP1480	CDP1480	QDP3012
	2	Polyethylene Bag	QEG3001	QEG3001	QEG3001
	3	Protector	CHP4594	CHP4594	CHP4594
	4	Screw	Not used	Not used	Not used
	5	Polyethylene Bag	CEG1160	CEG1160	Not used
	6	Screw	Not used	Not used	Not used
	8	Screw	TRZ50P080FTC	TRZ50P080FTC	Not used
	9	Unit Box	QHG3509	QHG3514	QHG3508
	10	Contain Box	QHL3509	QHL3514	QHL3508
	11	Card Remote Control Unit	QXE1047	QXE1047	Not used
	12	Case Assy	QXA3129	QXA3129	QXA3129
	13-1	Owner's Manual	QRD3202	QRB3343	QRD3200
*	13-2	Warranty Card	Not used	CRY1304	CRY1376
*	13-3	Service Network	Not used	CRY1305	Not used
	14	Protector	Not used	Not used	Not used
	15	Protector	Not used	Not used	Not used

Owner's Manual, Installation Manual

Part No.	Language
QRD3200	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3201	English, French, Spanish(Espanol)
QRD3202	English, Spanish(Espanol), Portuguese(B)
QRD3203	English, Traditional Chinese, Arabic, Persian
QRB3343	English

9.2 EXTERIOR

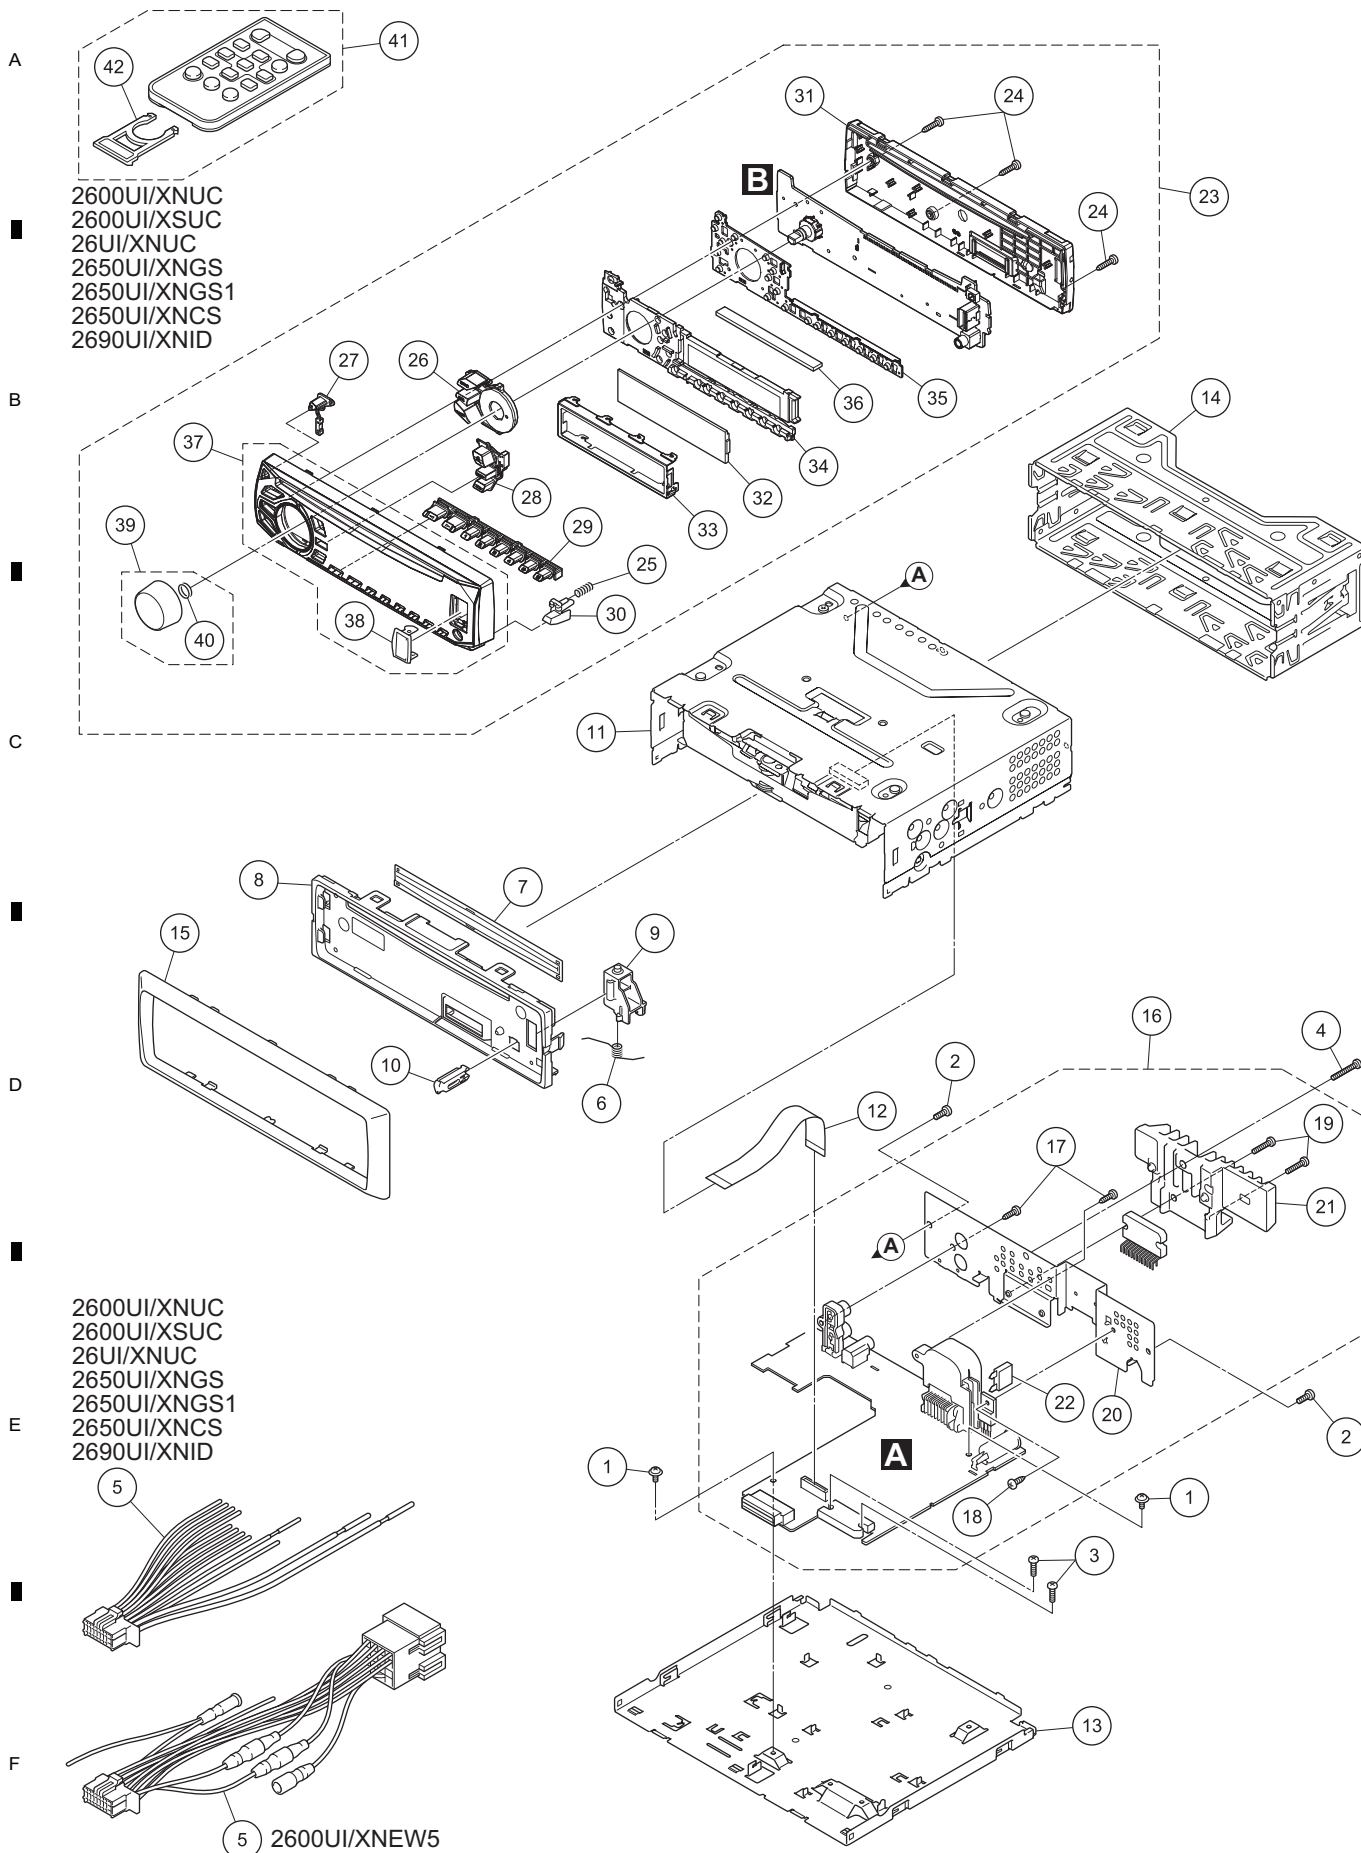

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	ASZ26P050FTC	22	Fuse (10 A)	YEK5001
2	Screw	BSZ26P060FTC	23	Detachable Grille Assy	See Contrast table (2)
3	Screw	BSZ26P080FTC	24	Screw	BPZ20P100FTC
4	Screw	BSZ26P120FTC	25	Spring	CBH2210
5	Cord Assy	See Contrast table (2)			
6	Spring	QBH3001	26	Button (SRC, BAND)	QAC3121
7	Cover	See Contrast table (2)	27	Button (EJECT)	QAC3124
8	Panel	QNS3126	28	Button (DISP)	QAC3125
9	Arm	QNV3025	29	Button (< > 1-6)	QAC3126
10	Button	QNV3026	30	Button (DETACH)	QAC3127
11	CD Mechanism Module (S11.6)	See Contrast table (2)	31	Cover	QNS3566
12	FFC	QDE3029	32	Segment LCD (V1801)	CAW2024
13	Case	QNB3013	33	Holder	QNC3067
14	Holder	QNC3020	34	Lighting Conductor	QNV3069
15	Panel	QNS3568	35	Contact Rubber	QNV3070
16	Tuner Amp Unit	See Contrast table (2)	36	Rubber Connector	QNV3071
17	Screw	BPZ26P080FTC	37	Grille Unit	See Contrast table (2)
18	Screw	BSZ26P060FTC	38	Door	QAT3011
19	Screw	BSZ26P120FTC	39	Knob Unit	See Contrast table (2)
20	Holder	See Contrast table (2)	40	Spring	YBL5010
21	Heat Sink	See Contrast table (2)	41	Card Remote Control Unit	See Contrast table (2)
			42	Cover	See Contrast table (2)


(2) CONTRAST TABLE

DEH-X2600UI/XNUC, DEH-X2600UI/XSUC, DEH-X26UI/XNUC, DEH-X2650UI/XNGS, DEH-X2650UI/XNGS1, DEH-X2650UI/XNCS, DEH-X2690UI/XNID and DEH-2600UI/XNEW5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-X2600UI/ XNUC</u>	<u>DEH-X2600UI/ XSUC</u>	<u>DEH-X26UI/ XNUC</u>	<u>DEH-X2650UI/ XNGS</u>	<u>DEH-X2650UI/ XNGS1</u>
	5	Cord Assy	CDP1480	CDP1480	CDP1480	CDP1480	CDP1480
	7	Cover	QNM3029	CNN1665	QNM3029	QNM3029	QNM3029
	11	CD Mechanism Module (S11.6)	CXK5805	CXK5804	CXK5805	CXK5805	CXK5805
	16	Tuner Amp Unit	QWM3644	QWM3644	QWM3812	QWM3646	QWM3646
	20	Holder	QNC3051	QNC3051	QNC3051	QNC3049	QNC3049
	21	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3002	QNR3002
	23	Detachable Grille Assy	QXA3843	QXA3843	QXA4115	QXA4033	QXA4033
	37	Grille Unit	QXA3875	QXA3875	QXA4116	QXA3867	QXA3867
	39	Knob Unit	QXA3670	QXA3670	QXA3670	QXA3671	QXA3671
	41	Card Remote Control Unit	QXE1047	QXE1047	QXE1047	QXE1047	QXE1047
	42	Cover	CNS7068	CNS7068	CNS7068	CNS7068	CNS7068

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-X2650UI/ XNCS</u>	<u>DEH-X2690UI/ XNID</u>	<u>DEH-2600UI/ XNEW5</u>
	5	Cord Assy	CDP1480	CDP1480	QDP3012
	7	Cover	QNM3029	QNM3029	QNM3029
	11	CD Mechanism Module (S11.6)	CXK5805	CXK5805	CXK5805
	16	Tuner Amp Unit	QWM3645	QWM3647	QWM3643
	20	Holder	QNC3049	QNC3049	QNC3049
	21	Heat Sink	QNR3010	QNR3002	QNR3010
	23	Detachable Grille Assy	QXA3845	QXA3846	QXA3844
	37	Grille Unit	QXA3877	QXA3878	QXA3876
	39	Knob Unit	QXA3670	QXA3671	QXA3670
	41	Card Remote Control Unit	QXE1047	QXE1047	Not used
	42	Cover	CNS7068	CNS7068	Not used

9.3 CD MECHANISM MODULE

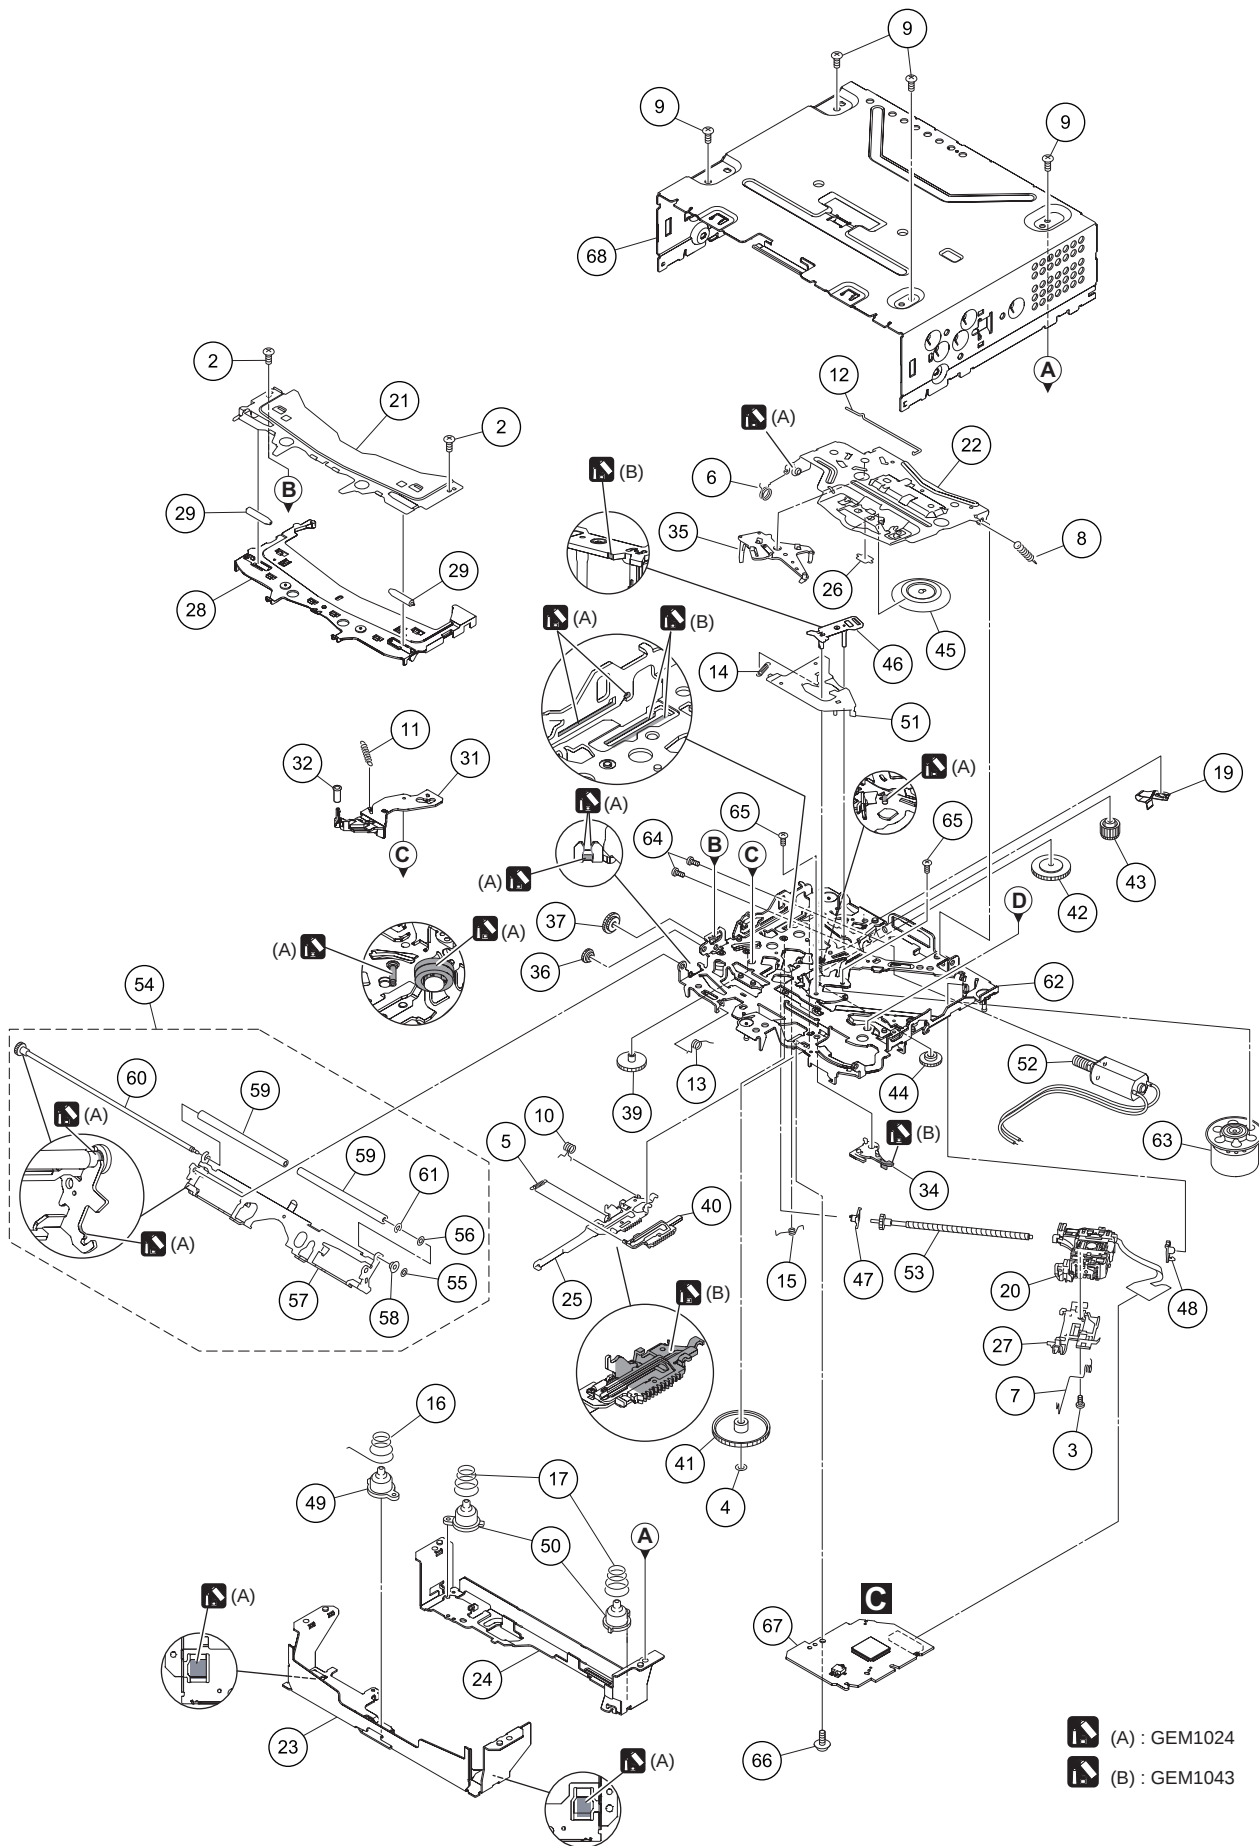

DEH-X2600UI/XNUC

5

6

7

8

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1			49	Damper	CNW1197
2	Screw	BSZ20P040FTC	50	Damper	CNW1198
3	Screw(M2 x 4)	CBA1835			
4	Washer	CBF1038	51	Arm	CNW1726
5	Spring	CBH3010	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
			53	Screw Unit	CXC8894
6	Spring	CBH2855	54	Arm Assy(CXK5805)	CXE6232
7	Spring	CBH2856		Arm Assy(CXK5804)	CXE4840
8	Spring	CBH2860			
9	Screw	BSZ26P060FTC	55	Washer	CBF1037
10	Spring	CBH3011	56	Washer	CBF1038
			57	Arm	CND6242
11	Coil Spring	CBH3095	58	Collar(CXK5805)	CNW2444
12	Spring	CBH3014		Collar(CXK5804)	CNV6906
13	Spring	CBH3015			
14	Spring	CBH3016	59	Roller(CXK5805)	CNW2500
15	Spring	CBH3017		Roller(CXK5804)	CNW1196
			60	Gear Unit(CXK5805)	CXE6225
16	Spring	CBH3086		Gear Unit(CXK5804)	CXE6655
17	Spring	CBH3019	61	Washer	YE15FTC
18					
19	Leaf Spring	CBL1824	62	Chassis Unit	CXE4528
20	PU Unit(P11)(Service)(CXK5805)	CXX4754	63	Motor Unit(M1)(SPDL)	CXE2273
	PU Unit(P10.6)(Service)(CXK5804)	CXX3556	64	Screw	JFZ20P025FTC
			65	Screw	JGZ17P022FTC
21	Bracket	CND4553	66	Screw	EBA1028
22	Arm	CND6406			
23	Bracket	CND6127	67	CD Core Unit (S11.6VA)(CXK5805)	CWX4269
24	Bracket	CND5710		CD Core Unit (S11.6STD)(CXK5804)	CWX4023
25	Lever	CND5398	68	Chassis	CNA3181
26	Sheet	CNN3678			
27	Rack	CNV8342			
28	Guide	CNW2240			
29	Roller	CNW1172			
30					
31	Arm	CNW2241			
32	Roller	CNW1175			
33					
34	Arm	CNW1177			
35	Arm	CNW1178			
36	Gear	CNW1180			
37	Gear	CNW1181			
38					
39	Gear	CNW1183			
40	Rack	CNW1184			
41	Gear	CNW1185			
42	Gear	CNW1186			
43	Gear	CNW1187			
44	Gear	CNW2287			
45	Clamper	CNW1190			
46	Arm	CNW1192			
47	Holder	CNW1193			
48	Holder	CNW1194			

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

Circuit Symbol and No.

Part No.

A:DEH-X2600UI/XNUC

B:DEH-X2600UI/XSUC

C:DEH-X26UI/XNUC

D:DEH-X2650UI/XNGS

E:DEH-X2650UI/XNGS1

F:DEH-X2650UI/XNCS

H:DEH-X2690UI/XNID

I:DEH-2600UI/XNEW5

Unit Number : QWM3644(A,B)

Unit Number : QWM3646(D,E)

Unit Number : QWM3645(F)

Unit Number : QWM3647(H)

Unit Number : QWM3643(I)

Unit Number : QWM3812(C)

Unit Name : Tuner Amp Unit

Unit Number : (A,B,C,D,E,F,H)

Unit Number : (I)

Unit Name : Keyboard Unit

Unit Number : CWX4269(A,C,D,E,F,H,I)

Unit Name : CD Core Unit(S11.6VA)

Unit Number : CWX4023(B)

Unit Name : CD Core Unit (S11.6STD)

Circuit Symbol and No.

Part No.

Unit Number : QWM3644(A,B)

Unit Number : QWM3646(D,E)

Unit Number : QWM3645(F)

Unit Number : QWM3647(H)

Unit Number : QWM3643(I)

Unit Number : QWM3812(C)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 201	(A,102,107) LSI	PM9013A
IC 301	(A,78,142) IC	PA2032A
IC 401	(A,150,91) IC	TDA7706
IC 531	(A,94,88) IC	337S3959
IC 551	(A,20,111) Regulator IC	BD9876EFJ
IC 552	(A,106,24) IC	BD2232G-G
IC 601	(A,111,77) IC	R5S726A0D216FP
IC 671	(A,131,75) IC	S-80827CNMC-B8M
IC 681	(A,114,94) Flash ROM Unit(A,B,C)	PEB112A8
	(A,114,94) Flash ROM Unit(D,E,F,H,I)	PEB113A8
IC 801	(A,105,18) L-MOS And Gate	TC7SET08FUS1
IC 911	(A,145,28) Regulator IC	BA49183-V12
Q 251	(A,14,130) Chip Transistor(D,E,F,H,I)	RN1910
Q 252	(A,24,131) Chip Transistor	RN1910
Q 301	(A,86,127) Chip Transistor	RN4983
Q 531	(A,94,97) Transistor	LSAR523UB
Q 601	(A,93,68) Transistor	LTC014YEB
Q 751	(A,142,139) Transistor	KTD2092
Q 752	(A,141,134) Chip Transistor	RN4983
Q 873	(A,149,72) Transistor	2SD1767
Q 874	(A,149,65) Chip Transistor	RN4983
Q 875	(A,148,54) Transistor	LTC043EEB
Q 941	(A,96,121) Transistor	LSCR523UB
Q 951	(A,124,110) Transistor(I)	LSAR523UB
D 401	(A,158,107) Diode	RN731VN
D 402	(A,158,100) Diode	RN731VN
D 551	(A,23,124) Diode(A,B,D,E,F,H,I)	CMS03
D 551	(A,23,124) Diode(C)	CMS30I30A
D 552	(A,22,104) Diode	RB056L-40
D 601	(A,130,81) Diode(I)	RB751SM-40

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
D 602	(A,91,75)	Diode(I)	RB551VM-30			R 255	(A,30,132)		RS1/16SS821J		
D 751	(A,137,135)	Diode	DZ2J082M0			R 256	(A,19,131)		RS1/16SS821J		
D 802	(A,93,17)	Diode	DZ2S068C			R 257	(A,28,131)		RS1/16SS223J		A
D 803	(A,126,15)	Diode	DZ2S068C			R 258	(A,22,131)		RS1/16SS223J		
D 804	(A,119,14)	Diode	DZ2S068C			R 301	(A,68,127)		RS1/16SS471J		
D 805	(A,120,13)	Diode	DZ2S068C								
D 806	(A,116,13)	Diode	DZ2S068C			R 302	(A,82,125)		RS1/16SS471J		
D 807	(A,114,13)	Diode	DZ2S068C			R 303	(A,74,127)		RS1/16SS471J		
D 871	(A,148,61)	Diode	DZ2J075M0			R 304	(A,78,126)		RS1/16SS471J		
D 901	(A,141,127)	Diode	1SR154-400			R 305	(A,90,127)		RS1/16SS103J		
D 902	(A,137,127)	Diode	1SR154-400			R 306	(A,90,129)		RS1/16SS221J		
						R 307	(A,89,128)		RS1/16SS223J		
D 911	(A,158,66)	Diode	CRG03			R 309	(A,89,125)		RS1/16SS103J		
D 912	(A,161,66)	Diode	CRG03			R 310	(A,100,129)		RS1/16SS0R0J		
D 941	(A,93,125) Diode(A,B,C,D,E,F,H)	DZ2J068M0				R 311	(A,88,125)		RS1/16SS473J		B
	(A,93,125) Diode(I)	DZ2J075M0				R 401	(A,161,106)		RS1/16SS221J		
D 951	(A,124,113)	Diode(I)	DAN202UM								
L 202	(A,94,102)	Inductor	CTF1793			R 402	(A,161,100)		RS1/16SS751J		
L 401	(A,155,104)	Chip Coil	LCTAWR27J2520			R 403	(A,139,104) (A,B,C,F,I)		RS1/16SS391J		
							(A,139,104) (D,E,H)		RS1/16SS331J		
L 402	(A,159,104)	Chip Coil	LCTAWR15J2520			R 404	(A,142,99)		RS1/16SS105J		
L 403	(A,151,102)	Inductor	CTF1786			R 406	(A,154,108)		RS1/16SS105J		
L 404	(A,146,102)	Inductor	CTF1786			R 407	(A,139,96)		RS1/16SS330J		
L 405	(A,151,108) Inductor(A,B,C,F)	LCYB68NJ1608									
L 406	(A,148,105) Inductor(A,B,C,F,I)	CTF1389				R 408	(A,137,97) (A,B,C,F,I)		RS1/16SS471J		
L 407	(A,147,107) Chip Coil(D,E,H)	LCTAWR27J2520					(A,137,97) (D,E,H)		RS1/16SS361J		
						R 409	(A,144,98) (D,E,H)		RS1/16SS0R0J		
L 408	(A,141,104) Inductor(A,B,C,F,I)	LCTC4R7K1608				R 411	(A,138,91) (A,B,C,F,I)		RS1/16SS681J		C
	(A,141,104) Inductor(D,E,H)	LCTC1R5K1608					(A,138,91) (D,E,H)		RS1/16SS391J		
L 409	(A,143,109) Chip Coil(D,E,H)	LCTAWR39J2520				R 412	(A,153,78)		RS1/4SA8R2J		
L 410	(A,137,94) Chip Coil(A,B,C,F,I)	LCTAW470J2520				R 413	(A,158,78)		RS1/4SA8R2J		
	(A,137,94) Inductor(D,E,H)	LCTAW2R2J2520				R 414	(A,139,87)		RS1/16SS0R0J		
L 413	(A,144,82)	Inductor	CTF1786			R 415	(A,152,80) (A,B,C,D,E,F,H)		RS1/16SS0R0J		
L 414	(A,153,80)	Inductor(I)	CTF1786			R 531	(A,91,94)		RS1/16SS473J		
L 419	(A,161,95)	Inductor	CTF1786			R 532	(A,91,85)		RS1/16SS222J		
L 420	(A,161,96)	Inductor	CTF1786			R 533	(A,92,85)		RS1/16SS222J		
						R 534	(A,94,92)		RS1/16SS272J		
L 551	(A,30,107)	Inductor	CTH1524								
L 801	(A,115,17)	Inductor	CTF1713			R 535	(A,95,92)		RS1/16SS472J		
L 901	(A,112,141)	Choke Coil 600 uH	CTH1432			R 536	(A,96,92)		RS1/16SS472J		D
L 951	(A,122,116)	Chip Coil(I)	BTH1101			R 537	(A,96,85)		RS1/16SS101J		
X 401	(A,161,88)	Crystal Resonator 36.48 MHz	CSS1848			R 538	(A,96,84)		RS1/16SS101J		
X 601	(A,127,76)	Crystal Resonator 12 MHz	CSS1847			R 551	(A,26,111)		RS1/16SS682J		
X 602	(A,117,90)	Ceramic Resonator 16.934 MHz	CSS1603			R 552	(A,30,112)		RS1/16SS0R0J		
⚠ P251	(A,6,130)	Fuse 3.0 A(A,B,D,E,F,H,I)	CEK1386			R 553	(A,27,112)		RS1/16SS1803D		
⚠ P251	(A,6,130)	Fuse 3.0 A(C)	CEK1286			R 554	(A,27,110)		RS1/16SS4302D		
P 402	(A,156,111)	Surge Absorber	HSPC16701B02			R 555	(A,39,124)		RS1/10SR471J		
VA801	(A,108,13)	SMD Varistor	MLV0402ES012V0010N			R 601	(A,101,66) (D,E,F,H,I)		RS1/16SS473J		
VA802	(A,101,13)	SMD Varistor	MLV0402ES012V0010N			R 602	(A,107,63)		RS1/16SS473J		
						R 604	(A,116,60) (I)		RS1/16SS473J		
CN701	(A,114,32)	Connector	VKN1192								
CN801	(A,109,4)	Connector	CKS6452			R 609	(A,122,64)		RS1/16SS473J		E
JA251	(A,19,138)	Pin Jack(A,C)	CKB1056			R 610	(A,122,70)		RS1/16SS473J		
	(A,19,138)	Pin Jack(B)	YKB5010			R 611	(A,123,69)		RS1/16SS473J		
	(A,19,138)	Pin Jack(D,E,F,H,I)	CKB1099			R 613	(A,122,76)		RS1/16SS152J		
						R 614	(A,123,78)		RS1/16SS473J		
JA401	(A,158,129)	Antenna Jack	YKS5041								
JA891	(A,42,138)	Jack(D,E,F,H,I)	CKS6437			R 615	(A,130,79)		RS1/16SS473J		
JA901	(A,114,141)	Connector	CKM1613			R 616	(A,125,67)		RS1/16SS473J		
⚠	Fuse 10 A	YEK5001				R 617	(A,131,81)		RS1/16SS103J		
						R 618	(A,125,82) (A,B,I)		RS1/16SS473J		
							(A,125,82) (D,E)		RS1/16SS223J		
							(A,125,82) (C,H)		RS1/16SS103J		
						R 619	(A,126,82) (C,D,E,F,H)		RS1/16SS473J		F
						R 622	(A,125,87)		RS1/16SS473J		
R 251	(A,18,131) (D,E,F,H,I)		RS1/16SS821J			R 623	(A,130,85)		RAB4CQ473J		
R 252	(A,13,128) (D,E,F,H,I)		RS1/16SS821J			R 625	(A,114,90)		RS1/16SS221J		
R 253	(A,15,131) (D,E,F,H,I)		RS1/16SS223J								
R 254	(A,12,131) (D,E,F,H,I)		RS1/16SS223J								

RESISTORS

1

Circuit Symbol and No.

R 626 (A,113,90)
R 627 (A,112,88)
R 628 (A,111,90)

A

R 629 (A,109,92)
R 630 (A,110,89)
R 631 (A,108,92)
R 632 (A,106,91)
R 633 (A,107,90)

■

R 634 (A,103,88)
R 635 (A,102,88)
R 636 (A,100,91)
R 637 (A,101,90)
R 638 (A,104,92)

B

R 639 (A,98,91)
R 640 (A,99,91)
R 643 (A,99,82)
R 644 (A,98,79)
R 645 (A,96,79)

■

R 646 (A,93,75)
R 647 (A,98,78)
R 648 (A,95,76)
R 649 (A,95,75)
R 650 (A,95,74)

C

R 651 (A,97,71)
R 652 (A,98,69)
R 653 (A,100,66)
R 659 (A,124,61)
R 660 (A,124,60)
R 663 (A,102,62) (D,E,F,H,I)

■

R 664 (A,133,62)
R 668 (A,93,71)
R 669 (A,95,69)
R 671 (A,130,69)
R 681 (A,109,97)

D

R 682 (A,110,91)
R 683 (A,120,92)
R 684 (A,109,94)
R 685 (A,120,96)
R 701 (A,108,38)

■

R 702 (A,114,38)
R 703 (A,118,28)
R 704 (A,110,40)
R 706 (A,108,36)
R 707 (A,109,38)

E

R 708 (A,110,38)
R 709 (A,111,38)
R 710 (A,112,38)
R 711 (A,114,39)
R 715 (A,117,36)

■

R 716 (A,118,36)
R 717 (A,119,36)
R 718 (A,123,36)
R 719 (A,122,36)
R 752 (A,144,134)

F

R 753 (A,127,91)
R 754 (A,127,92)
R 801 (A,125,22)
R 803 (A,121,18)
R 804 (A,119,18)

R 805 (A,121,19)

2

Part No.

RS1/16SS221J
RS1/16SS221J
RS1/16SS221J

RS1/16SS221J
RS1/16SS221J
RS1/16SS473J
RS1/16SS473J
RS1/16SS101J

RS1/16SS102J
RS1/16SS102J
RS1/16SS473J
RS1/16SS473J
RS1/16SS473J

RS1/16SS472J
RS1/16SS472J
RS1/16SS104J
RS1/16SS101J
RS1/16SS101J

RS1/16SS103J
RS1/16SS101J
RS1/16SS102J
RS1/16SS102J
RS1/16SS102J

RS1/16SS473J
RS1/16SS222J
RS1/16SS103J
RS1/16SS153J
RS1/16SS153J
RS1/16SS473J

RS1/16SS103J
RS1/16SS473J
RS1/16SS473J
RS1/16SS104J
RS1/16SS473J

RS1/16SS473J
RS1/16SS473J
RS1/16SS473J
RS1/16SS473J
RS1/16SS473J

RS1/16SS104J
RAB4CQ472J
RS1/16SS104J
RS1/16SS221J
RS1/16SS221J

RS1/16SS101J
RS1/16SS221J
RS1/16SS101J
RS1/16SS102J
RS1/16SS151J

RS1/16SS151J
RS1/16SS151J
RS1/16SS221J
RS1/16SS104J
RS1/4SA391J

RS1/16SS473J
RS1/16SS103J
RS1/10SR222J
RS1/16SS223J
RS1/16SS223J

RS1/10SR101J

3

Circuit Symbol and No.

R 806 (A,118,20)
R 807 (A,120,20)
R 808 (A,124,20)
R 809 (A,115,21)

R 810 (A,114,21)
R 813 (A,107,16)
R 814 (A,101,19)
R 815 (A,100,19)
R 816 (A,96,19)

R 817 (A,95,19)
R 818 (A,105,13)
R 851 (A,93,20)
R 874 (A,148,58)
R 875 (A,149,58)

R 878 (A,124,26)
R 879 (A,156,67)
R 891 (A,58,138) (D,E,F,H,I)
R 892 (A,58,136) (D,E,F,H,I)
R 911 (A,145,40)
R 912 (A,141,41)
R 913 (A,154,41)

R 914 (A,131,40)
R 941 (A,94,121)
R 942 (A,94,122)
R 943 (A,95,125) (A,B,C,D,E,F,H)
(A,95,125) (I)

R 944 (A,99,123) (A,B,C,D,E,F,H)
(A,99,123) (I)
R 951 (A,127,115) (I)
R 952 (A,121,111) (I)
R 953 (A,125,115) (I)

CAPACITORS

C 201 (A,96,115)
C 202 (A,105,116)
C 203 (A,92,116)
C 204 (A,107,115)
C 205 (A,94,116)

C 206 (A,107,114)
C 207 (A,95,108)
C 208 (A,94,106)
C 209 (A,93,104) 10 uF
C 210 (A,96,106)

C 211 (A,110,107)
C 212 (A,108,109) 10 uF
C 213 (A,108,106)
C 214 (A,108,104)
C 215 (A,108,102)

C 216 (A,92,101) 10 uF
C 217 (A,95,100)
C 218 (A,114,109) (A,C,D,E,F,H,I)
(A,114,109) (B)
C 219 (A,112,103) 10 uF
C 220 (A,106,98) 10 uF

C 223 (A,91,101)
C 224 (A,115,103)
C 229 (A,110,112)
C 236 (A,110,104)

C 251 (A,35,128) 4.7 uF(D,E,F,H,I)
C 252 (A,17,127) 4.7 uF(D,E,F,H,I)

4

Part No.

RS1/10SR101J
RS1/10SR101J
RS1/10SR222J
RS1/10SR220J

RS1/10SR220J
RS1/10SR222J
RS1/10SR222J
RS1/16SS822J
RS1/10SR222J

RS1/10SR222J
RS1/10SR0R0J
RS1/16SS472J
RS1/10SR391J
RS1/10SR473J

RS1/10SR103J
RS1/10SR122J
RS1/16SS102J
RS1/16SS102J
RS1/10SR1R0J
RS1/10SR1R0J
RS1/16SS223J

RS1/16SS223J
RS1/16SS223J
RS1/16SS473J
RS1/16SS682J
RS1/16SS333J

RS1/4SA102J
RS1/4SA122J
RS1/16SS102J
RS1/16SS223J
RS1/16SS153J

CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

CKSRYB105K10
CKSSYB104K10
CKSSYB104K10
CCG1192
CCSSCH151J50

CCSSCH151J50
CCG1192
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

CCG1192
CKSSYB104K10
XCEVW470M16
CEVW470M16
CCG1192
CCG1192

CKSSYB102K50
CKSSYB104K10
CKSSYB102K50
CKSRYB105K10

CCG1201
CCG1201

1

2

3

4

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 253	(A,17,130)	(D,E,F,H,I)	CCSSCH101J50			C 444	(A,152,82)	2.2 uF	CCG1218		
C 254	(A,11,130)	(D,E,F,H,I)	CCSSCH101J50			C 445	(A,157,82)	(A,B,C,F,I)	CKSSYB104K10		
C 255	(A,35,132)	4.7 uF	CCG1201			C 447	(A,157,83)	(A,B,C,F,I)	CKSRYB105K10		A
						C 448	(A,158,85)	(A,B,C,F,I)	CKSSYB104K10		
C 256	(A,31,130)	4.7 uF	CCG1201				(A,158,85)	(D,E,H)	CKSSYB103K16		
C 257	(A,26,131)		CCSSCH101J50			C 449	(A,161,85)		CCSSCH9R0D50		
C 258	(A,21,131)		CCSSCH101J50								
C 260	(A,33,138)		CKSSYB104K10			C 450	(A,161,90)		CCSSCH9R0D50		
C 261	(A,6,133)		CKSSYB103K16			C 451	(A,159,91)		CKSSYB104K10		
						C 452	(A,159,94)		CKSRYB105K10		
C 301	(A,69,129)		CKSRYB224K16			C 453	(A,160,96)		CKSSYB104K10		
C 303	(A,80,129)		CKSRYB224K16			C 455	(A,159,97)		CKSRYB224K16		
C 305	(A,72,129)		CKSRYB224K16								
C 307	(A,77,129)		CKSRYB224K16			C 456	(A,162,92)		CKSSYB472K25		
C 313	(A,84,130)		CKSRYB105K16			C 457	(A,162,93)		CKSSYB472K25		
						C 459	(A,154,83)	(A,B,C,F,I)	CCSSCH101J50		B
C 314	(A,135,126)		CKSRYB104K16				(A,154,83)	(D,E,H)	CKSSYB102K50		
C 317	(A,60,129)	(A,C,D,E,F,H,I)	XCEVW100M16			C 461	(A,145,104)	(A,B,C,F,I)	CKSSYB104K10		
	(A,60,129)	(B)	CEVW100M16								
C 319	(A,62,134)		CCSSCH101J50			C 464	(A,162,98)	1 uF(D,E,H)	DCH1246		
C 320	(A,64,134)		CCSSCK1R0C50			C 465	(A,142,106)	(D,E,H)	CKSSYB103K16		
C 321	(A,83,129)		CCSSCH101J50			C 466	(A,137,79)	(D,E,H)	CKSRYB105K10		
						C 467	(A,151,81)	(D,E,H)	CKSSYB104K10		
C 322	(A,106,126)		CKSRYB104K16			C 468	(A,142,79)	(D,E,H)	CKSRYB105K10		
C 323	(A,106,129)		CCSRCH100D50			C 531	(A,91,93)		CKSSYB104K10		
C 324	(A,102,129)		CCSRCH100D50								
C 325	(A,94,132)		CCSRCH100D50			C 532	(A,94,93)		CKSSYB104K10		
C 326	(A,95,140)		CCSRCH100D50			C 551	(A,13,121)	(A,C,D,E,F,H,I)	XCEVW221M16		
							(A,13,121)	(B)	CEVW221M16		C
C 327	(A,88,129)		CKSRYB105K10			C 552	(A,13,107)		CKSRYB105K16		
C 401	(A,154,100)		CKSSYB104K10			C 553	(A,15,110)		CKSSYB103K16		
C 402	(A,155,101)		CKSSYB103K16			C 555	(A,25,112)		CKSSYB682K25		
C 403	(A,153,102)		CKSRYB105K10								
C 405	(A,162,101)		CKSSYB103K16			C 556	(A,32,120)		CEVQW221M6R3		
						C 557	(A,33,116)		CKSRYB105K10		
C 406	(A,160,101)		CKSSYB103K16			C 560	(A,108,21)		CKSRYB105K10		
C 408	(A,161,105)		CKSSYB103K16			C 561	(A,103,24)		CKSRYB105K10		
C 409	(A,157,105)		CCSSCH6R0D50			C 564	(A,33,114)	4.7 uF	CCG1201		
C 410	(A,155,107)		CCSSCH330J50								
C 411	(A,148,99)		CKSSYB103K16			C 565	(A,16,107)	4.7 uF	CCG1222		
						C 601	(A,105,66)		CKSSYB104K10		
C 412	(A,148,101)		CKSSYB104K10			C 602	(A,109,65)		CKSSYB104K10		D
C 413	(A,150,101)		CKSSYB104K10			C 603	(A,111,65)		CKSSYB104K10		
C 414	(A,146,100)		CKSSYB103K16			C 604	(A,113,65)		CKSSYB104K10		
C 415	(A,144,101)	10 uF	CCG1192								
C 416	(A,147,100)		CKSSYB104K10			C 605	(A,117,65)		CKSSYB104K10		
						C 606	(A,122,71)		CKSSYB104K10		
C 418	(A,142,101)		CKSSYB223K16			C 607	(A,127,73)		CCSSCH120J50		
C 419	(A,147,110)	(D,E,H)	CCSSCH150J50			C 608	(A,127,78)		CCSSCH120J50		
C 420	(A,151,106)	(D,E,H,I)	CKSSYB103K16			C 609	(A,122,73)		CKSSYB104K10		
C 421	(A,154,111)	(A,B,C,F)	CCSSCJ3R0C50								
						C 610	(A,122,75)		CKSSYB104K10		
C 423	(A,144,106)	(D,E,H)	CCSSCH8R0D50			C 611	(A,122,77)		CKSSYB104K10		
C 424	(A,141,101)		CKSSYB103K16			C 612	(A,123,82)		CKSSYB104K10		
C 425	(A,139,99)	10 uF	CCG1192			C 613	(A,124,82)		CKSSYB104K10		E
C 426	(A,140,97)		CKSSYB104K10			C 620	(A,114,88)		CKSSYB104K10		
C 427	(A,144,97)		CKSSYB104K10			C 621	(A,109,88)		CKSSYB104K10		
C 428	(A,137,96)	(A,B,C,F,I)	CCSSCH101J50			C 622	(A,106,93)		CCSSCH220J50		
	(A,137,96)	(D,E,H)	CCSSCH220J50			C 623	(A,106,88)		CKSSYB104K10		
C 429	(A,136,96)		CKSSYB103K16			C 624	(A,105,88)		CKSSYB104K10		
C 430	(A,139,90)		CKSSYB102K50			C 625	(A,104,90)		CKSSYB104K10		
C 432	(A,138,92)	(A,B,C,F,I)	CCSSCH820J50								
	(A,138,92)	(D,E,H)	CCSSCK2R0C50			C 626	(A,100,80)		CKSSYB104K10		
C 433	(A,136,91)		CKSSYB102K50			C 627	(A,97,81)		CCSSCH220J50		
C 435	(A,139,86)	(A,B,C,F,I)	CKSRYB474K10			C 628	(A,96,81)		CCSSCH220J50		
	(A,139,86)	(D,E,H)	CKSRYB105K10			C 629	(A,99,75)		CKSSYB104K10		F
C 439	(A,145,80)	(D,E,H)	CKSRYB104K16			C 630	(A,99,73)		CKSSYB104K10		
C 440	(A,142,86)		CKSSYB102K50								
C 441	(A,137,89)	(A,B,C,D,E,F,H)	CCSSCH100D50			C 631	(A,97,77)		CCSSCH220J50		
C 442	(A,146,83)		CKSSYB104K10			C 672	(A,123,73)	1 uF	DCH1246		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 681 (A,121,96) CKSSYB104K10
 C 683 (A,120,94) CCSSCJ3R0C50
 C 701 (A,111,40) CKSSYB103K16

D 1982 (A,5,38) Red LED FC-1608SXX630D08
 L 1921 (B,130,10) Inductor CTF1389
 L 1922 (B,129,13) Inductor CTF1389

A

C 704 (A,120,39) CCSSCH100D50
 C 705 (A,118,39) CCSSCH100D50
 C 706 (A,117,38) CCSSCH100D50
 C 752 (A,140,136) CKSSYB104K10
 C 753 (A,147,130) 4.7 uF CCG1201

L 1923 (B,131,6) Inductor CTF1389
 X 1801 (B,70,24) Ceramic Resonator 5.00 MHz CSS1547
 S 1839 (A,31,19)Encoder(MULTI-CONTROL)(A,C,D,E,F,H,I) CSD1168
 (A,31,19)Rotary Encoder(MULTI-CONTROL)(B) CSD1184
 CN1911 (A,155,24) Connector(A,C,D,E,F,H,I) CKS6443
 (A,155,24) Connector(B) CKS6472
 CN1931 (B,108,9) Connector CKS6451

JA1921 (A,155,10) Jack CKN1090
 V 1801 (A,141,32) Segment LCD CAW2024

RESISTORS

R 1801 (B,89,13) RS1/10SR473J
 R 1802 (B,72,19) RS1/10SR473J
 R 1803 (B,75,23) RS1/10SR222J
 R 1805 (B,58,28) RS1/10SR473J
 R 1806 (B,60,29) RS1/10SR473J

R 1807 (B,60,30) RS1/10SR473J
 R 1808 (B,60,32) RS1/10SR473J
 R 1823 (B,49,27) RS1/10SR273J
 R 1931 (B,45,17) RS1/10SR222J
 R 1932 (B,45,13) RS1/10SR222J

R 1941 (B,128,24) (I) RS1/10SR473J
 R 1944 (B,132,26) (A,B,C,D,E,F,H) RS1/10SR101J
 R 1951 (B,59,20) RS1/4SA221J
 R 1952 (B,59,22) RS1/4SA221J
 R 1975 (B,13,19) RS1/10SR822J
 R 1976 (B,16,18) RS1/10SR0R0J

R 1978 (B,48,11) RS1/10SR122J
 R 1980 (B,18,23) RS1/10SR682J
 R 1982 (B,68,12) RS1/10SR222J
 R 1984 (B,54,12) RS1/10SR182J
 R 1986 (B,138,19) RS1/10SR182J

R 1988 (B,53,22) RS1/10SR182J
 R 1990 (B,18,31) RS1/10SR272J
 R 1996 (B,59,9) RS1/10SR0R0J

CAPACITORS

C 1806 (B,67,23) CKSRYB104K16
 C 1807 (B,70,21) CKSRYB105K10
 C 1911 (B,147,21) CKSRYB104K16
 C 1912 (B,144,22) CKSRYB104K16
 C 1941 (B,136,29) 10 uF(A,B,C,D,E,F,H) CCG1192

C

Unit Number : CWX4269(A,C,D,E,F,H,I)
Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201 (B,24,38) IC PEQ094A
 IC 301 (A,37,12) IC BD8223EFV
 Q 101 (B,12,54) Transistor 2SA1577
 Q 102 (B,16,55) Chip Digital Transistor LTA123JUB
 X 201 (B,25,50) Ceramic Resonator 16.934 MHz CSS1603

S 901 (A,43,54) Spring Switch(HOME) CSN1080
 S 903 (B,22,13) Spring Switch(DSCSNS) CSN1081

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 681 (A,121,96) CKSSYB104K10
 C 683 (A,120,94) CCSSCJ3R0C50
 C 701 (A,111,40) CKSSYB103K16

D 1982 (A,5,38) Red LED FC-1608SXX630D08
 L 1921 (B,130,10) Inductor CTF1389
 L 1922 (B,129,13) Inductor CTF1389

A

C 704 (A,120,39) CCSSCH100D50
 C 705 (A,118,39) CCSSCH100D50
 C 706 (A,117,38) CCSSCH100D50
 C 752 (A,140,136) CKSSYB104K10
 C 753 (A,147,130) 4.7 uF CCG1201

L 1923 (B,131,6) Inductor CTF1389
 X 1801 (B,70,24) Ceramic Resonator 5.00 MHz CSS1547
 S 1839 (A,31,19)Encoder(MULTI-CONTROL)(A,C,D,E,F,H,I) CSD1168
 (A,31,19)Rotary Encoder(MULTI-CONTROL)(B) CSD1184
 CN1911 (A,155,24) Connector(A,C,D,E,F,H,I) CKS6443
 (A,155,24) Connector(B) CKS6472
 CN1931 (B,108,9) Connector CKS6451

JA1921 (A,155,10) Jack CKN1090
 V 1801 (A,141,32) Segment LCD CAW2024

RESISTORS

R 1801 (B,89,13) RS1/10SR473J
 R 1802 (B,72,19) RS1/10SR473J
 R 1803 (B,75,23) RS1/10SR222J
 R 1805 (B,58,28) RS1/10SR473J
 R 1806 (B,60,29) RS1/10SR473J

R 1807 (B,60,30) RS1/10SR473J
 R 1808 (B,60,32) RS1/10SR473J
 R 1823 (B,49,27) RS1/10SR273J
 R 1931 (B,45,17) RS1/10SR222J
 R 1932 (B,45,13) RS1/10SR222J

R 1941 (B,128,24) (I) RS1/10SR473J
 R 1944 (B,132,26) (A,B,C,D,E,F,H) RS1/10SR101J
 R 1951 (B,59,20) RS1/4SA221J
 R 1952 (B,59,22) RS1/4SA221J
 R 1975 (B,13,19) RS1/10SR822J
 R 1976 (B,16,18) RS1/10SR0R0J

R 1978 (B,48,11) RS1/10SR122J
 R 1980 (B,18,23) RS1/10SR682J
 R 1982 (B,68,12) RS1/10SR222J
 R 1984 (B,54,12) RS1/10SR182J
 R 1986 (B,138,19) RS1/10SR182J

R 1988 (B,53,22) RS1/10SR182J
 R 1990 (B,18,31) RS1/10SR272J
 R 1996 (B,59,9) RS1/10SR0R0J

CAPACITORS

C 1806 (B,67,23) CKSRYB104K16
 C 1807 (B,70,21) CKSRYB105K10
 C 1911 (B,147,21) CKSRYB104K16
 C 1912 (B,144,22) CKSRYB104K16
 C 1941 (B,136,29) 10 uF(A,B,C,D,E,F,H) CCG1192

C

Unit Number : CWX4269(A,C,D,E,F,H,I)
Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201 (B,24,38) IC PEQ094A
 IC 301 (A,37,12) IC BD8223EFV
 Q 101 (B,12,54) Transistor 2SA1577
 Q 102 (B,16,55) Chip Digital Transistor LTA123JUB
 X 201 (B,25,50) Ceramic Resonator 16.934 MHz CSS1603

S 901 (A,43,54) Spring Switch(HOME) CSN1080
 S 903 (B,22,13) Spring Switch(DSCSNS) CSN1081

5		
<u>Circuit Symbol and No.</u>		
CN101	(A,17,58)	Connector
CN701	(A,26,30)	Connector

RESISTORS

R 101	(B,7,59)
R 102	(B,8,59)
R 103	(B,10,59)
R 108	(B,14,58)
R 109	(B,15,50)

R 214	(B,18,28)
R 215	(B,17,28)
R 216	(B,13,36)
R 217	(B,10,33)
R 218	(B,10,36)

R 229	(B,13,35)
R 232	(A,31,55)
R 237	(B,34,45)
R 240	(B,35,40)
R 245	(A,34,46)

R 254	(A,37,56)
R 260	(B,30,27)
R 264	(A,22,9)
R 281	(B,34,38)
R 282	(B,34,39)

R 291	(B,34,35)
R 294	(B,28,49)
R 303	(A,28,12)
R 304	(A,29,11)
R 305	(A,27,9)

R 306	(A,27,12)
R 307	(A,26,9)
R 308	(A,26,12)
R 309	(A,35,7)
R 310	(B,31,9)

R 311	(B,31,10)
R 312	(B,31,11)
R 313	(B,31,12)
R 701	(A,22,38)
R 702	(A,24,38)

R 706	(A,33,42)
-------	-----------

CAPACITORS

C 104	(B,15,52)
C 110	(B,11,44)
C 111	(B,12,44)
C 203	(B,22,47)
C 205	(A,17,41)

C 209	(B,29,48)
C 210	(B,33,44)
C 211	(B,34,42)
C 212	(B,23,29)
C 213	(B,18,26)

C 214	(B,17,26)
C 215	(B,19,29)
C 216	(B,13,33)
C 217	(B,10,35)
C 218	(B,10,37)

C 219	(B,14,35)
C 220	(A,18,39)

6	
<u>Part No.</u>	
CKS4808	
CKS6146	

RS1/10SR2R4J
RS1/10SR2R4J
RS1/10SR2R7J
RS1/16SS105J
RS1/16SS152J

RS1/16SS103J
RS1/16SS393J
RS1/16SS102J
RS1/16SS562J
RS1/16SS472J

RS1/16SS471J
RS1/16SS0R0J
RS1/16SS221J
RS1/16SS473J
RS1/16SS104J

RS1/16SS104J
RS1/16SS103J
RS1/16SS102J
RS1/16SS560J
RS1/16SS560J

RS1/16SS560J
RS1/16SS471J
RS1/16SS123J
RS1/16SS123J
RS1/16SS102J

RS1/16SS472J
RS1/16SS102J
RS1/16SS472J
RS1/16SS473J
RS1/16SS472J

RS1/16SS472J
RS1/16SS472J
RS1/16SS472J
RS1/16SS101J
RS1/16SS101J

RS1/16SS221J

CKSQYB475K6R3
CKSSYB104K10
CKSSYB103K16
CKSSYB104K10
CKSRYB105K10

CKSRYB104K16
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10
CKSSYB332K50

CKSSYB473K16
CKSSYB104K10
CKSSYB152K50
CCSSCH390J50
CCSSCH5R0C50

CKSSYB104K10
CKSSYB104K10

7	
<u>Circuit Symbol and No.</u>	
C 221	(B,14,32)
C 222	(B,14,37)
C 223	(B,13,42)

C 224	(B,14,45)
C 225	(B,14,47)
C 228	(B,10,34)
C 229	(B,9,41)
C 233	(B,33,46)

C 236	(B,8,41)
C 238	(A,26,45)
C 299	(A,26,43)
C 302	(B,29,12)
C 303	(B,30,12)

C 304	(B,28,12)
C 305	(B,27,12)
C 306	(A,32,7)
C 307	(A,42,19)
C 308	(A,32,16)

C 710	(A,34,43)
-------	-----------



Unit Number : CWX4023(B)

Unit Name : CD Core Unit (S11.6STD)

MISCELLANEOUS

IC 201	(B,23,37) IC	PE5791A
IC 301	(A,37,11) IC	BD8223EFV
Q 101	(B,11,53) Transistor	2SA1577
Q 102	(B,15,54) Transistor	LTA123JUB
X 201	(B,25,49) Ceramic Resonator 16.934 MHz	CSS1603

S 901	(A,42,53) Spring Switch(HOME)	CSN1080
S 903	(B,21,12) Spring Switch(DSCSNS)	CSN1081
CN101	(A,16,58) Connector	CKS4808
CN701	(A,25,29) Connector	CKS6146

RESISTORS

R 101	(B,6,57)	RS1/10SR2R4J
R 102	(B,8,57)	RS1/10SR2R4J
R 103	(B,9,57)	RS1/10SR2R7J
R 108	(B,18,55)	RS1/16SS105J

R 109	(B,12,50)	RS1/16SS222J
R 214	(B,18,28)	RS1/16SS103J
R 215	(B,17,28)	RS1/16SS393J
R 216	(B,12,35)	RS1/16SS122J

R 217	(B,10,32)	RS1/16SS562J
R 218	(B,10,35)	RS1/16SS472J
R 229	(B,12,34)	RS1/16SS471J
R 232	(A,31,54)	RS1/16SS0R0J
R 237	(B,33,45)	RS1/16SS221J

R 240	(B,34,40)	RS1/16SS473J
R 245	(A,34,46)	RS1/16SS104J
R 254	(A,37,56)	RS1/16SS104J
R 260	(B,30,27)	RS1/16SS103J
R 264	(A,22,9)	RS1/16SS102J

R 281	(B,33,38)	RS1/16SS560J
R 282	(B,33,39)	RS1/16SS560J
R 291	(B,33,34)	RS1/16SS560J
R 294	(B,27,48)	RS1/16SS471J

Circuit Symbol and No.**Part No.**

A	R 303	(A,27,11)	RS1/16SS123J
	R 304	(A,28,11)	RS1/16SS123J
	R 305	(A,26,9)	RS1/16SS102J
	R 306	(A,26,11)	RS1/16SS472J
	R 307	(A,25,9)	RS1/16SS102J
	R 308	(A,25,11)	RS1/16SS472J
	R 309	(A,35,6)	RS1/16SS473J
	R 310	(B,30,9)	RS1/16SS472J
	R 311	(B,30,10)	RS1/16SS472J
	R 312	(B,30,11)	RS1/16SS472J
B	R 313	(B,30,12)	RS1/16SS472J
	R 701	(A,21,38)	RS1/16SS101J
	R 702	(A,23,38)	RS1/16SS101J
	R 706	(A,32,42)	RS1/16SS221J

CAPACITORS

	C 104	(B,12,57)	CKSQYB475K6R3
	C 203	(B,22,47)	CKSSYB104K10
	C 209	(B,28,47)	CKSRYB104K16
	C 210	(B,33,43)	CKSSYB104K10
	C 211	(B,33,41)	CKSSYB104K10
C	C 212	(B,22,28)	CKSSYB104K10
	C 213	(B,18,26)	CKSSYB332K50
	C 214	(B,17,26)	CKSSYB473K16
	C 215	(B,19,28)	CKSSYB104K10
	C 216	(B,12,33)	CKSSYB182K50
	C 217	(B,10,34)	CCSSCH560J50
	C 218	(B,10,36)	CCSSCH4R0C50
	C 219	(B,14,34)	CKSSYB104K10
	C 220	(A,18,38)	CKSSYB104K10
	C 221	(B,14,32)	CKSSYB104K10
D	C 222	(B,13,37)	CKSSYB104K10
	C 223	(B,12,42)	CCSSCH680J50
	C 224	(B,13,45)	CCSSCH470J50
	C 225	(B,13,46)	CKSSYB103K16
	C 228	(B,10,33)	CCSSCH270J50
	C 229	(B,9,40)	CKSSYB104K10
	C 233	(B,32,46)	CKSSYB103K16
	C 236	(B,8,40)	CKSSYB104K10
	C 238	(A,25,44)	CKSRYB104K16
	C 299	(A,26,41)	CKSSYB104K10
E	C 302	(B,28,12)	CKSSYB102K50
	C 303	(B,29,12)	CKSSYB102K50
	C 304	(B,27,12)	CKSSYB223K16
	C 305	(B,26,12)	CKSSYB104K10
	C 306	(A,31,7)	CKSSYB104K10
	C 307	(A,41,19)	CKSRYB105K10
	C 308	(A,31,15)	CKSRYB105K10
	C 710	(A,34,42)	CKSSYB102K50