



EXPLODED VIEW (CD MECHANISM)

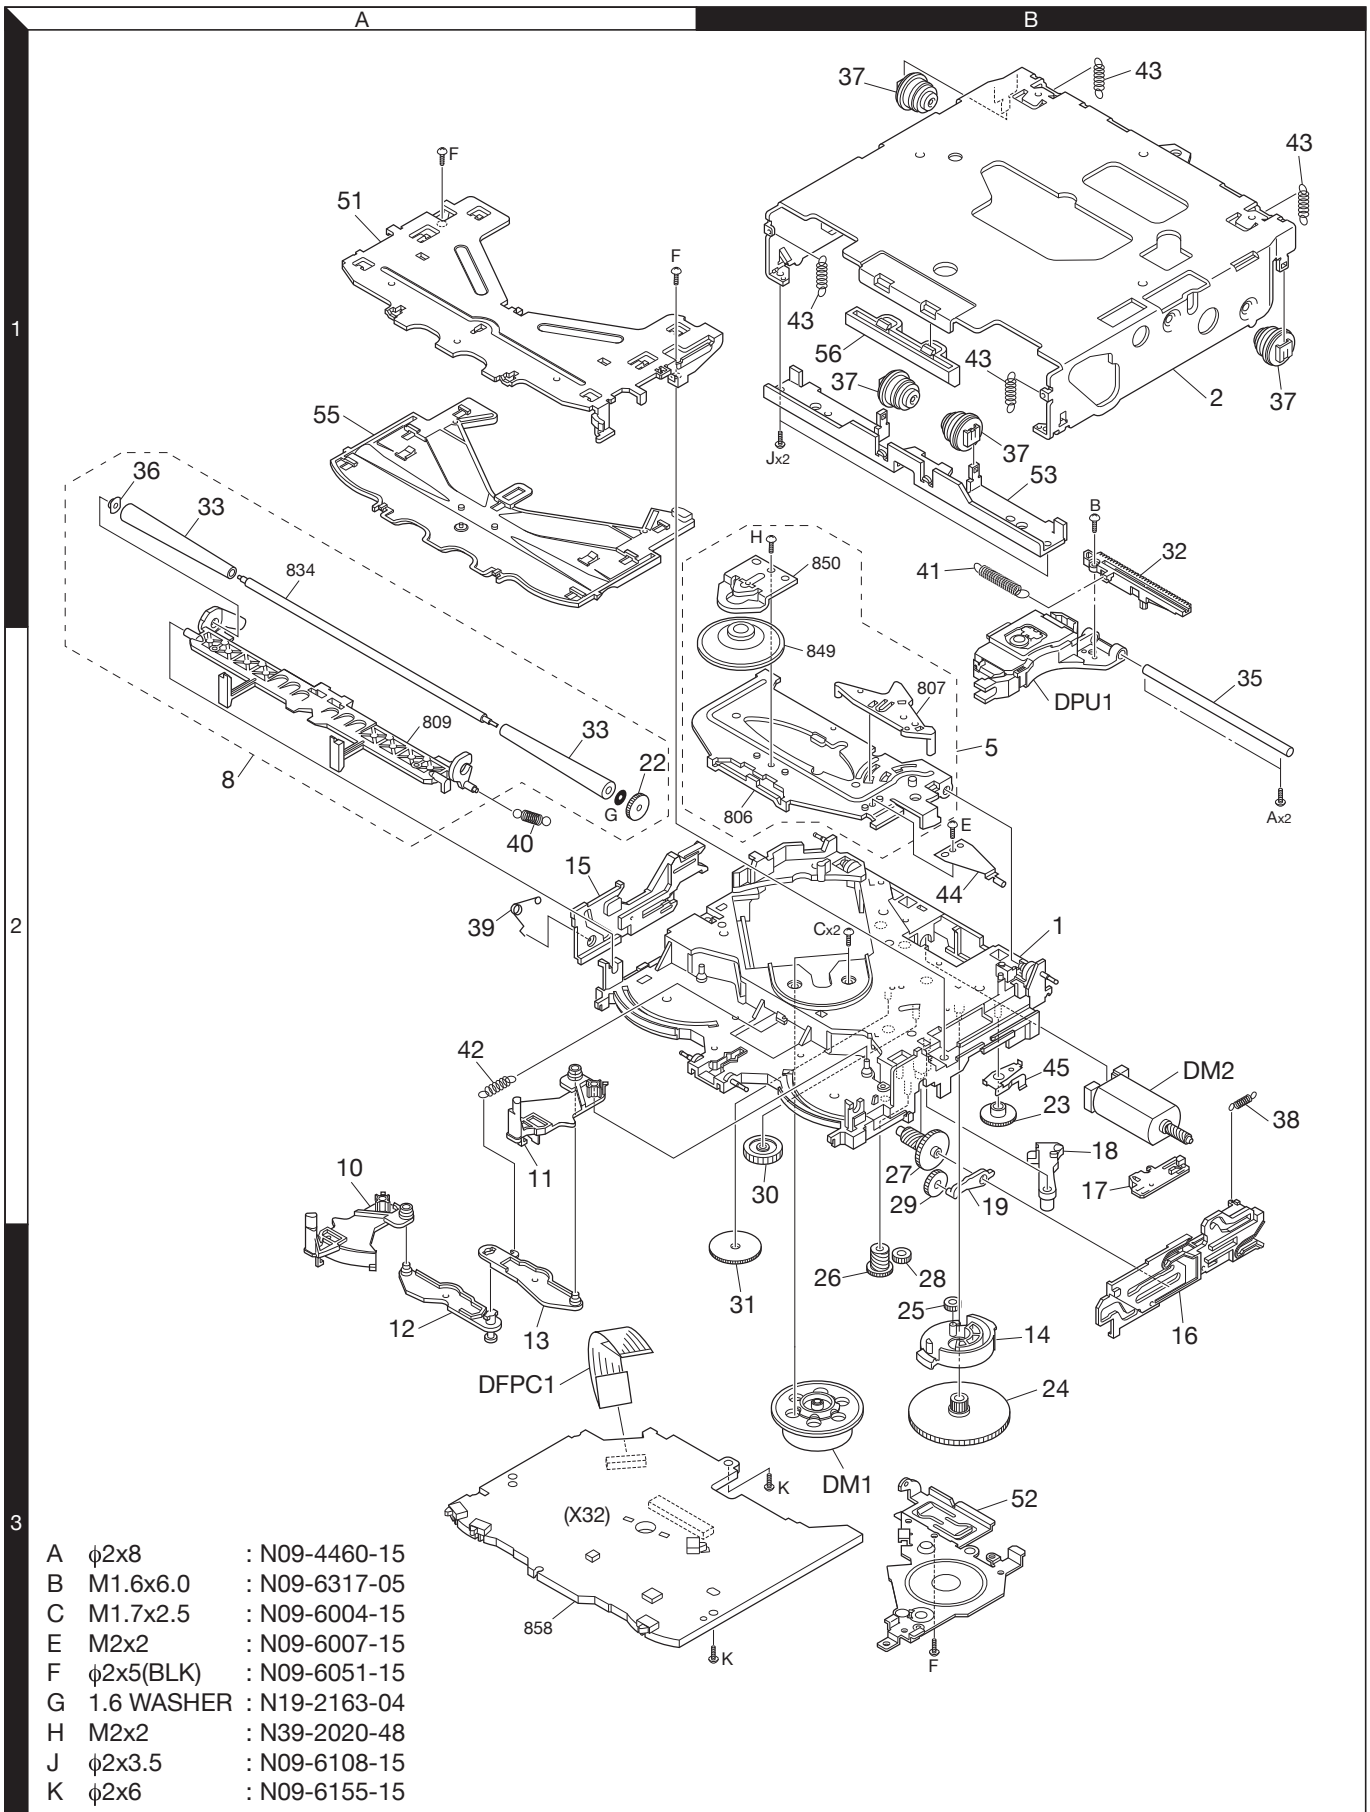

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

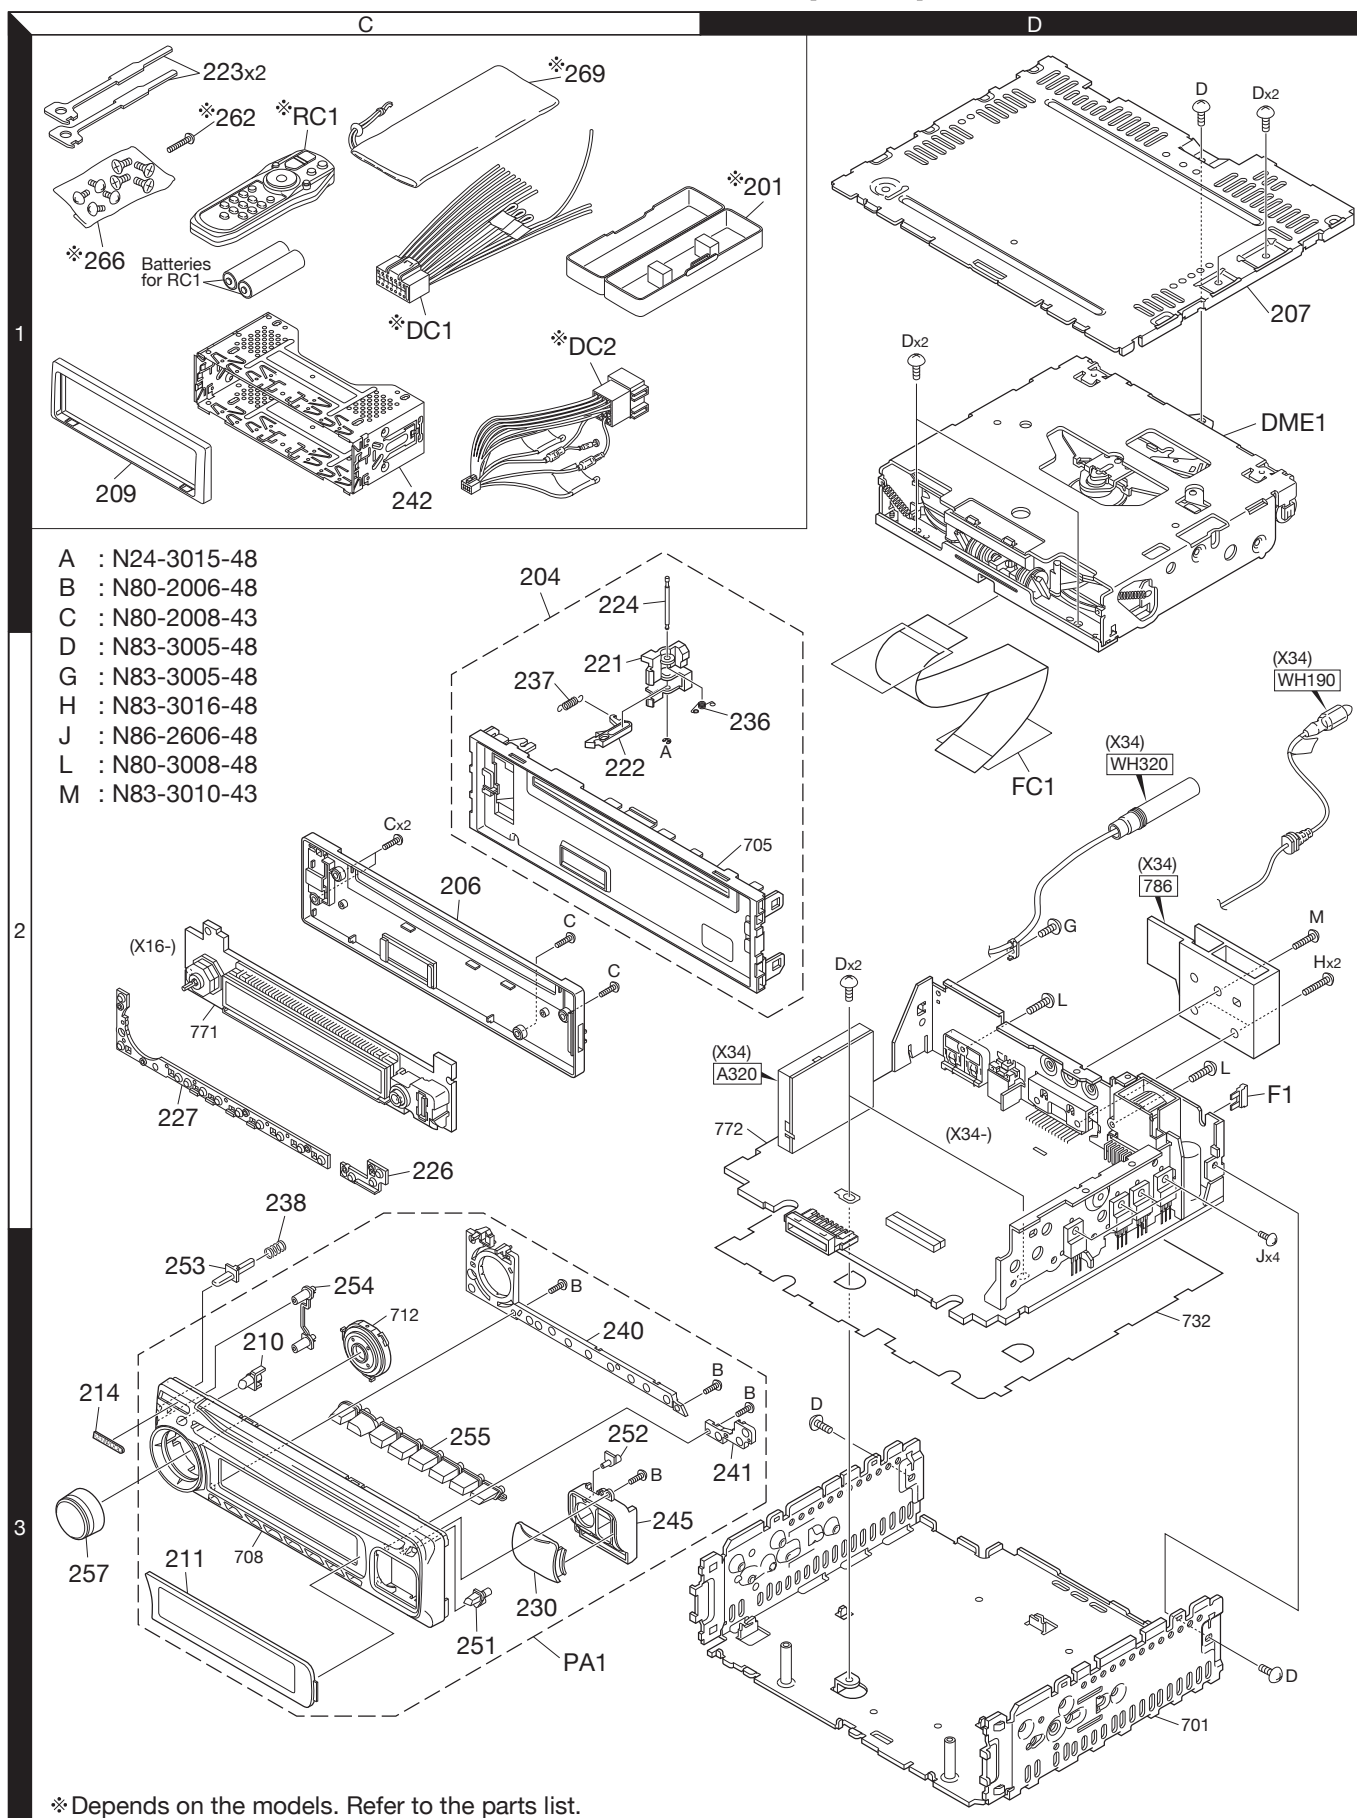

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP408U/438U/MP5039U/MP5539U/X492/ W5041xx/W5141xxx/W5541U/W5641UY						△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
201	1D	*	A02-2755-13	PLASTIC CABINET ASSY	M1M2	236	2D		G01-2987-04	TORSION COIL SPRING	
204	1C	*	A22-3158-03	SUB PANEL ASSY		237	2C	*	G01-4662-04	EXTENSION SPRING	
206	2C	*	A46-1864-01	REAR COVER		238	2C		G01-3244-04	COMPRESSION SPRING (REL)	
207	1D	*	A52-0897-02	TOP PLATE		-		*	H54-4263-03	ITEM CARTON CASE	K1
PA1	3C	*	A64-4398-02	PANEL ASSY	K1	-		*	H54-4264-03	ITEM CARTON CASE	K2
PA1	3C	*	A64-4399-02	PANEL ASSY	K2	-		*	H54-4265-03	ITEM CARTON CASE	K3
PA1	3C	*	A64-4400-02	PANEL ASSY	K3	-		*	H54-4266-03	ITEM CARTON CASE	M1
PA1	3C	*	A64-4401-02	PANEL ASSY	M1	-		*	H54-4267-03	ITEM CARTON CASE	M2
PA1	3C	*	A64-4402-02	PANEL ASSY	M2	-		*	H54-4268-03	ITEM CARTON CASE	E1
PA1	3C	*	A64-4403-02	PANEL ASSY	E1	-		*	H54-4269-03	ITEM CARTON CASE	E2
PA1	3C	*	A64-4404-02	PANEL ASSY	E2E3	-		*	H54-4270-03	ITEM CARTON CASE	E3
PA1	3C	*	A64-4405-02	PANEL ASSY	E4	-		*	H54-4271-03	ITEM CARTON CASE	E4
PA1	3C	*	A64-4406-02	PANEL ASSY	E5E6	-		*	H54-4272-03	ITEM CARTON CASE	E5
RC1	1C		A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	K1K2K3	-		*	H54-4273-03	ITEM CARTON CASE	E6
RC1	1C		A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	M1M2E4	240	3C	*	J19-7192-02	HOLDER (PRESET)	
RC1	1C		A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	E5E6	241	3D	*	J19-7193-03	HOLDER (EJECT/RESET)	
-		*	B64-3955-00	INST. MANUAL (ENG.FRE.SPA.)	K1K2K3	242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
-		*	B64-3956-00	INST. MANUAL (ENG.S-CHI.)	M1M2	245	3C	*	J90-1162-02	GUIDE	
-		*	B64-3957-00	INST. MANUAL (ARABIC)	M1M2	251	3C	*	K24-4798-04	PUSH KNOB (EJECT)	
-		*	B64-3958-00	INST. MANUAL (ENGLISH)	E1E2E3	252	3C	*	K24-4799-04	PUSH KNOB (RESET)	
-		*	B64-3958-00	INST. MANUAL (ENGLISH)	E4E5E6	253	3C	*	K24-4800-04	PUSH KNOB (RELEASE)	
-		*	B64-3959-00	INST. MANUAL (FRE.GER.DUT.)	E1E2E3	254	3C	*	K25-1917-03	PUSH KNOB (AME/DSP)	
-		*	B64-3960-00	INST. MANUAL (ITA.SPA.POR.)	E1E2E3	255	3C	*	K25-1918-02	PUSH KNOB (PRESET)	
-		*	B64-3961-00	INST. MANUAL (RUSSIAN)	E4E5E6	257	3C	*	K28-0280-04	KNOB ASSY (VOL)	
209	1C	*	B07-3244-01	ESCUTCHEON	K2K3E1	262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	K1K2K3
209	1C	*	B07-3244-01	ESCUTCHEON	E2E3E4	262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	M1M2
209	1C	*	B07-3244-01	ESCUTCHEON	E5E6	266	1C	*	N99-1757-15	SCREW SET	K1K2K3
210	3C	*	B10-5047-04	FRONT GLASS (REMOTE)	K1M1M2	266	1C	*	N99-1757-15	SCREW SET	M1M2
211	3C	*	B10-5061-01	FRONT GLASS	K1	A	2C		N24-3015-48	E TYPE RETAINING RING	
211	3C	*	B10-5062-01	FRONT GLASS	K2	B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
211	3C	*	B10-5063-01	FRONT GLASS	K3	C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
211	3C	*	B10-5064-01	FRONT GLASS	M1	D	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
211	3C	*	B10-5065-01	FRONT GLASS	M2	269	1C		W01-1664-05	CARRYING CASE	K1
211	3C	*	B10-5066-01	FRONT GLASS	E1	269	1C	*	W01-1710-05	CARRYING CASE	K2K3E1
211	3C	*	B10-5067-01	FRONT GLASS	E2E3	269	1C	*	W01-1710-05	CARRYING CASE	E2E3E4
211	3C	*	B10-5068-01	FRONT GLASS	E4	269	1C	*	W01-1710-05	CARRYING CASE	E5E6
211	3C	*	B10-5069-01	FRONT GLASS	E5E6	DME1	1D	*	X92-6130-00	MECHANISM ASSY (DXM-6E20W)	
214	3C		B43-1518-04	BADGE		SWITCH UNIT (X16-622x-xx)					
221	2C		D10-4446-03	LEVER		D1-12			B30-1779-05	LED (1608,SR)	K2K3E2
222	2C		D10-4447-03	LEVER		D1-12			B30-1779-05	LED (1608,SR)	E5
223	1C	*	D10-7012-04	LEVER		D1-12			B30-1780-05	LED (1608,PG)	E3E6
224	1C		D21-2329-04	SHAFT		D1-12			B30-1781-05	LED (1608,BLUE)	K1M1M2
226	2C	*	E29-2117-03	CONDUCTIVE RUBBER (EJECT)		D1-12			B30-1781-05	LED (1608,BLUE)	E1E4
227	2C	*	E29-2118-02	CONDUCTIVE RUBBER (PRESET)		D16			B30-1779-05	LED (1608,SR)	
△ DC1	1C		E30-6428-05	DC CORD	K1K2K3	D21-23			B30-1779-05	LED (1608,SR)	E2E5
△ DC1	1C		E30-6428-05	DC CORD	M1M2	D21-23			B30-1781-05	LED (1608,BLUE)	K1K2K3
△ DC2	1C		E30-6671-05	DC CORD	E1E2E3	D21-23			B30-1781-05	LED (1608,BLUE)	M1M2E1
△ DC2	1C		E30-6671-05	DC CORD	E4E5E6	D21-23			B30-1781-05	LED (1608,BLUE)	E4
FC1	2D	*	E39-0981-05	FLAT CABLE		D21-27			B30-1780-05	LED (1608,PG)	E3E6
230	3C	*	F07-1194-02	COVER		D27			B30-1779-05	LED (1608,SR)	E2E5

K1 : KDC-X492 **K2** : KDC-MP438U **K3** : KDC-MP408U **M1** : KDC-MP5539U
M2 : KDC-MP5039U **E1** : KDC-W5541U **E2** : KDC-W5041UA **E3** : KDC-W5041UG
E4 : KDC-W5641UY **E5** : KDC-W5141UAY **E6** : KDC-W5141UGY

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-622x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D27			B30-1781-05	LED (1608,BLUE)	K1K2K3
D27			B30-1781-05	LED (1608,BLUE)	M1M2E1
D27			B30-1781-05	LED (1608,BLUE)	E4
D115,116			B30-1779-05	LED (1608,SR)	E2E5
D115,116			B30-1781-05	LED (1608,BLUE)	K1K2K3
D115,116			B30-1781-05	LED (1608,BLUE)	M1M2E1
D115,116			B30-1781-05	LED (1608,BLUE)	E4
C8			CK73GB1A105K	CHIP C 1.0UF K	
C10			CK73GB1C104K	CHIP C 0.10UF K	
C28			CC73GCH1H102J	CHIP C 1000PF J	
C29			CC73GCH1H471J	CHIP C 470PF J	
C31			CK73GB1C104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1		*	E59-0854-05	RECTANGULAR PLUG	
J3		*	E11-0654-05	3.5D PHONE JACK	
J4			E58-1062-05	RECTANGULAR RECEPTACLE	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
R2			RK73GB2A221J	CHIP R 220 J 1/10W	
R5			RK73GB2A221J	CHIP R 220 J 1/10W	
R7			RK73GB2A221J	CHIP R 220 J 1/10W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	
R15			RK73GB2A101J	CHIP R 100 J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R51-54			RK73FB2B621J	CHIP R 620 J 1/8W	K2K3
R51-55			RK73FB2B271J	CHIP R 270 J 1/8W	K1M1M2
R51-55			RK73FB2B271J	CHIP R 270 J 1/8W	E1E4
R51-55			RK73FB2B561J	CHIP R 560 J 1/8W	E3E6
R51-55			RK73FB2B621J	CHIP R 620 J 1/8W	E2E5
R55			RK73FB2B271J	CHIP R 270 J 1/8W	K2K3
R56			RK73EB2E821J	CHIP R 820 J 1/4W	E3E6
R60			RK73EB2E271J	CHIP R 270 J 1/4W	K1K2K3
R60			RK73EB2E271J	CHIP R 270 J 1/4W	M1M2E1
R60			RK73EB2E271J	CHIP R 270 J 1/4W	E4
R60			RK73EB2E621J	CHIP R 620 J 1/4W	E2E5
R60			RK73EB2E821J	CHIP R 820 J 1/4W	E3E6
R74,75			RK73PB2H300J	CHIP R 30 J 1/2W	
R80			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R81			RK73GB2A223J	CHIP R 22K J 1/10W	
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
R113			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R117,118			RK73GB2A103J	CHIP R 10K J 1/10W	
S1		*	S70-0947-05	TACT SWITCH	
D104			UDZW5.6(B)	ZENER DIODE	
ED1		*	3-BT-259INK	FLUORESCENT INDICATOR TUBE	
IC2			PIC95603	ANALOGUE IC	
Q5			2SC4617	TRANSISTOR	
Q20			RT1N441U	TRANSISTOR	
Q21			RT1P141U	TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q22-24			DTA123JUA	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-6130-00) IN CD MECHA					
C20			CC73GCH1H330J	CHIP C 33PF J	
C23			CC73GCH1H151J	CHIP C 150PF J	
C24			CK73FB1A225K	CHIP C 2.2UF K	
C25			CK73GB1A105K	CHIP C 1.0UF K	
C26			CK73GB1H153K	CHIP C 0.015UF K	
C27			CC73GCH1H470J	CHIP C 47PF J	
C30-32			CK73GB1H103K	CHIP C 0.010UF K	
C33			CK73GB1H332K	CHIP C 3300PF K	
C34			CK73GB1H104K	CHIP C 0.10UF K	
C35			CK73GB1H153K	CHIP C 0.015UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C38			CC73GCH1H680J	CHIP C 68PF J	
C39			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB1A105K	CHIP C 1.0UF K	
C44			CK73GB1H104K	CHIP C 0.10UF K	
C45			CK73GB1H332K	CHIP C 3300PF K	
C46			CK73GB1H103K	CHIP C 0.010UF K	
C47,48			CK73GB1H333K	CHIP C 0.033UF K	
C49,50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H222K	CHIP C 2200PF K	
C52,53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CK73GB1A105K	CHIP C 1.0UF K	
C58			CK73GB1A105K	CHIP C 1.0UF K	
C60			CK73EB0J226K	CHIP C 22UF K	
C61-64			CK73GB1H104K	CHIP C 0.10UF K	
C66			CK73FB1C105K	CHIP C 1.0UF K	
C68,69			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73FB0J106K	CHIP C 10UF K	
C87,88			CK73GB1H332K	CHIP C 3300PF K	
C89-91			CK73GB1H104K	CHIP C 0.10UF K	
C94,95			CK73GB1A105K	CHIP C 1.0UF K	
C96			CK73GB1H103K	CHIP C 0.010UF K	
C97			CK73GB1H104K	CHIP C 0.10UF K	
C101			CK73GB1C224K	CHIP C 0.22UF K	
C102			CK73GB1A474K	CHIP C 0.47UF K	
C103			CK73GB1H153K	CHIP C 0.015UF K	
C104			CK73FB1A225K	CHIP C 2.2UF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2630-05	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R20			RK73GB2A184J	CHIP R 180K J 1/10W	
R27			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A224J	CHIP R 220K J 1/10W	
R32			RK73GB2A181J	CHIP R 180 J 1/10W	
R33			RK73GB2A153J	CHIP R 15K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	

K1 : KDC-X492 K2 : KDC-MP438U K3 : KDC-MP408U M1 : KDC-MP5539U
M2 : KDC-MP5039U E1 : KDC-W5541U E2 : KDC-W5041UA E3 : KDC-W5041UG
E4 : KDC-W5641UY E5 : KDC-W5141UAY E6 : KDC-W5141UGY

△Indicates safety critical compo nents.

PARTS LIST

CD PLAYER UNIT (X32-6130-00) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R36			RK73GB2A154J	CHIP R 150K J 1/10W		C10			CD04AT1A221M	ELECTRO 220UF 10WV	
R37			RK73GB2A334J	CHIP R 330K J 1/10W		C11			CK73GB1A105K	CHIP C 1.0UF K	
R38			RK73GB2A223J	CHIP R 22K J 1/10W		C12			CK73GB1C104K	CHIP C 0.10UF K	
R40			RK73GB2A114J	CHIP R 110K J 1/10W		C20			C90-6851-05	ELECTRO 220UF 25WV	
R41			RK73GB2A473J	CHIP R 47K J 1/10W		C22			CD04AS1V100M	ELECTRO 10UF 35WV	
R45			RK73GB2A221J	CHIP R 220 J 1/10W		C23			CD04AS0J101M	ELECTRO 100UF 6.3WV	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W		C25,26			CK73GB1A105K	CHIP C 1.0UF K	
R50			RK73GB2A560J	CHIP R 56 J 1/10W		C27			CD04AS0J470M	ELECTRO 47UF 6.3WV	
R51			RK73EB2E220J	CHIP R 22 J 1/4W		C30			CK73GB1A447K	CHIP C 0.47UF K	
R52			RK73EB2E100J	CHIP R 10 J 1/4W		C31			CD04AS1C101M	ELECTRO 100UF 16WV	
R55			RK73GB2A103J	CHIP R 10K J 1/10W		C40			CK73GB1C104K	CHIP C 0.10UF K	
R59			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		C42			CD04AS1C220M	ELECTRO 22UF 16WV	
R60,61			RK73GB2A103J	CHIP R 10K J 1/10W		C51			CD04AS1V100M	ELECTRO 10UF 35WV	
R82,83			RK73GB2A331J	CHIP R 330 J 1/10W		C60			CD04BK1E101M	ELECTRO 100UF 25WV	
R207			RK73EB2E000J	CHIP R 0.0 J 1/4W		C61			CK73GB1C104K	CHIP C 0.10UF K	
R216,217			RK73GB2A103J	CHIP R 10K J 1/10W		C62			CD04BK1A221M	ELECTRO 220UF 10WV	
R221,222			RK73GB2A101J	CHIP R 100 J 1/10W		C64			CK73GB1C104K	CHIP C 0.10UF K	
R226			RK73GB2A101J	CHIP R 100 J 1/10W		C65			CK73GB1H222K	CHIP C 2200PF K	
R228-230			RK73GB2A101J	CHIP R 100 J 1/10W		C67			CD04BK1A221M	ELECTRO 220UF 10WV	
R231			RK73GB2A473J	CHIP R 47K J 1/10W		C68,69			CK73GB1H102K	CHIP C 1000PF K	
R232			RK73GB2A104J	CHIP R 100K J 1/10W		C100			CD04AS1E470M	ELECTRO 47UF 25WV	K1
R233			RK73GB2A331J	CHIP R 330 J 1/10W		C101			CD04AS1C220M	ELECTRO 22UF 16WV	K1
R240			RK73EB2E000J	CHIP R 0.0 J 1/4W		C102			CD04AS1C470M	ELECTRO 47UF 16WV	K1
R241			RK73GB2A104J	CHIP R 100K J 1/10W		C103			CK73GB1H102K	CHIP C 1000PF K	K1
R243			RK73GB2A472J	CHIP R 4.7K J 1/10W		C122			CK73GB1H103K	CHIP C 0.010UF K	
R244			RK73GB2A225J	CHIP R 2.2M J 1/10W		C140			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
R246			RK73GB2A104J	CHIP R 100K J 1/10W		C141			CK73GB1A105K	CHIP C 1.0UF K	
R247			RK73GB2A101J	CHIP R 100 J 1/10W		C142			CK73GB1H104K	CHIP C 0.10UF K	
R252			RK73GB2A102J	CHIP R 1.0K J 1/10W		C160			CK73GB1H103K	CHIP C 0.010UF K	
R257-261			RK73GB2A101J	CHIP R 100 J 1/10W		C170			CK73GB1A105K	CHIP C 1.0UF K	
R262-264			RK73GB2A472J	CHIP R 4.7K J 1/10W		C171			CK73GB1H223K	CHIP C 0.022UF K	
R280			RK73GB2A103J	CHIP R 10K J 1/10W		C230			CK73GB1C104K	CHIP C 0.10UF K	
R281,282			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		C232			CK73GB1C104K	CHIP C 0.10UF K	
R284,285			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		C233			CD04BK1A221M	ELECTRO 220UF 10WV	
R287			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		C300,301			CC73GCH1H220J	CHIP C 22PF J	E1E2E3
R288			RK73GB2A302J	CHIP R 3.0K J 1/10W		C300,301			CC73GCH1H220J	CHIP C 22PF J	E4E5E6
R289			RK73GB2A103J	CHIP R 10K J 1/10W		C303			CK73GB1H103K	CHIP C 0.010UF K	E1E2E3
S1,2			S68-0863-05	PUSH SWITCH		C303			CK73GB1H103K	CHIP C 0.010UF K	E4E5E6
S3			S68-0862-05	PUSH SWITCH		C305			CK73GB1C104K	CHIP C 0.10UF K	E1E2E3
D2			DAP202U	DIODE		C305			CK73GB1C104K	CHIP C 0.10UF K	E4E5E6
D3,4			DA204U	DIODE		C306			CK73FB1A225K	CHIP C 2.2UF K	E1E2E3
IC3		*	BD8222EFV	ANALOGUE IC		C306			CK73FB1A225K	CHIP C 2.2UF K	E4E5E6
IC4		*	TC94A70FG-010	MOS-IC		C307			CC73GCH1H331J	CHIP C 330PF J	E1E2E3
IC5			S-1132B15U5T1G	ANALOGUE IC		C307			CC73GCH1H331J	CHIP C 330PF J	E4E5E6
IC6			S-1132B33U5T1G	ANALOGUE IC		C318			CD04AS1C470M	ELECTRO 47UF 16WV	K1
IC11		*	XC6218S152MR	MOS-IC		C320-323			CK73GB1H103K	CHIP C 0.010UF K	
Q1			2SB0970	TRANSISTOR		C400,401			CD04AS1V100M	ELECTRO 10UF 35WV	
Q13			DTC114YUA	DIGITAL TRANSISTOR		C402,403			CK73GB1H102K	CHIP C 1000PF K	
ELECTRIC UNIT (X34-577x-xx)						C410,411			CD04AS1V100M	ELECTRO 10UF 35WV	K1K2M1
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	K2K3M1	C410,411			CD04AS1V100M	ELECTRO 10UF 35WV	M2
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	M2E1E2	C412,413			CK73GB1H102K	CHIP C 1000PF K	K1K2M1
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	E3E4E5	C412,413			CK73GB1H102K	CHIP C 1000PF K	M2
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	E6	C420,421			CD04AS1V100M	ELECTRO 10UF 35WV	K1K2
C1			C90-6746-05	ELECTRO 3300UF 16WV	K1	C422,423			CK73GB1H102K	CHIP C 1000PF K	K1K2
						C440			CK73FB1E474K	CHIP C 0.47UF K	

K1 : KDC-X492 **K2** : KDC-MP438U **K3** : KDC-MP408U **M1** : KDC-MP5539U
M2 : KDC-MP5039U **E1** : KDC-W5541U **E2** : KDC-W5041UA **E3** : KDC-W5041UG
E4 : KDC-W5641UY **E5** : KDC-W5141UAY **E6** : KDC-W5141UGY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-577x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C441 C442 C443 C445 C446			CD04AT0J470M CK73FB1E474K CK73GB1H103K CK73FB1E474K CE32BJ0J470M	ELECTRO 47UF 6.3WV CHIP C 0.47UF K CHIP C 0.010UF K CHIP C 0.47UF K CHIP EL 47UF 6.3WV		△ J1 J400 J400 J400 J400		*	E58-0991-05 E63-0953-05 E63-0954-05 E63-0955-05 E63-0955-05	RECTANGULAR RECEPTACLE PIN JACK PIN JACK PIN JACK PIN JACK	K1K2 M1M2 K3E1E2 E3E4E5
C447 C448 C478,479 C480,481 C482,483			CK73FB1E474K CK73GB1H103K CK73GB1A474K CD04AS1H2R2M CK73GB1A105K	CHIP C 0.47UF K CHIP C 0.010UF K CHIP C 0.47UF K ELECTRO 2.2UF 50WV CHIP C 1.0UF K		J400 J440 J660 W320 WH190		*	E63-0955-05 E56-0855-05 E58-1095-05 E30-6803-05 E30-6706-05	PIN JACK CYLINDRICAL RECEPTACLE RECTANGULAR RECEPTACLE CORD WITH PLUG WIRING HARNESS (REMOTE)	E6
C486-488 C489-491 C492,493 C494 C495			CK73GB1A105K CD04AS1H2R2M CK73GB1A105K CK73GB1H103K CD04AS1V100M	CHIP C 1.0UF K ELECTRO 2.2UF 50WV CHIP C 1.0UF K CHIP C 0.010UF K ELECTRO 10UF 35WV	K2K3M1	△ L1 L60 L600 L704 X300		*	L33-2365-05 L33-2456-05 L41-4795-33 L41-4795-33 L77-2002-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (4.7UH) CRYSTAL RESONATOR	E1E2E3
C495 C495 C495 C496 C500-503			CD04AS1V100M CD04AS1V100M CD04AS1V100M CD04AS1C470M CK73GB1A224K	ELECTRO 10UF 35WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV ELECTRO 47UF 16WV CHIP C 0.22UF K	M2E1E2 E3E4E5 E6	X300 X600 X601 X700 X701		*	L77-2002-05 L77-2921-05 L78-0872-05 L77-2921-05 L77-2964-05	CRYSTAL RESONATOR CRYSTAL RESONATOR (32.768KHZ) RESONATOR (12MHZ) CRYSTAL RESONATOR (32.768KHZ) CRYSTAL RESONATOR (9.00MHZ)	E4E5E6
C504 C506,507 C508 C508 C508			C90-6711-05 CK73GB1A105K CD04AS1A330M CD04AS1A330M CD04AS1A330M	ELECTRO 1UF 50WV CHIP C 1.0UF K ELECTRO 33UF 10WV ELECTRO 33UF 10WV ELECTRO 33UF 10WV	K3M1M2 E1E2E3 E4E5E6	X750 X750			L77-2921-05 L77-2921-05	CRYSTAL RESONATOR (32.768KHZ) CRYSTAL RESONATOR (32.768KHZ)	K1K2M1 E1E4
C508 C520-527 C520-527 C600 C601			CD04AS1V100M CK73GB1H392K CK73GB1H392K CC73GCH1H220J CC73GCH1H180J	ELECTRO 10UF 35WV CHIP C 3900PF K CHIP C 3900PF K CHIP C 22PF J CHIP C 18PF J	K1K2 E1E2E3 E4E5E6	G H J L M	2D 2D 3D 2D 2D	*	N83-3005-48 N83-3016-48 N86-2606-48 N80-3008-48 N83-3010-43	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW	
C602 C603,604 C606,607 C611 C612			CK73GB1C104K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H102K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 1000PF K		CP440,441 CP603-605 CP606 CP607 CP608			RK74GA1J101J RK74GB1J101J RK74GA1J101J RK74GA1J472J RK74GA1J101J	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 100 J 1/16W	
C613,614 C616 C660 C680,681 C701			CK73GB1H103K CK73GB1A105K CK73GB1H102K CK73GB1H103K CK73GB1H103K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.010UF K		R10 R11 R12 R20 R21			RK73GH2A432D RK73GH2A243D RK73FB2B221J RK73FB2B123J RK73GB2A223J	CHIP R 4.3K D 1/10W CHIP R 24K D 1/10W CHIP R 220 J 1/8W CHIP R 12K J 1/8W CHIP R 22K J 1/10W	
C702 C703 C704-706 C708-710 C711,712			CC73GCH1H220J CC73GCH1H180J CK73GB1H103K CK73GB1H103K CC73GCH1H150J	CHIP C 22PF J CHIP C 18PF J CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 15PF J		R22 R30 R31 R40 R41			RK73FB2B822J RK73FB2B152J RK73GB2A104J RK73FB2B182J RK73GB2A473J	CHIP R 8.2K J 1/8W CHIP R 1.5K J 1/8W CHIP R 100K J 1/10W CHIP R 1.8K J 1/8W CHIP R 47K J 1/10W	
C713-715 C716,717 C718 C750,751 C750,751			CK73GB1H103K CK73FB0J106K CK73GB0J105K CC73GCH1H050C CC73GCH1H050C	CHIP C 0.010UF K CHIP C 10UF K CHIP C 1.0UF K CHIP C 5.0PF C CHIP C 5.0PF C	K1K2M1 E1E4	R50 R60 R61 R62 R63			RK73FB2B681J RK73GB2A683J RK73GB2A104J RK73GH2A623D RK73GH2A153D	CHIP R 680 J 1/8W CHIP R 68K J 1/10W CHIP R 100K J 1/10W CHIP R 62K D 1/10W CHIP R 15K D 1/10W	
C752 C752 C754,755			CK73GB1C104K CK73GB1C104K CK73GB1H102K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1000PF K	K1K2M1 E1E4	R64 R65,66 R100 R101 R103			RK73EB2E100J RK73PB2H300J RK73PB2H220J RK73GB2A221J RK73GB2A102J	CHIP R 10 J 1/4W CHIP R 30 J 1/2W CHIP R 22 J 1/2W CHIP R 220 J 1/10W CHIP R 1.0K J 1/10W	K1 K1 K1
CN680			E41-2358-05	FLAT CABLE CONNECTOR		R104 R105			RK73FB2B102J RK73GB2A102J	CHIP R 1.0K J 1/8W CHIP R 1.0K J 1/10W	K1 K1

K1 : KDC-X492 K2 : KDC-MP438U K3 : KDC-MP408U M1 : KDC-MP5539U
M2 : KDC-MP5039U E1 : KDC-W5541U E2 : KDC-W5041UA E3 : KDC-W5041UG
E4 : KDC-W5641UY E5 : KDC-W5141UAY E6 : KDC-W5141UGY

△Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-577x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R106			RK73GB2A513J	CHIP R 51K J 1/10W	K1	R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	M2
R107			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	K1	R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	K1K2M1
R108			RK73GB2A332J	CHIP R 3.3K J 1/10W	K1	R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	M2
R109			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K1	R420,421			RK73GB2A331J	CHIP R 330 J 1/10W	K1K2
R110			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1	R422,423			RK73GB2A223J	CHIP R 22K J 1/10W	K1K2
R111			RK73GB2A473J	CHIP R 47K J 1/10W	K1	R424,425			RK73FB2B181J	CHIP R 180 J 1/8W	K1K2
R112			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1	R440			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R113			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1	R441,442			RK73EB2E101J	CHIP R 100 J 1/4W	
R114			RK73GB2A101J	CHIP R 100 J 1/10W	K1	R443			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R120,121			RK73GB2A103J	CHIP R 10K J 1/10W		R444,445			RK73EB2E101J	CHIP R 100 J 1/4W	
R126			RK73GB2A183J	CHIP R 18K J 1/10W		R446			RK73EB2E100J	CHIP R 10 J 1/4W	
R127			RK73FB2B203J	CHIP R 20K J 1/8W		R447			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R128			RK73GB2A104J	CHIP R 100K J 1/10W		R448			RK73EB2E100J	CHIP R 10 J 1/4W	
R129			RK73EB2E473J	CHIP R 47K J 1/4W		R449,450			RK73EB2E101J	CHIP R 100 J 1/4W	
R130			RK73EB2E102J	CHIP R 1.0K J 1/4W		R451			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W		R454,455			RK73GB2A101J	CHIP R 100 J 1/10W	
R132			RK73FB2B683J	CHIP R 68K J 1/8W		R456,457			RK73GB2A104J	CHIP R 100K J 1/10W	
R133			RK73EB2E102J	CHIP R 1.0K J 1/4W		R458			RK73GB2A101J	CHIP R 100 J 1/10W	
R140			RK73FB2B472J	CHIP R 4.7K J 1/8W		R459,460			RK73GB2A104J	CHIP R 100K J 1/10W	
R141		*	RK73PB2H561J	CHIP R 560 J 1/2W		R461			RK73GB2A101J	CHIP R 100 J 1/10W	
R142			RK73GB2A223J	CHIP R 22K J 1/10W		R462			RK73GB2A104J	CHIP R 100K J 1/10W	
R143-145		*	RK73PB2H561J	CHIP R 560 J 1/2W		R464			RK73EB2E100J	CHIP R 10 J 1/4W	
R150			RK73GB2A223J	CHIP R 22K J 1/10W	K1K2K3	R465			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R150			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2	R466			RK73EB2E100J	CHIP R 10 J 1/4W	
R151,152			RK73PB2H221J	CHIP R 220 J 1/2W	K1K2K3	R467			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R151,152			RK73PB2H221J	CHIP R 220 J 1/2W	M1M2	R480,481			RK73GB2A101J	CHIP R 100 J 1/10W	
R153			RK73FB2B472J	CHIP R 4.7K J 1/8W		R482,483			RK73GB2A103J	CHIP R 10K J 1/10W	
R160			RK73GB2A473J	CHIP R 47K J 1/10W		R484			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R161			RK73GB2A104J	CHIP R 100K J 1/10W		R505			RK73GB2A333J	CHIP R 33K J 1/10W	K3M1M2
R162			RK73EB2E103J	CHIP R 10K J 1/4W		R505			RK73GB2A333J	CHIP R 33K J 1/10W	E1E2E3
R170			RK73GB2A104J	CHIP R 100K J 1/10W		R505			RK73GB2A333J	CHIP R 33K J 1/10W	E4E5E6
R171			RK73EB2E103J	CHIP R 10K J 1/4W		R505,506			RK73GB2A473J	CHIP R 47K J 1/10W	K1K2
R190			RK73EB2E102J	CHIP R 1.0K J 1/4W		R506			RK73GB2A223J	CHIP R 22K J 1/10W	K3M1M2
R230			RK73GB2A223J	CHIP R 22K J 1/10W		R506			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2E3
R300-302			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2E3	R506			RK73GB2A223J	CHIP R 22K J 1/10W	E4E5E6
R300-302			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4E5E6	R508			RK73GB2A331J	CHIP R 330 J 1/10W	
R303			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2E3	R509			RK73GB2A133J	CHIP R 13K J 1/10W	K3M1M2
R303			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4E5E6	R509			RK73GB2A133J	CHIP R 13K J 1/10W	E1E2E3
R305			RK73GB2A512J	CHIP R 5.1K J 1/10W	E1E2E3	R509			RK73GB2A133J	CHIP R 13K J 1/10W	E4E5E6
R305			RK73GB2A512J	CHIP R 5.1K J 1/10W	E4E5E6	R509			RK73GB2A153J	CHIP R 15K J 1/10W	K1K2
R306			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2E3	R511			RK73GB2A100J	CHIP R 10 J 1/10W	
R306			RK73GB2A223J	CHIP R 22K J 1/10W	E4E5E6	R513			RK73GB2A104J	CHIP R 100K J 1/10W	
R307			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2E3	R514			RK73FB2B332J	CHIP R 3.3K J 1/8W	K3M1M2
R307			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4E5E6	R514			RK73FB2B332J	CHIP R 3.3K J 1/8W	E1E2E3
R308,309			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2E3	R514			RK73FB2B332J	CHIP R 3.3K J 1/8W	E4E5E6
R308,309			RK73GB2A104J	CHIP R 100K J 1/10W	E4E5E6	R515			RK73GB2A473J	CHIP R 47K J 1/10W	K3M1M2
R321			RK73GB2A223J	CHIP R 22K J 1/10W		R515			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2E3
R322			RK73FB2B821J	CHIP R 820 J 1/8W		R515			RK73GB2A473J	CHIP R 47K J 1/10W	E4E5E6
R323,324			RK73GB2A471J	CHIP R 470 J 1/10W		R516			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R400,401			RK73GB2A331J	CHIP R 330 J 1/10W		R600			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R402,403			RK73GB2A223J	CHIP R 22K J 1/10W		R601			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R404,405			RK73FB2B181J	CHIP R 180 J 1/8W		R602			RK73GB2A104J	CHIP R 100K J 1/10W	
R410,411			RK73GB2A331J	CHIP R 330 J 1/10W	K1K2M1	R603,604			RK73GB2A103J	CHIP R 10K J 1/10W	
R410,411			RK73GB2A331J	CHIP R 330 J 1/10W	M2	R605			RK73GB2A104J	CHIP R 100K J 1/10W	
R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	K1K2M1	R606			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K1 : KDC-X492 K2 : KDC-MP438U K3 : KDC-MP408U M1 : KDC-MP5539U
M2 : KDC-MP5039U E1 : KDC-W5541U E2 : KDC-W5041UA E3 : KDC-W5041UG
E4 : KDC-W5641UY E5 : KDC-W5141UAY E6 : KDC-W5141UGY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-577x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R608,609 R610,611 R612,613 R614 R615			RK73GB2A473J RK73GB2A102J RK73GB2A472J RK73GB2A104J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W	
R617 R618 R619,620 R621 R622			RK73GB2A104J RK73GB2A471J RK73GB2A104J RK73GB2A471J RK73GB2A223J	CHIP R 100K J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W CHIP R 470 J 1/10W CHIP R 22K J 1/10W	
R623,624 R628 R629 R633,634 R636			RK73GB2A101J RK73GB2A101J RK73GB2A222J RK73GB2A392J RK73GB2A223J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 2.2K J 1/10W CHIP R 3.9K J 1/10W CHIP R 22K J 1/10W	K2M2E2
R636 R636 R636 R636-638 R637			RK73GB2A223J RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A473J	CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	E3E5E6 K1M1E1 E4 K3 M2
R637-639 R637,638 R638 R638 R638,639			RK73GB2A473J RK73GB2A473J RK73GB2A223J RK73GB2A473J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	E2E3 K2E5E6 M1M2 K1E4 E1
R639 R639 R640 R642 R643			RK73GB2A223J RK73GB2A473J RK73GB2A222J RK73GB2A104J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W	E4E5E6 M1M2
R644 R645 R647 R648 R649			RK73GB2A101J RK73GB2A473J RK73GB2A222J RK73GB2A473J RK73GB2A101J	CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W	
R650 R660 R661 R662 R663			RK73GB2A473J RK73EB2E102J RK73EB2E222J RK73EB2E101J RK73EB2E102J	CHIP R 47K J 1/10W CHIP R 1.0K J 1/4W CHIP R 2.2K J 1/4W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W	
R664 R665 R666,667 R668,669 R680			RK73EB2E101J RK73EB2E102J RK73EB2E101J RK73EB2E102J RK73GB2A223J	CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 22K J 1/10W	
R681 R683,684 R685 R686 R687			RK73GB2A101J RK73GB2A101J RK73GB2A223J RK73GB2A101J RK73GB2A223J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W	
R688,689 R700 R701 R704 R705			RK73GB2A101J RK73GB2A102J RK73GB2A101J RK73GB2A223J RK73GB2A101J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W	
R706 R707 R708 R709,710 R711			RK73GB2A223J RK73GB2A104J RK73GB2A101J RK73GB2A102J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W	
R713 R714 R715 R716-719 R720			RK73GB2A101J RK73GB2A223J RK73GB2A102J RK73GB2A101J RK73GB2A223J	CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W	
R721 R721 R721,722 R721,722 R723			RK73GB2A101J RK73GB2A101J RK73GB2A101J RK73GB2A101J RK73GB2A223J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W	K3M2E2 E3E5E6 K1K2M1 E1E4 K1K2M1
R723 R724 R725 R726 R727			RK73GB2A223J RK73GB2A101J RK73GB2A472J RK73GB2A000J RK73GB2A105J	CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 0.0 J 1/10W CHIP R 1.0M J 1/10W	E1E4
R728 R729 R730 R731 R732			RK73GB2A223J RK73GB2A330J RK73GB2A153J RK73GB2A330J RK73GB2A153J	CHIP R 22K J 1/10W CHIP R 33 J 1/10W CHIP R 15K J 1/10W CHIP R 33 J 1/10W CHIP R 15K J 1/10W	
R733 R734-737 R738 R739,740 R742			RK73GB2A472J RK73GB2A101J RK73GB2A223J RK73GB2A101J RK73GB2A101J	CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W	
R744-746 R747 R749 R750 R750			RK73GB2A101J RK73GB2A223J RK73GB2A223J RK73GB2A515J RK73GB2A515J	CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 5.1M J 1/10W CHIP R 5.1M J 1/10W	K1K2M1 E1E4
R751 R751 R752,753 R752,753 R754,755			RK73GB2A473J RK73GB2A473J RK73GB2A101J RK73GB2A101J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W	K1K2M1 E1E4 K1K2M1 E1E4 K1K2M1
R754,755 R756 R756 R757 R757			RK73GB2A473J RK73GB2A101J RK73GB2A101J RK73GB2A473J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	E1E4 K1K2M1 E1E4 K1K2M1 E1E4
R758 R758 R762-764 R762-764 R767			RK73GH2A104D RK73GH2A104D RK73GB2A473J RK73GB2A473J RK73GB2A223J	CHIP R 100K D 1/10W CHIP R 100K D 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W	K1K2M1 E1E4 K1K2M1 E1E4
R768 R768 W100 W100 W100			RK73GB2A333J RK73GB2A333J R92-2053-05 R92-2053-05 R92-2053-05	CHIP R 33K J 1/10W CHIP R 33K J 1/10W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W	K1K2M1 E1E4 K2K3M1 M2E1E2 E3E4E5

K1 : KDC-X492 K2 : KDC-MP438U K3 : KDC-MP408U M1 : KDC-MP5539U
M2 : KDC-MP5039U E1 : KDC-W5541U E2 : KDC-W5041UA E3 : KDC-W5041UG
E4 : KDC-W5641UY E5 : KDC-W5141UAY E6 : KDC-W5141UGY

△Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-577x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W100			R92-2053-05	CHIP R 0 OHM J 1/8W	E6	IC700		*	92CD28AFG	MICROCONTROLLER IC	
W140			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2E3	IC750			341S2094	MICROPROCESSOR IC	K1K2M1
W140			R92-1252-05	CHIP R 0 OHM J 1/16W	E4E5E6	IC750			341S2094	MICROPROCESSOR IC	E1E4
W321			R92-2053-05	CHIP R 0 OHM J 1/8W		Q10			KTA1046-P	TRANSISTOR	
W500			R92-1252-05	CHIP R 0 OHM J 1/16W	K3M1M2	Q11			KRA303-P	DIGITAL TRANSISTOR	
W500			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2E3	Q12			KRC403-P	DIGITAL TRANSISTOR	
W500			R92-1252-05	CHIP R 0 OHM J 1/16W	E4E5E6	Q20			KTA1046-P	TRANSISTOR	
W501,502			R92-1252-05	CHIP R 0 OHM J 1/16W	K1K2	Q21			2SC4081	TRANSISTOR	
W705			R92-1252-05	CHIP R 0 OHM J 1/16W		Q22			2SA1576A	TRANSISTOR	
						Q23			KRC403-P	DIGITAL TRANSISTOR	
D1			S2V60-5009F46	DIODE		Q30			KTA1046-P	TRANSISTOR	
D20			RB160L-40	DIODE		Q31			2SC4081	TRANSISTOR	
D21			UDZW5.6(B)	ZENER DIODE		Q32			KRA303-P	DIGITAL TRANSISTOR	
D30		*	UDZW8.2(B)	ZENER DIODE		Q33			KRC403-P	DIGITAL TRANSISTOR	
D40		*	UDZW12(B)	ZENER DIODE		Q40			KTA1046-P	TRANSISTOR	
D50		*	UDZW20(B)	ZENER DIODE		Q41			2SC4081	TRANSISTOR	
D60			RB060M-30	DIODE		Q42			KRA303-P	DIGITAL TRANSISTOR	
D100		*	UDZW12(B)	ZENER DIODE	K1	Q43			KRC403-P	DIGITAL TRANSISTOR	
D101			UDZW5.6(B)	ZENER DIODE	K1	Q50			2SB1184(Q,R)	TRANSISTOR	
D102			1SR154-400	DIODE	K1	Q51			2SC4081	TRANSISTOR	
D103			DAP202U	DIODE	K1	Q100			2SB1443	TRANSISTOR	K1
D121,122			UDZW6.8(B)	ZENER DIODE		Q101			2SC4081	TRANSISTOR	K1
D123		*	UDZW6.2(B)	ZENER DIODE		Q103			2SC4081	TRANSISTOR	K1
D140,141			1SR154-400	DIODE		Q104			KRA303-P	DIGITAL TRANSISTOR	K1
D142			1SS355	DIODE		Q105			KRC403-P	DIGITAL TRANSISTOR	K1
D150,151			1SR154-400	DIODE		Q120			2SC4081	TRANSISTOR	
D160			UDZW4.7(B)	ZENER DIODE		Q122,123			2SC4081	TRANSISTOR	
D190		*	UDZW6.2(B)	ZENER DIODE		Q140			2SB1188(Q,R)	TRANSISTOR	
D400			DAP202U	DIODE	K1K2M1	Q141			2SA1576A	TRANSISTOR	
D410			DAP202U	DIODE		Q142			RT1P141M	TRANSISTOR	
D410			DAP202U	DIODE	M2	Q143			RT1N144M	TRANSISTOR	
D440-442			UDZW6.8(B)	ZENER DIODE		Q150			2SB1188(Q,R)	TRANSISTOR	K1K2K3
D443		*	UDZW6.2(B)	ZENER DIODE		Q150			2SB1188(Q,R)	TRANSISTOR	M1M2
D448		*	UDZW6.2(B)	ZENER DIODE		Q151			RT1N144M	TRANSISTOR	K1K2K3
D451-453			UDZW6.8(B)	ZENER DIODE		Q151			RT1N144M	TRANSISTOR	M1M2
D482-484			DAP202U	DIODE		Q170			KRC404-P	DIGITAL TRANSISTOR	
D501			DAP202U	DIODE		Q320			2SB1689	TRANSISTOR	
D700,701			AVRL1613R3FTA	VARIATOR		Q321			KRC403-P	DIGITAL TRANSISTOR	
IC10			M5237ML-CF0J	ANALOGUE IC		Q367,368			KRC410-P	DIGITAL TRANSISTOR	K1K2
IC20			R1114N331B-TR	ANALOGUE IC (3.3V LF)		Q400			KRA303-P	DIGITAL TRANSISTOR	
IC60			BD9781HFP	ANALOGUE IC		Q401,402			KRC410-P	DIGITAL TRANSISTOR	
IC100			TA75S558F-F	ANALOGUE IC	K1	Q410			KRA303-P	DIGITAL TRANSISTOR	K1K2M1
IC230		*	STMP52151STR	MOS-IC		Q410			KRA303-P	DIGITAL TRANSISTOR	M2
IC300			E-TDA7478AD	ANALOGUE IC	E1E2E3	Q411,412			KRC410-P	DIGITAL TRANSISTOR	K1K2M1
IC300			E-TDA7478AD	ANALOGUE IC	E4E5E6	Q411,412			KRC410-P	DIGITAL TRANSISTOR	M2
IC480			E-TDA7415CB	ANALOGUE IC		Q500			RT1N144M	TRANSISTOR	K3M1M2
IC500		*	KKZ11Z	ANALOGUE IC	K1K2	Q500			RT1N144M	TRANSISTOR	E1E2E3
IC500		*	KKZ12Z	ANALOGUE IC	K3M1M2	Q500			RT1N144M	TRANSISTOR	E4E5E6
IC500		*	KKZ12Z	ANALOGUE IC	E1E2E3	Q660			KRA307-P	DIGITAL TRANSISTOR	
IC500		*	KKZ12Z	ANALOGUE IC	E4E5E6	Q702			RT1N144M	TRANSISTOR	
IC600		*	30622MGPB58GP	MICROCONTROLLER IC		Q703			2SB1689	TRANSISTOR	
IC601			XC6120N362N1	MOS-IC		Q704,705			RT1N144M	TRANSISTOR	
IC603			74HC2G02DP	MOS-IC		TH500			PRF18BE471QS2	POSITIVE RESISTOR	
IC680		*	74AHCT08PW	MOS-IC							
IC682		*	74LVC08APW	MOS-IC							
						A320	2D		X86-4032-70	FRONT-END UNIT	E1E2E3

K1 : KDC-X492 K2 : KDC-MP438U K3 : KDC-MP408U M1 : KDC-MP5539U
M2 : KDC-MP5039U E1 : KDC-W5541U E2 : KDC-W5041UA E3 : KDC-W5041UG
E4 : KDC-W5641UY E5 : KDC-W5141UAY E6 : KDC-W5141UGY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-577x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
A1	2D		X86-4032-70	FRONT-END UNIT	E4E5E6
A1	2D	*	X86-4160-11	FRONT-END UNIT	K1K2K3
A1	2D	*	X86-4160-11	FRONT-END UNIT	M1M2
MECHANISM ASSY (X92-6130-00) DXM-6E20W					
1	2B		A10-5328-31	CHASSIS	
2	1B		A10-5329-11	CHASSIS	
5	2B		D10-4910-13	ARM ASSY	
8	2A		D10-4911-23	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-22	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B	*	D39-0271-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-14	FLAT SPRING	
45	2B		G02-1547-14	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B		J22-0519-13	MOUNTING HARDWARE	
55	1A		J90-1138-41	GUIDE	
56	1B		J90-1023-03	GUIDE	
DPC1	3A		J86-0039-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (PT2X5)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

K1 : KDC-X492 K2 : KDC-MP438U K3 : KDC-MP408U M1 : KDC-MP5539U
M2 : KDC-MP5039U E1 : KDC-W5541U E2 : KDC-W5041UA E3 : KDC-W5041UG
E4 : KDC-W5641UY E5 : KDC-W5141UAY E6 : KDC-W5141UGY

△Indicates safety critical components.