


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ▽ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
- (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

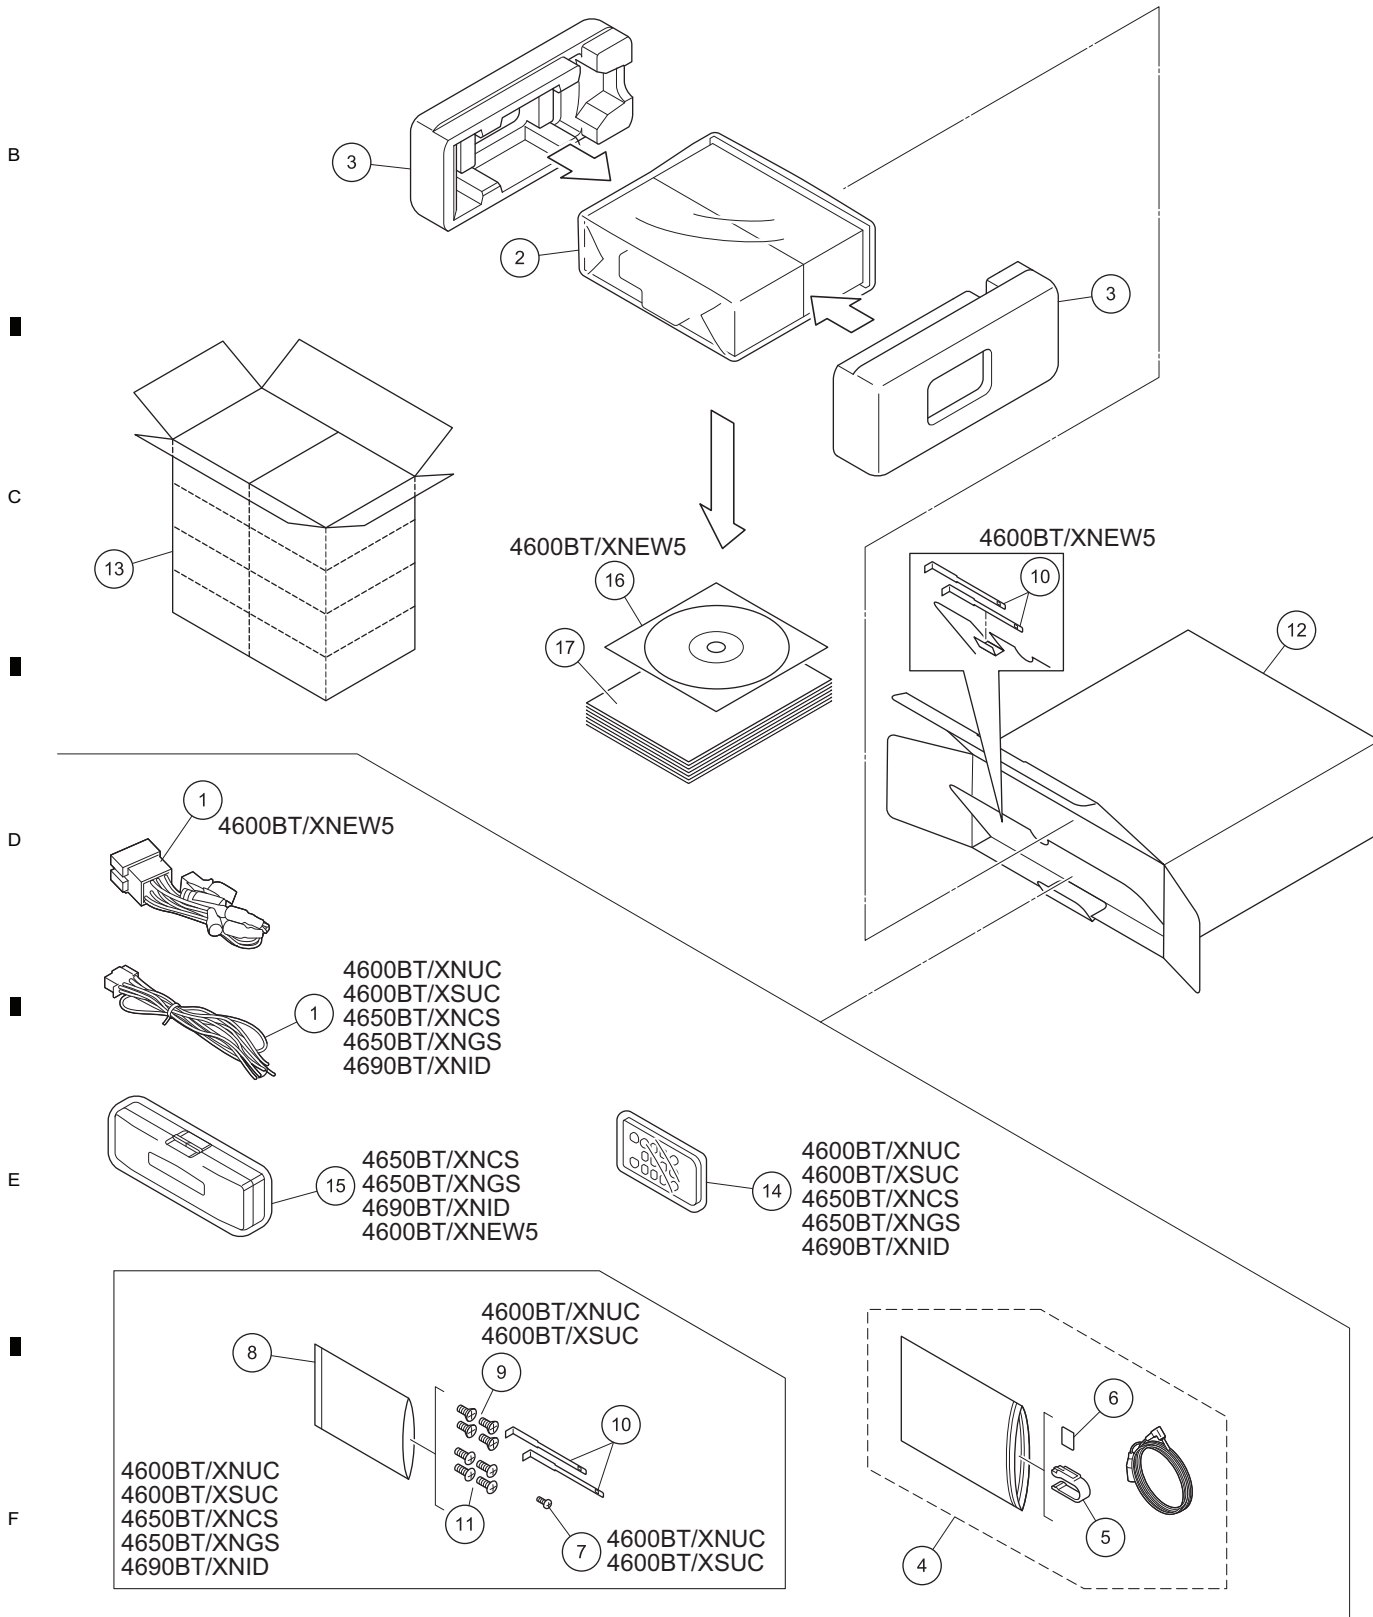

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table (2)	13	Contain Box	See Contrast table (2)
2	Polyethylene Bag	See Contrast table (2)	14	Card Remote Control Unit	See Contrast table (2)
3	Protector	CHP4594	15	Case Assy	See Contrast table (2)
4	Microphone Assy	See Contrast table (2)			
5	Holder	CZN7192	16	IM CD ROM	See Contrast table (2)
			17-1	Owner's Manual	See Contrast table (2)
6	Cushion	CZN7193	* 17-2	Warranty Card	See Contrast table (2)
7	Screw	See Contrast table (2)	17-3	Quick Start Guide	See Contrast table (2)
8	Polyethylene Bag	See Contrast table (2)	17-4	Installation Manual	See Contrast table (2)
9	Screw	See Contrast table (2)			
10	Handle	QNC3021	* 17-5	Caution Card	See Contrast table (2)
			* 17-6	Service Network	See Contrast table (2)
11	Screw	See Contrast table (2)	* 17-7	Caution Card	See Contrast table (2)
12	Unit Box	See Contrast table (2)	* 17-8	Caution Card	See Contrast table (2)

(2) CONTRAST TABLE


DEH-X4600BT/XNUC, DEH-X4600BT/XSUC, DEH-X4650BT/XNCS, DEH-X4650BT/XNGS, DEH-X4690BT/XNID and DEH-4600BT/XNEW5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-X4600BT /XNUC</u>	<u>DEH-X4600BT /XSUC</u>	<u>DEH-X4650BT /XNCS</u>	<u>DEH-X4650BT /XNGS</u>	<u>DEH-X4690BT /XNID</u>	<u>DEH-4600BT /XNEW5</u>
	1	Cord Assy	CDP1480	CDP1480	CDP1480	CDP1480	CDP1480	QDP3014
	2	Polyethylene Bag	CEG1173	CEG1173	QEG3001	QEG3001	QEG3001	QEG3001
	4	Microphone Assy	CPM1083	YPM5003	CPM1083	CPM1083	CPM1083	CPM1083
	7	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used	Not used	Not used
	8	Polyethylene Bag	CEG1160	CEG1160	CEG1160	CEG1160	CEG1160	Not used
	9	Screw	CRZ50P090FTC	CRZ50P090FTC	Not used	Not used	Not used	Not used
	11	Screw	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC	Not used
	12	Unit Box	QHG3500	QHG3542	QHG3502	QHG3503	QHG3505	QHG3504
	13	Contain Box	QHL3500	QHL3542	QHL3502	QHL3503	QHL3505	QHL3504
	14	Card Remote Control Unit	QXE1044	QXE1044	QXE1044	QXE1044	QXE1044	Not used
	15	Case Assy	Not used	Not used	QXA3129	QXA3129	QXA3129	QXA3129
	16	IM CD ROM	Not used	Not used	Not used	Not used	Not used	QPJ3020
*	17-1	Owner's Manual	QRD3195	QRD3195	QRD3196	QRD3197	QRB3341	Not used
	17-2	Warranty Card	QRY3001	QRY3001	Not used	Not used	CRY1304	CRY1376
	17-3	Quick Start Guide	Not used	Not used	Not used	Not used	Not used	QRD3193
	17-4	Installation Manual	Not used	Not used	Not used	Not used	Not used	QRD3194
*	17-5	Caution Card	Not used	Not used	Not used	Not used	Not used	QRP3014
*	17-6	Service Network	Not used	Not used	Not used	Not used	CRY1305	Not used
*	17-7	Caution Card	Not used	Not used	Not used	Not used	Not used	CRP1438
*	17-8	Caution Card	Not used	Not used	Not used	Not used	Not used	CRP1441

Owner's Manual, Installation Manual

<u>Part No.</u>	<u>Language</u>
QRD3195	English, French, Spanish(Espanol)
QRD3196	English, Spanish(Espanol), Portuguese(B)
QRD3197	English, Traditional Chinese, Arabic, Persian
QRB3341	English
QRD3193	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3194	English, French, Italian, Spanish(Espanol), German, Dutch, Russian

9.2 EXTERIOR

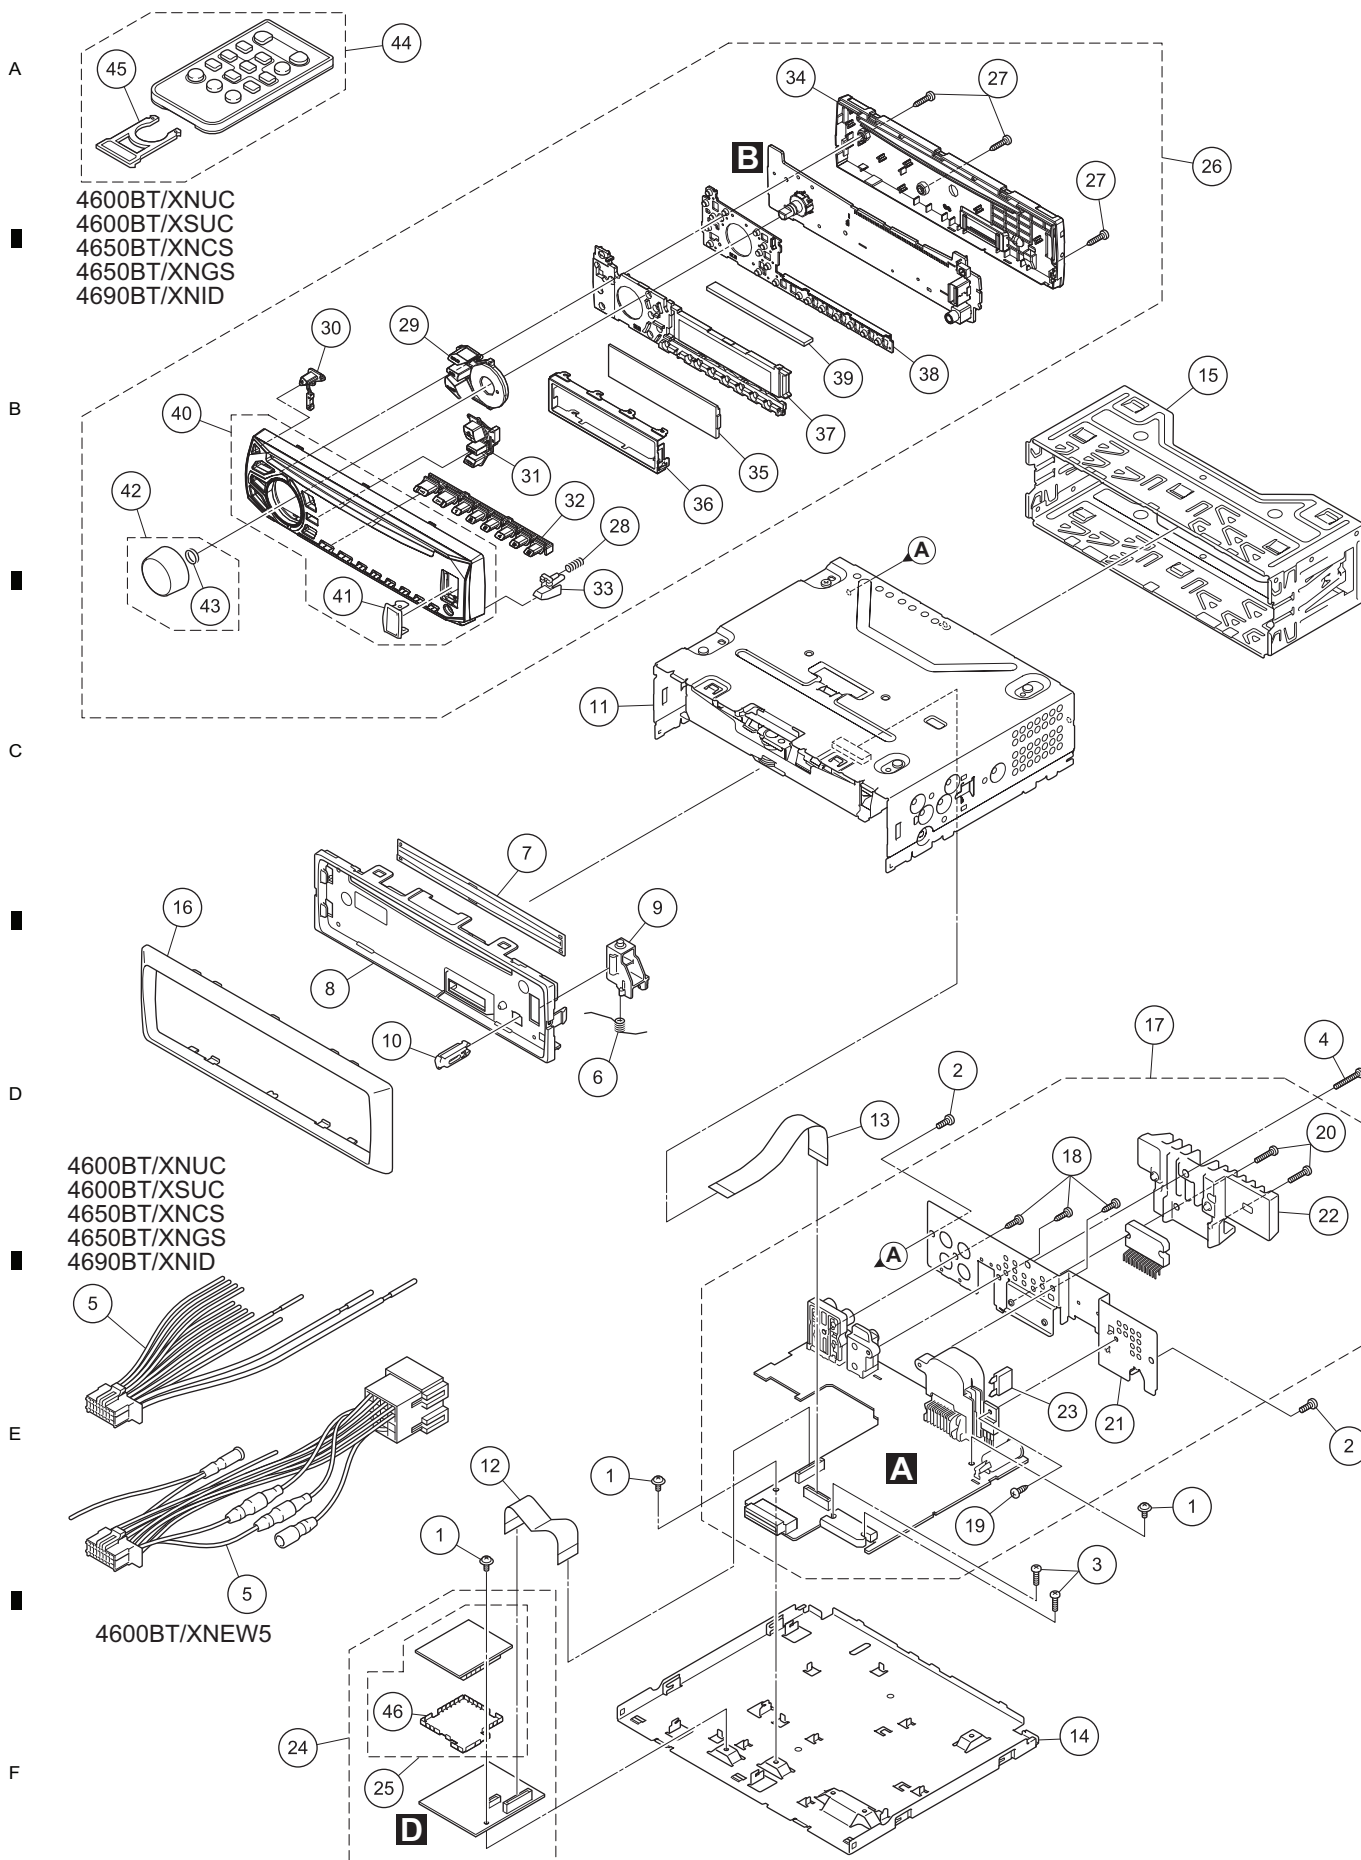

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
	1	Screw	ASZ26P050FTC	25	BT Module		YWX5044	
	2	Screw	BSZ26P060FTC					
	3	Screw	BSZ26P080FTC	26	Detachable Grille Assy		See Contrast table (2)	A
	4	Screw	BSZ26P120FTC	27	Screw		BPZ20P100FTC	
	5	Cord Assy	See Contrast table (2)	28	Spring		CBH2210	
				29	Button (SRC, BAND)		QAC3120	
	6	Spring	QBH3001	30	Button (EJECT)		QAC3124	
	7	Cover	See Contrast table (2)					
	8	Panel	QNS3126	31	Button (DISP)		QAC3125	
	9	Arm	QNV3025	32	Button (< > 1-6)		QAC3126	
	10	Button	QNV3026	33	Button (DETACH)		QAC3127	
				34	Cover		QNS3566	
	11	CD Mechanism Module (S11.6)	See Contrast table (2)	35	Segment LCD (V1801)		CAW2024	B
	12	FFC	QDE3028					
	13	FFC	QDE3029	36	Holder		QNC3067	
	14	Case	QNB3014	37	Lighting Conductor		QNV3069	
	15	Holder	QNC3020	38	Contact Rubber		QNV3070	
				39	Rubber Connector		QNV3071	
	16	Panel	QNS3568	40	Grille Unit		See Contrast table (2)	
	17	Tuner Amp Unit	See Contrast table (2)					
	18	Screw	BPZ26P080FTC	41	Door		QAT3011	
	19	Screw	BSZ26P060FTC	42	Knob Unit		See Contrast table (2)	
	20	Screw	BSZ26P120FTC	43	Spring		YBL5010	
				44	Card Remote Control Unit		See Contrast table (2)	C
	21	Holder	See Contrast table (2)	45	Cover		See Contrast table (2)	
	22	Heat Sink	See Contrast table (2)					
⚠	23	Fuse (10 A)	YEK5001	46	Shield Case		YNC5123	
	24	BT Unit	QWM3750					

(2) CONTRAST TABLE

DEH-X4600BT/XNUC, DEH-X4600BT/XSUC, DEH-X4650BT/XNCS, DEH-X4650BT/XNGS, DEH-X4690BT/XNID and DEH-4600BT/XNEW5 are constructed the same except for the following:

Mark	No.	Description	DEH-X4600BT /XNUC	DEH-X4600BT /XSUC	DEH-X4650BT /XNCS	DEH-X4650BT /XNGS	DEH-X4690BT /XNID	DEH-4600BT /XNEW5	
	5	Cord Assy	CDP1480	CDP1480	CDP1480	CDP1480	CDP1480	QDP3014	
	7	Cover	QNM3029	CNN1665	QNM3029	QNM3029	QNM3029	QNM3029	
	11	CD Mechanism Module (S11.6)	CXK5805	CXK5804	CXK5805	CXK5805	CXK5805	CXK5805	
	17	Tuner Amp Unit	QWM3637	QWM3637	QWM3638	QWM3639	QWM3640	QWM3636	
	21	Holder	QNC3053	QNC3053	QNC3053	QNC3053	QNC3053	QNC3054	
	22	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3002	QNR3002	QNR3010	
	26	Detachable Grille Assy	QXA3839	QXA3839	QXA4039	QXA4032	QXA4035	QXA4040	
	40	Grille Unit	QXA3871	QXA3871	QXA3873	QXA3866	QXA3874	QXA3872	
	42	Knob Unit	QXA3670	QXA3670	QXA3670	QXA3670	QXA3670	QXA3671	
	44	Card Remote Control Unit	QXE1044	QXE1044	QXE1044	QXE1044	QXE1044	Not used	E
	45	Cover	CNS7068	CNS7068	CNS7068	CNS7068	CNS7068	Not used	

9.3 CD MECHANISM MODULE

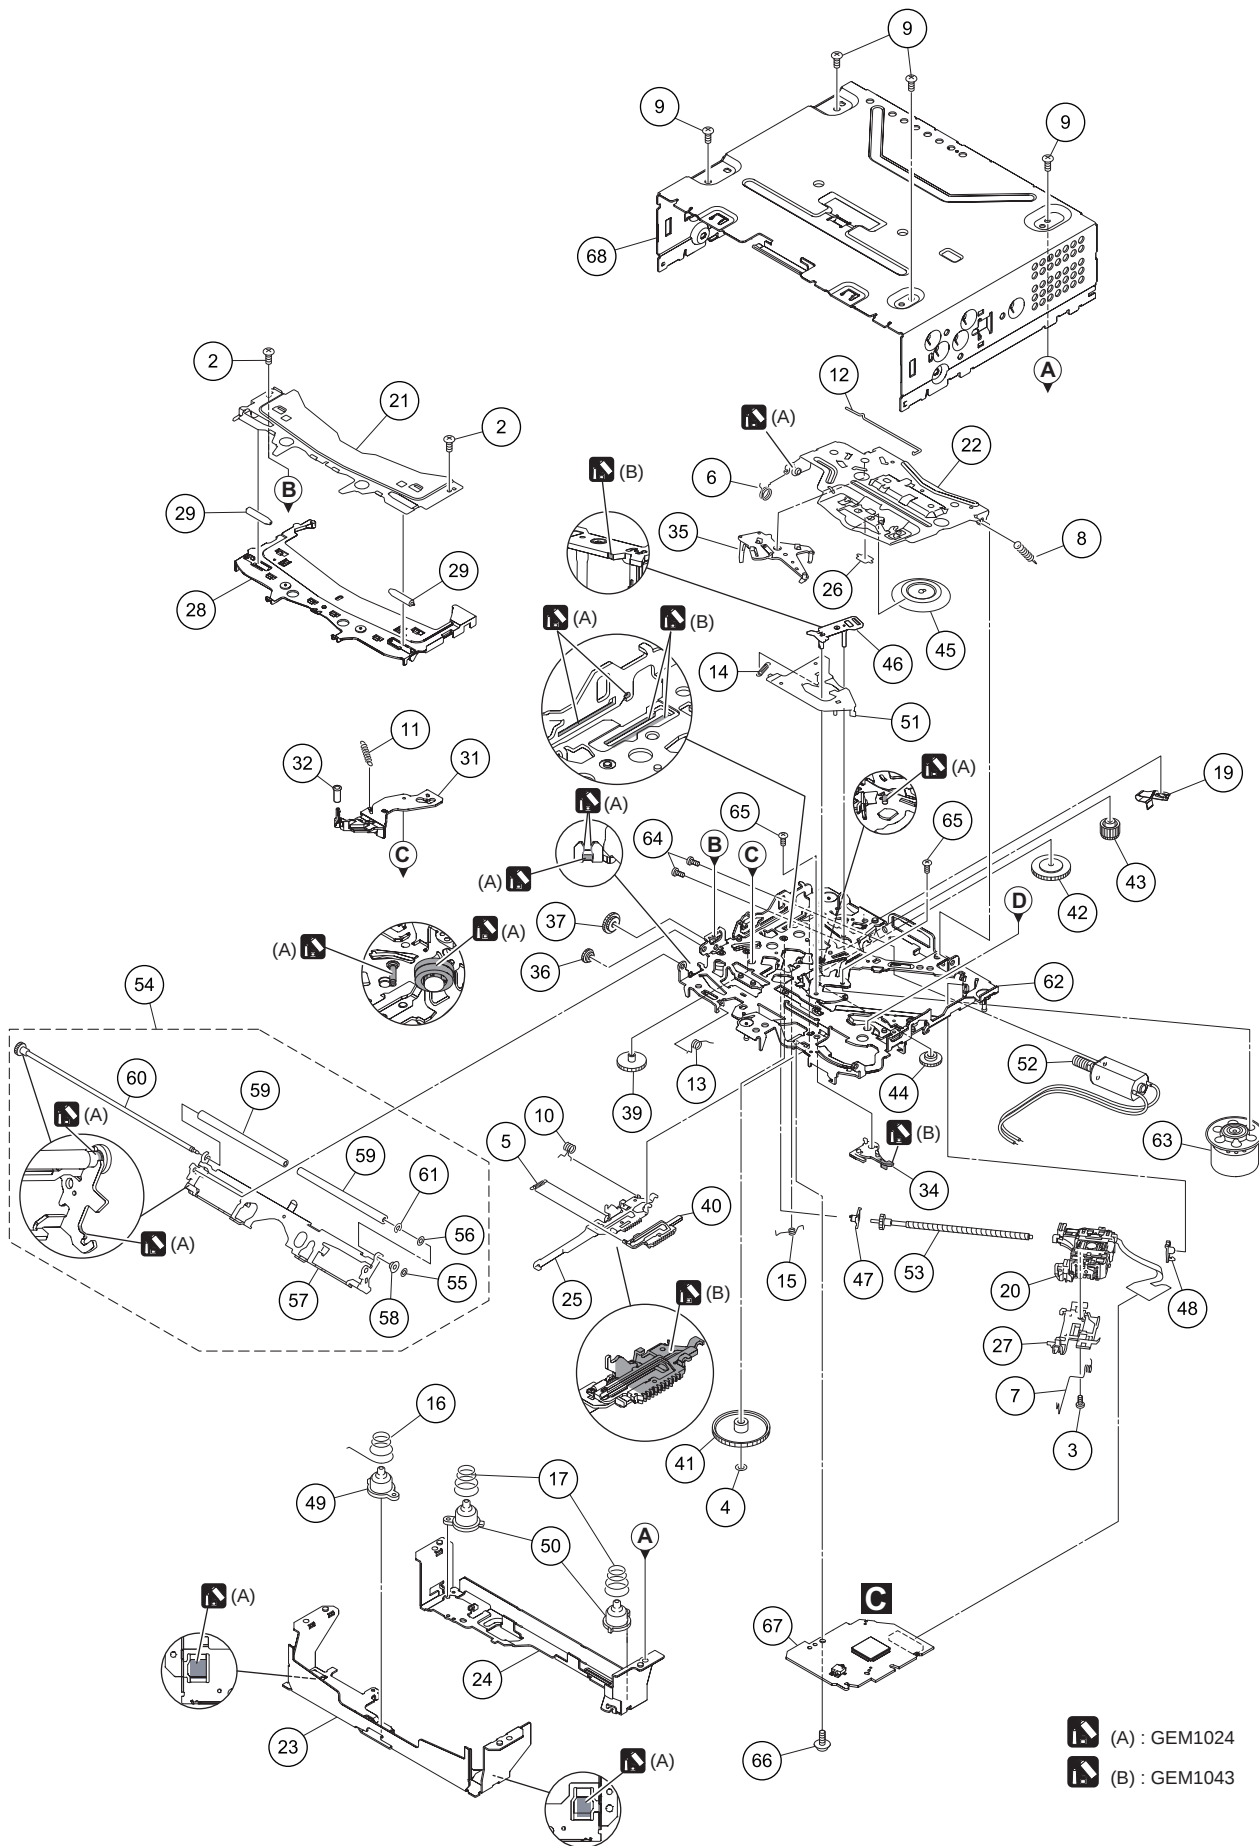

DEH-X4600BT/XNUC

5			6		7		8	
CD MECHANISM MODULE SECTION PARTS LIST								
<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>			
1			49	Damper	CNW1197			
2	Screw	BSZ20P040FTC	50	Damper	CNW1198			A
3	Screw(M2 x 4)	CBA1835						
4	Washer	CBF1038	51	Arm	CNW1726			
5	Spring	CBH3010	52	Motor Unit(M2)(LOAD/CRG)	CXC4026			
			53	Screw Unit	CXC8894			
6	Spring	CBH2855	54	Arm Assy(CXK5805)	CXE6232			
7	Spring	CBH2856		Arm Assy(CXK5804)	CXE4840			
8	Spring	CBH2860						
9	Screw	BSZ26P060FTC	55	Washer	CBF1037			
10	Spring	CBH3011	56	Washer	CBF1038			
			57	Arm	CND6242			
11	Coil Spring	CBH3095	58	Collar(CXK5805)	CNW2444			B
12	Spring	CBH3014		Collar(CXK5804)	CNV6906			
13	Spring	CBH3015						
14	Spring	CBH3016	59	Roller(CXK5805)	CNW2500			
15	Spring	CBH3017		Roller(CXK5804)	CNW1196			
			60	Gear Unit(CXK5805)	CXE6225			
16	Spring	CBH3086		Gear Unit(CXK5804)	CXE6655			
17	Spring	CBH3019	61	Washer	YE15FTC			
18								
19	Leaf Spring	CBL1824	62	Chassis Unit	CXE4528			
20	PU Unit(P11)(Service)(CXK5805)	CXX4754	63	Motor Unit(M1)(SPDL)	CXE2273			
	PU Unit(P10.6)(Service)(CXK5804)	CXX3556	64	Screw	JFZ20P025FTC			C
			65	Screw	JGZ17P022FTC			
21	Bracket	CND4553	66	Screw	EBA1028			
22	Arm	CND6406						
23	Bracket	CND6127	67	CD Core Unit (S11.6VA)(CXK5805)	CWX4269			
24	Bracket	CND5710		CD Core Unit (S11.6STD)(CXK5804)	CWX4023			
25	Lever	CND5398	68	Chassis	CNA3181			
26	Sheet	CNN3678						
27	Rack	CNV8342						
28	Guide	CNW2240						
29	Roller	CNW1172						D
30								
31	Arm	CNW2241						
32	Roller	CNW1175						
33								
34	Arm	CNW1177						
35	Arm	CNW1178						
36	Gear	CNW1180						
37	Gear	CNW1181						E
38								
39	Gear	CNW1183						
40	Rack	CNW1184						
41	Gear	CNW1185						
42	Gear	CNW1186						
43	Gear	CNW1187						
44	Gear	CNW2287						
45	Clamper	CNW1190						
46	Arm	CNW1192						F
47	Holder	CNW1193						
48	Holder	CNW1194						

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.
Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by μ instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A:DEH-X4600BT/XNUC	
B:DEH-X4600BT/XSUC	
C:DEH-X4650BT/XNCS	
D:DEH-X4650BT/XNGS	
E:DEH-X4690BT/XNID	
F:DEH-4600BT/XNEW5	
Unit Number : QWM3637(A,B)	
Unit Number : QWM3638(C)	
Unit Number : QWM3639(D)	
Unit Number : QWM3640(E)	
Unit Number : QWM3636(F)	
Unit Name : Tuner Amp Unit	
Unit Number : (A,B,C,D,E)	
Unit Number : (F)	
Unit Name : Keyboard Unit	
Unit Number : CWX4269(A,C,D,E,F)	
Unit Name : CD Core Unit(S11.6VA)	
Unit Number : CWX4023(B)	
Unit Name : CD Core Unit (S11.6STD)	
Unit Number : QWM3750	
Unit Name : BT Unit	

A

Unit Number : QWM3637(A,B)
Unit Number : QWM3638(C)
Unit Number : QWM3639(D)
Unit Number : QWM3640(E)

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Number : QWM3636(F)	
Unit Name : Tuner Amp Unit	
<u>MISCELLANEOUS</u>	
IC 201 (A,102,107) LSI	PM9013A
IC 301 (A,78,142) IC	PA2032A
IC 401 (A,150,91) IC	TDA7706
IC 531 (A,94,88) IC	337S3959
IC 551 (A,20,111) Regulator IC	BD9876EFJ
IC 552 (A,106,24) IC	BD2232G-G
IC 601 (A,111,77) IC	R5S726A0D216FP
IC 671 (A,131,75) IC	S-80827CNMC-B8M
IC 681 (A,114,94) Flash ROM Unit(A,B)	PEB102A8
(A,114,94) Flash ROM Unit(C,D,E,F)	PEB096A8
IC 801 (A,105,18) L-MOS And Gate	TC7SET08FUS1
IC 911 (A,145,28) Regulator IC	BA49183-V12
Q 251 (A,14,130) Chip Transistor(A,B,C,D,E)	RN1910
Q 252 (A,24,131) Chip Transistor	RN1910
Q 301 (A,86,127) Chip Transistor	RN4983
Q 531 (A,94,97) Transistor	LSAR523UB
Q 601 (A,93,68) Transistor	LTC014YEB
Q 751 (A,142,139) Transistor	KTD2092
Q 752 (A,141,134) Chip Transistor	RN4983
Q 873 (A,149,72) Transistor	2SD1767
Q 874 (A,149,65) Chip Transistor	RN4983
Q 875 (A,148,54) Transistor	LTC043EEB
Q 941 (A,96,121) Transistor	LSCR523UB
D 401 (A,158,107) Diode	RN731VN
D 402 (A,158,100) Diode	RN731VN
D 551 (A,23,124) Diode	CMS03
D 552 (A,22,104) Diode	RB056L-40
D 601 (A,130,81) Diode(A,B,F)	RB751SM-40
D 602 (A,91,75) Diode(A,B,F)	RB551VM-30
D 751 (A,137,135) Diode	DZ2J082M0
D 802 (A,93,17) Diode	DZ2S068C
D 803 (A,126,15) Diode	DZ2S068C
D 804 (A,119,14) Diode	DZ2S068C
D 805 (A,120,13) Diode	DZ2S068C
D 806 (A,116,13) Diode	DZ2S068C
D 807 (A,114,13) Diode	DZ2S068C

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	D 871 (A,148,61) Diode	DZ2J075M0	R 307 (A,89,128)	RS1/16SS223J
	D 901 (A,141,127) Diode	1SR154-400	R 309 (A,89,125)	RS1/16SS103J
	D 902 (A,137,127) Diode	1SR154-400	R 310 (A,100,129)	RS1/16SS0R0J
	D 911 (A,158,66) Diode	CRG03	R 311 (A,88,125)	RS1/16SS473J
	D 912 (A,161,66) Diode	CRG03	R 401 (A,161,106)	RS1/16SS221J
B	D 941 (A,93,125) Diode(A,B,C,D,E)	DZ2J068M0	R 402 (A,161,100)	RS1/16SS751J
	(A,93,125) Diode(F)	DZ2J075M0	R 403 (A,139,104) (A,B,C,F)	RS1/16SS391J
	L 202 (A,94,102) Inductor	CTF1793	(A,139,104) (D,E)	RS1/16SS331J
	L 401 (A,155,104) Chip Coil	LCTAWR27J2520	R 404 (A,142,99)	RS1/16SS105J
	L 402 (A,159,104) Chip Coil	LCTAWR15J2520	R 406 (A,154,108)	RS1/16SS105J
C	L 403 (A,151,102) Inductor	CTF1786	R 407 (A,139,96)	RS1/16SS330J
	L 404 (A,146,102) Inductor	CTF1786	R 408 (A,137,97) (A,B,C,F)	RS1/16SS471J
	L 405 (A,151,108) Inductor(A,B,C)	LCYB68NJ1608	(A,137,97) (D,E)	RS1/16SS361J
	L 406 (A,148,105) Inductor(A,B,C,F)	CTF1389	R 409 (A,144,98) (D,E)	RS1/16SS0R0J
	L 407 (A,147,107) Chip Coil(D,E)	LCTAWR27J2520	R 411 (A,138,91) (A,B,C,F)	RS1/16SS681J
D	L 408 (A,141,104) Inductor(A,B,C,F)	LCTC4R7K1608	(A,138,91) (D,E)	RS1/16SS391J
	(A,141,104) Inductor(D,E)	LCTC1R5K1608	R 412 (A,153,78)	RS1/4SA8R2J
	L 409 (A,143,109) Chip Coil(D,E)	LCTAWR39J2520	R 413 (A,158,78)	RS1/4SA8R2J
	L 410 (A,137,94) Chip Coil(A,B,C,F)	LCTAW470J2520	R 414 (A,139,87)	RS1/16SS0R0J
	(A,137,94) Inductor(D,E)	LCTAW2R2J2520	R 415 (A,152,80) (A,B,C,D,E)	RS1/16SS0R0J
E	L 413 (A,144,82) Inductor	CTF1786	R 531 (A,91,94)	RS1/16SS473J
	L 414 (A,153,80) Inductor(F)	CTF1786	R 532 (A,91,85)	RS1/16SS222J
	L 419 (A,161,95) Inductor	CTF1786	R 533 (A,92,85)	RS1/16SS222J
	L 420 (A,161,96) Inductor	CTF1786	R 534 (A,94,92)	RS1/16SS272J
	L 551 (A,30,107) Inductor	CTH1524	R 535 (A,95,92)	RS1/16SS472J
F	L 801 (A,115,17) Inductor	CTF1713	R 536 (A,96,92)	RS1/16SS472J
	L 901 (A,112,141) Choke Coil 600 uH	CTH1432	R 537 (A,96,85)	RS1/16SS101J
	X 401 (A,161,88) Crystal Resonator 36.48 MHz	CSS1848	R 538 (A,96,84)	RS1/16SS101J
	X 601 (A,127,76) Crystal Resonator 12 MHz	CSS1847	R 551 (A,30,111)	RS1/16SS682J
	X 603 (A,123,92) Resonator 16.93 MHz	CSS1794	R 552 (A,30,112)	RS1/16SS0R0J
G	⚠ P251 (A,6,130) Fuse 3.0 A	CEK1386	R 553 (A,27,112)	RS1/16SS1803D
	P 402 (A,156,111) Surge Absorber	HSPC16701B02	R 554 (A,27,110)	RS1/16SS4302D
	VA801 (A,108,13) SMD Varistor	MLV0402ES012V0010N	R 555 (A,39,124)	RS1/10SR471J
	VA802 (A,101,13) SMD Varistor	MLV0402ES012V0010N	R 601 (A,101,66)	RS1/16SS473J
	CN701 (A,114,32) Connector	VKN1192	R 602 (A,107,63)	RS1/16SS473J
H	CN801 (A,109,4) Connector	CKS6452	R 603 (A,109,62)	RS1/16SS473J
	CN971 (A,93,49) Connector	VKN1192	R 604 (A,116,60) (C,D,E,F)	RS1/16SS473J
	JA251 (A,19,138) Pin Jack(A,C,D,E)	CKB1099	R 609 (A,122,64)	RS1/16SS473J
	(A,19,138) Pin Jack(B)	YKB5011	R 610 (A,122,70)	RS1/16SS473J
	(A,19,138) Pin Jack(F)	CKB1056	R 611 (A,123,69)	RS1/16SS473J
I	JA401 (A,158,129) Antenna Jack	YKS5041	R 613 (A,122,76)	RS1/16SS152J
	JA892 (A,42,141) Jack	YKS5035	R 614 (A,123,78)	RS1/16SS473J
	JA901 (A,114,141) Connector	CKM1613	R 615 (A,130,79)	RS1/16SS473J
	⚠ Fuse 10 A	YEK5001	R 616 (A,125,67)	RS1/16SS473J
			R 617 (A,131,81)	RS1/16SS103J
RESISTORS				
J	R 251 (A,18,131) (A,B,C,D,E)	RS1/16SS821J	R 618 (A,125,82) (A,B,E,F)	RS1/16SS473J
	R 252 (A,13,128) (A,B,C,D,E)	RS1/16SS821J	(A,125,82) (D)	RS1/16SS103J
	R 253 (A,15,131) (A,B,C,D,E)	RS1/16SS223J	R 619 (A,126,82) (C,D)	RS1/16SS473J
	R 254 (A,12,131) (A,B,C,D,E)	RS1/16SS223J	(A,126,82) (E)	RS1/16SS103J
	R 255 (A,30,132)	RS1/16SS821J	R 622 (A,125,87)	RS1/16SS473J
K	R 256 (A,19,131)	RS1/16SS821J	R 623 (A,130,85)	RAB4CQ473J
	R 257 (A,28,131)	RS1/16SS223J	R 624 (A,120,89)	RS1/16SS222J
	R 258 (A,22,131)	RS1/16SS223J	R 625 (A,114,90)	RS1/16SS221J
	R 301 (A,68,127)	RS1/16SS471J	R 626 (A,113,90)	RS1/16SS221J
	R 302 (A,82,125)	RS1/16SS471J	R 627 (A,112,88)	RS1/16SS221J
L	R 303 (A,74,127)	RS1/16SS471J	R 628 (A,111,90)	RS1/16SS221J
	R 304 (A,78,126)	RS1/16SS471J	R 629 (A,109,92)	RS1/16SS221J
	R 305 (A,90,127)	RS1/16SS103J	R 630 (A,110,89)	RS1/16SS221J
	R 306 (A,90,129)	RS1/16SS221J	R 631 (A,108,92)	RS1/16SS473J

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 632	(A,106,91)	RS1/16SS473J		R 815	(A,100,19)	RS1/16SS822J	
R 633	(A,107,90)	RS1/16SS101J		R 816	(A,96,19)	RS1/10SR222J	
R 634	(A,103,88)	RS1/16SS102J		R 817	(A,95,19)	RS1/10SR222J	
R 635	(A,102,88)	RS1/16SS102J		R 818	(A,105,13)	RS1/10SR0R0J	A
R 636	(A,100,91)	RS1/16SS473J		R 851	(A,93,20)	RS1/16SS472J	
R 637	(A,101,90)	RS1/16SS473J		R 874	(A,148,58)	RS1/10SR391J	
R 638	(A,104,92)	RS1/16SS473J		R 875	(A,149,58)	RS1/10SR473J	
R 639	(A,98,91)	RS1/16SS472J		R 878	(A,124,26)	RS1/10SR103J	
R 640	(A,99,91)	RS1/16SS472J		R 879	(A,156,67)	RS1/10SR122J	
R 643	(A,99,82)	RS1/16SS104J		R 891	(A,58,138)	RS1/16SS102J	
R 644	(A,98,79)	RS1/16SS101J		R 892	(A,58,136)	RS1/16SS102J	
R 645	(A,96,79)	RS1/16SS101J		R 911	(A,145,40)	RS1/10SR1R0J	
R 646	(A,93,75)	RS1/16SS103J		R 912	(A,141,41)	RS1/10SR1R0J	
R 647	(A,98,78)	RS1/16SS101J		R 913	(A,154,41)	RS1/16SS223J	
R 648	(A,95,76)	RS1/16SS102J		R 914	(A,131,40)	RS1/16SS223J	B
R 649	(A,95,75)	RS1/16SS102J		R 941	(A,94,121)	RS1/16SS223J	
R 650	(A,95,74)	RS1/16SS102J		R 942	(A,94,122)	RS1/16SS473J	
R 651	(A,97,71)	RS1/16SS473J		R 943	(A,95,125) (A,B,C,D,E)	RS1/16SS682J	
R 652	(A,98,69)	RS1/16SS222J			(A,95,125) (F)	RS1/16SS333J	
R 653	(A,100,66)	RS1/16SS103J		R 944	(A,99,123) (A,B,C,D,E)	RS1/4SA102J	
R 659	(A,124,61)	RS1/16SS153J			(A,99,123) (F)	RS1/4SA122J	
R 660	(A,124,60)	RS1/16SS153J		R 973	(A,90,63)	RS1/16SS222J	
R 664	(A,133,62)	RS1/16SS103J		R 974	(A,98,55)	RS1/16SS101J	
R 668	(A,93,71)	RS1/16SS473J		R 975	(A,98,54)	RS1/16SS101J	
R 669	(A,95,69)	RS1/16SS473J		R 976	(A,98,52)	RS1/16SS101J	
R 671	(A,130,69)	RS1/16SS104J		<u>CAPACITORS</u>			
R 681	(A,109,97)	RS1/16SS473J		C 201	(A,96,115)	CKSRYB105K10	
R 682	(A,110,91)	RS1/16SS473J		C 202	(A,105,116)	CKSRYB105K10	
R 683	(A,120,92)	RS1/16SS473J		C 203	(A,92,116)	CKSRYB105K10	
R 684	(A,109,94)	RS1/16SS473J		C 204	(A,107,115)	CKSRYB105K10	
R 685	(A,120,96)	RS1/16SS473J		C 205	(A,94,116)	CKSRYB105K10	
R 701	(A,108,38)	RS1/16SS473J		C 206	(A,107,114)	CKSRYB105K10	
R 702	(A,114,38)	RS1/16SS104J		C 207	(A,95,108)	CKSSYB104K10	
R 703	(A,118,28)	RAB4CQ472J		C 208	(A,94,106)	CKSSYB104K10	
R 704	(A,110,40)	RS1/16SS104J		C 209	(A,93,104) 10 uF	CCG1192	
R 706	(A,108,36)	RS1/16SS221J		C 210	(A,96,106)	CCSSCH151J50	D
R 707	(A,109,38)	RS1/16SS221J		C 211	(A,110,107)	CCSSCH151J50	
R 708	(A,110,38)	RS1/16SS101J		C 212	(A,108,109) 10 uF	CCG1192	
R 709	(A,111,38)	RS1/16SS221J		C 213	(A,108,106)	CKSSYB104K10	
R 710	(A,112,38)	RS1/16SS101J		C 214	(A,108,104)	CKSSYB104K10	
R 711	(A,114,39)	RS1/16SS102J		C 215	(A,108,102)	CKSSYB104K10	
R 715	(A,117,36)	RS1/16SS151J		C 216	(A,92,101) 10 uF	CCG1192	
R 716	(A,118,36)	RS1/16SS151J		C 217	(A,95,100)	CKSSYB104K10	
R 717	(A,119,36)	RS1/16SS151J		C 218	(A,114,109) (A,C,D,E,F)	XCEVW470M16	
R 718	(A,123,36)	RS1/16SS221J			(A,114,109) (B)	CEVW470M16	
R 719	(A,122,36)	RS1/16SS104J		C 219	(A,112,103) 10 uF	CCG1192	
R 752	(A,144,134)	RS1/4SA391J		C 220	(A,106,98) 10 uF	CCG1192	E
R 753	(A,127,91)	RS1/16SS473J		C 223	(A,91,101)	CKSSYB102K50	
R 754	(A,127,92)	RS1/16SS103J		C 224	(A,115,103)	CKSSYB104K10	
R 801	(A,125,22)	RS1/10SR222J		C 229	(A,110,112)	CKSSYB102K50	
R 803	(A,121,18)	RS1/16SS223J		C 236	(A,110,104)	CKSRYB105K10	
R 804	(A,119,18)	RS1/16SS223J		C 251	(A,35,128) 4.7 uF(A,B,C,D,E)	CCG1201	
R 805	(A,121,19)	RS1/10SR101J		C 252	(A,17,127) 4.7 uF(A,B,C,D,E)	CCG1201	
R 806	(A,118,20)	RS1/10SR101J		C 253	(A,17,130) (A,B,C,D,E)	CCSSCH101J50	
R 807	(A,120,20)	RS1/10SR101J		C 254	(A,11,130) (A,B,C,D,E)	CCSSCH101J50	
R 808	(A,124,20)	RS1/10SR222J		C 255	(A,35,132) 4.7 uF	CCG1201	
R 809	(A,115,21)	RS1/10SR220J		C 256	(A,31,130) 4.7 uF	CCG1201	F
R 810	(A,114,21)	RS1/10SR220J		C 257	(A,26,131)	CCSSCH101J50	
R 813	(A,107,16)	RS1/10SR222J		C 258	(A,21,131)	CCSSCH101J50	
R 814	(A,101,19)	RS1/10SR222J					

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	C 260 (A,33,138)	CKSSYB104K10		
	C 261 (A,6,133)	CKSSYB103K16	C 451 (A,159,91)	CKSSYB104K10
	C 301 (A,69,129)	CKSRYB224K16	C 452 (A,159,94)	CKSRYB105K10
A	C 303 (A,80,129)	CKSRYB224K16	C 453 (A,160,96)	CKSSYB104K10
	C 305 (A,72,129)	CKSRYB224K16	C 455 (A,159,97)	CKSRYB224K16
	C 307 (A,77,129)	CKSRYB224K16	C 456 (A,162,92)	CKSSYB472K25
	C 313 (A,84,130)	CKSRYB105K16	C 457 (A,162,93)	CKSSYB472K25
	C 314 (A,135,126)	CKSRYB104K16	C 459 (A,154,83) (A,B,C,F)	CCSSCH101J50
			(A,154,83) (D,E)	CKSSYB102K50
	C 317 (A,60,129) (A,C,D,E,F)	XCEVW100M16	C 461 (A,145,104) (A,B,C,F)	CKSSYB104K10
	(A,60,129) (B)	CEVW100M16	C 464 (A,162,98) 1 uF(D,E)	DCH1246
	C 319 (A,62,134)	CCSSCH101J50		
	C 320 (A,64,134)	CCSSCK1R0C50	C 465 (A,142,106) (D,E)	CKSSYB103K16
	C 321 (A,83,129)	CCSSCH101J50	C 466 (A,137,79) (D,E)	CKSRYB105K10
	C 322 (A,106,126)	CKSRYB104K16	C 467 (A,151,81) (D,E)	CKSSYB104K10
B			C 468 (A,142,79) (D,E)	CKSRYB105K10
	C 323 (A,106,129)	CCSRCH100D50	C 531 (A,91,93)	CKSSYB104K10
	C 324 (A,102,129)	CCSRCH100D50	C 532 (A,94,93)	CKSSYB104K10
	C 325 (A,94,132)	CCSRCH100D50		
	C 326 (A,95,140)	CCSRCH100D50	C 551 (A,13,121) (A,C,D,E,F)	XCEVW221M16
	C 327 (A,88,129)	CKSRYB105K10	(A,13,121) (B)	CEVW221M16
			C 552 (A,13,107)	CKSRYB105K16
	C 401 (A,154,100)	CKSSYB104K10	C 553 (A,15,110)	CKSSYB103K16
	C 402 (A,155,101)	CKSSYB103K16	C 555 (A,25,112)	CKSSYB682K25
	C 403 (A,153,102)	CKSRYB105K10	C 556 (A,32,120)	CEVQW221M6R3
	C 405 (A,162,101)	CKSSYB103K16		
	C 406 (A,160,101)	CKSSYB103K16	C 557 (A,33,116)	CKSRYB105K10
C			C 560 (A,108,21)	CKSRYB105K10
	C 408 (A,161,105)	CKSSYB103K16	C 561 (A,103,24)	CKSRYB105K10
	C 409 (A,157,105)	CCSSCH6R0D50	C 564 (A,33,114) 4.7 uF	CCG1201
	C 410 (A,155,107)	CCSSCH330J50	C 565 (A,16,107) 4.7 uF	CCG1222
	C 411 (A,148,99)	CKSSYB103K16		
	C 412 (A,148,101)	CKSSYB104K10	C 601 (A,105,66)	CKSSYB104K10
			C 602 (A,109,65)	CKSSYB104K10
	C 413 (A,150,101)	CKSSYB104K10	C 603 (A,111,65)	CKSSYB104K10
	C 414 (A,146,100)	CKSSYB103K16	C 604 (A,113,65)	CKSSYB104K10
	C 415 (A,144,101) 10 uF	CCG1192	C 605 (A,117,65)	CKSSYB104K10
	C 416 (A,147,100)	CKSSYB104K10		
	C 418 (A,142,101)	CKSSYB223K16	C 606 (A,122,71)	CKSSYB104K10
	C 419 (A,147,110) (D,E)	CCSSCH150J50	C 607 (A,127,73)	CCSSCH120J50
	C 420 (A,151,106) (D,E,F)	CKSSYB103K16	C 608 (A,127,78)	CCSSCH120J50
D			C 609 (A,122,73)	CKSSYB104K10
	C 421 (A,154,111) (A,B,C)	CCSSCJ3R0C50	C 610 (A,122,75)	CKSSYB104K10
	C 423 (A,144,106) (D,E)	CCSSCH8R0D50		
	C 424 (A,141,101)	CKSSYB103K16	C 611 (A,122,77)	CKSSYB104K10
	C 425 (A,139,99) 10 uF	CCG1192	C 612 (A,123,82)	CKSSYB104K10
	C 426 (A,140,97)	CKSSYB104K10	C 613 (A,124,82)	CKSSYB104K10
	C 427 (A,144,97)	CKSSYB104K10	C 618 (A,123,89)	CCSSCH120J50
			C 619 (A,123,94)	CCSSCH120J50
	C 428 (A,137,96) (A,B,C,F)	CCSSCH101J50		
	(A,137,96) (D,E)	CCSSCH220J50	C 620 (A,114,88)	CKSSYB104K10
	C 429 (A,136,96)	CKSSYB103K16	C 621 (A,109,88)	CKSSYB104K10
	C 430 (A,139,90)	CKSSYB102K50	C 622 (A,106,93)	CCSSCH220J50
E	C 432 (A,138,92) (A,B,C,F)	CCSSCH820J50	C 623 (A,106,88)	CKSSYB104K10
	(A,138,92) (D,E)	CCSSCK2R0C50	C 624 (A,105,88)	CKSSYB104K10
	C 433 (A,136,91)	CKSSYB102K50		
			C 625 (A,104,90)	CKSSYB104K10
	C 435 (A,139,86) (A,B,C,F)	CKSRYB474K10	C 626 (A,100,80)	CKSSYB104K10
	(A,139,86) (D,E)	CKSRYB105K10	C 627 (A,97,81)	CCSSCH220J50
	C 439 (A,145,80) (D,E)	CKSRYB104K16	C 628 (A,96,81)	CCSSCH220J50
	C 440 (A,142,86)	CKSSYB102K50	C 629 (A,99,75)	CKSSYB104K10
	C 441 (A,137,89) (A,B,C,D,E)	CCSSCH100D50		
	C 442 (A,146,83)	CKSSYB104K10	C 630 (A,99,73)	CKSSYB104K10
	C 444 (A,152,82) 2.2 uF	CCG1218	C 631 (A,97,77)	CCSSCH220J50
			C 672 (A,123,73) 1 uF	DCH1246
	C 445 (A,157,82) (A,B,C,F)	CKSSYB104K10	C 681 (A,121,96)	CKSSYB104K10
F	C 447 (A,157,83) (A,B,C)	CKSRYB105K10	C 683 (A,120,94)	CCSSCJ3R0C50
	C 448 (A,158,85) (A,B,C,F)	CKSSYB104K10		
	(A,158,85) (D,E)	CKSSYB103K16	C 701 (A,111,40)	CKSSYB103K16
	C 449 (A,161,85)	CCSSCH9R0D50	C 704 (A,120,39)	CCSSCH100D50
	C 450 (A,161,90)	CCSSCH9R0D50	C 705 (A,118,39)	CCSSCH100D50

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 706	(A,117,38)		CCSSCH100D50			D 1966	(A,12,21) Blue LED(A,B,C,D,E)		FC-F1608BK-470H5		
C 752	(A,140,136)		CKSSYB104K10								
C 753	(A,147,130) 4.7 uF		CCG1201			D 1968	(A,9,21) Red LED(F)		FC-1608SXX630D08		
C 801	(A,124,6)		CCSRCH221J50			D 1969	(A,48,11) Red LED(F)		FC-1608SXX630D08		A
C 806	(A,125,8)		CKSRYB104K16			D 1970	(A,50,30) Red LED(F)		FC-1608SXX630D08		
C 807	(A,122,14)		CKSRYB105K10			D 1971	(A,12,32) Red LED(F)		FC-1608SXX630D08		
C 808	(A,108,19)		CKSRYB104K16			D 1972	(A,11,11) Red LED(F)		FC-1608SXX630D08		
C 809	(A,97,16)		CCSRCH221J50			D 1973	(A,73,5) Red LED(F)		FC-1608SXX630D08		
C 810	(A,96,13)		CCSRCH221J50			D 1974	(A,66,5) Red LED(F)		FC-1608SXX630D08		
C 811	(A,104,20)		CKSSYB104K10			D 1975	(A,112,6) Red LED(F)		FC-1608SXX630D08		
C 871	(A,153,62)		CKSSYB104K16			D 1976	(A,102,6) Red LED(F)		FC-1608SXX630D08		
C 873	(A,124,24)		CKSRYB104K16			D 1977	(A,91,6) Red LED(F)		FC-1608SXX630D08		
C 891	(A,52,138)		CKSRYB104K16			D 1978	(A,145,6) Red LED(F)		FC-1608SXX630D08		
C 892	(A,34,139)		CKSRYB104K16			D 1979	(A,134,6) Red LED(F)		FC-1608SXX630D08		
C 893	(A,34,135)		CKSRYB102K50			D 1980	(A,123,6) Red LED(F)		FC-1608SXX630D08		B
C 894	(A,52,134)		CKSRYB102K50			D 1981	(A,53,19) Red LED(F)		FC-1608SXX630D08		
C 901	(A,133,124) 2 200 uF/16 V		CCH2040			D 1982	(A,5,38) Red LED(F)		FC-1608SXX630D08		
C 912	(A,152,40)		CKSSYB102K50			L 1921	(B,130,10) Inductor		CTF1389		
C 913	(A,131,43)		CKSSYB102K50			L 1922	(B,129,13) Inductor		CTF1389		
C 914	(A,156,56) (A,C,D,E,F)		XCEAT102M16			L 1923	(B,131,6) Inductor		CTF1389		
	(A,156,56) 1 000 uF/16 V(B)		YCH5024			X 1801	(B,70,24) Ceramic Resonator 5.00 MHz		CSS1547		
C 915	(A,132,42)		CKSRYB104K16			S 1839	(A,31,19)Encoder(MULTI-CONTROL)(A,C,D,E,F)		CSD1168		
C 916	(A,147,43) 4.7 uF		CCG1201				(A,31,19)Rotary Encoder(MULTI-CONTROL)(B)		CSD1184		
C 917	(A,145,46)		CKSSYB102K50			CN1911	(A,155,24) Connector(A,C,D,E,F)		CKS6443		
C 919	(A,151,42) 4.7 uF		CCG1201				(A,155,24) Connector(B)		CKS6472		
C 921	(A,135,42) 4.7 uF		CCG1201			CN1931	(B,108,9) Connector		CKS6451		C
C 923	(A,159,41) 4.7 uF		CCG1201			JA1921	(A,155,10) Jack		CKN1090		
C 926	(A,140,44) 4.7 uF		CCG1201			V 1801	(A,141,32) Segment LCD		CAW2024		
C 927	(A,140,42)		CKSSYB102K50			RESISTORS					
C 941	(A,96,124)		CKSRYB104K16			R 1801	(B,89,13)		RS1/10SR473J		
C 969	(A,135,113) 10 uF		CCG1192			R 1802	(B,72,19)		RS1/10SR473J		
C 973	(A,98,53)		CCSSCH470J50			R 1803	(B,75,23)		RS1/10SR222J		
						R 1805	(B,58,28)		RS1/10SR473J		
						R 1806	(B,60,29)		RS1/10SR473J		
						R 1807	(B,60,30)		RS1/10SR473J		
						R 1808	(B,60,32)		RS1/10SR473J		D
						R 1823	(B,49,27)		RS1/10SR273J		
						R 1931	(B,45,17)		RS1/10SR222J		
						R 1932	(B,45,13)		RS1/10SR222J		
						R 1941	(B,128,24) (F)		RS1/10SR473J		
						R 1944	(B,132,26) (A,B,C,D,E)		RS1/10SR101J		
						R 1951	(B,59,20)		RS1/4SA221J		
						R 1952	(B,59,22)		RS1/4SA221J		
						R 1954	(B,10,23) (A,B,C,D,E)		RS1/10SR222J		
						R 1956	(B,51,20) (A,B,C,D,E)		RS1/10SR152J		
						R 1958	(B,28,7) (A,B,C,D,E)		RS1/10SR821J		E
						R 1960	(B,20,30) (A,B,C,D,E)		RS1/10SR152J		
						R 1962	(B,88,10) (A,B,C,D,E)		RS1/10SR152J		
						R 1964	(B,57,12) (A,B,C,D,E)		RS1/10SR152J		
						R 1966	(B,141,19) (A,B,C,D,E)		RS1/10SR152J		
						R 1968	(B,17,31) (A,B,C,D,E)		RS1/10SR472J		
						R 1969	(B,21,11) (A,B,C,D,E)		RS1/10SR682J		
						R 1972	(B,21,13) (A,B,C,D,E)		RS1/10SR0R0J		
						R 1973	(B,18,17) (F)		RS1/10SR0R0J		
						R 1975	(B,13,19) (F)		RS1/10SR822J		
						R 1978	(B,48,11) (F)		RS1/10SR122J		
						R 1980	(B,18,23) (F)		RS1/10SR682J		F
						R 1982	(B,68,12) (F)		RS1/10SR222J		
						R 1984	(B,54,12) (F)		RS1/10SR182J		
						R 1986	(B,138,19) (F)		RS1/10SR182J		

B
Unit Number: (A,B,C,D,E)
Unit Number: (F)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,84,22) IC	PD6583A8
IC 1941	(A,156,38)IR RC REC Module(A,B,C,D,E)	SIR8440B5
Q 1951	(B,16,15) Transistor(A,B,C,D,E)	LTC014EEB
Q 1952	(B,18,19) Transistor(F)	LTC014EEB
D 1951	(A,64,21)White LED(A,C,D,E,F)	SWBA05(FI231719)
	(A,64,21) White LED(B)	CSL0401WBHCW1(A)
D 1952	(A,5,41) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1953	(A,52,19) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1954	(A,49,11) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1955	(A,51,30) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1956	(A,66,7) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1957	(A,73,7) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1958	(A,89,6) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1959	(A,100,6) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1960	(A,111,6) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1961	(A,122,6) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1962	(A,133,6) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1963	(A,144,6) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1964	(A,14,32) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5
D 1965	(A,10,11) Blue LED(A,B,C,D,E)	FC-F1608BK-470H5

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 1988 (B,53,22) (F)
 R 1990 (B,18,31) (F)
 R 1991 (B,51,8) (A,B,C,D,E)
 R 1996 (B,59,9) (F)

RS1/10SR182J
 RS1/10SR272J
 RS1/10SR0R0J
 RS1/10SR0R0J

R 311 (B,31,10)
 R 312 (B,31,11)
 R 313 (B,31,12)
 R 701 (A,22,38)
 R 702 (A,24,38)

RS1/16SS472J
 RS1/16SS472J
 RS1/16SS472J
 RS1/16SS101J
 RS1/16SS101J

CAPACITORS

C 1806 (B,67,23)
 C 1807 (B,70,21)
 C 1911 (B,147,21)
 C 1912 (B,144,22)
 C 1941 (B,136,29) 10 uF(A,B,C,D,E)

CKSRYB104K16
 CKSRYB105K10
 CKSRYB104K16
 CKSRYB104K16
 CCG1192

CAPACITORS

C 104 (B,15,52)
 C 110 (B,11,44)
 C 111 (B,12,44)
 C 203 (B,22,47)
 C 205 (A,17,41)

CKSQYB475K6R3
 CKSSYB104K10
 CKSSYB103K16
 CKSSYB104K10
 CKSRYB105K10

C 209 (B,29,48)
 C 210 (B,33,44)
 C 211 (B,34,42)
 C 212 (B,23,29)
 C 213 (B,18,26)

CKSRYB104K16
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB332K50

C 214 (B,17,26)
 C 215 (B,19,29)
 C 216 (B,13,33)
 C 217 (B,10,35)
 C 218 (B,10,37)

CKSSYB473K16
 CKSSYB104K10
 CKSSYB152K50
 CCSSCH390J50
 CCSSCH5R0C50

C 219 (B,14,35)
 C 220 (A,18,39)
 C 221 (B,14,32)
 C 222 (B,14,37)
 C 223 (B,13,42)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CCSSCH680J50

C 224 (B,14,45)
 C 225 (B,14,47)
 C 228 (B,10,34)
 C 229 (B,9,41)
 C 233 (B,33,46)

CCSSCH470J50
 CKSSYB103K16
 CCSSCH180J50
 CKSSYB104K10
 CKSSYB103K16

C 236 (B,8,41)
 C 238 (A,26,45)
 C 299 (A,26,43)
 C 302 (B,29,12)
 C 303 (B,30,12)

CKSSYB104K10
 CKSRYB104K16
 CKSSYB104K10
 CKSSYB102K50
 CKSSYB102K50

C 304 (B,28,12)
 C 305 (B,27,12)
 C 306 (A,32,7)
 C 307 (A,42,19)
 C 308 (A,32,16)

CKSSYB223K16
 CKSSYB104K10
 CKSSYB104K10
 CKSRYB105K10
 CKSRYB105K10

C 710 (A,34,43)

CKSSYB102K50

R 101 (B,7,59)
 R 102 (B,8,59)
 R 103 (B,10,59)
 R 108 (B,14,58)
 R 109 (B,15,50)

RS1/10SR2R4J
 RS1/10SR2R4J
 RS1/10SR2R7J
 RS1/16SS105J
 RS1/16SS152J

R 214 (B,18,28)
 R 215 (B,17,28)
 R 216 (B,13,36)
 R 217 (B,10,33)
 R 218 (B,10,36)

RS1/16SS103J
 RS1/16SS393J
 RS1/16SS102J
 RS1/16SS562J
 RS1/16SS472J

R 229 (B,13,35)
 R 232 (A,31,55)
 R 237 (B,34,45)
 R 240 (B,35,40)
 R 245 (A,34,46)

RS1/16SS471J
 RS1/16SS0R0J
 RS1/16SS221J
 RS1/16SS473J
 RS1/16SS104J

R 254 (A,37,56)
 R 260 (B,30,27)
 R 264 (A,22,9)
 R 281 (B,34,38)
 R 282 (B,34,39)

RS1/16SS104J
 RS1/16SS103J
 RS1/16SS102J
 RS1/16SS560J
 RS1/16SS560J

R 291 (B,34,35)
 R 294 (B,28,49)
 R 303 (A,28,12)
 R 304 (A,29,11)
 R 305 (A,27,9)

RS1/16SS560J
 RS1/16SS471J
 RS1/16SS123J
 RS1/16SS123J
 RS1/16SS102J

R 306 (A,27,12)
 R 307 (A,26,9)
 R 308 (A,26,12)
 R 309 (A,35,7)
 R 310 (B,31,9)

RS1/16SS472J
 RS1/16SS102J
 RS1/16SS472J
 RS1/16SS473J
 RS1/16SS472J

**Unit Number : CWX4023(B)****Unit Name : CD Core Unit (S11.6STD)****MISCELLANEOUS**

IC 201 (B,23,37) IC PE5791A
 IC 301 (A,37,11) IC BD8223EFV
 Q 101 (B,11,53) Transistor 2SA1577
 Q 102 (B,15,54) Transistor LTA123JUB
 X 201 (B,25,49) Ceramic Resonator 16.934 MHz CSS1603

S 901 (A,42,53) Spring Switch(HOME) CSN1080
 S 903 (B,21,12) Spring Switch(DSCSNS) CSN1081

5		
<u>Circuit Symbol and No.</u>		
CN101	(A,16,58)	Connector
CN701	(A,25,29)	Connector

RESISTORS

R 101	(B,6,57)
R 102	(B,8,57)
R 103	(B,9,57)
R 108	(B,18,55)

R 109	(B,12,50)
R 214	(B,18,28)
R 215	(B,17,28)
R 216	(B,12,35)

R 217	(B,10,32)
R 218	(B,10,35)
R 229	(B,12,34)
R 232	(A,31,54)
R 237	(B,33,45)

R 240	(B,34,40)
R 245	(A,34,46)
R 254	(A,37,56)
R 260	(B,30,27)
R 264	(A,22,9)

R 281	(B,33,38)
R 282	(B,33,39)
R 291	(B,33,34)
R 294	(B,27,48)

R 303	(A,27,11)
R 304	(A,28,11)
R 305	(A,26,9)
R 306	(A,26,11)
R 307	(A,25,9)

R 308	(A,25,11)
R 309	(A,35,6)
R 310	(B,30,9)
R 311	(B,30,10)
R 312	(B,30,11)

R 313	(B,30,12)
R 701	(A,21,38)
R 702	(A,23,38)
R 706	(A,32,42)

CAPACITORS

C 104	(B,12,57)
C 203	(B,22,47)
C 209	(B,28,47)
C 210	(B,33,43)
C 211	(B,33,41)

C 212	(B,22,28)
C 213	(B,18,26)
C 214	(B,17,26)
C 215	(B,19,28)
C 216	(B,12,33)

C 217	(B,10,34)
C 218	(B,10,36)
C 219	(B,14,34)
C 220	(A,18,38)
C 221	(B,14,32)

C 222	(B,13,37)
C 223	(B,12,42)

6	
<u>Part No.</u>	
CKS4808	
CKS6146	

RS1/10SR2R4J
RS1/10SR2R4J
RS1/10SR2R7J
RS1/16SS105J

RS1/16SS222J
RS1/16SS103J
RS1/16SS393J
RS1/16SS122J

RS1/16SS562J
RS1/16SS472J
RS1/16SS471J
RS1/16SS0R0J
RS1/16SS221J

RS1/16SS473J
RS1/16SS104J
RS1/16SS104J
RS1/16SS103J
RS1/16SS102J

RS1/16SS560J
RS1/16SS560J
RS1/16SS560J
RS1/16SS471J

RS1/16SS123J
RS1/16SS123J
RS1/16SS102J
RS1/16SS472J
RS1/16SS102J

RS1/16SS472J
RS1/16SS473J
RS1/16SS472J
RS1/16SS472J
RS1/16SS472J

RS1/16SS472J
RS1/16SS101J
RS1/16SS101J
RS1/16SS221J

CKSQYB475K6R3
CKSSYB104K10
CKSRYB104K16
CKSSYB104K10
CKSSYB104K10

CKSSYB104K10
CKSSYB332K50
CKSSYB473K16
CKSSYB104K10
CKSSYB182K50

CCSSCH560J50
CCSSCH4R0C50
CKSSYB104K10
CKSSYB104K10
CKSSYB104K10

CKSSYB104K10
CCSSCH680J50

7	
<u>Circuit Symbol and No.</u>	
C 224	(B,13,45)
C 225	(B,13,46)
C 228	(B,10,33)

C 229	(B,9,40)
C 233	(B,32,46)
C 236	(B,8,40)
C 238	(A,25,44)
C 299	(A,26,41)

C 302	(B,28,12)
C 303	(B,29,12)
C 304	(B,27,12)
C 305	(B,26,12)
C 306	(A,31,7)

C 307	(A,41,19)
C 308	(A,31,15)
C 710	(A,34,42)

D
Unit Number : QWM3750
Unit Name : BT Unit

MISCELLANEOUS

IC 21	(A,8,48) Regulator IC
IC 22	(A,21,46) IC
CN21	(A,34,27) Connector
CN23	(A,42,44) Connector

RESISTORS

R 28	(A,42,31)
R 29	(A,30,41)
R 30	(A,30,37)
R 38	(A,42,17)
R 39	(A,41,23)

R 40	(A,40,23)
R 41	(A,38,23)

CAPACITORS

C 23	(A,24,40) (A,C,D,E,F)
	(A,24,40) (B)
C 24	(A,7,44)
C 26	(A,27,48) 10 uF
C 29	(A,17,45)
C 33	(A,9,54) 10 uF

C 34	(A,42,30)
C 36	(A,32,40)
C 38	(A,15,46) 10 uF
C 39	(A,6,42) 10 uF

8	
<u>Part No.</u>	
CCSSCH470J50	
CKSSYB103K16	
CCSSCH270J50	

CKSSYB104K10
CKSSYB103K16
CKSSYB104K10
CKSRYB104K16
CKSSYB104K10

CKSSYB102K50
CKSSYB102K50
CKSSYB223K16
CKSSYB104K10
CKSSYB104K10

CKSRYB105K10
CKSRYB105K10
CKSSYB102K50

S-1172B18-E6
S-1206B33-U3
CKS6346
CKS3857

RS1/10SR222J
RS1/10SR102J
RS1/10SR102J
RS1/10SR0R0J
RS1/10SR221J

RS1/10SR221J
RS1/10SR221J

XCEVW221M4
CEVW221M4
CKSRYB105K10
CCG1192
CKSRYB105K10
CCG1192

CKSRYB105K10
CKSRYB104K16
CCG1192
CCG1192