

SPECIFICATIONS DISC/CONTENT FORMAT



pandora®



The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

EXPLODED VIEWS AND PARTS LIST

PACKING SECTION (Page 21)


(1) PACKING SECTION PARTS LIST

*:Non spare part

Mark	No.	Description	MVH-S310BT/XINUC	MVH-S320BT/XINUC
*	1	Unit Box	QHG4420	QHG4591
	17-3	Quick Start Guide	QRD3586	QRD3781
	17-4	Web IM	QRI3047	See Contents of Web IM (2)
	18	Contain Box	QHL4420	QHL4591
Mark	No.	Description	MVH-S312BT/XINUC	MVH-S322BT/XINUC
*	1	Unit Box	QHG4421	QHG4592
	17-3	Quick Start Guide	QRD3586	QRD3781
	17-4	Web IM	QRI3047	See Contents of Web IM (2)
	18	Contain Box	QHL4421	QHL4592
Mark	No.	Description	MVH-S410BT/XINEW5	MVH-S420BT/XINEW5
*	1	Unit Box	QHG4418	QHG4593
	17-1	Owner's Manual	QRB3780	QRB3926
	17-2	Quick Start Guide	QRD3584	QRD3777
	17-3	Quick Start Guide	QRD3585	QRD3778
	17-4	Web IM	QRI3046	See Contents of Web IM (2)
	18	Contain Box	QHL4418	QHL4593
Mark	No.	Description	MVH-S41BT/XINEW5	MVH-S42BT/XINEW5
*	1	Unit Box	QHG4419	QHG4594
	17-1	Owner's Manual	QRB3780	QRB3926
	17-2	Quick Start Guide	QRD3584	QRD3777
	17-3	Quick Start Guide	QRD3585	QRD3778
	17-4	Web IM	QRI3046	See Contents of Web IM (2)
	18	Contain Box	QHL4419	QHL4594
Mark	No.	Description	MVH-S310BT/XINEW5	MVH-S320BT/XINEW5
*	1	Unit Box	QHG4426	QHG4595
	17-1	Owner's Manual	QRB3780	QRB3926
	17-2	Quick Start Guide	QRD3584	QRD3777
	17-3	Quick Start Guide	QRD3585	QRD3778
	17-4	Web IM	QRI3046	See Contents of Web IM (2)
	18	Contain Box	QHL4426	QHL4595

Mark	No.	Description	MVH-S315BT/XINCS	MVH-S325BT/XINCS
	1	Unit Box	QHG4423	QHG4597
	13	Microphone Assy	CPM1109	CPM1113
	14	Holder	CZN7192	Not used
	15	Cushion	CZN7193	Not used
	17-3	Quick Start Guide	QRD3598	QRD3782
*	17-4	Web IM	QRI3103	See Contents of Web IM (2)
	18	Contain Box	QHL4423	QHL4597

Mark	No.	Description	MVH-S315BT/XINGS	MVH-S325BT/XINGS
	1	Unit Box	QHG4422	QHG4596
	13	Microphone Assy	CPM1109	CPM1113
	14	Holder	CZN7192	Not used
	15	Cushion	CZN7193	Not used
	17-1	Owner's Manual	QRD3599	Not used
	17-3	Quick Start Guide	Not used	QRD3783
	18	Contain Box	QHL4422	QHL4596

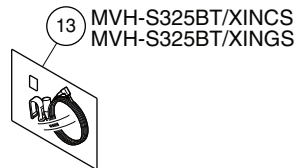

Owner's Manual, Quick Start Guide

Part No.	Language
QRD3781	English, French, Spanish(Espanol)
QRB3926	Russian
QRD3777	English, French, Italian
QRD3778	Spanish(Espanol), German, Dutch
QRD3782	English, Spanish(Espanol), Portuguese(B)
QRD3783	English, Traditional Chinese, Arabic, Persian

(2) CONTENTS OF WEB IM

Part No.	Language
*OPM_MVHS320BTUC_3L_A	English, French, Spanish(Espanol)
*OPM_MVHS420BTEW5_6L_A	English, French, Italian, Spanish(Espanol), German, Dutch
*OPM_MVHX3000BTCS_3L_A	English, Spanish(Espanol), Portuguese(B)
*OPM_MVHS325BTGS_4L_A	English, Traditional Chinese, Arabic, Persian

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

EXTERIOR SECTION (Page 24)**EXTERIOR SECTION PARTS LIST**

Mark	No.	Description	MVH-S310BT/XINUC	MVH-S320BT/XINUC	
A	1	Detach Grille Assy	QXA5772	QXA6067	
	9	Grille Unit	QXA5472	QXA6237	
	*	10	Grille	QNS4427	
	*	12	Plate	QNS4429	
	17	Button(DETACH)	QAC3320	QAC3327	
	18	Button(NAVI/BASS)	QAC3314	QAC3345	
	22	Knob Unit	QXA5430	QXA5439	
	23	Button(PHONE)	QAC3313	*QAC3326	
	25	Tuner Amp Unit	QWM4944	QWM5311	
	B	1	Detach Grille Assy	QXA5773	QXA6068
9		Grille Unit	QXA5473	QXA6238	
*		10	Grille	QNS4427	
*		12	Plate	QNS4429	
17		Button(DETACH)	QAC3320	QAC3327	
18		Button(NAVI/BASS)	QAC3314	QAC3345	
22		Knob Unit	QXA5430	QXA5439	
23		Button(PHONE)	QAC3313	*QAC3326	
25		Tuner Amp Unit	QWM4945	QWM5312	
C		1	Detach Grille Assy	QXA5770	QXA6069
	9	Grille Unit	QXA5470	QXA6239	
	*	10	Grille	QNS4428	
	*	12	Plate	QNS4429	
	17	Button(DETACH)	QAC3320	QAC3327	
	18	Button(NAVI/PHONE)	QAC3315	QAC3346	
	22	Knob Unit	QXA5430	QXA5439	
	25	Tuner Amp Unit	QWM4942	QWM5313	
	D	1	Detach Grille Assy	QXA5771	QXA6070
		2	Keyboard Unit	QWM5077	QWM4990
9		Grille Unit	QXA5471	QXA6240	
*		10	Grille	QNS4428	
*		12	Plate	QNS4429	
17		Button(DETACH)	QAC3320	QAC3327	
18		Button(NAVI/PHONE)	QAC3315	QAC3346	
22		Knob Unit	QXA5423	QXA5438	
25		Tuner Amp Unit	QWM4943	QWM5314	
E		1	Detach Grille Assy	QXA5770	QXA6069
	9	Grille Unit	QXA5470	QXA6239	
	*	10	Grille	QNS4428	
	*	12	Plate	QNS4429	
	17	Button(DETACH)	QAC3320	QAC3327	
	18	Button(NAVI/PHONE)	QAC3315	QAC3346	
	22	Knob Unit	QXA5430	QXA5439	
	25	Tuner Amp Unit	QWM4942	QWM5313	
	F	1	Detach Grille Assy	QXA5770	QXA6069
		9	Grille Unit	QXA5470	QXA6239
*		10	Grille	QNS4428	
*		12	Plate	QNS4429	
17		Button(DETACH)	QAC3320	QAC3327	
18		Button(NAVI/PHONE)	QAC3315	QAC3346	
22		Knob Unit	QXA5430	QXA5439	
25		Tuner Amp Unit	QWM4942	QWM5313	

Mark	No.	Description	MVH-S310BT/XINEW5	MVH-S320BT/XINEW5
	1	Detach Grille Assy	QXA5748	QXA6071
	9	Grille Unit	QXA5478	QXA6241
*	10	Grille	QNS4332	QNS4428
*	12	Plate	QNS4298	QNS4429
	17	Button(DETACH)	QAC3320	QAC3327
	18	Button(NAVI/PHONE)	QAC3315	QAC3346
	22	Knob Unit	QXA5423	QXA5438
	25	Tuner Amp Unit	QWM5075	QWM5315
Mark	No.	Description	MVH-S315BT/XINCS	MVH-S325BT/XINCS
	1	Detach Grille Assy	QXA5775	QXA6073
	9	Grille Unit	QXA5474	QXA6242
*	10	Grille	QNS4297	QNS4427
*	12	Plate	QNS4298	QNS4429
	17	Button(DETACH)	QAC3320	QAC3327
	18	Button(NAVI/BASS)	QAC3314	QAC3345
	22	Knob Unit	QXA5430	QXA5439
	23	Button(PHONE)	QAC3313	*QAC3326
	25	Tuner Amp Unit	QWM5090	QWM5317
Mark	No.	Description	MVH-S315BT/XINGS	MVH-S325BT/XINGS
	1	Detach Grille Assy	QXA5774	QXA6072
	9	Grille Unit	QXA5474	QXA6242
*	10	Grille	QNS4297	QNS4427
*	12	Plate	QNS4298	QNS4429
	17	Button(DETACH)	QAC3320	QAC3327
	18	Button(NAVI/BASS)	QAC3314	QAC3345
	22	Knob Unit	QXA5430	QXA5439
	23	Button(PHONE)	QAC3313	*QAC3326
	25	Tuner Amp Unit	QWM4946	QWM5316

ELECTRICAL PARTS LIST (Page 42)

Tuner Amp Unit

Circuit Symbol and No.	Part Name	MVH-S310BT/XINUC	MVH-S320BT/XINUC
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1054	QVQ1105
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R538		XRS1/16SS472J	XRS1/16SS473J
R539		Not used	XRS1/16SS103J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J

Circuit Symbol and No.	Part Name	MVH-S312BT/XINUC	MVH-S322BT/XINUC
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1054	QVQ1105
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R538		Not used	XRS1/16SS223J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J

Circuit Symbol and No.	Part Name	MVH-S410BT/XINEW5	MVH-S420BT/XINEW5
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1059	QVQ1104
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R536		XRS1/16SS472J	XRS1/16SS473J
R537		Not used	XRS1/16SS223J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J

Circuit Symbol and No.	Part Name	MVH-S41BT/XINEW5	MVH-S42BT/XINEW5
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1059	QVQ1104
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used

Circuit Symbol and No.	Part Name	MVH-S41BT/XINEW5	MVH-S42BT/XINEW5
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R536		XRS1/16SS472J	XRS1/16SS473J
R537		Not used	XRS1/16SS223J
R538		XRS1/16SS103J	Not used
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J

Circuit Symbol and No.	Part Name	MVH-S310BT/XINEW5	MVH-S320BT/XINEW5
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1059	QVQ1104
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R536		XRS1/16SS472J	XRS1/16SS473J
R537		Not used	XRS1/16SS223J
R538		XRS1/16SS473J	XRS1/16SS103J
R591		XRS1/16SS361J	XRS1/16SS221J

Circuit Symbol and No.	Part Name	MVH-S315BT/XINCS	MVH-S325BT/XINCS
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1059	QVQ1104
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R536		XRS1/16SS472J	XRS1/16SS473J
R537		Not used	XRS1/16SS223J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J

Circuit Symbol and No.	Part Name	MVH-S315BT/XINGS	MVH-S325BT/XINGS
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	FlashROM Unit	QVQ1059	QVQ1104
D851	Zener Diode	Not used	RSB6R8SM
D852	Zener Diode	Not used	RSB6R8SM
L557	Chip Beads	VTL1133	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R519		XRS1/16SS271J	XRS1/16SS151J
R536		XRS1/16SS472J	XRS1/16SS473J
R537		Not used	XRS1/16SS223J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J