



DVD is a trademark of DVD Format/Logo Licensing Corporation.

EXPLODED VIEWS AND PARTS LIST

PACKING(Page 47)

PACKING SECTION PARTS LIST

* : Non spare part

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-190DVD/ XNUC	AVH-190DVD/ XEVEU5	AVH-190G/ XNUR
	1	Cord Assy	CDP1696	CDP1696	CDP1697	CDP1697
	4	Screw	CBA2383	CBA2383	CBA2383	CBA2383
	6	Handle	Not used	Not used	CND6289	CND6289
	7	Cover	CEG1359	CEG1359	CEG1356	CEG1356
	8	Unit Box	QHG3892	QHG4039	QHG4036	QHG4038
	9	Contain Box	QHL3892	QHL4039	QHL4036	QHL4038
	10	Protector	CHP4598	CHP4598	CHP4599	CHP4599
	11	Card Remote Control Unit	Not used	Not used	Not used	Not used
	12	IM CD-ROM	Not used	Not used	QPJ3056	Not used
	13	Panel	Not used	Not used	Not used	Not used
	14-1	Owner's Manual	QRD3356	QRD3470	Not used	QRB3682
	14-2	Quick Start Guide	Not used	Not used	QRD3466	Not used
	14-3	Installation Manual	Not used	Not used	QRD3468	Not used
*	14-4	Caution Card	Not used	Not used	CRP1441	Not used
*	14-6	Warranty Card	QRY3001	QRY3001	CRY1376	CRY1376
	15	Cord Assy	Not used	Not used	Not used	Not used

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-190/ XNUR	AVH-195DVD/ XNRC	AVH-195DVD/ XNRD
	1	Cord Assy	CDP1696	CDP1697	CDP1696	CDP1696
	4	Screw	CBA2383	CBA2383	Not used	Not used
	6	Handle	Not used	CND6289	Not used	Not used
	7	Cover	CEG1359	CEG1356	CEG1356	CEG1356
	8	Unit Box	QHG3892	QHG4037	QHG4040	QHG4041
	9	Contain Box	QHL3892	QHL4037	QHL4040	QHL4041
	10	Protector	CHP4598	CHP4599	CHP4598	CHP4598
	11	Card Remote Control Unit	Not used	Not used	CXE5116	Not used
	12	IM CD-ROM	Not used	Not used	Not used	Not used
	13	Panel	Not used	Not used	CNS9475	CNS9475
	14-1	Owner's Manual	QRD3356	QRB3682	QRD3471	QRD3472
	14-2	Quick Start Guide	Not used	Not used	Not used	Not used
	14-3	Installation Manual	Not used	Not used	Not used	Not used
*	14-4	Caution Card	Not used	Not used	Not used	Not used
*	14-6	Warranty Card	QRY3001	CRY1376	Not used	Not used
	15	Cord Assy	Not used	Not used	Not used	Not used

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-195DVD/ XNRI	AVH-199DVD/ XNID
	1	Cord Assy	CDP1696	CDP1696	CDP1696
	4	Screw	CBA2383	Not used	Not used
	6	Handle	Not used	CND6289	Not used
	7	Cover	CEG1359	CEG1356	CEG1356
	8	Unit Box	QHG3892	QHG4042	QHG4043
	9	Contain Box	QHL3892	QHL4042	QHL4043
	10	Protector	CHP4598	CHP4599	CHP4598
	11	Card Remote Control Unit	Not used	CXE5116	CXE5116
	12	IM CD-ROM	Not used	Not used	Not used
	13	Panel	Not used	CNS9475	CNS9475
	14-1	Owner's Manual	QRD3356	QRD3473	QRB3683
	14-2	Quick Start Guide	Not used	Not used	Not used
	14-3	Installation Manual	Not used	Not used	Not used
*	14-4	Caution Card	Not used	Not used	Not used
*	14-6	Warranty Card	QRY3001	Not used	CRY1304
	15	Cord Assy	Not used	CDP1805	Not used

EXTERIOR (1) (Page 50)

EXTERIOR (1) SECTION PARTS LIST

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-190DVD/ XNUC	AVH-190DVD/ XEVEU5	AVH-190G/ XNUR
	6	Monitor Key Unit	QWM4236	QWM4436	QWM4435	QWM4437
	20	Grille Assy	QXA4643	QXA4951	QXA4948	QXA4950
	23	Grille	QNS4031	QNS4114	QNS4111	QNS4113
	24	DVD Mechanism Module	CXK8200 (LS2.5)	CXK8200 (LS2.5)	CXK8210 (LS2.5B)	CXK8200 (LS2.5)
	25	Holder	Not used	Not used	CND7102	CND7102
	26	Panel	Not used	Not used	CNU2645	CNU2645

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-190/ XNUR	AVH-195DVD/ XNRC	AVH-195DVD/ XNRD
	6	Monitor Key Unit	QWM4236	QWM4435	QWM4436	QWM4436
	20	Grille Assy	QXA4643	QXA4949	QXA4952	QXA4952
	23	Grille	QNS4031	QNS4112	QNS4115	QNS4115
	24	DVD Mechanism Module	CXK8200 (LS2.5)	CXK8200 (LS2.5)	CXK8200 (LS2.5)	CXK8200 (LS2.5)
	25	Holder	Not used	CND7102	Not used	Not used
	26	Panel	Not used	CNU2645	Not used	Not used

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-195DVD/ XNRI	AVH-199DVD/ XNID
	6	Monitor Key Unit	QWM4236	QWM4436	QWM4436
	20	Grille Assy	QXA4643	QXA4952	QXA4953
	23	Grille	QNS4031	QNS4115	QNS4116
	24	DVD Mechanism Module	CXK8200 (LS2.5)	CXK8200 (LS2.5)	CXK8200 (LS2.5)
	25	Holder	Not used	CND7102	Not used
	26	Panel	Not used	CNU2645	Not used

1234

EXTERIOR (2) (Page 52)

EXTERIOR (2) SECTION PARTS LIST

A

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-190DVD/ XNUC	AVH-190DVD/ XEVEU5	AVH-190G/ XNUR
	2	Cord Assy	CDP1696	CDP1696	CDP1697	CDP1697
	3	Card Remote Control Unit	Not used	Not used	Not used	Not used
	4	Battery Cover	Not used	Not used	Not used	Not used
	8	Mother Unit	QWM4214	QWM4422	QWM4419	QWM4421

B

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-190/ XNUR	AVH-195DVD/ XNRC	AVH-195DVD/ XNRD
	2	Cord Assy	CDP1696	CDP1697	CDP1696	CDP1696
	3	Card Remote Control Unit	Not used	Not used	CXE5116	Not used
	4	Battery Cover	Not used	Not used	CNU1624	Not used
	8	Mother Unit	QWM4214	QWM4420	QWM4423	QWM4424

C

Mark	No.	Description	AVH-180DVD/ XNUC	AVH-195DVD/ XNRI	AVH-199DVD/ XNID
	2	Cord Assy	CDP1696	CDP1696	CDP1696
	3	Card Remote Control Unit	Not used	CXE5116	CXE5116
	4	Battery Cover	Not used	CNU1624	CNU1624
	8	Mother Unit	QWM4214	QWM4425	QWM4426

ELECTRICAL PARTS LIST (Page 84)

MOTHER UNIT

Circuit Symbol and No.	Part Name	AVH-180DVD/ XNUC	AVH-190DVD/ XNUC	AVH-190DVD/ XEVEU5	AVH-190G/ XNUR
IC701	IC	337S3959	337S3959	337S3959	Not used
IC721	Flash ROM Unit	CWJ2734	QVQ1001	QVQ1000	QVQ1002
Q701	Bipolar TR	LSAR523UB	LSAR523UB	LSAR523UB	Not used
Q3121	Bipolar TR	Not used	Not used	Not used	Not used
Q3122	Bipolar TR	Not used	Not used	Not used	Not used
Q3123	Bipolar TR	Not used	Not used	Not used	Not used
Q3124	Bipolar TR	Not used	Not used	Not used	Not used
R417		Not used	Not used	Not used	RS1/16SS104J
R418		Not used	Not used	RS1/16SS104J	Not used
R419		Not used	Not used	Not used	RS1/16SS104J
R420		Not used	Not used	RS1/16SS104J	Not used
R464		Not used	Not used	Not used	RS1/16SS104J
R465		RS1/16SS104J	RS1/16SS104J	RS1/16SS104J	Not used
R701		RS1/16SS473J	RS1/16SS473J	RS1/16SS473J	Not used
R702		RS1/16SS472J	RS1/16SS472J	RS1/16SS472J	Not used
R703		RS1/16SS222J	RS1/16SS222J	RS1/16SS222J	Not used
R704		RS1/16SS222J	RS1/16SS222J	RS1/16SS222J	Not used
R705		RS1/16SS183J	RS1/16SS183J	RS1/16SS183J	Not used
R706		RS1/16SS101J	RS1/16SS101J	RS1/16SS101J	Not used
R707		RS1/16SS101J	RS1/16SS101J	RS1/16SS101J	Not used
R708		RS1/16SS221J	RS1/16SS221J	RS1/16SS221J	Not used
R3129		Not used	Not used	Not used	Not used
R3130		Not used	Not used	Not used	Not used
R3132		Not used	Not used	Not used	Not used
R3133		Not used	Not used	Not used	Not used
C402		Not used	Not used	Not used	Not used
C403		Not used	Not used	Not used	Not used
C701		CKSSYB104K10	CKSSYB104K10	CKSSYB104K10	Not used
C702		CKSSYB102K50	CKSSYB102K50	CKSSYB102K50	Not used
C1319		XCEHAT332M16	CEHAT332M16	CEHAT332M16	CEHAT332M16
C3125		Not used	Not used	Not used	Not used

A

B

C

D

E

F

Circuit Symbol and No.	Part Name	AVH-180DVD/ XNUC	AVH-190/ XNUR	AVH-195DVD/ XNRC	AVH-195DVD/ XNRD
IC701	IC	337S3959	Not used	337S3959	337S3959
IC721	Flash ROM Unit	CWJ2734	QVQ1002	QVQ1003	QVQ1004
Q701	Bipolar TR	LSAR523UB	Not used	LSAR523UB	LSAR523UB
Q3121	Bipolar TR	Not used	Not used	EMD53	EMD53
Q3122	Bipolar TR	Not used	Not used	EMD53	EMD53
Q3123	Bipolar TR	Not used	Not used	EMD53	EMD53
Q3124	Bipolar TR	Not used	Not used	EMD53	EMD53
R417		Not used	Not used	RS1/16SS104J	RS1/16SS104J
R418		Not used	RS1/16SS104J	Not used	Not used
R419		Not used	RS1/16SS104J	Not used	RS1/16SS104J
R420		Not used	Not used	RS1/16SS104J	Not used
R464		Not used	Not used	Not used	Not used
R465		RS1/16SS104J	RS1/16SS104J	RS1/16SS104J	RS1/16SS104J
R701		RS1/16SS473J	Not used	RS1/16SS473J	RS1/16SS473J
R702		RS1/16SS472J	Not used	RS1/16SS472J	RS1/16SS472J
R703		RS1/16SS222J	Not used	RS1/16SS222J	RS1/16SS222J
R704		RS1/16SS222J	Not used	RS1/16SS222J	RS1/16SS222J
R705		RS1/16SS183J	Not used	RS1/16SS183J	RS1/16SS183J
R706		RS1/16SS101J	Not used	RS1/16SS101J	RS1/16SS101J
R707		RS1/16SS101J	Not used	RS1/16SS101J	RS1/16SS101J
R708		RS1/16SS221J	Not used	RS1/16SS221J	RS1/16SS221J
R3129		Not used	Not used	RS1/16SS6800D	RS1/16SS6800D
R3130		Not used	Not used	RS1/16SS6800D	RS1/16SS6800D
R3132		Not used	Not used	RS1/16SS8201D	RS1/16SS8201D
R3133		Not used	Not used	RS1/16SS8201D	RS1/16SS8201D
C402		Not used	Not used	CKSSYB104K10	CKSSYB104K10
C403		Not used	Not used	CKSSYB104K10	CKSSYB104K10
C701		CKSSYB104K10	Not used	CKSSYB104K10	CKSSYB104K10
C702		CKSSYB102K50	Not used	CKSSYB102K50	CKSSYB102K50
C1319		XCEHAT332M16	CEHAT332M16	CEHAT332M16	CEHAT332M16
C3125		Not used	Not used	CKSSYB104K10	CKSSYB104K10

Circuit Symbol and No.	Part Name	AVH-180DVD/ XNUC	AVH-195DVD/ XNRI	AVH-199DVD/ XNID
IC701	IC	337S3959	337S3959	Not used
IC721	Flash ROM Unit	CWJ2734	QVQ1005	QVQ1006
Q701	Bipolar TR	LSAR523UB	LSAR523UB	Not used
Q3121	Bipolar TR	Not used	EMD53	EMD53
Q3122	Bipolar TR	Not used	EMD53	EMD53
Q3123	Bipolar TR	Not used	EMD53	EMD53
Q3124	Bipolar TR	Not used	EMD53	EMD53
R417		Not used	Not used	Not used
R418		Not used	RS1/16SS104J	RS1/16SS104J
R419		Not used	Not used	RS1/16SS104J
R420		Not used	RS1/16SS104J	Not used
R464		Not used	RS1/16SS104J	RS1/16SS104J
R465		RS1/16SS104J	Not used	Not used
R701		RS1/16SS473J	RS1/16SS473J	Not used
R702		RS1/16SS472J	RS1/16SS472J	Not used
R703		RS1/16SS222J	RS1/16SS222J	Not used
R704		RS1/16SS222J	RS1/16SS222J	Not used
R705		RS1/16SS183J	RS1/16SS183J	Not used
R706		RS1/16SS101J	RS1/16SS101J	Not used
R707		RS1/16SS101J	RS1/16SS101J	Not used
R708		RS1/16SS221J	RS1/16SS221J	Not used
R3129		Not used	RS1/16SS6800D	RS1/16SS6800D
R3130		Not used	RS1/16SS6800D	RS1/16SS6800D
R3132		Not used	RS1/16SS8201D	RS1/16SS8201D
R3133		Not used	RS1/16SS8201D	RS1/16SS8201D
C402		Not used	CKSSYB104K10	CKSSYB104K10
C403		Not used	CKSSYB104K10	CKSSYB104K10
C701		CKSSYB104K10	CKSSYB104K10	Not used
C702		CKSSYB102K50	CKSSYB102K50	Not used
C1319		XCEHAT332M16	CEHAT332M16	CEHAT332M16
C3125		Not used	CKSSYB104K10	CKSSYB104K10

MONITOR KEY UNIT

Circuit Symbol and No.	Part Name	AVH-180DVD/XNUC	AVH-190DVD/XNUC AVH-195DVD/XNRC AVH-195DVD/XNRD AVH-195DVD/XNRI AVH-199DVD/XNID	AVH-190DVD/XEVEU5 AVH-190/XNUR	AVH-190G/XNUR
D5601	LED	FM-3528BK-470M (Blue)	FM-3528BK-470M (Blue)	FM-3528SXXK620H08 (Red)	FM-3528UGK-520D (GREEN)

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.