


9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

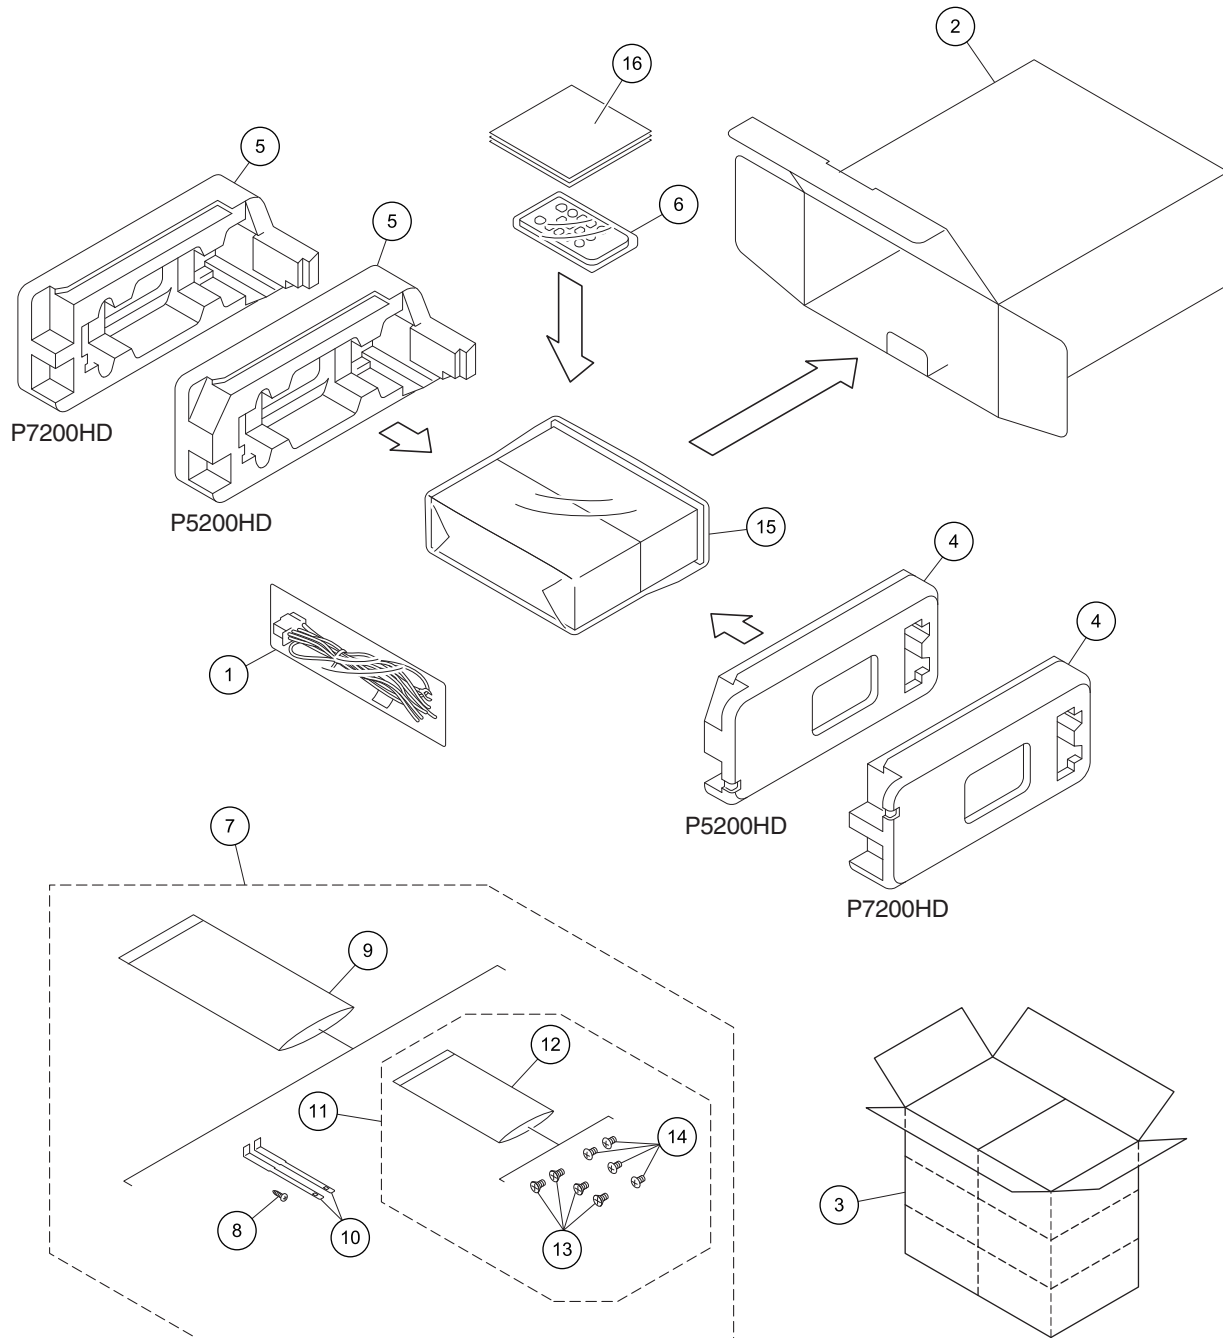


PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy(P7200HD)	CDP1269	9	Polyethylene Bag	CEG1160
	Cord Assy(P5200HD)	YDP5039	10	Handle	CND3707
2	Unit Box(P7200HD)	CHG7110			
	Unit Box(P5200HD)	CHG7111	11	Screw Assy	YEA5072
3	Contain Box(P7200HD)	CHL7110	*	12 Polyethylene Bag	CEG-127
	Contain Box(P5200HD)	CHL7111	13	Screw	CRZ50P090FTC
4	Protector(P7200HD)	CHP3962	14	Screw	TRZ50P080FTC
	Protector(P5200HD)	CHP3941	15	Polyethylene Bag	CEG1173
5	Protector(P7200HD)	CHP3963	16-1	Owner's Manual(P7200HD)	CRD4439
	Protector(P5200HD)	CHP3942		Owner's Manual(P5200HD)	CRD4446
6	Remote Control Unit	CXE2758	16-2	Installation Manual(P7200HD)	CRD4440
*	7 Accessory Assy	YEA5071		Installation Manual(P5200HD)	CRD4447
8	Screw	BPZ20P060FTC	* 16-3	Warranty Card	CRY1276

Owner's Manual,Installation Manual

Part No.	Language
CRD4439	English, French, Spanish(Espanol)
CRD4440	English, French, Spanish(Espanol)
CRD4446	English, French, Spanish(Espanol)
CRD4447	English, French, Spanish(Espanol)

9.2 EXTERIOR(1)

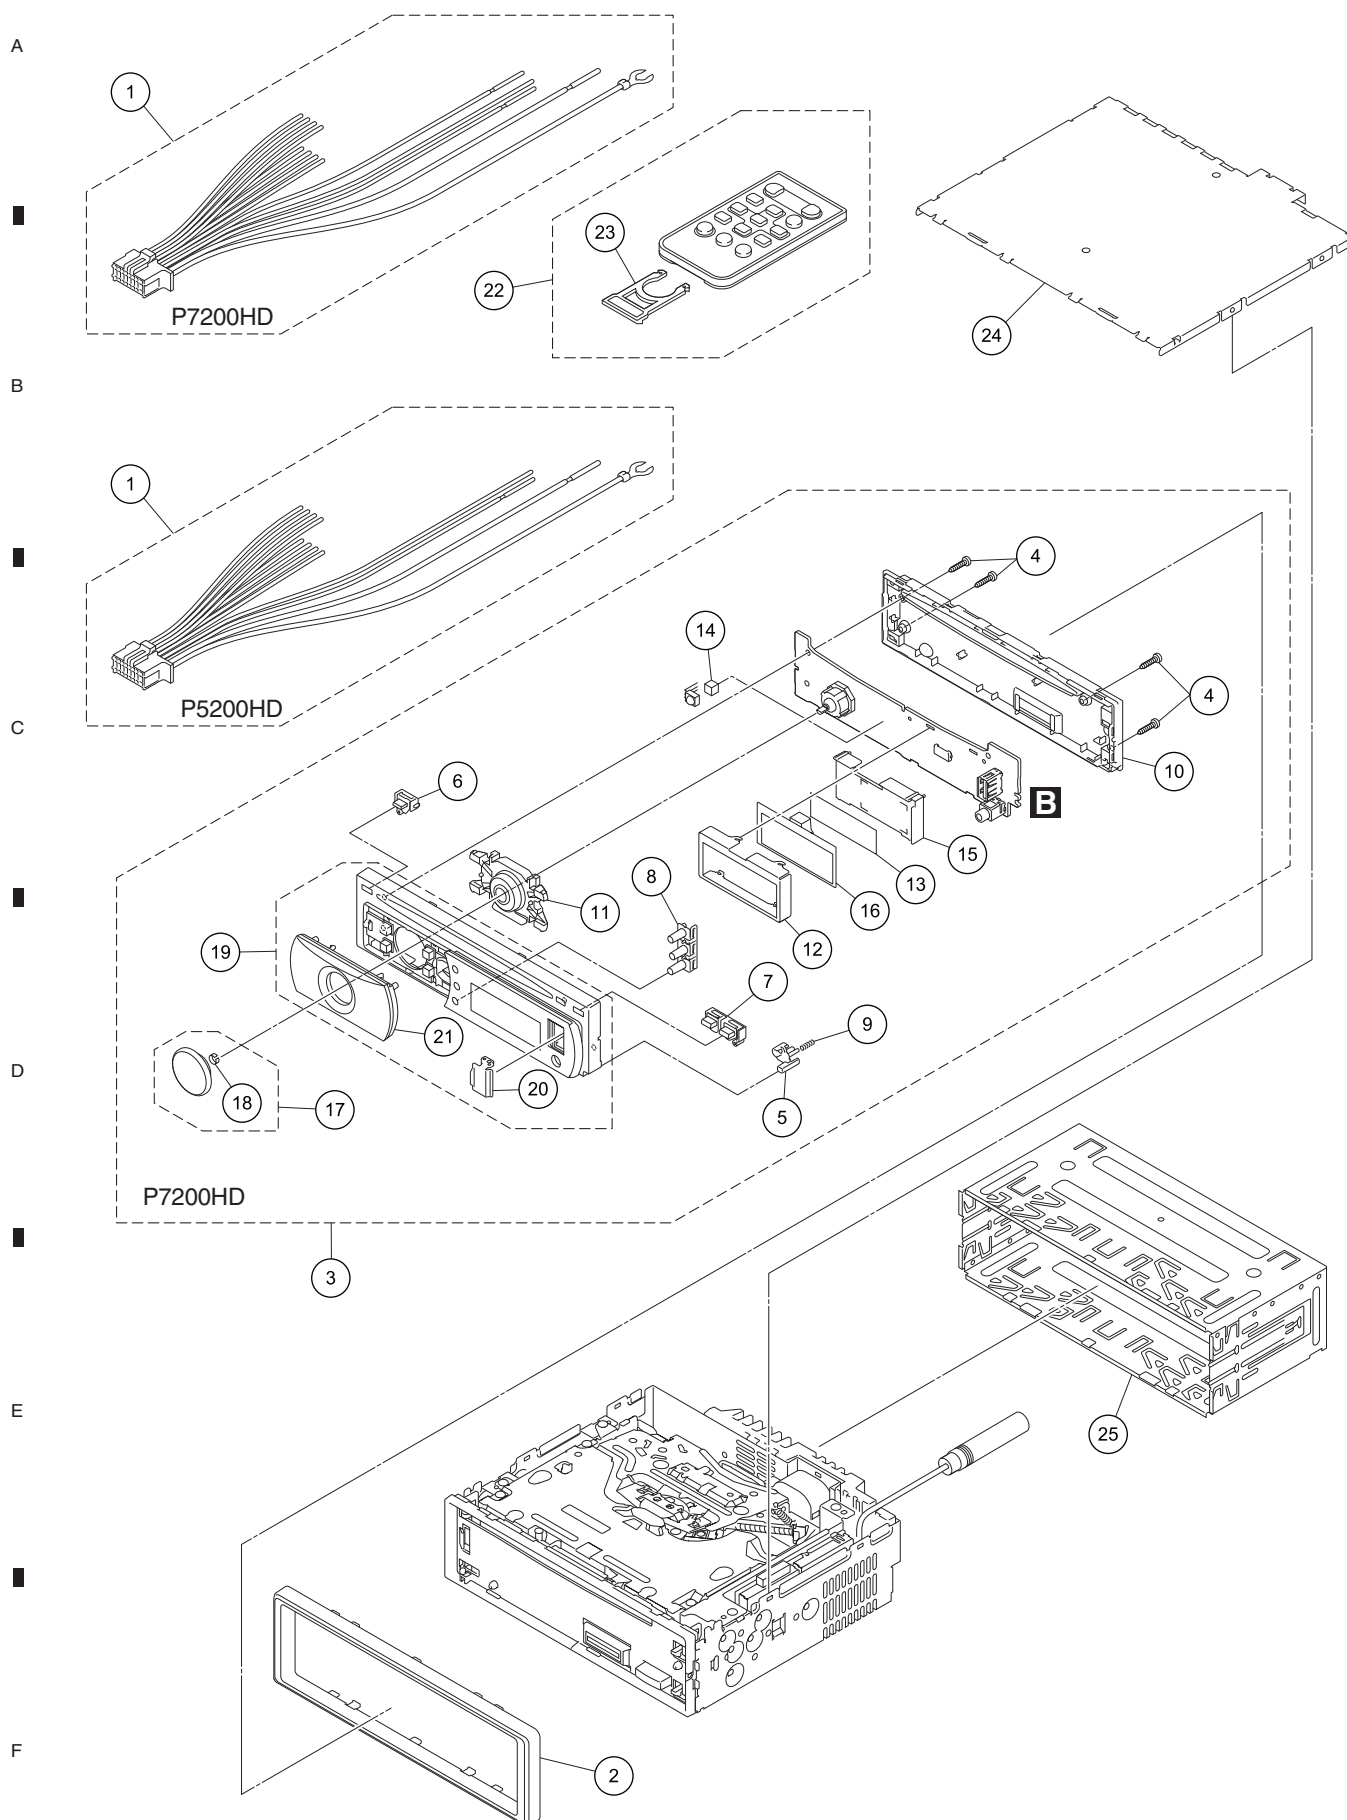

EXTERIOR(1) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy(P7200HD)	CDP1269
	Cord Assy(P5200HD)	YDP5039
2	Panel	CNU1016
3	Detach Grille Assy	CXE2477
4	Screw	BPZ20P100FTC
5	Button(DETACH)	CAI2699
6	Button(S.Rtrv/SAT MODE)	CAI2700
7	Button(EJECT, CLK/DISP OFF)	CAI2701
8	Button(TAG, iPod, LOC)	CAI2702
9	Spring	CBH2210
10	Cover	CNU1025
11	Lighting Conductor	CNW1756
12	Holder	CND5436
13	Double Side Tape	CNM8673
14	Cushion	CNN3211
15	Holder	CNW1758
16	OEL Module	MXS4011
17	Knob Unit	CXE2507
18	Spring	XBL7005
19	Grille Unit	CXE2887
* 20	Door(USB)	CAT2912
* 21	Button Unit(SRC, BAND, LIST, BACK)	CXE2509
22	Remote Control Unit	CXE2758
23	Cover	CNS7068
24	Case	YNB5063
25	Holder	CND3598

1 2 3 4

9.3 EXTERIOR(2)

A


B

C

D

E

F

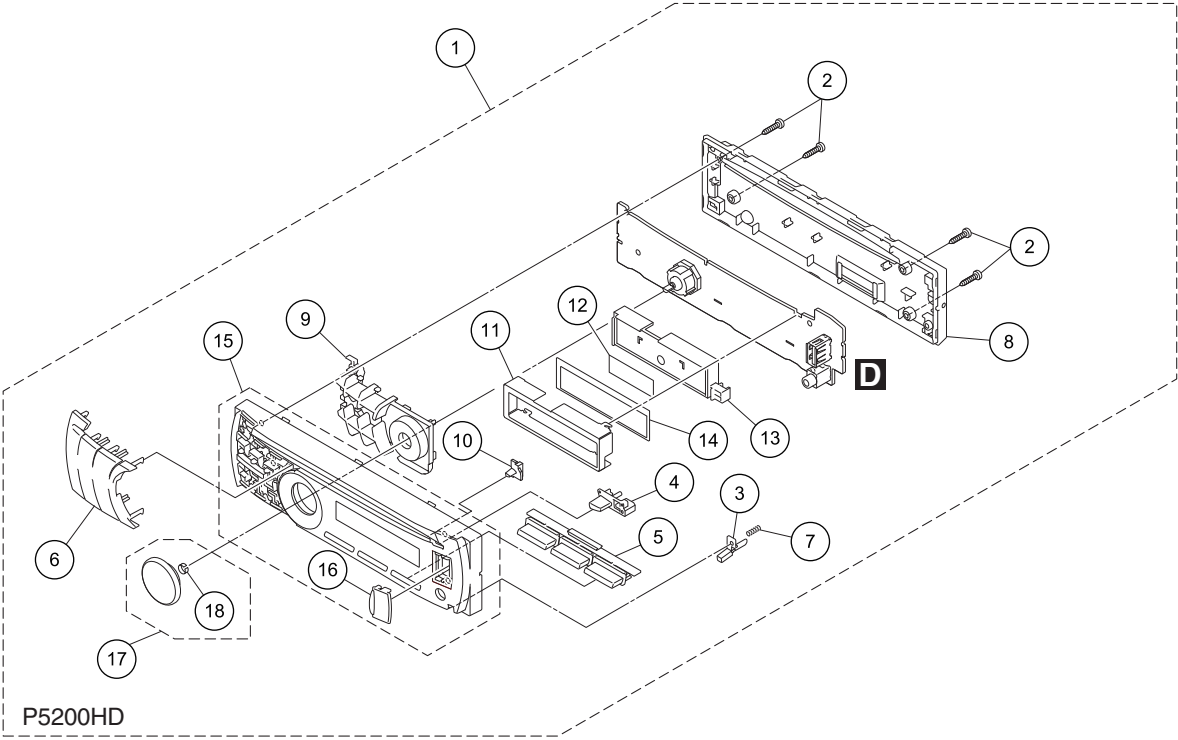

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Detach Grille Assy	CXE2480
2	Screw	BPZ20P100FTC
3	Button(DETACH)	CAI2688
4	Button(EJECT)	CAI2689
5	Button(1-6)	CAI2690
6	Button (SRC, BAND, TAG, S.Rtrv, LIST, BACK)	CAI2712
7	Spring	CBH2210
8	Cover	CNU1012
9	Lighting Conductor	CNW1752
10	Lighting Conductor	CNW1753
11	Holder	CND5407
12	Double Side Tape	CNN1878
13	Holder	CNW1754
14	OEL Module	MXS4013
15	Grille Unit	CXE2415
16	Door(USB)	CAT2911
17	Knob Unit	CXE2417
18	Spring	XBL7005

A

B


C

D

E


F

9.4 EXTERIOR(3)

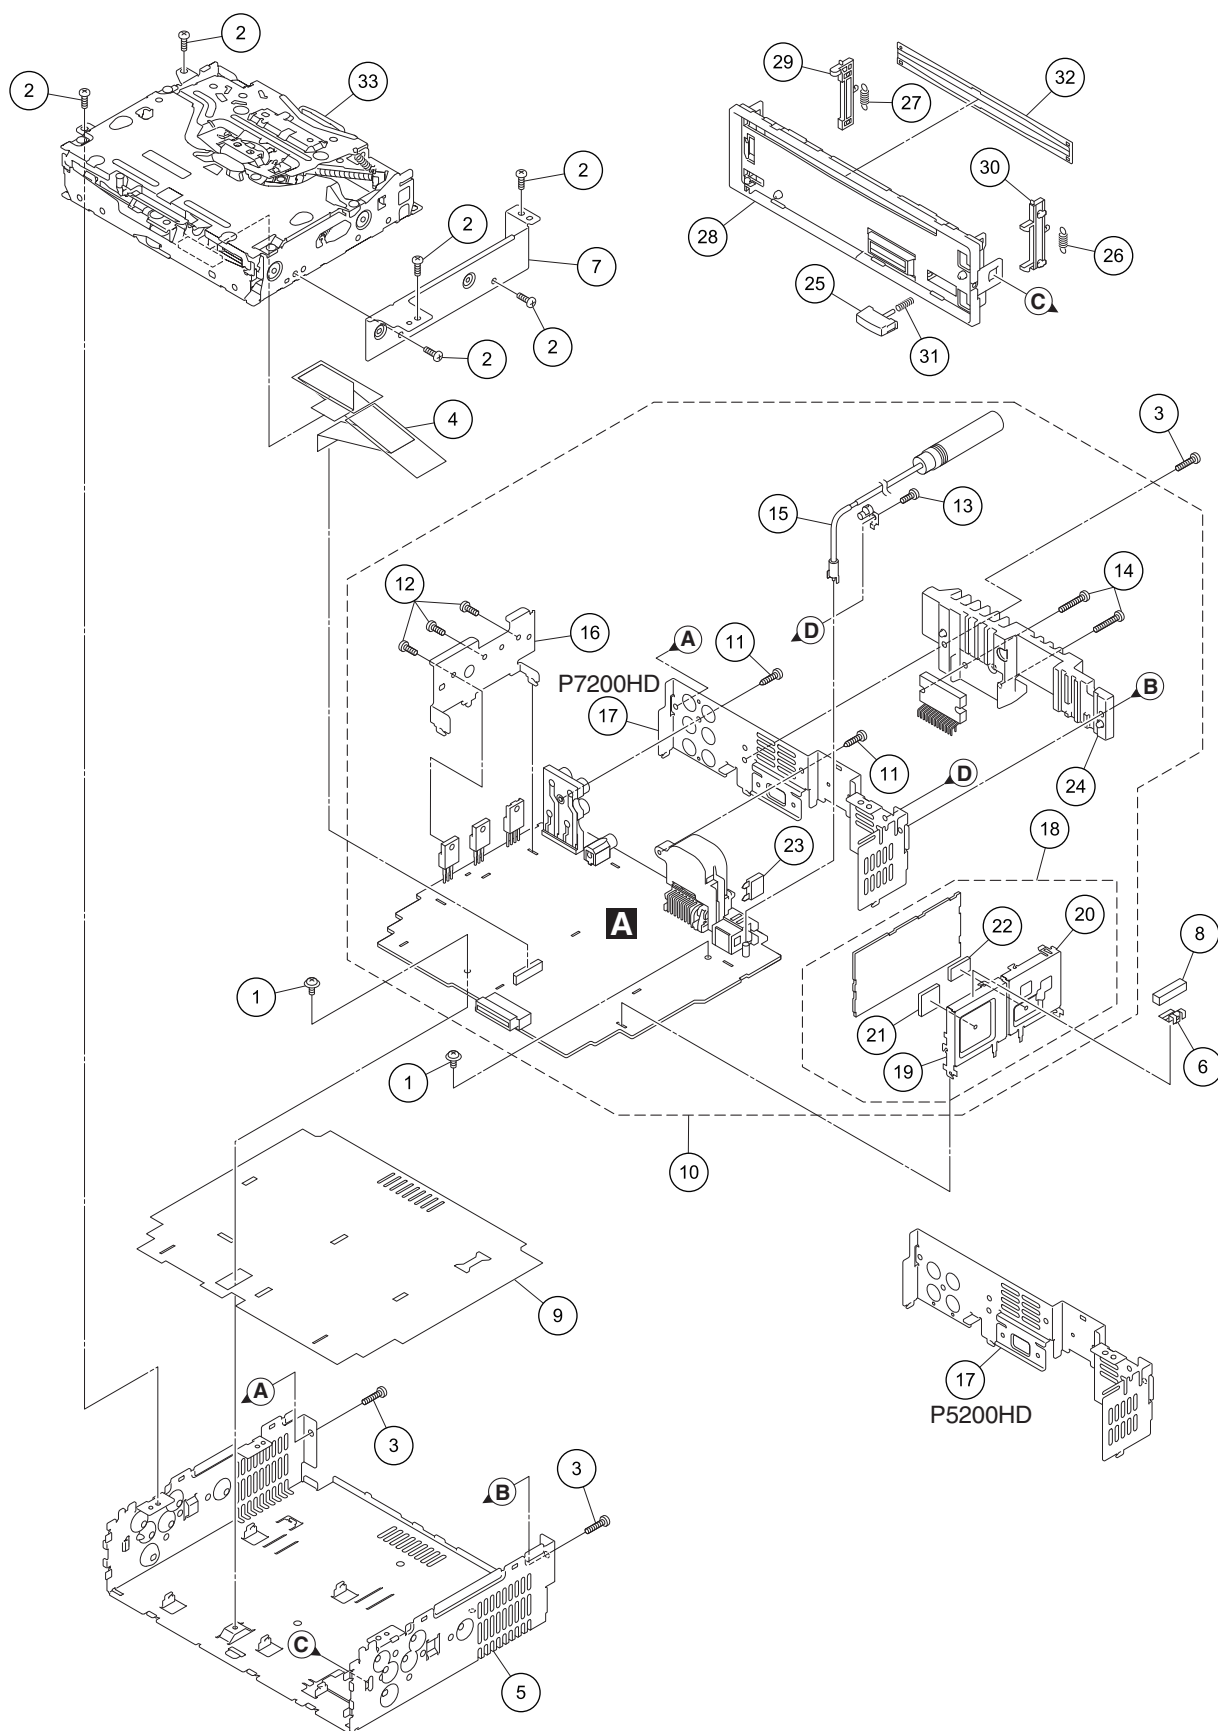

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	ASZ26P050FTC	
2	Screw	BSZ26P060FTC	A
3	Screw	BSZ26P100FTC	
4	Cable	CDE9106	
5	Chassis	CNA3152	
6	Earth Plate	CND4085	
7	Holder	CND5409	
8	Cushion	CNM9126	
9	Insulator	CNN3145	
10	Tuner Amp Unit(P7200HD)	CWN4802	
	Tuner Amp Unit(P5200HD)	CWN4830	B
11	Screw	BPZ26P080FTC	
12	Screw	BSZ26P060FTC	
13	Screw	BSZ26P060FTC	
14	Screw	BSZ26P160FTC	
15	Antenna Cable(JA401)	CDH1336	
16	Holder	CND5423	
17	Holder(P7200HD)	CND5433	
	Holder(P5200HD)	CND5434	
18	WWR Core Tuner Unit(U401)	CWE2145	C
19	Holder	CND5415	
20	Holder	CND5416	
21	Sheet	CNN2860	
22	Sheet	CNN3076	
⚠ 23	Fuse(10 A)	YEK5001	
24	Heat Sink	YNR5139	
25	Button	CAC4836	
26	Spring	CBH2961	
27	Spring	CBH2962	D
28	Panel	CNU1017	
29	Arm	CNV9312	
30	Arm	CNW1439	
31	Spring	YBH5012	
32	Cover	YNN5030	
33	CD Mechanism Module(S11)	CXK5800	

9.5 CD MECHANISM MODULE

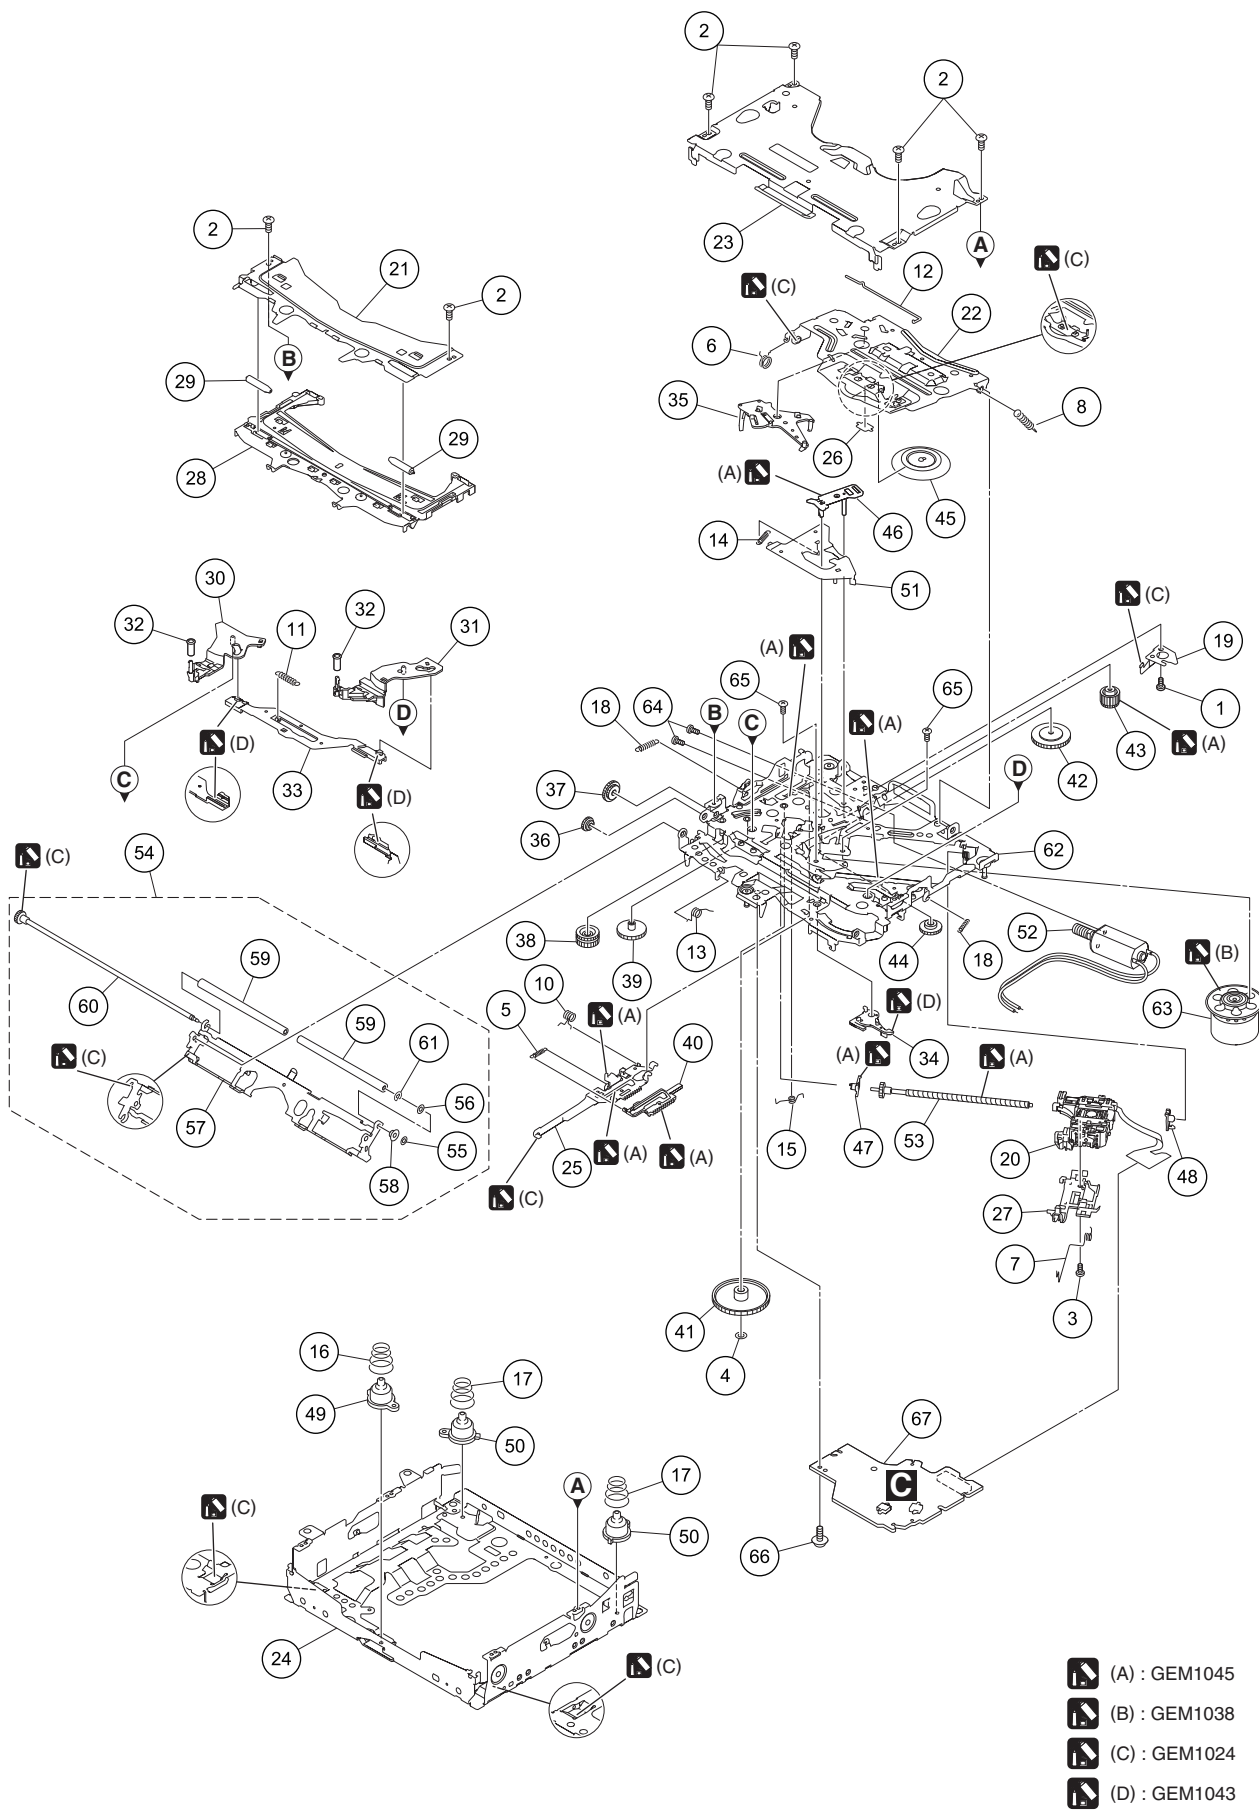

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	BMZ20P020FTC	50	Damper	CNW1198	
2	Screw	BSZ20P040FTC				
3	Screw(M2 x 4)	CBA1835	51	Arm	CNW1726	A
4	Washer	CBF1038	52	Motor Unit	CXC4026	
5	Spring	CBH3010	53	Screw Unit	CXC8894	
			54	Arm Assy	CXC8896	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9			57	Arm	CND4554	
10	Spring	CBH3011	58	Collar	CNV6906	
			59	Roller	CNW1196	
11	Spring	CBH3012	60	Gear Unit	CXC8893	B
12	Spring	CBH3014				
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE1946	
15	Spring	CBH3017	63	Motor Unit	CXE2273	
			64	Screw	JFZ20P025FTC	
16	Spring	CBH3018	65	Screw	JGZ17P022FTC	
17	Spring	CBH3019				
18	Spring	CBH3020	66	Screw	IMS20P030FTC	
19	Spring	CBL1797	67	CD Core Unit (S11STD-DOUT)	CWX3774	
20	Pickup Unit(S10.5)(Service)	CXX1942				C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Frame	CND4557				
24	Frame	CND5217				
25	Lever	CND5398				
26	Sheet	CNN2280				
27	Rack	CNV8342				
28	Guide	CNW1171				
29	Roller	CNW1172				D
30	Arm	CNW1173				
31	Arm	CNW1174				
32	Roller	CNW1175				
33	Lever	CNW1176				
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38	Gear	CNW1182				E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW1188				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.

Part No.

Unit Number : CWN4802(P7200HD)

Unit Number : CWN4830(P5200HD)

Unit Name : Tuner Amp Unit

Unit Number : (P7200HD)

Unit Name : Keyboard Unit

Unit Number : CWX3774

Unit Name : CD Core Unit(S11STD-DOUT)

Unit Number : (P5200HD)

Unit Name : Keyboard Unit

Circuit Symbol and No.

Part No.

IC 591	(A,101,24) IC	341S2162
IC 601	(A,128,96) IC(P7200HD)	PEG643C8
	(A,128,96) IC(P5200HD)	PEG637B8
IC 651	(A,116,107) IC	S-80827CNNB-B8M
IC 851	(A,29,39) IC(P7200HD)	NJM2360AM
IC 901	(A,70,60) IC	NJM2885DL1-33
IC 911	(A,6,122) IC	NJM2388F84
Q 101	(A,136,116) Transistor	LSA1576UB
Q 102	(A,139,113) Transistor	LTC114EUB
Q 301	(A,16,127) Transistor(P7200HD)	IMH23
	(A,16,127) Transistor(P5200HD)	IMH3A
Q 302	(A,23,126) Transistor(P7200HD)	IMH23
Q 303	(A,29,126) Transistor(P7200HD)	IMH23
	(A,29,126) Transistor(P5200HD)	IMH3A
Q 361	(A,54,134) Transistor	LTC114EUB
Q 381	(A,59,129) Transistor	LSC4081UB
Q 382	(A,44,129) Transistor	RT3T22M
Q 441	(A,141,108) Transistor	2SA2018
Q 442	(A,144,106) Transistor	LTC114EUB
Q 591	(A,106,24) Transistor	LSA1576UB
Q 601	(A,116,82) Transistor	RT3T22M
Q 751	(A,7,93) Transistor	2SD2396
Q 752	(A,16,100) Transistor	RT3T22M
Q 821	(A,41,57) Transistor(P7200HD)	2SD1767
Q 822	(A,51,58) Transistor	LTC114EUB
Q 823	(A,55,58) Transistor(P7200HD)	RT3T22M
Q 824	(A,45,62) Transistor(P5200HD)	2SA1036K
Q 841	(A,81,21) Transistor	LSA1576UB
Q 842	(A,83,16) Transistor	LTC114EUB
Q 853	(A,15,47) Transistor	2SD1760F5
Q 854	(A,17,27) Transistor	RT3T22M
Q 855	(A,51,47) Transistor(P7200HD)	2SA1577
Q 856	(A,48,49) Transistor(P7200HD)	LTC114EUB
Q 901	(A,7,71) Transistor	2SD2396
Q 902	(A,14,77) Transistor	RT3T22M
Q 921	(A,129,116) Transistor	RT3CLLM
Q 931	(A,101,127) Transistor(P7200HD)	LTC114EUB
D 121	(A,20,77) Diode	CMS02
D 122	(A,25,88) Diode	CRG03
D 123	(A,25,90) Diode	CRG03
D 131	(A,58,77) Diode	CRG03

A

Unit Number : CWN4802(P7200HD)

Unit Number : CWN4830(P5200HD)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,146,125) IC	HA12241FP
IC 121	(A,25,84) IC	BD9007F
IC 131	(A,50,76) IC	NJM2846DL3-33
IC 132	(A,67,78) IC	R1173S001D
IC 141	(A,59,85) IC	R5523N001B
IC 161	(A,52,101) Regulator IC	BD9781HFP
IC 181	(A,107,73) IC	WM8761GED
IC 182	(A,70,97) IC	NJM2872BF05
IC 201	(A,76,118) IC	PM9012A
IC 351	(A,83,141) IC	PA2030A
IC 401	(A,107,109) IC	S-1132B50-U5
IC 402	(A,156,71) IC	NJM4558V
IC 431	(A,83,95) IC	S-1132B50-U5
IC 491	(A,86,65) IC	SST25V040BIS
IC 501	(A,122,53) IC	R5S7262ZD144FPU
IC 571	(A,148,50) Software Unit	CWW1967
IC 581	(A,78,28) IC	NJM2885DL1-33
IC 583	(A,90,37) IC	BH12PB3WHFV

5				6				7				8			
<u>Circuit Symbol and No.</u>				<u>Part No.</u>				<u>Circuit Symbol and No.</u>				<u>Part No.</u>			
D 132	(A,58,74)	Diode		CRG03				CN701	(A,96,39)	Connector		VKN1192			
D 161	(A,29,96)	Diode		CRG03				CN801	(A,114,3)	Connector		CKS6188			
D 162	(A,29,98)	Diode		CRG03				CN981	(A,118,141)	Plug		CKM1586			
D 163	(A,37,93)	Diode		CMS02				JA101	(A,150,136)	Connector		CKS5271			A
D 164	(A,37,96)	Diode		CMS02				JA301	(A,24,137)	Pin Jack(P7200HD)		XKB7001			
D 381	(A,56,128)	Diode		UDZS8R2(B)					(A,24,137)	Pin Jack(P5200HD)		YKB5011			
D 382	(A,64,127)	Diode		1SS301				JA401	(A,166,134)	Antenna Cable		CDH1336			
D 383	(A,54,128)	Diode		1SS352				JA661	(A,47,138)	Connector		CKS4124			
D 581	(A,69,35)	Diode		1SS352				RESISTORS							
D 582	(A,73,33)	Diode		CRG03				R 101	(A,154,126)			RS1/16SS470J			
D 601	(A,122,83)	Diode		RB551V-30				R 102	(A,152,126)			RS1/16SS150J			
D 602	(A,126,107)	Diode		RB751S-40				R 103	(A,154,124)			RS1/16SS101J			
D 751	(A,12,101)	Diode		HZU8R2(B2)				R 104	(A,151,124)			RS1/16SS101J			
D 801	(A,121,13)	Diode		DZ2S068C				R 105	(A,143,116)			RS1/16SS102J			B
D 802	(A,123,13)	Diode		DZ2S068C											
D 803	(A,124,13)	Diode		DZ2S068C				R 106	(A,140,119)			RS1/16SS222J			
D 804	(A,115,13)	Diode		DZ2S068C				R 107	(A,139,116)			RS1/16SS332J			
D 805	(A,119,13)	Diode		DZ2S068C				R 108	(A,137,114)			RS1/16SS562J			
D 821	(A,48,59)	Diode(P7200HD)		UDZS9R1(B)				R 109	(A,144,116)			RS1/16SS181J			
D 822	(A,48,56)	Diode(P7200HD)		UDZS7R5(B)				R 110	(A,156,124)			RS1/16SS181J			
D 851	(A,35,40)	Diode(P7200HD)		RB551V-30				R 111	(A,144,118)			RS1/16SS223J			
D 852	(A,20,26)	Diode		HZU10(B1)				R 112	(A,154,122)			RS1/16SS223J			
D 901	(A,15,82)	Diode		CRG03				R 113	(A,143,118)			RS1/16SS102J			
D 902	(A,12,75)	Diode		UDZS5R6(B)				R 114	(A,152,122)			RS1/16SS102J			
D 921	(A,138,124)	Diode		HZU7L(C2)				R 121	(A,44,83)			RS1/10SR471J			C
D 922	(A,126,128)	Diode		HZU7L(A1)				R 122	(A,25,79)			RS1/16S1502F			
D 931	(A,108,127)	Diode(P7200HD)		CRG03				R 123	(A,30,79)			RS1/16S2702F			
D 941	(A,94,128)	Diode		CRG03				R 124	(A,28,79)			RS1/16SS1502F			
D 942	(A,94,126)	Diode		CRG03				R 125	(A,22,81)			RS1/16SS103J			
D 981	(A,138,130)	Diode		CRG03				R 126	(A,30,82)			RS1/16SS4702F			
D 982	(A,138,127)	Diode		CRG03				R 127	(A,31,82)			RS1/16SS392J			
ZNR401	(A,161,128)	Surge Protector		IMSA-6802-01Y900				R 128	(A,42,82)			RS1/16SS222J			
L 121	(A,27,73)	Inductor		CTH1253				R 131	(A,53,83)			RS1/16SS102J			
L 161	(A,46,91)	Inductor		CTH1253				R 132	(A,73,82)			RS1/16S1001D			
L 181	(A,99,72)	Inductor		CTF1735				R 133	(A,72,85)			RS1/16S1002D			
L 401	(A,155,112)	Chip Coil		LCTAW1R0J2520				R 135	(A,63,76)			RS1/16SS102J			D
L 402	(A,156,107)	Chip Coil		LCTAW1R0J2520				R 141	(A,97,92)			RS1/16SS104J			
L 405	(A,157,61)	Chip Coil		LCTAW1R0J2520				R 161	(A,44,103)			RS1/16SS1003F			
L 501	(A,97,61)	Inductor		CTF1410				R 163	(A,42,100)			RS1/16SS223J			
L 502	(A,97,59)	Inductor		CTF1410				R 165	(A,44,99)			RS1/16SS1003D			
L 571	(A,138,37)	Inductor		CTF1735				R 166	(A,41,99)			RS1/16SS2402D			
L 601	(A,104,93)	Chip Coil		BTH1103				R 167	(A,45,98)			RS1/16SS333J			
L 801	(A,117,17)	Inductor		CTF1713				R 168	(A,54,96)			RS1/10SR471J			
L 851	(A,28,31)	Inductor(P7200HD)		CTF1660				R 169	(A,44,97)			RS1/16SS222J			
L 981	(A,116,141)	Choke Coil		CTH1445				R 170	(A,41,98)			RS1/16SS121J			
X 501	(A,123,73)	Oscillator 48.000 MHz		CSS1760				R 181	(A,112,77)			RS1/16SS101J			
X 503	(A,103,45)	Oscillator 16.93 MHz		CSS1794				R 182	(A,110,78)			RS1/16SS101J			E
X 601	(A,114,96)	Oscillator 20.000 MHz		CSS1795				R 183	(A,109,79)			RS1/16SS101J			
S 651	(A,134,9)	Switch(RESET)		CSG1020				R 191	(A,97,69)			RS1/16SS821J			
P 301	(A,41,117)	Poly Switch		MINISMDC075F/24				R 192	(A,97,77)			RS1/16SS821J			
BZ601	(A,15,37)	Buzzer(P7200HD)		CPV1062				R 201	(A,70,124)			RAB4CQ102J			
VA661	(A,53,137)	Varistor		VR105C5R0AAA				R 203	(A,89,117)	(P5200HD)		RS1/10SR0R0J			
VA662	(A,53,136)	Varistor		VR105C5R0AAA				R 204	(A,90,117)	(P7200HD)		RS1/10SR0R0J			
VA801	(A,106,16)	Varistor(P5200HD)		VR105C5R0AAA				R 301	(A,17,124)	(P7200HD)		RS1/16SS820J			
VA802	(A,115,15)	Varistor		VR105C5R0AAA					(A,17,124)	(P5200HD)		RS1/16SS821J			
VA803	(A,120,14)	Varistor		VR105C5R0AAA				R 302	(A,21,124)	(P7200HD)		RS1/16SS820J			
VA806	(A,110,15)	Varistor		VR105C5R0AAA					(A,21,124)	(P5200HD)		RS1/16SS821J			F
VA807	(A,111,15)	Varistor		VR105C5R0AAA				R 303	(A,24,124)	(P7200HD)		RS1/16SS820J			
VA808	(A,131,17)	Varistor		VR105C5R0AAA				R 304	(A,36,130)	(P7200HD)		RS1/16SS820J			
U 401	(A,166,84)	WWR Core Tuner Unit		CWE2145				R 305	(A,28,124)	(P7200HD)		RS1/16SS820J			

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	(A,28,124) (P5200HD)	RS1/16SS821J	R 508 (A,127,75)	RS1/16SS101J
A	R 306 (A,34,127) (P7200HD)	RS1/16SS820J	R 509 (A,131,68)	RS1/16SS473J
	(A,34,127) (P5200HD)	RS1/16SS821J	R 510 (A,129,68)	RS1/16SS473J
	R 307 (A,13,130)	RS1/16SS223J	R 513 (A,123,69)	RS1/16SS102J
	R 308 (A,20,129)	RS1/16SS223J	R 517 (A,118,74)	RS1/16SS103J
	R 309 (A,22,129) (P7200HD)	RS1/16SS223J	R 518 (A,118,75)	RS1/16SS101J
	R 310 (A,34,130) (P7200HD)	RS1/16SS223J	R 519 (A,118,73)	RS1/16SS5601F
	R 311 (A,30,129)	RS1/16SS223J	R 521 (A,106,60)	RS1/16SS473J
	R 312 (A,34,128)	RS1/16SS223J	R 522 (A,104,66)	RS1/16SS473J
	R 313 (A,27,129) (P7200HD)	RS1/16SS0R0J	R 524 (A,106,58)	RS1/16SS104J
	R 314 (A,27,130)	RS1/16SS0R0J	R 525 (A,107,57)	RS1/16SS221J
B	R 316 (A,29,129) (P5200HD)	RS1/16SS0R0J	R 526 (A,107,56)	RS1/16SS221J
	R 351 (A,77,128) (P7200HD)	RS1/16SS362J	R 527 (A,104,56)	RS1/16SS221J
	(A,77,128) (P5200HD)	RS1/16SS0R0J	R 529 (A,106,47)	RS1/16SS332J
	R 352 (A,77,129) (P7200HD)	RS1/16SS362J	R 530 (A,108,35)	RS1/16SS101J
	(A,77,129) (P5200HD)	RS1/16SS0R0J	R 531 (A,106,42)	RS1/16SS101J
	R 353 (A,82,127) (P7200HD)	RS1/16SS362J	R 532 (A,113,37)	RS1/16SS221J
	(A,82,127) (P5200HD)	RS1/16SS0R0J	R 533 (A,112,34)	RS1/16SS101J
	R 354 (A,84,127) (P7200HD)	RS1/16SS362J	R 534 (A,114,37)	RS1/16SS101J
	(A,84,127) (P5200HD)	RS1/16SS0R0J	R 535 (A,114,35)	RS1/16SS101J
	R 355 (A,77,127) (P7200HD)	RS1/16SS562J	R 541 (A,115,70)	RS1/16SS473J
C	R 356 (A,77,130) (P7200HD)	RS1/16SS562J	R 542 (A,135,36)	RS1/16SS121J
	R 357 (A,82,128) (P7200HD)	RS1/16SS562J	R 543 (A,134,38)	RS1/16SS121J
	R 358 (A,85,127) (P7200HD)	RS1/16SS562J	R 544 (A,137,41)	RS1/16SS472J
	R 361 (A,58,134)	RS1/16SS103J	R 545 (A,139,45)	RS1/16SS473J
	R 362 (A,56,134)	RS1/16SS103J	R 547 (A,137,42)	RS1/16SS0R0J
	R 363 (A,58,133)	RS1/16SS331J	R 550 (A,108,40)	RS1/16SS473J
	R 365 (A,69,130)	RS1/16SS103J	R 571 (A,148,63)	RS1/16SS221J
	R 381 (A,56,132)	RS1/16SS473J	R 572 (A,140,36)	RS1/16SS472J
	R 382 (A,57,131)	RS1/16SS104J	R 574 (A,143,37)	RS1/16SS472J
	R 384 (A,55,131)	RS1/16SS473J	R 575 (A,152,38)	RAB4CQ221J
D	R 385 (A,44,131)	RS1/16SS102J	R 576 (A,150,35)	RAB4CQ221J
	R 386 (A,54,125)	RS1/16SS820J	R 577 (A,146,35)	RAB4CQ221J
	R 401 (A,158,86)	RS1/16SS681J	R 578 (A,142,35)	RAB4CQ221J
	R 402 (A,160,94)	RS1/16SS681J	R 591 (A,109,24)	RS1/16SS472J
	R 403 (A,154,100)	RS1/16SS681J	R 592 (A,106,27)	RS1/16SS101J
	R 404 (A,157,99)	RS1/16SS681J	R 593 (A,101,29)	RS1/16SS103J
	R 406 (A,157,100)	RS1/16SS332J	R 594 (A,106,26)	RS1/16SS101J
	R 407 (A,143,100)	RS1/16SS682J	R 595 (A,100,29)	RS1/16SS103J
	R 408 (A,158,87)	RS1/16SS473J	R 596 (A,103,20)	RS1/16SS473J
	R 409 (A,103,105)	RS1/16SS102J	R 599 (A,102,18)	RS1/16SS272J
E	R 411 (A,158,67)	RS1/16SS103J	R 600 (A,100,18)	RS1/16SS472J
	R 412 (A,154,68)	RS1/16SS103J	R 601 (A,112,90) (P7200HD)	RS1/16SS102J
	R 413 (A,158,68)	RS1/16SS103J	R 602 (A,117,100)	RS1/16SS472J
	R 414 (A,154,67)	RS1/16SS103J	R 603 (A,117,96)	RS1/16SS105J
	R 415 (A,157,66)	RS1/16SS103J	R 604 (A,117,97)	RS1/16SS101J
	R 416 (A,154,66)	RS1/16SS103J	R 605 (A,114,92)	RS1/16SS104J
	R 417 (A,151,74)	RS1/16SS123J	R 606 (A,120,85)	RS1/16SS101J
	R 418 (A,151,73)	RS1/16SS153J	R 607 (A,114,88)	RS1/16SS104J
	R 431 (A,79,93)	RS1/16SS102J	R 608 (A,117,84)	RS1/16SS103J
	R 441 (A,139,108)	RS1/16SS103J	R 609 (A,114,91)	RS1/16SS104J
F	R 442 (A,141,106)	RS1/16SS392J	R 610 (A,114,90)	RS1/16SS104J
	R 491 (A,83,62)	RS1/16SS0R0J	R 611 (A,116,86)	RS1/16SS472J
	R 494 (A,80,66)	RS1/16SS101J	R 612 (A,117,86)	RS1/16SS472J
	R 495 (A,80,67)	RS1/16SS101J	R 613 (A,124,79)	RS1/16SS104J
	R 501 (A,136,66)	RS1/16SS473J	R 614 (A,127,80)	RS1/16SS104J
	R 502 (A,138,63)	RS1/16SS221J	R 615 (A,124,82)	RS1/16SS104J
	R 504 (A,135,68)	RS1/16SS473J	R 616 (A,129,84)	RS1/16SS104J
	R 505 (A,132,68)	RS1/16SS473J	R 617 (A,130,82)	RS1/16SS104J
	R 507 (A,128,75)	RS1/16SS101J	R 618 (A,134,83)	RS1/16SS104J

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
R 619	(A,132,83)		RS1/16SS104J			R 827	(A,54,55) (P7200HD)		RS1/16SS0R0J		
R 622	(A,129,107) (P5200HD)		RS1/16SS104J			R 842	(A,83,18)		RS1/16SS472J		
R 623	(A,138,96)		RS1/16SS104J			R 843	(A,82,18)		RS1/16SS102J		A
R 624	(A,134,85)		RS1/16SS473J			R 844	(A,81,18)		RS1/16SS103J		
R 626	(A,126,106)		RS1/16SS103J			R 851	(A,21,43) (P5200HD)		RS1/10SR1R0J		
R 627	(A,126,86)		RS1/16SS472J			R 853	(A,42,49) (P7200HD)		RS1/4SA152J		
R 628	(A,138,102)		RS1/16SS104J			R 854	(A,29,44) (P7200HD)		RS1/10SR8200F		
R 629	(A,111,100) (P7200HD)		RS1/16SS104J			R 855	(A,27,44) (P7200HD)		RS1/10SR1501F		
R 630	(A,124,84)		RS1/16SS820J			R 856	(A,25,43) (P7200HD)		RS1/10SR2200F		
R 631	(A,125,84)		RS1/16SS101J			R 857	(A,23,37) (P7200HD)		RS1/10SR821J		
R 643	(A,157,98)		RS1/16SS104J			R 858	(A,22,40) (P7200HD)		RS1/10SR1R0J		
R 651	(A,116,105)		RS1/16SS104J			R 859	(A,16,29)		RS1/10SR561J		
R 652	(A,120,105)		RS1/16SS152J			R 860	(A,51,45) (P7200HD)		RS1/16SS473J		
R 661	(A,56,137)		RS1/10SR102J			R 861	(A,48,46) (P7200HD)		RS1/10SR682J		B
R 662	(A,56,136)		RS1/10SR102J			R 862	(A,53,46) (P5200HD)		RS1/10SR103J		
R 701	(A,99,45)		RS1/16SS472J			R 901	(A,13,72)		RS1/16SS472J		
R 702	(A,99,49)		RS1/16SS473J			R 902	(A,12,72)		RS1/16SS223J		
R 703	(A,99,47)		RS1/16SS472J			R 911	(A,12,109)		RS1/16SS102J		
R 704	(A,99,48)		RS1/16SS472J			R 912	(A,12,111)		RS1/16SS473J		
R 705	(A,99,44)		RS1/16SS221J			R 921	(A,132,115)		RS1/16SS104J		
R 706	(A,99,43)		RS1/16SS221J			R 922	(A,132,117)		RS1/16SS103J		
R 707	(A,99,42)		RS1/16SS101J			R 923	(A,134,115)		RS1/16SS473J		
R 708	(A,99,41)		RS1/16SS221J			R 924	(A,134,117)		RS1/16SS473J		
R 709	(A,99,40)		RS1/16SS101J			R 925	(A,123,127)		RS1/16SS472J		
R 710	(A,99,39)		RS1/16SS102J			R 926	(A,119,128)		RS1/4SA102J		C
R 711	(A,99,36)		RS1/16SS151J			R 931	(A,105,126) (P7200HD)		RS1/16SS103J		
R 712	(A,99,35)		RS1/16SS151J			R 932	(A,114,127) (P7200HD)		RS1/4SA102J		
R 713	(A,99,34)		RS1/16SS151J			<u>CAPACITORS</u>					
R 714	(A,101,31)		RS1/16SS221J			C 101	(A,157,127)		CKSSYB104K16		
R 715	(A,102,39)		RS1/16SS104J			C 102	(A,152,124)		CKSSYB102K50		
R 716	(A,99,32)		RS1/16SS104J			C 103	(A,153,124)		CKSSYB102K50		
R 717	(A,99,38)		RS1/16SS104J			C 104	(A,143,122)		CKSSYB104K10		
R 751	(A,15,98)		RS1/10SR471J			C 122	(A,39,73) Capacitor		CEVW221M10		
R 752	(A,12,98)		RS1/10SR471J			C 123	(A,24,81)		CKSSYB104K10		D
R 753	(A,13,93)		RS1/16SS473J			C 124	(A,21,83)		CCSSCH330J50		
R 754	(A,14,93)		RS1/16SS103J			C 125	(A,28,88)		CKSRYB105K16		
R 792	(A,63,45)		RAB4CQ103J			C 126	(A,36,85) Capacitor		CEVW221M16		
R 793	(A,58,45)		RAB4CQ103J			C 131	(A,50,84)		CKSQYB475K6R3		
R 801	(A,133,17)		RS1/10SR222J			C 133	(A,45,80)		CKSQYB475K6R3		
R 802	(A,112,15)		RS1/10SR222J			C 134	(A,73,75)		CKSQYB475K6R3		
R 803	(A,108,16)		RS1/10SR222J			C 135	(A,71,82)		CKSQYB475K6R3		
R 804	(A,120,16)		RS1/10SR222J			C 136	(A,78,83) Capacitor		CEVW470M16		
R 805	(A,113,15)		RS1/10SR222J			C 141	(A,57,87)		CKSSYB104K10		
R 808	(A,107,16) (P5200HD)		RS1/10SR222J			C 142	(A,57,84)		CKSSYB104K10		E
R 809	(A,132,22)		RS1/16SS104J			C 161	(A,36,104) Capacitor		CEVW221M16		
R 810	(A,118,20)		RS1/10SR120J			C 162	(A,44,105)		CKSRYB105K16		
R 811	(A,116,20)		RS1/10SR120J			C 163	(A,45,102)		CKSSYB104K16		
R 812	(A,127,26)		RS1/16SS104J			C 164	(A,45,100)		CKSSYB471K50		
R 813	(A,133,19)		RS1/16SS104J			C 165	(A,44,101)		CKSSYB103K10		
R 814	(A,122,18)		RS1/10SR101J			C 166	(A,58,91) 150 uF/6.3 V		CCH1804(P25)		
R 815	(A,123,22)		RS1/10SR101J			C 167	(A,43,98)		CKSSYB471K50		
R 816	(A,124,18)		RS1/10SR101J			C 182	(A,101,77) 10 uF		CCG1192		
R 817	(A,124,16)		RS1/16SS223J			C 184	(A,100,71) 10 uF		CCG1192		
R 818	(A,122,16)		RS1/16SS223J			C 186	(A,101,74)		CKSSYB105K6R3		
R 821	(A,50,63)		RS1/10SR222J			C 187	(A,73,98)		CKSSYB105K6R3		
R 822	(A,45,64)		RS1/10SR1R0J			C 188	(A,67,98)		CKSSYB104K10		F
R 823	(A,42,62) (P7200HD)		RS1/10SR182J			C 191	(A,97,72)		CCSRCH182J50		
R 824	(A,48,63) (P5200HD)		RS1/16SS103J			C 192	(A,97,74)		CCSRCH182J50		
R 825	(A,48,58) (P5200HD)		RS1/10SR472J								
R 826	(A,55,55) (P5200HD)		RS1/16SS0R0J								

	1		2	3		4
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
A	C 193	(A,94,71)	CKSQYB475K6R3	C 431	(A,157,104)	CKSSYB105K6R3
	C 194	(A,94,74)	CKSQYB475K6R3	C 432	(A,80,98)	CKSSYB103K10
	C 201	(A,80,102)	CKSRYB105K10	C 433	(A,86,94)	CKSSYB104K10
	C 202	(A,80,104)	CKSRYB105K10	C 491	(A,78,64)	CKSSYB104K10
	C 203	(A,76,103)	CKSQYB225K10	C 501	(A,97,63) 10 uF	CCG1192
■	C 205	(A,70,112)	CKSRYB105K10	C 503	(A,100,62) 10 uF	CCG1192
	C 206	(A,92,115)	CKSRYB105K10	C 504	(A,97,56) 10 uF	CCG1192
	C 207	(A,70,113)	CKSRYB105K10	C 506	(A,101,58) 10 uF	CCG1192
	C 208	(A,95,116)	CKSRYB105K10	C 507	(A,137,45)	CKSSYB104K10
	C 209	(A,95,108)	CKSRYB105K10	C 508	(A,138,47)	CKSSYB104K10
B	C 210	(A,95,106)	CKSRYB105K10	C 509	(A,137,51)	CKSSYB104K10
	C 213	(A,85,120) 10 uF	CCG1192	C 510	(A,137,52)	CKSSYB104K10
	C 214	(A,82,123)	CKSSYB104K10	C 511	(A,137,56)	CKSSYB104K10
	C 215	(A,85,122) 10 uF	CCG1192	C 512	(A,137,58)	CKSSYB104K10
	C 216	(A,82,125)	CKSSYB104K16	C 513	(A,137,61)	CKSSYB104K10
■	C 217	(A,84,125)	CKSQYB225K16	C 514	(A,137,63)	CKSSYB104K10
	C 218	(A,84,118) 10 uF	CCG1192	C 515	(A,138,66)	CKSSYB103K10
	C 219	(A,70,118)	CKSRYB105K10	C 516	(A,133,68)	CKSSYB104K10
	C 220	(A,83,116)	CKSRYB105K10	C 519	(A,128,68)	CKSSYB104K10
	C 225	(A,82,121)	CKSSYB104K10	C 520	(A,126,68)	CKSSYB104K10
C	C 226	(A,95,121) (P7200HD)	CEVW101M16	C 521	(A,124,69)	CKSSYB104K10
	C 301	(A,28,119) 10 uF	CCG1192	C 522	(A,121,68)	CKSSYB104K10
	C 302	(A,28,121) 10 uF	CCG1192	C 523	(A,122,71)	CCSSCH100D50
	C 303	(A,32,122) 10 uF(P7200HD)	CCG1192	C 524	(A,124,71)	CCSSCH100D50
	C 304	(A,39,128) 10 uF(P7200HD)	CCG1192	C 525	(A,119,69)	CKSSYB104K10
■	C 305	(A,34,124) 10 uF	CCG1192	C 526	(A,118,68)	CKSSYB104K10
	C 306	(A,39,126) 10 uF	CCG1192	C 527	(A,117,69)	CKSSYB104K10
	C 351	(A,80,129)	CKSRYB105K10	C 528	(A,115,68)	CKSSYB104K10
	C 352	(A,79,129)	CKSRYB105K10	C 529	(A,112,68)	CKSSYB104K10
	C 353	(A,84,129)	CKSRYB105K10	C 530	(A,110,68)	CKSSYB104K10
D	C 354	(A,85,129)	CKSRYB105K10	C 531	(A,106,62)	CKSSYB104K10
	C 355	(A,80,132)	CKSRYB105K16	C 532	(A,107,60)	CKSSYB104K10
	C 356	(A,79,132)	CKSRYB105K16	C 533	(A,103,58)	CKSSYB104K10
	C 357	(A,84,132)	CKSRYB105K16	C 534	(A,107,54)	CKSSYB104K10
	C 358	(A,85,132)	CKSRYB105K16	C 535	(A,102,52)	CKSSYB104K10
■	C 361	(A,135,123) 3 300 uF/16 V	CCH1486	C 536	(A,102,49)	CKSSYB104K10
	C 362	(A,65,138)	CKSSYB104K16	C 537	(A,106,44)	CKSSYB104K10
	C 363	(A,76,133)	CKSQYB475K10	C 538	(A,109,39)	CKSSYB104K10
	C 364	(A,72,133)	CKSQYB475K16	C 539	(A,116,38)	CKSSYB104K10
	C 365	(A,73,130) 10 uF	CCG1236	C 540	(A,117,38)	CKSSYB104K10
E	C 367	(A,61,132) 10 uF	CCG1192	C 541	(A,121,38)	CKSSYB104K10
	C 381	(A,50,128) Capacitor	CEVW220M16	C 542	(A,125,37)	CKSSYB104K10
	C 405	(A,158,107) 10 uF	CCG1192	C 543	(A,130,38)	CKSSYB104K10
	C 406	(A,158,83) 10 uF	CCG1192	C 544	(A,132,38)	CKSSYB104K10
	C 408	(A,158,76) 10 uF	CCG1192	C 545	(A,120,70)	CKSSYB105K6R3
■	C 411	(A,158,57) 10 uF	CCG1192	C 546	(A,128,71)	CKSSYB102K50
	C 412	(A,156,58)	CKSSYB105K6R3	C 547	(A,111,37)	CCSSCH220J50
	C 413	(A,158,113) 10 uF	CCG1192	C 548	(A,104,42)	CCSSCH120J50
	C 414	(A,110,108)	CKSRYB105K6R3	C 549	(A,103,48)	CCSSCH120J50
	C 416	(A,103,107)	CKSRYB104K16	C 567	(A,110,34)	CCSSCH220J50
■	C 417	(A,160,67)	CCSSCH151J50	C 568	(A,115,33)	CCSSCH220J50
	C 418	(A,153,67)	CCSSCH151J50	C 569	(A,116,35)	CCSSCH220J50
	C 419	(A,157,67)	CKSSYB681K50	C 571	(A,136,38) 10 uF	CCG1192
	C 420	(A,156,68)	CKSSYB681K50	C 572	(A,138,38)	CKSSYB104K10
	C 421	(A,159,64) 10 uF	CCG1192	C 573	(A,148,38)	CKSSYB104K10
F	C 422	(A,154,64) 10 uF	CCG1192	C 574	(A,148,62)	CKSSYB103K10
	C 423	(A,156,74)	CKSRYB104K16	C 581	(A,69,31) 10 uF	CCG1192
	C 424	(A,151,70) 10 uF	CCG1192	C 583	(A,69,26) 10 uF	CCG1192
	C 425	(A,157,54)	CKSRYB102K50	C 585	(A,88,29) 10 uF	CCG1192
	C 427	(A,160,92)	CKSSYB102K50	C 588	(A,86,38) 10 uF	CCG1192

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 591	(A,103,19)		CKSSYB104K10			D 1848	(A,161,41) LED		CL-197HB1-D(CDE)		
C 592	(A,100,19)		CKSSYB104K10			D 1851	(A,78,28) LED		CL-197HB1-D(CDE)		
C 601	(A,101,92)	10 uF	CCG1192			D 1852	(A,7,41) LED		CL-197HB1-D(CDE)		
C 603	(A,107,92)		CKSQYB475K6R3			D 1871	(A,131,10) Diode		1SS355		A
C 604	(A,112,97)		CCSSCH100D50			L 1871	(B,106,23) Inductor		CTF1617		
C 605	(A,112,95)		CCSSCH120J50			X 1871	(A,104,17)		CSS1616		
C 606	(A,118,94)		CKSSYB104K10				Ceramic Resonator 16.000 MHz				
C 608	(A,137,94)		CKSSYB104K10			S 1821	(A,39,19) Switch		CSX1120		
C 610	(A,117,99)		CKSSYB104K10			S 1841	(A,10,7) Push Switch		CSG1155		
C 651	(A,118,107)		CKSSYB105K6R3			S 1842	(A,7,38) Push Switch		CSG1155		
C 703	(A,99,33)		CCSSCH220J50			S 1843	(A,76,31) Push Switch		CSG1155		
C 704	(A,101,34)		CCSSCH100D50			S 1844	(A,76,11) Push Switch		CSG1155		
C 705	(A,101,36)		CCSSCH220J50			S 1845	(A,68,7) Push Switch		CSG1155		
C 706	(A,101,39)		CKSSYB103K10			S 1846	(A,161,38) Push Switch		CSG1155		
C 751	(A,14,96)	10 uF	CCG1192			S 1847	(A,78,21) Push Switch		CSG1155		B
C 754	(A,13,100)		CKSSYB473K10			S 1848	(A,68,29) Push Switch		CSG1155		
C 822	(A,50,64)		CKSRYB105K16			S 1849	(A,148,38) Push Switch		CSG1155		
C 823	(A,53,60) (P7200HD)		CKSSYB104K16			S 1850	(A,10,29) Push Switch		CSG1155		
C 843	(A,88,17)		CKSRYB104K50			CN1801	(B,108,9) Connector		CKS6049		
C 853	(A,37,49) (P7200HD)		CEVW470M16			CN1811	(A,151,23) Connector		YKS5036		
C 854	(A,28,43) (P7200HD)		CKSSYB103K25			CN1921	(A,112,21) Connector		CKS6036		
C 855	(A,34,41) (P7200HD)		CCSSCH331J50			JA1806	(A,152,8) Jack		YKN5006		
C 856	(A,24,41)		CKSSYB104K16				OEL Module		MXS4011		
C 857	(A,28,49) (P7200HD)		CEVW101M16			<u>RESISTORS</u>					
C 858	(A,19,27)		CKSSYB104K16			R 1821	(B,30,28)		RS1/10SR102J		C
C 859	(A,57,51) (P7200HD)		CEVW470M16			R 1822	(B,31,28)		RS1/10SR103J		
C 860	(A,52,48) (P7200HD)		CKSSYB104K16			R 1823	(B,26,13)		RS1/10SR333J		
C 862	(A,45,47) (P7200HD)		CKSYB475K25			R 1824	(B,24,13)		RS1/10SR103J		
C 901	(A,14,62)		CEAT102M16			R 1825	(B,25,21)		RS1/10SR332J		
C 902	(A,14,79)		CKSSYB103K10			R 1826	(B,44,9)		RS1/10SR102J		
C 904	(A,16,70) 10 uF		CCG1192			R 1828	(B,47,13)		RS1/10SR103J		
C 905	(A,62,62)		CKSQYB475K6R3			R 1829	(B,25,22)		RS1/10SR222J		
C 907	(A,62,58)		CKSQYB475K6R3			R 1844	(B,22,15)		RS1/10SR241J		
C 911	(A,26,108) Capacitor		CEVW221M10			R 1846	(B,50,15)		RS1/10SR241J		
C 913	(A,17,113) Capacitor		CEHVW101M16			R 1848	(B,50,10)		RS1/10SR331J		D
C 921	(A,123,129)		CKSSYB104K16			R 1850	(B,154,34)		RS1/10SR561J		
C 931	(A,104,127) (P7200HD)		CKSRYB105K16			R 1854	(B,21,30)		RS1/10SR271J		
C 932	(A,111,127) (P7200HD)		CKSSYB473K16			R 1855	(B,24,30)		RS1/10SR331J		
C 941	(A,97,127) (P7200HD)		CKSRYB473K50			R 1856	(B,17,30)		RS1/10SR681J		
	(A,97,127) (P5200HD)		CKSRYB473K16			R 1858	(B,24,28)		RS1/10SR821J		
C 953	(A,73,96)		CKSSYB103K10			R 1861	(B,58,12)		RS1/10SR121J		
C 981	(A,138,131)		CKSRYB104K16			R 1863	(B,54,10)		RS1/10SR2R2J		
						R 1871	(A,101,10)		RS1/10SR104J		
						R 1872	(A,104,15)		RS1/10SR472J		
						R 1873	(A,104,20)		RS1/10SR473J		E
						R 1874	(A,104,21)		RS1/10SR103J		
						R 1875	(B,122,27)		RS1/10SR102J		
						R 1876	(B,120,26)		RS1/10SR102J		
						R 1877	(B,118,27)		RS1/10SR102J		
						R 1878	(B,80,23)		RS1/10SR0R0J		
						R 1879	(A,131,8)		RS1/10SR154J		
						R 1880	(B,133,22)		RAB4C473J		
						R 1881	(B,137,10)		RS1/10SR103J		
						R 1882	(A,104,26)		RS1/10SR222J		
						R 1883	(B,137,13)		RS1/10SR222J		
						R 1884	(A,131,23)		RS1/10SR473J		F
						R 1885	(A,132,23)		RS1/10SR473J		
						R 1886	(A,129,20)		RS1/10SR473J		
						R 1887	(A,136,24)		RAB4C473J		

B
Unit Number : (P7200HD)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1861	(A,67,19) Remote IC	GP1UXC14RK
IC 1871	(A,92,18) IC	PEG651A8
IC 1872	(B,70,19) IC	PD8191B9
D 1841	(A,21,25) LED	CL-197HB1-D(CDE)
D 1842	(A,21,13) LED	CL-197HB1-D(CDE)
D 1843	(A,56,25) LED	CL-197HB1-D(CDE)
D 1844	(A,56,13) LED	CL-197HB1-D(CDE)
D 1845	(A,80,18) LED	CL-197HB1-D(CDE)
D 1846	(A,78,8) LED	CL-197HB1-D(CDE)
D 1847	(A,148,41) LED	CL-197HB1-D(CDE)

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 1888 (B,94,27) RS1/10SR473J
 R 1889 (B,59,26) RS1/10SR101J
 R 1890 (B,83,28) RS1/10SR0R0J
 R 1891 (B,73,31) RS1/10SR101J
 R 1892 (A,73,27) RS1/10SR101J

R 1893 (A,59,10) RS1/10SR101J
 R 1894 (B,61,10) RS1/10SR101J
 R 1895 (A,66,25) RAB4C101J
 R 1896 (B,82,20) RAB4C101J
 R 1897 (B,83,24) RAB4C101J

R 1898 (B,79,27) RAB4C101J
 R 1899 (B,78,8) RS1/10SR101J
 R 1900 (A,63,12) RAB4C101J
 R 1904 (B,83,14) RS1/10SR101J
 R 1905 (A,84,9) RS1/10SR101J

R 1906 (A,84,8) RS1/10SR101J
 R 1907 (A,87,8) RS1/10SR101J
 R 1908 (B,82,16) RAB4C101J
 R 1909 (B,84,9) RAB4C101J
 R 1910 (A,89,8) RS1/10SR221J

R 1911 (B,63,7) RS1/10SR102J
 R 1912 (A,135,10) RS1/10SR102J
 R 1913 (A,135,12) RS1/10SR102J
 R 1914 (B,49,8) RS1/10SR102J
 R 1928 (A,126,12) RS1/10SR101J

R 1929 (A,118,15) RAB4C101J
 R 1930 (A,122,17) RS1/10SR101J

CAPACITORS

C 1808 (B,139,8) CKSRYB104K16
 C 1851 (A,79,27) CKSRYB104K16
 C 1861 (B,56,14) CKSQYB106K6R3
 C 1872 (A,106,17) CKSRYB105K16
 C 1873 (A,133,13) CKSRYB104K16

C 1874 (A,74,21) CKSRYB105K16
 C 1875 (B,63,12) CKSRYB103K50
 C 1921 (B,113,23) CKSRYB104K16
 C 1922 (B,116,28) CKSRYB104K16
 C 1924 (A,109,13) CKSQYB105K25

C 1925 (A,109,15) CKSQYB105K25
 C 1926 (A,113,14) CKSRYB105K16
 C 1927 (A,113,12) CKSRYB104K16

C**Unit Number : CWX3774****Unit Name : CD Core Unit(s11STD-DOUT)****MISCELLANEOUS**

IC 201 (A,28,33) IC PE5706A
 IC 301 (A,64,27) IC BA5839FP
 Q 101 (B,8,56) Transistor 2SA1577
 Q 102 (B,21,51) Digital TR(PNP) UNR511MG
 X 201 (A,15,27) Ceramic Resonator 16.934 MHz CSS1603

S 901 (A,42,53) Switch CSN1067
 S 903 (B,21,12) Switch CSN1068
 S 905 (B,11,25) Switch CSN1068
 CN101 (A,16,58) Connector CKS4808
 CN701 (A,37,10) Connector CKS6146

RESISTORS

R 101 (B,6,59) RS1/10SR2R4J
 R 102 (B,7,59) RS1/10SR2R4J
 R 103 (B,8,59) RS1/10SR2R7J
 R 108 (B,19,53) RS1/16SS105J
 R 109 (B,11,52) RS1/16SS222J

R 214 (A,38,41) RS1/16SS103J
 R 215 (A,38,40) RS1/16SS393J
 R 216 (A,30,44) RS1/16SS122J
 R 217 (A,33,46) RS1/16SS562J
 R 218 (A,30,46) RS1/16SS472J

R 225 (A,33,23) RS1/16SS0R0J
 R 229 (A,31,44) RS1/16SS471J
 R 232 (A,19,21) RS1/16SS0R0J
 R 235 (A,45,32) RS1/16SS103J
 R 236 (A,46,32) RS1/16SS103J

R 237 (B,24,25) RS1/16SS221J
 R 240 (B,26,30) RS1/16SS473J
 R 245 (B,28,30) RS1/16SS104J
 R 253 (B,27,30) RS1/16SS104J
 R 254 (B,29,30) RS1/16SS104J

R 260 (B,41,21) RS1/16SS103J
 R 262 (A,44,32) RS1/16SS472J
 R 263 (A,47,32) RS1/16SS472J
 R 264 (A,44,25) RS1/16SS102J
 R 281 (A,31,22) RS1/16SS560J

R 282 (A,30,22) RS1/16SS560J
 R 283 (B,32,18) RS1/16SS0R0J
 R 291 (B,31,17) RS1/16SS560J
 R 292 (B,32,16) RS1/16SS0R0J
 R 293 (B,32,11) RS1/16SS0R0J

R 294 (A,18,28) RS1/16SS471J
 R 296 (B,32,30) RS1/16SS0R0J
 R 299 (B,31,13) RS1/16SS0R0J
 R 305 (A,60,34) RS1/16SS183J
 R 306 (A,61,37) RS1/16SS183J

R 307 (A,58,34) RS1/16SS183J
 R 308 (A,58,36) RS1/16SS183J
 R 701 (B,37,21) RS1/16SS101J
 R 702 (B,38,20) RS1/16SS101J
 R 706 (B,43,11) RS1/16SS221J

R 708 (A,40,22) RS1/16SS0R0J
 R 709 (A,40,21) RS1/16SS0R0J
 R 722 (B,37,22) RS1/16SS0R0J

CAPACITORS

C 104 (B,11,55) CKSQYB475K6R3
 C 203 (A,18,35) CKSSYB104K10
 C 209 (A,17,28) CKSRYB104K16
 C 210 (A,21,21) CKSSYB104K10
 C 211 (A,24,23) CKSSYB104K10

C 212 (A,38,33) CKSSYB104K10
 C 213 (A,40,41) CKSSYB332K50
 C 214 (A,40,40) CKSSYB473K10
 C 215 (A,38,37) CKSSYB104K10
 C 216 (A,36,46) CKSSYB182K50

C 217 (A,31,46) CCSSCH560J50
 C 218 (A,29,46) CCSSCH4R0C50

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 219	(A,32,43)		CKSSYB104K10			S 1882	(A,149,43) Push Switch		CSG1155		
C 220	(B,32,41)		CKSSYB104K10			CN1801	(B,108,10) Connector		CKS6049		
C 221	(A,35,43)		CKSSYB104K10			CN1802	(A,154,26) Connector		YKS5036		A
C 222	(A,29,43)		CKSSYB104K10			CN1921	(A,97,22) Connector		CKS6036		
C 223	(A,25,44)		CCSSCH680J50			JA1801	(A,153,10) Jack		YKN5006		
C 224	(A,23,44)		CCSSCH470J50				OEL Module		MXS4013		
C 225	(A,20,43)		CKSSYB103K16			RESISTORS					
C 228	(A,32,46)		CCSSCH270J50			R 1804	(B,88,12)		RS1/10SR222J		
C 229	(B,28,40)		CKSSYB104K10			R 1805	(B,90,17)		RS1/10SR222J		
C 231	(B,44,28)		CKSSYB102K50			R 1811	(B,68,16)		RS1/10SR102J		
C 232	(B,45,28)		CKSSYB102K50			R 1812	(B,47,13)		RS1/10SR102J		
C 233	(B,25,25)		CKSSYB103K16			R 1813	(B,49,14)		RS1/10SR103J		
C 236	(B,26,41)		CKSSYB104K10			R 1814	(B,61,12)		RS1/10SR122J		B
C 238	(A,15,35)		CKSRYB104K16			R 1815	(B,59,26)		RS1/10SR182J		
C 299	(A,17,33)		CKSSYB104K10			R 1816	(B,48,29)		RS1/10SR332J		
C 304	(A,60,35)		CKSSYB472K25			R 1817	(B,48,27)		RS1/10SR822J		
C 305	(A,58,35)		CKSSYB223K16			R 1818	(B,42,28)		RS1/10SR103J		
C 306	(A,68,20)		CKSRYB105K10			R 1831	(B,150,38)		RS1/4SA271J		
C 710	(B,43,10)		CKSSYB102K50			R 1835	(B,13,24)		RS1/4SA331J		
D						R 1837	(B,15,10)		RS1/4SA331J		
Unit Number : (P5200HD)						R 1838	(B,67,9)		RS1/4SA331J		
Unit Name : Keyboard Unit						R 1839	(B,120,23)		RS1/4SA331J		
MISCELLANEOUS						R 1840	(B,31,26)		RS1/4SA471J		
IC 1891	(A,144,18) Remote IC		GP1UXC14RK			R 1859	(B,43,8)		RS1/10SR0R0J		C
IC 1901	(B,87,23) IC		PEG642A8			R 1871	(A,6,8)		RS1/10SR103J		
D 1804	(B,87,14) Diode		DAN202U			R 1872	(A,15,7)		RS1/10SR122J		
D 1805	(B,91,15) Diode		DAP202U			R 1873	(A,30,8)		RS1/10SR182J		
D 1831	(A,152,40) LED		CL-195SR-CD			R 1874	(A,39,8)		RS1/10SR332J		
D 1833	(A,7,30) LED		CL-195SR-CD			R 1875	(A,81,10)		RS1/10SR822J		
D 1834	(A,18,29) LED		CL-195SR-CD			R 1876	(A,119,22)		RS1/10SR333J		
D 1835	(A,30,28) LED		CL-195SR-CD			R 1877	(A,17,34)		RS1/10SR103J		
D 1836	(A,8,13) LED		CL-195SR-CD			R 1878	(A,26,33)		RS1/10SR122J		
D 1837	(A,19,13) LED		CL-195SR-CD			R 1879	(A,38,32)		RS1/10SR182J		
D 1838	(A,30,13) LED		CL-195SR-CD			R 1880	(A,118,27)		RS1/10SR332J		
D 1839	(A,77,8) LED		CL-195SR-CD			R 1881	(A,122,19)		RS1/10SR822J		D
D 1840	(A,87,8) LED		CL-195SR-CD			R 1882	(A,125,19)		RS1/10SR333J		
D 1841	(A,101,8) LED		CL-195SR-CD			R 1891	(B,131,25)		RS1/10SR121J		
D 1842	(A,111,8) LED		CL-195SR-CD			R 1893	(B,140,18)		RS1/10SR2R2J		
D 1843	(A,125,8) LED		CL-195SR-CD			R 1901	(B,75,28)		RS1/10SR473J		
D 1844	(A,135,8) LED		CL-195SR-CD			R 1902	(B,94,32)		RS1/10SR154J		
D 1845	(A,43,24) LED		CL-195SR-CD			R 1903	(B,81,31)		RS1/10SR473J		
D 1846	(A,64,28) LED		CL-195SR-CD			R 1904	(B,98,20)		RS1/10SR473J		
D 1901	(B,97,32) Diode		1SS355			R 1905	(B,99,21)		RS1/10SR473J		
X 1901	(B,87,30) Radiator 10.0 MHz		CSS1577			R 1906	(A,109,28)		RS1/10SR473J		
S 1801	(A,5,36) Push Switch		CSG1155			R 1907	(A,110,30)		RS1/10SR473J		E
S 1811	(A,55,20) Switch		CSX1120			R 1908	(B,86,16)		RS1/10SR103J		
S 1871	(A,11,7) Push Switch		CSG1155			R 1909	(B,71,21)		RS1/10SR102J		
S 1872	(A,22,7) Push Switch		CSG1155			R 1910	(B,75,24)		RS1/10SR473J		
S 1873	(A,34,7) Push Switch		CSG1155			R 1922	(A,89,21)		RS1/10SR5102D		
S 1874	(A,72,8) Push Switch		CSG1155			R 1924	(A,107,25)		RAB4C101J		
S 1875	(A,91,8) Push Switch		CSG1155			R 1925	(B,95,23)		RAB4C101J		
S 1876	(A,139,8) Push Switch		CSG1155			R 1941	(B,155,38)		RS1/4SA561J		
S 1877	(A,21,34) Push Switch		CSG1155			R 1942	(B,15,24)		RS1/10SR151J		
S 1878	(A,33,33) Push Switch		CSG1155			R 1943	(B,13,20)		RS1/10SR151J		
S 1879	(A,95,8) Push Switch		CSG1155			R 1944	(B,70,9)		RS1/10SR151J		
S 1880	(A,115,8) Push Switch		CSG1155			R 1945	(B,122,22)		RS1/10SR151J		F
S 1881	(A,120,8) Push Switch		CSG1155			R 1946	(B,31,30)		RS1/10SR221J		
						CAPACITORS					

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>		
A	C 1801 (B,146,32)	CKSRYB104K16		
	C 1808 (B,135,8)	CKSRYB104K16		
	C 1891 (B,138,21)	CKSYF106Z10		
	C 1901 (B,99,29)	CKSRYB104K16		
	C 1902 (B,82,24)	CKSRYB103K50		
	C 1921 (A,89,25)	CKSRYB104K16		
	C 1922 (A,89,24)	CKSRYB104K16		
	C 1923 (B,99,23)	CKSRYB104K16		

Miscellaneous Parts List

	Pickup Unit(S10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXE2273
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026