


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

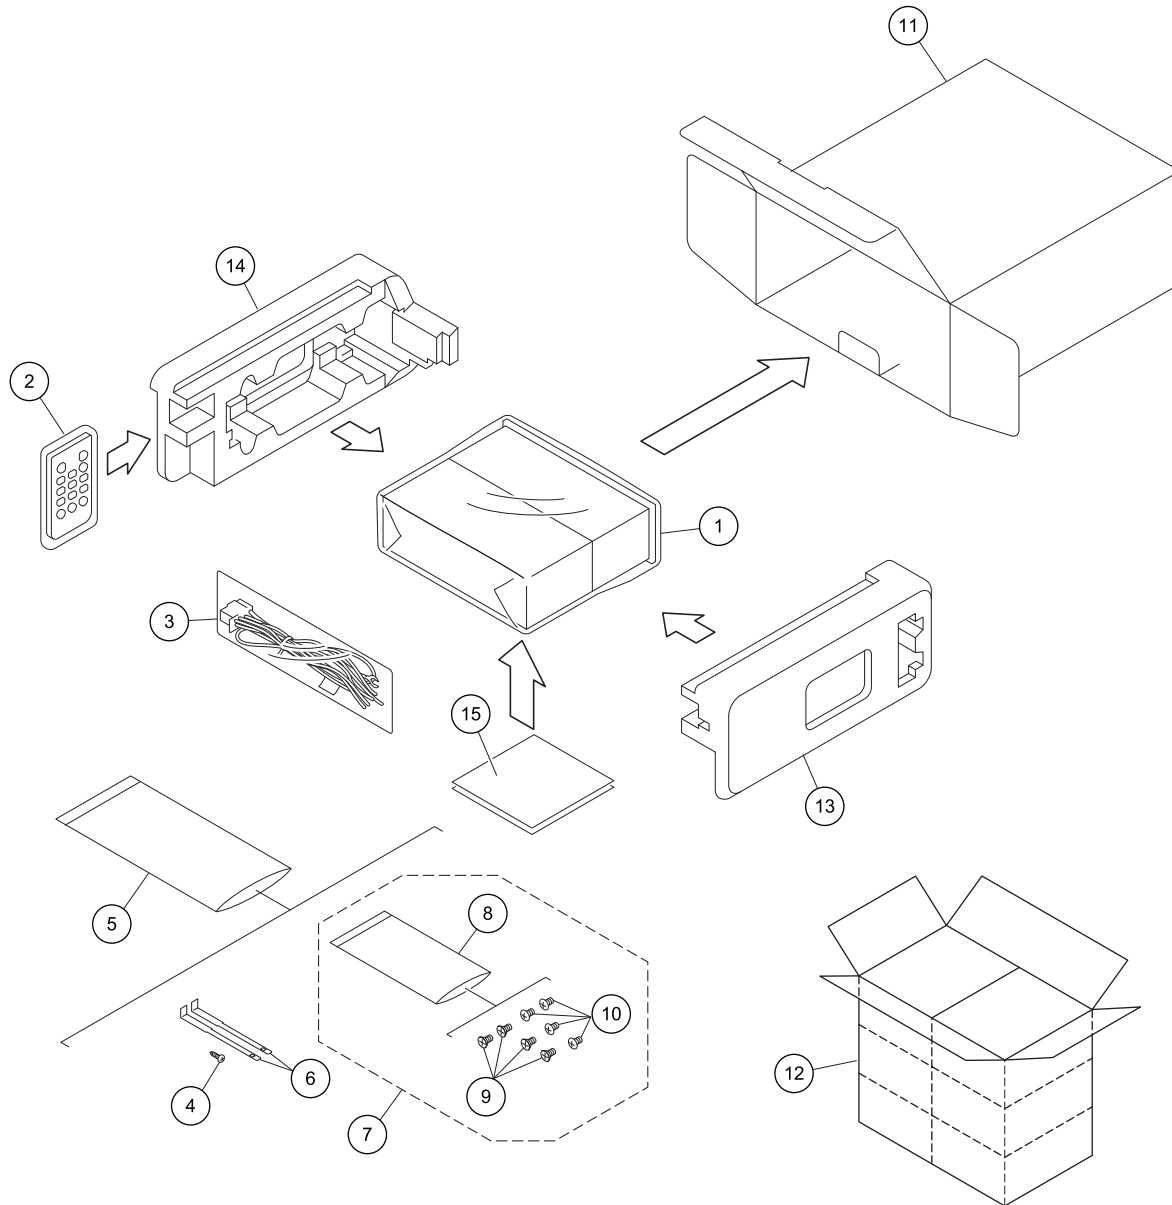


	5		6		7		8	
PACKING SECTION PARTS LIST								
	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1	Polyethylene Bag	CEG1173		10	Screw	TRZ50P080FTC	
	2	Remote Control Unit	CXE2758					
	3	Cord Assy	YDP5039		11	Unit Box	YHG5557	A
	4	Screw	BPZ20P060FTC		12	Contain Box	YHL5557	
	5	Polyethylene Bag	CEG1160		13	Protector	YHP5071	
					14	Protector	YHP5072	
	6	Handle	CND3707	*	15-1	Warranty Card	CRY1276	
	7	Screw Assy	YEA5072					
*	8	Polyethylene Bag	CEG-127		15-2	Owner's Manual	YRD5305	
	9	Screw	CRZ50P090FTC					

Owner's Manual

Part No.	Language
YRD5305	English, French, Spanish(Espanol)

9.2 EXTERIOR(1)

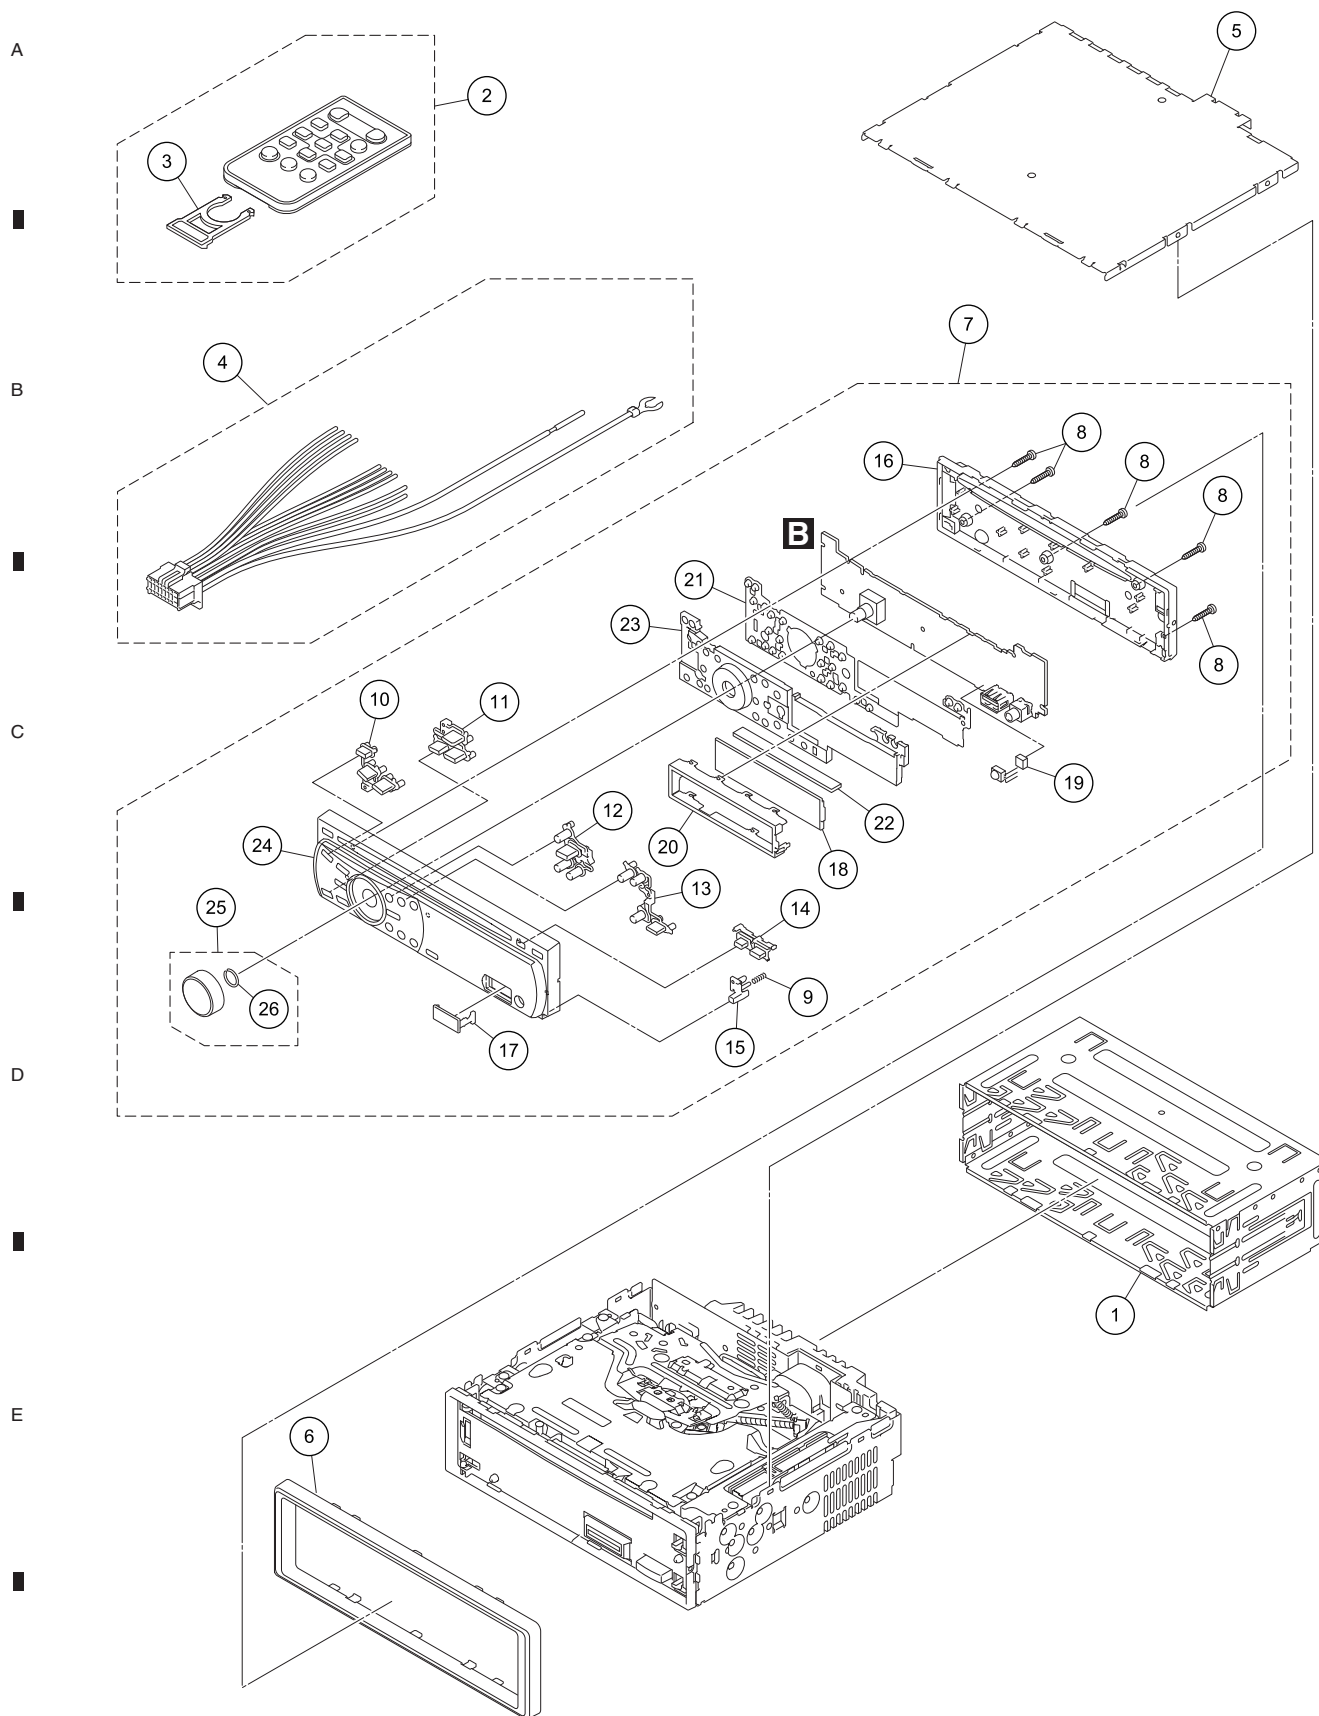


EXTERIOR(1) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Holder	CND3598	
2	Remote Control Unit	CXE2758	A
3	Cover	CNS7068	
4	Cord Assy	YDP5039	
5	Case	YNB5063	
6	Panel	YNS5537	
7	Detachable Assy	YXA5680	
8	Screw	BPZ20P100FTC	
9	Spring	CBH2210	
10	Button(DISP, SRC, UP)	YAC5384	
11	Button(ESC, DOWN, LEFT)	YAC5385	B
12	Button(1, RIGHT, 4, 5)	YAC5386	
13	Button(2, 3, 6, LIST)	YAC5387	
14	Button(EJECT, CLOCK)	YAC5388	
15	Button(DETACH)	YAC5389	
16	Cover	YNS5536	
17	Grip(USB)	YNV5194	
18	LCD(LCD1801)	CAW1970	
19	Spacer	CNN2527	
20	Holder	YNC5083	C
21	Rubber	YNV5191	
22	Connector	YNV5192	
23	Lighting Conductor	YNV5193	
24	Grille Unit	YXA5688	
25	Knob Unit	YXC5124	
26	Spring	YBL5010	
			D
			E
			F

1 2 3 4

9.3 EXTERIOR(2)

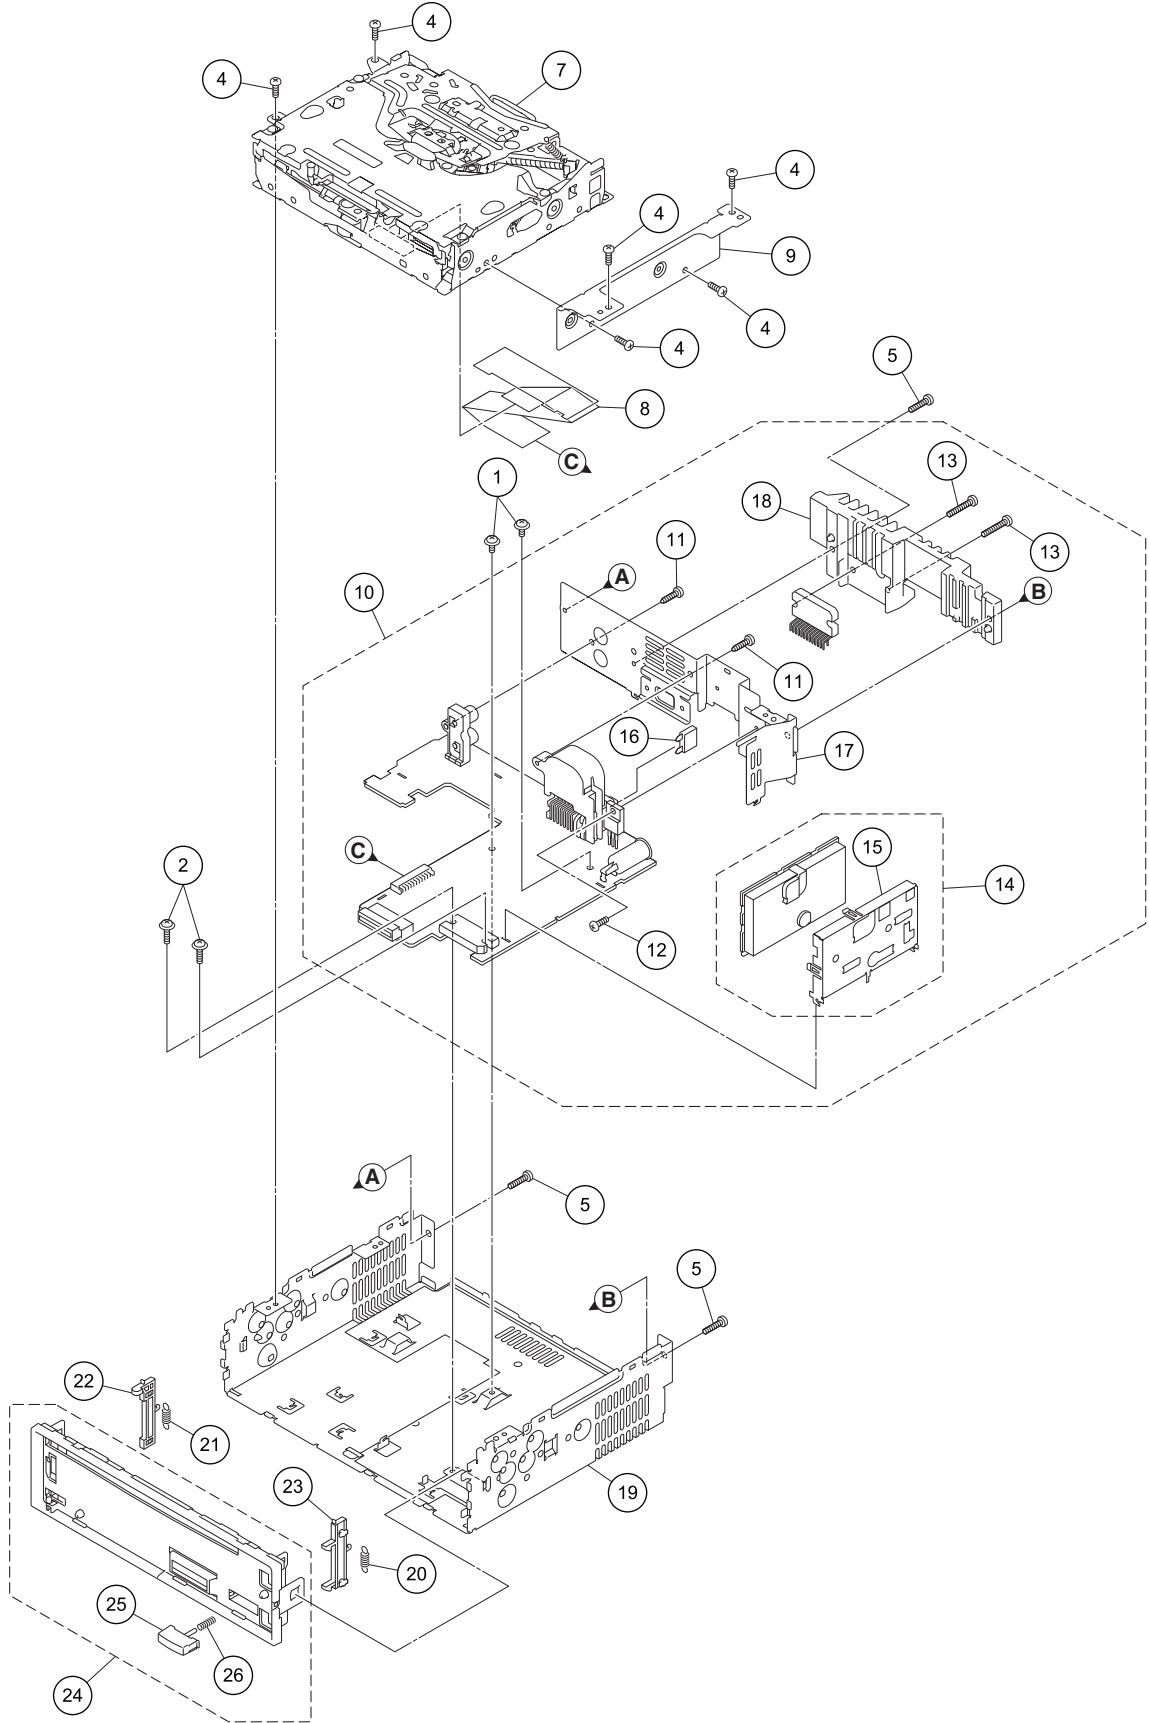


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	ASZ26P050FTC	
2	Screw	ASZ26P080FTC	
3			A
4	Screw	BSZ26P060FTC	
5	Screw	BSZ26P100FTC	
6			
7	CD Mechanism Module(S11)	CXK5870	
8	Cable	YDE5059	
9	Holder	YND5048	
10	Tuner Amp Unit	YWM5449	
11	Screw	BPZ26P080FTC	B
12	Screw	BSZ26P060FTC	
13	Screw	BSZ26P160FTC	
14	FM/AM Tuner Unit	CWE2025	
15	Holder	CND3466	
⚠ 16	Fuse(10 A)	YEK5001	
17	Holder	YND5045	
18	Heat Sink	YNR5139	
19	Chassis Unit	YXA5652	
20	Spring	CBH2961	C
21	Spring	CBH2962	
22	Arm	CNV9312	
23	Arm	CNW1439	
24	Panel Unit	YXA5650	
25	Button	CAC4836	
26	Spring	YBH5012	

D

E

F

9.4 CD MECHANISM MODULE

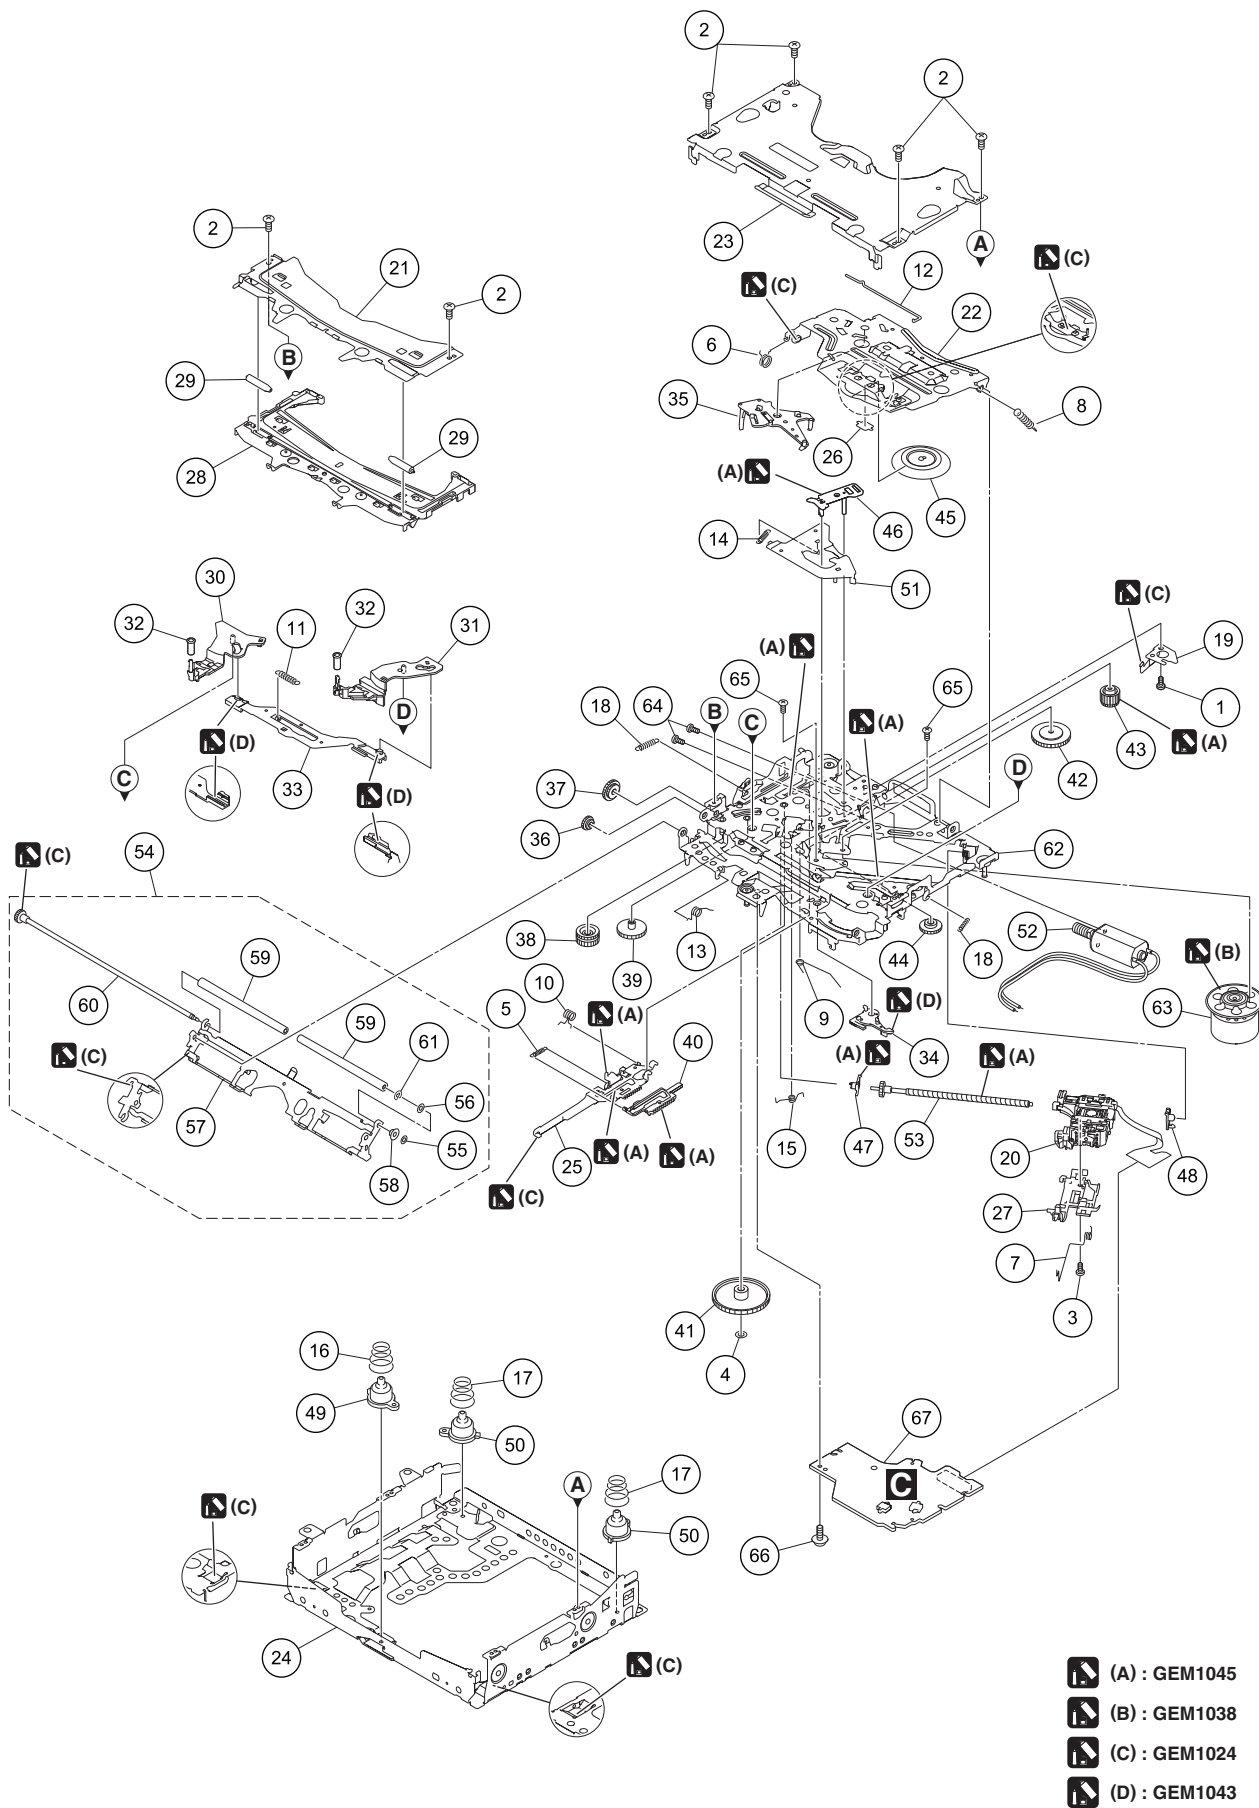

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	BMZ20P020FTC	50	Damper	CNW1198	
2	Screw	BSZ20P040FTC				
3	Screw(M2 x 4)	CBA1835	51	Arm	CNW1726	A
4	Washer	CBF1038	52	Motor Unit	CXC4026	
5	Spring	CBH3010	53	Screw Unit	CXC8894	
			54	Arm Assy	CXC8896	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Spring	CBH2609	57	Arm	CND4554	
10	Spring	CBH3011	58	Collar	CNV6906	
			59	Roller	CNW1196	
11	Spring	CBH3012	60	Gear Unit	CXC8893	B
12	Spring	CBH3014				
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE1946	
15	Spring	CBH3017	63	Motor Unit	CXE2273	
			64	Screw	JFZ20P025FTC	
16	Spring	CBH3018	65	Screw	JGZ17P022FTC	
17	Spring	CBH3019				
18	Spring	CBH3020	66	Screw	IMS20P030FTC	
19	Spring	CBL1797	67	CD Core Unit (S11USB)	CWX3776	
20	Pickup Unit(S10.5)(Service)	CXX1942				C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Frame	CND4557				
24	Frame	CND5217				
25	Lever	CND5398				
26	Sheet	CNN2280				
27	Rack	CNV8342				
28	Guide	CNW1171				
29	Roller	CNW1172				
30	Arm	CNW1173				D
31	Arm	CNW1174				
32	Roller	CNW1175				
33	Lever	CNW1176				
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38	Gear	CNW1182				
39	Gear	CNW1183				E
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW1188				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J, RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.

Part No.

Unit Number : YWM5449

Unit Name : Tuner Amp Unit

Unit Number :

Unit Name : Keyboard Unit

Unit Number : CWX3776

Unit Name : CD Core Unit(S11USB)

A

Unit Number : YWM5449

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 201	(A,102,109) IC	PML014A
IC 301	(A,74,141) IC	PAL007C
IC 501	(A,16,114) IC	BD9007F
IC 601	(A,117,83) IC	PN5035B
IC 712	(A,36,123) IC	BD6538G

IC 911	(A,141,28) IC	BA49181-V12
Q 251	(A,21,130) Transistor	UMH3N
Q 351	(A,31,131) Transistor	RT3T22M
Q 601	(A,136,63) Transistor	2SD1858
Q 751	(A,137,139) Transistor	2SD2396

Q 752	(A,136,128) Transistor	RT3T22M
Q 801	(A,107,42) Transistor	2SA1036K
Q 802	(A,107,38) Transistor	RT1N141M-11
Q 921	(A,127,106) Transistor	LSC4081UB
D 301	(A,93,128) Diode	1SR154-400

D 302	(A,113,114) Diode	1SR154-400
D 501	(A,17,125) Diode	1SR154-400
D 502	(A,23,107) Diode	RB160L-40
D 751	(A,135,132) Diode	HZU7R5(B3)
D 801	(A,108,22) Diode	MALS068X

D 802	(A,108,21) Diode	MALS068X
D 803	(A,114,21) Varistor	EZJPOV270RM
D 804	(A,115,22) Varistor	EZJPOV270RM
D 901	(A,133,123) Diode	1SR154-400

Circuit Symbol and No.

Part No.

D 902	(A,127,117) Diode	1SR154-400
-------	-------------------	------------

D 911	(A,113,56) Diode	1SR154-400
D 912	(A,113,53) Diode	1SR154-400
D 921	(A,123,106) Diode	HZU6R2(B3)
L 402	(A,146,97) Inductor	LCTAW2R2J2520
L 403	(A,146,57) Inductor	CTF1473

L 501	(A,29,110) Choke Coil 47 uH	CTH1420
L 602	(A,121,98) Inductor	CTF1473
L 606	(A,136,85) Chip Coil	LCTAW1R0J2520
L 607	(A,133,83) Inductor	CTF1379
L 608	(A,133,72) Chip Coil	LCTAW1R5J2520

L 609	(A,134,70) Chip Coil	LCTAW1R5J2520
L 610	(A,136,77) Inductor	LCTAW1R2J2520
L 611	(A,138,71) Inductor	CTF1379
L 612	(A,137,69) Inductor	CTF1379
L 614	(A,122,69) Inductor	CTF1379

L 617	(A,132,85) Inductor	CTF1389
L 618	(A,121,65) Inductor	CTF1389
L 701	(A,93,47) Inductor	CTF1713
L 702	(A,93,48) Inductor	CTF1473
L 801	(A,94,31) Inductor	LCTAW2R2J2520

L 902	(A,107,140) Choke Coil 600 uH	CTH1432
X 601	(A,141,78) Oscillator 74.1 MHz	CSS1758
X 681	(A,114,62) Oscillator 4.7186 MHz	CSS1796
FU251	(A,5,129) Fuse 3 A	CEK1286
AR401	(A,145,110) Surge Protector	ISA-6802-01Y900

ANT401	(A,153,128) Antenna Jack	CKX1070
CN251	(A,17,139) Pin Jack	YKB5010
CN651	(A,85,40) Connector	CKS3833
CN832	(A,105,3) Connector	CKS6188
JA901	(A,109,141) Plug	CKM1586

Z 401	(A,153,105) FM/AM Tuner Unit	CWE2025
-------	------------------------------	---------

RESISTORS

R 201	(A,118,97)	RAB4CQ102J
R 206	(A,90,112)	RS1/16SS681J
R 207	(A,91,105)	RS1/16SS681J
R 213	(A,90,107)	RS1/16SS331J
R 221	(A,91,106)	RS1/16SS223J

R 222	(A,91,112)	RS1/16SS223J
-------	------------	--------------

5	6	7	8	
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
R 251 (A,19,131)	RS1/16SS223J	R 680 (A,96,99)	RS1/16SS273J	A
R 252 (A,24,131)	RS1/16SS223J	R 681 (A,95,101)	RS1/16SS473J	
R 253 (A,27,131)	RS1/16SS821J	R 683 (A,95,76)	RS1/10SR473J	
R 254 (A,17,131)	RS1/16SS821J	R 685 (A,101,97)	RS1/16SS104J	
R 303 (A,59,132)	RS1/16SS153J	R 686 (A,104,97)	RS1/16SS104J	
R 331 (A,71,126)	RS1/16SS471J	R 687 (A,104,96)	RS1/16SS104J	
R 332 (A,79,128)	RS1/16SS471J	R 689 (A,93,74)	RS1/16SS0R0J	
R 333 (A,71,128)	RS1/16SS471J	R 702 (A,94,40)	RS1/16SS221J	
R 334 (A,78,126)	RS1/16SS471J	R 704 (A,92,37)	RS1/16SS221J	
R 351 (A,57,127)	RS1/16SS103J	R 708 (A,94,35)	RS1/16SS104J	
R 352 (A,55,130)	RS1/16SS153J	R 712 (A,94,84)	RS1/16SS103J	
R 353 (A,55,129)	RS1/16SS221J	R 751 (A,133,132)	RS1/4SA271J	
R 401 (A,145,55)	RS1/16SS0R0J	R 802 (A,109,42)	RS1/16SS103J	
R 404 (A,129,94)	RS1/16SS102J	R 803 (A,107,40)	RS1/16SS562J	
R 405 (A,147,47)	RS1/16SS102J	R 804 (A,98,22)	RS1/10SR101J	B
R 406 (A,136,91)	RS1/16SS102J	R 805 (A,101,22)	RS1/10SR101J	
R 407 (A,136,90)	RS1/16SS102J	R 810 (A,96,26)	RS1/10SR222J	
R 408 (A,140,93)	RAB4CQ104J	R 811 (A,94,26)	RS1/10SR222J	
R 409 (A,131,92)	RS1/16SS391J	R 812 (A,111,26)	RS1/10SR222J	
R 410 (A,131,91)	RS1/16SS681J	R 813 (A,110,26)	RS1/10SR222J	
R 411 (A,133,91)	RS1/16SS681J	R 814 (A,113,26)	RS1/10SR222J	
R 412 (A,131,90)	RS1/16SS681J	R 815 (A,114,26)	RS1/10SR222J	
R 413 (A,131,89)	RS1/16SS472J	R 816 (A,92,71)	RS1/16SS104J	
R 501 (A,11,114)	RS1/16SS473J	R 817 (A,106,31)	RS1/16SS473J	
R 502 (A,11,113)	RS1/16SS392J	R 818 (A,94,69)	RS1/16SS104J	C
R 503 (A,22,113)	RS1/16SS183J	R 819 (A,90,21)	RS1/16SS102J	
R 504 (A,18,117)	RS1/10SR4702F	R 820 (A,103,41)	RS1/10SR103J	
R 505 (A,16,117)	RS1/16SS682J	R 831 (A,104,26)	RS1/10SR222J	
R 506 (A,16,120)	RS1/10SR1002F	R 832 (A,102,25)	RS1/10SR222J	
R 507 (A,18,120)	RS1/10SR471J	R 836 (A,91,71)	RS1/16SS104J	
R 601 (A,103,89)	RS1/16SS473J	R 837 (A,103,25)	RS1/16SS222J	
R 602 (A,101,78)	RS1/16SS222J	R 855 (A,93,120)	RS1/16SS473J	
R 603 (A,95,69)	RS1/16SS473J	R 921 (A,129,104)	RS1/16SS104J	
R 604 (A,132,87)	RS1/16SS681J	R 922 (A,125,106)	RS1/16SS223J	
R 606 (A,123,63)	RS1/16SS473J	R 923 (A,117,116)	RS1/4SA102J	D
R 607 (A,110,49)	RS1/16SS473J	R 924 (A,120,106)	RS1/16SS473J	
R 608 (A,131,79)	RS1/16SS470J	R 925 (A,121,108)	RS1/16SS473J	
R 610 (A,129,69)	RS1/16SS473J			
R 611 (A,131,76)	RS1/16SS182J	CAPACITORS		
R 612 (A,88,115)	RS1/16SS563J	C 201 (A,93,103)	CKSSYB224K6R3	
R 613 (A,130,86)	RS1/16SS302J	C 202 (A,92,115)	CKSSYB224K6R3	
R 615 (A,92,102)	RS1/16SS563J	C 203 (A,93,104)	CKSRYB105K6R3	
R 616 (A,129,97)	RS1/16SS104J	C 204 (A,93,114)	CKSRYB105K6R3	
R 617 (A,116,96)	RS1/16SS473J	C 205 (A,110,105) 10 uF	CCG1192	
R 618 (A,129,95)	RS1/16SS473J	C 206 (A,93,112)	CKSRYB105K6R3	E
R 619 (A,129,96)	RS1/16SS104J	C 207 (A,93,106)	CKSRYB105K6R3	
R 622 (A,132,80)	RS1/16SS0R0J	C 212 (A,93,111)	CKSRYB105K6R3	
R 623 (A,127,70)	RS1/16SS0R0J	C 213 (A,93,107)	CKSRYB105K6R3	
R 643 (A,128,99)	RS1/16SS104J	C 214 (A,116,105) 4.7 uF	CCG1201	
R 656 (A,101,70)	RS1/16SS104J	C 215 (A,113,106)	CKSSYB104K10	
R 657 (A,98,70)	RS1/16SS104J	C 216 (A,107,102)	CCSRCH100D50	
R 659 (A,103,71)	RS1/16SS472J	C 253 (A,43,130)	CEVW2R2M50	
R 660 (A,100,70)	RS1/16SS472J	C 254 (A,26,127)	CEVW2R2M50	
R 661 (A,103,83)	RS1/16SS221J	C 301 (A,70,129)	CKSRYB474K10	
R 666 (A,136,89)	RS1/16SS103J	C 302 (A,68,129)	CKSRYB474K10	F
R 674 (A,102,94)	RS1/16SS104J	C 303 (A,76,128)	CKSRYB474K10	
R 675 (A,93,69)	RS1/16SS473J	C 304 (A,77,128)	CKSRYB474K10	
R 677 (A,99,94)	RS1/16SS473J	C 305 (A,71,132)	CKSQYB474K25	
R 678 (A,89,101)	RS1/16SS103J	C 306 (A,69,132)	CKSQYB474K25	
R 679 (A,99,100)	RS1/16SS103J			

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 307 (A,75,131) CKSQYB474K25
 C 308 (A,76,131) CKSQYB474K25
 C 309 (A,82,127) CKSQYB225K10
 C 310 (A,84,127) CKSQYB225K10
 C 311 (A,98,128) CKSRYB104K16

C 711 (A,33,122)
 C 712 (A,39,124)
 C 751 (A,137,132)
 C 752 (A,143,130)
 C 802 (A,99,26)

CKSRYB105K6R3
 CKSRYB105K6R3
 CKSSYB473K10
 CEVW101M16
 CKSRYB104K16

C 312 (A,64,129) CEVW100M16
 C 313 (A,53,135) CKSRYB104K16
 C 331 (A,69,125) CCSSCH101J50
 C 332 (A,79,129) CCSSCH101J50
 C 333 (A,71,130) CCSSCH101J50

C 803 (A,102,29)
 C 804 (A,98,29)
 C 805 (A,94,21)
 C 806 (A,94,22)
 C 807 (A,103,22)

CCSRCH221J50
 CCSRCH221J50
 CKSRYB104K16
 CKSRYB104K16
 CKSRYB104K16

C 334 (A,76,126) CCSSCH101J50
 C 351 (A,47,136) CEVW330M10
 C 401 (A,146,58) CCSRCH270J50
 C 402 (A,143,96) CKSSYB103K16
 C 404 (A,144,104) CEVW101M16

C 808 (A,105,22)
 C 809 (A,103,21)
 C 810 (A,111,21)
 C 811 (A,111,22)
 C 812 (A,103,38)

CKSRYB104K16
 CKSRYB104K16
 CCSRCH221J50
 CCSRCH221J50
 CKSRYB104K16

C 405 (A,143,98) CKSSYB103K16
 C 409 (A,131,93) CCSSCH100D50
 C 416 (A,133,92) CCSSCH390J50
 C 501 (A,8,122) CEVW221M16
 C 502 (A,9,113) CKSQYB225K16

C 818 (A,96,22)
 C 819 (A,91,23)
 C 820 (A,91,26)
 C 821 (A,119,26)
 C 822 (A,90,22)

CKSRYB104K16
 CKSRYB104K16
 CKSRYB104K16
 CKSRYB104K16
 CCSRCH221J50

C 503 (A,21,114) CCSSCH220J50
 C 504 (A,23,113) CKSRYB153K50
 C 505 (A,26,119) CEVW221M10
 C 601 (A,98,88) CKSRYB105K6R3
 C 603 (A,102,88) CKSSYB103K16

C 901 (A,128,125) 3 300 uF/16 V
 C 909 (A,125,48)
 C 910 4.7 uF
 C 912 (A,119,54)
 C 913 (A,132,41)

CCH1732
 CKSRYB105K6R3
 CCG1201
 CEAT102M16
 CKSRYB104K16

C 605 (A,111,68) CKSSYB104K10
 C 606 (A,103,63) CKSSYB103K16
 C 607 (A,117,69) CKSRYB105K6R3
 C 609 (A,129,66) CKSRYB331K50
 C 610 (A,104,49) CEVW101M4

C 914 (A,130,45) 4.7 uF
 C 915 (A,142,47) 4.7 uF
 C 916 (A,142,44) 4.7 uF
 C 917 (A,129,40)
 C 953 (A,124,110)

CCG1201
 CCG1201
 CCG1201
 CKSSYB102K50
 CCSRCH680J50

C 611 (A,129,65) CKSRYB331K50
 C 612 (A,119,69) CKSRYB103K50
 C 613 (A,99,57) CEVW471M10
 C 614 (A,146,92) CKSSYB102K50
 C 615 (A,129,68) CKSRYB331K50

B**Unit Number :****Unit Name : Keyboard Unit**

C 616 (A,124,70) CKSSYB103K16
 C 617 (A,129,72) CCSRCH680J50
 C 619 (A,137,81) CCSRCH180J50
 C 621 (A,135,60) CKSRYB331K50
 C 622 (A,130,84) CKSRYB105K6R3

MISCELLANEOUS

IC 1801 (B,123,25) IC PD6340A
 IC 1802 (A,121,9) Remote IC GP1UXC14RK
 D 1801 (B,96,25) Diode MC2848-11
 D 1802 (B,100,25) Diode MC2846-11
 D 1851 (A,163,23) White LED DS2XA4WBETW1(Z1)

C 623 (A,131,75) CKSSYB102K50
 C 624 (A,130,74) CKSSYB102K50
 C 625 (A,134,74) CCSSCH270J50
 C 626 (A,134,68) CCSSCH270J50
 C 627 (A,136,72) CCSSCH150J50

D 1852 (A,62,21) LED CL-195SR-CD
 D 1853 (A,60,12) LED CL-195SR-CD
 D 1854 (A,68,11) LED CL-195SR-CD
 D 1855 (A,77,33) LED CL-195SR-CD
 D 1856 (A,68,28) LED CL-195SR-CD

C 628 (A,134,78) CKSSYB102K50
 C 629 (A,132,78) CCSSCH4R0C50
 C 630 (A,134,76) CCSSCH8R0D50
 C 631 (A,118,68) CKSSYB223K16
 C 632 (A,102,93) CKSSYB104K10

D 1857 (A,60,27) LED CL-195SR-CD
 D 1861 (A,26,28) LED CL-195SR-CD
 D 1862 (A,24,21) LED CL-195SR-CD
 D 1863 (A,26,11) LED CL-195SR-CD
 D 1864 (A,13,30) LED CL-195SR-CD

C 633 (A,120,96) CKSSYB104K10
 C 635 (A,134,88) CKSSYB104K10
 C 640 (A,122,70) CCSSCH680J50
 C 650 (A,104,45) CKSSYB103K16
 C 671 (A,91,102) CKSSYB182K50

D 1865 (A,7,37) LED CL-195SR-CD
 D 1866 (A,12,7) LED CL-195SR-CD
 D 1867 (A,89,8) LED CL-195SR-CD
 D 1868 (A,77,6) LED CL-195SR-CD
 D 1869 (A,148,41) LED CL-195SR-CD

C 672 (A,88,114) CKSSYB182K50
 C 681 (A,114,66) CCSSCH270J50
 C 682 (A,116,66) CCSSCH270J50
 C 702 (A,95,35) CKSSYB103K16
 C 703 (A,93,39) CKSSYB104K10

D 1870 (A,164,41) LED CL-195SR-CD
 D 1911 (B,150,17) Diode MALSO68X
 D 1912 (B,148,23) Diode MALSO68X
 X 1801 (B,112,24) Ceramic Resonator 5.00 MHz CSS1731

1

2

3

4

5				6				7				8			
<u>Circuit Symbol and No.</u>				<u>Part No.</u>				<u>Circuit Symbol and No.</u>				<u>Part No.</u>			
S 1845	(A,43,20)	Rotary Switch		CSD1153				R 107	(B,17,48)			RS1/16SS105J			
VA1901	(B,159,19)	Varistor		EZJZ1V270RM				R 202	(A,47,25)			RS1/16SS473J			
VA1902	(B,157,21)	Varistor		EZJZ1V270RM				R 204	(A,22,19)			RS1/16SS221J			A
VA1903	(B,154,21)	Varistor		EZJZ1V270RM				R 206	(B,31,27)			RS1/16SS104J			
VA1904	(B,160,19)	Varistor		EZJZ1V270RM				R 210	(B,51,12)			RS1/16SS102J			
LCD1801	(A,158,33)	LCD		CAW1970				R 214	(B,28,48)			RS1/16SS472J			
CN1821	(B,109,10)	Connector		CKS6049				R 216	(B,29,47)			RS1/16SS472J			
CN1901	(A,153,9)	Jack		YKN5001				R 221	(A,31,49)			RS1/16SS103J			
CN1911	(A,137,9)	Connector		YKS5036				R 222	(A,33,49)			RS1/16SS103J			
<u>RESISTORS</u>								R 223	(B,38,14)			RS1/16SS473J			
								R 225	(A,28,48)			RS1/16SS103J			
R 1802	(B,102,24)			RS1/10SR2R2J				R 226	(A,27,48)			RS1/16SS393J			
R 1803	(B,147,20)			RS1/10SR103J				R 227	(B,25,45)			RS1/16SS562J			
R 1804	(B,144,20)			RS1/10SR101J				R 228	(B,23,42)			RS1/16SS122J			B
R 1805	(B,99,23)			RS1/10SR222J				R 229	(B,23,44)			RS1/16SS472J			
R 1806	(B,101,21)			RS1/10SR222J				R 232	(B,25,43)			RS1/16SS122J			
R 1821	(B,57,8)			RS1/10SR473J				R 233	(B,19,24)			RS1/16SS103J			
R 1823	(B,95,22)			RS1/10SR0R0J				R 234	(A,48,18)			RS1/16SS473J			
R 1824	(B,29,15)			RS1/10SR0R0J				R 235	(B,23,32)			RS1/16SS473J			
R 1851	(B,156,24)			RS1/4SA681J				R 237	(A,42,22)			RS1/16SS471J			
R 1852	(B,68,28)			RS1/4SA821J				R 240	(B,49,10)			RS1/16S473J			
R 1853	(B,74,28)			RS1/4SA821J				R 241	(B,49,11)			RS1/16SS103J			
R 1855	(B,23,22)			RS1/4SA821J				R 244	(B,27,28)			RS1/16SS473J			
R 1856	(B,26,17)			RS1/4SA681J				R 254	(A,19,22)			RS1/16SS104J			
R 1857	(B,81,15)			RS1/4SA102J				R 256	(A,18,22)			RS1/16SS104J			C
R 1858	(B,154,24)			RS1/4SA222J				R 259	(A,12,23)			RS1/16SS0R0J			
R 1866	(B,68,18)			RS1/10SR0R0J				R 261	(A,14,24)			RS1/16SS104J			
R 1901	(B,158,19)			RS1/10SR101J				R 280	(B,30,20)			RS1/16SS103J			
R 1902	(B,156,19)			RS1/10SR101J				R 282	(A,15,28)			RS1/16SS240J			
<u>CAPACITORS</u>								R 283	(A,15,27)			RS1/16SS240J			
								R 284	(B,17,27)			RS1/16SS153J			
C 1801	(B,146,18)			CKSYF106Z10				R 285	(B,18,27)			RS1/16SS153J			
C 1802	(B,85,16)			CKSRYB105K10				R 290	(B,29,20)			RS1/16SS103J			
C 1901	(B,154,20)			CKSRYB472K50				R 291	(B,16,44)			RS1/16SS272J			
C 1902	(B,154,18)			CKSRYB472K50				R 294	(A,14,29)			RS1/16SS221J			
C								R 307	(A,60,33)			RS1/16SS183J			D
Unit Number : CWX3776								R 308	(A,60,35)			RS1/16SS183J			
Unit Name : CD Core Unit(S11USB)								R 309	(A,58,33)			RS1/16SS183J			
<u>MISCELLANEOUS</u>								R 310	(A,57,36)			RS1/16SS183J			
IC 201	(A,31,33)	IC		PE5715A				R 701	(A,36,21)			RS1/16SS221J			
IC 301	(A,64,27)	IC		BA5839FP				R 702	(A,22,22)			RS1/16SS221J			
Q 101	(B,9,56)	Transistor		2SA1577				R 714	(B,30,12)			RS1/16S0R0J			
Q 102	(B,19,47)	Digital TR(PNP)		UNR511MG				<u>CAPACITORS</u>							
X 201	(A,40,20)	Ceramic Resonator	16.934 MHz	CSS1603				C 106	(B,12,54)			CKSQYB475K6R3			E
X 205	(B,12,36)	Oscillator 48.000 MHz	CSS1753					C 202	(A,20,26)			CKSSYB104K10			
S 901	(A,42,53)	Switch(HOME)	CSN1067					C 204	(A,21,20)			CKSSYB103K16			
S 903	(B,21,12)	Switch(DSCSNS)	CSN1068					C 205	(B,36,24)			CKSQYB475K6R3			
S 905	(B,11,25)	Switch(8EJ)	CSN1068					C 206	(A,37,22)			CKSSYB104K10			
CN101	(A,15,58)	Connector	CKS4808					C 207	(A,40,22)			CKSRYB104K16			
CN701	(A,36,10)	Connector	CKS5854					C 209	(B,43,32)			CEVW220M6R3			
<u>RESISTORS</u>								C 210	(B,40,27)			CKSSYB104K10			
R 101	(B,5,59)			RS1/10SR2R4J				C 211	(A,42,26)			CKSSYB104K10			
R 102	(B,7,59)			RS1/10SR2R4J				C 213	(A,38,44)			CKSSYB104K10			
R 103	(B,8,59)			RS1/10SR2R7J				C 214	(A,44,27)			CKSSYB104K10			
R 104	(B,12,52)			RS1/16SS222J				C 215	(B,38,31)			CKSSYB104K10			F
								C 216	(A,26,49)			CKSSYB332K50			
								C 217	(A,25,46)			CKSSYB104K10			
								C 218	(A,26,48)			CKSSYB473K10			

Circuit Symbol and No.

Part No.

A

C 219	(A,24,44)	CKSSYB104K10
C 220	(A,24,45)	CKSSYB182K50
C 221	(A,23,43)	CKSSYB104K10
C 222	(B,23,43)	CCSSCH560J50
C 223	(B,23,45)	CCSSCH4R0C50

B

C 224	(A,21,42)	CKSSYB104K10
C 226	(A,18,41)	CCSSCH680J50
C 227	(A,18,39)	CCSSCH470J50
C 228	(B,15,42)	CKSSYB103K16
C 229	(B,23,37)	CKSSYB104K10
C 236	(B,24,37)	CKSSYB104K10
C 239	(B,25,44)	CCSSCH220J50
C 240	(A,15,36)	CKSSYB104K10
C 250	(A,31,50)	CKSSYB102K50
C 251	(A,33,50)	CKSSYB102K50

C

C 260	(A,17,27)	CKSSYB104K10
C 261	(B,9,38)	CCSSCJ3R0C50
C 262	(B,9,34)	CCSSCJ3R0C50
C 293	(B,15,43)	CKSSYB102K50
C 303	(A,60,34)	CKSSYB472K25
C 304	(A,58,34)	CKSSYB223K16
C 307	(A,68,20)	CKSRYB105K10
C 703	(B,36,14)	CCSSCH101J50
C 704	(B,40,13)	CKSSYB102K50
C 711	(A,53,28)	CKSSYB104K10

Miscellaneous Parts List

M

M 1	Pickup Unit(P10.5)(Service)	CXX1942
M 2	Motor Unit(SPINDLE)	CXE2273
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026

D

E

F

G

H