


EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lobaricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

PACKING

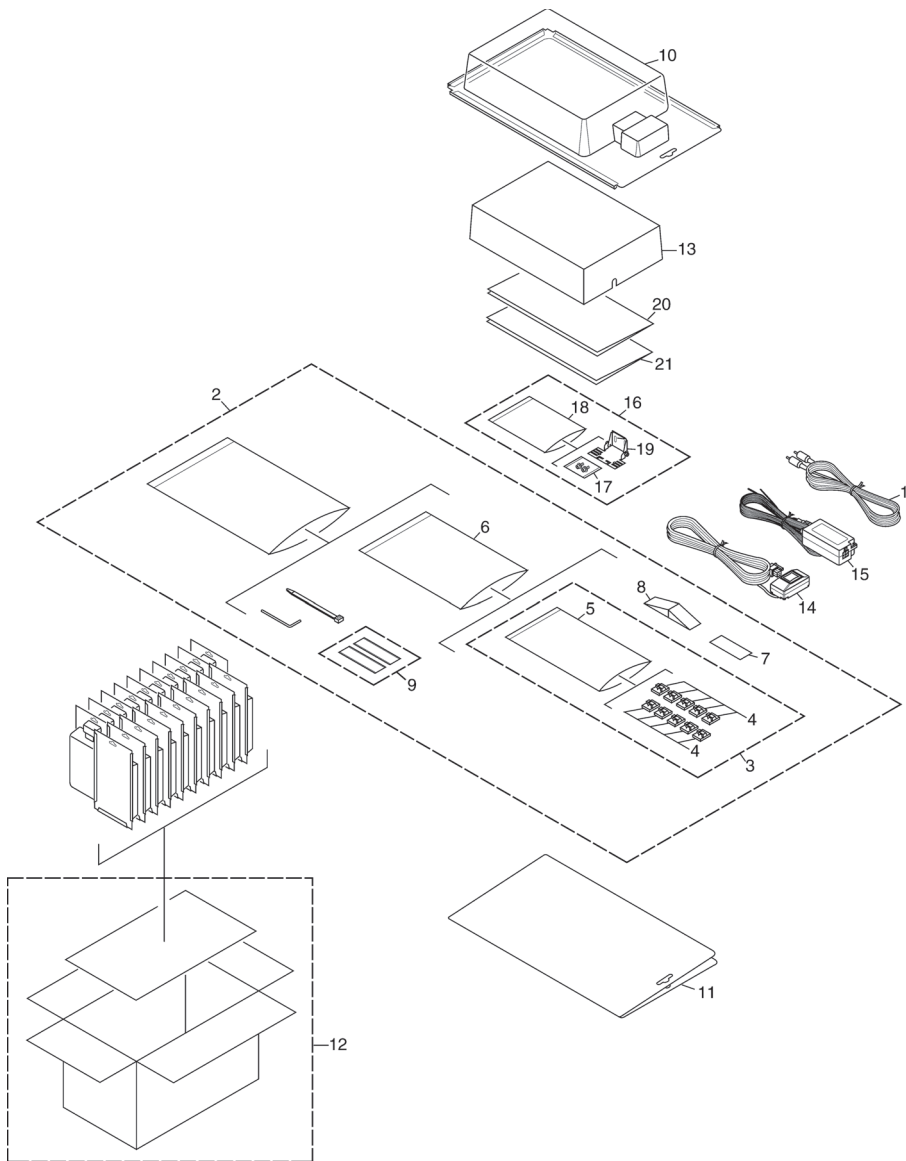

PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord	CZD5393	13	Board	CZH5389
2	Accessory Assy	CZE5016	14	Camera Assy	CZX5105
3	Attachment Assy	CEA4582	15	Battery Box Assy	CZX5106
* 4	Clamper	CNV8262	16	Strap Assy	CZX5107
* 5	Polyethylene Bag	E36-615	17	Screw Assy(M3x4)	CZE5017
* 6	Polyethylene Bag	CZE5019	* 18	Polyethylene Bag	CZE5018
7	Double Sided Tape	CZN7020	19	Strap	CZN7018
8	Packing	CZN7021	20	Owner's Manual	CZR5019
9	Fastener	CZN7022	21	Owner's Manual	CZR5021
10	Blister Pack	CZH5368			
11	Board	CZH5370			
12	Contain Box	CZH5390			