


EXPLODED VIEW (CD MECHANISM)

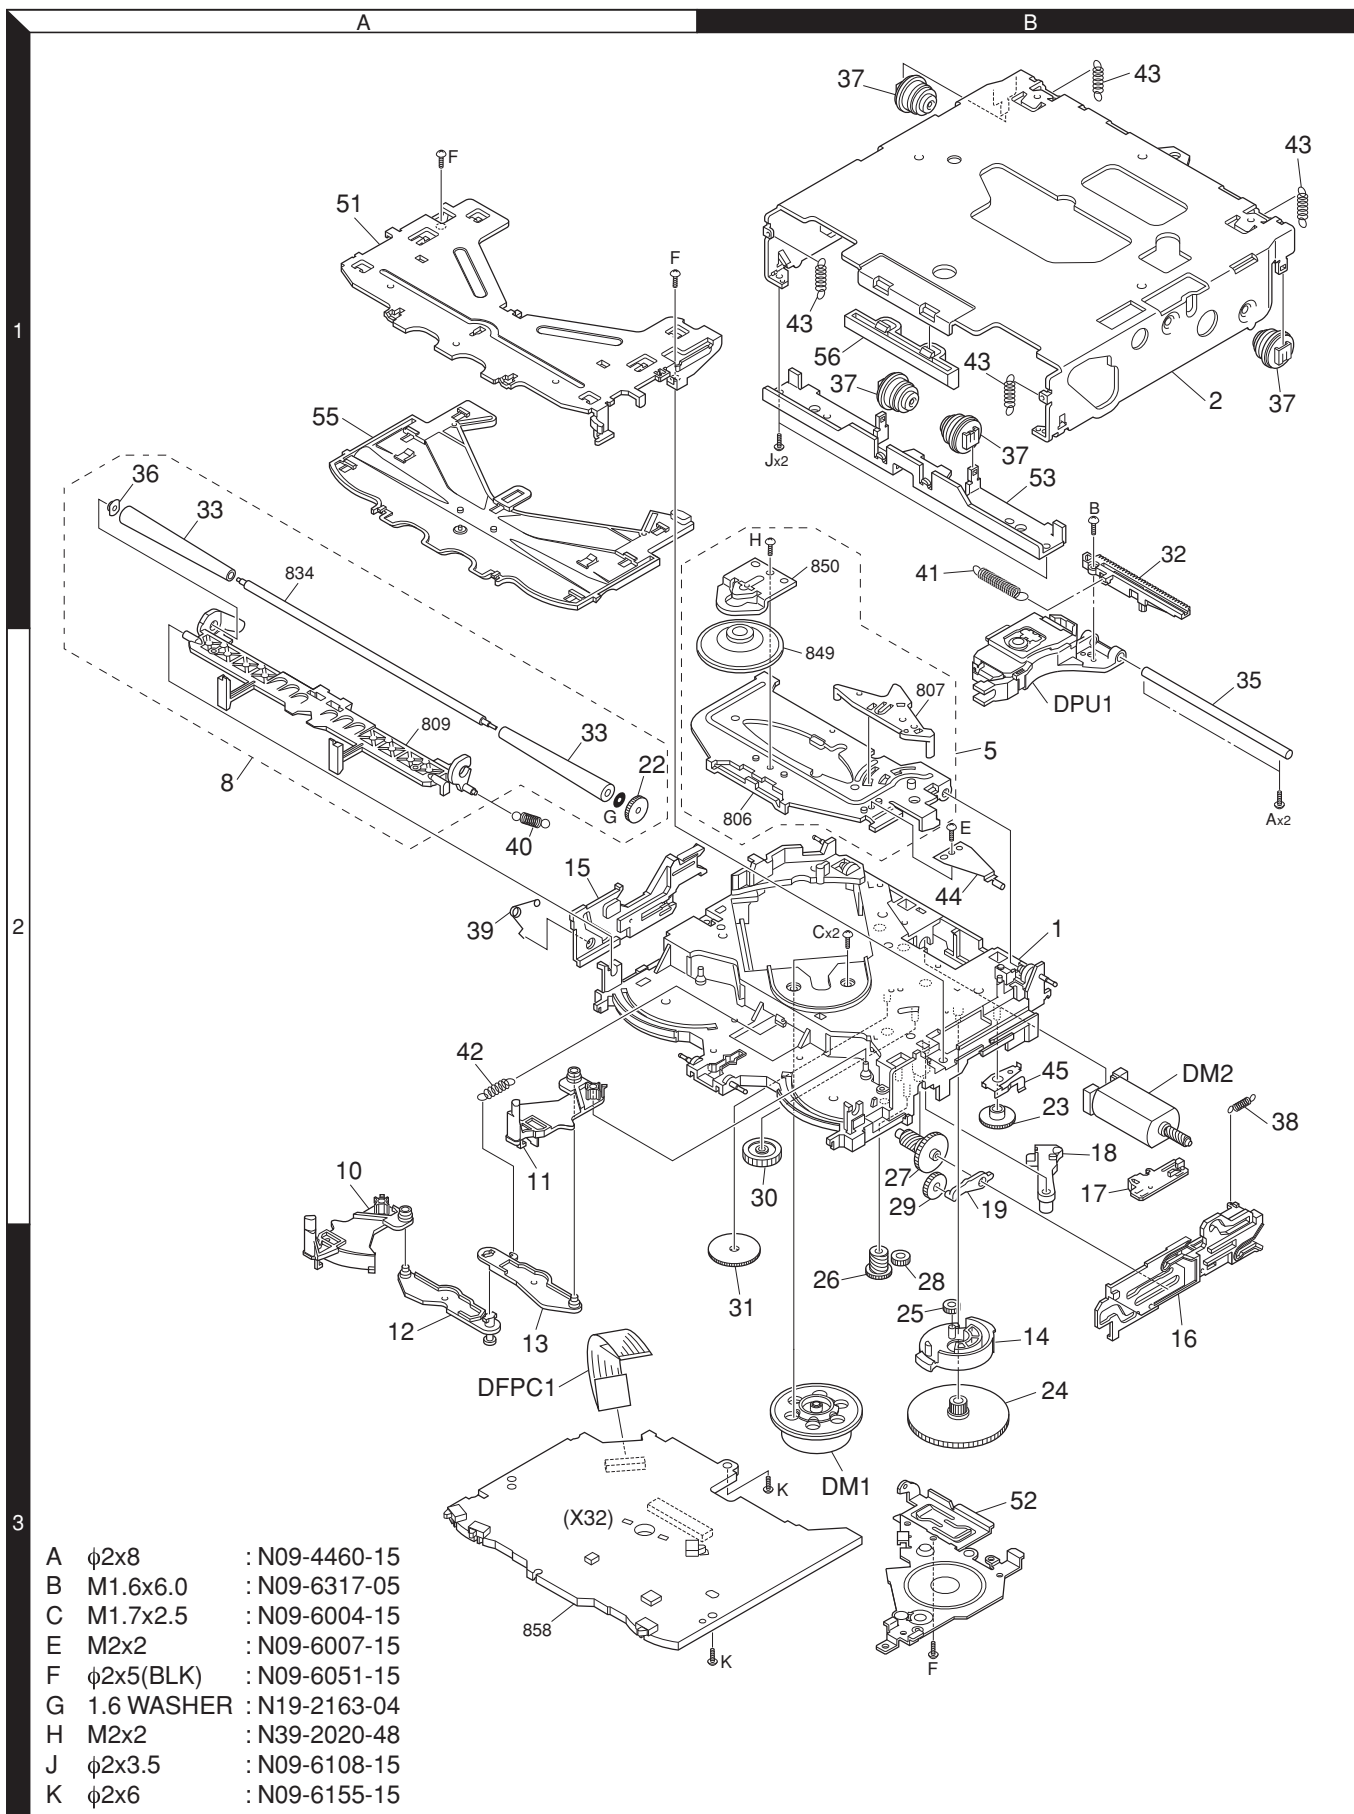

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP5036U/MP535U/W6537U/W6537UY/X591 △					
201	1C		A02-2736-03	PLASTIC CABINET ASSY	M1
203	2C		A22-3059-12	SUB PANEL ASSY	
205	3C		A46-1845-01	REAR COVER	
206	1D		A52-0862-02	TOP PLATE	
PA1	3C	*	A64-4005-01	PANEL ASSY	K
PA1	3C	*	A64-4007-01	PANEL ASSY	K2
PA1	3C	*	A64-4008-01	PANEL ASSY	E1E2
PA1	3C	*	A64-4009-01	PANEL ASSY	M1
RC1	1C	*	A70-2085-05	REMOTE CONTROLLER ASSY (RC-547)	KK1K2
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	E2M1
-		*	B46-0690-04	ID CARD	KK1K2
-		*	B46-0691-04	ID CARD	E1E2M1
-		*	B59-1872-00	SUB-INST. MANUAL (ENGLISH)	
-		*	B59-1873-00	SUB-INST. MANUAL (FRE.SPA.)	KK1K2
-		*	B59-1873-00	SUB-INST. MANUAL (FRE.SPA.)	E1
-		*	B59-1874-00	SUB-INST. MANUAL (GER.DUT.ITA.)	E1
-		*	B59-1875-00	SUB-INST. MANUAL (RUSSIAN)	E2
-		*	B59-1876-00	SUB-INST. MANUAL (ENG.T-CHI.)	M1
-		*	B64-3616-00	INST. MANUAL (ENGLISH)	KK1K2
-		*	B64-3617-00	INST. MANUAL (FRE.SPA.)	KK1K2
-		*	B64-3618-00	INST. MANUAL (ENG.T-CHI.)	M1
-		*	B64-3619-00	INST. MANUAL (ARABIC)	M1
-		*	B64-3620-00	INST. MANUAL (ENGLISH)	E1E2
-		*	B64-3621-00	INST. MANUAL (FRE.GER.)	E1
-		*	B64-3622-00	INST. MANUAL (DUT.ITA.)	E1
-		*	B64-3623-00	INST. MANUAL (SPA.POR.)	E1
-		*	B64-3624-00	INST. MANUAL (RUSSIAN)	E2
211	1C		B07-3125-01	ESCUTCHEON	KM1
211	1C		B07-3126-01	ESCUTCHEON	K2
211	1C		B07-3211-01	ESCUTCHEON	K1E1E2
218	3C		B43-1518-04	BADGE	
220	1C		D10-4589-04	LEVER	
221	2C		D10-4865-03	LEVER (PUSH)	
222	2C		D10-4866-03	LEVER (HOOK)	
223	2C		D10-4867-04	LEVER (LOCK)	
224	2C		D10-4868-04	LEVER (DETECT)	
225	2C		D10-4869-03	LEVER (EJECT)	
226	2D		D10-4870-04	ARM ASSY	
229	2C		D39-0255-05	DAMPER	
232	2D		E29-2028-04	LEAD PLATE	
233	3C		E29-2090-03	CONDUCTIVE RUBBER	
235	2D	*	E30-6658-05	CORD WITH PINPLUG (SUB/AUX,NI)	K1K2
235	2D	*	E30-6659-05	CORD WITH PINPLUG (SUB/AUX,AU)	K
237	2D	*	E30-6733-05	CORD WITH CONNECTOR (USB)	
239	2D	*	E30-6660-05	CORD WITH CONNECTOR (AUX)	E1E2M1
DC1	1C		E30-6414-05	DC CORD	KK1K2
DC1	1C		E30-6414-05	DC CORD	M1
DC2	1C		E30-6671-05	DC CORD	E1E2
FC1	1D		E39-0736-05	FLAT CABLE	
243	2D		F29-0626-04	INSULATING COVER	KK1K2
244	2C		F31-0716-04	REINFORCING HARDWARE	
245	2D		F29-0637-04	INSULATING COVER (USB)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
253	2C		G01-3246-04	TORSION COIL SPRING	
254	2C		G01-3247-04	TORSION COIL SPRING	
255	2C		G01-3248-04	TORSION COIL SPRING	
256	2C		G01-3249-04	TORSION COIL SPRING	
257	3C		G01-4611-04	COMPRESSION SPRING (REL)	
258	2C		G01-3270-04	TORSION COIL SPRING	
259	3C		G01-3291-04	COMPRESSION SPRING	K
-		*	H54-3846-03	ITEM CARTON CASE	K
-		*	H54-3848-03	ITEM CARTON CASE	K2
-		*	H54-3849-03	ITEM CARTON CASE	E1
-		*	H54-3850-03	ITEM CARTON CASE	E2
-		*	H54-3851-03	ITEM CARTON CASE	M1
261	2D		H30-0594-04	MAGIC TAPE	KK1K2
262	2C		J19-7049-03	HOLDER (ARM)	
263	3C		J19-7157-02	HOLDER	
264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
267	2C		K24-4282-04	PUSH KNOB (EJECT)	
269	3C		K24-4651-03	PUSH KNOB (RELEASE)	
271	3C		K25-1858-03	PUSH KNOB (PRESET)	K1K2E1
271	3C		K25-1858-03	PUSH KNOB (PRESET)	E2M1
271	3C	*	K25-1863-03	PUSH KNOB (PRESET)	K
272	3C		K28-0188-04	KEY TOP (VOL)	
273	3C		K28-0182-04	KNOB ASSY (VOL)	
276	3C		K28-0172-03	KEY TOP (FM/AM)	
277	3C		K28-0236-03	KNOB BASE (FM/AM)	
282	1C		N99-1757-05	SCREW SET	KK1K2
282	1C		N99-1757-05	SCREW SET	M1
283	1C		N99-1780-05	SCREW SET	
A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
N	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
P	2D		N09-6108-15	TAPTITE SCREW (M2X3.5)	
284	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
285	1C		W01-1664-05	CARRYING CASE (EXCELON)	K
285	1C		W01-1691-05	CARRYING CASE	K1K2E1
285	1C		W01-1691-05	CARRYING CASE	E2
286	1C		W01-1690-05	COMPACT DISC	
DME1	1D	*	X92-5870-00	MECHANISM ASSY (DXM-6C20W)	
SWITCH UNIT (X16-399x-xx)					
D1-9			B30-1566-05	LED (1608,RED)	K1K2E1
D1-9			B30-1566-05	LED (1608,RED)	E2
D1-9		*	B30-1766-05	LED	K
D11-19			B30-1565-05	LED (1608,PG)	E1E2M1
D21			B30-1566-05	LED (1608,RED)	
D22			B30-1565-05	LED (1608,PG)	K

K : KDC-X591 K1 : KDC-MP5035U K2 : KDC-MP535U
M1 : KDC-MP5036U E1 : KDC-W6537U E2 : KDC-W6537UY

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-399x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D23-27		*	B30-1766-05	LED	
C8			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C16			CK73GB1H103K	CHIP C 0.010UF K	
C18			CK73GB1H103K	CHIP C 0.010UF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	
R15			RK73GB2A101J	CHIP R 100 J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51,52			RK73FB2B221J	CHIP R 220 J 1/8W	K
R51,52			RK73FB2B471J	CHIP R 470 J 1/8W	K1K2E1
R51,52			RK73FB2B471J	CHIP R 470 J 1/8W	E2M1
R53			RK73EB2E561J	CHIP R 560 J 1/4W	K
R53,54			RK73EB2E681J	CHIP R 680 J 1/4W	K1K2E1
R53,54			RK73EB2E681J	CHIP R 680 J 1/4W	E2M1
R54			RK73EB2E681J	CHIP R 680 J 1/4W	K
R55			RK73EB2E821J	CHIP R 820 J 1/4W	
R56			RK73EB2E561J	CHIP R 560 J 1/4W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R60			RK73EB2E561J	CHIP R 560 J 1/4W	
R63			RK73GB2A182J	CHIP R 1.8K J 1/10W	K
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R66,67			RK73GB2A682J	CHIP R 6.8K J 1/10W	E1E2
R67			RK73GB2A562J	CHIP R 5.6K J 1/10W	K
R73			RK73PB2H220J	CHIP R 22 J 1/2W	
R74,75			RK73PB2H330J	CHIP R 33 J 1/2W	
R108			RK73GB2A301J	CHIP R 300 J 1/10W	K
R109			RK73GB2A682J	CHIP R 6.8K J 1/10W	K
R110			RK73GB2A222J	CHIP R 2.2K J 1/10W	K
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
W6			R92-1252-05	CHIP R 0 OHM J 1/16W	M1
W7,8			R92-1252-05	CHIP R 0 OHM J 1/16W	K1K2
W8			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2M1
W10			R92-2053-05	CHIP R 0 OHM J 1/8W	K
W11			R92-1252-05	CHIP R 0 OHM J 1/16W	K
S2			S70-0106-05	TACT SWITCH	

Ref. No.	Add	New	Parts No.	Description	Destination
S10			S70-0051-15	TACT SWITCH	
S27			S70-0901-05	TACT SWITCH	
S1			T99-0474-05	ROTARY ENCODER	
D102			02DZ5.6F-Y	ZENER DIODE	K
D104			02DZ5.6F-Y	ZENER DIODE	K
D111-114			02DZ5.6F-Y	ZENER DIODE	K
ED1			3-BT-249INK	FLUORESCENT INDICATOR TUBE	KK1K2
ED1			3-BT-249INK	FLUORESCENT INDICATOR TUBE	E1E2
ED1			3-BT-251INK	FLUORESCENT INDICATOR TUBE	M1
IC2			PNA4S22M02KW	ANALOGUE IC	
Q10			2SC4617	TRANSISTOR	E1E2
Q12-14			2SA1774	TRANSISTOR	
Q15			2SC4617	TRANSISTOR	KE1E2
Q19			2SC4617	TRANSISTOR	K
Q20			RT1N441U	TRANSISTOR	

CD PLAYER UNIT (X32-5980-02) IN CD MECHA

C1			CK73GB1A105K	CHIP C 1.0UF K	
C3			CK73GB0J475K	CHIP C 4.7UF K	
C21,22			CK73GB1H104K	CHIP C 0.10UF K	
C24			CK73GB1H104K	CHIP C 0.10UF K	
C26			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1C224K	CHIP C 0.22UF K	
C33			CK73GB1H472K	CHIP C 4700PF K	
C34			CK73GB1H682K	CHIP C 6800PF K	
C35			CK73GB1H102K	CHIP C 1000PF K	
C36 37			CK73GB1H682K	CHIP C 6800PF K	
C38			CK73GB1H471K	CHIP C 470PF K	
C39			CK73FB1A225K	CHIP C 2.2UF K	
C51			CK73FB0J106K	CHIP C 10UF K	
C52			CK73GB1A105K	CHIP C 1.0UF K	
C53			CK73GB1H223K	CHIP C 0.022UF K	
C54			CK73GB1H332K	CHIP C 3300PF K	
C55			CK73GB1A334K	CHIP C 0.33UF K	
C56			CK73FB0J475K	CHIP C 4.7UF K	
C57			CK73GB1H104K	CHIP C 0.10UF K	
C58			CC73GCH1H681J	CHIP C 680PF J	
C59			CK73GB1H104K	CHIP C 0.10UF K	
C60			CK73GB1H223K	CHIP C 0.022UF K	
C61			CC73GCH1H102J	CHIP C 1000PF J	
C62			CK73GB1C823K	CHIP C 0.082UF K	
C63			CC73GCH1H102J	CHIP C 1000PF J	
C64			CK73GB1A334K	CHIP C 0.33UF K	
C72			CK73GB1H104K	CHIP C 0.10UF K	
C74,75			CK73GB1H104K	CHIP C 0.10UF K	
C77,78			CK73GB1H104K	CHIP C 0.10UF K	
C81,82			CC73GCH1H150J	CHIP C 15PF J	
C84			CK73GB1A105K	CHIP C 1.0UF K	
C85			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X2			L77-2867-05	CRYSTAL RESONATOR (16.9344MHZ)	

K : KDC-X591 K1 : KDC-MP5035U K2 : KDC-MP535U
M1 : KDC-MP5036U E1 : KDC-W6537U E2 : KDC-W6537UY

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5980-02) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description	Destination
CP1			RK74GA1J222J	CHIP-COM 2.2K J 1/16W	
CP2			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP4			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP11			RK74GA1J103J	CHIP-COM 10K J 1/16W	
R15			RK73GB2A103J	CHIP R 10K J 1/10W	
R16			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R23			RK73GB2A750J	CHIP R 75 J 1/10W	
R24			RK73GB2A101J	CHIP R 100 J 1/10W	
R27			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R32,33			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R34			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R39			RK73GB2A103J	CHIP R 10K J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R53			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R54,55			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R56			RK73GB2A473J	CHIP R 47K J 1/10W	
R57			RK73GB2A273J	CHIP R 27K J 1/10W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R59			RK73GB2A273J	CHIP R 27K J 1/10W	
R60,61			RK73GB2A153J	CHIP R 15K J 1/10W	
R62			RK73GB2A133J	CHIP R 13K J 1/10W	
R63			RK73GB2A183J	CHIP R 18K J 1/10W	
R64			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R65,66			RK73GB2A153J	CHIP R 15K J 1/10W	
R73			RK73GB2A910J	CHIP R 91 J 1/10W	
R74			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R75			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R76			RK73GB2A104J	CHIP R 100K J 1/10W	
R77			RK73GB2A823J	CHIP R 82K J 1/10W	
R78			RK73GB2A821J	CHIP R 820 J 1/10W	
R79			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R82-85			RK73GB2A103J	CHIP R 10K J 1/10W	
R86			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R87			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R88,89			RK73GB2A103J	CHIP R 10K J 1/10W	
R91,92			RK73GB2A103J	CHIP R 10K J 1/10W	
R100			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R102			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R103			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R105			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R108			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R110-112			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R131			RK73GB2A103J	CHIP R 10K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAN202U	DIODE	
D2			MA2S784-F	DIODE	
D3			DAN202U	DIODE	
IC1		*	MN6627781KB	MOS-IC	
IC2			XC6219B332PR	ANALOGUE IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC6			BA5824FP	ANALOGUE IC	
Q3			UM6K1N	DUAL FET	
Q6			2SB1295-E	TRANSISTOR	
Q7			2SB0970	TRANSISTOR	
Q8,9			DTC114YUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-465x-xx)					
D200			B30-1710-05	LED (RED)	
C1			C90-6746-05	ELECTRO 3300UF	16WV
C2			CK73FB1C105K	CHIP C 1.0UF	K
C3			CD04AY1A221M	ELECTRO 220UF	10WV
C4			CD04BA0J101M	ELECTRO 100UF	6.3WV
C5			C90-5692-05	ELECTRO 220UF	16WV
C6			CK73GB1H103K	CHIP C 0.010UF	K
C7			CD04AS1V100M	ELECTRO 10UF	35WV
C8			CD04AY1A101M	ELECTRO 100UF	10WV
C9			CK73GB1A474K	CHIP C 0.47UF	K
C10			CD04AS1C220M	ELECTRO 22UF	16WV
C11			CD04AS1V100M	ELECTRO 10UF	35WV
C12			CK73FB1E474K	CHIP C 0.47UF	K
C14			CK73GB1H104K	CHIP C 0.10UF	K
C15,16			CD04BK1A221M	ELECTRO 220UF	10WV
C17			CD04BK1E101M	ELECTRO 100UF	25WV
C18,19			CK73GB1H104K	CHIP C 0.10UF	K
C20			CK73GB1H222K	CHIP C 2200PF	K
C21			CK73FB1C105K	CHIP C 1.0UF	K
C22			CK73GB1H472K	CHIP C 4700PF	K
C50			CK73GB1H104K	CHIP C 0.10UF	K
C52			CK73GB1A105K	CHIP C 1.0UF	K
C53			CK73GB1H103K	CHIP C 0.010UF	K
C54			CD04AS1H3R3M	ELECTRO 3.3UF	50WV
C55			CK73FB1C105K	CHIP C 1.0UF	K
C56,57			CK73GB1H103K	CHIP C 0.010UF	K
C58			CK73GB1H223K	CHIP C 0.022UF	K
C100			CK73GB1H104K	CHIP C 0.10UF	K
C101,102			CC73GCH1H220J	CHIP C 22PF	J
C103-105			CK73GB1H103K	CHIP C 0.010UF	K
C106			CK73GB1H102K	CHIP C 1000PF	K
C107,108			CK73GB1H103K	CHIP C 0.010UF	K
C110			CK73GB1H103K	CHIP C 0.010UF	K
C113			CD04AS0J470M	ELECTRO 47UF	6.3WV
C114,115			CK73GB1H103K	CHIP C 0.010UF	K
C200			CK73GB1H103K	CHIP C 0.010UF	K
C204-206			CK73GB1H104K	CHIP C 0.10UF	K
C207			CD04BK1A221M	ELECTRO 220UF	10WV
C300,301			CD04AS1H3R3M	ELECTRO 3.3UF	50WV
C302			CK73FB1C105K	CHIP C 1.0UF	K
C303,304			CC73GCH1H101J	CHIP C 100PF	J
C305,306			CD04AS1H2R2M	ELECTRO 2.2UF	50WV
C307,308			CK73FB1E474K	CHIP C 0.47UF	K
C310-312			CD04AS1H2R2M	ELECTRO 2.2UF	50WV
C313,314			CK73FB1C105K	CHIP C 1.0UF	K
C315			CK73GB1H103K	CHIP C 0.010UF	K
C316			CD04AS1V100M	ELECTRO 10UF	35WV
C317			CD04AS1C470M	ELECTRO 47UF	16WV

PARTS LIST

ELECTRIC UNIT (X34-465x-xx)

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
X700 X701			L77-2880-05 L77-2908-05	CRYSTAL RESONATOR CRYSTAL RESONATOR (12.000MHZ)	
G	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
H	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
J	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
K	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
CP100,101 CP103 CP104 CP105 CP107,108			RK74GB1J101J RK74GA1J222J RK74GA1J101J RK74GA1J222J RK74GA1J101J	CHIP-COM 100 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 100 J 1/16W	
CP700 CP701 CP703,704 CP705 CP706-708			RK74HB1J330J RK74GA1J101J RK74HB1J330J RK74HB1J101J RK74HB1J330J	CHIP-COM 33 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 33 J 1/16W	
CP709-711 CP712-719 CP720 R1,2 R3			RK74HB1J101J RK74HB1J100J RK74HB1J223J RK73EB2E103J RK73FB2B221J	CHIP-COM 100 J 1/16W CHIP-COM 10 J 1/16W CHIP-COM 22K J 1/16W CHIP R 10K J 1/4W CHIP R 220 J 1/8W	
R4 R5 R6 R8 R9			RK73GH2A243D RK73GH2A432D RK73FB2B123J RK73FB2B152J RK73GB2A104J	CHIP R 24K D 1/10W CHIP R 4.3K D 1/10W CHIP R 12K J 1/8W CHIP R 1.5K J 1/8W CHIP R 100K J 1/10W	
R10 R11 R12 R13 R14			RK73FB2B681J RK73GB2A104J RK73FB2B222J RK73GB2A473J RK73GH2A623D	CHIP R 680 J 1/8W CHIP R 100K J 1/10W CHIP R 2.2K J 1/8W CHIP R 47K J 1/10W CHIP R 62K D 1/10W	
R15 R16 R17 R18 R19			RK73GH2A153D RK73GB2A102J RK73GB2A683J RK73GB2A104J RK73GB2A223J	CHIP R 15K D 1/10W CHIP R 1.0K J 1/10W CHIP R 68K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W	
R20 R21 R22 R25 R50,51			RK73FB2B822J RK73GB2A473J RK73GB2A103J RK73GB2A223J RK73GB2A103J	CHIP R 8.2K J 1/8W CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W	
R52 R52 R54 R54 R56			RK73GB2A223J RK73GB2A223J RK73PB2H221J RK73PB2H221J RK73PB2H221J	CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 220 J 1/2W CHIP R 220 J 1/2W CHIP R 220 J 1/2W	KK1K2 M1 KK1K2 M1 KK1K2
R56 R57 R59 R60 R61			RK73PB2H221J R92-5024-05 RK73GB2A183J RK73GB2A223J RK73GB2A104J	CHIP R 220 J 1/2W CHIP R 1K J 3/4W CHIP R 18K J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W	M1
R62 R63,64 R65			RK73GB2A473J RK73GB2A104J RK73FB2B203J	CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 20K J 1/8W	

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
R66 R67 R68 R69 R70			R92-5024-05 RK73EB2E472J RK73EB2E473J R92-5088-05 RK73FB2B472J	CHIP R 1K J 3/4W CHIP R 4.7K J 1/4W CHIP R 47K J 1/4W CHIP R 3.3K J 3/4W CHIP R 4.7K J 1/8W	
R71 R72 R100 R101-103 R104			RK73FB2B683J RK73GB2A393J RK73GB2A225J RK73GB2A104J RK73GB2A473J	CHIP R 68K J 1/8W CHIP R 39K J 1/10W CHIP R 2.2M J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W	
R105 R107 R110 R111 R112			RK73GB2A103J RK73GB2A102J RK73GB2A222J RK73GB2A473J RK73GB2A101J	CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W	
R113 R115 R116 R117 R118			RK73GB2A102J RK73GB2A102J RK73GB2A223J RK73GB2A102J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W	E1E2
R121 R122 R123,124 R125 R126			RK73GB2A104J RK73GB2A101J RK73GB2A104J RK73GB2A473J RK73GB2A222J	CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W	KK1K2
R126 R126,127 R128 R131 R132			RK73GB2A222J RK73GB2A222J RK73GB2A101J RK73GB2A473J RK73GB2A471J	CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 470 J 1/10W	M1 E1E2
R133,134 R135 R136 R137 R138			RK73GB2A104J RK73GB2A471J RK73GB2A472J RK73GB2A102J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W	
R139 R140 R141 R142 R146			RK73GB2A102J RK73GB2A101J RK73GB2A472J RK73GB2A101J RK73GB2A102J	CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R147 R148 R149 R151,152 R153			RK73GB2A222J RK73GB2A472J RK73GB2A222J RK73GB2A104J RK73GB2A101J	CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 100 J 1/10W	
R154,155 R157 R158 R159 R159			RK73GB2A392J RK73GB2A223J RK73GB2A104J RK73GB2A223J RK73GB2A473J	CHIP R 3.9K J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W	M1 KK1K2
R159 R159,160 R160 R160,161 R161			RK73GB2A473J RK73GB2A223J RK73GB2A223J RK73GB2A473J RK73GB2A223J	CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W	E2 E1 E2 M1 K1

K : KDC-X591 K1 : KDC-MP5035U K2 : KDC-MP535U
M1 : KDC-MP5036U E1 : KDC-W6537U E2 : KDC-W6537UY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-465x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R161			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E2	R605			RK73GB2A331J	CHIP R 330 J 1/10W	
R161,162			RK73GB2A223J	CHIP R 22K J 1/10W	K2	R606			RK73FB2B181J	CHIP R 180 J 1/8W	KK1K2
R162-164			RK73GB2A473J	CHIP R 47K J 1/10W	K1	R607			RK73GB2A331J	CHIP R 330 J 1/10W	KK1K2
R163,164			RK73GB2A473J	CHIP R 47K J 1/10W	KK2E1	R608,609			RK73GB2A223J	CHIP R 22K J 1/10W	KK1K2
R163,164			RK73GB2A473J	CHIP R 47K J 1/10W	E2M1	R610			RK73FB2B181J	CHIP R 180 J 1/8W	KK1K2
R165			RK73GB2A104J	CHIP R 100K J 1/10W		R611			RK73GB2A331J	CHIP R 330 J 1/10W	KK1K2
R200			RK73GB2A471J	CHIP R 470 J 1/10W		R612			RK73FB2B181J	CHIP R 180 J 1/8W	KK1K2
R201			RK73GB2A241J	CHIP R 240 J 1/10W		R613			RK73GB2A331J	CHIP R 330 J 1/10W	
R202			RK73GB2A104J	CHIP R 100K J 1/10W		R614,615			RK73GB2A223J	CHIP R 22K J 1/10W	
R203,204			RK73GB2A102J	CHIP R 1.0K J 1/10W		R616			RK73FB2B181J	CHIP R 180 J 1/8W	KK1K2
R205			RK73GB2A473J	CHIP R 47K J 1/10W		R617			RK73GB2A331J	CHIP R 330 J 1/10W	
R206			RK73EB2E102J	CHIP R 1.0K J 1/4W		R618			RK73EB2E100J	CHIP R 10 J 1/4W	
R207,208			RK73EB2E101J	CHIP R 100 J 1/4W		R619			RK73GB2A123J	CHIP R 12K J 1/10W	
R209			RK73EB2E102J	CHIP R 1.0K J 1/4W		R620			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R210-214			RK73EB2E101J	CHIP R 100 J 1/4W		R621			RK73GB2A123J	CHIP R 12K J 1/10W	
R215			RK73EB2E102J	CHIP R 1.0K J 1/4W		R622			RK73EB2E100J	CHIP R 10 J 1/4W	
R216,217			RK73GB2A153J	CHIP R 15K J 1/10W		R623			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R218,219			RK73GB2A101J	CHIP R 100 J 1/10W		R624			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R220			RK73EB2E102J	CHIP R 1.0K J 1/4W	KE1M1	R625			RK73EB2E101J	CHIP R 100 J 1/4W	
R224			RK73PB2H2R0J	CHIP R 2.0 J 1/2W		R626			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R300,301			RK73GB2A103J	CHIP R 10K J 1/10W		R627-631			RK73EB2E101J	CHIP R 100 J 1/4W	
R302,303			RK73GB2A101J	CHIP R 100 J 1/10W		R632			RK73EB2E100J	CHIP R 10 J 1/4W	
R304			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R633			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R305			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K	R634			RK73EB2E100J	CHIP R 10 J 1/4W	
R306			RK73GB2A332J	CHIP R 3.3K J 1/10W	K	R635			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R307			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K	R636,637			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2M1
R308			RK73GB2A221J	CHIP R 220 J 1/10W	K	R702			RK73GB2A473J	CHIP R 47K J 1/10W	
R309-311			RK73GB2A102J	CHIP R 1.0K J 1/10W	K	R703			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R312			RK73GB2A513J	CHIP R 51K J 1/10W	K	R704			RK73GB2A101J	CHIP R 100 J 1/10W	
R313			RK73GB2A472J	CHIP R 4.7K J 1/10W	K	R705			RK73GB2A473J	CHIP R 47K J 1/10W	
R314			RK73FB2B102J	CHIP R 1.0K J 1/8W	K	R706			RK73GB2A123J	CHIP R 12K J 1/10W	
R315			RK73GB2A473J	CHIP R 47K J 1/10W	K	R707			RK73GB2A473J	CHIP R 47K J 1/10W	
R316			RK73PB2H220J	CHIP R 22 J 1/2W	K	R709,710			RK73GB2A473J	CHIP R 47K J 1/10W	
R317			RK73GB2A222J	CHIP R 2.2K J 1/10W	K	R711			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R400			RK73GB2A333J	CHIP R 33K J 1/10W		R712			RK73GB2A103J	CHIP R 10K J 1/10W	
R401			RK73GB2A104J	CHIP R 100K J 1/10W		R713			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R402			RK73GB2A102J	CHIP R 1.0K J 1/10W		R714			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R403			RK73GB2A432J	CHIP R 4.3K J 1/10W		R717			RK73GB2A221J	CHIP R 220 J 1/10W	
R404			RK73GB2A100J	CHIP R 10 J 1/10W		R718,719			RK73GB2A473J	CHIP R 47K J 1/10W	
R405			RK73GB2A221J	CHIP R 220 J 1/10W		R720			RK73GH2A104D	CHIP R 100K D 1/10W	
R406			RK73GB2A223J	CHIP R 22K J 1/10W		R721			RK73GB2A473J	CHIP R 47K J 1/10W	
R407			RK73GB2A912J	CHIP R 9.1K J 1/10W		R722			RK73GB2A101J	CHIP R 100 J 1/10W	
R410,411			RK73GB2A331J	CHIP R 330 J 1/10W		R723,724			RK73GB2A473J	CHIP R 47K J 1/10W	
R412			RK73GB2A161J	CHIP R 160 J 1/10W		R725			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R502			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2	R729			RK73GB2A103J	CHIP R 10K J 1/10W	
R503			RK73GB2A223J	CHIP R 22K J 1/10W		R731			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R504,505			RK73GB2A471J	CHIP R 470 J 1/10W		R732			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R506,507			RK73GB2A472J	CHIP R 4.7K J 1/10W		R734			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R508			RK73FB2B102J	CHIP R 1.0K J 1/8W		R735,736			RK73GB2A223J	CHIP R 22K J 1/10W	
R509-511			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2	R738,739			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R512			RK73GB2A512J	CHIP R 5.1K J 1/10W	E1E2	R740			RK73GB2A101J	CHIP R 100 J 1/10W	
R600			RK73FB2B181J	CHIP R 180 J 1/8W		R741,742			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R601			RK73GB2A331J	CHIP R 330 J 1/10W		R743			RK73GB2A223J	CHIP R 22K J 1/10W	
R602,603			RK73GB2A223J	CHIP R 22K J 1/10W		R744,745			RK73GB2A100J	CHIP R 10 J 1/10W	
R604			RK73FB2B181J	CHIP R 180 J 1/8W		R746			RK73GB2A101J	CHIP R 100 J 1/10W	

K : KDC-X591 K1 : KDC-MP5035U K2 : KDC-MP535U
M1 : KDC-MP5036U E1 : KDC-W6537U E2 : KDC-W6537UY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-465x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R747			RK73GB2A223J	CHIP R 22K J 1/10W	
R748			RK73GB2A100J	CHIP R 10 J 1/10W	
R749			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R750			RK73GB2A100J	CHIP R 10 J 1/10W	
R753			RK73GB2A153J	CHIP R 15K J 1/10W	
R754			RK73GB2A101J	CHIP R 100 J 1/10W	
R755,756			RK73GB2A470J	CHIP R 47 J 1/10W	
R758			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R759-762			RK73GB2A223J	CHIP R 22K J 1/10W	
R764,765			RK73GB2A223J	CHIP R 22K J 1/10W	
R766			RK73GB2A100J	CHIP R 10 J 1/10W	
R767			RK73GB2A223J	CHIP R 22K J 1/10W	
R768			RK73GB2A100J	CHIP R 10 J 1/10W	
R769			RK73GB2A104J	CHIP R 100K J 1/10W	
R770			RK73GB2A223J	CHIP R 22K J 1/10W	
R771,772			RK73GB2A680J	CHIP R 68 J 1/10W	
R773			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R774			RK73GB2A680J	CHIP R 68 J 1/10W	
R775			RK73GB2A153J	CHIP R 15K J 1/10W	
R776			RK73GB2A330J	CHIP R 33 J 1/10W	
R777			RK73GB2A153J	CHIP R 15K J 1/10W	
R778			RK73GB2A330J	CHIP R 33 J 1/10W	
R779			RK73GB2A101J	CHIP R 100 J 1/10W	
R781			RK73GB2A104J	CHIP R 100K J 1/10W	
R782-784			RK73GB2A101J	CHIP R 100 J 1/10W	
R786			RK73GB2A101J	CHIP R 100 J 1/10W	
R787			RK73GB2A104J	CHIP R 100K J 1/10W	
R788			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R789			RK73GB2A104J	CHIP R 100K J 1/10W	
R790			RK73GB2A680J	CHIP R 68 J 1/10W	
R791,792			RK73GB2A104J	CHIP R 100K J 1/10W	
R793			RK73GB2A220J	CHIP R 22 J 1/10W	
R794			RK73GB2A101J	CHIP R 100 J 1/10W	
R795			RK73GB2A470J	CHIP R 47 J 1/10W	
R796			RK73GB2A101J	CHIP R 100 J 1/10W	
R797			RK73GB2A103J	CHIP R 10K J 1/10W	
R798-800			RK73GB2A470J	CHIP R 47 J 1/10W	
R801-804			RK73GB2A101J	CHIP R 100 J 1/10W	
R805,806			RK73GB2A100J	CHIP R 10 J 1/10W	
R807-815			RK73GB2A223J	CHIP R 22K J 1/10W	
R816-819			RK73GB2A100J	CHIP R 10 J 1/10W	
R820,821			RK73GB2A101J	CHIP R 100 J 1/10W	
R824			RK73GB2A103J	CHIP R 10K J 1/10W	
R911			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R913-916			RK73GB2A000J	CHIP R 0.0 J 1/10W	KK1K2
R913-916			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1
R913-916			RK73GB2A470J	CHIP R 47 J 1/10W	E1E2
R950-952			RK73GB2A100J	CHIP R 10 J 1/10W	KK1K2
R950-952			RK73GB2A100J	CHIP R 10 J 1/10W	M1
R952			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R960			RK73GB2A220J	CHIP R 22 J 1/10W	
R961,962			RK73GB2A470J	CHIP R 47 J 1/10W	
R963,964			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2
R965			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W300			R92-2053-05	CHIP R 0 OHM J 1/8W	K1K2E1
W300			R92-2053-05	CHIP R 0 OHM J 1/8W	E2M1
W401			R92-1252-05	CHIP R 0 OHM J 1/16W	
W404			R92-1252-05	CHIP R 0 OHM J 1/16W	
W501			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
W900			R92-1252-05	CHIP R 0 OHM J 1/16W	
S200			S70-0931-05	TACT SWITCH	
S201			S74-0822-05	MICRO SWITCH	
D1			S2V60-5009F46	DIODE	
D2			RB160L-40	DIODE	
D3			UDZS5.6B	ZENER DIODE	
D5			UDZS8.2B	ZENER DIODE	
D6			UDZS20B	ZENER DIODE	
D7			UDZS12B	ZENER DIODE	
D9			RB081L-20	DIODE	
D50,51			D1F60-5063	DIODE	
D52			UDZS6.2B	ZENER DIODE	
D53			UDZS6.8B	ZENER DIODE	
D55			UDZS6.8B	ZENER DIODE	
D57			MC2846	DIODE	
D58			02DZ4.7F-Y	ZENER DIODE	
D59-61			D1F60-5063	DIODE	
D213			02DZ6.2F-Y	ZENER DIODE	KE1M1
D219,220			IMSA-6802-E	SURGE ABSORBER	
D304-306			MC2846	DIODE	
D307			D1F60-5063	DIODE	K
D308			UDZS12B	ZENER DIODE	K
D309			UDZS5.6B	ZENER DIODE	K
D408,409			MC2846	DIODE	
D411			MC2846	DIODE	K
D602			MC2846	DIODE	
D607			MC2846	DIODE	
D608-610			02DZ6.8F-Y	ZENER DIODE	
D611-616			02DZ6.2F-Y	ZENER DIODE	
D619-621			02DZ6.8F-Y	ZENER DIODE	
D700			MC2846	DIODE	
IC1			BD9781HFP	ANALOGUE IC	
IC2			M5237ML-CF0J	ANALOGUE IC	
IC100			S-80836CNNB-J	MOS-IC	
IC101			BR24L04FV-W	ROM IC	
IC102		*	30624MWPB42GP	MICROCONTROLLER IC	
IC103		*	74HC2G02DP	MOS-IC	
IC200			MIC2026-1YM	MOS-IC	
IC300			E-TDA7415CB	ANALOGUE IC	
IC301			TA75S558F-F	ANALOGUE IC	K
IC400			E-TDA7850A	ANALOGUE IC	
IC500			LC72725KV	ANALOGUE IC	E1E2
IC700			PCM1754DB	MOS-IC	
IC702			341S2094	MICROPROCESSOR IC	
IC703			AK4117	MOS-IC	
IC704			NJM2100V-ZB	ANALOGUE IC	
IC705			TAR5S5-F	ANALOGUE IC	
IC708			SI-3033KMS	ANALOGUE IC	

K : KDC-X591 K1 : KDC-MP5035U K2 : KDC-MP535U
M1 : KDC-MP5036U E1 : KDC-W6537U E2 : KDC-W6537UY

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-465x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
IC709,710			TC7WT126FU-F	MOS-IC	
IC711			TCC760	MOS-IC	
IC712		*	TC74LVX08F-F	MOS-IC	
IC714			IC42S164007TIG	DRAM IC	
IC715		*	A29L80AUV4X9F	ROM IC	
IC716		*	R1114N181B-TR	ANALOGUE IC (1.8V LF)	
Q1			2SB1565	TRANSISTOR	
Q2			RT1P241M	TRANSISTOR	
Q3			2SB1565	TRANSISTOR	
Q4			2SC4081	TRANSISTOR	
Q5			2SB1565	TRANSISTOR	
Q6			RT1P241M	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			2SB1565	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q10			2SB1565	TRANSISTOR	
Q11			RT1P241M	TRANSISTOR	
Q12			2SC4081	TRANSISTOR	
Q13			2SA1576A	TRANSISTOR	
Q14			RT1N241M	TRANSISTOR	
Q15			2SA1603A	TRANSISTOR	
Q16-18			RT1N241M	TRANSISTOR	
Q20			RT1P241M	TRANSISTOR	K
Q21			RT1N241M	TRANSISTOR	K
Q50			RT1N144M	TRANSISTOR	
Q51			2SC4081	TRANSISTOR	
Q52			RT1P141M	TRANSISTOR	
Q53			RT1N144M	TRANSISTOR	KK1K2
Q53			RT1N144M	TRANSISTOR	M1
Q54			2SA1576A	TRANSISTOR	
Q56			2SB1188(Q,R)	TRANSISTOR	KK1K2
Q56			2SB1188(Q,R)	TRANSISTOR	M1
Q57			2SC4081	TRANSISTOR	
Q58			2SB1188(Q,R)	TRANSISTOR	
Q59			2SC4081	TRANSISTOR	
Q60			RT1N441M	TRANSISTOR	
Q200			RT1N144M	TRANSISTOR	
Q300			2SB1443	TRANSISTOR	K
Q301,302			2SC4081	TRANSISTOR	K
Q500			2SB1689	TRANSISTOR	
Q501			RT1N241M	TRANSISTOR	
Q600			DTC143TUA	DIGITAL TRANSISTOR	
Q601			RT1P241M	TRANSISTOR	
Q602			DTC143TUA	DIGITAL TRANSISTOR	E1E2M1
Q602-605			DTC143TUA	DIGITAL TRANSISTOR	KK1K2
Q605			DTC143TUA	DIGITAL TRANSISTOR	E1E2M1
Q606			RT1P241M	TRANSISTOR	
Q607			DTC143TUA	DIGITAL TRANSISTOR	
Q704			RT1P144M	TRANSISTOR	
Q706			RT1N144M	TRANSISTOR	
TH400			PRF18BE471QS2	POSITIVE RESISTOR	
A500	2D	*	X86-4040-11	FRONT-END UNIT	KK1K2
A500	2D	*	X86-4040-11	FRONT-END UNIT	M1
A500	2D	*	X86-4042-70	FRONT-END UNIT	E1E2

Ref. No.	Add	New	Parts No.	Description	Destination
MECHANISM ASSY (X92-5870-00) DXM-6C20W					
1		2B	A10-5328-11	CHASSIS	
2		1B	* A10-5329-11	CHASSIS	
5		2B	D10-4910-13	ARM ASSY	
8		2A	* D10-4911-13	LEVER ASSY	
10		2A	D10-4906-33	ARM	
11		2A	D10-4907-33	ARM	
12		3A	D10-4908-03	ARM	
13		3A	D10-4909-03	ARM	
14		3B	D10-4915-03	ARM	
15		2A	D10-4916-23	SLIDER	
16		3B	D10-4914-12	SLIDER	
17		2B	D10-4588-13	SLIDER	
18		2B	D10-4917-04	ARM	
19		2B	D10-4596-24	ARM	
22		2A	D13-2151-04	GEAR	
23		2B	D13-2152-04	GEAR	
24		3B	D13-2153-04	GEAR	
25		3B	D13-2154-04	GEAR	
26		3B	D13-2155-04	WORM	
27		2B	D13-2156-14	GEAR	
28		3B	D13-2157-04	GEAR	
29		2B	D13-2158-04	GEAR	
30		2B	D13-2168-04	GEAR	
31		3B	D13-2171-04	GEAR	
32		1B	D13-2400-13	RACK (GEAR)	
33		2A	D14-0759-04	ROLLER	
35		2B	D21-2382-04	SHAFT	
36		1A	D23-0954-04	RETAINER	
37		1B	D39-0246-05	DAMPER	
38		2B	G01-3072-04	EXTENSION SPRING	
39		2A	G01-3073-04	TORSION COIL SPRING	
40		2A	G01-3074-04	EXTENSION SPRING	
41		1B	G01-4615-04	EXTENSION SPRING	
42		2A	G01-3076-04	EXTENSION SPRING	
43		1B	G01-3077-14	EXTENSION SPRING	
44		2B	G02-1399-04	FLAT SPRING	
45		2B	G02-1547-04	FLAT SPRING	
51		1A	J22-0473-21	MOUNTING HARDWARE	
52		3B	J22-0474-12	MOUNTING HARDWARE	
53		1B	J22-0519-03	MOUNTING HARDWARE	
55		1A	* J90-1138-41	GUIDE	
56		1B	* J90-1023-03	GUIDE	
DFPC1		3A	* J86-0039-05	FPC (LEAD FREE)	
A		2B	N09-4460-15	TAPTITE SCREW (PT2X8)	
B		1B	N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C		2B	N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E		2B	N09-6007-15	MACHINE SCREW (M2X2)	
F		1A	N09-6051-15	TAPTITE SCREW (PT2X5)	
G		2A	N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H		1B	N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J		1B	N09-6108-15	TAPTITE SCREW (M2X3.5)	

K : KDC-X591 K1 : KDC-MP5035U K2 : KDC-MP535U
M1 : KDC-MP5036U E1 : KDC-W6537U E2 : KDC-W6537UY

△ Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-5870-00) DXM-6C20W

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation