


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

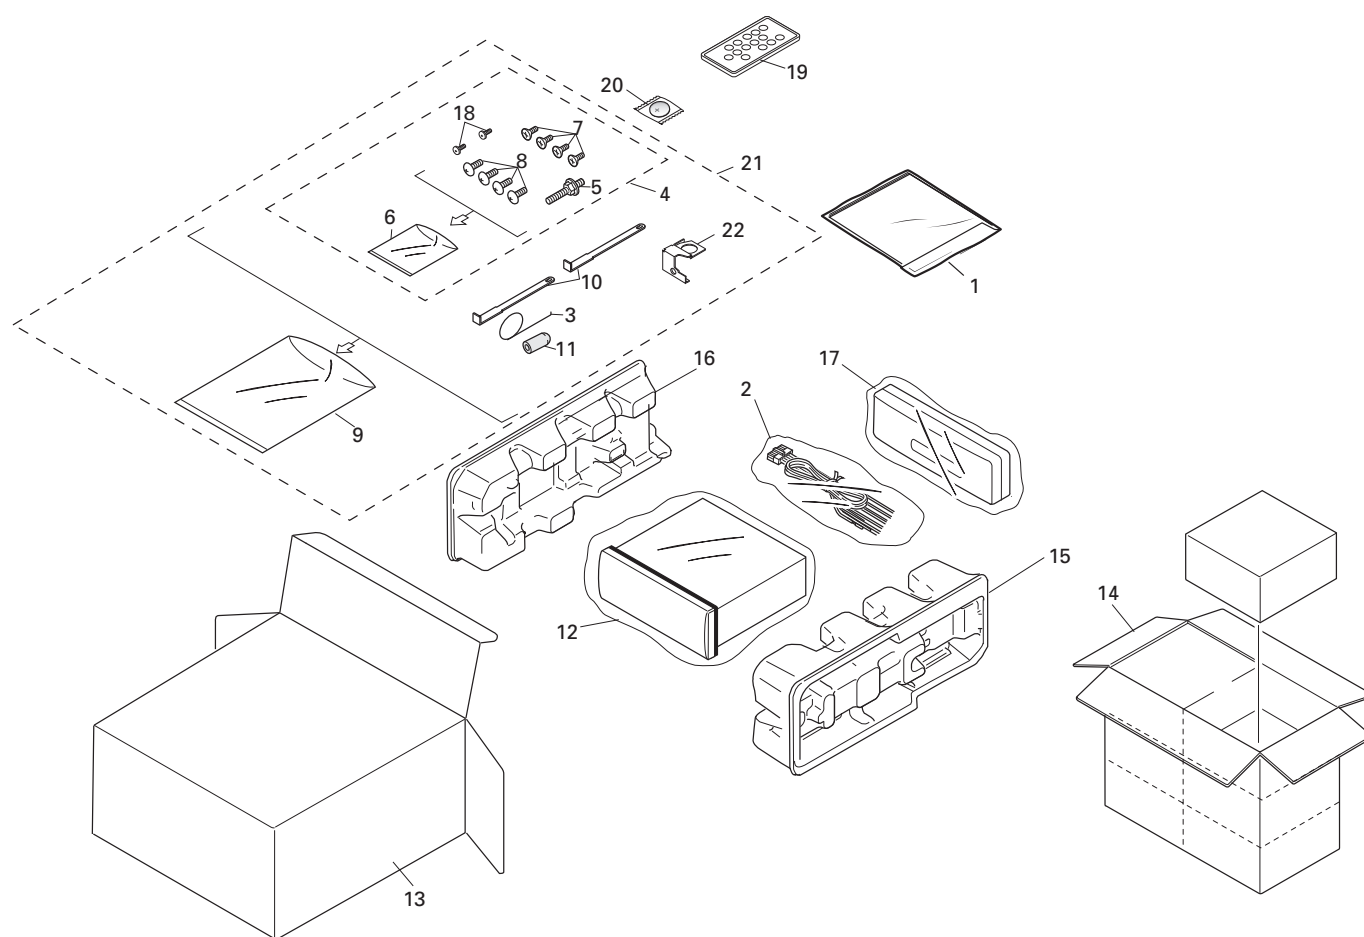

NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.


● PACKING SECTION PARTS LIST

Mark No.	Symbol and Description	Part No.		
		DEH-P430/X1N/UC	DEH-P4300/X1N/UC	DEH-P43/X1N/UC
1-1	Owner's Manual	CRD3300	CRD3301	CRD3301
1-2	Installation Manual	CRD3309	CRD3311	CRD3311
*	1-3 Card	Not used	ARY1048	ARY1048
*	1-4 Warranty Card	CRY1070	Not used	Not used
	1-5 Polyethylene Bag	CEG1116	CEG1116	CEG1116
*	1-6 Caution Card	CRP1242	CRP1242	CRP1242
	2 Cord Assy	CDE6436	CDE6436	CDE6436
	3 Spring	CBH1650	CBH1650	CBH1650
	4 Screw Assy	CEA2796	CEA2796	CEA2796
	5 Screw	CBA1002	CBA1002	CBA1002
*	6 Polyethylene Bag	CEG-127	CEG-127	CEG-127
	7 Screw	CRZ50P090FMC	CRZ50P090FMC	CRZ50P090FMC
	8 Screw	TRZ50P080FMC	TRZ50P080FMC	TRZ50P080FMC
*	9 Polyethylene Bag	CEG-158	CEG-158	CEG-158
	10 Handle	CNC5395	CNC5395	CNC5395
	11 Bush	CNV3930	CNV3930	CNV3930
	12 Polyethylene Bag	CEG1173	CEG1173	CEG1173
	13 Carton	CHG4266	CHG4265	CHG4267
	14 Contain Box	CHL4266	CHL4265	CHL4267
	15 Protector	CHP2251	CHP2251	CHP2251
	16 Protector	CHP2252	CHP2252	CHP2252
	17 Case Assy	CXB3520	CXB3520	Not used
	18 Screw	BPZ20P060FZK	BPZ20P060FZK	BPZ20P060FZK
	19 Remote Control Unit	CXB6797	CXB6797	CXB6797
*	20 Battery	CEX1065	CEX1065	CEX1065
	21 Accessory Assy	CEA2773	CEA2773	CEA2773
	22 Earth Plate	CNC9450	CNC9450	CNC9450

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P430/X1N/UC	CRD3300, CRD3309	English, French, Spanish
DEH-P43/X1N/UC DEH-P4300/X1N/UC	CRD3301, CRD3311	English, French, Spanish

2.2 EXTERIOR

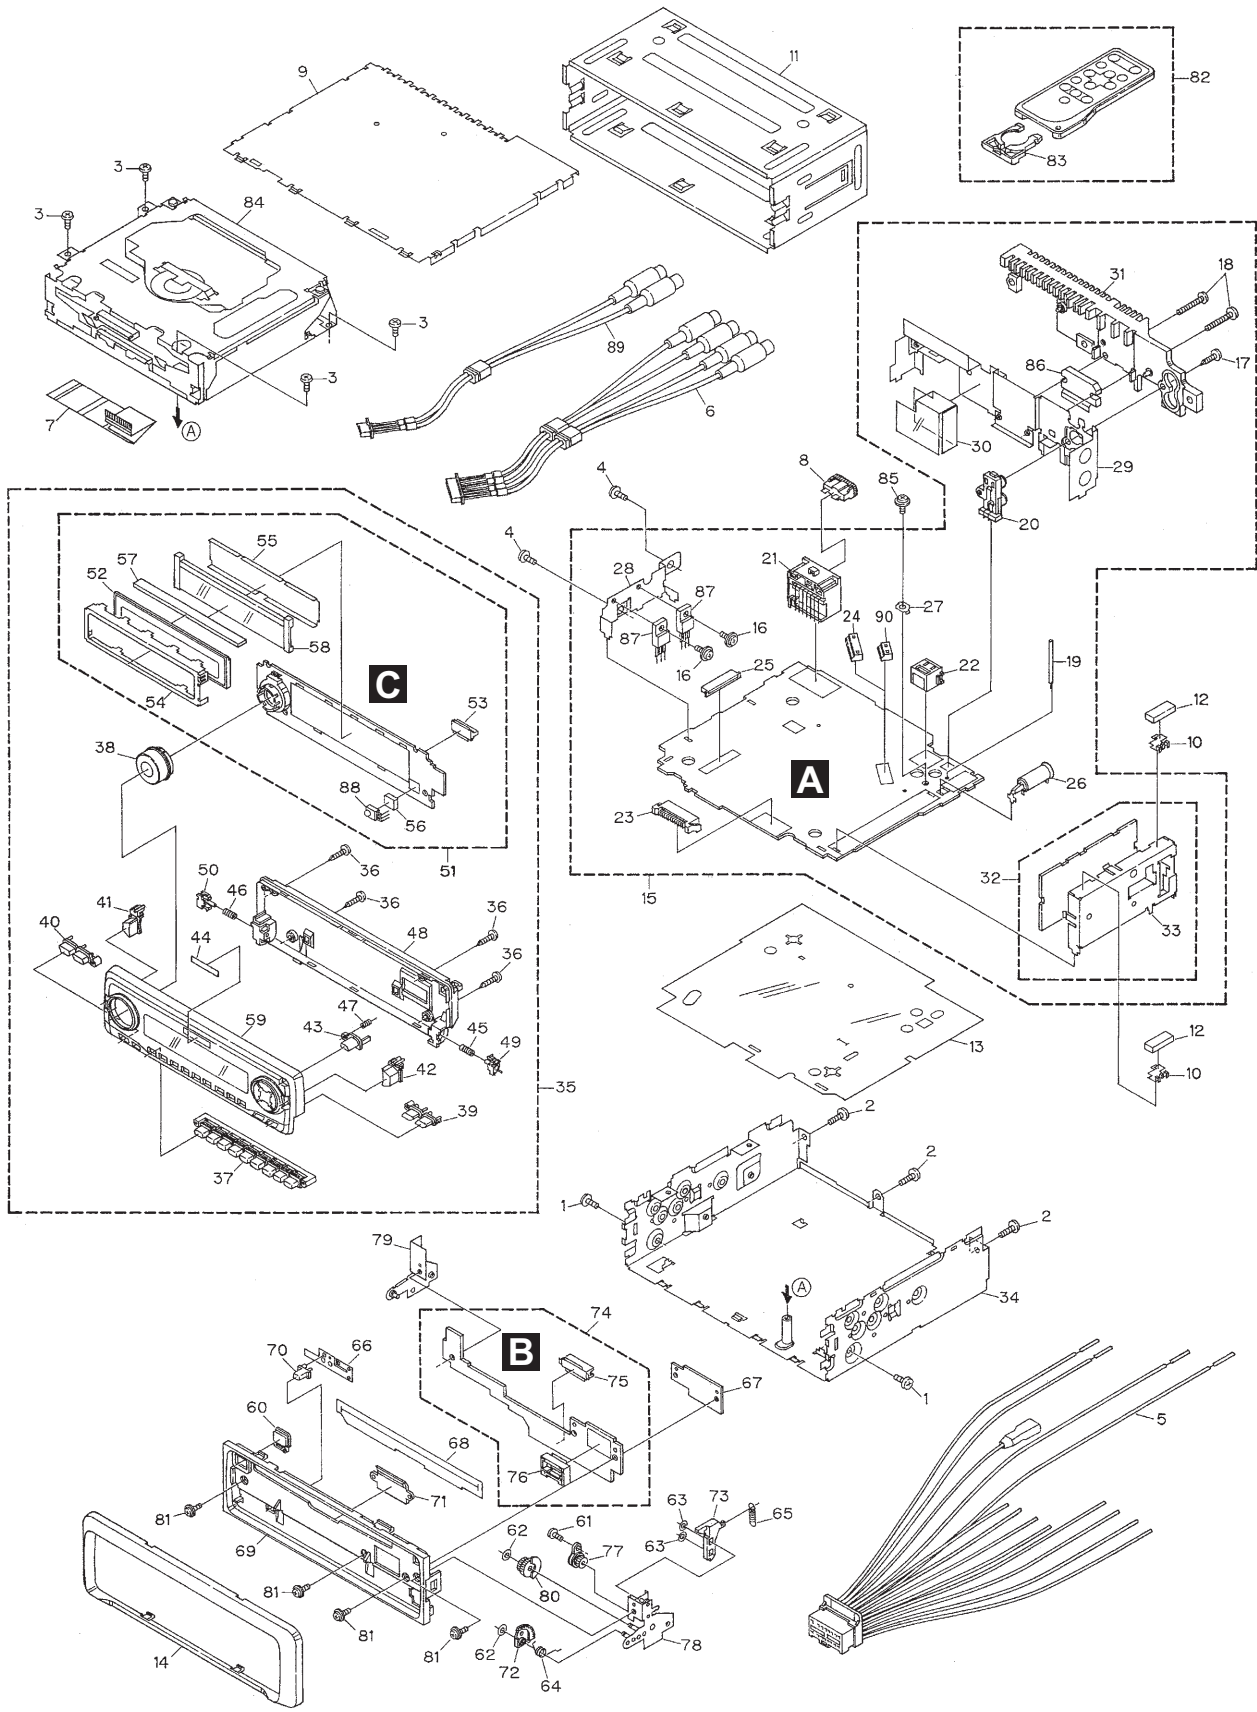

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK	46	Spring	CBH2431
2	Screw	BMZ30P100FMC	47	Spring	CBH2491
3	Screw	BSZ26P060FMC	48	Cover	CNS6282
4	Screw	BSZ30P060FMC	49	Holder	CNV6505
5	Cord Assy	CDE6436	50	Holder	CNV6506
6	Cord Assy	See Contrast table(2)	51	Keyboard Unit	See Contrast table(2)
7	Cable	CDE6444	52	LCD	CAW1626
8	Fuse(10A)	CEK1136	53	Connector(CN1901)	CKS4205
9	Case	CNB2686	54	Holder	CNC9053
10	Holder	CNC5704	55	Sheet	CNM6969
11	Holder	CNC8659	56	Cushion	CNM6984
12	Cushion	CNM4870	57	Connector	CNV6440
13	Insulator	CNM6948	58	Lighting Conductor	CNV6441
14	Panel	CNS6332	59	Sub Grille Assy	See Contrast table(2)
15	Tuner Amp Unit	See Contrast table(2)	60	Button(EJECT)	CAC6839
16	Screw	ASZ26P060FMC	61	Screw(M2x2)	CBA1176
17	Screw	BPZ26P100FMC	62	Washer	CBF1038
18	Screw	BSZ26P160FMC	63	Washer	CBF1039
19	Clamper	CEF1007	64	Spring	CBH2428
20	Pin Jack(CN351)	CKB1035	65	Spring	CBH2429
21	Plug(CN901)	CKM1330	66	Spring	CBL1512
22	Connector(CN701)	CKS3408	67	Holder	CNC9096
23	Plug(CN750)	CKS3537	68	Cover	CNM6854
24	Connector(CN331)	See Contrast table(2)	69	Panel	CNS6278
25	Connector(CN501)	CKS4398	70	Pin	CNV6486
26	Antenna Jack(CN402)	CKX1056	71	Lighting Conductor	CNV6487
27	Holder(CN403)	CNC5399	72	Gear	CNV6507
28	Holder	CNC8615	73	Arm	CNV6508
29	Holder	See Contrast table(2)	74	Panel Unit	CWM7375
30	Insulator	CNM6949	75	Socket(CN1950)	CKS3550
31	Heat Sink	CNR1583	76	Connector(CN1951)	CKS4206
32	FM/AM Tuner Unit	CWE1563	77	Damper Unit	CXB5070
33	Holder	CNC8815	78	Holder Unit	CXB6356
34	Chassis Unit	CXB6100	79	Holder Unit	CXB6357
35	Detach Grille Assy	See Contrast table(2)	80	Clutch Unit	CXB6358
36	Screw	BPZ20P100FZK	81	Screw	IMS20P045FZK
37	Button(1-6)	CAC6773	82	Remote Control Unit	CXB6797
38	Knob(VOLUME)	CAC6775	83	Cover	CNS6439
39	Button(FUNC/AUDIO)	CAC6776	84	CD Mechanism Module(S8.1)	CXK5201
40	Button(SOURCE/DISP)	CAC6777	85	Screw	ISS26P055FUC
41	Button(EQ)	CAC6778	86	IC(IC361)	PAL006A
42	Button(SFEQ)	CAC6779	87	Transistor(Q510,Q910)	2SD2396
43	Button(OPEN)	CAC6780	88	IC(IC1902)	SBX8035-H
* 44	Badge	See Contrast table(2)	89	Cord Assy	See Contrast table(2)
45	Spring	CBH2430	90	Connector(CN331)	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P430/X1N/UC, DEH-P4300/X1N/UC and DEH-P43/X1N/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P430/X1N/UC	DEH-P4300/X1N/UC	DEH-P43/X1N/UC
6	Cord Assy	CDE6439	Not used	Not used
15	Tuner Amp Unit	CWM7382	CWM7379	CWM7381
24	Connector(CN331)	CKS3602	Not used	Not used
29	Holder	CNC9469	CNC9470	CNC9470
35	Detach Grille Assy	CXB6294	CXB6291	CXB6293
*	44 Badge	CAH1755	CAH1754	CAH1754
	51 Keyboard Unit	CWM7398	CWM7398	CWM7403
	59 Sub Grille Assy	CXB7152	CXB7153	CXB7154
	89 Cord Assy	Not used	CDE6494	CDE6494
	90 Connector(CN331)	Not used	CKS3598	CKS3598

2.3 CD MECHANISM MODULE

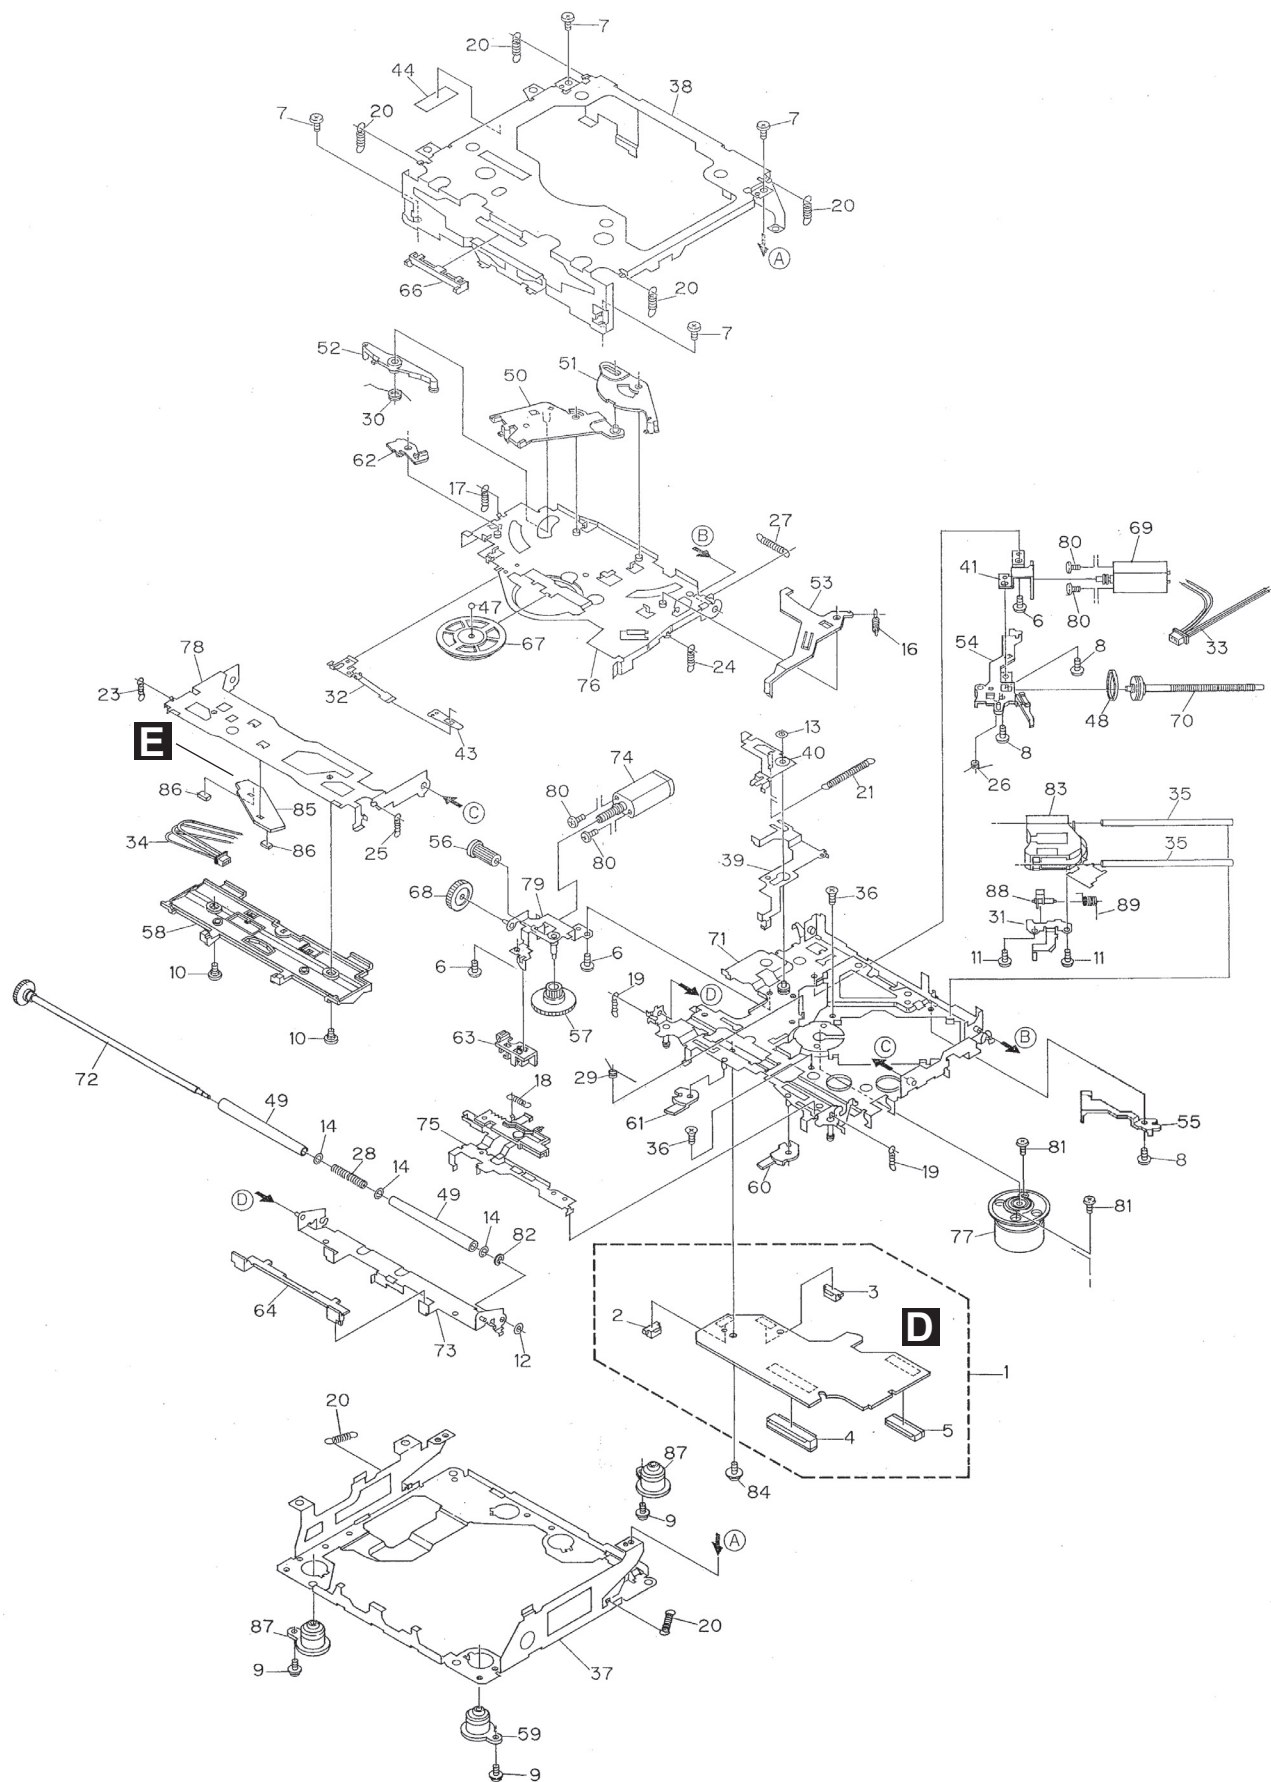

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Control Unit	CWX2411	46		
2	Connector(CN802)	CKS2192	47	Ball	CNR1189
3	Connector(CN801)	CKS2193	48	Belt	CNT1086
4	Connector(CN701)	CKS2773	49	Roller	CNV4509
5	Connector(CN101)	CKS3486	50	Arm	CNV6037
6	Screw	BMZ20P030FMC	51	Arm	CNV5247
7	Screw	BSZ20P040FMC	52	Arm	CNV5248
8	Screw(M2x3)	CBA1077	53	Arm	CNV5249
9	Screw(M2x5)	EBA1028	54	Guide	CNV5254
10	Screw	CBA1243	55	Guide	CNV5255
11	Screw(M2x4)	CBA1362	56	Gear	CNV5257
12	Washer	CBF1037	57	Gear	CNV5256
13	Washer	CBF1038	58	Guide	CNV6272
14	Washer	CBF1060	59	Damper	CNV6010
15			60	Arm	CNV6096
16	Spring	CBH2079	61	Arm	CNV6031
17	Spring	CBH2117	62	Arm	CNV6211
18	Spring	CBH2314	63	Guide	CNV6012
19	Spring	CBH2110	64	Guide	CNV5510
20	Spring	CBH2282	65		
21	Spring	CBH2318	66	Guide	CNV5751
22			67	Clamper	CNV6013
23	Spring	CBH2324	68	Gear	CNV5813
24	Spring	CBH2118	69	Motor Unit(M1)	CXB2190
25	Spring	CBH2161	70	Screw Unit	CXB5892
26	Spring	CBH2163	71	Chassis Unit	CXB4797
27	Spring	CBH2189	72	Gear Unit	CXB4728
28	Spring	CBH2377	73	Arm Unit	CXB5753
29	Spring	CBH2260	74	Motor Unit(M2)	CXB2195
30	Spring	CBH2262	75	Lever Unit	CXB4730
31	Bracket	CNC8568	76	Arm Unit	CXB4731
32	Spring	CBL1531	77	Motor Unit(M3)	CXB2562
33	Connector	CDE5531	78	Arm Unit	CXB4732
34	Connector	CDE5532	79	Bracket Unit	CXB4795
35	Shaft	CLA3894	80	Screw	JFZ20P025FMC
36	Screw(M2.6x6)	CBA1458	81	Screw	JGZ17P025FZK
37	Frame	CNC8565	82	Washer	YE20FUC
38	Frame	CNC8749	83	Pickup Unit(Service)(P8)	CXX1285
39	Lever	CNC9265	84	Screw	IMS26P030FMC
40	Arm	CNC8663	* 85	PCB	CNX2982
41	Bracket	CNC8567	86	Photo-transistor(Q1, 2)	CPT230SX-TU
42			87	Damper	CNV6011
43	Spacer	CNM3315	88	Rack	CNV6014
44	Sheet	CNM6659	89	Spring	CBH2315
45					

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A Unit Number : CWM7382(DEH-P430/X1N/UC)		D 919 Diode	S5688G
: CWM7381(DEH-P43/X1N/UC)		D 920 Diode	S5688G
: CWM7379(DEH-P4300/X1N/UC)		D 925 Diode	1SS270
Unit Name : Tuner Amp Unit		D 926 Diode	HZS9L(A2)
		L 311 Ferri-Inductor	LAU4R7K
MISCELLANEOUS		L 361 Choke Coil 600μH	CTH1221
IC 301 IC(DEH-P430/X1N/UC)	PML009A	L 410 Ferri-Inductor	LAU4R7K
IC(DEH-P43/X1N/UC,P4300/X1N/UC)	PML008A	L 411 Ferri-Inductor	LAU2R2K
IC 361 IC	PAL006A	L 412 Ferri-Inductor	LAU2R2K
IC 601 IC	PE5203A	L 612 Inductor	LAU100K
IC 603 IC	S-80834ANY	L 621 Inductor	CTF1346
IC 710 IC	HA12187FP	L 710 Ferri-Inductor	LAU2R2K
Q 331 Transistor(DEH-P430/X1N/UC)	IMH3A	L 750 Ferri-Inductor	LAU2R2K
Q 341 Transistor	IMH3A	TH 610 Thermistor	CCX1037
Q 351 Transistor	IMH3A	X 610 Radiator 12.5829MHz	CSS1495
Q 359 Transistor	DTA124EK	S 750 Switch(DETACH SENSE)	CSN1039
Q 361 Transistor	DTC124EK	BZ 610 Buzzer	CPV1050
Q 362 Transistor	DTC114EK	AR 410 Arrester	DSP-201M
Q 410 Transistor	2SC2412K	FM/AM Tuner Unit	CWE1563
Q 510 Transistor	2SD2396		
Q 511 Transistor	RN46A1	RESISTORS	
Q 610 Transistor	DTA114EK	R 311	RS1/16S101J
Q 710 Transistor	2SA1037K	R 312	RS1/16S101J
Q 711 Transistor	DTC114EK	R 313	RS1/16S101J
Q 750 Transistor	2SA1037K	R 314	RS1/16S101J
Q 751 Transistor	2SA1036K	R 315 (DEH-P430/X1N/UC)	RS1/16S101J
Q 752 Transistor	DTC114EK	R 316 (DEH-P430/X1N/UC)	RS1/16S101J
Q 753 Transistor	DTC114EK	R 327	RS1/16S222J
Q 754 Transistor	2SA1037K	R 328	RS1/16S222J
Q 755 Transistor	DTC114EK	R 331 (DEH-P430/X1N/UC)	RS1/16S821J
Q 909 Transistor	RN46A1	R 332 (DEH-P430/X1N/UC)	RS1/16S821J
Q 910 Transistor	2SD2396	R 333 (DEH-P430/X1N/UC)	RS1/16S223J
Q 911 Transistor	2SB1243	R 334 (DEH-P430/X1N/UC)	RS1/16S223J
Q 912 Transistor	DTC114EK	R 341	RS1/16S223J
Q 913 Transistor	2SD1760F5	R 342	RS1/16S821J
Q 914 Transistor	2SC2412K	R 343	RS1/16S821J
Q 915 Transistor	2SC2412K	R 344	RS1/16S223J
Q 917 Transistor	2SC2412K	R 351	RS1/16S821J
Q 918 Transistor	2SC2412K	R 352	RS1/16S821J
D 320 Diode	DAN202U	R 353	RS1/16S223J
D 361 Diode	S5688G	R 354	RS1/16S223J
D 362 Diode	S5688G	R 361	RS1/16S103J
D 510 Diode	HZS9L(B1)	R 362	RS1/16S103J
D 750 Diode	1SS270	R 363	RS1/16S331J
D 751 Diode	1SS270	R 364	RS1/16S153J
D 752 Diode	DAP202U	R 365	RD1/4PU182J
D 753 Diode	DAN202U	R 409	RS1/16S0R0J
D 754 Diode	DAP202U	R 410	RS1/16S222J
D 755 Diode	DAN202U	R 411	RS1/16S222J
D 762 Diode	DAN202U	R 413	RS1/16S473J
D 763 Diode	DAP202U	R 414	RS1/16S473J
D 910 Diode	HZS9L(B3)	R 415	RS1/16S393J
D 911 Diode	HZS6L(B2)	R 417	RS1/16S681J
D 912 Diode	S5688G	R 418	RS1/16S681J
D 913 Diode	HZS7L(C2)	R 419	RS1/16S681J
D 914 Diode	HZS7L(A1)	R 420	RS1/16S103J

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 421	RS1/16S681J	R 750	RS1/16S104J
R 422	RS1/16S473J	R 751	RS1/16S103J
R 423	RS1/16S472J	R 752	RS1/16S153J
R 424	RS1/16S473J	R 753	RS1/16S153J
R 429	RS1/16S681J	R 754	RS1/16S222J
R 430	RS1/16S681J	R 756	RS1/16S433J
R 431	RS1/16S473J	R 757	RS1/16S473J
R 432	RS1/16S473J	R 758	RS1/16S102J
R 437	RS1/16S0R0J	R 759	RD1/4PU222J
R 438	RS1/16S0R0J	R 760	RS1/16S102J
R 445	RS1/16S272J	R 763	RS1/16S222J
R 446	RS1/16S272J	R 764	RS1/16S131J
R 447	RS1/16S162J	R 765	RS1PMF390J
R 448	RS1/16S162J	R 766	RS1/10S270J
R 454	RS1/16S0R0J	R 767	RS1/16S103J
R 510	RD1/4PU221J	R 768	RS1/16S152J
R 511	RD1/4PU221J	R 769	RS1/16S152J
R 512	RS1/16S472J	R 771	RS1/16S473J
R 513	RS1/16S222J	R 773	RD1/4PU222J
R 514	RS1/16S473J	R 774	RS1/16S102J
R 515	RS1/16S473J	R 775	RS1/16S102J
R 516	RS1/16S473J	R 776	RS1/16S220J
R 517	RS1/16S222J	R 777	RS1/16S0R0J
R 518	RS1/16S222J	R 778	RS1/16S103J
R 519	RS1/16S222J	R 779	RS1/16S472J
R 520	RS1/16S681J	R 781	RS1/16S104J
R 521	RS1/16S102J	R 782	RS1/16S131J
R 522	RS1/16S0R0J	R 783	RS1/16S131J
R 523	RS1/16S102J	R 784	RS1/10S392J
R 524	RS1/16S0R0J	R 786	RS1/16S102J
R 528	RD1/4PU0R0J	R 787	RS1/10S472J
R 531	RS1/16S0R0J	R 788	RS1/10S222J
R 532	RS1/16S0R0J	R 789	RS1/10S222J
R 534	RS1/16S0R0J	R 909	RD1/4PU0R0J
R 535	RS1/16S0R0J	R 910	RS1/16S0R0J
R 536	RS1/16S0R0J	R 911	RD1/4PU121J
R 610	RS1/16S473J	R 912	RS1/16S102J
R 611	RS1/16S473J	R 913	RD1/4PU102J
R 612	RS1/16S2202F	R 914	RS1/16S103J
R 613	RS1/16S102J	R 915	RS1/16S222J
R 614	RS1/16S821J	R 916	RS1/16S133J
R 615	RS1/16S102J	R 917	RS1/16S104J
R 616	RS1/16S0R0J	R 918	RS1/16S104J
R 620	RS1/16S473J	R 919	RS1/16S223J
R 621	RS1/16S331J	R 920	RS1/16S473J
R 622	RS1/16S101J	R 921	RS1/16S103J
R 624	RS1/16S104J	R 922	RS1/16S473J
R 625	RS1/16S0R0J	R 923	RD1/4PU102J
R 626	RS1/16S473J	R 924	RS1/16S472J
R 627	RS1/16S473J	R 927	RS1/16S102J
R 628	RS1/16S473J	R 928	RS1/16S473J
R 630	RAB4C102J	R 929	RS1/16S104J
R 631	RS1/16S0R0J	R 930	RS1/16S103J
R 710	RS1/16S101J	R 931	RS1/16S103J
R 711	RS1/16S620J	R 932	RD1/4PU102J
R 712	RS1/16S101J	R 933	RS1/16S473J
R 713	RS1/16S103J	R 934	RS1/16S103J
R 714	RS1/16S102J	R 935	RS1/16S223J
R 715	RS1/16S102J	R 936	RD1/4PU152J
R 716	RS1/16S473J		
R 717	RS1/16S473J		
R 718	RS1/16S102J		
R 719	RS1/16S102J		
R 720	RS1/16S223J		
R 721	RS1/16S223J		
R 722	RS1/16S821J		
R 723	RS1/16S821J		
R 724	RS1/16S222J		
R 725	RS1/16S223J		
R 726	RS1/16S472J		
		CAPACITORS	
		C 310	CKSRYB102K50
		C 311	CEJA1R0M50
		C 312	CEJA1R0M50
		C 314	CKSRYB105K6R3
		C 315	CKSRYB105K6R3

[illegible]

====Circuit Symbol and No.==Part Name

Part No.

R	1938	RS1/16S151J
R	1939	RS1/16S131J
R	1941	RS1/16S131J
R	1942	RS1/16S131J
R	1943	RS1/16S131J

R	1945	RS1/16S121J
R	1946	RS1/16S0R0J
R	1949	RS1/16S151J

CAPACITORS

C	1902	CKSRYB104K16
C	1903	CSZS100M6R3
C	1905	CKSRYB104K16
C	1906	CKSRYB104K16
C	1907	CKSRYB104K16

C	1923	CKSQYB104K16
C	1924	CKSRYB104K16
C	1930	CKSQYB104K16

C Unit Number : CWM7403(DEH-P43/X1N/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1902	IC	SBX8035-H
IC	1903	IC	PD6294A
Q	1905	Transistor	DTC114EU
D	1901	Chip Diode	MA151WK
D	1902	Chip Diode	MA151WA

D	1903	LED	CL170UBX
D	1917	LED	NSSW440-9159
D	1918	LED	NSSW440-9159
X	1901	Radiator 5.00MHz	CSG1423
S	1901	Push Switch	CSG1114

S	1902	Push Switch	CSG1114
S	1903	Push Switch	CSG1114
S	1904	Push Switch	CSG1114
S	1905	Push Switch	CSG1117
S	1906	Push Switch	CSG1114

S	1908	Push Switch	CSG1117
S	1909	Push Switch	CSG1117
S	1910	Push Switch	CSG1117
S	1911	Push Switch	CSG1117
S	1912	Push Switch	CSG1117

S	1913	Push Switch	CSG1117
S	1914	Push Switch	CSG1117
S	1915	Push Switch	CSG1117
S	1916	Push Switch	CSG1114
S	1917	Push Switch	CSG1114

S	1918	Push Switch	CSG1114
S	1919	Push Switch	CSG1114
S	1920	Push Switch	CSG1111
S	1922	Switch	CSD1061

RESISTORS

R	1901	RS1/10S222J
R	1902	RS1/10S222J
R	1903	RS1/16S470J
R	1904	RS1/16S470J
R	1905	RS1/16S121J

R	1906	RS1/16S2R2J
R	1909	RS1/16S151J
R	1910	RS1/16S121J
R	1911	RS1/16S121J
R	1912	RS1/16S121J

R	1913	RS1/16S121J
R	1914	RS1/16S121J
R	1915	RS1/16S121J
R	1916	RS1/16S121J
R	1917	RS1/16S131J

====Circuit Symbol and No.==Part Name

Part No.

R	1918	RS1/16S151J
R	1919	RS1/16S131J
R	1920	RS1/16S131J
R	1927	RS1/16S472J
R	1929	RS1/16S0R0J

R	1930	RS1/16S101J
R	1931	RS1/16S101J
R	1933	RS1/16S161J
R	1935	RS1/16S393J
R	1936	RS1/16S131J

R	1938	RS1/16S151J
R	1939	RS1/16S131J
R	1941	RS1/16S131J
R	1942	RS1/16S131J
R	1943	RS1/16S131J

R	1945	RS1/16S121J
R	1946	RS1/16S0R0J
R	1949	RS1/16S151J

CAPACITORS

C	1902	CKSRYB104K16
C	1903	CSZS100M6R3
C	1905	CKSRYB104K16
C	1906	CKSRYB104K16
C	1907	CKSRYB104K16

C	1923	CKSQYB104K16
C	1924	CKSRYB104K16
C	1930	CKSQYB104K16

B Unit Number : CWM7375
Unit Name : Panel Unit

MISCELLANEOUS

D	1950	LED	CL220PGC
S	1950	Push Switch	CSG1112

RESISTORS

R	1952	RS1/16S101J
R	1953	RS1/16S101J

D Unit Number : CWX2411
Unit Name : Control Unit

MISCELLANEOUS

IC	201	IC	UPD63711GC
IC	301	IC	BA5985FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SB1132
D	801	Chip LED	CL203IRXTU

D	802	Chip LED	CL203IRXTU
X	201	Ceramic Resonator 16.934MHz	CSS1456
S	801	Spring Switch(HOME)	CSN1051
S	802	Spring Switch(CLAMP)	CSN1052

RESISTORS

R	101	RS1/8S120J
R	102	RS1/8S100J
R	103	RS1/16S222J
R	201	RS1/16S104J
R	202	RS1/16S103J

R	203	RS1/16S393J
R	204	RS1/16S103J
R	205	RS1/16S103J
R	206	RS1/16S182J
R	207	RS1/16S123J

====Circuit Symbol and No.==Part Name	Part No.
R 302	RS1/16S153J
R 303	RS1/16S103J
R 501	RS1/16S102J
R 502	RA4C681J
R 601	RS1/16S102J
R 602	RS1/16S102J
R 605	RS1/16S0R0J
R 606	RS1/16S0R0J
R 801	RS1/8S751J
R 803	RS1/8S751J
R 902	RS1/16S0R0J
R 906	RS1/16S0R0J

CAPACITORS

C 101	CKSRYB102K50
C 102	CKSRYB104K16
C 103	CEV101M6R3
C 104	CEV470M6R3
C 105	CKSQYB334K16
C 106	CKSQYB334K16
C 107	CKSQYB334K16
C 201	CKSRYB104K16
C 202	CKSRYB471K50
C 203	CKSRYB104K16
C 205	CEV101M6R3
C 206	CKSRYB104K16
C 207	CKSRYB104K16
C 208	CKSRYB104K16
C 209	CKSRYB104K16
C 210	CKSRYB332K50
C 211	CKSRYB104K16
C 212	CKSRYB104K16
C 213	CKSRYB392K50
C 214	CKSRYB104K16
C 215	CKSRYB104K16
C 216	CCSRCJ3R0C50
C 217	CCSRCH270J50
C 218	CKSRYB104K16
C 219	CCSRCH181J50
C 220	CCSRCH510J50
C 221	CKSRYB682K25
C 222	CEV220M6R3
C 223	CKSRYB103K25
C 224	CKSRYB224K10
C 301	CEV101M10
C 603	CCSQSL152J50
C 604	CCSQSL152J50
C 702	CCH1349
C 703	CKSQYB334K16

10μF/10V

====Circuit Symbol and No.==Part Name	Part No.
---------------------------------------	----------

E Unit Number :
Unit Name : Photo Unit(S8)

Q 1	Photo-transistor	CPT230SX-TU
Q 2	Photo-transistor	CPT230SX-TU

Miscellaneous Parts List

M 1	Pickup Unit(Service)(P8)	CXX1285
M 2	Motor Unit(CARRIAGE)	CXB2190
M 3	Motor Unit(LOADING)	CXB2195
M 3	Motor Unit(SPINDLE)	CXB2562