

9. EXPLODED VIEWS AND PARTS LIST


NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ▼ mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

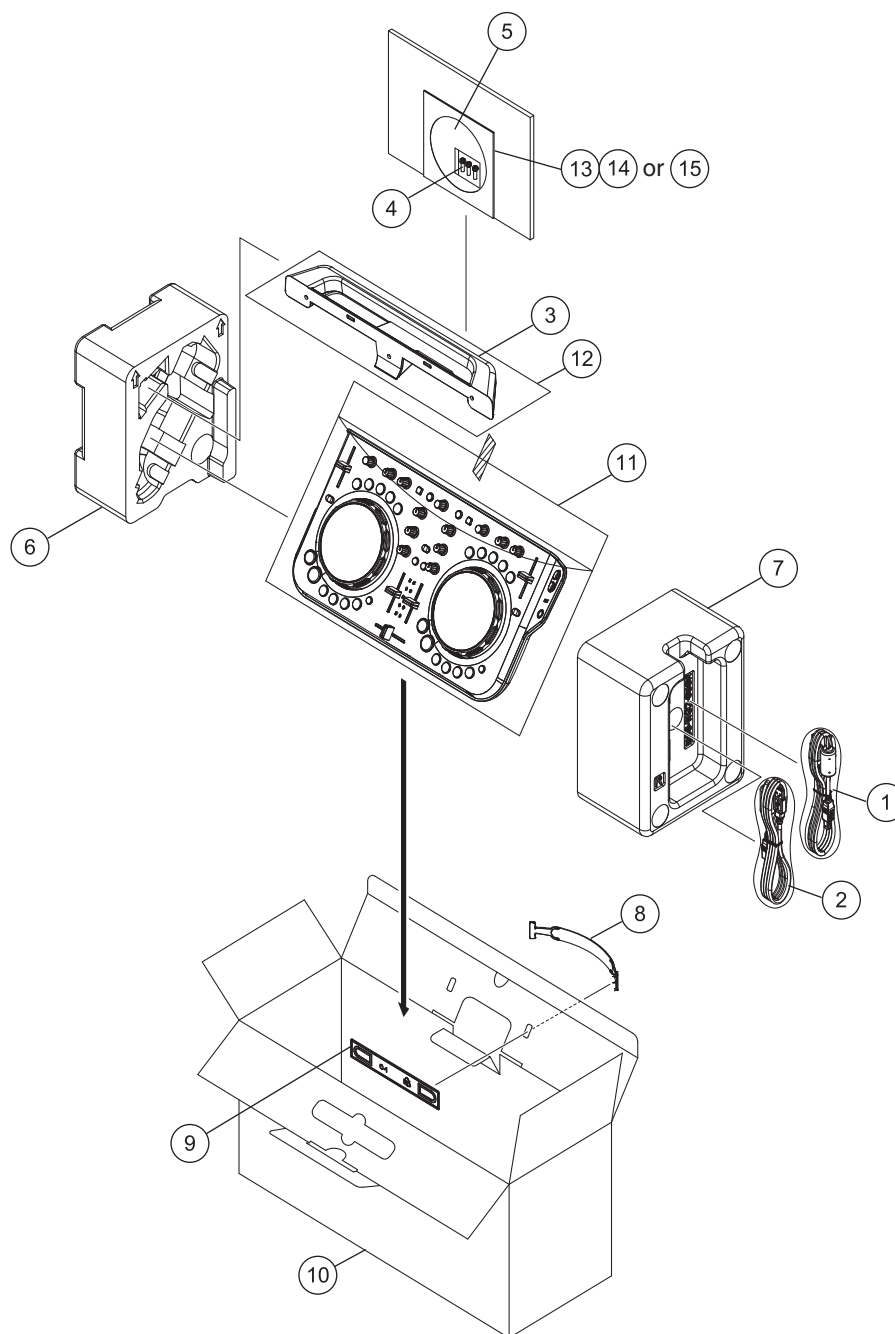

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	USB Cable (L = 1500 mm)	408-SUB-132	8	Handle	100-DDJLE-3012	
2	iPhone/iPad Connection Cable (Lightning)	408-WG2-129	9	Handle Base	100-DDJLE-3013	A
3	iPhone/iPad stand	See Contrast table (2)	10	Gift Box	See Contrast table (2)	
4	Stand fixing screws	See Contrast table (2)	11	Soft Bag	509-DDJLE-318	
			12	Soft Bag For Support	509-WG2-327	
5	VIRTUAL DJ LE software/ driver software/ operating instructions CD-ROM	••••• (To Be Determined)	13	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)	
6	Polyfoam L	506-WG2-658L	14	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)	
7	Polyfoam R	506-WG2-658R	15	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)	B

(2) CONTRAST TABLE

DDJ-WEGO2-K/XE5, XE25, /XECN5, DDJ-WEGO2-R/XE5, XE25, XECN5, DDJ-WEGO2-W/XE5, XE25 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO2-K /XE5, XE25	DDJ-WEGO2-K /XECN5	DDJ-WEGO2-R /XE5, XE25	DDJ-WEGO2-R /XECN5	DDJ-WEGO2-W /XE5, XE25	DDJ-WEGO2-W /XECN5	
	3	iPhone/iPad stand	701-WG2K-5403	701-WG2K-5403	701-WG2R-5403	701-WG2R-5403	701-WG2-5403	701-WG2-5403	
	4	Stand fixing screws	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745Z	602-SWISO415-745Z	C
	10	Gift Box	507-WG2KA-3447B	507-WG2KB-3447A	507-WG2RA-3447B	507-WG2RB-3447A	507-WG2WA-3447B	507-WG2WB-3447A	
	13	Read Before Use (Important)/ Quick Start Guide (En, Fe, De, It, NI)	502-WG2A-3328A	Not used	502-WG2A-3328A	Not used	502-WG2A-3328A	Not used	
	14	Read Before Use (Important)/ Quick Start Guide (Es, Pt, Ru, Ko, Ja)	502-WG2A-3329A	Not used	502-WG2A-3329A	Not used	502-WG2A-3329A	Not used	
	15	Read Before Use (Important)/ Quick Start Guide (ZhcN)	Not used	502-WG2B-3330	Not used	502-WG2B-3330	Not used	502-WG2B-3330	

A



C

D

E

F

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CONTROL PCB Assy	704-WG2-A604	46	Anti-Dazzling Bag	See Contrast table (2)	
2	IO PCB Assy	704-WG2-A607	47	Clip	603-PROS2-256A	A
3	MASTER PCB Assy	704-WG2-A608	48	Foot Pad	604-DDJLE-604	
4	WHEEL (R) PCB Assy	704-WG2-A609	49	Stand fixing screws	See Contrast table (2)	
5	WHEEL (L) PCB Assy	704-WG2-A610	50	1..iPhone/iPad stand	See Contrast table (2)	
6	1P Lead Wire	406-DDJLE-1227	51	2..Pad	See Contrast table (2)	■
7	11P 1.0 FFC Cable	406-WG2-1261	52	2..Foot Pad	604-WG2-642	
8	3P Ground Wire	406-WG2-1263	53	Cushion	612-DDJLE-441	
9	1..Wheel Assy	See Contrast table (2)	54	Cushion	612-202-220	
10	2..Wheel Frame	See Contrast table (2)	55	Pulley Washer	606-F200-003	
11	2..Screw	See Contrast table (2)	56	E Ring	606-DJ3000-105	B
12	Chassis Assy	See Contrast table (2)	57	Washer	606-MCD810-204	
13	Spacer	612-DDJLE-447	58	Washer	606-MCD810-205	
14	Sponge	612-PDJ22-428	59	Washer	606-DDJLE-260	
15	Protected Cover	See Contrast table (2)	60	Screw	602-M100-031	■
16	Plug	See Contrast table (2)	61	Screw	602-SL24F-099	
17	Fixed Base Assy	703-DDJLE-1376	62	Screw	602-HP1010K-181	
18	Fixed Plate Assy	703-WG2-1391	63	Screw	602-STR885-354	
19	Wheel Tooth	100-DDJLE-2943	64	Screw	602-LC58FA-371	
20	Jog Tuning Knob	See Contrast table (2)	65	Screw	602-SA12-377	C
21	Rotate Knob	See Contrast table (2)	66	Screw	602-SA12-414	
22	FX Knob	See Contrast table (2)	67	Screw	See Contrast table (2)	
23	Hot Cue Knob	See Contrast table (2)	68	Screw	602-STS2003-677	
24	Playcue Knob	See Contrast table (2)	69	Screw	602-ST306-728B	■
25	Square Knob	100-DDJLE-2949				
26	Square Knob	100-DDJLEA-2949				
27	Circular Knob	See Contrast table (2)				
28	Circular Knob	See Contrast table (2)				
29	Circular Knob	See Contrast table (2)				D
30	Elliptic Knob	See Contrast table (2)				
31	Push Knob	See Contrast table (2)				
32	LED Lens	100-DDJLE-2953				
33	Left Knob	See Contrast table (2)				■
34	Right Knob	See Contrast table (2)				
35	Base	See Contrast table (2)				
36	Little Frame Plastic	See Contrast table (2)				
37	Locking Cable Clip	300-HM510B-224				
38	Locking Cable Clip	300-HM510B-224A				E
39	VR Fixed Plate	300-DDJLE-2029A				
40	R Output Fixed Plate	300-DDJLE-2031				
41	L Output Fixed Plate	300-WG2-2099				
42	Ground Plate	300-WG2-2100				■
43	Separate Sheet	501-WG2-2586				
44	Locking Cable Clip	504-HV3500K-033				
45	Anti-Dazzling Bag	See Contrast table (2)				

(2) CONTRAST TABLE

DDJ-WEGO2-K/XE5, XE25, /XECN5, DDJ-WEGO2-R/XE5, XE25, XECN5, DDJ-WEGO2-W/XE5, XE25 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO2-K /XE5, XE25	DDJ-WEGO2-K /XECN5	DDJ-WEGO2-R /XE5, XE25	DDJ-WEGO2-R /XECN5	DDJ-WEGO2-W /XE5, XE25	DDJ-WEGO2-W /XECN5
A	9	Wheel Assy	701-WG2K-5349	701-WG2K-5349	701-WG2R-5349	701-WG2R-5349	701-WG2-5349	701-WG2-5349
	10	Wheel Frame	100-DDJLE-2942S	100-DDJLE-2942S	100-DDJLE-2942S	100-DDJLE-2942S	100-WG2-2942	100-WG2-2942
	11	Screw	602-PTB2006-733B	602-PTB2006-733B	602-PTB2006-733B	602-PTB2006-733B	602-PROS2-363	602-PROS2-363
	12	Chassis Assy	701-WG2K-5223	701-WG2K-5223	701-WG2R-5223	701-WG2R-5223	701-WG2-5223	701-WG2-5223
	15	Protected Cover	604-WG2K-624	604-WG2K-624	604-WG2R-624	604-WG2R-624	604-WG2-624	604-WG2-624
	16	Plug	604-DDJLEB-606	604-DDJLEB-606	604-WG2R-606	604-WG2R-606	604-WG2-606	604-WG2-606
	20	Jog Tuning Knob	100-DDJLE-2944	100-DDJLE-2944	100-DDJLE-2944	100-DDJLE-2944	100-WG2-2944	100-WG2-2944
	21	Rotate Knob	100-DDJLE-2945	100-DDJLE-2945	100-DDJLE-2945	100-DDJLE-2945	100-WG2-2945	100-WG2-2945
	22	FX Knob	100-WG2K-2946	100-WG2K-2946	100-WG2K-2946	100-WG2K-2946	100-WG2-2946	100-WG2-2946
	23	Hot Cue Knob	100-DDJLE-2947	100-DDJLE-2947	100-DDJLE-2947	100-DDJLE-2947	100-WG2-2947	100-WG2-2947
	24	Playcue Knob	100-WG2K-2948	100-WG2K-2948	100-WG2K-2948	100-WG2K-2948	100-DDJLE-2948	100-DDJLE-2948
	27	Circular Knob	100-DDJLE-2950	100-DDJLE-2950	100-DDJLE-2950	100-DDJLE-2950	100-WG2-2950	100-WG2-2950
	28	Circular Knob	100-DDJLEA-2950	100-DDJLEA-2950	100-DDJLEA-2950	100-DDJLEA-2950	100-WG2A-2950	100-WG2A-2950
	29	Circular Knob	100-DDJLEB-2950	100-DDJLEB-2950	100-DDJLEB-2950	100-DDJLEB-2950	100-WG2B-2950S	100-WG2B-2950S
	30	Elliptic Knob	100-DDJLE-2951	100-DDJLE-2951	100-DDJLE-2951	100-DDJLE-2951	100-WG2-2951	100-WG2-2951
B	31	Push Knob	100-DDJLE-2952	100-DDJLE-2952	100-DDJLE-2952	100-DDJLE-2952	100-WG2-2952	100-WG2-2952
	33	Left Knob	100-DDJLE-2954	100-DDJLE-2954	100-DDJLE-2954	100-DDJLE-2954	100-WG2-2954	100-WG2-2954
	34	Right Knob	100-DDJLE-2955	100-DDJLE-2955	100-DDJLE-2955	100-DDJLE-2955	100-WG2-2955	100-WG2-2955
	35	Base	100-WG2KA-3064A	100-WG2KB-3064	100-WG2RA-3064A	100-WG2RB-3064	100-WG2WA-3064A	100-WG2WB-3064
	36	Little Frame Plastic	100-WG2K-3065	100-WG2K-3065	100-WG2K-3065	100-WG2K-3065	100-WG2-3065	100-WG2-3065
	45	Anti-Dazzling Bag	Not used	Not used	505-80DSP-239	505-80DSP-239	505-80DSP-239	505-80DSP-239
	46	Anti-Dazzling Bag	Not used	Not used	505-80DSP-240	505-80DSP-240	505-80DSP-240	505-80DSP-240
	49	Stand fixing screws	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745Z	602-SWISO415-745Z
	50	iPhone/iPad stand	701-WG2K-5403	701-WG2K-5403	701-WG2R-5403	701-WG2R-5403	701-WG2-5403	701-WG2-5403
	51	Pad	604-WG2K-625	604-WG2K-625	604-WG2R-625	604-WG2R-625	604-WG2-625	604-WG2-625
	67	Screw	602-PTB3010-674B	602-PTB3010-674B	602-PTB3010-674B	602-PTB3010-674B	602-PTB3010-674Z	602-PTB3010-674Z

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of identical designation.

● Although the cables that are directly mounted on each PCB Assy are listed individually as electrical parts of the corresponding PCB Assy in the parts list, those cables are included with each PCB Assy for service when it is supplied.

Mark No.	Description	Part No.
LIST OF ASSEMBLIES		
	CONTROL PCB ASSY	704-WG2-A604
	IO PCB ASSY	704-WG2-A607
	MASTER PCB ASSY	704-WG2-A608
	WHEEL (R) PCB ASSY	704-WG2-A609
	WHEEL (L) PCB ASSY	704-WG2-A610

Mark No.	Description	Part No.
A	CONTROL PCB ASSY	
SEMICONDUCTORS		
	IC 502	417-DDJLE-1078
	IC 601-608	417-DDJLE-1080
	IC 610,611	417-RMP3-936
	Q 605,606	416-CTB200-166
	Q 601-604,801,803,805,807,809,811,813	416-HDJ2460-234
	Q 817,819,821,825,827,829,831,833,835	416-HDJ2460-234
	Q 837,841,843,845	416-HDJ2460-234
	D 601-636	414-CD1000-075A
	ZD 603	414-DDJLE-332
	D 662-665	414-DJ1100G-207
	D 601,602,654-657,660	414-RMP3-285
	D 658,661,666,667,670,671	414-UDJ200-284
	D 801,803,805,807,809,811,813,816,817	410-DJ5000-253T
	D 819,821,823-825,827	410-DJ5000-253T
	D 829,831,833,835,837,840,841,843,845	410-DJ5000-253T
	D 847,848,849,851-861	410-DJ5000-253T
	D 815,839	410-HDJ2000-162T

MISCELLANEOUS

SW632-634	ENCODER	403-DDJLE-418
W01A TO 01B, W02A TO W02B	WIRE HARNESS	404-DDJLE-3721
604	WIRE HARNESS	404-DDJLE-3722
CN 01A, 02A	CONNECTOR	404-PDJ33-3584
CHASSIS 1	WIRE	406-DDJLE-1229
CHASSIS 2 TO G5	1P WIRE	406-M207-1028
W3A TO W3B	WIRE	406-DDJLE-1237
W4A TO W4B	WIRE	406-H464-020
G1A TO G1B	WIRE	406-MX200-1110
IS/ISA/AGTO IS/ISA	3P-2P LEAD WIRE	406-WG2-1262
L 601-605,610,616-618	COIL	415-HT8015-040
L 607,613-615,619	MICRO INDUCTOR	415-RCC955A-094
L 606	INDUCTOR	415-HMD5000-097
SW606,607,615,616	TACT SW	403-DDJLE-416
SW601-605,608-614,617-631,635,636	SWITCH	403-MC2-383

RESISTORS

VR 618	418-DDJLE-690
VR 619,620	418-DDJLE-691
VR 601,609-611,613-615	418-MC1000-667

Mark No.	Description	Part No.
	VR 616,617	418-PDJ33-672
	VR 602,603,621	418-SINN7-606
R 885,886,889		412-900-975
R 801-814,817-822,825-838,841-846		412-900-994
R 620,621		412-3113-048
R 892-897		412-3113-058L
R 614,676		412-3113-078
R 631-635		412-HV3363K-349

CAPACITORS

C 644	413-3113-035
C 693	413-3113-045
C 611	413-MC6000-1191
C 628	413-MEP4-1245
C 513,601,605,612,613,626,627,635-643	413-DCM280-773
C 645,646,668,675,679,682,696,697	413-DCM280-773
C 604	413-MAIE-1211
C 692,698	413-MC6000-1180

B IO PCB ASSY

SEMICONDUCTORS

⚠ IC 1	417-200USB-1071
IC 3	417-9000-740
IC 302	417-DDJLE-1079
IC 200,300	417-HP400U-995
⚠ IC 10	417-PDJ33-1045
IC 201,301	417-ST150-599
⚠ IC 6	417-U101-497
Q 203,204	416-3000-378
Q 21	416-DFX1-201
Q 907i	416-HDJ2460-234
Q 6	416-HDJ9700-210
Q 7	416-S300-327
Q 10,905i	416-UDJ200-347
D 5,50	414-007USB-148
D 2,3,4,6,7	414-CD1000-075A
D 1	414-DDJLE-348
D 902i,904i	414-DJ1100G-207
ZD 500,901,902	414-RMP3-285
D 505,506	414-UDJ200-284

MISCELLANEOUS

JK 302	JACK GROUND PLATE	300-300-1171
JK 501	USB GROUND PLATE	300-DDJLE-2071
JK 901	FIXED PLATE	300-WG2-2103
SW01	SLIDE SW	403-DV300-5007
CN 501	7P SOCKET	404-HMD5000-785A

L 301,302	INDUCTANCE	415-USOLOPA-342
JK 501	USB JACK	420-007USB-150
JK 302	3P HEADPHONE JACK	420-CDMIX1-086
JK 301	HEADPHONE JACK	420-HDJ7100-063

Mark	No.	Description	Part No.
	JK 901i	USB CONNECTOR	420-WG2-385
A	X 500	CRYSTAL (6 MHz)	427-S1-143
	CN 605A	11P 1.0 FFC SOCKET	404-500C-3711
	L 35,61-64,203-205,305,500	CHIP BEAD	415-1300-240A
	L 4	INDUCTOR	415-DDJLE-407
	L 902,903	COMMON MODE FILTERS	415-FU800-305
	L 201-304	TDK CHIP BEAD	415-FU801-316
	L 50	POWER CHOKE	415-MC6000-356
	L 3	INDUCTOR	415-WG2-425
	L 501	CHIP BEAD	415-WG2-432
	F 500	CHIP FUSE (1.5 A/63 V,1206)	422-80-065
	L 1,2	BEAD	415-DCM370E3-134



B RESISTORS

R 295,395	412-KC220-132
R 70,71	412-KM501-293
R 1	412-900-994
R 502,503	412-CDVD2001-554
R 515	412-PDJ1-1291
R 207,208,305,306	412-X1100-1368

CAPACITORS

C 343	413-MC6000-1191
C 201,301	413-MEP4-1245
C 1,6,61,64,71,73,209,210,313,314,501	413-DCM280-773
C 503,504,506-508,511,512,514,601-604	413-DCM280-773
C 5903i,905i,906i	413-DCM280-773

C 8,17,70,76,322	413-MC6000-1180
C 319,321	413-U5000-1005
C 200,303	413-007USB-828
C 527	413-1430-071
C 4	413-810-920

C 202,241,302,341	413-900-835
C 63	413-CDMIX2-631
C 317,366	413-DV300-5156
C 3	413-HT801K-192
C 525	413-QSPAND-632

C 205,206,253,254,305,306,311,312	413-SPPW3-235
-----------------------------------	---------------

C MASTER PCB ASSY

SEMICONDUCTORS

IC 100,101,202	417-ST150-599
Q 201,202,205,206	416-3000-378

MISCELLANEOUS

JK 101	JACK GROUND PLATE	300-300-1171
JK 102	GROUND PLATE	300-33-1917
	FIXED PLATE	300-4500-2010A
CN 604	3P SOCKET	404-HP1010K-259A
JK 102	2P RCA JACK	420-100U-256

JK 101	MIC JACK	420-Q3433-107
W 501	CONNECTOR WIRE	404-WG2-3806

CAPACITORS

C 103	413-SP2U-1136
C 109-112,118,217,218	413-DCM280-773
C 78,79	413-DV300-5155
C 213,214	413-HT801K-191
C 115,223,224	413-SPPW3-235

C 104	413-SPPW3-236
-------	---------------

Mark	No.	Description	Part No.
D WHEEL (R) PCB ASSY			
SEMICONDUCTORS			
	IC 615-617		417-DDJLE-1080
	D 651,652		417-HDJ2000-411

MISCELLANEOUS

CN 02B	FFC CABLE	406-DDJLE-1226
--------	-----------	----------------

CAPACITORS

C 904-906	413-DCM280-773
C 992	413-U5000-1005

D WHEEL (L) PCB ASSY

SEMICONDUCTORS

IC 612-614	417-DDJLE-1080
D 653,658	417-HDJ2000-411

MISCELLANEOUS

CN 01B	FFC CABLE	406-DDJLE-1226
--------	-----------	----------------

CAPACITORS

C 901-903	413-DCM280-773
C 991	413-U5000-1005