


KDC-C565FM/C465FM

EXPLODED VIEW (MECHANISM)


A	M2x3.5	: N09-4125-05
B	M2x2.5 (BLK)	: N39-2025-45
C	M2x5	: N86-2005-46
D	M1.7x1.5 (BLK)	: N09-4189-05
E	φ2x5	: N09-4154-05
F	M1.7x3	: N09-4181-05
G	M1.7x2.2	: N39-1722-46
J	φ1.55x3.8 WASHER	: N19-2105-04
K	φ1.6x4 WASHER	: N19-2058-04
L	φ2x5 WASHER	: N19-2080-04
M	φ1.6x3.5 WASHER	: N19-2028-04

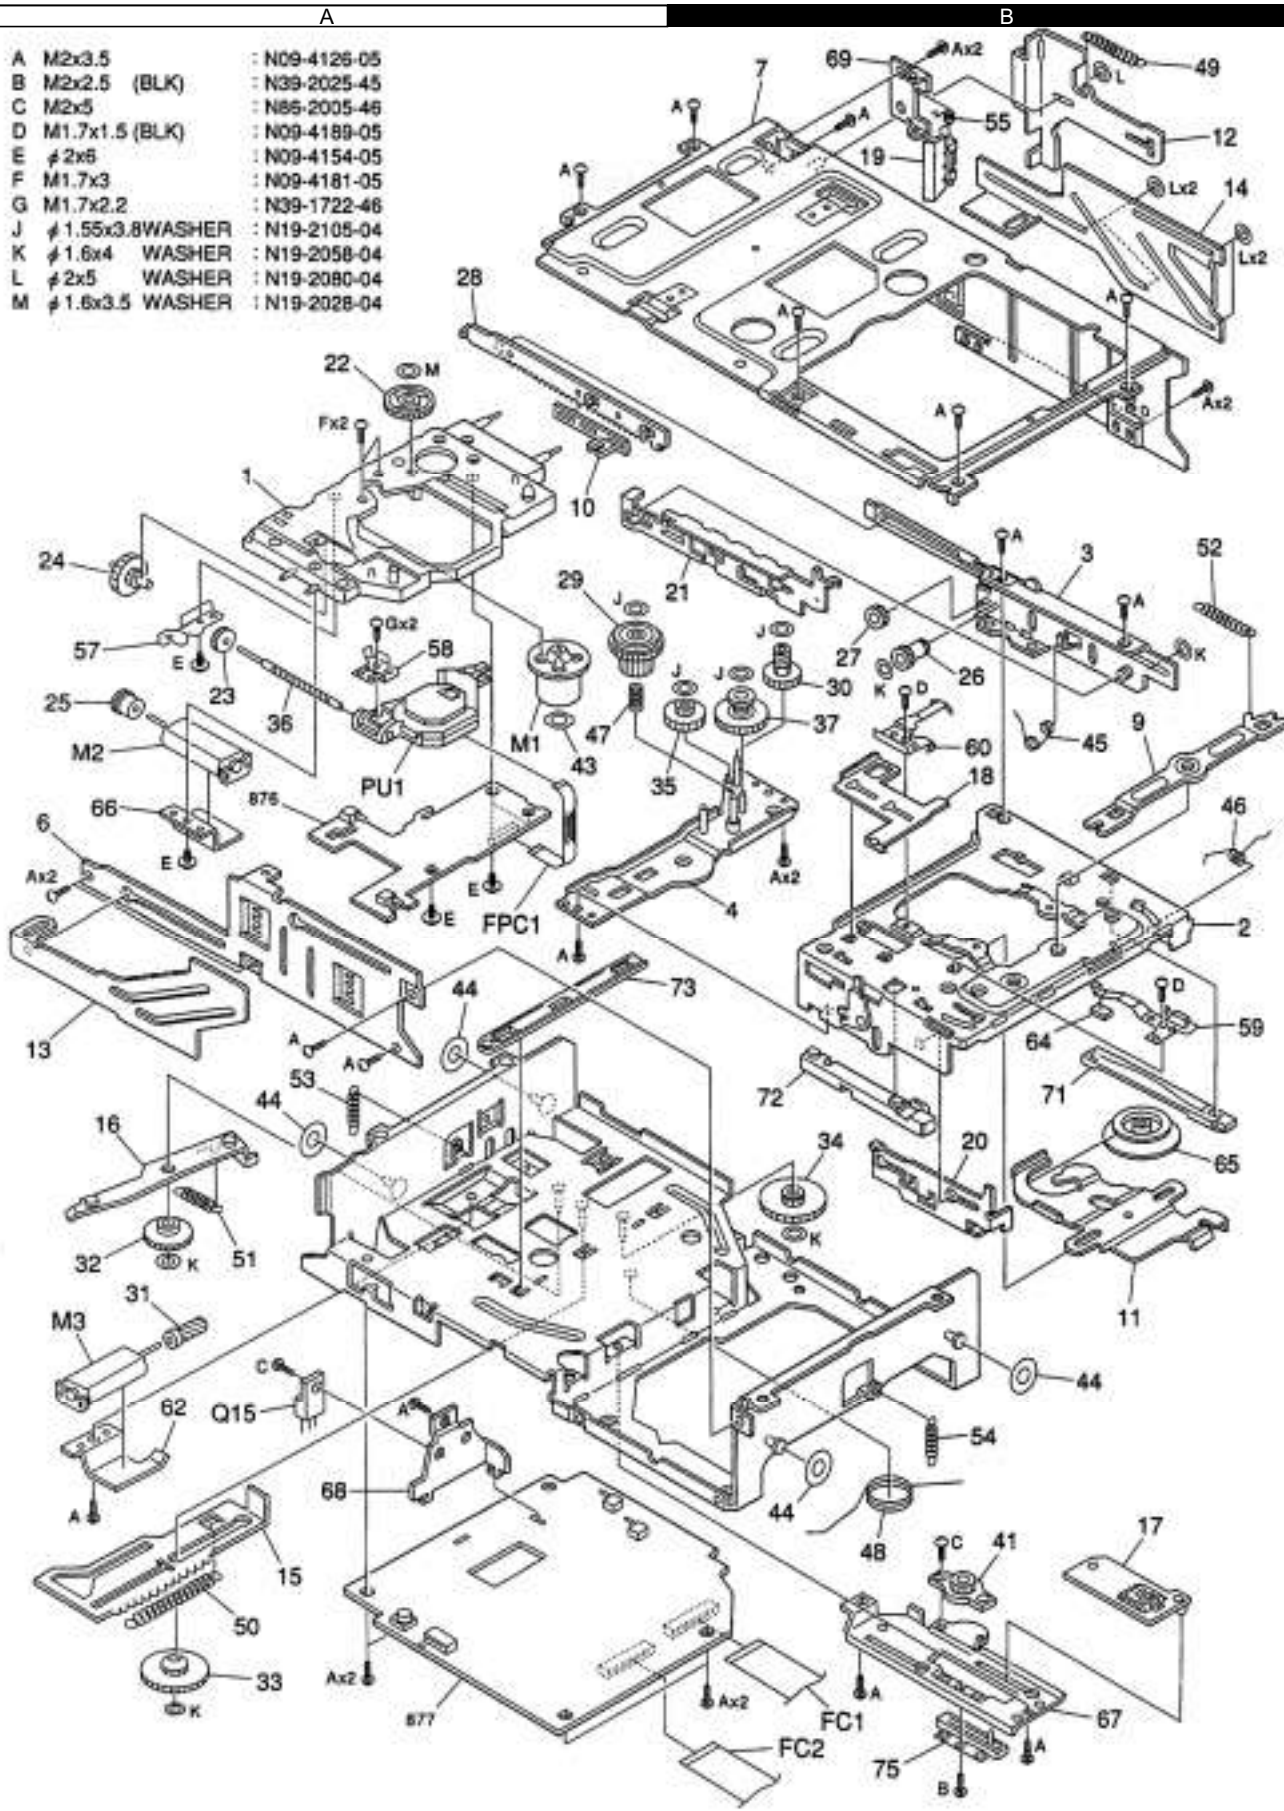

Parts with exploded numbers larger than 700 are not supplied.

KDC-C565FM/C465FM


EXPLODED VIEW (UNIT)

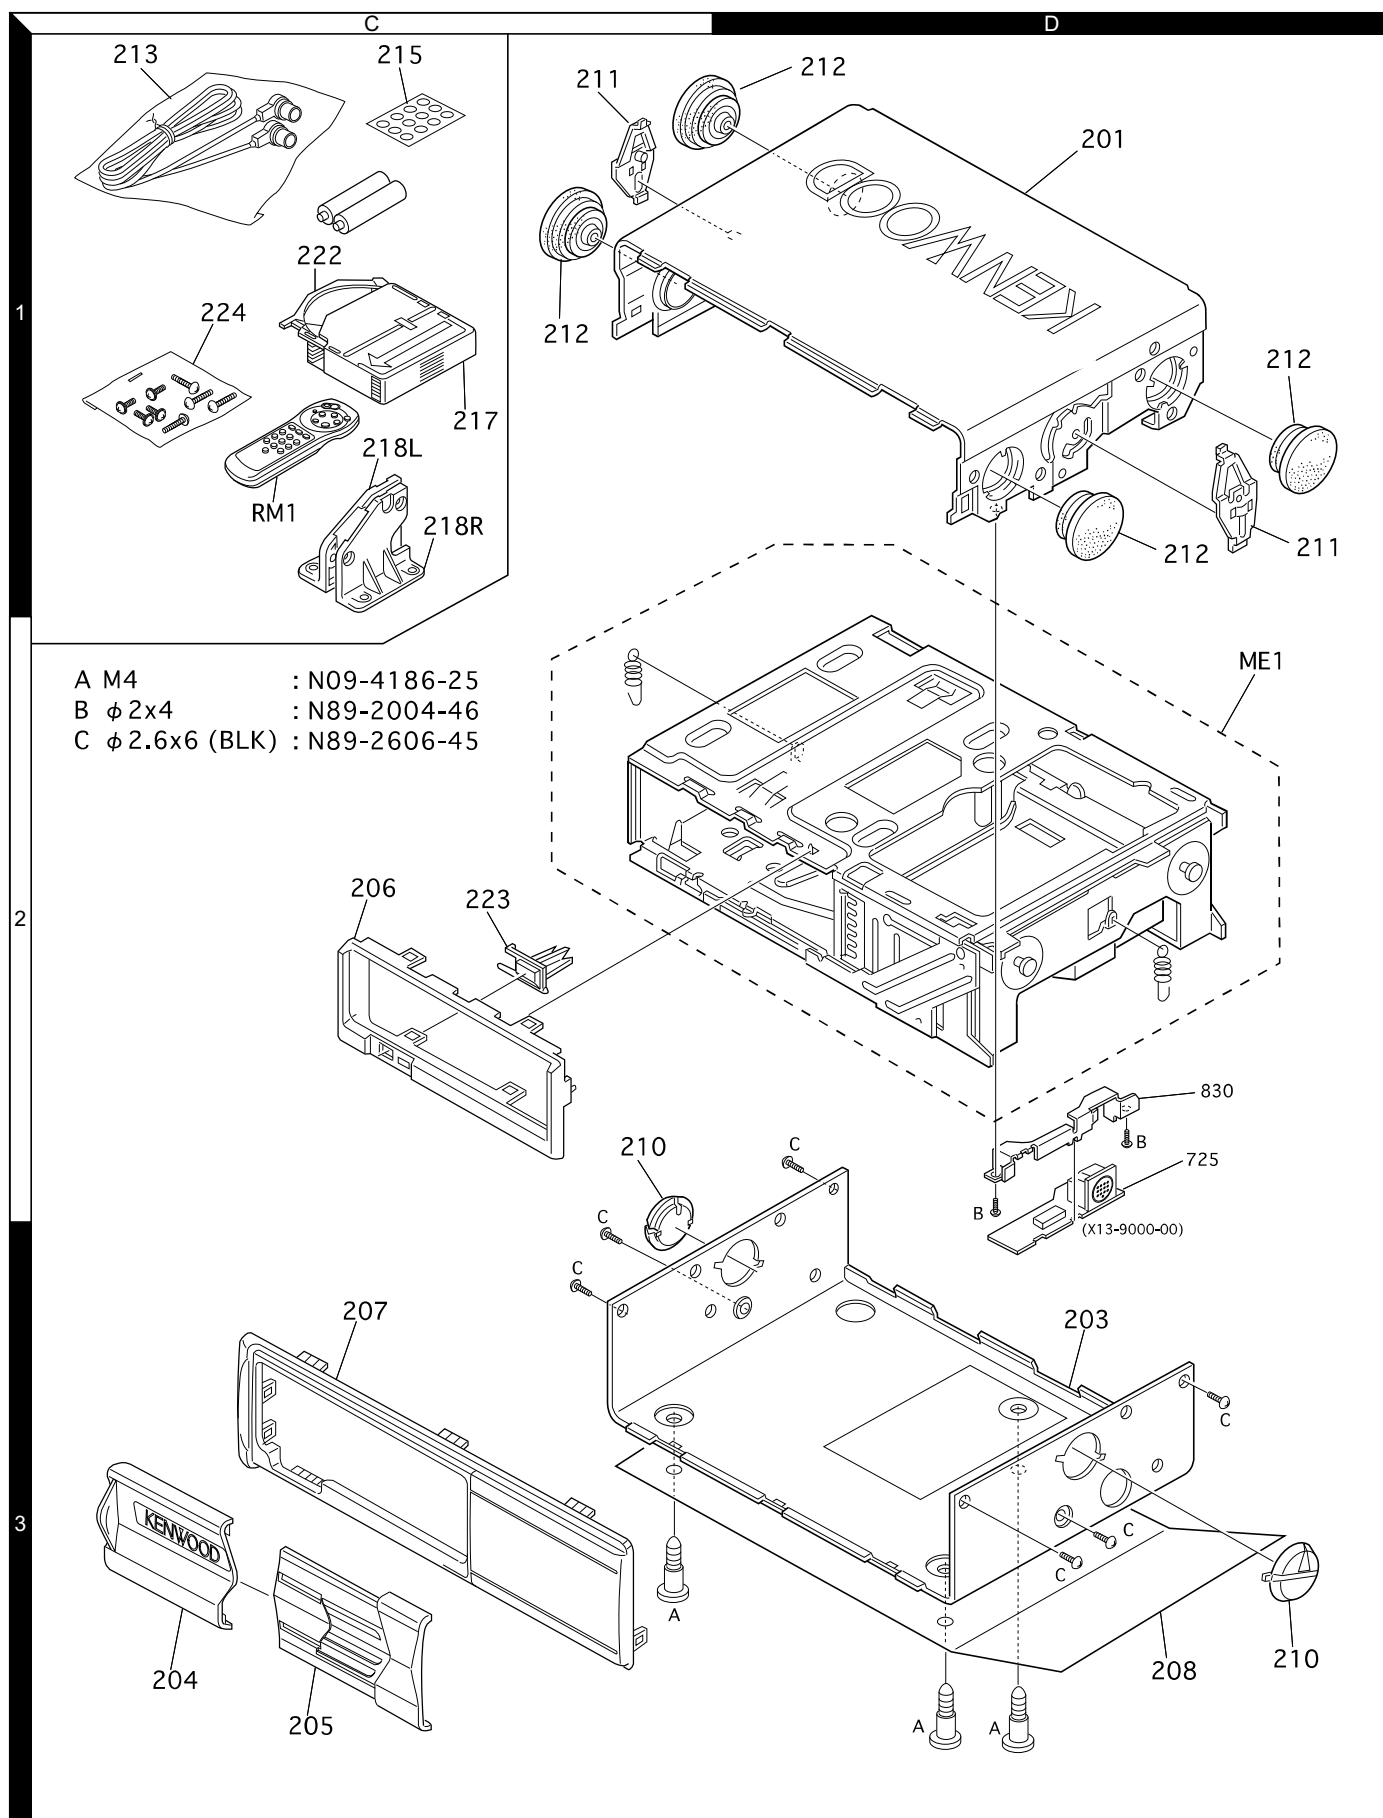

Parts with exploded numbers larger than 700 are not supplied.

KDC-C565FM/C465FM

EXPLODED VIEW (UNIT)

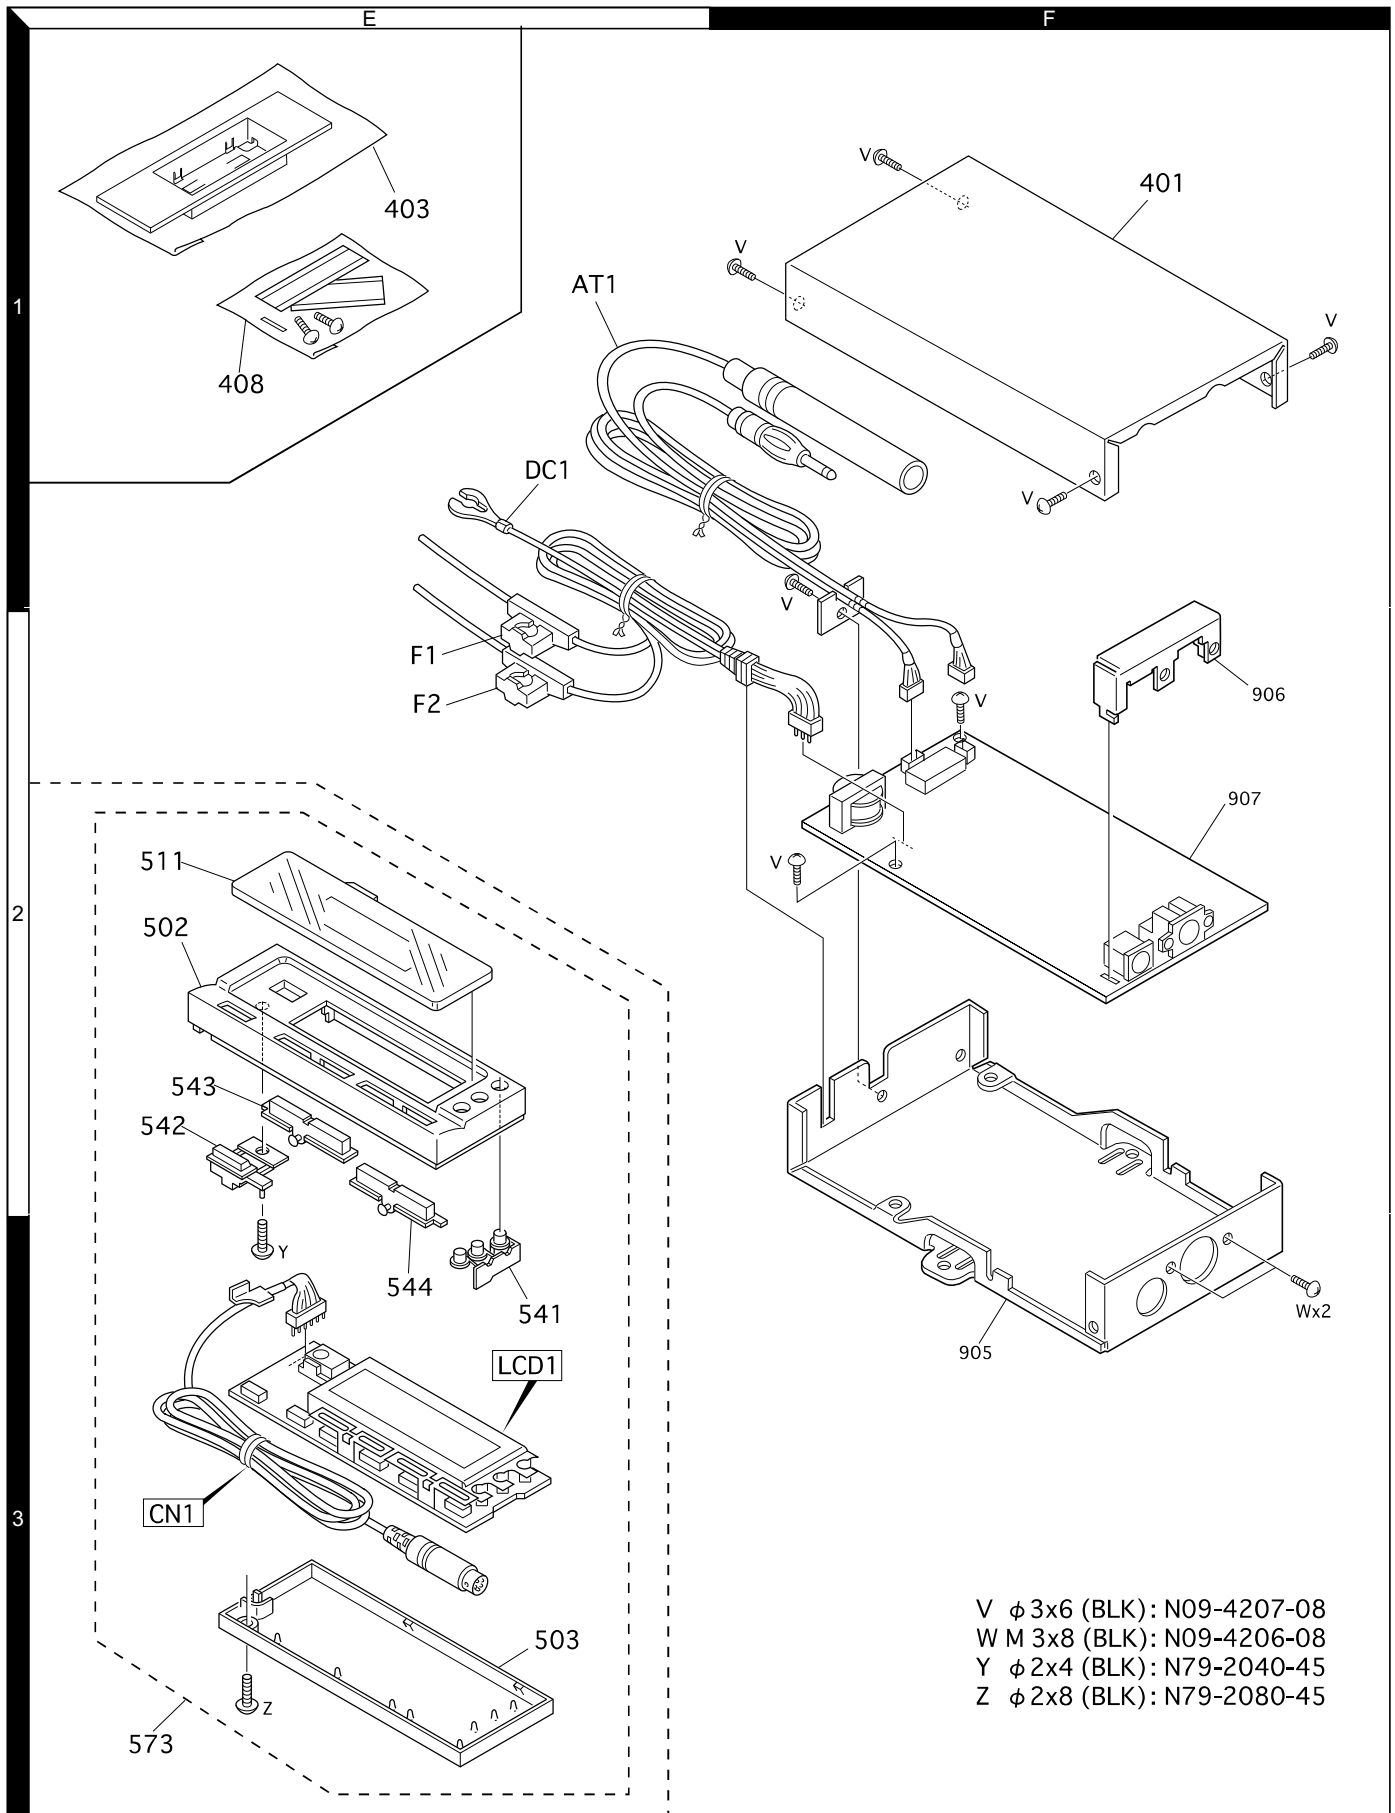

V ϕ 3x6 (BLK): N09-4207-08
W M 3x8 (BLK): N09-4206-08
Y ϕ 2x4 (BLK): N79-2040-45
Z ϕ 2x8 (BLK): N79-2080-45

KDC-C565FM/C465FM

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-C565FM/C465FM

SUB CIRCUIT UNIT(X13-9000-00)

SUB CIRCUIT UNIT(X13-9730-00)

CD PLAYER UNIT(X32-4660-02)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-C565FM/C465FM					
201	1D		A01-2654-01	METALLIC CABINET	
203	3D		A10-4367-01	CHASSIS	
204	3C		A21-3530-12	DRESSING PANEL	E
204	3C		A21-3531-02	DRESSING PANEL	K3K4
205	3C		A21-3532-12	DRESSING PANEL	E
205	3C		A21-3533-02	DRESSING PANEL	K3K4
206	2C		A22-2239-12	SUB PANEL	K3K4
206	2C		A22-2240-02	SUB PANEL	E
207	3C		A64-2004-01	PANEL	K3
207	3C		A64-2005-01	PANEL	K4
207	3C		A64-2007-01	PANEL	E
RM1	1C		A70-0896-05	REMOTE CONTROLLER ASSY	K3E
208	3D		B58-1275-04	CAUTION CARD	
-			B46-0100-50	WARRANTY CARD	
-			B58-1236-04	CAUTION CARD	
-			B58-1273-04	CAUTION CARD (P1,PRA,A6,1)	
-	*		B64-1570-00	INSTRUCTION MANUAL	K3K4
-			B64-1577-00	INSTRUCTION MANUAL G,D,I	E
-			B64-1584-00	INSTRUCTION MANUAL E,F,S,P	E
210	3D		D10-4204-03	ARM	
211	1C		D10-4033-14	LEVER	
212	1D		D39-0226-03	DAMPER	
213	1C		E30-4138-05	CORD WITH PLUG	
215	1C		F19-1303-04	BLIND PLATE	
-			H02-0813-13	INNER CARTON CASE	
-			H10-4554-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1115-04	PROTECTION BAG	
-	*		H54-1698-04	ITEM CARTON CASE	K3
-	*		H54-1699-04	ITEM CARTON CASE	K4
-			H54-1705-04	ITEM CARTON CASE	E
217	1C		J19-4687-32	HOLDER ASSY	
218L	1C		J19-4713-13	BRACKET	
218R	1C		J19-4715-13	BRACKET	
222	1C		J99-0604-21	TRAY	
223	2C		K24-1792-04	KNOB	
224	1C		N99-1645-15	SCREW SET	
A	3D		N09-4186-25	STEPPED SCREW	
B	2D		N89-2004-46	BINDING HEAD TAPTITE SCREW	
C	3D		N89-2606-45	BINDING HEAD TAPTITE SCREW	
ME1	2D	*	X92-3640-02	MECHANISM ASSY	
SUB CIRCUIT UNIT (X13-9000-00)					
CN1		*	E40-9555-05	FLAT CABLE CONNECTOR	
J1		*	E56-0825-05	CYLINDRICAL RECEPTACLE	
SUB CIRCUIT UNIT (X13-9730-00)					
CN1			E40-9487-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
S1,2			S74-0811-05	MICRO SWITCH	
CD PLAYER UNIT (X32-4660-02)					
C2			C92-0628-05	CHIP-TAN	10UF 10WV
C3			CK73FB1H682K	CHIP C	6800PF K
C4			CK73FB1H153K	CHIP C	0.015UF K
C5			CC73FCH1H820J	CHIP C	82PF J
C6			CC73FCH1H151J	CHIP C	150PF J
C7			CC73FCH1H040C	CHIP C	4.0PF C
C8			CC73FCH1H220J	CHIP C	22PF J
C9			CK73FB1A105K	CHIP C	1.0UF K
C10			CK73FB1H222K	CHIP C	2200PF K
C11			CK73FB1H472K	CHIP C	4700PF K
C12			CK73FB1H103K	CHIP C	0.010UF K
C13-16			CK73FB1C104K	CHIP C	0.10UF K
C17			C92-1463-05	TANTALUM CAPACITOR	
C19			C92-1463-05	TANTALUM CAPACITOR	
C21			CK73FB1H821K	CHIP C	820PF K
C23			CK73EB1A475K	CHIP C	4.7UF K
C24			CK73FB1H102K	CHIP C	1000PF K
C34			C92-0628-05	CHIP-TAN	10UF 10WV
C46,47			C92-1393-05	ELECTRO	10UF 16WV
C48,49			CK73FB1H821K	CHIP C	820PF K
C52			CK73EB1A475K	CHIP C	4.7UF K
C55			C92-0628-05	CHIP-TAN	10UF 10WV
C56			CK73EB1A475K	CHIP C	4.7UF K
C59			C92-1390-05	ELECTRO	100UF 6.3WV
C60			CK73EB1A475K	CHIP C	4.7UF K
C61			CK73FB1C104K	CHIP C	0.10UF K
C62			C92-1392-05	ELECTRO	100UF 10WV
C63			CK73EB1A475K	CHIP C	4.7UF K
C64			C92-1388-05	ELECTRO	470UF 16WV
C66			CK73EB1C105K	CHIP C	1.0UF K
C67-69			CK73FB1C104K	CHIP C	0.10UF K
C70			CC73FCH1H101J	CHIP C	100PF J
C71			C92-0628-05	CHIP-TAN	10UF 10WV
C72			C92-1463-05	TANTALUM CAPACITOR	
C85			C92-0628-05	CHIP-TAN	10UF 10WV
C180-184			CK73FB1C104K	CHIP C	0.10UF K
C190			CK73FB1H821K	CHIP C	820PF K
C192			CK73FB1C334K	CHIP C	0.33UF K
C193			CK73FB1A684K	CHIP C	0.68UF K
C194			CK73FB1C104K	CHIP C	0.10UF K
C200-205			CK73FB1C104K	CHIP C	0.10UF K
C206			CK73EB1H104K	CHIP C	0.10UF K
C300			C92-0712-05	TANTALUM CAPACITOR	
C301			CK73FB1C104K	CHIP C	0.10UF K
CN1			E40-9338-05	FLAT CABLE CONNECTOR	
CN2			E40-9404-05	FLAT CABLE CONNECTOR	
L1			L40-1001-78	SMALL FIXED INDUCTOR(10UH)	
L2			L92-0322-05	CHIP FERRITE	
X1			L78-0596-05	RESONATOR	
X2			L78-0568-05	RESONATOR	
CP1			R90-0720-05	MULTI-COMP	100K X4

K3: C565FM K4: C465FM E: C465FM (Europe)

⚠ indicates safety critical components.

KDC-C565FM/C465FM

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

CD PLAYER UNIT(X32-4660-02)

Ref.No.	Added	Parts No.	Description	Destination
CP3		R90-0720-05	MULTI-COMP 100K X4	
CP5,6		R90-1014-05	MULTI-COMP 100 X4	
CP7,8		R90-0720-05	MULTI-COMP 100K X4	
CP9		R90-0725-05	MULTI-COMP 1K X2	
CP12		R90-1014-05	MULTI-COMP 100 X4	
CP14,15		R90-0720-05	MULTI-COMP 100K X4	
CP16		R90-0724-05	MULTI-COMP 1K X4	
CP17		R90-0720-05	MULTI-COMP 100K X4	
R1-3		RK73FB2A163J	CHIP R 16K J 1/10W	
R4		RK73FB2A391J	CHIP R 390 J 1/10W	
R5		RK73FB2A393J	CHIP R 39K J 1/10W	
R6		RK73FB2A163J	CHIP R 16K J 1/10W	
R7		RK73FB2A393J	CHIP R 39K J 1/10W	
R8		RK73EB2B100J	CHIP R 10 J 1/8W	
R9,10		RK73FB2A105J	CHIP R 1.0M J 1/10W	
R15		RK73FB2A104J	CHIP R 100K J 1/10W	
R16		RK73FB2A152J	CHIP R 1.5K J 1/10W	
R18		RK73FB2A103J	CHIP R 10K J 1/10W	
R19		RK73FB2A333J	CHIP R 33K J 1/10W	
R20		RK73FB2A104J	CHIP R 100K J 1/10W	
R21		RK73FB2A103J	CHIP R 10K J 1/10W	
R22		RK73FB2A562J	CHIP R 5.6K J 1/10W	
R25		RK73FB2A113J	CHIP R 11K J 1/10W	
R26		RK73EB2B123J	CHIP R 12K J 1/8W	
R32		RK73FB2A104J	CHIP R 100K J 1/10W	
R50		RK73EB2B103J	CHIP R 10K J 1/8W	
R53,54		RK73FB2A681J	CHIP R 680 J 1/10W	
R57,58		RK73FB2A223J	CHIP R 22K J 1/10W	
R60,61		RK73EB2B101J	CHIP R 100 J 1/8W	
R67		RK73FB2A124J	CHIP R 120K J 1/10W	
R68		RK73EB2B124J	CHIP R 120K J 1/8W	
R69,70		RK73FB2A303J	CHIP R 30K J 1/10W	
R71		RK73FB2A912J	CHIP R 9.1K J 1/10W	
R72,73		RK73FB2A101J	CHIP R 100 J 1/10W	
R74,75		RK73FB2A223J	CHIP R 22K J 1/10W	
R76		RK73FB2A104J	CHIP R 100K J 1/10W	
R77		RK73FB2A183J	CHIP R 18K J 1/10W	
R78		RK73FB2A104J	CHIP R 100K J 1/10W	
R79		RK73FB2A332J	CHIP R 3.3K J 1/10W	
R80		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R81		RK73FB2A103J	CHIP R 10K J 1/10W	
R82		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R83		RK73EB2B102J	CHIP R 1.0K J 1/8W	
R84		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R85-87		RK73FB2A104J	CHIP R 100K J 1/10W	
R93		RK73EB2B224J	CHIP R 220K J 1/8W	
R95		RK73EB2B104J	CHIP R 100K J 1/8W	
R96		RK73FB2A104J	CHIP R 100K J 1/10W	
R97,98		RK73FB2A103J	CHIP R 10K J 1/10W	
R99		RK73FB2A104J	CHIP R 100K J 1/10W	
R100,101		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R102		RK73FB2A104J	CHIP R 100K J 1/10W	
R105,106		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R107		RK73FB2A101J	CHIP R 100 J 1/10W	
R108		RK73FB2A104J	CHIP R 100K J 1/10W	

Ref.No.	Added	Parts No.	Description	Destination
R110-113		RK73FB2A104J	CHIP R 100K J 1/10W	
R121		RK73FB2A103J	CHIP R 10K J 1/10W	
R122,123		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R124		RK73FB2A103J	CHIP R 10K J 1/10W	
R126		RK73FB2A104J	CHIP R 100K J 1/10W	
R129		RK73EB2B102J	CHIP R 1.0K J 1/8W	
R134		RK73FB2A104J	CHIP R 100K J 1/10W	
R135-138		RK73FB2A101J	CHIP R 100 J 1/10W	
R139-143		RK73FB2A104J	CHIP R 100K J 1/10W	
R148,149		RK73FB2A101J	CHIP R 100 J 1/10W	
R150		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R151		RK73FB2A471J	CHIP R 470 J 1/10W	
R152		RK73FB2A623J	CHIP R 62K J 1/10W	
R153,154		RK73FB2A472J	CHIP R 4.7K J 1/10W	
R155,156		RK73FB2A101J	CHIP R 100 J 1/10W	
R157		RK73FB2A102J	CHIP R 1.0K J 1/10W	
R161		RK73FB2A163J	CHIP R 16K J 1/10W	
R162		RK73FB2A472J	CHIP R 4.7K J 1/10W	
R180-184		RK73FB2A100J	CHIP R 10 J 1/10W	
R190		RK73FB2A472J	CHIP R 4.7K J 1/10W	
R191		RK73FB2A123J	CHIP R 12K J 1/10W	
R192,193		RK73FB2A683J	CHIP R 68K J 1/10W	
R194		RK73FB2A224J	CHIP R 220K J 1/10W	
R201		RK73FB2A104J	CHIP R 100K J 1/10W	
R202,203		RK73FB2A103J	CHIP R 10K J 1/10W	
R205,206		RK73EB2B102J	CHIP R 1.0K J 1/8W	
W5-7		R92-2052-05	CHIP R 0 J 1/10W	
W9,10		R92-2053-05	CHIP R 0 J 1/8W	
W12		R92-2053-05	CHIP R 0 J 1/8W	
W16,17		R92-2053-05	CHIP R 0 J 1/8W	
W21		R92-2052-05	CHIP R 0 J 1/10W	
S1		S68-0823-05	PUSH SWITCH	
S2		S70-0838-05	TACT SWITCH	
S3		S68-0823-05	PUSH SWITCH	
D1		DAP202K	DIODE	
D3,4		MA3056-M	ZENER DIODE	
D5		MAZ90750M	ZENER DIODE	
D7		MA3056-M	ZENER DIODE	
D8		MAZ90620M	ZENER DIODE	
D9,10		M1F60	DIODE	
D11		1SR154-400	DIODE	
D12		DA204K	DIODE	
D13		DAN202U	DIODE	
D14		MAZ90910M	ZENER DIODE	
D15		DAP202K	DIODE	
D16		DAP202U	DIODE	
D20		DAN202U	DIODE	
D21,22		DAN202K	DIODE	
D23,24		DAN202U	DIODE	
IC1		UPD63711GC	MOS-IC	
IC4		KIA78L05F	ANALOGUE IC	
IC5		LA6556	ANALOGUE IC	
IC7		UPD784214GC062	MI-COM IC	
IC8		S-24C01B	MEMORY IC	

K3: C565FM K4: C465FM E: C465FM (Europe)

⚠ indicates safety critical components.

KDC-C565FM/C465FM

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Les articles non mentionnés dans le Part No. ne sont pas fournis. Teile ohane Parts No. werden nicht geliefert.					CD PLAYER UNIT(X32-4660-02) MECHANISM ASSY(X92-3640-02)						
Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
IC9			S-80830ANNP	MOS-IC		32	3A		D13-1264-04	GEAR	
Q1			MCH6101	TRANSISTOR		33	3A		D13-1265-04	GEAR	
Q4			DTA124EK	DIGITAL TRANSISTOR		34	2B		D13-1266-04	GEAR	
Q5			DTA124EUA	DIGITAL TRANSISTOR		35	2B		D13-1338-04	GEAR	
Q6,7			DTC343TK	DIGITAL TRANSISTOR		36	2A		D19-0614-24	LEAD SCREW	
Q8			DTA124EK	DIGITAL TRANSISTOR		37	2B		D19-0615-14	CLUTCH ASSY	
Q9			2SB1202	TRANSISTOR		41	3B		D39-0225-05	DAMPER	
Q10			2SB1295	TRANSISTOR							
Q11			DTC124EK	DIGITAL TRANSISTOR		FC1	3B		E39-0172-15	FLAT CABLE	
Q12			DTA124EUA	DIGITAL TRANSISTOR		FC2	3B		E39-0173-15	FLAT CABLE	
Q13			DTC124EUA	DIGITAL TRANSISTOR		43	2A		F09-1220-04	SHEET	
Q14			DTA143EK	DIGITAL TRANSISTOR		44	3B		F09-1245-04	SHEET	
Q16			2SC2412K	TRANSISTOR		45	2B		G01-2778-04	TORSION COIL SPRING	
Q17			DTA143EK	DIGITAL TRANSISTOR		46	2B		G01-2779-04	TORSION COIL SPRING	
Q18			DTC124EK	DIGITAL TRANSISTOR		47	2A		G01-2781-04	COMPRESSION SPRING	
Q19			DTC124EUA	DIGITAL TRANSISTOR		48	3B		G01-2782-14	TORSION COIL SPRING	
Q20			DTC124EK	DIGITAL TRANSISTOR		49	1B		G01-2783-14	EXTENSION SPRING	
Q21			2SB1202	TRANSISTOR		50	3A		G01-2784-04	EXTENSION SPRING	
Q22			2SC2412K	TRANSISTOR		51	3A		G01-2785-04	EXTENSION SPRING	
Q31			DTC124EUA	DIGITAL TRANSISTOR		52	1B		G01-2789-14	EXTENSION SPRING	
TH1			NTH5G20B333K07	THERMISTOR		53	2A		G01-2810-04	EXTENSION SPRING	
MECHANISM ASSY (X92-3640-02)						54	3B		G01-2809-14	EXTENSION SPRING	
1	1A		A10-4700-13	CHASSIS ASSY		55	1B		G01-2814-24	TORSION COIL SPRING	
2	2B		A10-4231-22	CHASSIS CALKING ASSY		57	2A		G02-1235-24	FLAT SPRING	
3	1B		A10-4233-63	CHASSIS CALKING ASSY		58	2A		G02-1256-14	FLAT SPRING	
4	2B		A10-4235-84	CHASSIS CALKING ASSY		59	2B		G02-1237-13	FLAT SPRING	
5	3B		A10-4248-32	CHASSIS CALKING ASSY		60	2B		G02-1238-34	FLAT SPRING	
6	2A		A10-4247-12	CHASSIS		62	3A		G02-1240-04	FLAT SPRING	
7	1B		A10-4249-42	CHASSIS CALKING ASSY		64	2B		G10-1023-04	FELT	
C1			C90-2945-05	ELECTRO 0.047F 5.5WV		65	2B		J11-0614-03	CLAMPER	
9	2B		D10-4018-23	ARM		66	2A		J21-7695-04	MOUNTING HARDWARE	
10	1A		D10-4293-03	ARM		67	3B		J21-7696-23	MOUNTING HARDWARE	
11	3B		D10-4020-33	LEVER		68	3A		J21-7698-14	MOUNTING HARDWARE	
12	1B		D10-4036-34	ARM		69	1B		J21-7767-13	MOUNTING HARDWARE	
13	2A		D10-4037-04	SLIDER ASSY		71	2B		J90-0777-23	GUIDE	
14	1B		D10-4035-23	SLIDER		72	2B		J90-0759-03	GUIDE	
15	3A		D10-4026-03	LEVER		73	2B		J90-0760-03	RAIL	
16	2A		D10-4027-04	LEVER ASSY		FPC1	2A		J84-0099-05	FLEXIBLE PRINTED WIRING BOARD	
17	3B		D10-4029-04	SLIDER ASSY		A	1B		N09-4126-05	MACHINE SCREW (2X3.5)	
18	2B		D10-4032-13	SLIDER		B	3B		N09-4288-05	TAPTITE SCREW (2X2.5)	
19	1B		D10-4138-03	LEVER		C	3A		N86-2005-46	BINDING HEAD TAPTITE SCREW	
20	2B		D12-0618-13	CAM		D	2B		N09-4189-05	TAPTITE SCREW (1.7X1.5)	
21	1B		D12-0619-33	CAM		E	2A		N09-4154-05	TAPTITE SCREW	
22	1A		D13-1251-14	GEAR		F	1A		N09-4181-05	MACHINE SCREW (M1.7X3)	
23	2A		D13-1252-04	GEAR		G	2A		N39-1722-46	PAN HEAD MACHIN SCREW	
24	1A		D13-1253-04	GEAR		J	2B		N19-2105-14	FLAT WASHER	
25	2A		D13-1254-04	GEAR		K	2B		N19-2058-04	FLAT WASHER	
26	2B		D13-1255-24	GEAR		L	1B		N19-2080-14	FLAT WASHER	
27	2B		D13-1256-04	GEAR		M	1A		N19-2028-04	FLAT WASHER	
28	1A		D13-1257-14	GEAR ASSY		75	3B		R33-0201-05	SLIDE TYPE VARIABLE RESISTOR	
29	2A		D13-1259-04	GEAR		M1	2A		T42-0797-04	MOTOR ASSY	
30	2B		D13-1262-34	GEAR							
31	3A		D13-1263-04	WORM							

KDC-C565FM/C465FM

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

MECHANISM ASSY(X92-3640-02)

RF MODULATOR

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
M2,3 PU1	3A	2A	T42-0788-05 T25-0216-05	DC MOTOR OPTICAL PICKUP HEAD	
Q15			2SB1565(E,F)	TRANSISTOR	
RF MODULATOR					
401	1F	*	A01-2695-08	CASE	E
401	1F		A01-2723-08	CASE	K3K4
403	1E		B07-2138-08	HOLDER ASSY	
408	1E		W01-0763-08	MAGICTAPE ASSY	
425-	1E		T90-0512-05	ANTENNA ADAPTOR	E
427-	1E		T90-0521-05	ANTENNA ADAPTOR	E
C1			C90-2583-05	ELECTRO 1000UF 16WV	
C2			CK73FB1H223K	CHIP C 0.022UF K	
C3			CE04NW1H4R7M	ELECTRO 4.7UF 50WV	
C6			CE04NW1C100M	ELECTRO 10UF 16WV	
C7			CE04NW1H010M	ELECTRO 1UF 50WV	
C8			CK73FB1H102K	CHIP C 1000PF K	
C9,10			CK73FB1H103K	CHIP C 0.010UF K	
C11,12			CC73FCH1H220J	CHIP C 22PF J	
C13-17			CK73FB1H102K	CHIP C 1000PF K	
C19			CE04DW1A101M	ELECTRO 100UF 10WV	
C20			CE04DW1E221M	ELECTRO 220UF 25WV	
C24			CE04DW1C471M	ELECTRO 470UF 16WV	
C30			CE04DW1A102M	ELECTRO 1000UF 10WV	
C31			CE04DW1A221M	ELECTRO 220UF 10WV	
C32			CE04DW1A101M	ELECTRO 100UF 10WV	
C33			C90-2583-05	ELECTRO 1000UF 16WV	
C34			CE04NW1H010M	ELECTRO 1UF 50WV	
C35			CK73FB1H103K	CHIP C 0.01UF K	
C36			C90-2689-05	ELECTRO 3300UF 16WV	
C103			CK73FB1H103K	CHIP C 0.01UF K	
C104			CE04NW1C100M	ELECTRO 10UF 16WV	
C105			CE04DW1A221M	ELECTRO 220UF 10WV	
C106			CE04NW1C100M	ELECTRO 10UF 16WV	
C107			CC73FCH1H271J	CHIP C 270PF J	
C108			CK73FB1H102K	CHIP C 1000PF K	
C109,110			CK73FF1H104Z	CHIP C 0.10UF Z	
C111			CE04NW1H010M	ELECTRO 1UF 50WV	
C112			CK73FB1H332K	CHIP C 3300PF K	
C113			CC73FCH1H181J	CHIP C 180PF J	
C114			CK73FB1H153KTA	CHIP C 0.015UF K	
C115			CK73FB1H682K	CHIP C 6800PF K	
C203			CK73FB1H103K	CHIP C 0.01UF K	
C204			CE04NW1C100M	ELECTRO 10UF 16WV	
C205			CE04DW1A221M	ELECTRO 220UF 10WV	
C206			CE04NW1C100M	ELECTRO 10UF 16WV	
C207			CC73FCH1H271J	CHIP C 270PF J	
C208			CK73FB1H102K	CHIP C 1000PF K	
C209,210			CK73FF1H104Z	CHIP C 0.10UF Z	
C211			CE04NW1H010M	ELECTRO 1UF 50WV	
C212			CK73FB1H332K	CHIP C 3300PF K	
C213			CC73FCH1H181J	CHIP C 180PF J	
C214			CK73FB1H153KTA	CHIP C 0.015UF K	
C215			CK73FB1H682K	ELECTRO 6800PF 50WV	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C301			CE04NW1C100M	ELECTRO 10UF 16WV	
C302			CK73FB1H103K	CHIP C 0.010UF K	
C304			CC73FCH1H100D	CHIP C 10PF D	
C305			CK73FB1H103K	CHIP C 0.010UF K	
C306			CC73FCH1H221J	CHIP C 220PF J	
C308			CK73FB1H333K	CHIP C 0.033UF K	
C310			CC73FCH1H330J	CHIP C 33PF J	
C312			CK73FB1H103K	CHIP C 0.010UF K	
C314			CE04NW1HR22M	ELECTRO 0.22UF 50WV	
C315			CE04DW1A101M	ELECTRO 100UF 10WV	
C316			CK73FB1H103K	CHIP C 0.010UF K	
C317			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	
C318,319			CK73FB1H103K	CHIP C 0.010UF K	
C320			CC73FCH1H181J	CHIP C 180PF J	
C321			CE04NW1H010M	ELECTRO 1UF 50WV	
C322			CC73FUJ1H221J	CHIP C 220PF J	
C323			CC73FUJ1H680J	CHIP C 68PF J	
C324			CC73FUJ1H150J	CHIP C 15PF J	
C325			CK73FB1H103K	CHIP C 0.010UF K	
C326			CE04DW1E470M	ELECTRO 47UF 25WV	
C327			CC73FUJ1H150J	CHIP C 15PF J	
C328			CC73FCH1H020C	CHIP C 2.0PF C	
C329			CC73FCH1H150J	CHIP C 15PF J	
C330			CK73FB1H103K	CHIP C 0.010UF K	
C331			CC73FCH1H010C	CHIP C 1.0PF C	
C332			CC73FCH1H050C	CHIP C 5.0PF C	
C333,334			CC73FCH1H330J	CHIP C 33PF J	
C335			CE04NW1H4R7M	ELECTRO 4.7UF 50WV	
C336			CK73FB1H222K	CHIP C 2200PF K	
C338			CC73FCH1H050C	CHIP C 5PF C	
CN101	2J		E56-0811-05	CONNECTOR (8P)	
CN102	2J		E56-0805-15	CONNECTOR (13P)	
CN104,105			E40-3237-05	PIN ASSY	
VC301			C05-0513-08	TRIMMER 20P	
AT1	1E		E30-4310-08	ANTENNA CORD ASSY	
DC1	1E		E30-4733-08	DC CORD	
F1,2	2E		F06-3026-05	FUSE (3A)	
L1			L33-0934-08	CHOKING COIL	
L301			L33-1043-08	SMALL FIXED INDUCTOR (0.22uH)	
L302,303			L33-0976-08	SMALL FIXED INDUCTOR (2.2uH)	
L304			L33-1043-08	SMALL FIXED INDUCTOR (0.22uH)	
L305			L33-1042-08	SMALL FIXED INDUCTOR (0.12uH)	
X301			L77-2716-08	CRYSTAL RESONATOR (38KHz)	
X302			L77-2062-08	CRYSTAL RESONATOR (4.5MHz)	
V	1F		N09-4207-08	SCREW (3X6,Ni-B)	
W	3F		N09-4206-08	SCREW (for CN102 x2)(3X8)	
R1			RD14BB2C242J	RD 2.4K J 1/6W	
R2			RD14BB2C222J	RD 2.2K J 1/6W	
R6			RK73FB2A223J	CHIP R 22K J 1/10W	
R7			R92-2148-08	CHIP R 22 J 2W	
R8			RD14BB2C223J	RD 22K J 1/6W	
R9			RD14BB2C222J	RD 2.2K J 1/6W	
R11			RD14BB2C102J	RD 1.0K J 1/6W	

K3: C565FM K4: C465FM E: C465FM (Europe)

⚠ indicates safety critical components.

KDC-C565FM/C465FM

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description				Dest inati on
R12			RD14BB2C103J	RD	10K	J	1/6W	
R13			RD14BB2C104J	RD	100K	J	1/6W	
R14			RD14BB2C332J	RD	3.3K	J	1/6W	
R15			RD14BB2C104J	RD	100K	J	1/6W	
R16			RD14BB2C332J	RD	3.3K	J	1/6W	
R17			RD14BB2C102J	RD	1K	J	1/6W	
R18			RK73FB2A104J	CHIP R	100K	J	1/10W	
R19			RD14BB2C332J	RD	3.3K	J	1/6W	
R20			RD14BB2C102J	RD	1K	J	1/6W	
R21			RD14BB2C472J	RD	4.7K	J	1/6W	
R22,23			RD14BB2C102J	RD	1.0K	J	1/6W	
R24			RD14BB2C472J	RD	4.7K	J	1/6W	
R25,26			RD14BB2C102J	RD	1.0K	J	1/6W	
R27,28			RK73FB2A103J	CHIP R	10K	J	1/10W	
R31			RK73FB2A473J	CHIP R	47K	J	1/10W	
R33			RK73FB2A473J	CHIP R	47K	J	1/10W	
R34			RK73FB2A182J	CHIP R	1.8K	J	1/10W	
R35			RK73FB2A151J	CHIP R	150	J	1/10W	
R102			RK73FB2A152J	CHIP R	1.5K	J	1/10W	
R103			RK73FB2A682J	CHIP R	6.8K	J	1/10W	
R104			RK73FB2A103J	CHIP R	10K	J	1/10W	
R105-108			R92-0363-05	CHIP R	10K	F	1/10W	
R109			RK73FB2A182J	CHIP R	1.8K	J	1/10W	
R110			RK73FB2A391J	CHIP R	390	J	1/10W	
R111			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R112			RK73FB2A753J	CHIP R	75K	J	1/10W	
R114-116			RK73FB2A682J	CHIP R	6.8K	J	1/10W	
R202			RK73FB2A152J	CHIP R	1.5K	J	1/10W	
R203			RK73FB2A682J	CHIP R	6.8K	J	1/10W	
R204			RK73FB2A103J	CHIP R	10K	J	1/10W	
R205-208			R92-0363-05	CHIP R	10K	D	1/10W	
R209			RK73FB2A182J	CHIP R	1.0K	J	1/10W	
R210			RK73FB2A391J	CHIP R	390	J	1/10W	
R212			RK73FB2A753J	CHIP R	75K	J	1/10W	
R214-216			RK73FB2A682J	CHIP R	6.8K	J	1/10W	
R301			RK73FB2A154J	CHIP R	150K	J	1/10W	
R302			RK73FB2A123J	CHIP R	12K	J	1/10W	
R306			RK73FB2A103J	CHIP R	10K	J	1/10W	
R307			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R308			RK73FB2A154J	CHIP R	150K	J	1/10W	
R314			RK73FB2A473J	CHIP R	47K	J	1/10W	
R316			RK73FB2A122J	CHIP R	1.2K	J	1/10W	
R317			RK73FB2A242J	CHIP R	2.4K	J	1/10W	
R318			RK73FB2A332J	CHIP R	2.7K	J	1/10W	
R319			RD14BB2C122J	RD	1.2K	J	1/6W	
R320			RK73FB2A103J	CHIP R	10K	J	1/10W	
R322			RD14BB2C472J	RD	4.7K	J	1/6W	
R323			RK73FB2A471J	CHIP R	470	J	1/10W	
R325,326			RK73FB2A223J	CHIP R	22K	J	1/10W	
R327			RK73FB2A473J	CHIP R	47K	J	1/10W	
R328			RK73FB2A271J	CHIP R	270	J	1/10W	
R329			RK73FB2A470J	CHIP R	47	J	1/10W	
R330			RK73FB2A331J	CHIP R	330	J	1/10W	
R331			RK73FB2A473J	CHIP R	47K	J	1/10W	
R332			RK73FB2A101J	CHIP R	100	J	1/10W	

RF MODULATOR											DISPLAY UNIT	
Ref.No.	A d d	N e w	Parts No.	Description							Dest inati on	
R333			RK73FB2A470J	CHIP R	47	J	1/10W					
R334			RK73FB2A472J	CHIP R	4.7K	J	1/10W					
R335			RK73FB2A8R2J	CHIP R	8.2	J	1/10W					
R337,338			RK73FB2A472J	CHIP R	4.7K	J	1/10W					
R339,340			RK73FB2A391J	CHIP R	390	J	1/10W					
R343			RK73FB2A101J	CHIP R	100	J	1/10W					
R346			RK73FB2A472J	CHIP R	4.7K	J	1/10W					
R348			RK73FB2A224J	CHIP R	220K	J	1/10W					
VR301			R32-0208-08	TRIMING POT. 33K(B)								
VR303			R32-0207-08	TRIMING POT. 10K(B)								
RL1			S76-0802-08	MAGNET RELAY								
D1			DSK10C-ET1	DIODE								
D2			DSK10C-BT	DIODE								
D5			DSK10C-ET1	DIODE								
D8-9			1SS131	DIODE								
D12,13			1SS131	DIODE								
D14			DSK10C-ET1	DIODE								
D15			DSK10C-BT	DIODE								
D16			1SS131	DIODE								
D101			DA204K	DIODE								
D201			DA204K	DIODE								
D302			DA204K	DIODE								
IC1			UPC7805AHF	IC(VOLTAGE REGULATOR/ +5V)								
IC2			LC72329-9274	IC (MICRO COMPUTER)								
IC4			NJM78L05UA	IC(VOLTAGE REGULATOR/ +5V)								
IC101			NJM2060M	IC(OP AMP X4)								
IC102			NJM4565MD	IC(OP AMP X2)								
IC301			BA1405F	IC (MPX)								
IC302			NJM4565MD	IC(OP AMP X2)								
Q1			DTC124EK	DIGITAL TRANSISTOR								
Q2			2SA1782(T,U)	TRANSISTOR								
Q3			DTC124EK	DIGITAL TRANSISTOR								
Q4,5			DTC143TK	DIGITAL TRANSISTOR								
Q6			DTA124EK	DIGITAL TRANSISTOR								
Q8			DTC143TK	DIGITAL TRANSISTOR								
Q9			2SC4640T/U	TRANSISTOR								
Q101			2SK2158	FET								
VD301			HVU306A-3	VARIABLE DIODE								
ZD1-7			MTZ6.2J(B)	ZENER DIODE								
Q201			2SK2158	FET								
Q303			2SA1162(GR)	TRANSISTOR								
Q304,305			2SK2158	FET								
Q306			2SK508L	FET								
Q307			2SC2714(Y)	TRANSISTOR								
Q308-310			2SK2158	FET								
DISPLAY UNIT												
502	2E		A02-1460-08	FRONT CASE								
503	3E		A02-1446-08	REAR CASE								
511	2E		B10-3055-08	FRONT GLASS ASSY							K3	
511	2E		B10-3056-08	FRONT GLASS ASSY							K4	
LCD1	3E		B38-0643-08	LCD								
LED1-18			B30-1459-08	LED								

K3: C565FM K4: C465FM E: C465FM (Europe)

 indicates safety critical components.

KDC-C565FM/C465FM

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

DISPLAY UNIT

Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
C1	3E		C92-0047-05	CHIP-ELE	47UF	6.3WV	K3E K4
C2			CK73GB1H681K	CHIP C	680PF	K	
C3			C92-0037-05	CHIP-ELE	10UF	16WV	
C4,5			CK73FB1H223KTA	CHIP C	0.022UF	K	
CN1			E30-4309-08	DIN CORD ASSY (8P)			
541	3E		K25-0713-08	KNOB (REP, RDM, PLAY/PAUSE)			
542	2E		K29-5576-08	KNOB ASSY (PWR, RESET)			
543	2E		K29-5585-08	KNOB	(TRACK)		
544	3E		K29-5586-08	KNOB	(DISC)		
Y	3E		N79-2040-45	SCREW (POWER-KEY x1)			
Z	3E		N79-2080-45	SCREW (REAR CASE x1)			
R1-3			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R4			RK73GB1J101J	CHIP R	100	J 1/16W	
R5			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R6			RK73GB1J513J	CHIP R	51K	J 1/16W	
R7-15			RK73FB2A470J	CHIP R	47	J 1/10W	
R16,17			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
SW1-9			S70-0828-08	TACT SWITCH			
573	3E		T95-0247-08	DISPLAY UNIT ASSY			
573	3E		T95-0248-08	DISPLAY UNIT ASSY			
D1-5			DA204K	DIODE			
IC1			LC75852W	IC (LCD DRIVER)			
IC2			PNA4602M	IC (REMOTE SENSOR)			
Q1			DTC144EK	DIGITAL TRANSISTOR			
Q2			DTB123YK	DIGITAL TRANSISTOR			
Q3			DTA144EK	DIGITAL TRANSISTOR			
Q4			DTC144EK	DIGITAL TRANSISTOR			
Q5			DTA144EK	DIGITAL TRANSISTOR			

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on

K3: C565FM **K4:** C465FM **E:** C465FM (Europe)

 indicates safety critical components.