

This service manual should be used together with the manual(s) listed below.
For the parts numbers, adjustments, etc.
which are not shown in this manual,
refer to the following manual(s).

Model No.	Order No.	Mech.Module	Remarks
FX-MG8327ZT/UC	CRT3022		
CX-951	CRT2872	G2	CD Mech.Module: Circuit Description,Mech.Description,Disassembly
CX-1011	CRT2406	3L	Cassette Mech.Module:Mech.Description,Disassembly

EXPLODED VIEWS AND PARTS LIST EXTERIOR(Page 8)

● EXTERIOR SECTION PARTS LIST


* : Non spare part

Mark	No.	Description	FX-MG8327ZT/UC	FX-MG8847ZT/X1H/UC	FX-MG8947ZT/X1H/UC
	19	Main Unit	CWM8879	CWM9536	CWM9535
	37	Keyboard Unit	CWS1366	*CWS1406	*CWS1406
	53	Grille Assy	CXC2174	CXC3825	CXC3826
	70	Button(RDS,TRAF)	CAC7612	CAC8597	CAC8597
	71	Button(TYPE)	CAC7615	CAC8598	CAC8598
	73	Door	CAT2405	CAT2652	CAT2653
	94	Knob Unit	CXB9458	CXC2445	CXC2445
	111	Grille Unit	CXB9134	CXB9134	CXB9135

ELECTRICAL PARTS LIST(Page 57)

Main Unit

Symbol and Description	FX-MG8327ZT/UC	FX-MG8847ZT/X1H/UC	FX-MG8947ZT/X1H/UC
IC601 IC	PD5788A	PD5955A	PD5955A
D501 Diode	1SV241	CPH5512	CPH5512
D502 Diode	1SV241	CPH5512	CPH5512
L251 Inductor	LCTA101J2520	CTF1529	CTF1529
L510 Inductor	LCTA561J4532	LCTAW561J4532	LCTAW561J4532
L511 Inductor	LCTA4R7J2520	LCTAW4R7J2520	LCTAW4R7J2520
L512 Inductor	LCTA1R0J2520	LCTAW1R0J2520	LCTAW1R0J2520
L513 Inductor	LCTA1R0J2520	LCTAW1R0J2520	LCTAW1R0J2520
L514 Inductor	LCTA1R0J2520	LCTAW1R0J2520	LCTAW1R0J2520
L561 Inductor	LCTA4R7J2520	LCTAW4R7J2520	LCTAW4R7J2520
L601 Inductor	LCTA100J3225	CTF1532	CTF1532
R2	Not used	RS1/16S0R0J	Not used
R3	Not used	RS1/16S0R0J	Not used
R417	RS1/16S913J	RS1/16S913J	RS1/16S623J
R418	RS1/16S913J	RS1/16S913J	RS1/16S623J
R610	RS1/16S0R0J	RS1/16S100J	RS1/16S100J
R611	RS1/16S0R0J	RS1/16S100J	RS1/16S100J
R613	RS1/16S0R0J	RS1/16S100J	RS1/16S100J
R637	RS1/16S102J	RS1/16S152J	RS1/16S152J
R638	RS1/16S102J	RS1/16S152J	RS1/16S152J
R693	RS1/16S0R0J	RS1/16S100J	RS1/16S100J
C411	CKSRYB183K50	CKSRYB183K50	CKSRYB104K16
C412	CKSRYB183K50	CKSRYB183K50	CKSRYB104K16
C703	CCSRCH221J50	CCSRCH181J50	CCSRCH181J50
C704	CCSRCH221J50	CCSRCH181J50	CCSRCH181J50
C804 2200μF/16V	CCH1186	CEAT222M16	CEAT222M16
C872 2200μF/16V	CCH1186	CEAT222M16	CEAT222M16

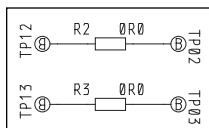

Keyboard Unit

Symbol and Description	FX-MG8327ZT/UC	FX-MG8847ZT/X1H/UC	FX-MG8947ZT/X1H/UC
VR901 Encoder(POWER•VOL)	CSD1088	OSD1110	OSD1110
VR902 Encoder(AUDIO CONTROL•TUNE)	CSD1087	OSD1109	OSD1109