



A

B

- A : N09-6108-15
 B : N09-6426-15
 C : N09-6735-05
 D : N09-6737-15
 E : N09-6738-15
 F : N19-2335-14
 G : N35-2003-48
 H : N39-1720-48

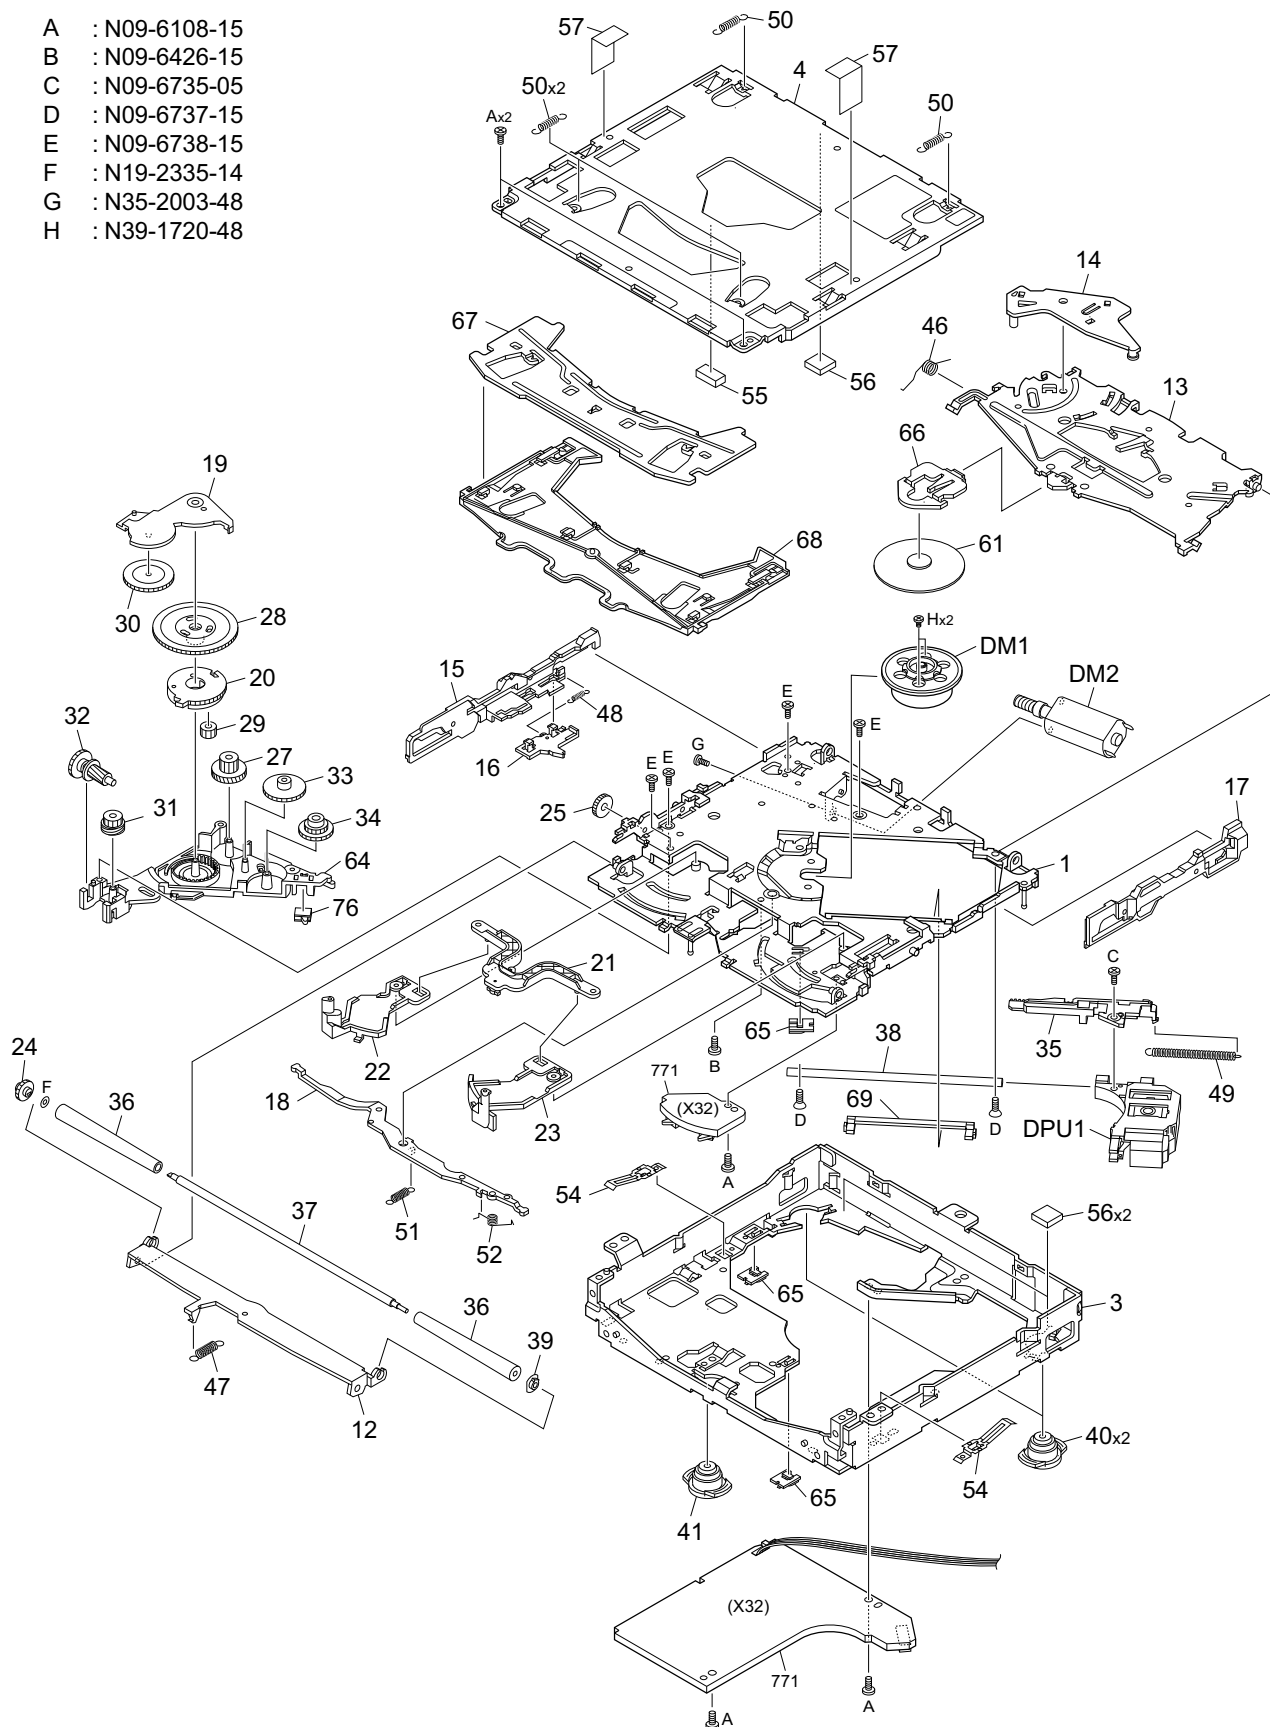

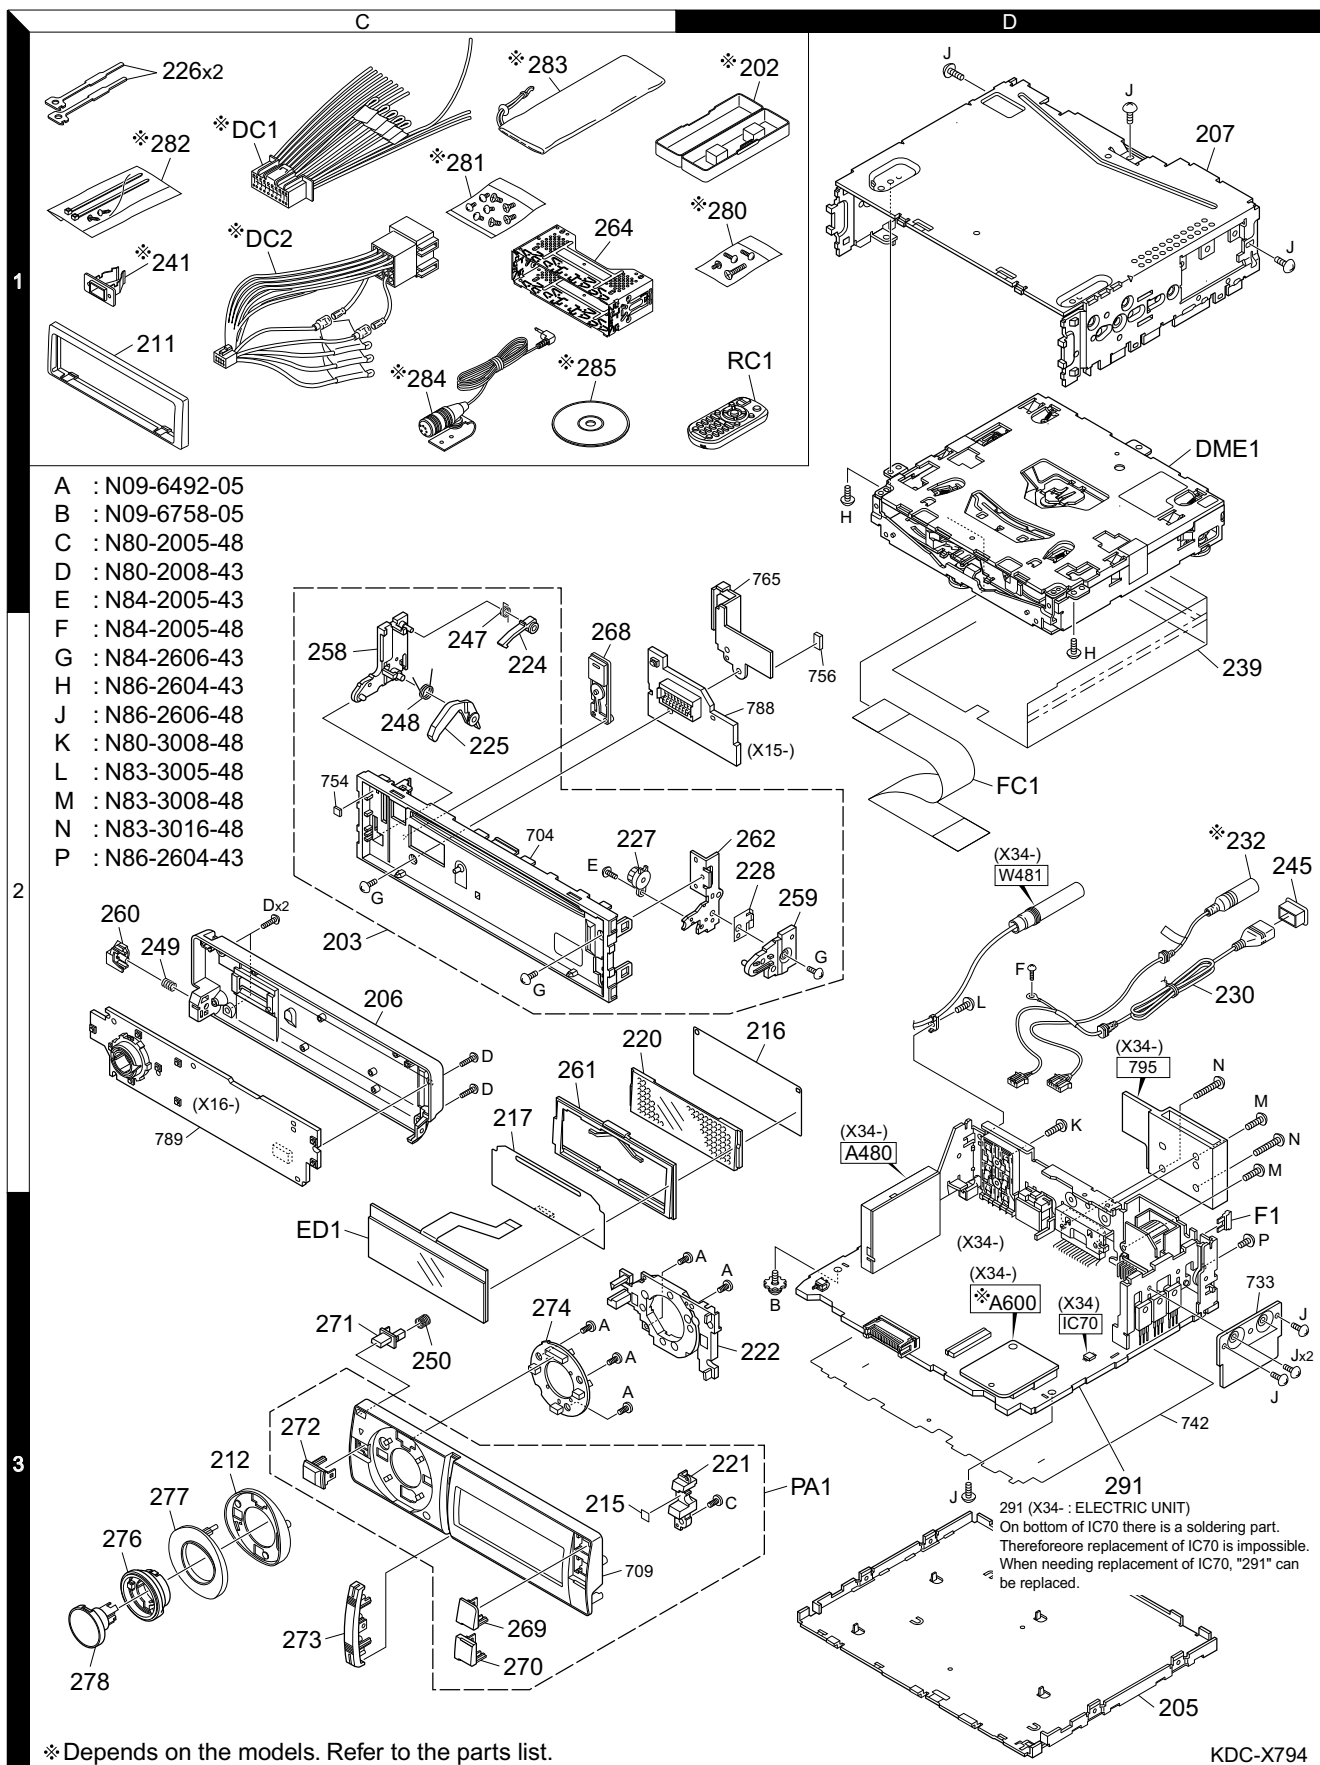

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref.No.	A d d w	N e w	Parts No.	Description	Dest inati on
KDC-6047U/BT60U/BT945U/MP745U/X7016/X794/X8016BT/X994					
202	1D	*	A02-2763-03	PLASTIC CABINET ASSY	M1M2M3
202	1D	*	A02-2763-03	PLASTIC CABINET ASSY	M4
203	2C		A22-3218-02	SUB PANEL ASSY	
205	3D	*	A40-1365-12	BOTTOM PLATE	
206	2C	*	A46-1905-01	REAR COVER	
207	1D		A52-1111-01	TOP COVER	
PA1	3D	*	A64-5041-11	PANEL ASSY	K
PA1	3D	*	A64-5042-11	PANEL ASSY	K1
PA1	3D	*	A64-5043-11	PANEL ASSY	K2
PA1	3D	*	A64-5044-11	PANEL ASSY	K3
PA1	3D	*	A64-5045-11	PANEL ASSY	E1
PA1	3D	*	A64-5046-11	PANEL ASSY	E2
PA1	3D	*	A64-5047-21	PANEL ASSY	M1M2
PA1	3D	*	A64-5049-11	PANEL ASSY	M3M4
RC1	1D		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	
-		*	B59-2009-00	SUB-INST. MANUAL (ENG.FRE.SPA.)	KK1K2
-		*	B59-2009-00	SUB-INST. MANUAL (ENG.FRE.SPA.)	K3
-		*	B59-2010-00	SUB-INST. MANUAL (ENG.FRE.)	E1E2
-		*	B59-2010-00	SUB-INST. MANUAL (GER.DUT.)	E1E2
-		*	B59-2011-00	SUB-INST. MANUAL (ITA.SPA.POR.)	E1E2
-		*	B59-2011-00	SUB-INST. MANUAL (RUS.URK.)	E1E2
-		*	B59-2012-00	SUB-INST. MANUAL (ENGLISH)	M1M2M3
-		*	B59-2012-00	SUB-INST. MANUAL (S-CHI.ARA.)	M4
-		*	B64-4520-00	INST. MANUAL (ENGLISH)	M1M2M3
-		*	B64-4520-00	INST. MANUAL (ENGLISH)	M4
-		*	B64-4521-00	INST. MANUAL (S-CHINESE)	M1M3
-		*	B64-4522-00	INST. MANUAL (ARABIC)	M2M4
211	1C		B07-3235-03	ESCUTCHEON	KK2M1
211	1C		B07-3235-03	ESCUTCHEON	M2
211	1C		B07-3304-03	ESCUTCHEON	E2M3M4
211	1C		B07-3304-03	ESCUTCHEON	K1K3E1
212	3C	*	B07-3338-03	ESCUTCHEON (MENU)	
215	3C	*	B11-2016-04	REFLECTION SHEET	
216	2D		B11-2027-04	REFLECTION SHEET	
217	2C		B11-2028-04	OPTICAL DIFFUSER	
220	2C		B19-2535-03	LIGHTING BOARD	
221	3D	*	B19-2562-03	LIGHTING BOARD (R)	
222	3D	*	B19-2563-02	LIGHTING BOARD (L)	
ED1	3C	*	B38-1224-05	LCD (240 X 64 DOTS)	
224	2C		D10-4730-03	LEVER	
225	2C		D10-4731-03	LEVER	
226	1C		D10-7106-04	LEVER (ACCESSORY)	
227	2C		D39-0255-05	DAMPER	
228	2D		E29-2136-04	LEAD PLATE	
230	2D	*	E30-6943-05	CORD WITH CONNECTOR (USB)	
232	2D		E30-6907-05	CORD WITH CONNECTOR (MIC)	KK1E1
232	2D		E30-6907-05	CORD WITH CONNECTOR (MIC)	M1M2
DC1	1C	*	E30-6939-05	DC CORD	KK1K2
DC1	1C	*	E30-6939-05	DC CORD	K3M1M2
DC1	1C	*	E30-6939-05	DC CORD	M3M4
DC2	1C	*	E30-6940-05	DC CORD	E1E2
FC1	2D		E39-1104-05	FLAT CABLE	
239	2D		F11-1874-03	SHIELDING COVER	
241	1C		F19-1475-04	COVER	KK2
245	2D		F29-0637-04	INSULATING COVER	
F1	3D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
247	2C		G01-3171-04	TORSION COIL SPRING	
248	2C		G01-3172-04	TORSION COIL SPRING	
249	2C		G01-3173-04	COMPRESSION SPRING	
250	3C		G01-3203-04	COMPRESSION SPRING	
-		*	H54-4783-03	ITEM CARTON CASE	K
-		*	H54-4784-03	ITEM CARTON CASE	K1
-		*	H54-4785-03	ITEM CARTON CASE	K2
-		*	H54-4786-03	ITEM CARTON CASE	K3
-		*	H54-4787-03	ITEM CARTON CASE	E1
-		*	H54-4788-03	ITEM CARTON CASE	E2
-		*	H54-4789-03	ITEM CARTON CASE	M1
-		*	H54-4790-03	ITEM CARTON CASE	M2
-		*	H54-4791-03	ITEM CARTON CASE	M3
-		*	H54-4792-03	ITEM CARTON CASE	M4
258	2C		J19-5203-03	HOLDER (LEFT)	
259	2D		J19-5204-03	HOLDER (RIGHT)	
260	2C		J19-5205-03	HOLDER (REAR COVER)	
261	2C		J19-7252-03	HOLDER	
262	2D		J21-9977-03	MOUNTING HARDWARE (DUMPER BASE)	
264	1C		J22-0789-03	MOUNTING HARDWARE ASSY	
268	2C		K24-4995-03	PUSH KNOB (EJECT)	
269	3C	*	K24-5057-13	PUSH KNOB (SEARCH MODE)	KK2M1
269	3C	*	K24-5057-13	PUSH KNOB (SEARCH MODE)	M2
269	3C	*	K24-5058-13	PUSH KNOB (SEARCH MODE)	E2M3M
269	3C	*	K24-5058-13	PUSH KNOB (SEARCH MODE)	K1K3E
270	3C	*	K24-5059-03	PUSH KNOB (FAV)	KK2M1
270	3C	*	K24-5059-03	PUSH KNOB (FAV)	M2
270	3C	*	K24-5060-03	PUSH KNOB (FAV)	E2M3M
270	3C	*	K24-5060-03	PUSH KNOB (FAV)	K1K3E
271	3C	*	K24-5062-04	PUSH KNOB (RELEASE)	
272	3C	*	K24-5068-03	PUSH KNOB (SRC)	
273	3C	*	K25-1988-03	PUSH KNOB (SPEED SEARCH)	
274	3C	*	K28-0403-13	KNOB BASE (MENU)	
276	3C	*	K28-0407-14	KNOB ASSY (VOL)	
277	3C	*	K28-0418-03	KEY TOP (MENU)	
278	3C	*	K28-0422-04	KNOB ASSY (KENWOOD)	
280	1D		N99-1730-35	SCREW SET	KK1K2
280	1D		N99-1730-35	SCREW SET	K3M1M
280	1D		N99-1730-35	SCREW SET	M3M4
281	1C		N99-1757-15	SCREW SET	KK1K2
281	1C		N99-1757-15	SCREW SET	K3M1M
281	1C		N99-1757-15	SCREW SET	M3M4
282	1C		N99-1790-05	SCREW SET	KK2
A	3C		N09-6492-05	TAPTITE SCREW	
B	3D		N09-6758-05	TAPTITE SCREW	
C	3C		N80-2005-48	PAN HEAD TAPTITE SCREW	
D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2005-48	PAN HEAD TAPTITE SCREW	

K: KDC-X994 **K1:** KDC-BT945U **K2:** KDC-X794 **K3:** KDC-MP745U **M1:** KDC-X8016BT

M2: KDC-X8016BTL **M3:** KDC-X7016 **M4:** KDC-X7016L **E1:** KDC-BT60U **E1:** KDC-6047U

▲ indicates safety critical components.

PARTS LIST

Ref.No.	A d d w	N e w	Parts No.	Description	Dest inati on
G	2C		N84-2606-43	PAN HEAD TAPTITE SCREW	
H	1D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
J	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
283	1C		W01-1664-05	CARRYING CASE (EXCELON)	KK2
283	1C		W01-1710-05	CARRYING CASE	E2
283	1C		W01-1710-05	CARRYING CASE	K1K3E1
284	1C		W01-1768-05	MICROPHONE	KK1E1
284	1C		W01-1768-05	MICROPHONE	M1M2
285	1C	*	W01-1778-05	COMPACT DISC (INST. MANUAL)	KK1K2
285	1C	*	W01-1778-05	COMPACT DISC (INST. MANUAL)	K3E1E2
291	3D	*	X34-6640-10	ELECTRIC UNIT (For IC70)	K
291	3D	*	X34-6640-11	ELECTRIC UNIT (For IC70)	K1
291	3D	*	X34-6640-12	ELECTRIC UNIT (For IC70)	K2
291	3D	*	X34-6640-13	ELECTRIC UNIT (For IC70)	K3
291	3D	*	X34-6640-21	ELECTRIC UNIT (For IC70)	M1
291	3D	*	X34-6640-22	ELECTRIC UNIT (For IC70)	M2
291	3D	*	X34-6640-23	ELECTRIC UNIT (For IC70)	M3
291	3D	*	X34-6640-24	ELECTRIC UNIT (For IC70)	M4
291	3D	*	X34-6642-71	ELECTRIC UNIT (For IC70)	E1
291	3D	*	X34-6642-72	ELECTRIC UNIT (For IC70)	E2
DME1	1D		X92-6360-04	MECHANISM ASSY (DXM-9B34W)	
SWITCH UNIT (X16-68xx-xx)					
D1			B30-1779-05	LED (1608,SR)	
CN1			E41-2984-05	PIN ASSY	
J1			E58-1008-05	RECTANGULAR RECEPTACLE	
R1			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R2			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R3 ,4			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R5 -8			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R9 ,10			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R11			RK73FB2B331J	CHIP R 330 J 1/8W	
S1			S70-0901-05	TACT SWITCH	
S2			S70-0948-05	TACT SWITCH	
D1			B30-1566-05	LED (1608,RED)	
D3 -6			B30-1798-05	LED(RGB MPX A,B,C,D)	KE1E2
D3 -6			B30-1798-05	LED (RGB MPX A,B,C,D)	M1M2M3
D3 -6			B30-1798-05	LED (RGB MPX A,B,C,D)	M4
D21 ,22			B30-1784-05	LED (RGB SIDE)	KE1E2
D21 ,22			B30-1784-05	LED (RGB SIDE)	M1M2M3
D21 ,22			B30-1784-05	LED (RGB SIDE)	M4
D501-508			B30-1788-05	LED (1608,WHITE)	K1K2K3
D521,522		*	B30-3222-05	LED	K1K2K3
C31			CK73GB1A105K	CHIP C 1.0UF K	
C59			CK73GB1H103K	CHIP C 0.010UF K	
C60			CK73GB1H104K	CHIP C 0.10UF K	
C61			CK73GB0J475K	CHIP C 4.7UF K	
C63			CK73GB0J475K	CHIP C 4.7UF K	
C65 ,66			CK73GB1A105K	CHIP C 1.0UF K	
C110			CK73GB1H103K	CHIP C 0.010UF K	
C114			CK73GB1H103K	CHIP C 0.010UF K	

Ref.No.	A d d w	N e w	Parts No.	Description	Dest inati on
C160			CK73GB1H103K	CHIP C 0.010UF K	
C197			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-3094-05	FLAT CABLE CONNECTOR	
J1			E59-0850-05	RECTANGULAR PLUG	
X1			L78-1409-05	RESONATOR (8MHZ)	
CP51			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP101			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP102			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP103			RK74HB1J332J	CHIP-COM 3.3K J 1/16W	
CP104			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP105			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP106			RK74HB1J332J	CHIP-COM 3.3K J 1/16W	
R1			RK73GB2A331J	CHIP R 330 J 1/10W	
R2			RK73EB2E151J	CHIP R 150 J 1/4W	KE1E2
R2			RK73EB2E151J	CHIP R 150 J 1/4W	M1M2M3
R2			RK73EB2E151J	CHIP R 150 J 1/4W	M4
R3			RK73EB2E301J	CHIP R 300 J 1/4W	KE1E2
R3			RK73EB2E301J	CHIP R 300 J 1/4W	M1M2M3
R3			RK73EB2E301J	CHIP R 300 J 1/4W	M4
R4			RK73EB2E161J	CHIP R 160 J 1/4W	KE1E2
R4			RK73EB2E161J	CHIP R 160 J 1/4W	M1M2M3
R4			RK73EB2E161J	CHIP R 160 J 1/4W	M4
R5			RK73EB2E331J	CHIP R 330 J 1/4W	KE1E2
R5			RK73EB2E331J	CHIP R 330 J 1/4W	M1M2M3
R5			RK73EB2E331J	CHIP R 330 J 1/4W	M4
R6			RK73EB2E391J	CHIP R 390 J 1/4W	KE1E2
R6			RK73EB2E391J	CHIP R 390 J 1/4W	M1M2M3
R6			RK73EB2E391J	CHIP R 390 J 1/4W	M4
R7 ,8			RK73EB2E331J	CHIP R 330 J 1/4W	KE1E2
R7 ,8			RK73EB2E331J	CHIP R 330 J 1/4W	M1M2M3
R7 ,8			RK73EB2E331J	CHIP R 330 J 1/4W	M4
R9			RK73EB2E391J	CHIP R 390 J 1/4W	KE1E2
R9			RK73EB2E391J	CHIP R 390 J 1/4W	M1M2M3
R9			RK73EB2E391J	CHIP R 390 J 1/4W	M4
R10			RK73EB2E331J	CHIP R 330 J 1/4W	KE1E2
R10			RK73EB2E331J	CHIP R 330 J 1/4W	M1M2M3
R10			RK73EB2E331J	CHIP R 330 J 1/4W	M4
R11 -13			RK73GB2A681J	CHIP R 680 J 1/10W	KE1E2
R11 -13			RK73GB2A681J	CHIP R 680 J 1/10W	M1M2M3
R11 -13			RK73GB2A681J	CHIP R 680 J 1/10W	M4
R21			RK73EB2E181J	CHIP R 180 J 1/4W	KE1E2
R21			RK73EB2E181J	CHIP R 180 J 1/4W	M1M2M3
R21			RK73EB2E181J	CHIP R 180 J 1/4W	M4
R22			RK73EB2E361J	CHIP R 360 J 1/4W	KE1E2
R22			RK73EB2E361J	CHIP R 360 J 1/4W	M1M2M3
R22			RK73EB2E361J	CHIP R 360 J 1/4W	M4
R22			RK73EB2E361J	CHIP R 360 J 1/4W	KE1E2
R22			RK73EB2E361J	CHIP R 360 J 1/4W	M1M2M3
R22			RK73EB2E361J	CHIP R 360 J 1/4W	M4
R23			RK73EB2E561J	CHIP R 560 J 1/4W	KE1E2
R23			RK73EB2E561J	CHIP R 560 J 1/4W	M1M2M3
R23			RK73EB2E561J	CHIP R 560 J 1/4W	M4
R31 ,32			RK73GB2A101J	CHIP R 100 J 1/10W	
R56			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R60			RK73GB2A106J	CHIP R 10M J 1/10W	
R107			RK73GB2A103J	CHIP R 10K J 1/10W	

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-68xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R109			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R110			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R154			RK73GB2A473J	CHIP R 47K J 1/10W	M1M3
R173			RK73GB2A223J	CHIP R 22K J 1/10W	
R174			RK73GB2A333J	CHIP R 33K J 1/10W	
R501-504			RK73FB2B102J	CHIP R 1.0K J 1/8W	K1K2K3
R521			RK73EB2E181J	CHIP R 180 J 1/4W	K1K2K3
S2 -11	*		S70-0960-05	TACT SWITCH	
S1	*		T99-0488-05	ROTARY ENCODER	
IC1	*		W05-1599-00	MICROCONTROLLER IC	E1E2K
IC1	*		W05-1599-00	MICROCONTROLLER IC	K1K2K3
IC1	*		W05-1600-00	MICROCONTROLLER IC	M1M3
IC1	*		W05-1601-00	MICROCONTROLLER IC	M2M4
IC3			PIC95603	ANALOGUE IC	
IC6			S-1112B32MCG	ANALOGUE IC	
Q1			KRC406-P	DIGITAL TRANSISTOR	
Q3 -5			KRC405-P	DIGITAL TRANSISTOR	KE1E2
Q3 -5			KRC405-P	DIGITAL TRANSISTOR	M1M2M3
Q3 -5			KRC405-P	DIGITAL TRANSISTOR	M4
Q6 -8			KRC406-P	DIGITAL TRANSISTOR	KE1E2
Q6 -8			KRC406-P	DIGITAL TRANSISTOR	M1M2M3
Q6 -8			KRC406-P	DIGITAL TRANSISTOR	M4
Q21 -23			KRC406-P	DIGITAL TRANSISTOR	KE1E2
Q21 -23			KRC406-P	DIGITAL TRANSISTOR	M1M2M3
Q21 -23			KRC406-P	DIGITAL TRANSISTOR	M4
Q501,502			KRC406-P	DIGITAL TRANSISTOR	K1K2K3
Q521			KRC406-P	DIGITAL TRANSISTOR	K1K2K3
CD PLAYER UNIT (X32-6260-01) IN CD MECHA					
C1 ,2			CK73GB1A105K	CHIP C 1.0UF K	
C3			CK73GB1A474K	CHIP C 0.47UF K	
C4 -7			CK73GB1A105K	CHIP C 1.0UF K	
C9			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H153K	CHIP C 0.015UF K	
C12			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C22			CC73GCH1H220J	CHIP C 22PF J	
C23			CC73GCH1H180J	CHIP C 18PF J	
C24 ,25			CK73GB1H103K	CHIP C 0.010UF K	
C26			CK73FB0J106K	CHIP C 10UF K	
C27			CK73GB1A105K	CHIP C 1.0UF K	
C28			CK73GB1H103K	CHIP C 0.010UF K	
C29			CK73FB0J106K	CHIP C 10UF K	
C30 -33			CK73GB1H103K	CHIP C 0.010UF K	
C34 ,35			CC73GCH1H150J	CHIP C 15PF J	
C36			CK73GB1H103K	CHIP C 0.010UF K	
C37			CK73GB1A105K	CHIP C 1.0UF K	
C38			CK73GB1H103K	CHIP C 0.010UF K	
C51			CK73GB1C104K	CHIP C 0.10UF K	
C52			CK73GB1H222K	CHIP C 2200PF K	
C53			CK73FB1C105K	CHIP C 1.0UF K	
C54			CK73GB1H103K	CHIP C 0.010UF K	
C55			CK73GB1H332K	CHIP C 3300PF K	
Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C56			CK73GB1C104K	CHIP C 0.10UF K	
C57			CK73GB1H153K	CHIP C 0.015UF K	
C58			CK73GB1C104K	CHIP C 0.10UF K	
C59			CC73GCH1H680J	CHIP C 68PF J	
C61			CK73GB1C104K	CHIP C 0.10UF K	
C62			CK73FB0J106K	CHIP C 10UF K	
C63			CK73GB1H333K	CHIP C 0.033UF K	
C64			CK73GB1H472K	CHIP C 4700PF K	
C65			CK73GB1C104K	CHIP C 0.10UF K	
C66			CK73GB1H153K	CHIP C 0.015UF K	
C67			CK73GB1H103K	CHIP C 0.010UF K	
C68			CK73GB1C104K	CHIP C 0.10UF K	
C69			CK73FB0J106K	CHIP C 10UF K	
C71			CK73FB0J106K	CHIP C 10UF K	
C73 ,74			CK73GB1H102K	CHIP C 1000PF K	
C75 -77			CK73GB1C104K	CHIP C 0.10UF K	
C78			CK73GB1A105K	CHIP C 1.0UF K	
C79 -81			CK73GB1C104K	CHIP C 0.10UF K	
C83			CC73GCH1H470J	CHIP C 47PF J	
C84			CK73GB1H153K	CHIP C 0.015UF K	
C85			CK73GB1A105K	CHIP C 1.0UF K	
C86			CK73GB1H103K	CHIP C 0.010UF K	
C92			CK73FB1A225K	CHIP C 2.2UF K	
C93			CC73GCH1H101J	CHIP C 100PF J	
C94			CC73GCH1H560J	CHIP C 56PF J	
C101,102			CK73GB1H103K	CHIP C 0.010UF K	
C113			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E41-2954-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L77-2964-05	CRYSTAL RESONATOR (9.00MHZ)	
X2			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X3			L78-1221-05	RESONATOR (16.93MHZ)	
CP10			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP11,12			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP15			RK74GB1J103J	CHIP-COM 10K J 1/16W	
CP22			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1 ,2			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R3			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R4			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R19			RK73GB2A223J	CHIP R 22K J 1/10W	
R21			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R23			RK73GB2A223J	CHIP R 22K J 1/10W	
R24			RK73GB2A101J	CHIP R 100 J 1/10W	
R25			RK73GB2A104J	CHIP R 100K J 1/10W	
R26			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R27			RK73GB2A101J	CHIP R 100 J 1/10W	
R28 ,29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R31			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R33			RK73GB2A223J	CHIP R 22K J 1/10W	
R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R41			RK73GB2A223J	CHIP R 22K J 1/10W	
R44			RK73GB2A223J	CHIP R 22K J 1/10W	
R45			RK73GB2A101J	CHIP R 100 J 1/10W	
R47			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R48			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R49			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R50			RK73GB2A223J	CHIP R 22K J 1/10W	
R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52			RK73GB2A100J	CHIP R 10 J 1/10W	
R53			RK73GB2A153J	CHIP R 15K J 1/10W	
R54			RK73GB2A100J	CHIP R 10 J 1/10W	
R55			RK73GB2A153J	CHIP R 15K J 1/10W	
R57			RK73GB2A223J	CHIP R 22K J 1/10W	
R58 ,59			RK73GB2A101J	CHIP R 100 J 1/10W	
R63			RK73GB2A223J	CHIP R 22K J 1/10W	
R65 ,66			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R67 -69			RK73GB2A101J	CHIP R 100 J 1/10W	
R70			RK73GB2A223J	CHIP R 22K J 1/10W	
R81 ,82			RK73GB2A101J	CHIP R 100 J 1/10W	
R84			RK73GB2A101J	CHIP R 100 J 1/10W	
R86			RK73GB2A101J	CHIP R 100 J 1/10W	
R88			RK73GB2A101J	CHIP R 100 J 1/10W	
R90 -94			RK73GB2A101J	CHIP R 100 J 1/10W	
R95 -98			RK73GB2A223J	CHIP R 22K J 1/10W	
R101			RK73GB2A221J	CHIP R 220 J 1/10W	
R102			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R103			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R104			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R105			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R107			RK73GB2A560J	CHIP R 56 J 1/10W	
R108			RK73GB2A333J	CHIP R 33K J 1/10W	
R109			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R110			RK73GB2A913J	CHIP R 91K J 1/10W	
R112,113			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R115			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R116			RK73GB2A681J	CHIP R 680 J 1/10W	
R117-121			RK73GB2A103J	CHIP R 10K J 1/10W	
R123			RK73GB2A104J	CHIP R 100K J 1/10W	
R127			RK73GB2A153J	CHIP R 15K J 1/10W	
R128			RK73GB2A334J	CHIP R 330K J 1/10W	
R131			RK73GB2A204J	CHIP R 200K J 1/10W	
R132			RK73GB2A101J	CHIP R 100 J 1/10W	
R136			RK73GB2A363J	CHIP R 36K J 1/10W	
R137			RK73GB2A223J	CHIP R 22K J 1/10W	
R139			RK73GB2A393J	CHIP R 39K J 1/10W	
R151			RK73GB2A333J	CHIP R 33K J 1/10W	
R152			RK73GB2A223J	CHIP R 22K J 1/10W	
R173-178			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R180			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D1			DAP202U	DIODE	
D2 ,3			DA204U	DIODE	
IC1			92CD28AFG7EG0	MICROCONTROLLER IC	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
IC2			TC94A92FG-301	MOS-IC	
IC3			BD8222EFV	ANALOGUE IC	
IC4			MF1341S2162	MICROPROCESSOR IC	
IC5			74AHCT08PW	MOS-IC	
IC6			74LVC08APW	MOS-IC	
IC7			XC6415S001P1	MOS-IC	
IC9			XC6219B332MR	ANALOGUE IC	
Q3			RUE003N02	FET	
Q5			2SA1577	TRANSISTOR	
Q6			DTC114YUA	DIGITAL TRANSISTOR	
Q7			2SA1365-T1(E)	TRANSISTOR	
Q9			DTC144EUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-664x-xx)					
C2			CD04AZ1C332M2	ELECTRO 3300UF 16WV	E2M1N
C2			CD04AZ1C332M2	ELECTRO 3300UF 16WV	K1K3E
C2			CD04AZ1C332M2	ELECTRO 3300UF 16WV	M3M4
C2			C90-6784-05	ELECTRO 3900UF 16WV	KK2
C10			CD04AR1C221M	ELECTRO 220UF 16WV	
C12			CK73GB1A105K	CHIP C 1.0UF K	
C20 ,21			CK73GB1A105K	CHIP C 1.0UF K	
C30			CD04AS1C101M	ELECTRO 100UF 16WV	
C31			CK73FB0J106K	CHIP C 10UF K	
C33			C90-6851-05	ELECTRO 220UF 25WV	
C40			CD04AS1C220M	ELECTRO 22UF 16WV	KK2
C41			CK73GB1C104K	CHIP C 0.10UF K	
C50			CD04AS1C220M	ELECTRO 22UF 16WV	
C52			CK73GB1C473K	CHIP C 0.047UF K	
C71			CK73FB0J106K	CHIP C 10UF K	
C72			CK73GB1A474K	CHIP C 0.47UF K	
C73			CK73EB1H475K	CHIP C 4.7UF K	
C74			CK73GB1H102K	CHIP C 1000PF K	
C75			CK73GB1C104K	CHIP C 0.10UF K	
C79			CK73GB1H102K	CHIP C 1000PF K	
C81 ,82			CK73GB1H102K	CHIP C 1000PF K	E1E2M
C81 ,82			CK73GB1H102K	CHIP C 1000PF K	KK1K2
C81 ,82			CK73GB1H102K	CHIP C 1000PF K	M2M3
C83			CD04AS1V100M	ELECTRO 10UF 35WV	E1E2M
C83			CD04AS1V100M	ELECTRO 10UF 35WV	KK1K2
C83			CD04AS1V100M	ELECTRO 10UF 35WV	M2M3
C84			CD04AS1C220M	ELECTRO 22UF 16WV	E1E2M
C84			CD04AS1C220M	ELECTRO 22UF 16WV	KK1K2
C84			CD04AS1C220M	ELECTRO 22UF 16WV	M2M3
C92			CK73GB1H103K	CHIP C 0.010UF K	
C110			CK73GB1H104K	CHIP C 0.10UF K	
C111			CK73GB1A105K	CHIP C 1.0UF K	
C112			CK73FB1A335K	CHIP C 3.3UF K	
C131			CK73GB1A105K	CHIP C 1.0UF K	
C132			CK73GB1H223K	CHIP C 0.022UF K	
C133			CK73GB1H103K	CHIP C 0.010UF K	
C151			CK73GB1C104K	CHIP C 0.10UF K	
C153			CK73GB1C104K	CHIP C 0.10UF K	
C154			CD04BF1C221M	ELECTRO 220UF 16WV	
C170,171			CK73GB1H103K	CHIP C 0.010UF K	KK1E1
C170,171			CK73GB1H103K	CHIP C 0.010UF K	M1M2

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-664x-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C204			CK73GB1A105K	CHIP C 1.0UF K		C532-535			C90-6768-05	ELECTRO 0.22UF 16WV	KK2
C206			CD04BA1E330M	ELECTRO 33UF 25WV		C604			CK73GB1C104K	CHIP C 0.10UF K	KK1E1
C210-213			CK73GB1C224K	CHIP C 0.22UF K	E2M1M2	C604			CK73GB1C104K	CHIP C 0.10UF K	M1M2
C210-213			CK73GB1C224K	CHIP C 0.22UF K	K1K3E1	C606			CD04AS0J101M	ELECTRO 100UF 6.3WV	KK1E1
C210-213			CK73GB1C224K	CHIP C 0.22UF K	M3M4	C606			CD04AS0J101M	ELECTRO 100UF 6.3WV	M1M2
C217			CK73FB1C105K	CHIP C 1.0UF K	E2M1M2	C607,608			CC73GCH1H470J	CHIP C 47PF J	KK1E1
C217			CK73FB1C105K	CHIP C 1.0UF K	K1K3E1	C607,608			CC73GCH1H470J	CHIP C 47PF J	M1M2
C217			CK73FB1C105K	CHIP C 1.0UF K	M3M4	C610,611			CK73GB1A105K	CHIP C 1.0UF K	KK1E1
C222			CK73GB1A105K	CHIP C 1.0UF K		C610,611			CK73GB1A105K	CHIP C 1.0UF K	M1M2
C230			C90-6765-05	ELECTRO 1UF 16WV	KK2	C612			CK73GB1C104K	CHIP C 0.10UF K	KK1E1
C240,241			CK73GB1A105K	CHIP C 1.0UF K		C612			CK73GB1C104K	CHIP C 0.10UF K	M1M2
C242-247			CK73GB1H103K	CHIP C 0.010UF K		C614			CK73GB0J225K	CHIP C 2.2UF K	KK1E1
C250			CD04AS1V100M	ELECTRO 10UF 35WV		C614			CK73GB0J225K	CHIP C 2.2UF K	M1M2
C251			CD04AS0J470M	ELECTRO 47UF 6.3WV		C615			CK73GB1A105K	CHIP C 1.0UF K	KK1E1
C252			CK73GB0J225K	CHIP C 2.2UF K		C615			CK73GB1A105K	CHIP C 1.0UF K	M1M2
C253-256			CK73GB1H103K	CHIP C 0.010UF K		C618,619			CK73GB1A105K	CHIP C 1.0UF K	KK1E1
C257			CC73GCH1H120J	CHIP C 12PF J		C618,619			CK73GB1A105K	CHIP C 1.0UF K	M1M2
C259			CC73GCH1H120J	CHIP C 12PF J		C623,624			CC73GCH1H470J	CHIP C 47PF J	KK1E1
C260			CK73GB1A105K	CHIP C 1.0UF K		C623,624			CC73GCH1H470J	CHIP C 47PF J	M1M2
C261			CK73GB1A474K	CHIP C 0.47UF K		C627,628			CK73GB1H102K	CHIP C 1000PF K	KK1E1
C262			CK73GB1A105K	CHIP C 1.0UF K		C627,628			CK73GB1H102K	CHIP C 1000PF K	M1M2
C263			CK73GB1A474K	CHIP C 0.47UF K		C640			CC73GCH1H221J	CHIP C 220PF J	KK1E1
C264-266			CK73GB1A105K	CHIP C 1.0UF K		C640			CC73GCH1H221J	CHIP C 220PF J	M1M2
C269,270			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	KK2	CN161			E41-1701-05	PIN ASSY	
C271,272			CK73GB1A105K	CHIP C 1.0UF K		CN170			E41-1822-05	FLAT CABLE CONNECTOR	
C276			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		CN520			E40-9747-05	PIN ASSY	
C277			CK73GB1H103K	CHIP C 0.010UF K		CN600	*		E41-3140-05	PIN ASSY	KK1E1
C280-285			CK73GB1A105K	CHIP C 1.0UF K		CN600	*		E41-3140-05	PIN ASSY	M1M2
C286			CD04AS1C470M	ELECTRO 47UF 16WV		CN603			E41-1699-05	PIN ASSY	KK1E1
C288,289			CK73GB1A105K	CHIP C 1.0UF K	E2M1M2	CN603			E41-1699-05	PIN ASSY	M1M2
C288,289			CK73GB1A105K	CHIP C 1.0UF K	K1K3E1	J1			E58-0991-05	RECTANGULAR RECEPTACLE	
C288,289			CK73GB1A105K	CHIP C 1.0UF K	M3M4	J400			E56-0855-05	CYLINDRICAL RECEPTACLE	
C300			CK73GB1C104K	CHIP C 0.10UF K		J420			E63-0972-05	PIN JACK	
C301			CK73GB1H103K	CHIP C 0.010UF K		J470			E11-0625-05	PHONE JACK	
C302,303			CC73GCH1H220J	CHIP C 22PF J		W481	2D		E30-6803-05	CORD WITH PLUG	
C305,306			CK73GB1H103K	CHIP C 0.010UF K		L1			L33-2365-05	CHOKE COIL ASSY	
C307			CK73GB1H102K	CHIP C 1000PF K		L70			L33-2462-05	SMALL FIXED INDUCTOR (22UH)	
C310-312			CK73GB1H103K	CHIP C 0.010UF K		L71			L92-0639-05	CHIP FERRITE	
C314,315			CK73GB1H103K	CHIP C 0.010UF K		X240			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)	
C316			CK73GB1C104K	CHIP C 0.10UF K		X300			L78-0872-05	RESONATOR (12MHZ)	
C400,401			CK73GB1A105K	CHIP C 1.0UF K		X301			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
C402			CD04AS0J470M	ELECTRO 47UF 6.3WV		X500			L77-3825-05	CRYSTAL RESONATOR (4.332MHZ)	E2
C440,441			CD04AS1V100M	ELECTRO 10UF 35WV		X500			L77-3825-05	CRYSTAL RESONATOR (4.332MHZ)	KK2E1
C450,451			CD04AS1V100M	ELECTRO 10UF 35WV		K	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
C460,461			CD04AS1V100M	ELECTRO 10UF 35WV		L	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C470,471			CK73GB1A105K	CHIP C 1.0UF K		M	2D		N83-3008-48	PAN HEAD TAPTITE SCREW	
C472			CD04AS0J470M	ELECTRO 47UF 6.3WV		N	2D		N83-3016-48	PAN HEAD TAPTITE SCREW	
C482-485			CK73GB1H103K	CHIP C 0.010UF K		P	3D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
C502			CK73GB0J225K	CHIP C 2.2UF K	E2	CP301-303			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C502			CK73GB0J225K	CHIP C 2.2UF K	KK2E1	CP304			RK74GA1J101J	CHIP-COM 100 J 1/16W	KK1E1
C503			CC73GCH1H271J	CHIP C 270PF J	E2	CP304			RK74GA1J101J	CHIP-COM 100 J 1/16W	M1M2
C503			CC73GCH1H271J	CHIP C 270PF J	KK2E1	CP306			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
C505			CK73GB1H103K	CHIP C 0.010UF K		CP307			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C506,507			CC73GCH1H120J	CHIP C 12PF J	E2						
C506,507			CC73GCH1H120J	CHIP C 12PF J	KK2E1						

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-664x-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
CP501			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	E2	R201			RK73GB2A333J	CHIP R 33K J 1/10W	
CP501			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	KK2E1	R202			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R1 ,2			RK73EB2E103J	CHIP R 10K J 1/4W		R208	*		RK73GB2A100JH	CHIP R 10 J 1/10W	
R10			RK73GH2A243D	CHIP R 24K D 1/10W		R209			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R11			RK73GH2A432D	CHIP R 4.3K D 1/10W		R210			RK73GB2A221J	CHIP R 220 J 1/10W	
R12			RK73FB2B221J	CHIP R 220 J 1/8W		R212,213			RK73GB2A223J	CHIP R 22K J 1/10W	
R22			RK73GB2A1R0J	CHIP R 1.0 J 1/10W		R240			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R33			RK73FB2B123J	CHIP R 12K J 1/8W		R242-247	*		RK73GB2A101JH	CHIP R 100 J 1/10W	
R41			RK73FB2B152J	CHIP R 1.5K J 1/8W		R248			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R52			RK73FB2B272J	CHIP R 2.7K J 1/8W		R249			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R71			RK73GH2A133D	CHIP R 13K D 1/10W		R260			RK73GB2A103J	CHIP R 10K J 1/10W	
R72			RK73GH2A823D	CHIP R 82K D 1/10W		R268			RK73GB2A000J	CHIP R 0.0 J 1/10W	K3
R73			RK73GB2A103J	CHIP R 10K J 1/10W		R300			RK73GB2A473J	CHIP R 47K J 1/10W	
R74			RK73GH2A153D	CHIP R 15K D 1/10W		R302			RK73GB2A103J	CHIP R 10K J 1/10W	
R83			RK73GB2A362J	CHIP R 3.6K J 1/10W	E1E2M1	R303,304			RK73GB2A104J	CHIP R 100K J 1/10W	
R83			RK73GB2A362J	CHIP R 3.6K J 1/10W	KK1K2	R306			RK73GB2A104J	CHIP R 100K J 1/10W	
R83			RK73GB2A362J	CHIP R 3.6K J 1/10W	M2M3M4	R308			RK73GB2A101J	CHIP R 100 J 1/10W	
R84			RK73GB2A432J	CHIP R 4.3K J 1/10W	E1E2M1	R309			RK73GB2A473J	CHIP R 47K J 1/10W	
R84			RK73GB2A432J	CHIP R 4.3K J 1/10W	KK1K2	R312			RK73GB2A101J	CHIP R 100 J 1/10W	
R84			RK73GB2A432J	CHIP R 4.3K J 1/10W	M2M3M4	R313			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R85			RK73GB2A562J	CHIP R 5.6K J 1/10W	E1E2M1	R314			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2
R85			RK73GB2A562J	CHIP R 5.6K J 1/10W	KK1K2	R315			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R85			RK73GB2A562J	CHIP R 5.6K J 1/10W	M2M3M4	R316			RK73GB2A473J	CHIP R 47K J 1/10W	
R86			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	E1E2M1	R317			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R86			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KK1K2	R318			RK73GB2A473J	CHIP R 47K J 1/10W	
R86			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	M2M3M4	R319			RK73GB2A104J	CHIP R 100K J 1/10W	
R87			RK73FB2B102J	CHIP R 1.0K J 1/8W	E1E2M1	R320			RK73GB2A333J	CHIP R 33K J 1/10W	
R87			RK73FB2B102J	CHIP R 1.0K J 1/8W	KK1K2	R321			RK73GB2A473J	CHIP R 47K J 1/10W	
R87			RK73FB2B102J	CHIP R 1.0K J 1/8W	M2M3M4	R322			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R90 ,91			RK73GB2A103J	CHIP R 10K J 1/10W		R323			RK73GB2A473J	CHIP R 47K J 1/10W	
R96			RK73GB2A183J	CHIP R 18K J 1/10W		R324			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R97			RK73GB2A104J	CHIP R 100K J 1/10W		R325			RK73GB2A104J	CHIP R 100K J 1/10W	
R98			RK73FB2B203J	CHIP R 20K J 1/8W		R326			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R99			RK73EB2E473J	CHIP R 47K J 1/4W		R327,328			RK73GB2A104J	CHIP R 100K J 1/10W	
R100			RK73FB2B683J	CHIP R 68K J 1/8W		R329			RK73GB2A473J	CHIP R 47K J 1/10W	
R101			RK73GB2A473J	CHIP R 47K J 1/10W		R330			RK73GB2A104J	CHIP R 100K J 1/10W	
R102-104			RK73EB2E102J	CHIP R 1.0K J 1/4W		R331			RK73GB2A222J	CHIP R 2.2K J 1/10W	KK1K2
R110,111			RK73PB2H561J	CHIP R 560 J 1/2W		R331			RK73GB2A222J	CHIP R 2.2K J 1/10W	K3M1M
R112			RK73GB2A223J	CHIP R 22K J 1/10W		R331			RK73GB2A222J	CHIP R 2.2K J 1/10W	M3M4
R113,114			RK73PB2H561J	CHIP R 560 J 1/2W		R331,332			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R115			RK73FB2B472J	CHIP R 4.7K J 1/8W		R333			RK73GB2A104J	CHIP R 100K J 1/10W	
R116			RK73GB2A223J	CHIP R 22K J 1/10W	KK1K2	R335,336			RK73GB2A104J	CHIP R 100K J 1/10W	
R116			RK73GB2A223J	CHIP R 22K J 1/10W	K3M1M2	R337-340			RK73GB2A473J	CHIP R 47K J 1/10W	
R116			RK73GB2A223J	CHIP R 22K J 1/10W	M3M4	R341,342			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R117			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2	R344			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R118,119			RK73PB2H221J	CHIP R 220 J 1/2W	KK1K2	R345			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R118,119			RK73PB2H221J	CHIP R 220 J 1/2W	K3M1M2	R348			RK73GB2A471J	CHIP R 470 J 1/10W	
R118,119			RK73PB2H221J	CHIP R 220 J 1/2W	M3M4	R350,351			RK73GB2A471J	CHIP R 470 J 1/10W	
R120			RK73FB2B472J	CHIP R 4.7K J 1/8W		R352			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2
R130,131			RK73GB2A104J	CHIP R 100K J 1/10W		R352			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M
R132			RK73GB2A473J	CHIP R 47K J 1/10W		R352			RK73GB2A473J	CHIP R 47K J 1/10W	M4
R150			RK73GB2A223J	CHIP R 22K J 1/10W		R353			RK73GB2A223J	CHIP R 22K J 1/10W	KK2M1
R151			RK73GB2A101J	CHIP R 100 J 1/10W		R353			RK73GB2A223J	CHIP R 22K J 1/10W	M3
R160			RK73EB2E471J	CHIP R 470 J 1/4W		R353,354			RK73GB2A223J	CHIP R 22K J 1/10W	K1K3M
R164,165			RK73GB2A150J	CHIP R 15 J 1/10W		R353,354			RK73GB2A223J	CHIP R 22K J 1/10W	M4

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-664x-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R355			RK73GB2A223J	CHIP R 22K J 1/10W	E2M1M3	R647			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2
R355			RK73GB2A223J	CHIP R 22K J 1/10W	KK2E1	R649			RK73GB2A223J	CHIP R 22K J 1/10W	KK1E1
R357			RK73GB2A222J	CHIP R 2.2K J 1/10W		R649			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2
R360			RK73GB2A223J	CHIP R 22K J 1/10W		R650			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R361			RK73GB2A104J	CHIP R 100K J 1/10W		R650			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2
R400-404			RK73EB2E432J	CHIP R 4.3K J 1/4W		W13			R92-2053-05	CHIP R 0 OHM J 1/8W	
R405			RK73EB2E101J	CHIP R 100 J 1/4W		W80			R92-2053-05	CHIP R 0 OHM J 1/8W	K3
R406,407			RK73EB2E100J	CHIP R 10 J 1/4W		W480			R92-2053-05	CHIP R 0 OHM J 1/8W	
R408			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		S520			S74-0809-05	MICRO SWITCH	
R409			RK73EB2E432J	CHIP R 4.3K J 1/4W		D1			S2V60-5009F46	DIODE	
R410			RK73EB2E101J	CHIP R 100 J 1/4W		D30			UDZW5.6(B)	ZENER DIODE	
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W		D31			D1FJ4	DIODE	
R440,441			RK73GB2A331J	CHIP R 330 J 1/10W		D40			UDZW8.2(B)	ZENER DIODE	
R442,443			RK73GB2A223J	CHIP R 22K J 1/10W		D50			UDZW11(B)	ZENER DIODE	K1K2K
R444,445			RK73FB2B181J	CHIP R 180 J 1/8W		D51			1SS355	DIODE	KE1E2
R450,451			RK73GB2A331J	CHIP R 330 J 1/10W		D51			1SS355	DIODE	M1M2
R452,453			RK73GB2A223J	CHIP R 22K J 1/10W		D51			1SS355	DIODE	M4
R454,455			RK73FB2B181J	CHIP R 180 J 1/8W		D52			UDZW10(B)	ZENER DIODE	KE1E2
R460,461			RK73GB2A331J	CHIP R 330 J 1/10W		D52			UDZW10(B)	ZENER DIODE	M1M2
R462,463			RK73GB2A223J	CHIP R 22K J 1/10W		D52			UDZW10(B)	ZENER DIODE	M4
R464,465			RK73FB2B181J	CHIP R 180 J 1/8W		D70			CMS14	DIODE	
R470,471			RK73EB2E101J	CHIP R 100 J 1/4W		D80			1SR154-400	DIODE	E1E2M
R472,473			RK73GB2A123J	CHIP R 12K J 1/10W		D80			1SR154-400	DIODE	KK1K2
R474			RK73EB2E470J	CHIP R 47 J 1/4W		D80			1SR154-400	DIODE	M2M3
R475			RK73GB2A102J	CHIP R 1.0K J 1/10W		D82			UDZW5.6(B)	ZENER DIODE	E1E2M
R480,481			RK73GB2A471J	CHIP R 470 J 1/10W		D82			UDZW5.6(B)	ZENER DIODE	KK1K2
R482			RK73FB2B821J	CHIP R 820 J 1/8W		D82			UDZW5.6(B)	ZENER DIODE	M2M3
R483			RK73GB2A223J	CHIP R 22K J 1/10W		D90			UDZW6.2(B)	ZENER DIODE	
R505			RK73GB2A102J	CHIP R 1.0K J 1/10W	E2	D92 ,93			UDZW6.8(B)	ZENER DIODE	
R505			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK2E1	D110			1SS355	DIODE	
R532			RK73GB2A473J	CHIP R 47K J 1/10W		D111-114			1SR154-400	DIODE	
R533			RK73GB2A102J	CHIP R 1.0K J 1/10W		D130			UDZW4.7(B)	ZENER DIODE	
R534			RK73GB2A472J	CHIP R 4.7K J 1/10W		D164,165			LVS10C270S030	VARISTOR	
R535			RK73GB2A223J	CHIP R 22K J 1/10W		D200			DAP202U	DIODE	
R603			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KK1E1	D201			1SS355	DIODE	
R603			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	M1M2	D263-265			DAP202U	DIODE	
R606,607			RK73GB2A222J	CHIP R 2.2K J 1/10W	KK1E1	D403			UDZW6.2(B)	ZENER DIODE	
R606,607			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1M2	D406			UDZW6.2(B)	ZENER DIODE	
R610-613			RK73GB2A223J	CHIP R 22K J 1/10W	KK1E1	D408,409			UDZW6.8(B)	ZENER DIODE	
R610-613			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2	D410			UDZW6.2(B)	ZENER DIODE	
R614			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1	D441			DAP202U	DIODE	
R614			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2	D461			DAP202U	DIODE	
R617			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1	D470,471			UDZW6.8(B)	ZENER DIODE	
R617			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2	D472			UDZW6.2(B)	ZENER DIODE	
R620			RK73GB2A472J	CHIP R 4.7K J 1/10W	KK1E1	D531			UDZW12(B)	ZENER DIODE	E1E2
R620			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1M2	D532			DA204U	DIODE	
R624-627			RK73GB2A223J	CHIP R 22K J 1/10W	KK1E1	D536			UDZW6.2(B)	ZENER DIODE	E1E2
R624-627			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2	D602,603			UDZW4.7(B)	ZENER DIODE	KK1E1
R633,634			RK73GB2A331J	CHIP R 330 J 1/10W	KK1E1	D602,603			UDZW4.7(B)	ZENER DIODE	M1M2
R633,634			RK73GB2A331J	CHIP R 330 J 1/10W	M1M2	IC10			M5237ML-CF0J	ANALOGUE IC	
R638,639			RK73EB2E101J	CHIP R 100 J 1/4W	KK1E1	IC20			XC6201P502PR	ANALOGUE IC	
R638,639			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2	IC70	3D *		Impossible to repla	ANALOGUE IC (See exploded view)	
R645			RK73GB2A681J	CHIP R 680 J 1/10W	KK1E1	IC150			BD6538G	MOS-IC	
R645			RK73GB2A681J	CHIP R 680 J 1/10W	M1M2	IC170			74AHCT1G08GW	MOS-IC	KK1E1
R647			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1						

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-664x-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
IC170			74AHCT1G08GW	MOS-IC	M1M2	Q115			KRC407-P	DIGITAL TRANSISTOR	K3M1M
IC171			74AHC1G08GW	MOS-IC	KK1E1	Q115			KRC407-P	DIGITAL TRANSISTOR	M3M4
IC171			74AHC1G08GW	MOS-IC	M1M2	Q130			KRC404-P	DIGITAL TRANSISTOR	
IC201			E-TDA7850A	ANALOGUE IC		Q170			KRC403-P	DIGITAL TRANSISTOR	KK1E1
IC240			AK7600VF	MOS-IC		Q170			KRC403-P	DIGITAL TRANSISTOR	M1M2
IC301			XC6120N362N-G	MOS-IC		Q440,441			KRC410-P	DIGITAL TRANSISTOR	
IC302	*		W05-1595-00	MICROCONTROLLER IC	KK1M1	Q442			KRA303-P	DIGITAL TRANSISTOR	
IC302	*		W05-1595-00	MICROCONTROLLER IC	M2	Q450,451			KRC410-P	DIGITAL TRANSISTOR	
IC302	*		W05-1596-00	MICROCONTROLLER IC	K2K3M3	Q460,461			KRC410-P	DIGITAL TRANSISTOR	
IC302	*		W05-1596-00	MICROCONTROLLER IC	M4	Q462			KRA303-P	DIGITAL TRANSISTOR	
IC302	*		W05-1597-00	MICROCONTROLLER IC	E1	Q480			KRC403-P	DIGITAL TRANSISTOR	
IC302	*		W05-1598-00	MICROCONTROLLER IC	E2	Q481			2SA1577	TRANSISTOR	
IC303			74HC2G02DP	MOS-IC		Q520			KRC403-P	DIGITAL TRANSISTOR	
IC451	*		E-TDA7716N	ANALOGUE IC		Q521			2SA1576A	TRANSISTOR	
IC500			E-TDA7478AD	ANALOGUE IC	E2	Q522			KRA307-P	DIGITAL TRANSISTOR	
IC500			E-TDA7478AD	ANALOGUE IC	KK2E1	TH200			PRF18BE471QS2	POSITIVE RESISTOR	
IC600			NJM4565V-ZB	ANALOGUE IC	KK1E1	A600	3D		W02-5372-05	ELECTRIC CIRCUIT MODULE	KK1E1
IC600			NJM4565V-ZB	ANALOGUE IC	M1M2	A600	3D		W02-5372-05	ELECTRIC CIRCUIT MODULE	M1M2
IC603			NJM2845DL133B	ANALOGUE IC	KK1E1						
IC603			NJM2845DL133B	ANALOGUE IC	M1M2	A480	2D		X86-4032-70	FRONT-END UNIT	E1E2
Q10			KRA303-P	DIGITAL TRANSISTOR		A480	2D		X86-4230-11	FRONT-END UNIT	KK1K2
Q11			KRC403-P	DIGITAL TRANSISTOR		A480	2D		X86-4230-11	FRONT-END UNIT	K3M1M
Q12			KTA1046-P	TRANSISTOR		A480	2D		X86-4230-11	FRONT-END UNIT	M3M4
Q32			2SC4081	TRANSISTOR							
Q33			KTA1046-P	TRANSISTOR		MECHANISM ASSY (X92-6360-04) DXM-9B30W					
Q40			2SC4081	TRANSISTOR		1	2B		A10-5450-63	CHASSIS ASSY	
Q41			KTA1046-P	TRANSISTOR		3	3B		A10-5452-41	CHASSIS	
Q42			KRA303-P	DIGITAL TRANSISTOR		4	1B		A10-5453-32	CHASSIS	
Q43			KRC403-P	DIGITAL TRANSISTOR							
Q50			2SC4081	TRANSISTOR		12	3A		D10-4993-52	LEVER	
Q51	*		2SA1241-Q(Y)	TRANSISTOR		13	1B		D10-4991-22	ARM	
Q52			KRA303-P	DIGITAL TRANSISTOR		14	1B		D10-4992-13	ARM	
Q53			KRC403-P	DIGITAL TRANSISTOR		15	2A		D10-4994-02	SLIDER	
Q80			2SC4081	TRANSISTOR	E1E2M1	16	2A		D10-4995-03	SLIDER	
Q80			2SC4081	TRANSISTOR	KK1K2	17	2B		D10-4996-02	SLIDER	
Q80			2SC4081	TRANSISTOR		18	2A		D10-4997-03	LEVER	
Q81			2SC5053	TRANSISTOR	M2M3M4	19	1A		D10-4998-03	ARM	
Q81			2SC5053	TRANSISTOR	E1E2M1	20	2A		D10-4999-03	ARM	
Q81			2SC5053	TRANSISTOR	KK1K2	21	2A		D10-7001-03	ARM	
Q81			2SC5053	TRANSISTOR	M2M3M4	22	2A		D10-7002-03	ARM	
Q82			KRA303-P	DIGITAL TRANSISTOR	E1E2M1	23	2A		D10-7003-03	ARM	
Q82			KRA303-P	DIGITAL TRANSISTOR	KK1K2	24	2A		D13-2445-04	GEAR	
Q82			KRA303-P	DIGITAL TRANSISTOR	M2M3M4	25	2A		D13-2446-04	GEAR	
Q83			KRC403-P	DIGITAL TRANSISTOR	E1E2M1	27	2A		D13-2448-04	GEAR	
Q83			KRC403-P	DIGITAL TRANSISTOR	KK1K2	28	2A		D13-2449-04	GEAR	
Q83			KRC403-P	DIGITAL TRANSISTOR	M2M3M4	29	2A		D13-2450-04	GEAR	
Q90			2SC4081	TRANSISTOR		30	2A		D13-2451-04	GEAR	
Q92 ,93			2SC4081	TRANSISTOR		31	2A		D13-2452-04	GEAR	
Q110			KRC407-P	DIGITAL TRANSISTOR		32	2A		D13-2453-04	GEAR	
Q111			KRA302-P	DIGITAL TRANSISTOR							
Q112			2SA1576A	TRANSISTOR		33	2A		D13-2454-04	GEAR	
Q113			2SB1188(Q,R)	TRANSISTOR	E1E2	34	2A		D13-2455-04	GEAR	
Q113,114			2SB1188(Q,R)	TRANSISTOR	KK1K2	35	2B		D13-2456-03	RACK (GEAR)	
Q113,114			2SB1188(Q,R)	TRANSISTOR	K3M1M2	36	2A		D14-1028-04	ROLLER	
Q113,114			2SB1188(Q,R)	TRANSISTOR	M3M4	37	3A		D21-2507-04	SHAFT	
Q115			KRC407-P	DIGITAL TRANSISTOR	KK1K2	38	2B		D21-2508-04	SHAFT	
						39	3A		D23-0963-04	RETAINER	

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

▲ indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6360-04) DXM-9B30W

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
40	3B		D39-0277-15	DAMPER							
41	3B		D39-0278-15	DAMPER							
46	1B		G01-4682-34	TORSION COIL SPRING							
47	3A *		G01-4756-04	EXTENSION SPRING							
48	2A		G01-4684-04	EXTENSION SPRING							
49	2B		G01-4685-04	EXTENSION SPRING							
50	1B		G01-4686-14	EXTENSION SPRING							
51	3A		G01-4688-14	EXTENSION SPRING							
52	3A		G01-4692-24	TORSION COIL SPRING							
54	3A		G02-1588-04	FLAT SPRING							
55	1B		G13-1297-04	CUSHION							
56	1B		G13-1299-14	CUSHION							
57	1A		G16-1715-04	SHEET							
61	1B		J11-0675-03	CLAMPER							
64	2A		J19-7210-21	HOLDER							
65	2B		J19-7225-04	HOLDER							
66	1B		J22-0706-03	MOUNTING HARDWARE							
67	1A		J22-0707-12	MOUNTING HARDWARE							
68	1B		J90-1166-11	GUIDE							
69	2B		J90-1168-03	RAIL							
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)							
B	2B		N09-6426-15	MACHINE SCREW							
C	2B		N09-6735-05	TAPTITE SCREW							
D	2B		N09-6737-15	MACHINE SCREW							
E	2B		N09-6738-15	TAPTITE SCREW							
F	2A		N19-2335-14	FLAT WASHER							
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW							
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW							
76	2A		S68-0921-05	PUSH SWITCH							
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY							
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)							
DPU1	2B		X93-2280-00	OPTICAL PICKUP ASSY							

K: KDC-X994 K1: KDC-BT945U K2: KDC-X794 K3: KDC-MP745U M1: KDC-X8016BT
M2: KDC-X8016BTL M3: KDC-X7016 M4: KDC-X7016L E1: KDC-BT60U E1: KDC-6047U

 indicates safety critical components.