


9.1 PACKING

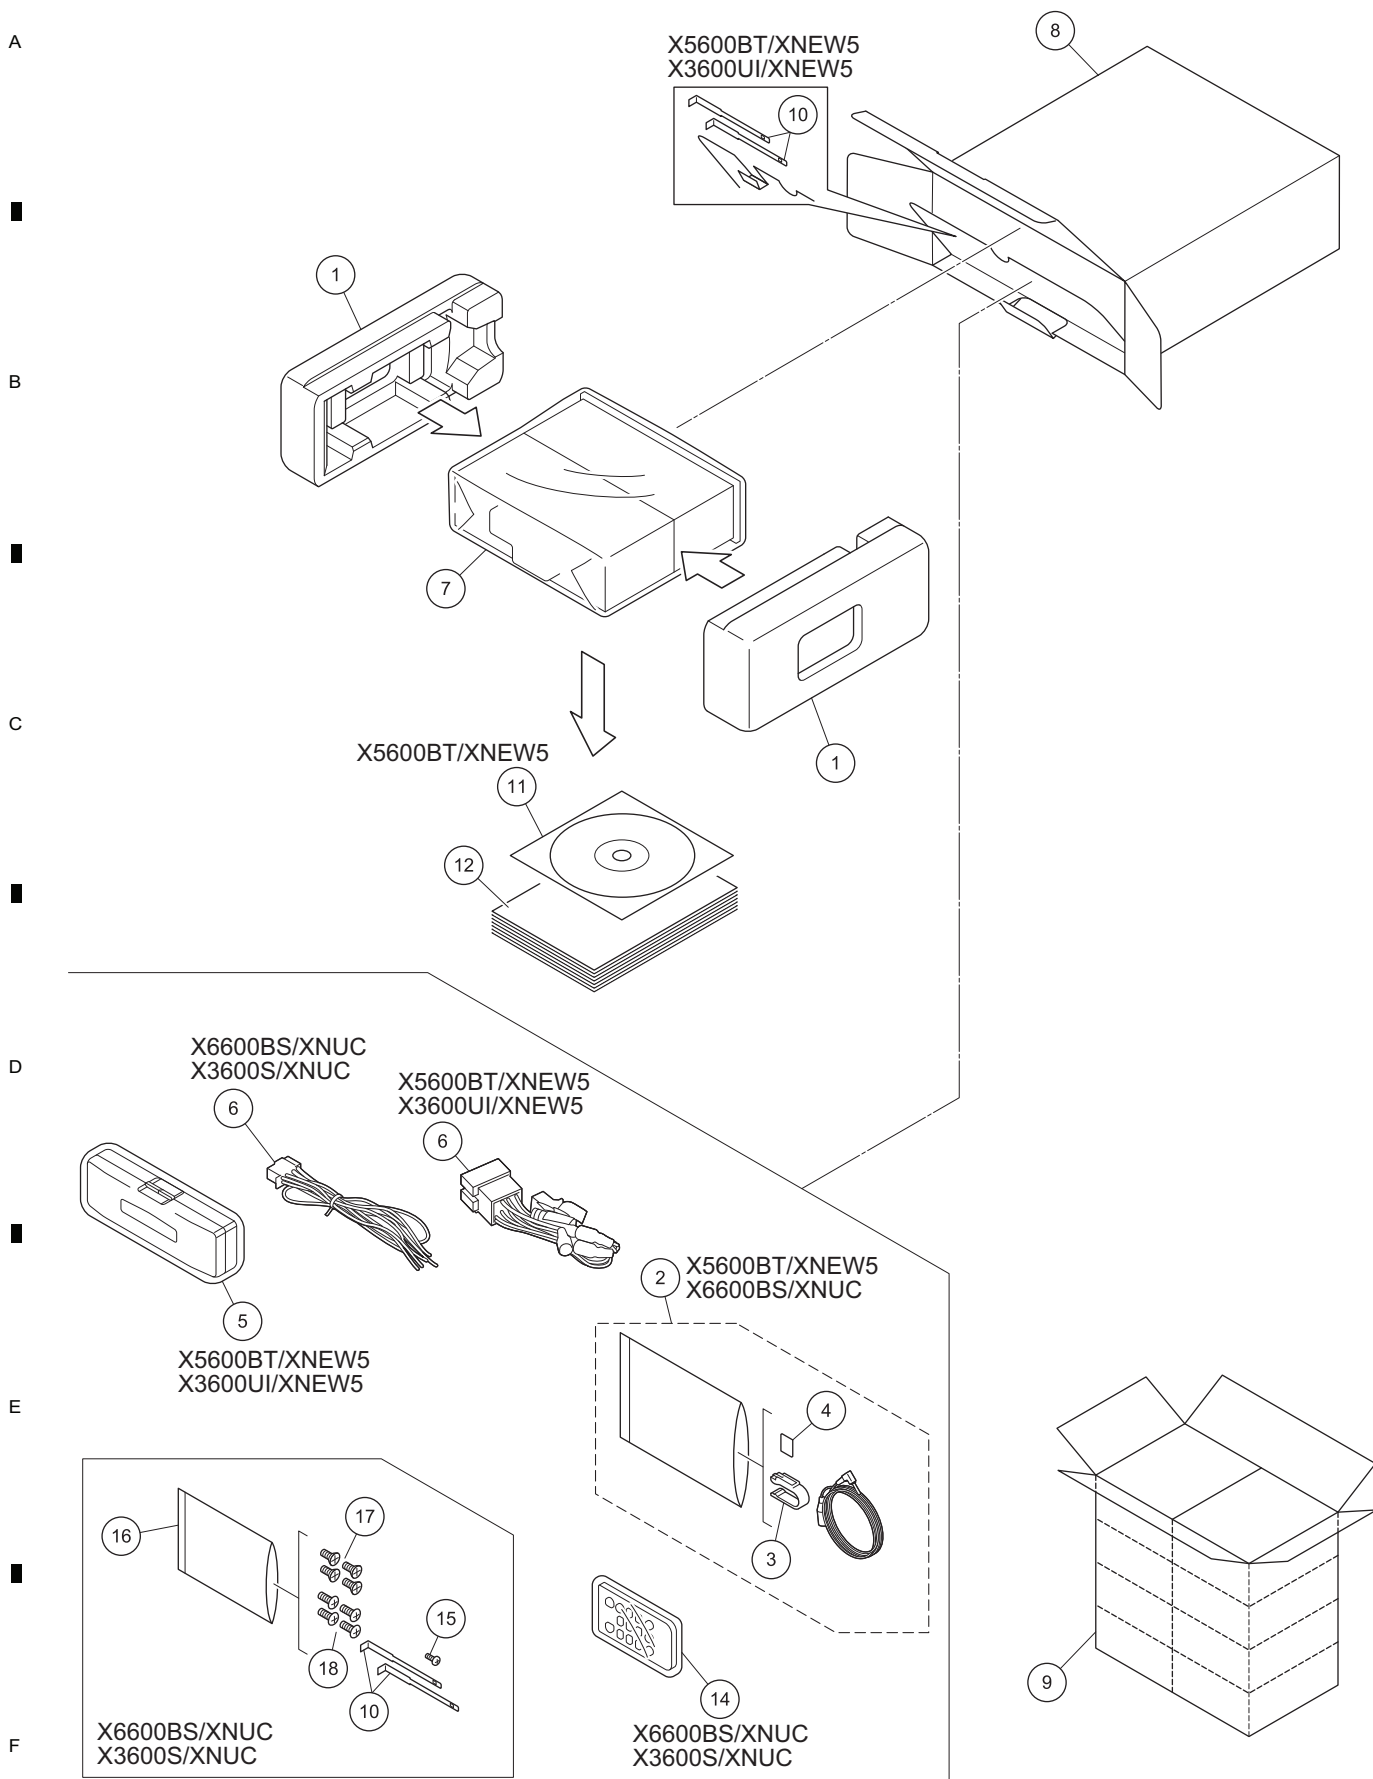

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Protector	CHP4594	12-2	Quick Start Guide	See Contrast table (2)
2	Microphone Assy	See Contrast table (2)	12-3	Installation Manual	See Contrast table (2)
3	Holder	See Contrast table (2)	* 12-4	Caution Card	See Contrast table (2)
4	Cushion	See Contrast table (2)			
5	Case Assy	See Contrast table (2)	* 12-5	Caution Card	See Contrast table (2)
			* 12-6	Caution Card	See Contrast table (2)
6	Cord Assy	See Contrast table (2)	* 12-7	Warranty Card	See Contrast table (2)
7	Polyethylene Bag	See Contrast table (2)	13		
8	Unit Box	See Contrast table (2)	14	Card Remote Control Unit	See Contrast table (2)
9	Contain Box	See Contrast table (2)			
10	Handle	QNC3021	15	Screw	See Contrast table (2)
			16	Polyethylene Bag	See Contrast table (2)
11	IM CD ROM	See Contrast table (2)	17	Screw	See Contrast table (2)
12-1	Owner's Manual	See Contrast table (2)	18	Screw	See Contrast table (2)

(2) CONTRAST TABLE


DEH-X5600BT/XNEW5, DEH-X6600BS/XNUC, DEH-X3600S/XNUC and DEH-X3600UI/XNEW5 are constructed the same except for the following:

Mark	No.	Description	DEH-X5600BT /XNEW5	DEH-X6600BS /XNUC	DEH-X3600S /XNUC	DEH-X3600UI /XNEW5
	2	Microphone Assy	CPM1083	CPM1083	Not used	Not used
	3	Holder	CZN7192	CZN7192	Not used	Not used
	4	Cushion	CZN7193	CZN7193	Not used	Not used
	5	Case Assy	QXA3129	Not used	Not used	QXA3129
	6	Cord Assy	QDP3014	CDP1480	CDP1480	QDP3012
	7	Polyethylene Bag	QEG3001	CEG1173	CEG1173	QEG3001
	8	Unit Box	QHG3487	QHG3488	QHG3489	QHG3479
	9	Contain Box	QHL3487	QHL3488	QHL3489	QHL3479
	11	IM CD ROM	QPJ3020	Not used	Not used	Not used
	12-1	Owner's Manual	Not used	QRD3195	QRD3195	QRD3200
	12-2	Quick Start Guide	QRD3193	Not used	Not used	Not used
	12-3	Installation Manual	QRD3194	Not used	Not used	Not used
*	12-4	Caution Card	QRP3014	Not used	Not used	Not used
*	12-5	Caution Card	CRP1438	Not used	Not used	Not used
*	12-6	Caution Card	CRP1441	Not used	Not used	Not used
	12-7	Warranty Card	CRY1376	QRY3001	QRY3001	CRY1376
	14	Card Remote Control Unit	Not used	QXE1044	QXE1047	Not used
	15	Screw	Not used	BPZ20P060FTC	BPZ20P060FTC	Not used
	16	Polyethylene Bag	Not used	CEG1160	CEG1160	Not used
	17	Screw	Not used	CRZ50P090FTC	CRZ50P090FTC	Not used
	18	Screw	Not used	TRZ50P080FTC	TRZ50P080FTC	Not used

Owner's Manual,Installation Manual

Part No.	Language
QRD3193	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3194	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3195	English, French, Spanish(Espanol)
QRD3200	English, French, Italian, Spanish(Espanol), German, Dutch, Russian

9.2 EXTERIOR

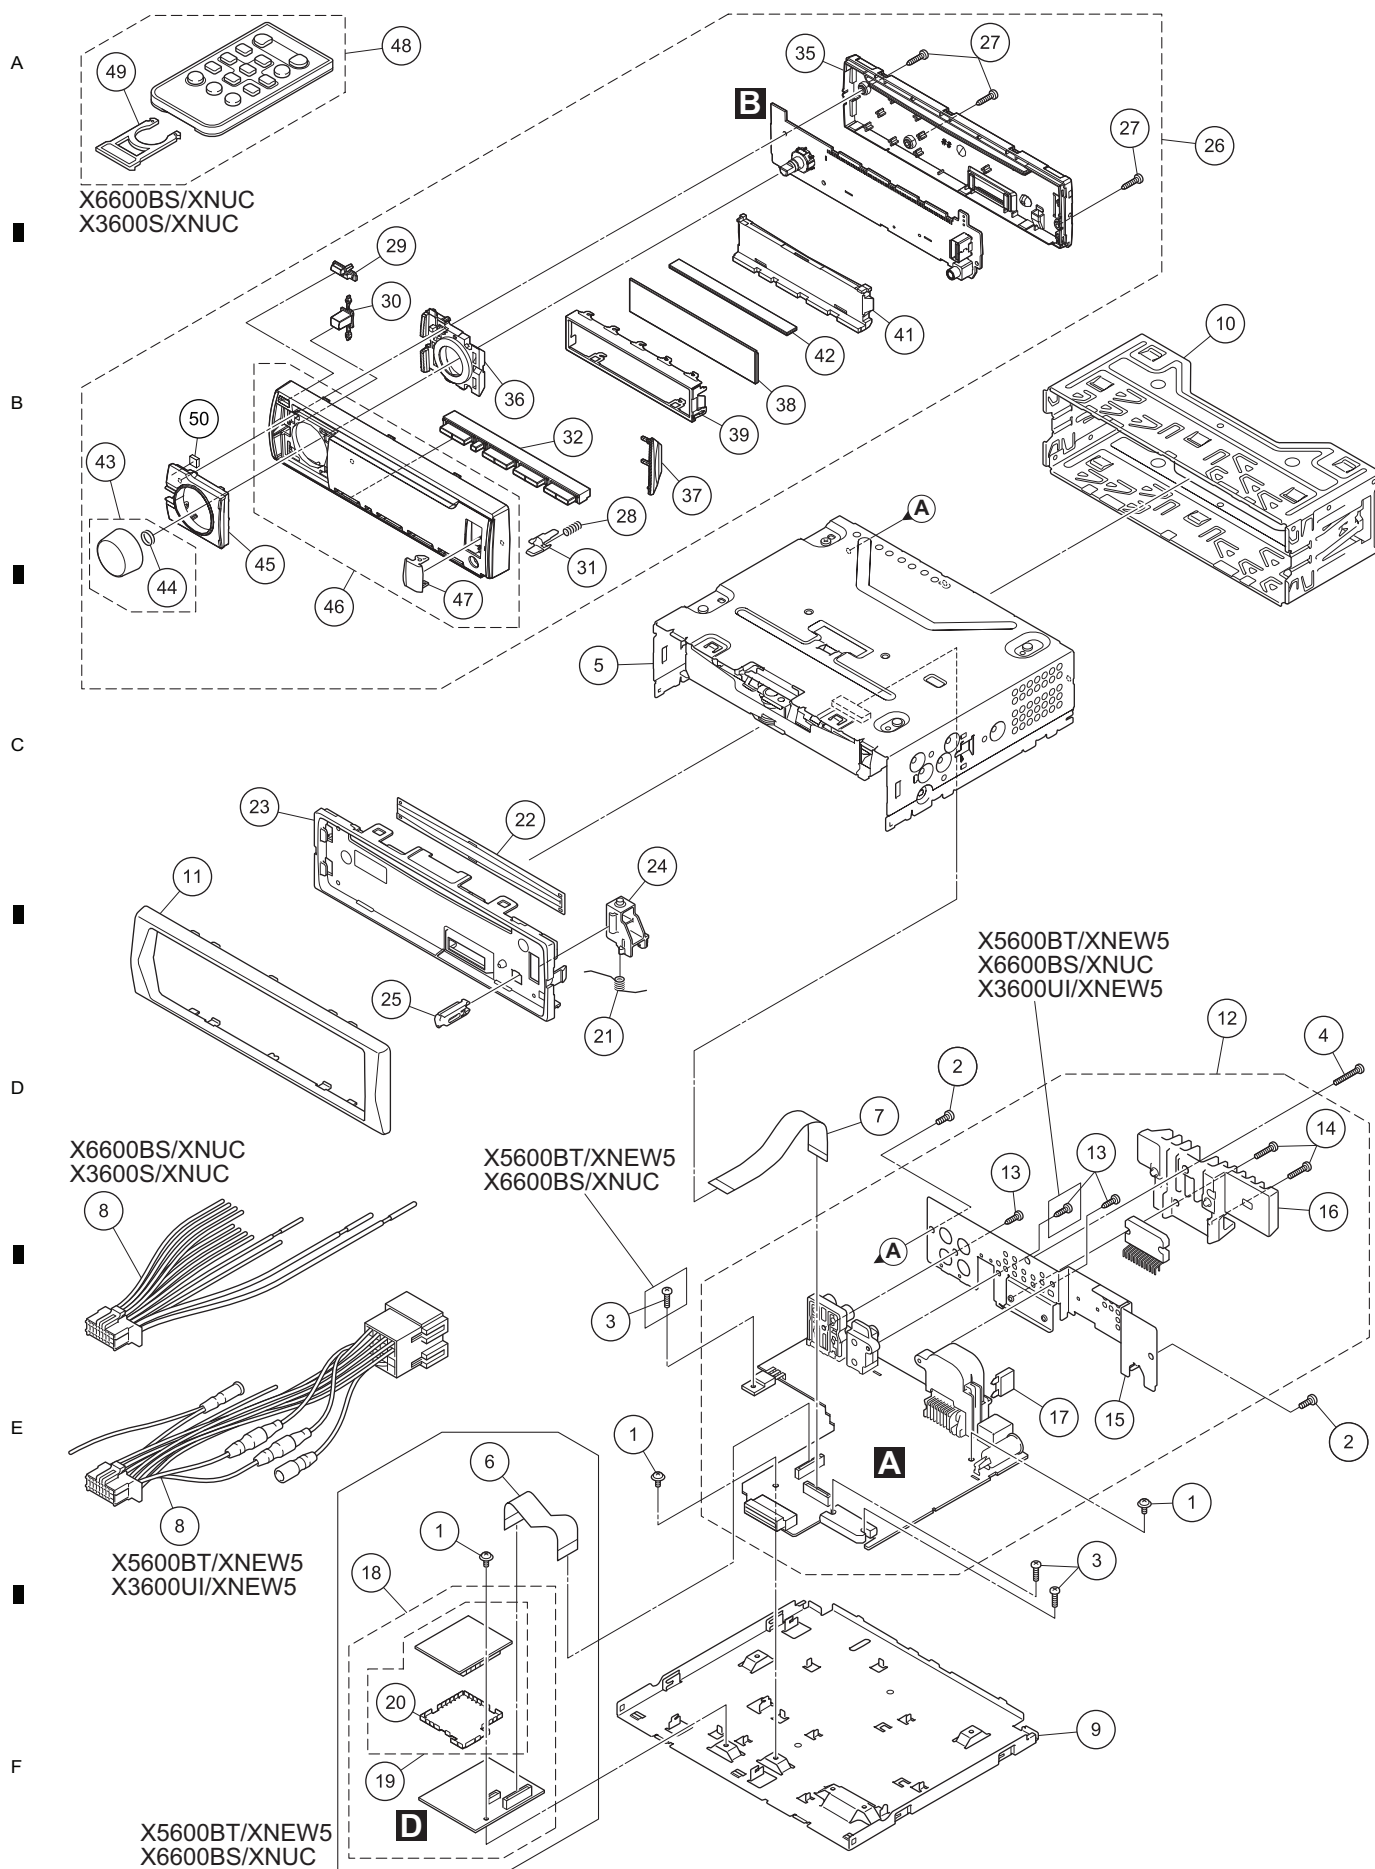


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	ASZ26P050FTC	26	Detachable Grille Assy	See Contrast table (2)
2	Screw	BSZ26P060FTC	27	Screw	BPZ20P100FTC
3	Screw	BSZ26P080FTC	28	Spring	CBH2210
4	Screw	BSZ26P120FTC	29	Button (EJECT)	QAC3131
5	CD Mechanism Module (S11.6VA)	CXK5805	30	Button	See Contrast table (2)
6	FFC	See Contrast table (2)	31	Button (DETACH)	QAC3137
7	FFC	QDE3029	32	Button (1-6)	See Contrast table (2)
8	Cord Assy	See Contrast table (2)	33		
9	Case	See Contrast table (2)	34		
10	Holder	QNC3020	35	Cover	QNS3615
11	Panel	QNS3576	36	Lighting Conductor	QNV3074
12	Tuner Amp Unit	See Contrast table (2)	37	Lighting Conductor	QNV3075
13	Screw	BPZ26P080FTC	38	Segment LCD (V1802)	CAW2041
14	Screw	BSZ26P120FTC	39	Holder	QNC3068
15	Holder	See Contrast table (2)	40		
16	Heat Sink	QNR3010	41	Lighting Conductor	QNV3073
17	Fuse (10 A)	YEK5001	42	Rubber Connector	QNV3079
18	BT Unit	See Contrast table (2)	43	Knob Unit	See Contrast table (2)
19	BT Module	See Contrast table (2)	44	Spring	YBL5010
20	Shield Case	See Contrast table (2)	45	Button Unit	See Contrast table (2)
21	Spring	QBH3001	46	Grille Unit	See Contrast table (2)
22	Cover	QNM3029	47	Door	QAT3012
23	Panel	QNS3126	48	Card Remote Control Unit	See Contrast table (2)
24	Arm	QNV3025	49	Cover	See Contrast table (2)
25	Button	QNV3026	50	Cushion	QNM3097

(2) CONTRAST TABLE

DEH-X5600BT/XNEW5, DEH-X6600BS/XNUC, DEH-X3600S/XNUC and DEH-X3600UI/XNEW5 are constructed the same except for the following:

Mark	No.	Description	DEH-X5600BT /XNEW5	DEH-X6600BS /XNUC	DEH-X3600S /XNUC	DEH-X3600UI /XNEW5
	6	FFC	QDE3028	QDE3028	Not used	Not used
	8	Cord Assy	QDP3014	CDP1480	CDP1480	QDP3012
	9	Case	QNB3011	QNB3011	QNB3012	QNB3012
	12	Tuner Amp Unit	QWM3677	QWM3678	QWM3679	QWM3627
	15	Holder	QNC3074	QNC3075	QNC3076	QNC3087
	18	BT Unit	QWM3750	QWM3750	Not used	Not used
	19	BT Module	YWX5044	YWX5044	Not used	Not used
	20	Shield Case	YNC5123	YNC5123	Not used	Not used
	26	Detachable Grille Assy	QXA3919	QXA3920	QXA3921	QXA3912
	30	Button	QAC3139 (PHONE)	QAC3139 (PHONE)	QAC3138 (MIX)	QAC3138 (MIX)
	32	Button (1-6)	QAC3136	QAC3136	QAC3140	QAC3140
	43	Knob Unit	QXA3670	QXA3670	QXA3670	QXA3671
	45	Button Unit	QXA3945	QXA3945	QXA3946	QXA3946
	46	Grille Unit	QXA3964	QXA3965	QXA3966	QXA3957
	48	Card Remote Control Unit	Not used	QXE1044	QXE1047	Not used
	49	Cover	Not used	CNS7068	CNS7068	Not used

9.3 CD MECHANISM MODULE

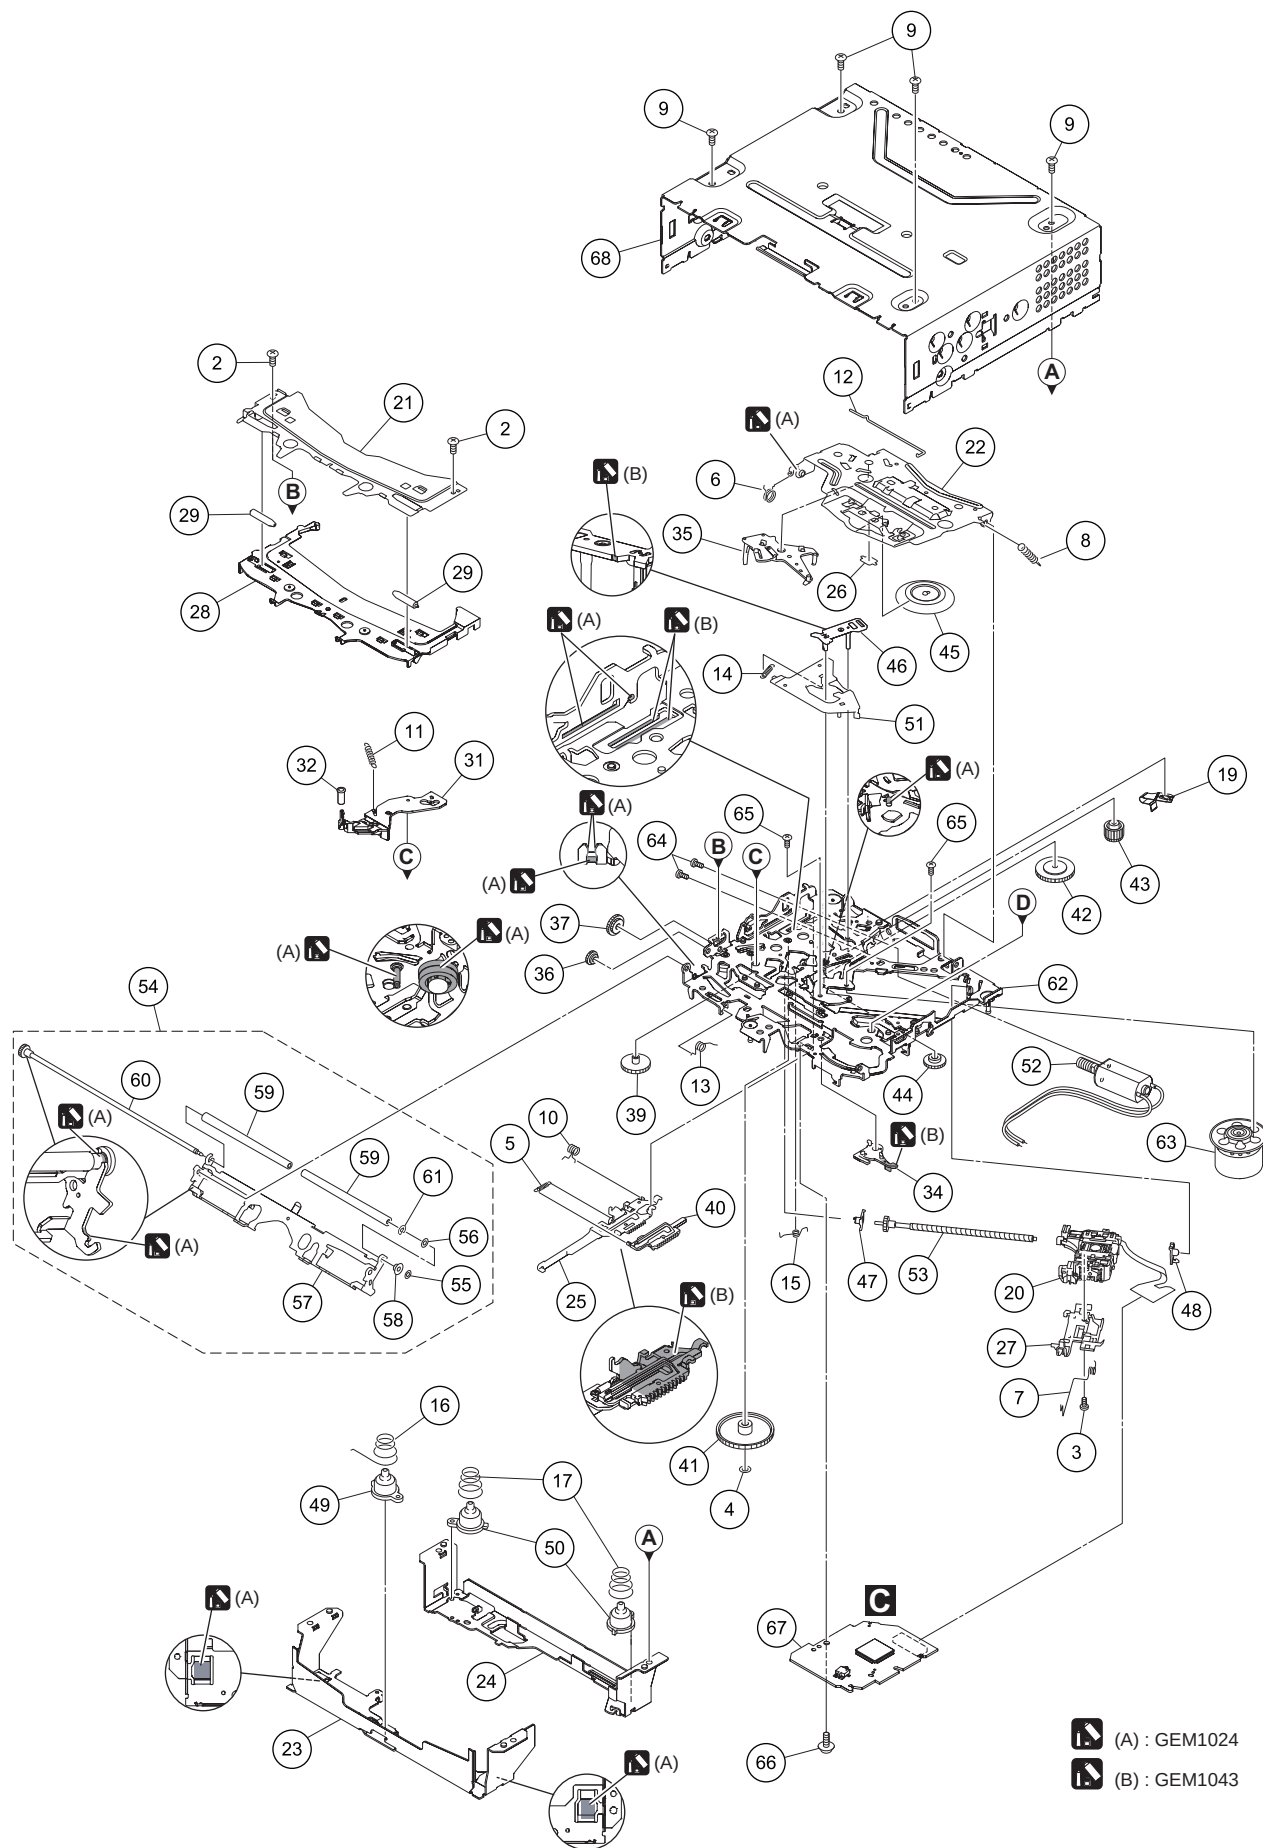

DEH-X5600BT/XNEW5

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE6232	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW2500	
12	Spring	CBH3014	60	Gear Unit	CXE6225	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6VA)	CWX4269	
20	PU Unit(P11)(Service)	CXX4754	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by μ instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A:DEH-X5600BT/XNEW5		IC 551 (A,41,112) Regulator IC	BD9876EFJ
B:DEH-X6600BS/XNUC		IC 552 (A,106,24) IC	BD2232G-G
C:DEH-X3600S/XNUC		IC 601 (A,111,75) IC	R5S726B0D216FP
D:DEH-X3600UI/XNEW5		IC 602 (A,130,68) IC(A,B,C)	TC7SH126FU
Unit Number : QWM3677(A)		IC 603 (A,137,66)L-MOS And Gate(A,B,C)	TC7SET08FUS1
Unit Number : QWM3678(B)		IC 671 (A,133,75) IC	S-80827CNMC-B8M
Unit Number : QWM3679(C)		IC 681 (A,115,94) Flash ROM Unit(A)	PEB094A8
Unit Number : QWM3627(D)		(A,115,94) Flash ROM Unit(B)	PEB095A8
Unit Name : Tuner Amp Unit		(A,115,94) Flash ROM Unit(C)	PEB110A8
Unit Number : (A,D)		(A,115,94) Flash ROM Unit(D)	PEB101A8
Unit Number : (B,C)		IC 801 (A,104,18) L-MOS And Gate	TC7SET08FUS1
Unit Name : Keyboard Unit		IC 911 (A,145,28) Regulator IC	BA49183-V12
Unit Number : CWX4269		Q 251 (A,20,129) Chip Transistor	RN1910
Unit Name : CD Core Unit(S11.6VA)		Q 252 (A,28,129) Chip Transistor(B)	RN1910
Unit Number : QWM3750(A,B)		Q 253 (A,12,129) Chip Transistor	RN1910
Unit Name : BT Unit		Q 301 (A,60,124) Chip Transistor	RN4983
		Q 531 (A,89,95) Transistor	LSAR523UB
		Q 751 (A,14,103) Transistor	KTD2092
		Q 752 (A,10,108) Chip Transistor	RN4983
		Q 871 (A,150,63) Transistor	2SA1577
		Q 872 (A,149,54) Transistor	LTC143EUB
		Q 941 (A,128,108) Transistor	LSCR523UB
		Q 951 (A,122,111) Transistor(D)	LSAR523UB
		D 401 (A,163,103) Diode	RN731VN
		D 402 (A,162,100) Diode	RN731VN
		D 551 (A,24,118) Diode	CMS03
		D 552 (A,44,106) Diode	RB056L-40
		D 601 (A,136,78) Diode	RB751SM-40
		D 602 (A,90,75) Diode	RB551VM-30
		D 751 (A,16,108) Diode	DZ2J082M0
		D 801 (A,105,13) Diode	DZ2S068C
		D 802 (A,92,17) Diode	DZ2S068C
		D 803 (A,125,15) Diode	DZ2S068C
		D 804 (A,119,14) Diode	DZ2S068C
		D 805 (A,120,14) Diode	DZ2S068C
		D 806 (A,116,13) Diode	DZ2S068C
		D 807 (A,113,13) Diode	DZ2S068C
		D 808 (A,117,13) Diode	DZ2S068C
		D 809 (A,112,13) Diode	DZ2S068C
		D 901 (A,138,127) Diode	1SR154-400
MISCELLANEOUS			
IC 201 (A,98,107) LSI	PM9013A		
IC 301 (A,78,142) IC	PA2032A		
IC 401 (A,154,91) IC	TDA7706		
IC 531 (A,93,87) IC	337S3959		

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	D 902 (A,134,127) Diode	1SR154-400	R 266 (A,17,129) (B)	RS1/16SS0R0J
			R 267 (A,15,129) (A,C,D)	RS1/16SS0R0J
	D 911 (A,159,66) Diode	CRG03		
	D 912 (A,162,66) Diode	CRG03	R 301 (A,68,127)	RS1/16SS471J
A	D 941 (A,129,113) Diode(A,D)	DZ2J075M0	R 302 (A,82,125)	RS1/16SS471J
	(A,129,113) Diode(B,C)	DZ2J068M0	R 303 (A,73,127)	RS1/16SS471J
	D 951 (A,121,114) Diode(D)	DAN202UM	R 304 (A,78,126)	RS1/16SS471J
	L 202 (A,91,102) Inductor	CTF1793	R 305 (A,59,122)	RS1/16SS103J
	L 401 (A,159,104) Chip Coil	LCTAWR27J2520		
			R 306 (A,61,121)	RS1/16SS221J
	L 402 (A,163,107) Chip Coil	LCTAWR15J2520	R 307 (A,61,122)	RS1/16SS223J
	L 403 (A,155,102) Inductor	CTF1786	R 309 (A,84,121)	RS1/16SS103J
	L 404 (A,150,102) Inductor	CTF1786	R 311 (A,85,122)	RS1/16SS473J
	L 405 (A,155,108) Inductor(B,C)	LCYB68NJ1608	R 401 (A,166,105)	RS1/16SS221J
	L 406 (A,152,105) Inductor	CTF1389		
	L 408 (A,145,104) Inductor	LCTC4R7K1608	R 402 (A,165,100)	RS1/16SS751J
B			R 403 (A,143,104)	RS1/16SS391J
	L 410 (A,141,94) Chip Coil	LCTAW470J2520	R 404 (A,146,99)	RS1/16SS105J
	L 413 (A,148,82) Inductor	CTF1786	R 406 (A,158,108)	RS1/16SS105J
	L 414 (A,157,80) Inductor(A,D)	CTF1786	R 407 (A,143,96)	RS1/16SS330J
	L 419 (A,165,95) Inductor	CTF1786		
	L 420 (A,165,96) Inductor	CTF1786	R 408 (A,141,97)	RS1/16SS471J
			R 411 (A,142,91)	RS1/16SS681J
	L 551 (A,52,108) Inductor	CTH1524	R 412 (A,157,78)	RS1/4SA8R2J
	L 801 (A,115,17) Inductor	CTF1713	R 413 (A,162,78)	RS1/4SA8R2J
	L 901 (A,112,141) Choke Coil 600 uH	CTH1432	R 414 (A,143,87)	RS1/16SS0R0J
	L 951 (A,101,125) Chip Coil(D)	BTH1101	R 415 (A,156,80) (B,C)	RS1/16SS0R0J
	X 401 (A,165,88) Crystal Resonator 36.48 MHz	CSS1848		
	X 601 (A,128,75) Crystal Resonator 12 MHz	CSS1847	R 531 (A,90,91)	RS1/16SS473J
C	X 602 (A,119,90)Ceramic Oscillator 16.934 MHz(C,D)	CSS1603	R 532 (A,89,84)	RS1/16SS222J
			R 533 (A,90,84)	RS1/16SS222J
	X 603 (A,125,92) Resonator 16.93 MHz(A,B)	CSS1794	R 534 (A,94,90)	RS1/16SS272J
	⚠ P251 (A,6,129) Fuse 3.0 A	CEK1386	R 535 (A,95,90)	RS1/16SS472J
	P 402 (A,159,111) Surge Absorber	HSPC16701B02		
	P 1001 (A,153,72) Fuse 1.0 A(A,B,C)	CEK1381	R 536 (A,96,90)	RS1/16SS472J
	VA801 (A,108,13) SMD Varistor	MLV0402ES012V0010N	R 537 (A,95,85)	RS1/16SS101J
			R 538 (A,95,83)	RS1/16SS101J
	VA802 (A,101,13) SMD Varistor	MLV0402ES012V0010N	R 551 (A,47,112)	RS1/16SS682J
	CN701 (A,114,32) Connector	VKN1192	R 552 (A,53,113)	RS1/16SS0R0J
	CN801 (A,109,4) Connector	CKS6452		
	CN971 (A,93,49) Connector(A,B)	VKN1192	R 553 (A,49,113)	RS1/16SS1803D
	JA251 (A,19,141) Pin Jack(A,C,D)	CKB1099	R 554 (A,49,112)	RS1/16SS4302D
D	(A,19,141) Pin Jack(B)	XKB7001	R 555 (A,64,103)	RS1/10SR471J
			R 601 (A,101,63) (A,B)	RS1/16SS473J
	JA401 (A,162,129) Antenna Jack	YKS5041	R 602 (A,109,61)	RS1/16SS473J
	JA891 (A,42,138) Jack(C)	CKS6437		
	JA892 (A,42,141) Jack(A,B)	YKS5035	R 603 (A,112,47) (A,B)	RS1/16SS473J
	(A,42,141) Jack(D)	YKS5001	R 604 (A,117,61) (D)	RS1/16SS473J
	JA901 (A,113,141) Connector	CKM1613	R 609 (A,124,65)	RS1/16SS473J
	JA961 (A,142,144) Connector(A,B,C)	CKS3806	R 610 (A,124,68)	RS1/16SS473J
			R 611 (A,129,70)	RS1/16SS473J
	⚠ Fuse (10 A)	YEK5001	R 613 (A,124,74)	RS1/16SS152J
	RESISTORS		R 614 (A,132,78)	RS1/16SS473J
			R 615 (A,133,78)	RS1/16SS473J
E	R 251 (A,22,128)	RS1/16SS821J	R 616 (A,125,64)	RS1/16SS473J
	R 252 (A,19,125)	RS1/16SS821J	R 617 (A,137,79)	RS1/16SS103J
	R 253 (A,22,130)	RS1/16SS223J	R 618 (A,127,82)	RS1/16SS473J
	R 254 (A,18,126)	RS1/16SS223J		
			R 622 (A,122,86)	RS1/16SS473J
	R 255 (A,31,128) (B)	RS1/16SS821J	R 623 (A,129,93)	RAB4CQ473J
	R 256 (A,25,127) (B)	RS1/16SS821J	R 624 (A,124,89) (A,B)	RS1/16SS222J
	R 257 (A,30,131) (B)	RS1/16SS223J	R 625 (A,115,90)	RS1/16SS221J
	R 258 (A,25,129) (B)	RS1/16SS223J	R 626 (A,114,90)	RS1/16SS221J
	R 260 (A,14,126)	RS1/16SS821J		
			R 627 (A,113,90)	RS1/16SS221J
	R 261 (A,10,128)	RS1/16SS821J	R 628 (A,112,90)	RS1/16SS221J
F	R 262 (A,15,127)	RS1/16SS223J	R 629 (A,110,91)	RS1/16SS221J
	R 263 (A,10,129)	RS1/16SS223J	R 630 (A,109,91)	RS1/16SS221J
	R 264 (A,16,130) (B)	RS1/16SS0R0J	R 631 (A,107,92)	RS1/16SS473J
	R 265 (A,17,128) (A,C,D)	RS1/16SS0R0J		
			R 632 (A,108,87)	RS1/16SS473J

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 633 (A,106,92)	RS1/16SS101J	R 812 (A,112,21)	RS1/10SR222J
R 634 (A,103,90)	RS1/16SS102J	R 813 (A,107,16)	RS1/10SR222J
R 635 (A,102,89)	RS1/16SS102J	R 814 (A,101,19)	RS1/10SR222J
R 636 (A,99,91)	RS1/16SS473J	R 815 (A,100,19)	RS1/16SS822J
R 637 (A,101,89)	RS1/16SS473J	R 816 (A,96,19)	RS1/10SR222J
R 638 (A,104,92)	RS1/16SS473J	R 817 (A,95,19)	RS1/10SR222J
R 639 (A,97,91)	RS1/16SS472J	R 851 (A,93,20)	RS1/16SS472J
R 640 (A,98,91)	RS1/16SS472J	R 871 (A,157,66)	RS1/10SR332J
R 643 (A,97,81)	RS1/16SS104J	R 872 (A,156,68)	RS1/16SS103J
R 644 (A,97,79)	RS1/16SS101J	R 878 (A,124,26)	RS1/10SR473J
R 645 (A,95,79)	RS1/16SS101J	R 891 (A,58,138)	RS1/16SS102J
R 646 (A,91,74)	RS1/16SS103J	R 892 (A,57,137)	RS1/16SS102J
R 647 (A,98,75)	RS1/16SS101J	R 894 (A,45,130) (D)	RS1/16SS223J
R 648 (A,94,76)	RS1/16SS102J	R 895 (A,45,129) (D)	RS1/16SS101J
R 649 (A,94,75)	RS1/16SS102J	R 896 (A,42,130) (D)	RS1/16SS223J
R 650 (A,94,74)	RS1/16SS102J	R 897 (A,43,128) (D)	RS1/16SS101J
R 651 (A,91,72)	RS1/16SS473J	R 898 (A,43,129) (D)	RS1/16SS101J
R 652 (A,94,68)	RS1/16SS222J	R 911 (A,145,40)	RS1/10SR1R0J
R 653 (A,96,66)	RS1/16SS103J	R 912 (A,141,41)	RS1/10SR1R0J
R 659 (A,125,61)	RS1/16SS153J	R 913 (A,154,42)	RS1/16SS223J
R 660 (A,124,60)	RS1/16SS153J	R 914 (A,133,42)	RS1/16SS223J
R 662 (A,129,66) (A,B,C)	RS1/16SS473J	R 941 (A,126,110)	RS1/16SS223J
R 663 (A,140,75) (A,B,C)	RS1/16SS0R0J	R 942 (A,126,111)	RS1/16SS473J
R 664 (A,92,64)	RS1/16SS103J	R 943 (A,131,113) (A,D) (A,131,113) (B,C)	RS1/16SS333J
R 665 (A,124,85)	RS1/16SS473J	R 944 (A,125,114) (A,D) (A,125,114) (B,C)	RS1/4SA122J
R 666 (A,124,76)	RS1/16SS473J	R 951 (A,122,109) (D)	RS1/4SA102J
R 667 (A,129,65)	RS1/16SS473J	R 952 (A,120,111) (D)	RS1/16SS102J
R 671 (A,131,71)	RS1/16SS104J		RS1/16SS223J
R 681 (A,110,96)	RS1/16SS473J	R 953 (A,101,122) (D)	RS1/16SS153J
R 682 (A,111,91)	RS1/16SS473J	R 961 (A,148,134) (B,C)	RS1/16SS181J
R 683 (A,121,93)	RS1/16SS473J	R 962 (A,145,132) (B,C)	RS1/16SS223J
R 684 (A,110,95)	RS1/16SS473J	R 963 (A,145,130) (B,C)	RS1/16SS181J
R 685 (A,121,96)	RS1/16SS473J	R 964 (A,145,131) (B,C)	RS1/16SS223J
R 701 (A,109,38)	RS1/16SS473J	R 965 (A,143,131) (A,B,C)	RAB4CQ102J
R 702 (A,115,37)	RS1/16SS104J	R 973 (A,90,63) (A,B)	RS1/16SS222J
R 703 (A,118,28)	RAB4CQ472J	R 974 (A,98,55) (A,B)	RS1/16SS101J
R 704 (A,110,41)	RS1/16SS104J	R 975 (A,98,54) (A,B)	RS1/16SS101J
R 706 (A,108,36)	RS1/16SS221J	R 976 (A,98,52) (A,B)	RS1/16SS101J
R 707 (A,108,38)	RS1/16SS221J	R 1003 (A,139,60)	RS1/16SS473J
R 708 (A,110,38)	RS1/16SS101J	R 1008 (A,146,66) (A,B,C)	RS1/10SR0R0J
R 709 (A,111,38)	RS1/16SS221J	R 1009 (A,138,58) (A,B,C)	RS1/16SS473J
R 710 (A,112,38)	RS1/16SS101J		
R 711 (A,114,39)	RS1/16SS102J		
R 715 (A,117,36)	RAB4CQ151J		
R 718 (A,122,36)	RS1/16SS221J		
R 719 (A,121,36)	RS1/16SS104J		
R 752 (A,14,108)	RS1/4SA391J		
R 753 (A,106,40)	RS1/16SS473J		
R 754 (A,105,42)	RS1/16SS103J		
R 801 (A,124,21)	RS1/10SR222J		
R 802 (A,104,13)	RS1/10SR222J		
R 803 (A,121,17)	RS1/16SS223J		
R 804 (A,118,17)	RS1/16SS223J		
R 805 (A,121,19)	RS1/10SR101J		
R 806 (A,118,20)	RS1/10SR101J		
R 807 (A,119,20)	RS1/10SR101J		
R 808 (A,123,19)	RS1/10SR222J		
R 809 (A,115,21)	RS1/10SR220J		
R 810 (A,114,21)	RS1/10SR220J		
R 811 (A,117,20)	RS1/10SR222J		
		<u>CAPACITORS</u>	
		C 201 (A,94,115)	CKSRYB105K10
		C 202 (A,101,116)	CKSRYB105K10
		C 203 (A,89,115)	CKSRYB105K10
		C 204 (A,105,115)	CKSRYB105K10
		C 205 (A,91,116)	CKSRYB105K10
		C 206 (A,104,112)	CKSRYB105K10
		C 207 (A,89,108)	CKSSYB104K10
		C 208 (A,91,106)	CKSSYB104K10
		C 209 (A,90,104) 10 uF	CCG1192
		C 210 (A,93,106)	CCSSCH151J50
		C 211 (A,106,107)	CCSSCH151J50
		C 212 (A,105,109) 10 uF	CCG1192
		C 213 (A,105,106)	CKSSYB104K10
		C 214 (A,105,104)	CKSSYB104K10
		C 215 (A,105,102)	CKSSYB104K10

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 216 (A,88,101) 10 uF
 C 217 (A,92,100)
 C 218 (A,112,109)
 C 219 (A,109,103) 10 uF
 C 220 (A,103,98) 10 uF

CCG1192
 CKSSYB104K10
 XCEVW470M16
 CCG1192
 CCG1192

C 424 (A,144,101)
 C 425 (A,143,99) 10 uF
 C 426 (A,143,97)
 C 427 (A,148,97)

CKSSYB103K16
 CCG1192
 CKSSYB104K10
 CKSSYB104K10

C 223 (A,87,101)
 C 224 (A,112,103)
 C 229 (A,108,111)
 C 236 (A,107,104)

CKSSYB102K50
 CKSSYB104K10
 CKSSYB102K50
 CKSRYB105K10

C 428 (A,141,96)
 C 429 (A,140,96)
 C 430 (A,143,90)
 C 432 (A,142,92)
 C 433 (A,140,91)

CCSSCH101J50
 CKSSYB103K16
 CKSSYB102K50
 CCSSCH820J50
 CKSSYB102K50

C 237 (A,91,114) (B,C,D)
 C 238 (A,106,113) (B,C,D)
 C 239 (A,105,116) (B,C,D)
 C 240 (A,92,112) (B,C,D)
 C 241 (A,85,101)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSSYB102K50

C 434 (A,145,89)
 C 435 (A,143,86)
 C 440 (A,146,86)
 C 442 (A,150,83)
 C 444 (A,156,82) 2.2 uF

CCSSCH100D50
 CKSRYB474K10
 CKSSYB102K50
 CKSSYB104K10
 CCG1218

C 251 (A,26,126) 4.7 uF
 C 252 (A,22,126) 4.7 uF
 C 253 (A,22,129)
 C 254 (A,17,127)
 C 255 (A,34,127) 4.7 uF(B)

CCG1201
 CCG1201
 CCSSCH101J50
 CCSSCH101J50
 CCG1201

C 445 (A,160,82)
 C 448 (A,162,85)
 C 449 (A,165,85)
 C 450 (A,165,90)
 C 451 (A,162,91)

CKSSYB104K10
 CKSSYB104K10
 CCSSCH9R0D50
 CCSSCH9R0D50
 CKSSYB104K10

C 256 (A,30,126) 4.7 uF(B)
 C 257 (A,30,130) (B)
 C 258 (A,25,130) (B)
 C 260 (A,34,131)

CCG1201
 CCSSCH101J50
 CCSSCH101J50
 CKSSYB103K16

C 452 (A,162,94)
 C 453 (A,164,96)
 C 455 (A,162,97)
 C 456 (A,166,92)
 C 457 (A,166,93)

CKSRYB105K10
 CKSSYB104K10
 CKSRYB224K16
 CKSSYB472K25
 CKSSYB472K25

C 261 (A,6,132)
 C 262 (A,16,124) 4.7 uF
 C 263 (A,12,124) 4.7 uF
 C 264 (A,15,128)
 C 265 (A,10,130)

CKSSYB104K10
 CCG1201
 CCG1201
 CCSSCH101J50
 CCSSCH101J50

C 459 (A,158,83)
 C 461 (A,149,104)
 C 462 (A,148,75)
 C 531 (A,90,90)
 C 532 (A,92,90)

CCSSCH101J50
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

C 301 (A,69,129)
 C 303 (A,80,129)
 C 305 (A,72,129)
 C 307 (A,77,129)
 C 313 (A,84,130)

CKSRYB224K16
 CKSRYB224K16
 CKSRYB224K16
 CKSRYB224K16
 CKSRYB105K16

C 551 (A,27,112)
 C 552 (A,35,108)
 C 553 (A,36,112)
 C 555 (A,47,114)
 C 556 (A,64,111)

XCEVW221M16
 CKSRYB105K16
 CKSSYB103K16
 CKSSYB682K25
 CEVQW221M6R3

C 314 (A,132,126)
 C 317 (A,60,129)
 C 321 (A,83,129)
 C 323 (A,106,129)
 C 324 (A,102,129)

CKSRYB104K16
 XCEVW100M16
 CCSSCH101J50
 CCSRCH100D50
 CCSRCH100D50

C 557 (A,60,112)
 C 560 (A,108,21)
 C 561 (A,103,24)
 C 564 (A,58,113) 4.7 uF
 C 565 (A,37,109) 4.7 uF

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CCG1201
 CCG1222

C 325 (A,95,134)
 C 326 (A,94,139)
 C 327 (A,63,123)
 C 336 (A,95,125)
 C 401 (A,158,100)

CCSRCH100D50
 CCSRCH100D50
 CKSRYB105K10
 CKSRYB104K16
 CKSSYB104K10

C 568 (A,64,101) 10 uF
 C 572 (A,69,122)
 C 601 (A,104,62)
 C 602 (A,109,62)
 C 603 (A,113,62)

CCG1192
 CKSRYB104K16
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

C 402 (A,159,101)
 C 403 (A,157,102)
 C 405 (A,166,101)
 C 406 (A,164,101)
 C 408 (A,166,104)

CKSSYB103K16
 CKSRYB105K10
 CKSSYB103K16
 CKSSYB103K16
 CKSSYB103K16

C 604 (A,115,61)
 C 605 (A,118,61)
 C 606 (A,125,69)
 C 607 (A,126,72)
 C 608 (A,128,77)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CCSSCH120J50
 CCSSCH120J50

C 409 (A,160,105)
 C 410 (A,159,107)
 C 411 (A,152,99)
 C 412 (A,152,101)
 C 413 (A,154,101)

CCSSCH6R0D50
 CCSSCH330J50
 CKSSYB103K16
 CKSSYB104K10
 CKSSYB104K10

C 609 (A,125,70)
 C 610 (A,124,72)
 C 611 (A,124,77)
 C 612 (A,125,82)
 C 613 (A,124,84)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

C 414 (A,149,100)
 C 415 (A,148,101) 10 uF
 C 416 (A,151,100)
 C 417 (A,152,103)
 C 418 (A,146,101)

CKSSYB103K16
 CCG1192
 CKSSYB104K10
 CCSSCH100D50
 CKSSYB223K16

C 618 (A,126,89) (A,B)
 C 619 (A,126,94) (A,B)
 C 620 (A,116,88)
 C 621 (A,112,87)
 C 623 (A,109,89)

CCSSCH120J50
 CCSSCH120J50
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10

C 420 (A,155,106) (A,D)
 C 421 (A,158,111) (B,C)

CKSSYB103K16
 CCSSCJ3R0C50

C 624 (A,106,87)

CKSSYB104K10

1

2

3

4

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 625 (A,104,90)	CKSSYB104K10	MISCELLANEOUS	
C 626 (A,99,79)	CKSSYB104K10	IC 1802 (B,84,22) IC	PDC202B
C 627 (A,95,81)	CCSSCH220J50	IC 1851 (B,47,21) IC	BH2228FV
C 628 (A,94,81)	CCSSCH220J50	IC 1941 (A,155,39) IR RC REC Module(B,C)	PNJ4833M
C 629 (A,98,72)	CKSSYB104K10	Q 1851 (B,31,8) Chip Transistor	HN1C01FU
C 630 (A,98,70)	CKSSYB104K10	Q 1852 (B,32,11) Chip Transistor	HN1C01FU
C 631 (A,96,75)	CCSSCH220J50	Q 1853 (B,56,24) Chip Transistor	HN1C01FU
C 634 (A,108,61)	CKSSYB104K10		
C 635 (A,105,88)	CKSSYB104K10	Q 1857 (B,20,9) Transistor	LSCR523UB
C 636 (A,99,76)	CKSSYB104K10	Q 1858 (B,12,10) Transistor	LSCR523UB
C 637 (A,134,70) (A,B,C)	CKSSYB104K10	Q 1859 (B,12,24) Transistor	LSCR523UB
C 638 (A,137,68) (A,B,C)	CKSSYB104K10	Q 1866 (B,110,26) Transistor	LSCR523UB
C 639 (A,113,57) 4.7 uF(A,D)	CCG1212	Q 1867 (B,120,26) Transistor	LSCR523UB
C 672 (A,126,71) 1 uF	DCH1246		
C 681 (A,122,96)	CKSSYB104K10	Q 1868 (B,128,27) Transistor	LSCR523UB
C 683 (A,121,94)	CCSSCJ3R0C50	D 1882 (A,9,20) LED	SMLVN6RGB2UK(B)
C 684 (A,130,99)	CKSSYB104K10	D 1883 (A,41,20) LED	SMLVN6RGB2UK(B)
C 701 (A,111,41)	CKSSYB103K16	D 1884 (A,162,26) LED	SMLVN6RGB2UK(B)
C 704 (A,120,39)	CCSSCH100D50	D 1885 (A,148,23) LED	SMLVN6RGB2UK(B)
C 705 (A,118,39)	CCSSCH100D50	D 1886 (A,47,23) LED	SMLVN6RGB2UK(B)
C 706 (A,116,39)	CCSSCH100D50	L 1921 (B,136,11) Inductor	CTF1389
C 752 (A,18,106)	CKSSYB104K10	L 1922 (B,131,6) Inductor	CTF1389
C 753 (A,23,101) 4.7 uF	CCG1201	L 1923 (B,140,7) Inductor	CTF1389
C 801 (A,124,6)	CCSRCH221J50	X 1801 (B,69,22) Ceramic Resonator 5.00 MHz	CSS1547
C 806 (A,125,8)	CKSRYP104K16	S 1821 (A,51,5) Push Switch	CSG1155
C 807 (A,122,14)	CKSRYP105K10	S 1822 (A,11,41) Push Switch	CSG1155
C 808 (A,108,19)	CKSRYP104K16	S 1823 (A,67,5) Push Switch	CSG1155
C 809 (A,96,16)	CCSRCH221J50	S 1824 (A,15,5) Push Switch	CSG1155
C 810 (A,96,13)	CCSRCH221J50	S 1826 (A,5,20) Push Switch	CSG1155
C 811 (A,104,20)	CKSSYB104K10	S 1828 (A,35,33) Push Switch	CSG1155
C 812 (A,119,25)	CKSSYB104K10	S 1830 (A,25,19) Encoder(MULTI-CONTROL)	CSD1168
C 873 (A,124,25)	CKSRYP104K16	S 1832 (A,35,5) Push Switch	CSG1155
C 891 (A,53,137)	CKSRYP104K16	S 1834 (A,76,5) Push Switch	CSG1155
C 892 (A,36,132)	CKSRYP104K16	S 1835 (A,146,5) Push Switch	CSG1155
C 893 (A,39,130) (A,B,D)	CKSRYP102K50	S 1836 (A,123,5) Push Switch	CSG1155
C 894 (A,52,134) (A,B,D)	CKSRYP102K50	S 1837 (A,130,5) Push Switch	CSG1155
C 895 (A,49,132) (D)	CKSRYP102K50	S 1838 (A,99,5) Push Switch	CSG1155
C 901 (A,130,124) 2 200 uF/16 V	CCH2040	S 1839 (A,107,5) Push Switch	CSG1155
C 912 (A,152,40)	CKSSYB102K50	S 1840 (A,83,5) Push Switch	CSG1155
C 913 (A,134,41)	CKSSYB102K50	S 1842 (A,15,33) Push Switch	CSG1155
C 914 (A,156,57)	XCEAT102M16	CN1911 (A,155,26) Connector	CKS6443
C 915 (A,136,41)	CKSRYP104K16	CN1931 (B,109,10) Connector	CKS6451
C 916 (A,146,43) 4.7 uF	CCG1201	JA1921 (A,156,11) Jack	YKN5006
C 917 (A,145,46)	CKSSYB102K50	V 1802 (A,53,32) Segment LCD	CAW2041
C 919 (A,151,42) 4.7 uF	CCG1201		
C 921 (A,130,41) 4.7 uF	CCG1201	RESISTORS	
C 923 (A,159,41) 4.7 uF	CCG1201	R 1809 (B,76,10)	RS1/16SS473J
C 926 (A,140,44) 4.7 uF	CCG1201	R 1810 (B,63,21)	RS1/16SS103J
C 927 (A,139,42)	CKSSYB102K50	R 1824 (B,32,31)	RS1/16SS273J
C 930 (A,136,123)	CKSRYP104K16	R 1851 (B,50,16)	RS1/10SR222J
C 941 (A,132,113)	CKSRYP104K16	R 1852 (B,48,16)	RS1/10SR222J
C 961 (A,149,131) (A,B,C)	CKSRYP105K16	R 1853 (B,52,9)	RS1/10SR222J
C 973 (A,98,53) (A,B)	CCSSCH470J50	R 1854 (B,41,18)	RAB4CQ102J
		R 1855 (B,42,22)	RAB4CQ102J
		R 1856 (B,26,10)	RS1/16SS101J
		R 1857 (B,28,8)	RS1/16SS101J
		R 1858 (B,13,13)	RS1/16SS101J
		R 1859 (B,101,23)	RS1/16SS101J
		R 1860 (B,58,21)	RS1/16SS101J
		R 1861 (B,58,24)	RS1/16SS101J
		R 1862 (B,24,7)	RS1/16SS680J

B
Unit Number : (A,D)
Unit Number : (B,C)
Unit Name : Keyboard Unit

1

Circuit Symbol and No.

R 1864 (B,17,8)
 R 1866 (B,11,20)
 R 1868 (B,115,25)
 R 1870 (B,125,27)
 R 1872 (B,131,26)

2

Part No.

RS1/16SS680J
 RS1/16SS680J
 RS1/16SS680J
 RS1/16SS680J
 RS1/16SS680J

3

Circuit Symbol and No.

R 291 (B,34,35)
 R 294 (B,28,49)
 R 303 (A,28,12)
 R 304 (A,29,11)
 R 305 (A,27,9)

4

Part No.

RS1/16SS560J
 RS1/16SS471J
 RS1/16SS123J
 RS1/16SS123J
 RS1/16SS102J

R 1931 (B,74,6)
 R 1932 (B,78,6)
 R 1941 (B,145,32) (A,D)
 R 1944 (B,144,27) (B,C)

RS1/10SR222J
 RS1/10SR222J
 RS1/16SS473J
 RS1/10SR101J

R 306 (A,27,12)
 R 307 (A,26,9)
 R 308 (A,26,12)
 R 309 (A,35,7)
 R 310 (B,31,9)

RS1/16SS472J
 RS1/16SS102J
 RS1/16SS472J
 RS1/16SS473J
 RS1/16SS472J

CAPACITORS

C 1801 (B,78,12)
 C 1802 (B,77,12)
 C 1803 (B,79,12)
 C 1804 (B,72,21)
 C 1805 (B,72,23)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSRYB105K10
 CKSSYB104K10

R 311 (B,31,10)
 R 312 (B,31,11)
 R 313 (B,31,12)
 R 701 (A,22,38)
 R 702 (A,24,38)

RS1/16SS472J
 RS1/16SS472J
 RS1/16SS472J
 RS1/16SS101J
 RS1/16SS101J

C 1854 (B,52,23)
 C 1855 (B,52,24)
 C 1911 (B,164,34)
 C 1912 (B,140,16)
 C 1941 (B,144,29) 10 uF(B,C)

CKSSYB103K16
 CKSRYB105K10
 CKSRYB104K16
 CKSRYB104K16
 CCG1192

R 706 (A,33,42)

RS1/16SS221J

CAPACITORS

C 104 (B,15,52)
 C 110 (B,11,44)
 C 111 (B,12,44)
 C 203 (B,22,47)
 C 205 (A,17,41)

CKSQYB475K6R3
 CKSSYB104K10
 CKSSYB103K16
 CKSSYB104K10
 CKSRYB105K10

C**Unit Number: CWX4269****Unit Name : CD Core Unit(S11.6VA)****MISCELLANEOUS**

IC 201 (B,24,38) IC PEQ094A
 IC 301 (A,37,12) IC BD8223EFV
 Q 101 (B,12,54) Transistor 2SA1577
 Q 102 (B,16,55) Chip Digital Transistor LTA123JUB
 X 201 (B,25,50) Ceramic Resonator 16.934 MHz CSS1603

S 901 (A,43,54) Spring Switch(HOME) CSN1080
 S 903 (B,22,13) Spring Switch(DSCSNS) CSN1081
 CN101 (A,17,58) Connector CKS4808
 CN701 (A,26,30) Connector CKS6146

RESISTORS

R 101 (B,7,59) RS1/10SR2R4J
 R 102 (B,8,59) RS1/10SR2R4J
 R 103 (B,10,59) RS1/10SR2R7J
 R 108 (B,14,58) RS1/16SS105J
 R 109 (B,15,50) RS1/16SS152J

R 214 (B,18,28) RS1/16SS103J
 R 215 (B,17,28) RS1/16SS393J
 R 216 (B,13,36) RS1/16SS102J
 R 217 (B,10,33) RS1/16SS562J
 R 218 (B,10,36) RS1/16SS472J

R 229 (B,13,35) RS1/16SS471J
 R 232 (A,31,55) RS1/16SS0R0J
 R 237 (B,34,45) RS1/16SS221J
 R 240 (B,35,40) RS1/16SS473J
 R 245 (A,34,46) RS1/16SS104J

R 254 (A,37,56) RS1/16SS104J
 R 260 (B,30,27) RS1/16SS103J
 R 264 (A,22,9) RS1/16SS102J
 R 281 (B,34,38) RS1/16SS560J
 R 282 (B,34,39) RS1/16SS560J

C 209 (B,29,48)
 C 210 (B,33,44)
 C 211 (B,34,42)
 C 212 (B,23,29)
 C 213 (B,18,26)

CKSRYB104K16
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB332K50

C 214 (B,17,26)
 C 215 (B,19,29)
 C 216 (B,13,33)
 C 217 (B,10,35)
 C 218 (B,10,37)

CKSSYB473K16
 CKSSYB104K10
 CKSSYB152K50
 CCSSCH390J50
 CCSSCH5R0C50

C 219 (B,14,35)
 C 220 (A,18,39)
 C 221 (B,14,32)
 C 222 (B,14,37)
 C 223 (B,13,42)

CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CKSSYB104K10
 CCSSCH680J50

C 224 (B,14,45)
 C 225 (B,14,47)
 C 228 (B,10,34)
 C 229 (B,9,41)
 C 233 (B,33,46)

CCSSCH470J50
 CKSSYB103K16
 CCSSCH180J50
 CKSSYB104K10
 CKSSYB103K16

C 236 (B,8,41)
 C 238 (A,26,45)
 C 299 (A,26,43)
 C 302 (B,29,12)
 C 303 (B,30,12)

CKSSYB104K10
 CKSRYB104K16
 CKSSYB104K10
 CKSSYB102K50
 CKSSYB102K50

C 304 (B,28,12)
 C 305 (B,27,12)
 C 306 (A,32,7)
 C 307 (A,42,19)
 C 308 (A,32,16)

CKSSYB223K16
 CKSSYB104K10
 CKSSYB104K10
 CKSRYB105K10
 CKSRYB105K10

C 710 (A,34,43)

CKSSYB102K50

D**Unit Number: QWM3750(A,B)****Unit Name : BT Unit**

1

2

3

4

MISCELLANEOUS

IC 21	(A,8,48) Regulator IC	S-1172B18-E6
IC 22	(A,21,46) IC	S-1206B33-U3
CN21	(A,34,27) Connector	CKS6346
CN23	(A,42,44) Connector	CKS3857

A

RESISTORS

R 28	(A,42,31)	RS1/10SR222J
R 29	(A,30,41)	RS1/10SR102J
R 30	(A,30,37)	RS1/10SR102J
R 38	(A,42,17)	RS1/10SR0R0J
R 39	(A,41,23)	RS1/10SR221J
R 40	(A,40,23)	RS1/10SR221J
R 41	(A,38,23)	RS1/10SR221J

B

CAPACITORS

C 23	(A,24,40)	XCEVW221M4
C 24	(A,7,44)	CKSRYB105K10
C 26	(A,27,48) 10 uF	CCG1192
C 29	(A,17,45)	CKSRYB105K10
C 33	(A,9,54) 10 uF	CCG1192
C 34	(A,42,30)	CKSRYB105K10
C 36	(A,32,40)	CKSRYB104K16
C 38	(A,15,46) 10 uF	CCG1192
C 39	(A,6,42) 10 uF	CCG1192

C

D

E

F