


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

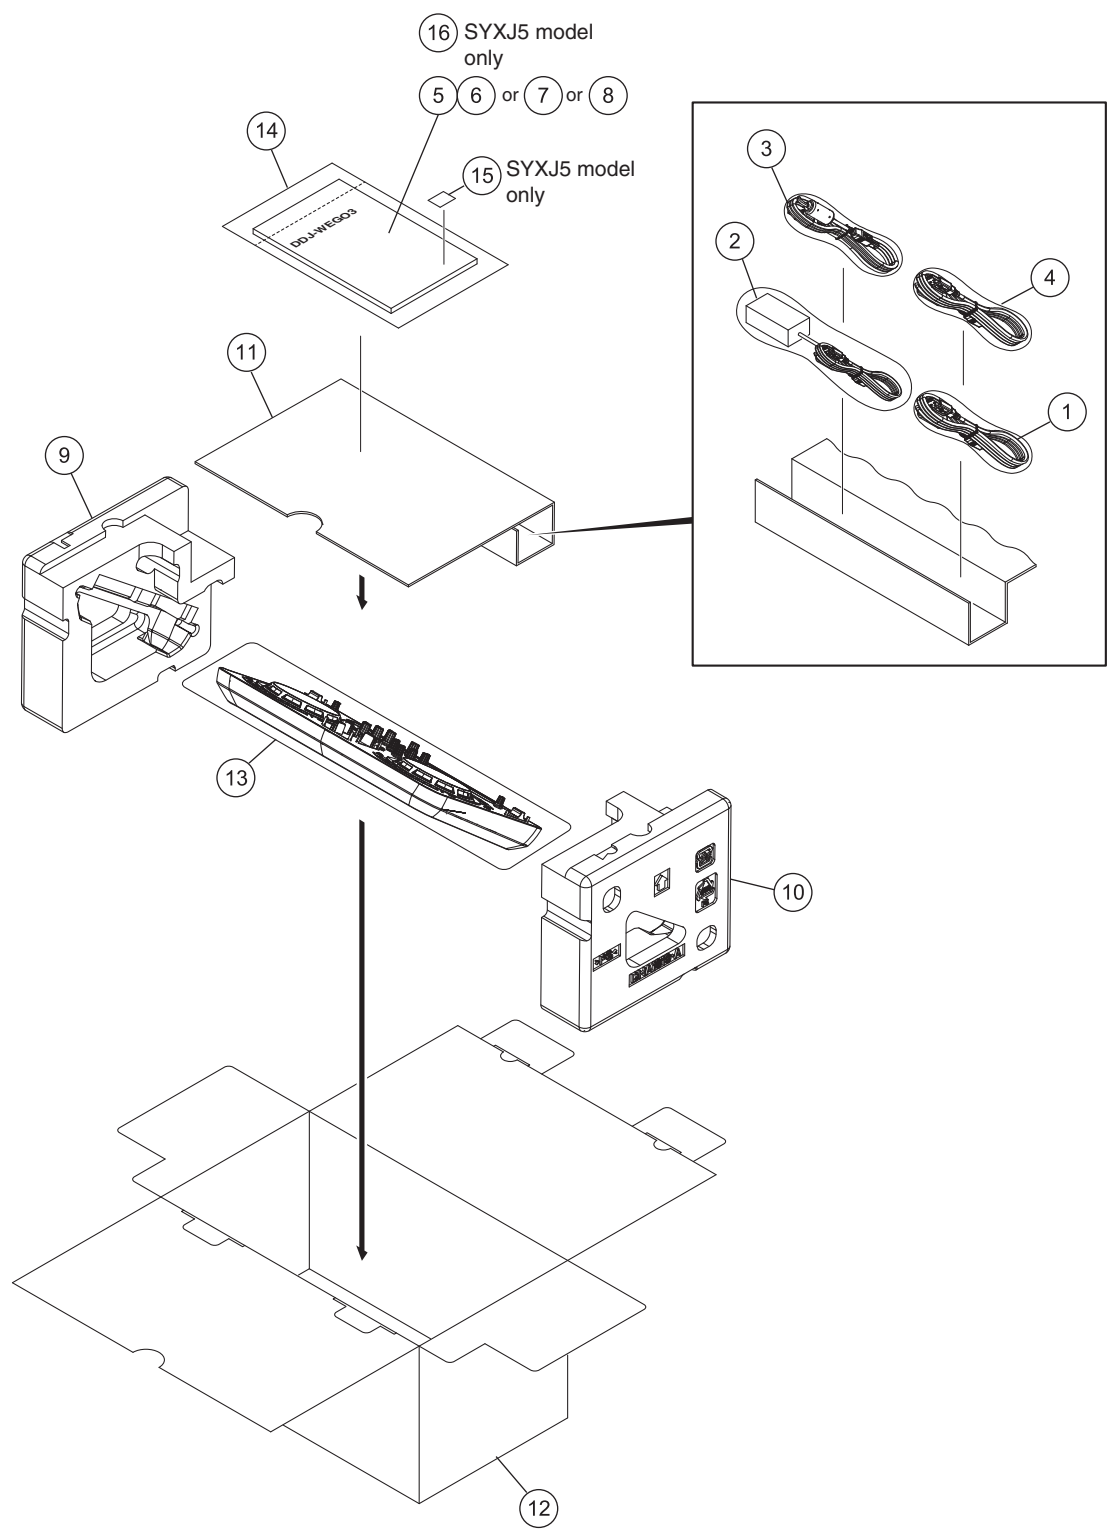

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)	8	Operating Instructions	See Contrast table (2)	
⚠	2	AC Adapter	DWR1546		(DJ unit Setup)		
	3	USB Cable	DDE1140	9	Pad/L	DHA1918	
	4	iPhone/iPad Connection Cable (Lightning)	DDE1145	10	Pad/R	DHA1919	
				11	Partition/ACC	DHC1086	
	5	Operating Instructions (DJ unit Setup)	See Contrast table (2)	12	Packing Case	See Contrast table (2)	
	6	Operating Instructions (DJ unit Setup)	See Contrast table (2)	13	Packing Sheet	AHG7053	
	7	Operating Instructions (DJ unit Setup)	See Contrast table (2)	NSP 14	Polyethylene Bag	AHG7117	
				15	Label/IM1	See Contrast table (2)	
				NSP 16	Warranty	See Contrast table (2)	

(2) CONTRAST TABLE

DDJ-WEGO3-K/SYXJ5, UXJCB, AXJ5, DDJ-WEGO3-W/SYXJ5, UXJCB, AXJ5, DDJ-WEGO3-R/SYXJ5 and UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO3-K /SYXJ5	DDJ-WEGO3-K /UXJCB	DDJ-WEGO3-K /AXJ5	DDJ-WEGO3-W /SYXJ5	DDJ-WEGO3-W /UXJCB	DDJ-WEGO3-W /AXJ5
⚠	1	Power Cord	ADG1154	XDG3052	ADG7079	ADG1154	XDG3052	ADG7079
	5	Operating Instructions (DJ unit Setup) (En, Fe, De, It, Ni)	DRH1287	Not used	Not used	DRH1287	Not used	Not used
	6	Operating Instructions (DJ unit Setup) (Es, Pt, Ru, Ko, Ja)	DRH1288	Not used	Not used	DRH1288	Not used	Not used
	7	Operating Instructions (DJ unit Setup) (En)	Not used	DRH1289	Not used	Not used	DRH1289	Not used
	8	Operating Instructions (DJ unit Setup) (Zhcn)	Not used	Not used	DRH1291	Not used	Not used	DRH1291
	12	Packing Case	DHG3373	DHG3374	DHG3376	DHG3369	DHG3370	DHG3372
	15	Label/IM1	DRW2534	Not used	Not used	DRW2534	Not used	Not used
NSP	16	Warranty	ARY7158	Not used	Not used	ARY7158	Not used	Not used

Mark	No.	Symbol and Description	DDJ-WEGO3-R /SYXJ5	DDJ-WEGO3-R /UXJCB
⚠	1	Power Cord	ADG1154	XDG3052
	5	Operating Instructions (DJ unit Setup) (En, Fe, De, It, Ni)	DRH1287	Not used
	6	Operating Instructions (DJ unit Setup) (Es, Pt, Ru, Ko, Ja)	DRH1288	Not used
	7	Operating Instructions (DJ unit Setup) (En)	Not used	DRH1289
	8	Operating Instructions (DJ unit Setup) (Zhcn)	Not used	Not used
	12	Packing Case	DHG3397	DHG3399
	15	Label/IM1	DRW2534	Not used
NSP	16	Warranty	ARY7158	Not used

9.2 EXTERIOR SECTION

A


B

C

D

E


F

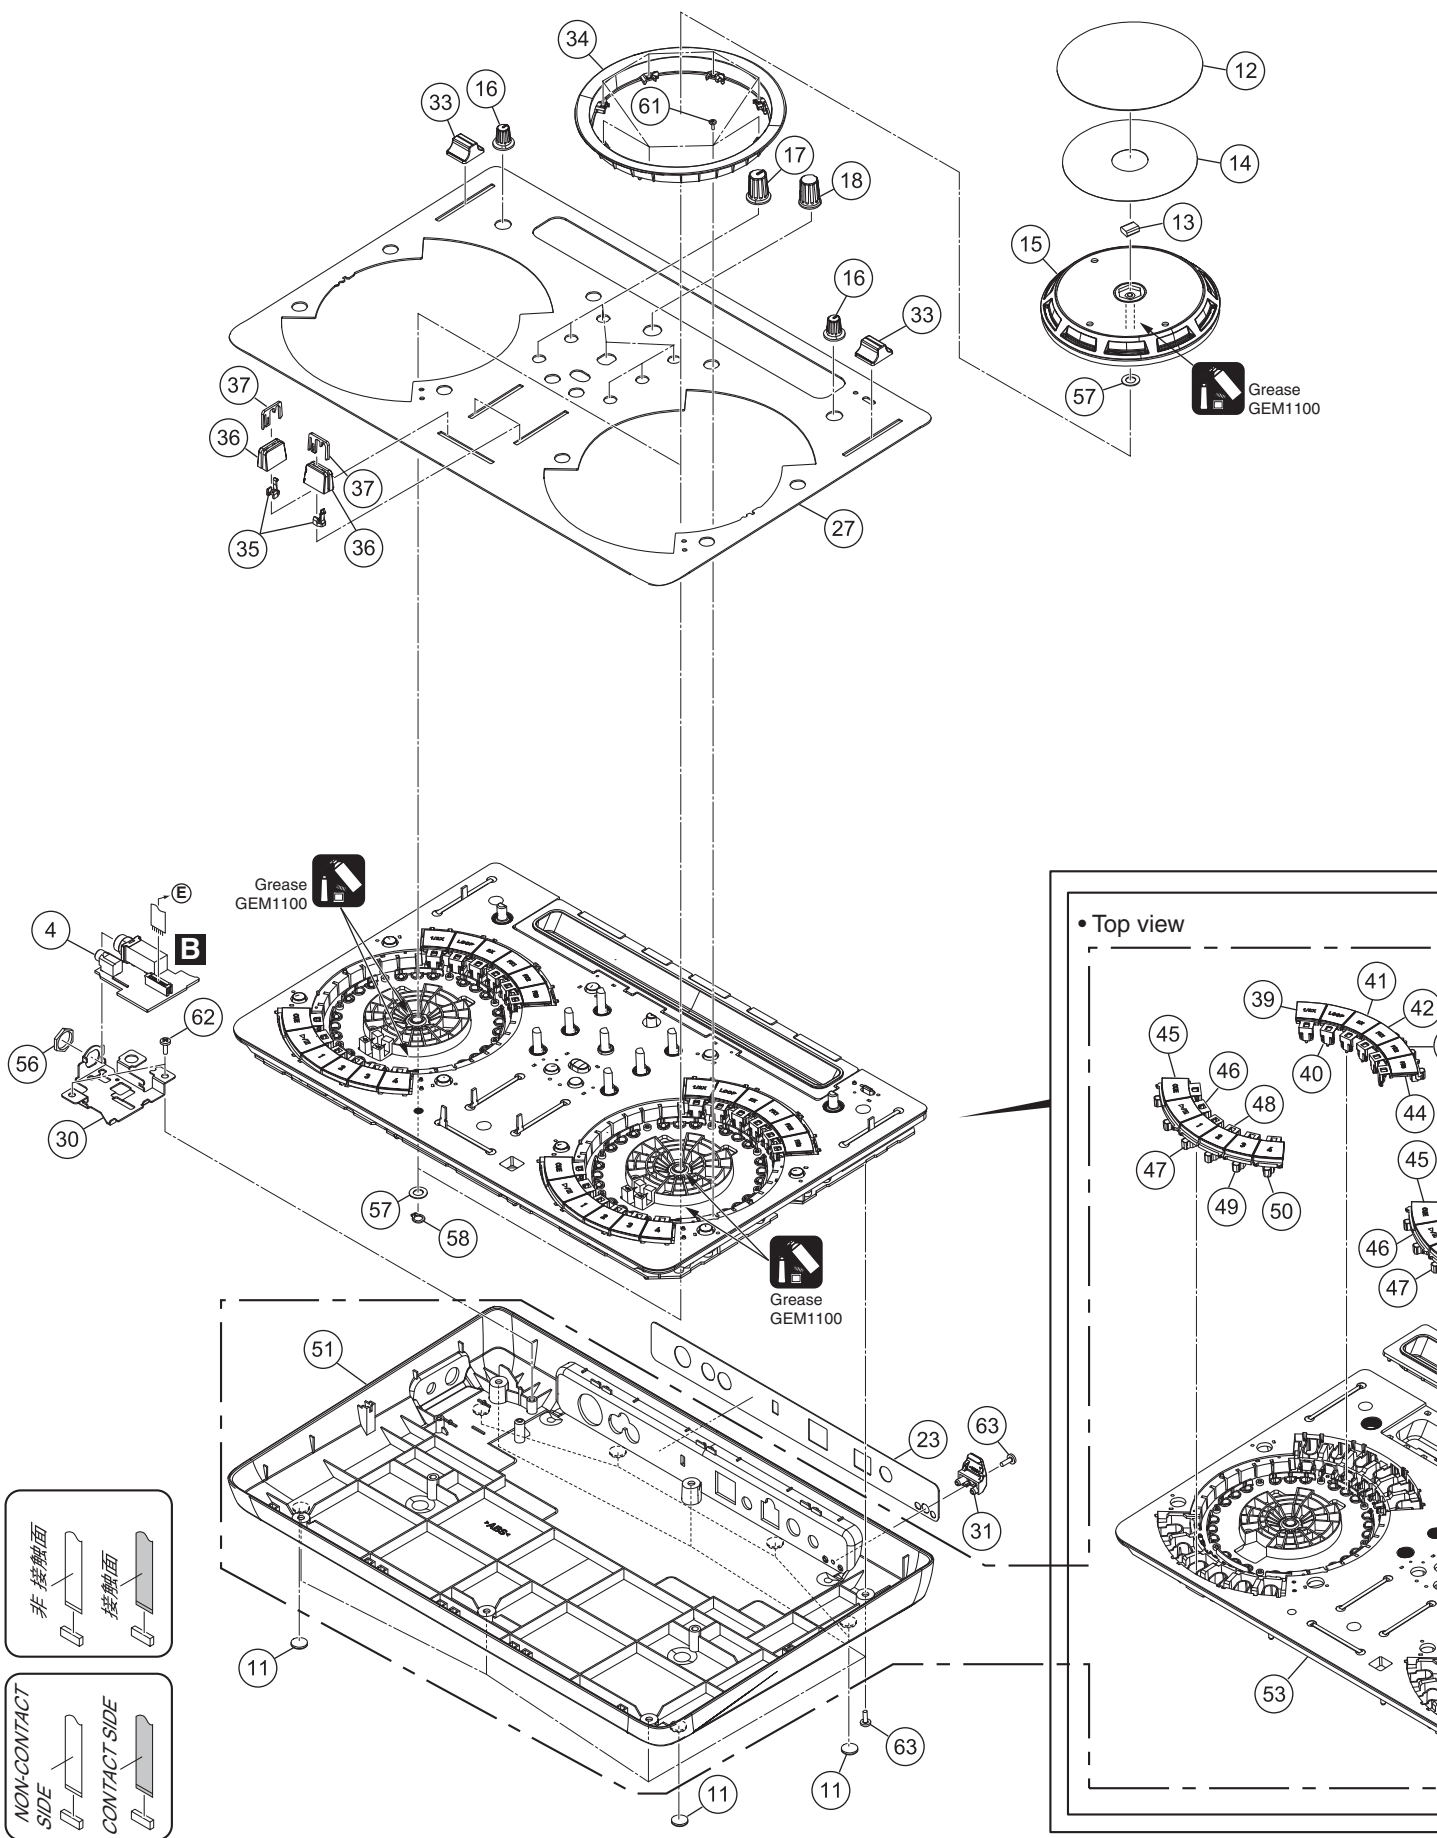

58

DDJ-WEGO3-K

ease
EM1100

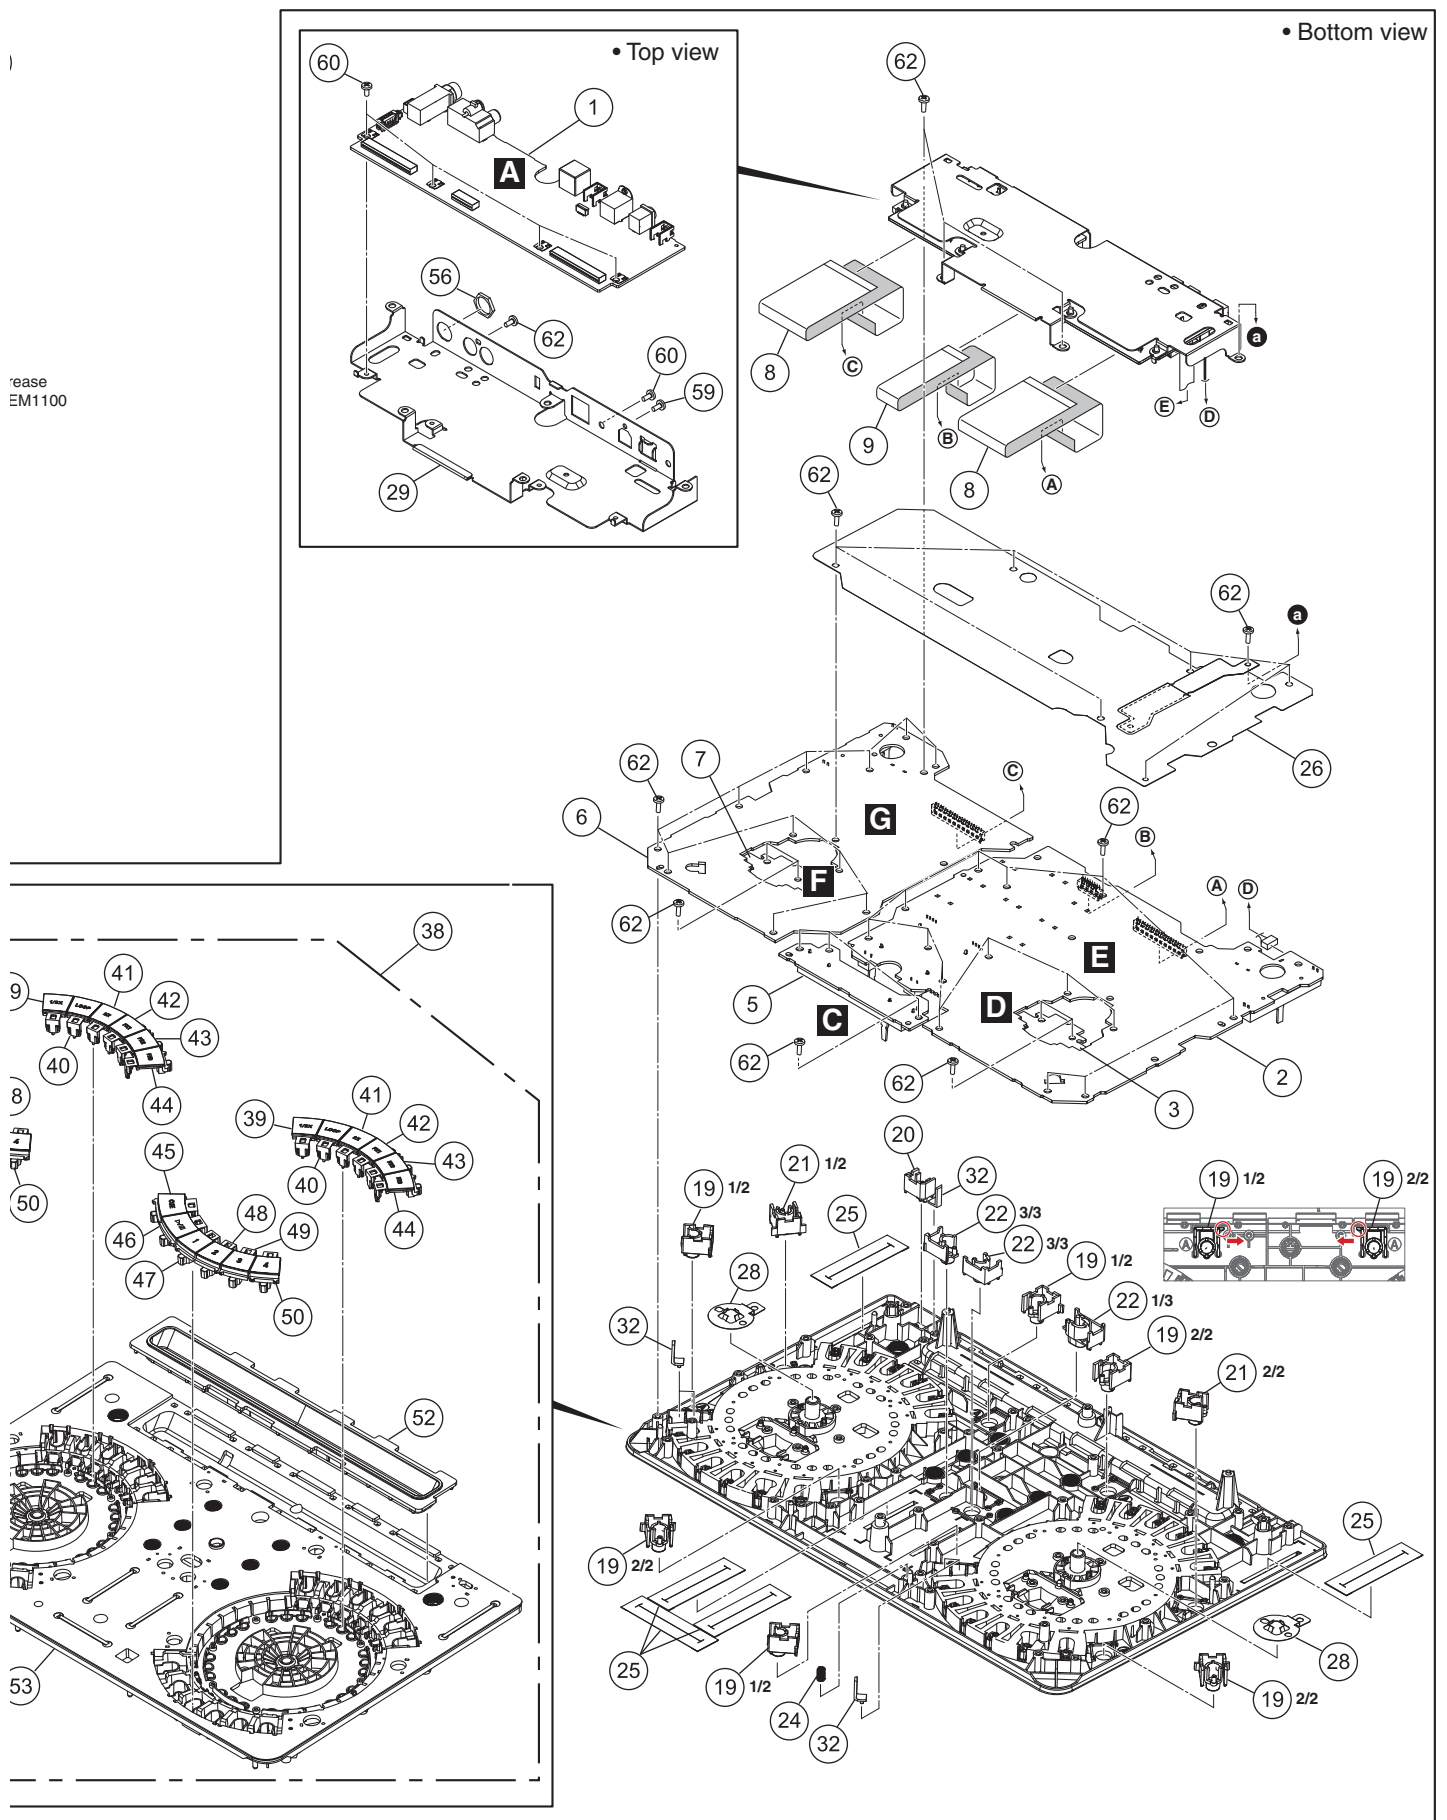

(1) EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MAIN Assy	DWX3591		36	Knob/SL1	See Contrast table (2)
	2	PNL1B Assy *1	DWX3592		37	Knob/SL2	See Contrast table (2)
	NSP 3	JOG1 Assy *1	DWX3593	⚠	38	1..Panel/BS	See Contrast table (2)
	4	HPJK Assy	DWX3594		39	2..Button/BL1	See Contrast table (2)
	5	CRFD Assy	DWX3597		40	2..Button/BL2	See Contrast table (2)
NSP	6	PNL2B Assy *2	DWX3595		41	2..Button/BL3	See Contrast table (2)
	7	JOG2 Assy *2	DWX3596		42	2..Button/BF1	See Contrast table (2)
	8	FFC/39P	DDD1673		43	2..Button/BF2	See Contrast table (2)
	9	FFC/15P	DDD1674		44	2..Button/BF3	See Contrast table (2)
	10	•••••			45	2..Button/BC	See Contrast table (2)
B	11	Foot/RUB	DEB2012		46	2..Button/BP	See Contrast table (2)
	12	Plate/JOG	See Contrast table (2)		47	2..Button/BH1	See Contrast table (2)
	13	Gasket/JOG	DEC3539		48	2..Button/BH2	See Contrast table (2)
	14	DS Tape/JOG	DEH1057		49	2..Button/BH3	See Contrast table (2)
	15	Jog Dial/ASW	See Contrast table (2)		50	2..Button/BH4	See Contrast table (2)
C	16	Rotary Knob S (Black)	See Contrast table (2)	⚠	51	2..Chassis	See Contrast table (2)
	17	Knob/PLS	See Contrast table (2)		52	2..Holder/PAD	See Contrast table (2)
	18	Knob/RBK	See Contrast table (2)	⚠	53	2..Panel/BS	DNK6362
	19	Button/TMP	See Contrast table (2)		54	•••••	
	20	Button/TIM	See Contrast table (2)		55	•••••	
D	21	Button/MT	See Contrast table (2)		56	Nut (M12)	NKX2FNI
	22	Button/CUE	See Contrast table (2)		57	Washer	WA62D095D050
	23	Sheet/TML	See Contrast table (2)		58	Washer	YC60FAC
	24	Coil Spring/SFX	DBH1796		59	Screw (M3*5)	DBA1340
	25	Fader Packing	DEC3355		60	Screw	BBZ30P060FTC
E	26	Barrier	DEC3559		61	Screw	BPZ20P050FTC
	27	Panel/AL	See Contrast table (2)		62	Screw	BPZ30P080FNI
	28	Plate/CND	DNH3137		63	Screw	See Contrast table (2)
	29	Stay/TML	DNH3162				
	30	Stay/PHN	DNH3163				
F	31	Hook/CRD	See Contrast table (2)				
	32	Lens/PWR	DNK6089				
	33	Knob/SLD	See Contrast table (2)				
	34	Escutcheon	See Contrast table (2)				
	35	Stopper/SLD	DNK6365				

*1: As the PNL1B Assy and JOG1 Assy are wired with jumper leads.
If a DWX3592 (PNL1B Assy) is ordered, the PNL1B Assy and JOG1 Assy wired with jumper leads will be delivered.
The part supply is impossible in JOG1 Assy alone (NSP: non-service part).

*2: As the PNL2B Assy and JOG2 Assy are wired with jumper leads.
If a DWX3595 (PNL2B Assy) is ordered, the PNL2B Assy and JOG2 Assy wired with jumper leads will be delivered.
The part supply is impossible in JOG2 Assy alone (NSP: non-service part).

(2) CONTRAST TABLE

DDJ-WEGO3-K, DDJ-WEGO3-W and DDJ-WEGO3-R are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO3-K	DDJ-WEGO3-W	DDJ-WEGO3-R
A	12	Plate/JOG	DAH2999	DAH2999	Not used
	12	Plate	Not used	Not used	DAH3024
	15	Jog Dial/ASW	DXB2160	DXB2160	Not used
	15	Jog Dial	Not used	Not used	DXB2166
	16	Rotary Knob S (Black)	DAA1262	Not used	DAA1262
	16	Knob/SWH	Not used	DAA1335	Not used
	17	Knob/PLS	DAA1324	Not used	DAA1324
	17	Knob/WHT	Not used	DAA1336	Not used
	18	Knob/RBK	DAA1337	Not used	DAA1337
	18	Knob/RWH	Not used	DAA1334	Not used
	19	Button/TMP	DAC2845	Not used	DAC2845
	19	Button/SFT	Not used	DAC3006	Not used
	20	Button/TIM	DAC2849	Not used	DAC2849
	20	Button/STB	Not used	DAC3010	Not used
	21	Button/MT	DAC2875	Not used	DAC2875
	21	Button/SNC	Not used	DAC3005	Not used
	22	Button/CUE	DAC3012	DAC3007	DAC3012
	23	Sheet/TML	DAH3001	DAH3000	DAH3001
	27	Panel/AL	DNB1236	DNB1235	DNB1238
	31	Hook/CRD	DNK6084	Not used	DNK6084
	31	Hook/CDW	Not used	DNK6398	Not used
	33	Knob/SLD	DNK6283	Not used	DNK6283
	33	Knob/TMP	Not used	DNK6355	Not used
	34	Escutcheon	DNK6359	DNK6351	DNK6359
	36	Knob/SL1	DNK6369	DNK6366	DNK6369
	37	Knob/SL2	DNK6370	DNK6367	DNK6370
	38	Panel/BS	DXB2159	DXB2158	DXB2159
	39	Button/BL1	DAC3055	Not used	DAC3055
	39	Button/WL1	Not used	DAC3043	Not used
	40	Button/BL2	DAC3056	Not used	DAC3056
	40	Button/WL2	Not used	DAC3044	Not used
	41	Button/BL3	DAC3057	Not used	DAC3057
	41	Button/WL3	Not used	DAC3045	Not used
	42	Button/BF1	DAC3058	Not used	DAC3058
	42	Button/WF1	Not used	DAC3046	Not used
	43	Button/BF2	DAC3059	Not used	DAC3059
	43	Button/WF2	Not used	DAC3047	Not used
	44	Button/BF3	DAC3060	Not used	DAC3060
	44	Button/WF3	Not used	DAC3048	Not used
	45	Button/BC	DAC3061	Not used	DAC3061
	45	Button/WC	Not used	DAC3049	Not used
	46	Button/BP	DAC3062	Not used	DAC3062
	46	Button/BP	Not used	DAC3050	Not used
	47	Button/BH1	DAC3063	Not used	DAC3063
	47	Button/WH1	Not used	DAC3051	Not used
	48	Button/BH2	DAC3064	Not used	DAC3064
	48	Button/WH2	Not used	DAC3052	Not used
	49	Button/BH3	DAC3065	Not used	DAC3065
	49	Button/WH3	Not used	DAC3053	Not used
	50	Button/BH4	DAC3066	Not used	DAC3066
	50	Button/WH4	Not used	DAC3054	Not used
	51	Chassis	DNK6357	DNK6348	DNK6404
	52	Holder/PAD	DNK6358	DNK6349	DNK6358
	63	Screw	BPZ30P100FTB	BPZ30P080FNI	BPZ30P100FTB

12. PCB PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times 10^1$ $\rightarrow$ 561 RD1/4PU $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$ J

47 k Ω $\rightarrow$ 47 $\times 10^3$ $\rightarrow$ 473 RD1/4PU $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$ J

0.5 Ω $\rightarrow$ R50 RN2H $\begin{bmatrix} R & 5 & 0 \end{bmatrix}$ K

1 Ω $\rightarrow$ 1R0 RSIP $\begin{bmatrix} 1 & R & 0 \end{bmatrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562 $\times 10^1$ $\rightarrow$ 5621 RN1/4PC $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$ F

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF ASSEMBLIES							
	1..	MAIN ASSY	DWX3591	NSP	1..	PNL2 ASSY	DWM2544
					2..	PNL2B ASSY *2	DWX3595
NSP	1..	PNL1 ASSY	DWM2543	NSP	2..	JOG2 ASSY *2	DWX3596
	2..	PNL1B ASSY *1	DWX3592				
NSP	2..	JOG1 ASSY *1	DWX3593				
	2..	HPJK ASSY	DWX3594				
	2..	CRFD ASSY	DWX3597				

*1: As the PNL1B Assy and JOG1 Assy are wired with jumper leads.

If a DWX3592 (PNL1B Assy) is ordered, the PNL1B Assy and JOG1 Assy wired with jumper leads will be delivered.

The part supply is impossible in JOG1 Assy alone (NSP: non-service part).

*2: As the PNL2B Assy and JOG2 Assy are wired with jumper leads.

If a DWX3595 (PNL2B Assy) is ordered, the PNL2B Assy and JOG2 Assy wired with jumper leads will be delivered.

The part supply is impossible in JOG2 Assy alone (NSP: non-service part).

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
A MIAN ASSY							
SEMICONDUCTORS							
Δ	IC	201,203,205	BD9328EFJ	Q	127,224,225		RN1903
Δ	IC	202,211	MM3411A33N	Q	206,216,219,409		LSCR523UB
Δ	IC	204,210	MM1856A50N	Q	207-209,212,213		LSAR523UB
Δ	IC	206	TPS2557DRB	Q	211,218,405,410		LTC024EEB
Δ	IC	207	NJM2392M	Q	215,408,412,413		RN4983
	IC	209	S-80942CNMC-G9C	Δ Q	403		RTQ045N03
	IC	401	TS3USB30RSW	Q	404,406,709,712		LTA024EEB
	IC	405	H337S3959	Q	411,710,720		LTC024EEB
	IC	406	R5S72670P144FP	Q	704-706,711		LSCR523UB
	IC	407	TC74VHC08FK	Q	707		IMX9
	IC	408	DYW1848	Q	713		LSAR523UB
	IC	409	S-80927CNMC-G8X	D	101,206,210		RB551VM-30
	IC	410	TC7SH126FU	D	103,118,120-126		DZ2J062M0
	IC	411,412	TC74HC4051AFT	D	104		RB161M-20
	IC	701,703	AK4387ET	D	105,106,108,112		DA2J101
	IC	702,704	NJM4565MD	Δ D	107		RB060M-30
	IC	705,707	NJM4580MD	D	110		DZ2J150M0
	IC	706	BH3547F	D	111		RB060M-30
	Q	101,115,129,202	LSCR523UB	D	113,218		DZ2J051M0
	Q	102,114,117,119	LTC024EEB	D	114,214,702		DAN202UM
	Q	103,118,120,122	LTA024EEB	Δ D	115,119,202,212		DA2J101
Δ	Q	105,112,113,203	RTQ040P02	D	207-209		RB551VM-30
Δ	Q	107,116	RSQ035P03	D	215,217,403		DA2J101
	Q	108,111	LTC014EEB	D	216		DZ2J075M0
	Q	121,128,201,205	LTC024EEB	D	219-221		DZ2J056M0
MISCELLANEOUS							
	L	104,105 COIL		L	104,105 COIL		ATH7015
	L	201 SMD SPL INDUCTOR		L	201 SMD SPL INDUCTOR		DTH1213

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	L 202	INDUCTOR	CTH1253		R 533		RS1/16SS5601F
	L 205	POWER INDUCTOR	ATH7053		R 571,572,583,584		RS1/10SR0R0J
	L 206	COIL	CTH1475		R 707		RS1/16SS2201D
	L 402-404,406,408	INDUCTOR	CTF1793		R 718,742		RS1/10SR1001D
	L 407,409	INDUCTOR	CTF1545		R 720		RS1/10SR1002D
	L 701	INDUCTOR	CTF1778		R 722,727		RS1/10SR100J
	L 710	INDUCTOR	CTF1786		R 726,752,753		RS1/10SR3301D
	L 724	SMD SPL INDUCTOR	BTH1184		R 728		RS1/10SR5601D
	JA 101	USB CONNECTOR	DKN1237		R 740,741,757		RS1/10SR4701D
	JA 102	DC POWER JACK	DKN1649		R 743		RS1/10SR1802D
	JA 701	6.5 DIA JACK	DKN1652		R 746,747		RS1/10SR271J
	JA 702	PIN JACK(2P)	AKB7181		R 748,761,783,785		RS1/10SR0R0J
	KN 102-105	WRAPPING TERMINAL	CKF1089		R 750,751,760		RS1/10SR1502D
	KN 106	SCREW PLATE	VNE1948		R 754,756,762		RS1/10SR104J
	X 401	CRYSTAL (24.576 MHz)	DSS1204		R 763-767,769,770		RS1/10SR103J
	X 404	RESONATOR (48 MHz)	CSS1760		R 772,773,797		RS1/10SR223J
	CN 101,102	39P CONNECTOR	VKN2098		R 775		RS1/10SR473J
	CN 103	15P CONNECTOR	VKN1275		R 780,781		RS1/10SR331J
	CN 106	CONNECTOR	CKS5683		R 790		RS1/10SR0R0J
	JH 101	7P CABLE HOLDER	51048-0700		Other Resistors		RS1/16SS###J
	JP 101	JUMPER WIRE	D20PDY0720E				
	JP 102	BOARD IN JUMPER/3P	DKP3957				
	P 101	PROTECTOR(1.000A)	DEK1097				
	P 102	PROTECTOR(3.000A)	DEK1103				
	P 203	PROTECTOR(0.500A)	DEK1095				
	VA 103,701,702	VARISTORS	EZJZ1V270RM				

Mark	No.	Description	Part No.
------	-----	-------------	----------

	C	445,448,454,456	CKSSYB471K50
	C	447,450,452,455	CKSSYB103K16

A

	C	457,459,461-465	CKSSYB103K16
	C	469,470,473,474	CKSSYB104K10
	C	471,479,480	CCSSCH101J50
	C	475,476,493-495	CKSSYB102K50
	C	478,482,484,485	CKSSYB104K10

	C	483,488,548,706	CKSSYB103K16
	C	489,490,503-505	DCH1201
	C	496-498,510-516	CCSSCH101J50
	C	499-501,506,517	CKSSYB104K10
	C	502	CCSSCH100D50

B

	C	507,525-532,534	CKSSYB102K50
	C	518,537	CKSSYB104K10
	C	519-524,547	CCSSCH101J50
	C	533,732,733,765	DCH1201
	C	536,538,540,541	CKSSYB102K50

	C	702,715,730,734	CCSRCH102J50
	C	704	CCSSCH561J50
	C	705	CCSSCH102J50
	C	707	ACG1147
	C	708,756	CCSRCH331J50

C

	C	710,737,783	CKSSYB103K16
	C	716,720,722,723	CKSRYB104K16
	C	717,718	CCSRCH152J50
	C	721,731,735,766	CEVW470M6R3
	C	725,726,757,758	CKSRYB104K16

	C	736	CKSRYB474K16
	C	739,740,773,774	CEVW220M16
	C	743	CKSRYB105K10
	C	747,748	CKSRYB103K50
	C	749,750	CCSRCH681J50

D

	C	751,752	CCSRCH101J50
	C	753	CKSQYB475K6R3
	C	755,761	DCH1156
	C	762	CEVW100M16
	C	782,786	CCSRCH102J50

	C	784	CEVW331M6R3
	C	785	CCG1218

B HPJK ASSY

MISCELLANEOUS

JA 1701	6.5 DIA JACK	DKN1653
JA 1702	STEREO MINI JACK	XKN3017
KN 1701	PHONE SHIELD	DNF1875
CN 1701	7P JUMPER CONNECTOR	52147-0710
VA 1701-1705	VARISTORS	EZJZ1V270RM

E

RESISTORS

R	1706,1707,1711-1714	RS1/4SA0R0J
	Other Resistors	RS1/10SR###J

CAPACITORS

C	1701,1702,1716,1717	CEJQ221M6R3
C	1707,1709,1713,1715	CKSRYB473K50
C	1711	CKSRYB104K50
C	1712	CKSRYB102K50

F

Mark	No.	Description	Part No.
------	-----	-------------	----------

C CRFD ASSY

MISCELLANEOUS

VR 1801	VARIABLE RESISTOR	DCV1023
---------	-------------------	---------

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

MISCELLANEOUS

VA 1801-1803	VARISTORS	EZJZ1V270RM
--------------	-----------	-------------

CAPACITORS

C 1801	CKSRYB104K16
--------	--------------

D JOG1 ASSY

SEMICONDUCTORS

Q 1601,1602	LSCR523UB
-------------	-----------

MISCELLANEOUS

PC 1601,1602	PHOTO INTERRUPTER	RPI-579N1
--------------	-------------------	-----------

RESISTORS

R 1601,1602	RS1/10SR3001D
R 1603,1604	RS1/10SR9101D
Other Resistors	RS1/10SR###J

CAPACITORS

C 1601	CKSRYB104K16
C 1602,1603	CKSRYB473K50

E PNL1B ASSY

SEMICONDUCTORS

IC 1201	DYW1849
Q 1201-1203,1409,1411	LTC124EUB
Q 1401,1403,1405,1407	RN4982
Q 1402,1404,1406,1408	2SC4154-11
Q 1410,1412,1414,1416	LSAR523UB

Q 1413,1415,1417,1438	LTC124EUB
Q 1418	LSAR523UB
Q 1419,1421,1423,1425	RN4982
Q 1420,1422,1424,1426	2SC4154-11
Q 1427,1436	LTC114YUB

Q 1428,1430,1432,1434	RN1903
Q 1429,1431,1433,1435	LTA114EUB
Q 1437	LTA114EUB
D 1202-1204,1206,1208	DAN202UM
D 1210,1214,1216,1220	DAN202UM
D 1217,1218	DA2J101
D 1219	RB501VM-40
D 1401,1417-1419	SLI-343Y8Y(KLM)
D 1402-1413,1420-1435	SLI-343U8R(HJK)
D 1415,1416	SLI-343M8G(GHJ)

D 1436-1440	SLR343BD2T(NP)
-------------	----------------

MISCELLANEOUS

L 1209,1210,1212	INDUCTOR	CTF1379
KN 1202	EARTH TERMINAL	AKF7002
VR 1201,1202,1204	POTENTIOMETER	DCS1097
VR 1203	POTENTIOMETER	DCS1096
VR 1205,1209,1211	POTENTIOMETER	DCS1097

5		6		7		8	
Mark	No. Description	Part No.	Mark	No. Description	Part No.		
	VR 1206,1207 VARIABLE RESISTOR	DCV1024	Q	2439	LTA114EUB		
	VR 1208 SLIDE VR	DCV1034	D	2202,2205,2207,2208	DAN202UM		
	VR 1210 POTENTIOMETER	DCS1094	D	2209	RB501VM-40		
	S 1201-1217,1219,1220 TACT SWITCH	DSG1079	D	2212,2213,2216,2217	DAN202UM		A
	S 1218 ENCODER	DSX1082					
	CN 1001 15P CONNECTOR	VKN1246	D	2401,2417,2418	SLI-343M8G(GHJ)		
	CN 1002 39P CONNECTOR	VKN2097	D	2402,2404-2415	SLI-343U8R(HJK)		
	CN 1004 L-PLUG(3P)	KM200NA3L	D	2403	SLI-343Y8Y(KLM)		
	JH 1201 PCB BINDER	AEF7008	D	2419-2434	SLI-343U8R(HJK)		
	VA 1206-1209,1212-1214 VARISTORS	EZJZ1V270RM	D	2435-2439	SLR343BD2T(NP)		
	VA 1216,1223,1224 VARISTORS	EZJZ1V270RM	MISCELLANEOUS				
	VA 1217,1218 SMD VARISTOR	EZJZ1V80010	L	2205,2206,2208 INDUCTOR	CTF1379		
RESISTORS			KN 2201	EARTH TERMINAL	AKF7002		
R	1003,1004,1219,1220	RS1/10SR2201D	VR 2201	SLIDE VR	DCV1034		
R	1005	RS1/4SA2R0J	VR 2202	ROTARY VR	DCS1117		B
R	1211,1238,1464-1469	RS1/4SA0R0J	S	2201-2216 TACT SWITCH	DSG1079		
R	1225,1226	DCN1187					
R	1227	RS1/10SR2202D	S	2217 TACT SWITCH	DSG1089		
			CN 2002	39P CONNECTOR	VKN2097		
R	1472-1479	RS1/4SA0R0J	VA 2203-2205,2207 VARISTORS		EZJZ1V270RM		
Other Resistors		RS1/10SR###J	VA 2208,2209 SMD VARISTOR		EZJZ1V80010		
CAPACITORS			RESISTORS				
C	1002	CEJQ101M16	R	2001,2002,2204,2205	RS1/10SR2201D		
C	1005,1006,1223,1225	CKSRYB104K16	R	2003	RS1/4SA2R0J		
C	1007,1211,1212,1214	CKSRYB103K50	R	2203,2223,2461,2462	RS1/4SA0R0J		
C	1216	CKSRYB103K50	R	2210,2211	DCN1187		
C	1224	CCSRCH221J50	R	2212	RS1/10SR2202D		C
C	1226	DCH1201	R	2466,2467,2471,2472	RS1/4SA0R0J		
C	1229,1230	CEJQ100M16	R	2476,2478-2486	RS1/4SA0R0J		
			R	2491-2498	RS1/4SA0R0J		
			Other Resistors		RS1/10SR###J		
F JOG2 ASSY			CAPACITORS				
SEMICONDUCTORS			C	2001	CEJQ101M16		
Q	2601,2602	LSCR523UB	C	2205,2209	CKSRYB104K16		
			C	2208	CCSRCH221J50		
			C	2210	DCH1201		
MISCELLANEOUS							
PC	2601,2602 PHOTO INTERRUPTER	RPI-579N1					D
RESISTORS							
R	2601,2602	RS1/10SR3001D					
R	2603,2604	RS1/10SR9101D					
Other Resistors		RS1/10SR###J					
CAPACITORS							
C	2601	CKSRYB104K16					
C	2602,2603	CKSRYB473K50					
G PNL2B ASSY							
SEMICONDUCTORS							
IC	2201	DYW1849					E
Q	2201,2202,2413,2415	LTC124EUB					
Q	2401,2407,2409,2411	RN4982					
Q	2402,2408,2410,2412	2SC4154-11					
Q	2414,2416,2418,2420	LSAR523UB					
Q	2417,2419,2440	LTC124EUB					
Q	2421,2423,2425,2427	RN4982					
Q	2422,2424,2426,2428	2SC4154-11					
Q	2429,2438	LTC114YUB					F
Q	2430,2432,2434,2436	RN1903					
Q	2431,2433,2435,2437	LTA114EUB					