

Pioneer

Service Manual

ORDER NO.
CRT4263

CD RECEIVER

DEH-11E_{/XN/UC}



This service manual should be used together with the following manual(s) listed below.
For the parts numbers, adjustments, etc. which are not shown in this manual,
refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
DEH-110E/XN/EW5	CRT4232		
CX-3166	CRT3582	S10.5STD	CD Mech.Module:Circuit Descriptions, Mech. Descriptions, Disassembly

EXPLODED VIEWS AND PARTS LIST

PACKING(Page 26)

PACKING SECTION PARTS LIST


*:Non spare part

Mark	No.	Description	DEH-112E/XN/EW5	DEH-11E/XN/UC
A	1	Cord Assy	CDP1015	YDP5022
	2	Accessory Assy	CEA6707	* YEA5071
	3	Screw	BPZ20P080FTC	BPZ20P060FTC
	4	Screw Assy	CEA3849	YEA5072
	5	Screw	CBA1650	Not used
B	11	Bush	CNV3930	Not used
	12	Polyethylene Bag	CEG-162	CEG1173
	13	Unit Box	QHG3029	QHG3030
	14	Contain Box	QHL3029	QHL3030
	15	Protector	YHP5050	YHP5052
C	16	Protector	YHP5051	YHP5053
	17	Case Assy	YXB5009	Not used
	* 18-1	Warranty Card	CRY1279	CRY1276
	18-2	Owner's Manual	QRD3020	QRD3022
	18-3	Installation Manual	QRD3015	Not used
	18-4	Caution Card	Not used	CRP1387

EXTERIOR(1)(Page 28)

EXTERIOR(1) SECTION PARTS LIST

Mark	No.	Description	DEH-112E/XN/EW5	DEH-11E/XN/UC
D	8	Tuner Amp Unit	QWM3037	QWM3083
	13	Connector(CN871)	CKS4124	Not used
	16	Holder	YND5013	CND3754
	19	FM/AM Tuner Unit	CWE2106	CWE2025
	24	Chassis Unit	QXA3070	CXC7391
	37	Screw	Not used	BPZ26P080FTC
	38	Pin Jack(CN351)	Not used	CKB1057
	39	Screw	Not used	BMZ40P140FTC
	40	Holder	Not used	CNV7619

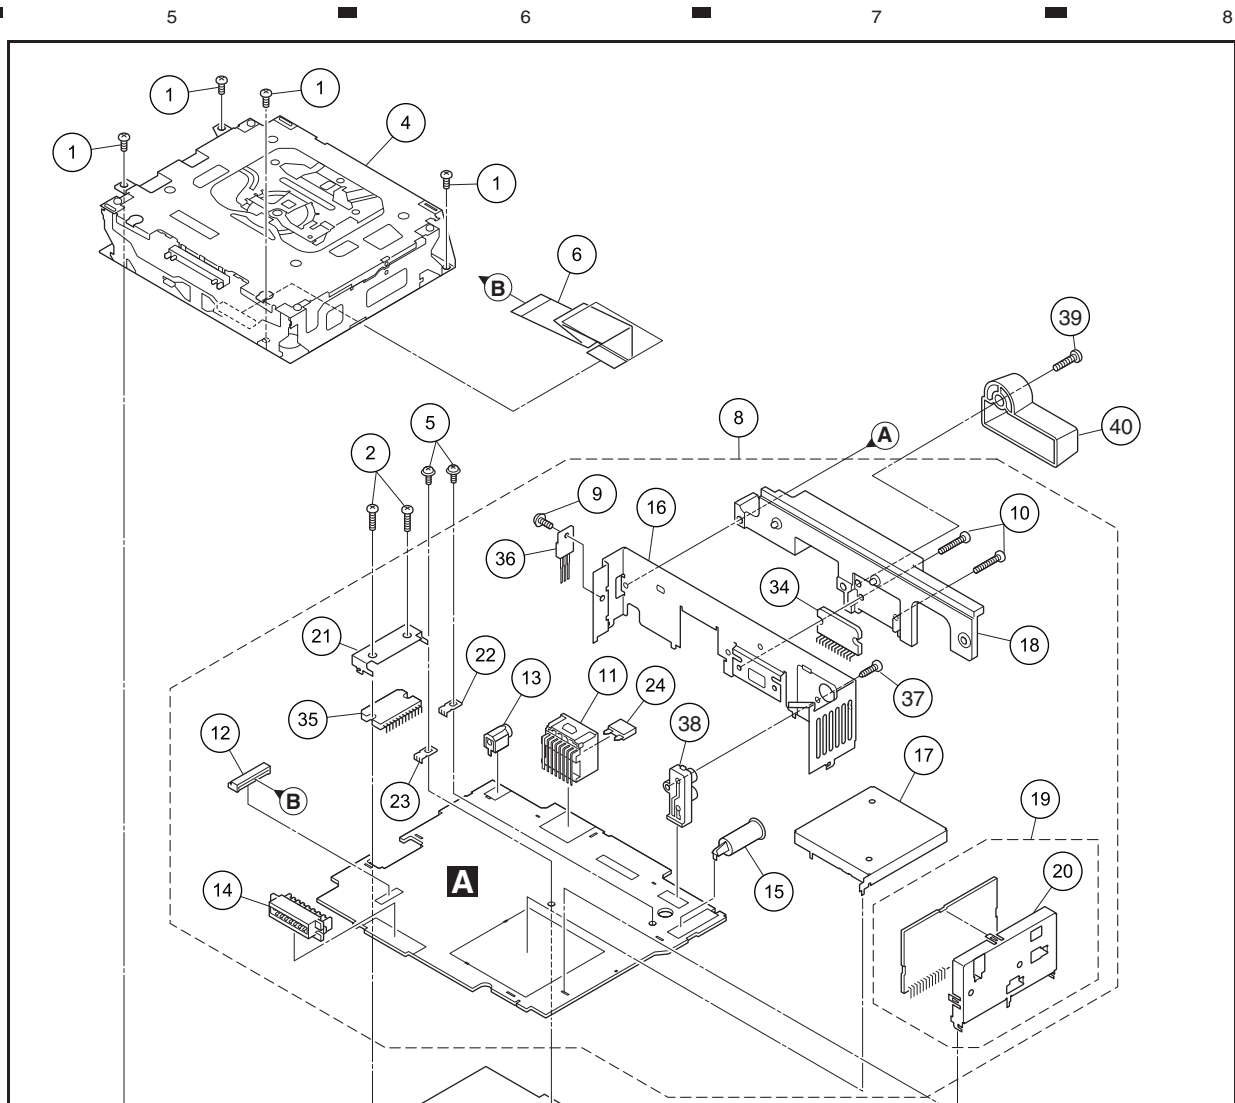

EXTERIOR(2)(Page 30)

EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	DEH-112E/XN/EW5	DEH-11E/XN/UC
	1	Cord Assy	CDP1015	YDP5022
	2	Cap	CKX-003	Not used
	5	Detachable Assy	QXA3081	QXA3127
	22	Grille Unit	QXA3063	QXA3128

1234

ELECTRICAL PARTS LIST(Page 54)

TUNER AMP UNIT

A	Circuit Symbol and No.	Part Name	DEH-112E/XN/EW5	DEH-11E/XN/UC
	IC601	IC	PN5016A	PN5017A
	Q351	Transistor	Not used	RT3N66M
	Q851	Transistor	2SA1036K	Not used
	D851	Diode	DAN202U	Not used
	L851	Inductor	LAU2R2K	Not used
	X602	Oscillator 4.71 886 MHz	Not used	CSS1727
	FU351	Fuse 3 A	Not used	CEK1286
	R351		Not used	RS1/16S223J
B	R352		Not used	RS1/16S223J
	R353		Not used	RS1/16S821J
	R354		Not used	RS1/16S821J
	R644		RS1/16S0R0J	Not used
	R645		RS1/16S0R0J	Not used
	R646		RS1/16S0R0J	Not used
	R647		Not used	RS1/16S0R0J
	R648		RS1/16S0R0J	Not used
C	R670		RS1/16S473J	RS1/16S183J
	R671		Not used	RS1/16S473J
	R677		Not used	RS1/16S104J
	R851		RS1/16S223J	Not used
	R852		RS1/16S472J	Not used
	R853		RS1/16S153J	Not used
	R854		RS1/16S102J	Not used
	R871		RS1/16S102J	Not used
	R872		RS1/16S102J	Not used
D	R934		RS1/16S473J	RS1/16S472J
	C151		CKSRYB224K10	CKSRYB224K16
	C152		CKSRYB224K10	CKSRYB224K16
	C353		Not used	CEJQ2R2M50
	C354		Not used	CEJQ2R2M50
	C359		Not used	CCSQCH471J50
	C406		CCSRCH390J50	Not used
	C409		CCSRCH100D50	Not used
E	C618		Not used	CCSRCH270J50
	C634		Not used	CCSRCH270J50
	C637		CKSRYB103K50	Not used
	C642		CKSRYB122K50	CKSRYB182K50
	C643		CKSRYB122K50	CKSRYB182K50
	C646		CKSRYB103K50	Not used
	C871		CKSRYB103K50	Not used
F	C872		CKSRYB103K50	Not used