


EXPLODED VIEW (UNIT)

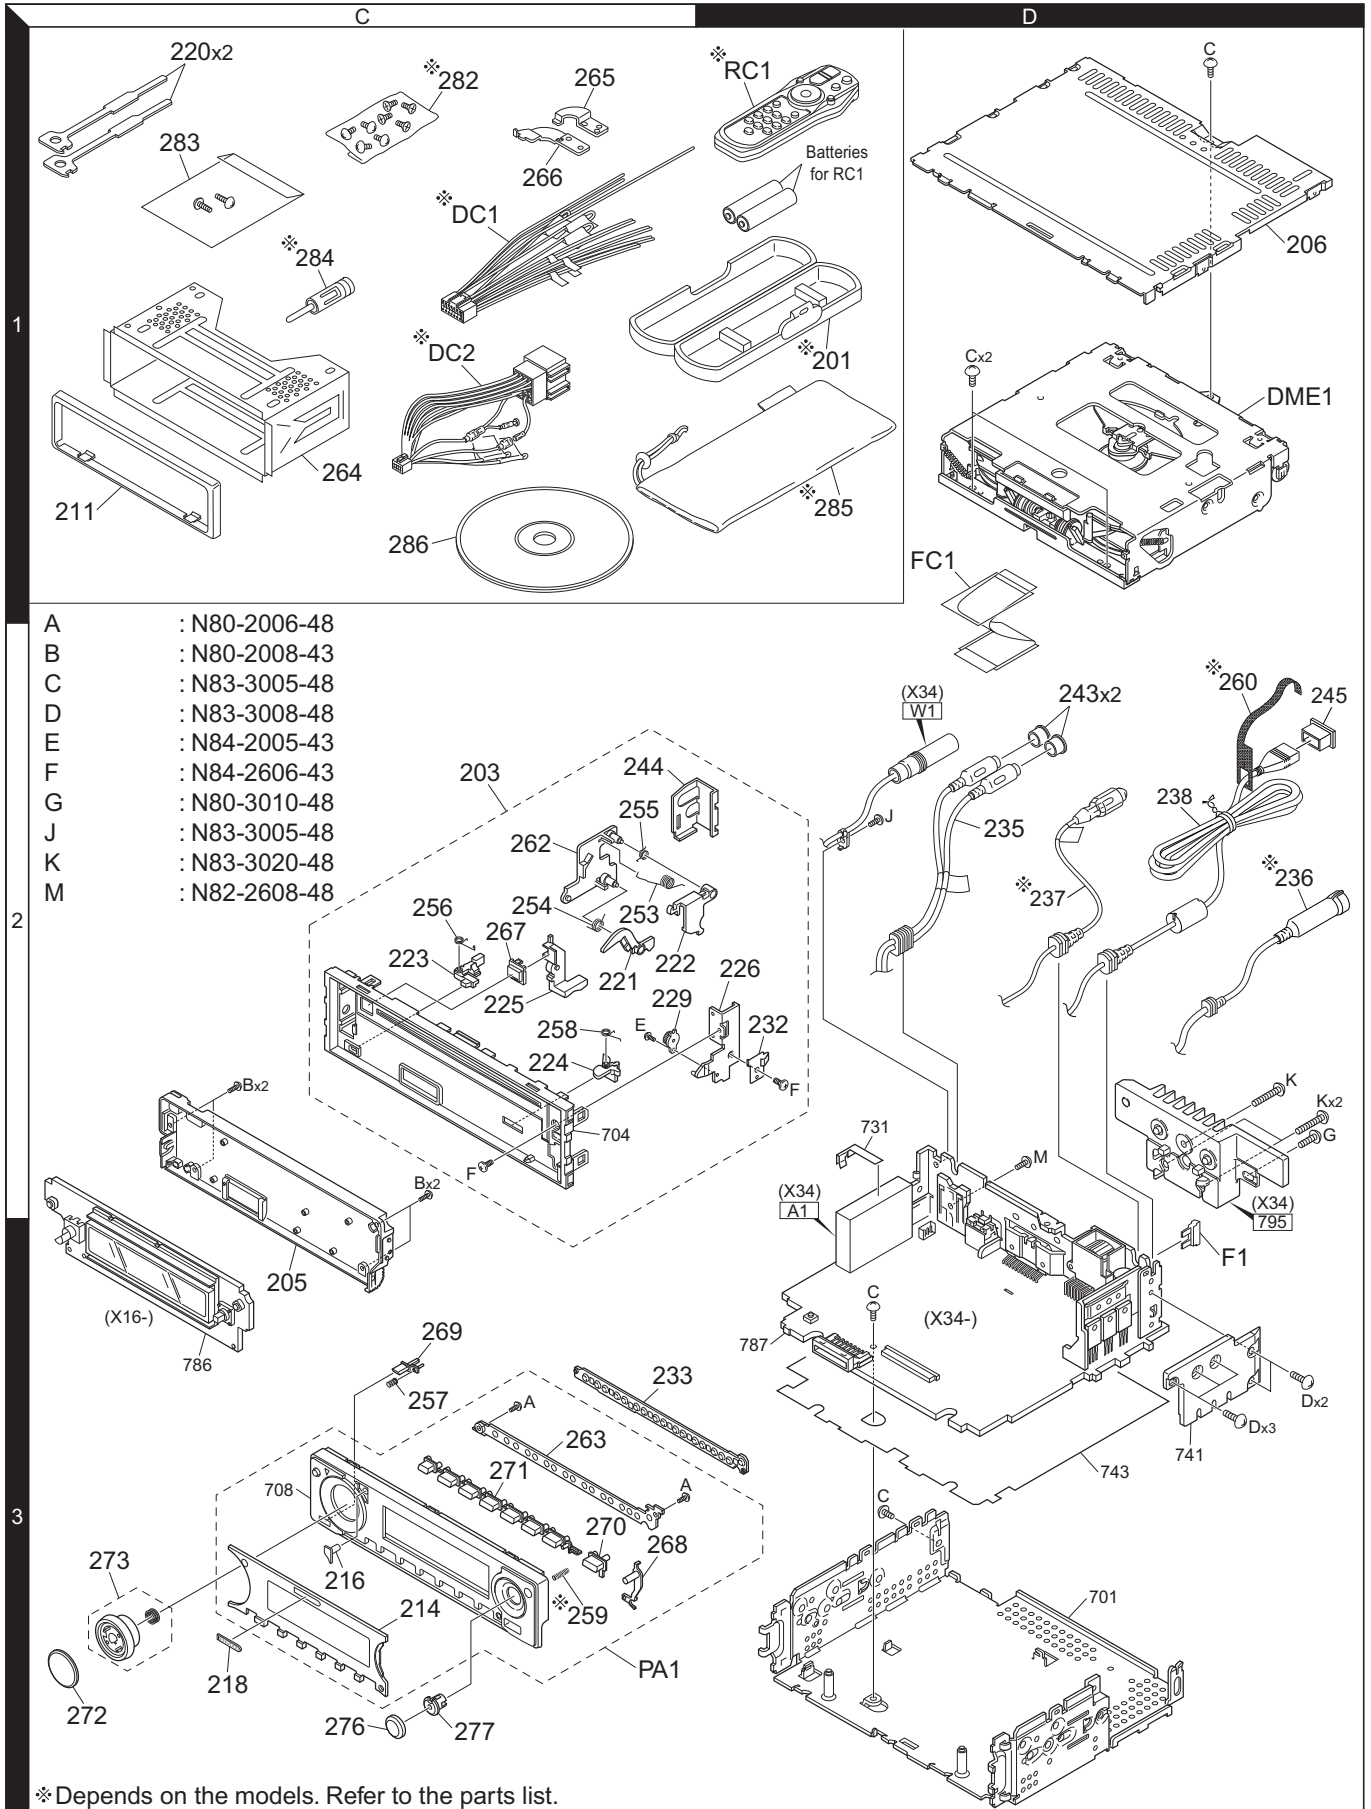

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP632U/W6534U/UY/X590/X7533U						244	2C		F31-0716-04	REINFORCING HARDWARE	
201	1D		A02-2743-03	PLASTIC CABINET ASSY	M1	245	2D	*	F29-0637-04	INSULATING COVER (USB)	
203	2C		A22-3059-12	SUB PANEL ASSY		F1	3D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
205	3C	*	A46-1833-11	REAR COVER		253	2C		G01-3246-04	TORSION COIL SPRING	
206	1D		A52-0862-02	TOP PLATE		254	2C		G01-3247-04	TORSION COIL SPRING	
PA1	3C	*	A64-3759-01	PANEL ASSY	K	255	2C		G01-3248-04	TORSION COIL SPRING	
PA1	3C	*	A64-3760-01	PANEL ASSY	K1	256	2C		G01-3249-04	TORSION COIL SPRING	
PA1	3C	*	A64-3761-01	PANEL ASSY	M1	257	3C	*	G01-4611-04	COMPRESSION SPRING (REL)	
PA1	3C	*	A64-3762-01	PANEL ASSY	E1E2	258	2C		G01-3270-04	TORSION COIL SPRING	
RC1	1D		A70-2067-15	REMOTE CONTROLLER ASSY (RC-527)	KK1M1	259	3C	*	G01-3291-04	COMPRESSION SPRING	K1E1E2
-			B46-0612-14	ID CARD	M1E1E2	-		*	H10-4983-02	POLYSTYRENE FOAMED FIXTURE	
-			B46-0681-04	ID CARD	KK1	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	KK1M1
-			B46-0682-00	WARRANTY CARD	KK1M1	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	E2
-			B46-0682-00	WARRANTY CARD	E1	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			B58-1426-04	CAUTION CARD	KK1	-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
-		*	B59-1850-00	SUB-INSTRUCTION MANUAL		-		*	H54-3711-03	ITEM CARTON CASE (KDC-X590)	K
-		*	B64-3343-00	INST. MANUAL (ENG.FRE.SPA)	KK1	-		*	H54-3712-03	ITEM CARTON CASE (KDC-MP632U)	K1
-		*	B64-3344-00	INST. MANUAL (ENG.T-CHI)	M1	-		*	H54-3713-03	ITEM CARTON CASE (KDC-X7533U)	M1
-		*	B64-3345-00	INST. MANUAL (ARABIC)	M1	-		*	H54-3714-03	ITEM CARTON CASE (KDC-W6534U)	E1
-		*	B64-3346-00	INST. MANUAL (ENGLISH)	E1E2	-		*	H54-3715-03	ITEM CARTON CASE (KDC-W6534UY)	E2
-		*	B64-3347-00	INST. MANUAL (FRE.GER.DUT)	E1	260	2D	*	H30-0594-04	MAGIC TAPE	KK1
-		*	B64-3348-00	INST. MANUAL (ITA.SPA.POR)	E1	262	2C		J19-7049-03	HOLDER	
-		*	B64-3349-00	INST. MANUAL (RUSSIAN)	E2	263	3C	*	J19-7112-02	HOLDER	
211	1C		B07-3125-01	ESCUTCHEON	KM1E1	264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
211	1C		B07-3125-01	ESCUTCHEON	E2	265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
211	1C		B07-3126-01	ESCUTCHEON	K1	266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
214	3C	*	B10-4762-02	FRONT GLASS	K	267	2C		K24-4282-04	PUSH KNOB (EJECT)	
214	3C	*	B10-4763-02	FRONT GLASS	K1	268	3C	*	K24-4460-03	PUSH KNOB (AME)	KK1E1
214	3C	*	B10-4764-02	FRONT GLASS	M1	268	3C	*	K24-4460-03	PUSH KNOB (AME)	E2
214	3C	*	B10-4765-02	FRONT GLASS	E1E2	268	3C		K24-4461-03	PUSH KNOB (AME)	K1
216	3C		B19-2364-04	LIGHTING BOARD (REMOTE)		269	3C	*	K24-4464-03	PUSH KNOB (RELEASE)	
218	3C		B43-1518-04	BADGE		270	3C		K24-4462-03	PUSH KNOB (SRC)	
220	1C		D10-4589-04	LEVER		271	3C	*	K25-1784-02	PUSH KNOB (PRESET)	
221	2C		D10-4865-03	LEVER (PUSH)		272	3C		K28-0103-03	KEY TOP (VOL)	
222	2C		D10-4866-03	LEVER (HOOK)		273	3C	*	K28-0167-03	KNOB ASSY (VOL)	E1E2
223	2C		D10-4867-04	LEVER (LOCK)		273	3C		K29-7200-03	KNOB ASSY (VOL)	KK1M1
224	2C		D10-4868-04	LEVER (DETECT)		276	3C		K28-0106-03	KEY TOP (FM/AM)	
225	2C		D10-4869-03	LEVER (EJECT)		277	3C	*	K28-0122-03	KNOB BASE (FM/AM)	
226	2D		D10-4870-04	ARM ASSY		282	1C		N99-1757-05	SCREW SET	KK1M1
229	2C		D39-0255-05	DAMPER		283	1C	*	N99-1780-05	SCREW SET	
232	2D		E29-2028-04	LEAD PLATE		A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
233	3C	*	E29-2067-03	CONDUCTIVE RUBBER		B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
235	2D		E30-6290-15	CORD WITH PINPLUG (PREOUT)	KM1	C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
235	2D		E30-6291-15	CORD WITH PINPLUG (AUX)	K1E1E2	D	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
236	2D		E30-6420-05	CORD WITH DIN CONNECTOR (OPEL)	E1E2	E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
237	2D	*	E30-6584-05	CORD WITH CONNECTOR (WIRED R.)	K	F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
238	2D	*	E30-6588-05	CORD WITH CONNECTOR (USB) (1m)		284	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
△ DC1	1C		E30-6408-05	DC CORD	KM1	285	1D		W01-1661-05	CARRYING CASE	K1E1E2
△ DC1	1C		E30-6414-05	DC CORD	K1	285	1D	*	W01-1664-05	CARRYING CASE	K
△ DC2	1C		E30-6412-05	DC CORD	E1E2	286	1C	*	W01-1673-05	COMPACT DISC	KK1M1
FC1	1D	*	E39-0814-05	FLAT CABLE		286	1C	*	W01-1674-05	COMPACT DISC	E1E2
243	2D		F29-0626-04	INSULATING COVER (PREOUT/AUX)							

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY

(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

KDC-MP632U/W6534U/UY/X590/X7533U

Ref. No.	Add	New	Parts No.	Description	Destination
DME1	1D	*	X92-5440-00	MECHANISM ASSY (DXM-6810W)	KK1M1
DME1	1D	*	X92-5440-04	MECHANISM ASSY (DXM-6814W)	E1E2
SWITCH UNIT (X16-374x-xx)					
D1-3			B30-1567-05	LED (1608,RED)	
D4-6			B30-1533-05	LED (1608,PG)	M1E1E2
D7-9			B30-1567-05	LED (1608,RED)	
D10-12			B30-1533-05	LED (1608,PG)	M1E1E2
D13-15			B30-1567-05	LED (1608,RED)	
D16-18			B30-1533-05	LED (1608,PG)	M1E1E2
D19			B30-1567-05	LED (1608,RED)	
D20-23			B30-1729-05	LED (1608,BLUE)	
D25			B30-1567-05	LED (1608,RED)	
D26			B30-1533-05	LED (1608,PG)	M1E1E2
D116			B30-1533-05	LED (1608,PG)	KM1
C8			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C13-16			CK73GB1H103K	CHIP C 0.010UF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C27			CC73GCH1H471J	CHIP C 470PF J	
C28			CK73GB1H102K	CHIP C 1000PF K	
C29			CC73GCH1H471J	CHIP C 470PF J	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13,14			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51			RK73FB2B471J	CHIP R 470 J 1/8W	
R52-54			RK73EB2E681J	CHIP R 680 J 1/4W	
R55,56			RK73EB2E301J	CHIP R 300 J 1/4W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1E1E2
R59,60			RK73EB2E821J	CHIP R 820 J 1/4W	
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1E1
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2
R66,67			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1E1E2
R67			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R73			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R80			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R81			RK73GB2A223J	CHIP R 22K J 1/10W	
R101			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1
R107			RK73GB2A103J	CHIP R 10K J 1/10W	KM1

Ref. No.	Add	New	Parts No.	Description	Destination
R108			RK73GB2A301J	CHIP R 300 J 1/10W	KM1
R109			RK73GB2A223J	CHIP R 22K J 1/10W	KM1
R110			RK73GB2A472J	CHIP R 4.7K J 1/10W	KM1
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
W5			R92-1252-05	CHIP R 0 OHM J 1/16W	
W7,8			R92-1252-05	CHIP R 0 OHM J 1/16W	K1
W8			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
S2			S70-0106-05	TACT SWITCH	
S10		*	S70-0939-05	TACT SWITCH	
S27		*	S70-0939-05	TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
D102			UDZS5.6B	ZENER DIODE	
D110			DA204U	DIODE	
D115			DAN222	DIODE	KM1
ED1			3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC2			PNA4S22M02KW	ANALOGUE IC	
Q4			RT1P141U	TRANSISTOR	
Q5			2SC4617	TRANSISTOR	
Q10			2SC4617	TRANSISTOR	M1E1E2
Q12-14			2SA1774	TRANSISTOR	
Q15			2SC4617	TRANSISTOR	KM1E1
Q15			2SC4617	TRANSISTOR	E2
Q18,19			2SC4617	TRANSISTOR	KM1
Q20			DTC144EE	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5830-00)					
C3			CK73GB1A105K	CHIP C 1.0UF K	
C5			CK73GB1A105K	CHIP C 1.0UF K	
C7			CK73GB0J225K	CHIP C 2.2UF K	
C8			CK73GB1A105K	CHIP C 1.0UF K	
C12-14			CK73GB1H104K	CHIP C 0.10UF K	
C17,18			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C25,26			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73FB0J106K	CHIP C 10UF K	
C29			CK73GB1H104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C33			CK73GB0J225K	CHIP C 2.2UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1H104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1H104K	CHIP C 0.10UF K	
C40			CK73GB1A105K	CHIP C 1.0UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C44			CK73GB1A105K	CHIP C 1.0UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1H104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C52			CK73FB1A225K	CHIP C 2.2UF K	
C53			CK73GB0J225K	CHIP C 2.2UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CC73GCH1H391J	CHIP C 390PF J	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59-62			CK73GB1H102K	CHIP C 1000PF K	
C63			CK73GB1H152K	CHIP C 1500PF K	
C64,65			CK73GB1H104K	CHIP C 0.10UF K	
C66,67			CC73GCH1H100D	CHIP C 10PF D	
C69			CK73FB0J106K	CHIP C 10UF K	
C73			CK73GB1H104K	CHIP C 0.10UF K	
C76,77			CK73GB1H104K	CHIP C 0.10UF K	
C78			CC73GCH1H151J	CHIP C 150PF J	
C80			CC73GCH1H151J	CHIP C 150PF J	
C82			CC73GCH1H681J	CHIP C 680PF J	
C84			CC73GCH1H681J	CHIP C 680PF J	
C85			CK73GB1H104K	CHIP C 0.10UF K	
C86			CK73GB1A105K	CHIP C 1.0UF K	
C87			CK73GB0J475K	CHIP C 4.7UF K	
C88			CK73GB1H473K	CHIP C 0.047UF K	
C89			CK73GB1A105K	CHIP C 1.0UF K	
C91			CK73GB1H104K	CHIP C 0.10UF K	
C93-98			CK73GB1H104K	CHIP C 0.10UF K	
C99			CC73GCH1H060D	CHIP C 6.0PF D	
C100			CC73GCH1H020C	CHIP C 2.0PF C	
C101			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73GB1H102K	CHIP C 1000PF K	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C305-308			CK73GB1H103K	CHIP C 0.010UF K	
C309			CK73GB1H222K	CHIP C 2200PF K	
C310			CK73GB1H103K	CHIP C 0.010UF K	
C311,312			CC73GCH1H060D	CHIP C 6.0PF D	
C313			CK73GB1H103K	CHIP C 0.010UF K	
C315			CK73GB1H104K	CHIP C 0.10UF K	
C316			CK73GB1H103K	CHIP C 0.010UF K	
C317,318			CK73GB1H102K	CHIP C 1000PF K	
C319			CK73GB1A105K	CHIP C 1.0UF K	
C320			CC73GCH1H070D	CHIP C 7.0PF D	
CN1		*	E41-2630-05	FLAT CABLE CONNECTOR	
CN2			E41-2612-05	FLAT CABLE CONNECTOR	
L1		*	L92-0615-05	CHIP FERRITE	
X1			L77-2863-05	CRYSTAL RESONATOR (16.899MHZ)	
X2		*	L78-1215-05	RESONATOR (11.500MHZ)	
X3		*	L77-2923-05	CRYSTAL RESONATOR (6.000MHZ)	
CP2			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP10			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP16			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP19			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP20-23		*	RK74HB1J153J	CHIP-COM 15K J 1/16W	
CP24,25			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP26		*	RK74GA1J100J	CHIP-COM 10 J 1/16W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CP27-30			RK74HB1J100J	CHIP-COM 10 J 1/16W	
CP31			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP50			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP52			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP53			RK74GA1J473J	CHIP-COM 47K J 1/16W	
CP56,57			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP300			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP301		*	RK74GA1J680J	CHIP-COM 68 J 1/16W	
CP302,303			RK74HB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R2,3			RK73GB2A223J	CHIP R 22K J 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GH2A223D	CHIP R 22K D 1/10W	
R7			RK73GB2A223J	CHIP R 22K J 1/10W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W	
R9			RK73GB2A223J	CHIP R 22K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11			RK73GB2A220J	CHIP R 22 J 1/10W	
R12			RK73GB2A223J	CHIP R 22K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R15			RK73GB2A223J	CHIP R 22K J 1/10W	
R17			RK73GB2A221J	CHIP R 220 J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R20			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R21,22			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A103J	CHIP R 10K J 1/10W	
R24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R40			RK73GB2A274J	CHIP R 270K J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73GB2A123J	CHIP R 12K J 1/10W	
R61			RK73GB2A183J	CHIP R 18K J 1/10W	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R63			RK73GB2A133J	CHIP R 13K J 1/10W	
R64			RK73GB2A151J	CHIP R 150 J 1/10W	
R67,68			RK73GB2A152J	CHIP R 1.5K J 1/10W	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R69			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R71-73			RK73GB2A101J	CHIP R 100 J 1/10W	
R109			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R110			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R112			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R115			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R116			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R118,119			RK73GH2A100D	CHIP R 10 D 1/10W	
R121			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R133			RK73GB2A681J	CHIP R 680 J 1/10W	
R138			RK73GB2A101J	CHIP R 100 J 1/10W	
R142			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R144			RK73GB2A223J	CHIP R 22K J 1/10W	
R148			RK73GB2A103J	CHIP R 10K J 1/10W	
R151			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R152			RK73GB2A221J	CHIP R 220 J 1/10W	
R153			RK73GB2A100J	CHIP R 10 J 1/10W	
R154,155			RK73GB2A330J	CHIP R 33 J 1/10W	
R300,301			RK73GB2A680J	CHIP R 68 J 1/10W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W	
R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R306,307			RK73GB2A270J	CHIP R 27 J 1/10W	
R308-310			RK73GB2A153J	CHIP R 15K J 1/10W	
R311-316			RK73GB2A100J	CHIP R 10 J 1/10W	
R320-323			RK73GB2A101J	CHIP R 100 J 1/10W	
R336			RK73GB2A101J	CHIP R 100 J 1/10W	
R337			RK73GB2A153J	CHIP R 15K J 1/10W	
R339			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R345			RK73GB2A103J	CHIP R 10K J 1/10W	
R346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R348			RK73GB2A223J	CHIP R 22K J 1/10W	
R351			RK73GB2A103J	CHIP R 10K J 1/10W	
R353			RK73GB2A473J	CHIP R 47K J 1/10W	
R358,359			RK73GB2A473J	CHIP R 47K J 1/10W	
R361			RK73GB2A223J	CHIP R 22K J 1/10W	
R363			RK73GB2A223J	CHIP R 22K J 1/10W	
R366			RK73GB2A101J	CHIP R 100 J 1/10W	
R368			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R369			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R370			RK73GB2A101J	CHIP R 100 J 1/10W	
R371			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R372,373			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R374			RK73GB2A473J	CHIP R 47K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204U	DIODE	
D3			DAN202U	DIODE	
D9			DA204U	DIODE	
IC1		*	M30620FCPPG	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC4			BA5824FP	ANALOGUE IC	
IC5		*	BD33KA5WFP-E2	ANALOGUE IC	
IC13		*	NJM2100V-ZB	ANALOGUE IC	
IC14			TAR5S50-F	ANALOGUE IC	
IC15			CS7410-IQZ	MOS-IC	
IC16		*	IC42S164007TIG	DRAM IC	
IC17		*	29LV800CBTI9V1	ROM IC	
IC18			PCM1754DB	MOS-IC	
IC19		*	R1114N331B-TR	ANALOGUE IC	
IC20		*	S-1132B18U5T1G	ANALOGUE IC	
IC21		*	BD33KA5WFP-E2	ANALOGUE IC	
IC25		*	TDUHC1240F0C00	MOS-IC	
IC26		*	TC74LXC00FT-F	MOS-IC	
IC28		*	TC7WH125FK-F	MOS-IC	
Q3			UMD9N	TRANSISTOR	
Q6			UMD12N	TRANSISTOR	
Q7			DTC124EE	DIGITAL TRANSISTOR	
Q8			2SB0970	TRANSISTOR	
Q9			DTC114YE	DIGITAL TRANSISTOR	
Q10			DTC114YUA	DIGITAL TRANSISTOR	
Q17			DTA143XUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-415x-xx)					
D302			B30-1710-05	LED (RED)	
C1			C90-6746-05	ELECTRO 3300UF 16WV	
C2			CC73GCH1H070D	CHIP C 7.0PF D	
C3			C90-5692-05	ELECTRO 220UF 16WV	
C5			CD04AS1V100M	ELECTRO 10UF 35WV	
C6			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C7			CK73FB1C105K	CHIP C 1.0UF K	
C8			CD04AT1A221M	ELECTRO 220UF 10WV	
C9			CD04BA1C101M	ELECTRO 100UF 16WV	
C10			CK73EB1E105K	CHIP C 1.0UF K	
C11			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
C12			CD04BF1V470M	ELECTRO 47UF 35WV	
C13			CK73GB1H104K	CHIP C 0.10UF K	
C14			CD04AS1C101M	ELECTRO 100UF 16WV	KM1
C15			CD04AS1C220M	ELECTRO 22UF 16WV	KM1
C16			CD04AS1C470M	ELECTRO 47UF 16WV	KM1
C18			CD04BF1E101M	ELECTRO 100UF 25WV	
C20			CD04BK1A221M	ELECTRO 220UF 10WV	
C24			CK73GB1A334K	CHIP C 0.33UF K	
C25			CD04AS1C220M	ELECTRO 22UF 16WV	
C40,41			CC73GCH1H070D	CHIP C 7.0PF D	
C45			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C101			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
C102			CK73GB1A105K	CHIP C 1.0UF K	
C103			CK73GB1H104K	CHIP C 0.10UF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C105			CK73GB1H223K	CHIP C 0.022UF K	
C106			CK73GB1A105K	CHIP C 1.0UF K	
C109-111			CK73GB1H103K	CHIP C 0.010UF K	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	A	N	Parts No.	Description	Desti- nation	Ref. No.	A	N	Parts No.	Description	Desti- nation
	d	e					d	e			
C201			CD04AS0J470M	ELECTRO 47UF 6.3WV		CN4			E41-2446-05	PIN ASSY	
C202			CK73GB1H103K	CHIP C 0.010UF K		CN5			E41-0944-05	PIN ASSY	KE1E2
C203,204			CC73GCH1H220J	CHIP C 22PF J		J1			E58-0991-05	RECTANGULAR RECEPTACLE	
C205			CK73GB1H104K	CHIP C 0.10UF K		J2			E56-0855-05	CYLINDRICAL RECEPTACLE	
C206,207			CK73GB1H103K	CHIP C 0.010UF K		J3			E63-0896-05	PIN JACK	K1E1E2
C208			CK73GB1H102K	CHIP C 1000PF K		J3			E63-0897-05	PIN JACK	KM1
C209			CK73GB1H103K	CHIP C 0.010UF K		J4			E58-0992-05	RECTANGULAR RECEPTACLE	
C210,211			CK73GB1H471K	CHIP C 470PF K		W1	2D		E30-6218-15	CORD WITH PLUG	
C302			CK73GB1H103K	CHIP C 0.010UF K		L1		*	L33-2319-05	CHOKO COIL ASSY	
C304,305			CK73GB1H103K	CHIP C 0.010UF K		L3		*	L33-2335-05	CHOKO COIL	
C306			CD04AS1V100M	ELECTRO 10UF 35WV		L201			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
C307			CK73GB1H103K	CHIP C 0.010UF K		L203			L92-0339-05	CHIP FERRITE	
C308			CD04AS1V100M	ELECTRO 10UF 35WV		L301			L33-2260-05	CHOKO COIL	
C309			CK73GB1H103K	CHIP C 0.010UF K		L302-304			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
C310			CD04BF1V470M	ELECTRO 47UF 35WV		L306			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	E1E2
C311			CK73GB1H103K	CHIP C 0.010UF K		L307		*	L92-0616-05	CHIP FERRITE	
C312			CD04BK1C101M	ELECTRO 100UF 16WV		X1			L77-2880-05	CRYSTAL RESONATOR (32.768KHZ)	
C313			CD04AS1V100M	ELECTRO 10UF 35WV		X2			L78-0872-05	RESONATOR (12MHZ)	
C323			CK73GB1H103K	CHIP C 0.010UF K		X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	E1E2
C343			CK73GB1H104K	CHIP C 0.10UF K	K1E1E2	G	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
C347			CK73GB1H102K	CHIP C 1000PF K		J	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C350			CC73GCH1H331J	CHIP C 330PF J	E1E2	K	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
C351			CK73GB1H103K	CHIP C 0.010UF K	E1E2	M	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
C352			CK73GB0J225K	CHIP C 2.2UF K	E1E2	CP201,202			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C353			CD04AS1V100M	ELECTRO 10UF 35WV	E1E2	CP203			RK74GA1J471J	CHIP-COM 470 J 1/16W	
C354,355			CC73GCH1H120J	CHIP C 12PF J	E1E2	CP206			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
C401			CD04AS1C470M	ELECTRO 47UF 16WV		CP207			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
C402,403			CD04AS1H010M	ELECTRO 1UF 50WV		CP209			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C404			CK73GB1A105K	CHIP C 1.0UF K		R1			RK73FB2B153J	CHIP R 15K J 1/8W	
C406,407			CK73FB1A335K	CHIP C 3.3UF K		R3			RK73GB2A223J	CHIP R 22K J 1/10W	
C408,409			CK73FB1C105K	CHIP C 1.0UF K	KK1M1	R4			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C411			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		R5			RK73FB2B221J	CHIP R 220 J 1/8W	
C412			CD04AS1V100M	ELECTRO 10UF 35WV	KM1	R7			RK73GH2A243D	CHIP R 24K D 1/10W	
C413,414			CK73FB1E474K	CHIP C 0.47UF K		R8			RK73GH2A432D	CHIP R 4.3K D 1/10W	
C415,416			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		R9			RK73FB2B152J	CHIP R 1.5K J 1/8W	
C417-420			CD04AS1V100M	ELECTRO 10UF 35WV	K1E1E2	R10			RK73FB2B222J	CHIP R 2.2K J 1/8W	
C417-422			CD04AS1V100M	ELECTRO 10UF 35WV	KM1	R11			RK73GH2A273D	CHIP R 27K D 1/10W	
C423,424			CC73GCH1H070D	CHIP C 7.0PF D		R12			RK73GH2A332D	CHIP R 3.3K D 1/10W	
C426,427			CK73FB1E474K	CHIP C 0.47UF K	K1E1E2	R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C428			CD04AS0J470M	ELECTRO 47UF 6.3WV	K1E1E2	R17,18			RK73GB2A223J	CHIP R 22K J 1/10W	
C429			CK73GB1H103K	CHIP C 0.010UF K	K1E1E2	R20			RK73GB2A473J	CHIP R 47K J 1/10W	
C431			CD04AS1V100M	ELECTRO 10UF 35WV		R21			RK73GB2A103J	CHIP R 10K J 1/10W	
C440			CC73GCH1H070D	CHIP C 7.0PF D		R22			RK73PB2H220J	CHIP R 22 J 1/2W	KM1
C501			CK73FB1C105K	CHIP C 1.0UF K		R23			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1
C503-506	*		C90-6779-05	ELECTRO 0.47UF 16WV		R24			RK73GB2A513J	CHIP R 51K J 1/10W	KM1
C507			CK73FB1C105K	CHIP C 1.0UF K		R25,26			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1
C510,511			CK73FB1E474K	CHIP C 0.47UF K		R27			RK73GB2A221J	CHIP R 220 J 1/10W	KM1
C512			CD04AS0J470M	ELECTRO 47UF 6.3WV		R28,29			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KM1
C513			CK73GB1H103K	CHIP C 0.010UF K		R30			RK73GB2A332J	CHIP R 3.3K J 1/10W	KM1
C529,530			C90-6711-05	ELECTRO 1UF 50WV		R41			RK73GB2A201J	CHIP R 200 J 1/10W	
C802			CK73GB1H102K	CHIP C 1000PF K		R42			RK73GB2A121J	CHIP R 120 J 1/10W	
C999			CD04BM1E330M	ELECTRO 33UF 25WV		R43,44		*	R92-5110-05	CHIP R 2.7 J 3/4W	
CN1		*	E41-2629-05	FLAT CABLE CONNECTOR		R45			RK73GB2A473J	CHIP R 47K J 1/10W	
CN2			E41-0944-05	PIN ASSY							

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R46-51		*	R92-5110-05	CHIP R 2.7 J 3/4W		R240			RK73GB2A101J	CHIP R 100 J 1/10W	
R52			RK73GH2A472D	CHIP R 4.7K D 1/10W		R241			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1
R53			RK73GH2A332D	CHIP R 3.3K D 1/10W		R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1E1
R55		*	R92-5110-05	CHIP R 2.7 J 3/4W		R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2
R56			RK73GB2A153J	CHIP R 15K J 1/10W		R243			RK73GB2A473J	CHIP R 47K J 1/10W	K1
R57		*	R92-5110-05	CHIP R 2.7 J 3/4W		R244			RK73GB2A473J	CHIP R 47K J 1/10W	KM1
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	KM1E1	R244,245			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	E2	R246			RK73GB2A473J	CHIP R 47K J 1/10W	KK1
R102,103			RK73EB2E103J	CHIP R 10K J 1/4W		R246,247			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R104			RK73EB2E472J	CHIP R 4.7K J 1/4W		R248-250			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R105			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1	R248-250			RK73GB2A473J	CHIP R 47K J 1/10W	E2
R106			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1	R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R107			RK73FB2B472J	CHIP R 4.7K J 1/8W		R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R108			R92-5024-05	CHIP R 1K J 1/2W		R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W		R259,260			RK73GB2A104J	CHIP R 100K J 1/10W	
R110			R92-5024-05	CHIP R 1K J 1/2W		R261			RK73GB2A333J	CHIP R 33K J 1/10W	
R111			RK73FB2B561J	CHIP R 560 J 1/8W	KM1E1	R262,263			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73FB2B561J	CHIP R 560 J 1/8W	E2	R270			RK73GB2A473J	CHIP R 47K J 1/10W	
R112			RK73GB2A223J	CHIP R 22K J 1/10W		R301			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R113			RK73GB2A473J	CHIP R 47K J 1/10W		R302,303			RK73EB2E101J	CHIP R 100 J 1/4W	
R114			RK73GB2A104J	CHIP R 100K J 1/10W		R304			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R115			RK73FB2B683J	CHIP R 68K J 1/8W		R305-309			RK73EB2E101J	CHIP R 100 J 1/4W	
R116			RK73GB2A393J	CHIP R 39K J 1/10W		R310			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R117			RK73FB2B203J	CHIP R 20K J 1/8W		R311			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R118			RK73GB2A104J	CHIP R 100K J 1/10W		R312			RK73GB2A473J	CHIP R 47K J 1/10W	
R122,123			RK73GB2A103J	CHIP R 10K J 1/10W		R313			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W		R316			RK73GB2A104J	CHIP R 100K J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W		R317			RK73GB2A471J	CHIP R 470 J 1/10W	
R126			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W		R318			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R127			RK73EB2E333J	CHIP R 33K J 1/4W		R320			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R128			RK73GB2A103J	CHIP R 10K J 1/10W		R321			RK73GB2A223J	CHIP R 22K J 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W		R322			RK73GB2A471J	CHIP R 470 J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W		R323			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R132			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1	R324			RK73GB2A471J	CHIP R 470 J 1/10W	
R201			RK73GB2A222J	CHIP R 2.2K J 1/10W		R325			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R202			RK73GB2A225J	CHIP R 2.2M J 1/10W		R327			RK73GB2A681J	CHIP R 680 J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W		R329-331			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W		R332			RK73GB2A241J	CHIP R 240 J 1/10W	
R206			RK73GB2A102J	CHIP R 1.0K J 1/10W		R333			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2
R207			RK73GB2A103J	CHIP R 10K J 1/10W		R336			RK73GB2A104J	CHIP R 100K J 1/10W	
R208			RK73GB2A102J	CHIP R 1.0K J 1/10W		R337,338			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W		R339			RK73GB2A474J	CHIP R 470K J 1/10W	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W		R342			RK73GB2A471J	CHIP R 470 J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W		R401			RK73GB2A103J	CHIP R 10K J 1/10W	
R215			RK73GB2A104J	CHIP R 100K J 1/10W		R402,403			RK73GB2A331J	CHIP R 330 J 1/10W	
R216			RK73GB2A102J	CHIP R 1.0K J 1/10W		R404,405			RK73GB2A223J	CHIP R 22K J 1/10W	
R220			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2	R406,407			RK73GB2A331J	CHIP R 330 J 1/10W	
R221			RK73GB2A104J	CHIP R 100K J 1/10W		R408,409			RK73GB2A223J	CHIP R 22K J 1/10W	
R224			RK73GB2A473J	CHIP R 47K J 1/10W		R410,411			RK73GB2A331J	CHIP R 330 J 1/10W	KM1
R227,228			RK73GB2A472J	CHIP R 4.7K J 1/10W		R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	KM1
R229,230			RK73GB2A473J	CHIP R 47K J 1/10W		R414-419			RK73FB2B181J	CHIP R 180 J 1/8W	KM1
R233			RK73GB2A101J	CHIP R 100 J 1/10W		R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	K1E1E2
R234,235			RK73GB2A392J	CHIP R 3.9K J 1/10W		R420,421			RK73FB2B181J	CHIP R 180 J 1/8W	K1E1E2
R236,237			RK73GB2A473J	CHIP R 47K J 1/10W		R422			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1E1E2
R239			RK73GB2A222J	CHIP R 2.2K J 1/10W		R423,424			RK73EB2E100J	CHIP R 10 J 1/4W	K1E1E2

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R425			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1E1E2	D107			02DZ4.7F-Y	ZENER DIODE	
R426			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1	D108,109			02DZ6.8F-Y	ZENER DIODE	
R427			RK73GB2A472J	CHIP R 4.7K J 1/10W	KM1	D111			02DZ6.2F-Y	ZENER DIODE	
R428			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1	D301			IMSA-6802-E	SURGE ABSORBER	
R429			RK73GB2A473J	CHIP R 47K J 1/10W	KM1	D303			02DZ9.1F-Z	ZENER DIODE	
R430			RK73GB2A101J	CHIP R 100 J 1/10W		D304			IMSA-6802-E	SURGE ABSORBER	
R431			RK73GB2A100J	CHIP R 10 J 1/10W		D401-403			BAW56W	DIODE	
R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		D404			UDZS3.3B	ZENER DIODE	
R433,434			RK73GB2A101J	CHIP R 100 J 1/10W		D405,406			02DZ6.8F-Y	ZENER DIODE	K1E1E2
R435			RK73GB2A102J	CHIP R 1.0K J 1/10W		D407			02DZ5.6F-Y	ZENER DIODE	KM1
R442			RK73GB2A121J	CHIP R 120 J 1/10W		D408			DA204K	DIODE	
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W		D411			BAW56W	DIODE	KM1
R503			RK73GB2A752J	CHIP R 7.5K J 1/10W		D412,413			UDZS5.6B	ZENER DIODE	KK1M1
R505			RK73GB2A432J	CHIP R 4.3K J 1/10W		D414			02DZ6.2F-Y	ZENER DIODE	K1E1E2
R506			RK73GB2A223J	CHIP R 22K J 1/10W		D500-502			BAW56W	DIODE	E1E2
R507			RK73GB2A221J	CHIP R 220 J 1/10W		D501,502			BAW56W	DIODE	KK1M1
R508			RK73EB2E472J	CHIP R 4.7K J 1/4W		D503,504			1SR154-400	DIODE	
R509			RK73EB2E101J	CHIP R 100 J 1/4W		D505,506			1SR139-400T64	DIODE	
R510			RK73EB2E472J	CHIP R 4.7K J 1/4W		D507-510			1SR154-400	DIODE	
R511-515			RK73EB2E101J	CHIP R 100 J 1/4W		D511-515			02DZ6.2F-Y	ZENER DIODE	K1M1
R516,517			RK73EB2E100J	CHIP R 10 J 1/4W		D511-523			02DZ6.2F-Y	ZENER DIODE	KE1E2
R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D518-520			02DZ6.2F-Y	ZENER DIODE	K1M1
R519			RK73GB2A102J	CHIP R 1.0K J 1/10W		D523			02DZ6.2F-Y	ZENER DIODE	K1M1
R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1	IC1	*		30624MMPA86GP	MICROCONTROLLER IC	
R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	E2	IC2			E-TDA7415C	ANALOGUE IC	
R521-523			RK73EB2E471J	CHIP R 470 J 1/4W	E1E2	IC3			M5237ML-CF0J	ANALOGUE IC	
R524			RK73GB2A100J	CHIP R 10 J 1/10W		IC4			E-TDA7560A	ANALOGUE IC	
R530			RK73GB2A100J	CHIP R 10 J 1/10W		IC5			BA00CCWT-V5	ANALOGUE IC	
R531			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		IC6			SN74HC02APWR	MOS-IC	
W2,3			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2	IC7			S-80836CNNB-J	MOS-IC	
W3			R92-1252-05	CHIP R 0 OHM J 1/16W	KK1M1	IC8	*		MIC2026-1YM	MOS-IC	
W14			R92-2053-05	CHIP R 0 OHM J 1/8W	KM1	IC9			E-TDA7479AD	ANALOGUE IC	E1E2
W15			R92-2053-05	CHIP R 0 OHM J 1/8W	K1E1E2	IC10			BR24L04FV-W	ROM IC	
W16			R92-1252-05	CHIP R 0 OHM J 1/16W		IC11			TA75S558F-F	ANALOGUE IC	KM1
W17-20			R92-2053-05	CHIP R 0 OHM J 1/8W		IC12	*		SI-8050RF3NF	ANALOGUE IC	
W21			R92-1252-05	CHIP R 0 OHM J 1/16W		IC13			BA00CC0WFP	ANALOGUE IC	
W931			R92-1252-05	CHIP R 0 OHM J 1/16W		Q1			2SB1565	TRANSISTOR	
W997,998			R92-1252-05	CHIP R 0 OHM J 1/16W		Q2			KTC4075P (Y,GR)	TRANSISTOR	
S3			S74-0822-05	MICRO SWITCH		Q3,4			KTA2014P (Y,GR)	TRANSISTOR	
S4			S70-0931-05	TACT SWITCH		Q5			2SB1565	TRANSISTOR	
D1			S2V60*A	DIODE		Q6			DTA124EUA	DIGITAL TRANSISTOR	
D2			RB160L-40	DIODE		Q7			2SB1565	TRANSISTOR	
D3			02DZ5.6F-Y	ZENER DIODE		Q8			KTC4075P (Y,GR)	TRANSISTOR	
D4			02DZ8.2F-Y	ZENER DIODE		Q9-11			DTC124EUA	DIGITAL TRANSISTOR	
D5	*		02DZ20F-Y	ZENER DIODE		Q12			2SA1488NF	TRANSISTOR	
D6	*		PTZ4.7B	ZENER DIODE		Q13			KTA2014P (Y,GR)	TRANSISTOR	
D8			02DZ12F-X	ZENER DIODE	KM1	Q14,15			KTC4075P(Y,GR)	TRANSISTOR	KM1
D9			1SR154-400	DIODE	KM1	Q16			2SB1443	TRANSISTOR	KM1
D10	*		RB081L-20	DIODE		Q17			DTC144EUA	DIGITAL TRANSISTOR	
D52,53			02DZ6.8F-Y	ZENER DIODE		Q21			KTC4075P (Y,GR)	TRANSISTOR	
D101			10EDA20	DIODE		Q101			2SB1188 (Q,R)	TRANSISTOR	KK1M1
D102-105			1SR154-400	DIODE		Q102			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
D106			02DZ5.6F-Y	ZENER DIODE	KM1E1	Q103			2SB1188 (Q,R)	TRANSISTOR	
D106			02DZ5.6F-Y	ZENER DIODE	E2	Q104			KTA2014P (Y,GR)	TRANSISTOR	
						Q105			DTA114EUA	DIGITAL TRANSISTOR	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

