

2. CONTRAST OF MISCELLANEOUS PARTS

NOTES: • Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 • The "!" mark found on some component parts indicates The importance of The safety factor of The part. Therefore, when replacing, be sure to use parts of identical designation.
 • Nos. indicate the pages and Nos. in the service manual for the base model.

CONTRAST TABLE

PACKING SECTION

XDJ-XZ/LWSYXJ and XDJ-XZ-W/LWYXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-XZ/LWSYXJ	XDJ-XZ-W/LWYXJ	Remarks
	P82-6	PACKING CASE LABEL/IM1	DHG3731 —	DHG3822 DRW2534	Attached to QSG

XDJ-XZ/UXJCB and XDJ-XZ-W/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-XZ/UXJCB	XDJ-XZ-W/UXJCB	Remarks
	P82-6	PACKING CASE	DHG3731	DHG3822	Attached to QSG
	P82-21	LABEL	DRW2831	DRW3005	
NSP		LABEL	—	DRW3007	

XDJ-XZ/AXJ and XDJ-XZ-W/AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-XZ/AXJ	XDJ-XZ-W/AXJ	Remarks
	P82-6	PACKING CASE LABEL	DHG3800 —	DHG3823 DRW2988	Attached to QSG

EXTERIOR SECTION

XDJ-XZ/LWSYXJ, XDJ-XZ-W/LWYXJ, XDJ-XZ-W/UXJCB and XDJ-XZ-W/AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-XZ/LWSYXJ	XDJ-XZ-W/LWYXJ	XDJ-XZ-W/UXJCB	XDJ-XZ-W/AXJ	Remarks
	P84-21	BOTTOM SECTION REAR PANEL	DAH3268	DAH3377	DAH3378	DAH3380	CH FADER CROSS FADER TEMPO SLIDER
		CONTROL PANEL SECTION					
	P88-24	KNOB	DAC3539	DAC3540	DAC3540	DAC3540	
	P88-27	KNOB	DAC3238	DAC3437	DAC3437	DAC3437	
	P88-36	KNOB/SLD	DNK5981	DNK6188	DNK6188	DNK6188	
	P92-1	1..Control Panel Service Assy	DEA1104	DEA1127	DEA1127	DEA1127	
! NSP	P92-2	2..Control Panel	DNK6863	DNK7033	DNK7033	DNK7033	
	P92-3	2..SLIDE SHEET 1C/SHEET	DAH2404	DAH3193	DAH3193	DAH3193	
NSP	P92-4	2..PLATE	DAH3261	DAH3374	DAH3374	DAH3374	
NSP	P92-5	2..PLATE	DAH3262	DAH3375	DAH3375	DAH3375	
NSP	P92-6	2..PLATE	DAH3263	DAH3376	DAH3376	DAH3376	
NSP	P92-7	2..PLATE	DAH3265	DAH3372	DAH3372	DAH3372	
NSP	P92-8	2..PLATE	DAH3324	DAH3373	DAH3373	DAH3373	
	P92-37	BUTTON UNIT	DXB2198	DXB2210	DXB2210	DXB2210	
		JOG DIAL SECTION					PLYA/CUE
	P94-9	JOG PLATE / PLATE	DAH2679	DAH2898	DAH2898	DAH2898	
	P94-23	JOG B / JOG DIAL	DNK4068	DNK6135	DNK6135	DNK6135	
		LCD SECTION					
	P96-5	DIAL KNOB / KNOB	DAA1246	DAA1399	DAA1399	DAA1399	
	P96-6	BUTTON	DAC3113	DAC3353	DAC3353	DAC3353	
	P96-7	BUTTON	DAC3117	DAC3354	DAC3354	DAC3354	
	P96-8	BUTTON	DAC3118	DAC3355	DAC3355	DAC3355	
	P96-25	PANEL	DNK6864	DNK7034	DNK7034	DNK7034	
	P96-28	PLATE	DAH3264	DAH3371	DAH3371	DAH3371	