



EXPLODED VIEW (CD MECHANISM)

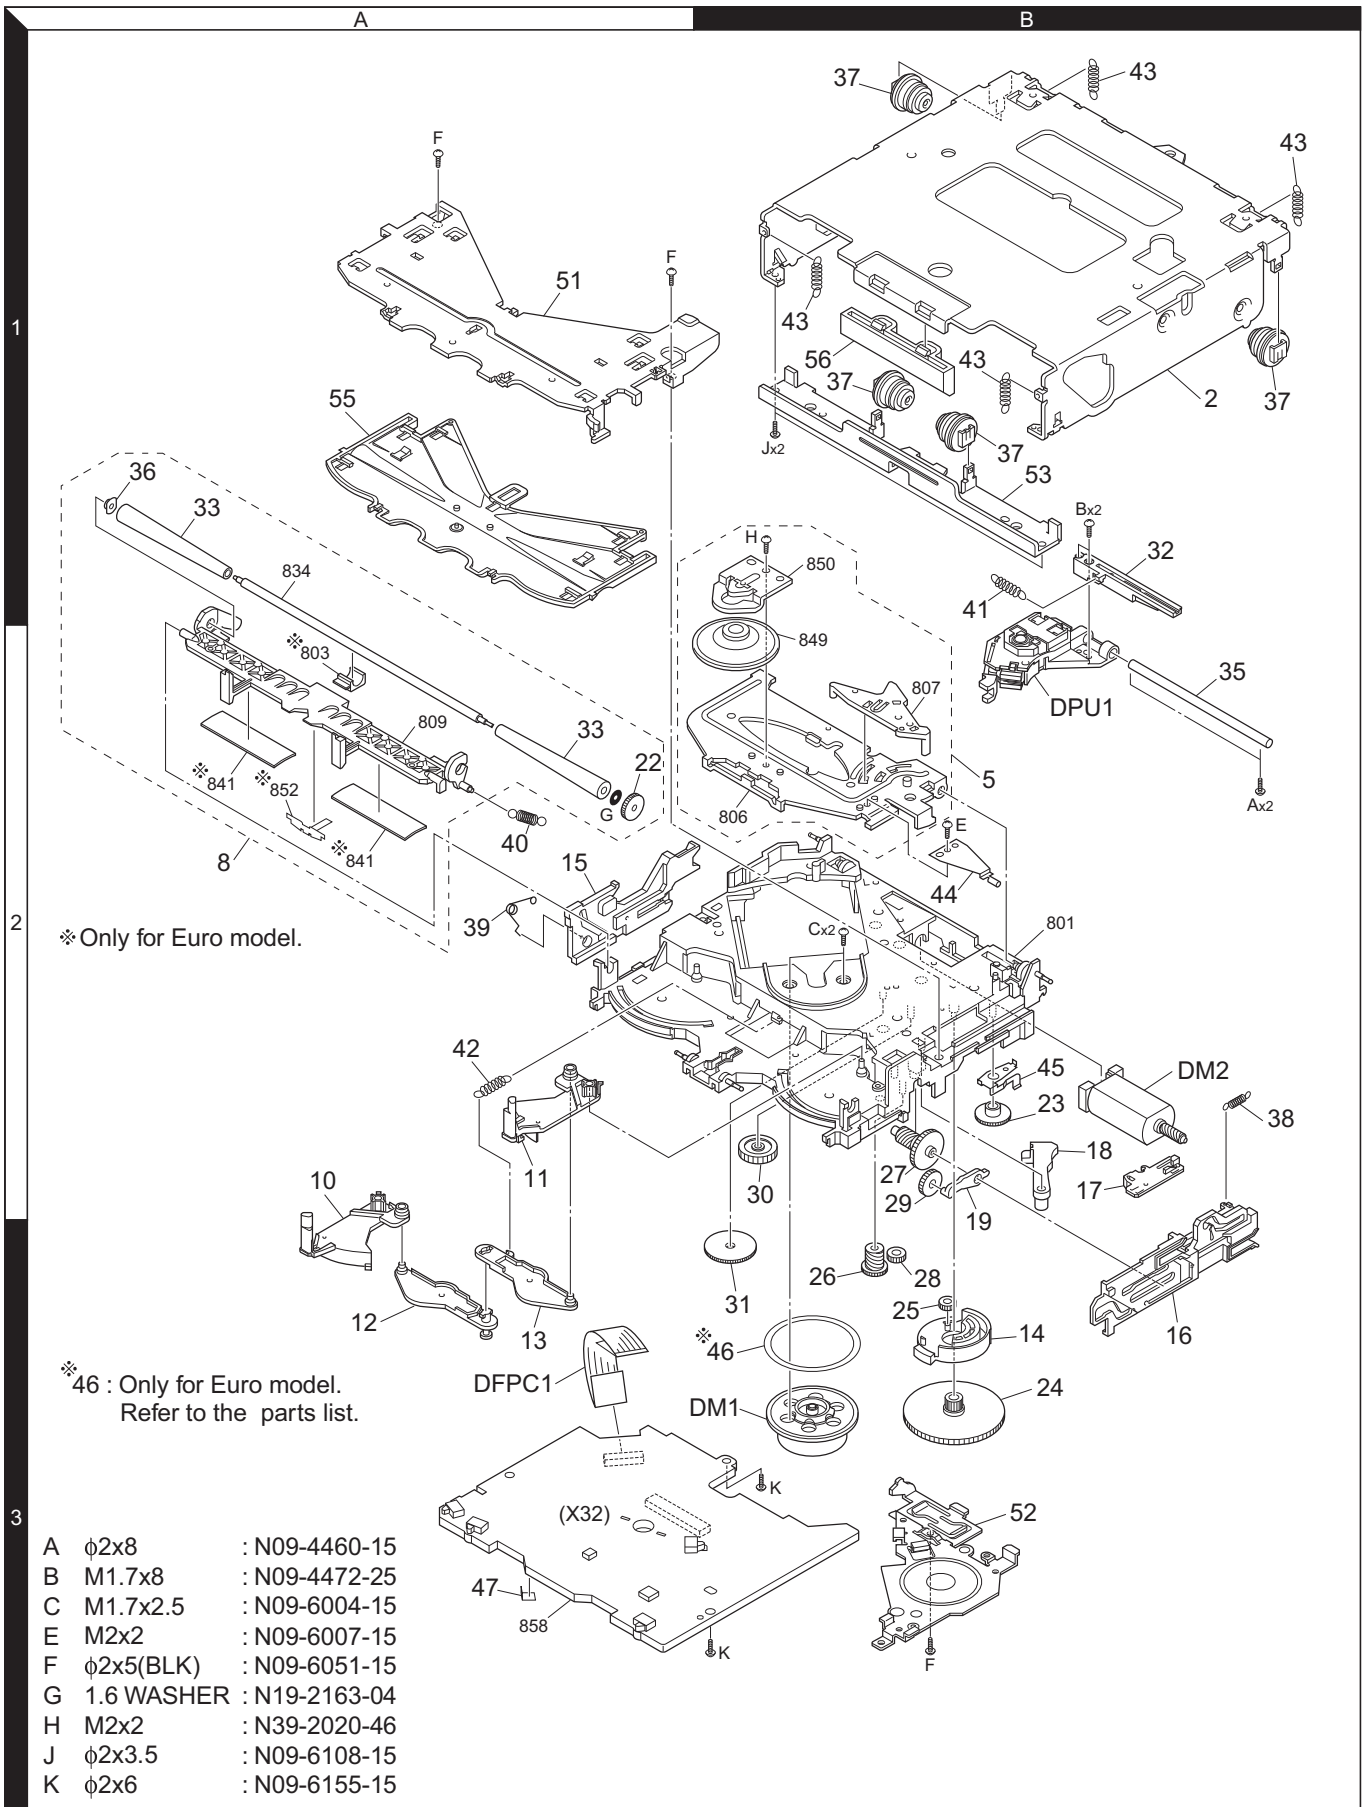


EXPLODED VIEW (UNIT)

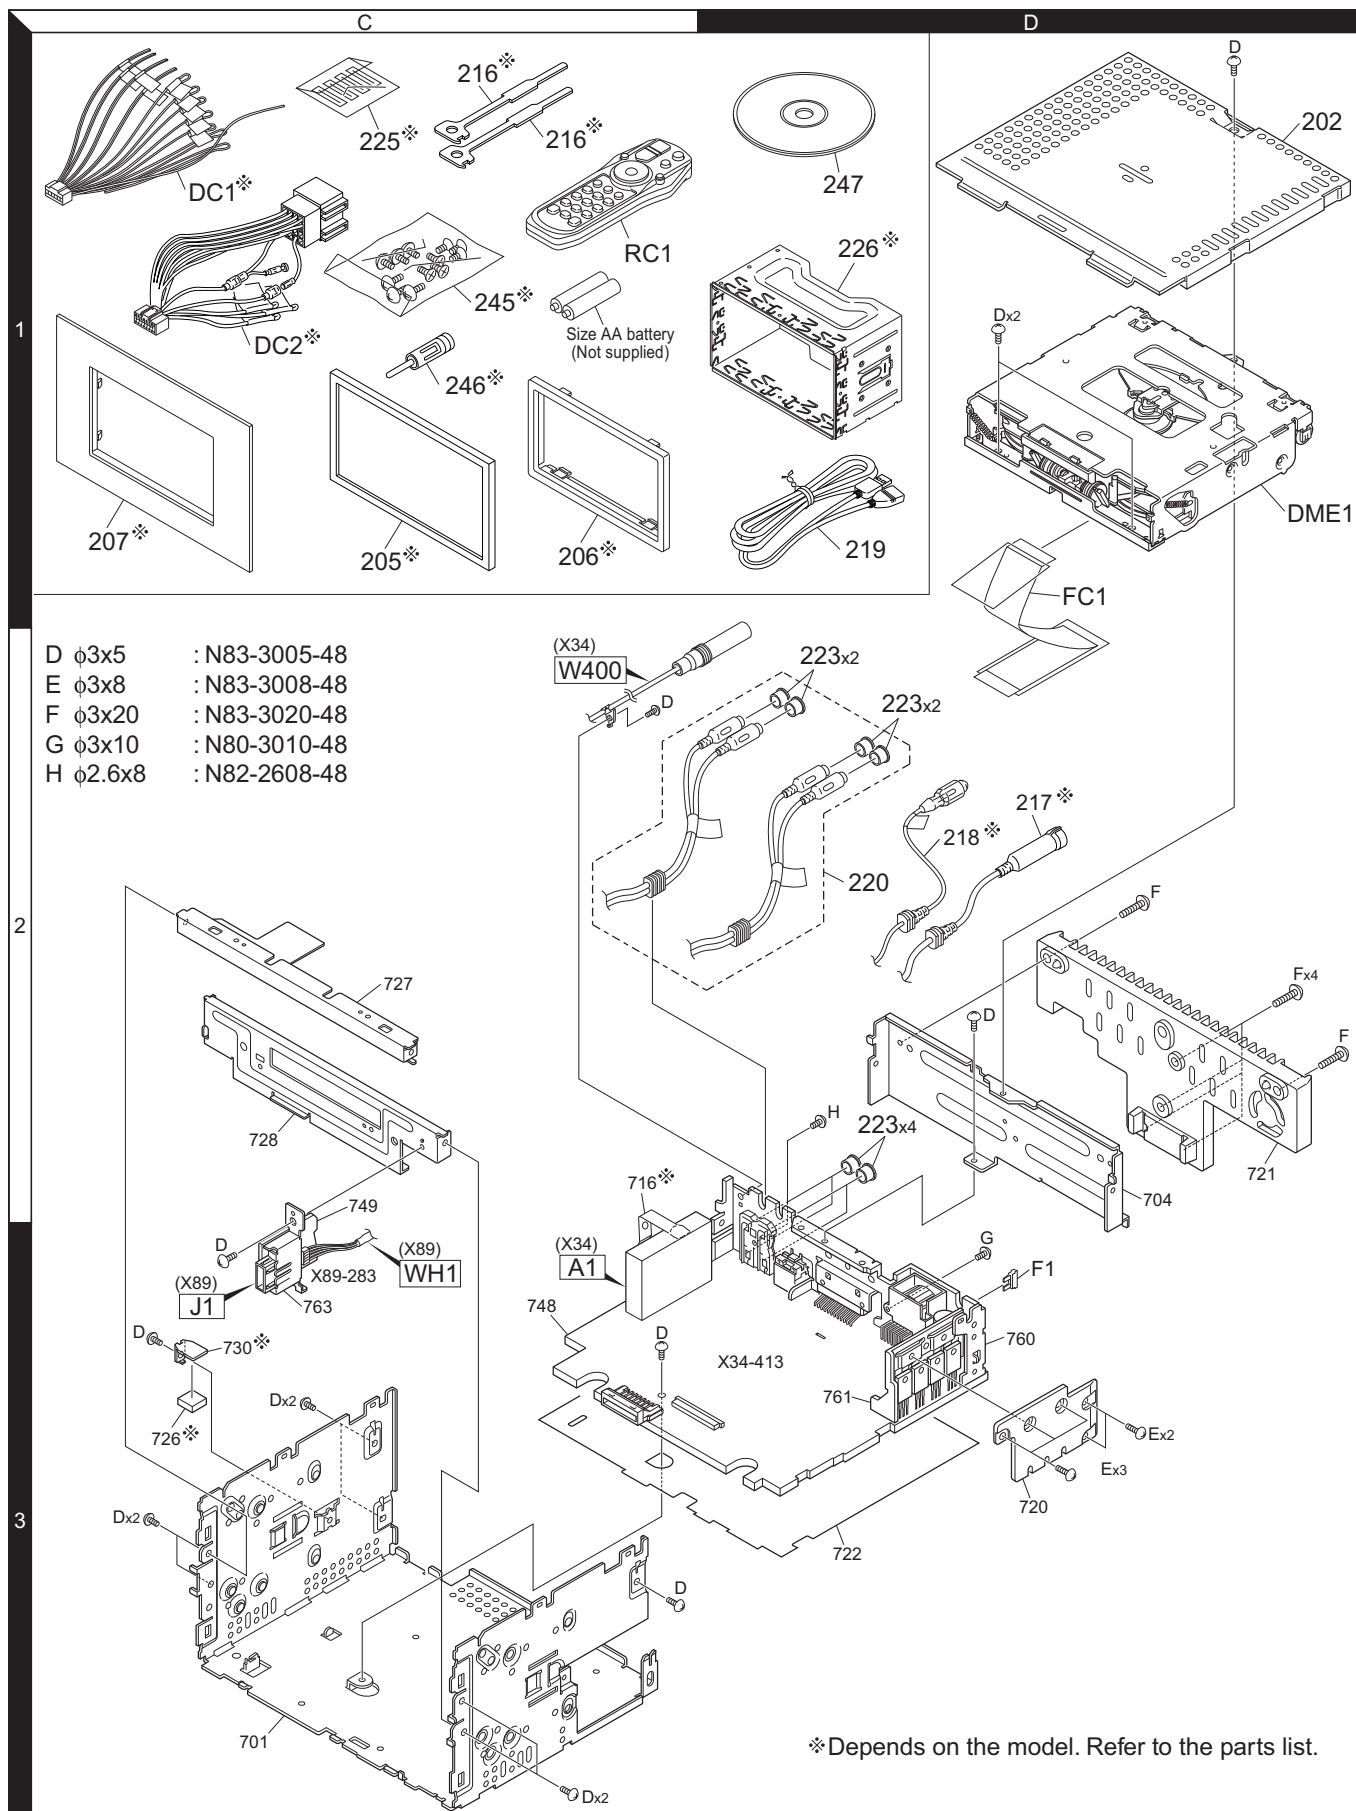

EXPLODED VIEW (PANEL)

- A $\phi 2.6 \times 6$: N78-2660-48
B $\phi 2 \times 6$: N80-2006-48
C $\phi 2 \times 8$: N80-2008-48

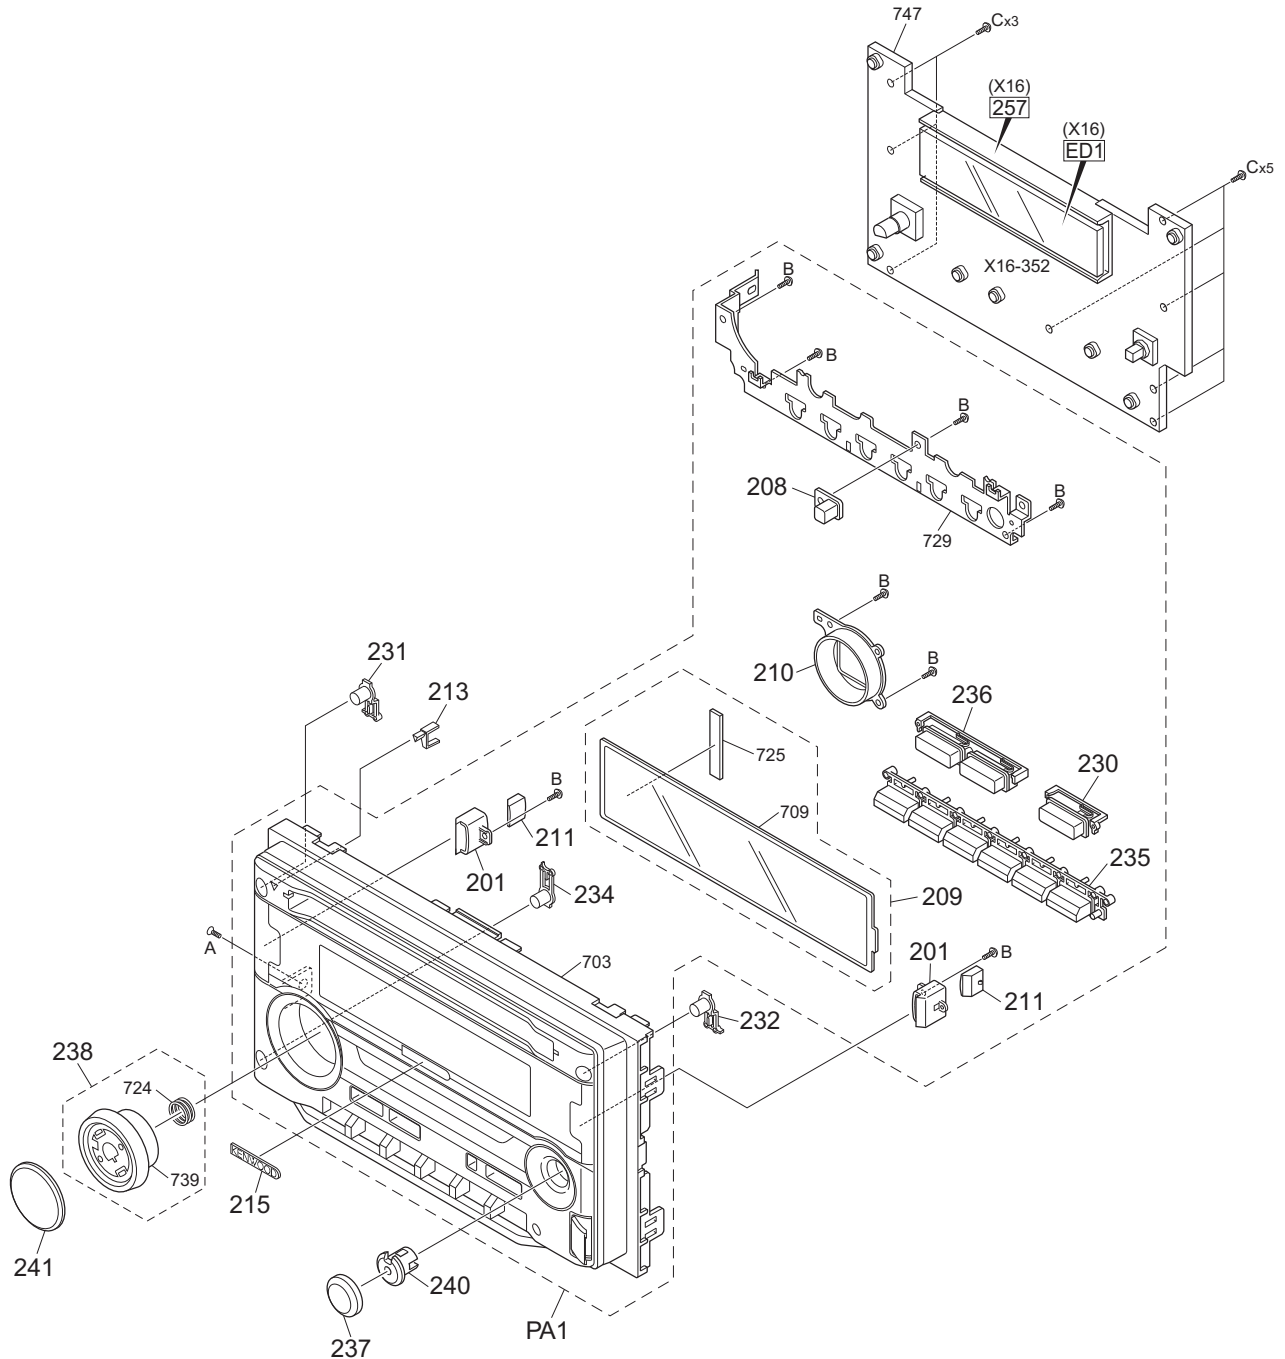

DPX701/701U/701UY DPX-MP7090U

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DPX701/701U/701UY, DPX-MP7090U					
201	2E		A33-0642-03	REFLECTOR	
202	1D		A52-0872-12	TOP PLATE	
PA1	3E	*	A64-3813-02	PANEL ASSY	K
PA1	3E	*	A64-3816-02	PANEL ASSY	M1
PA1	3E	*	A64-3870-02	PANEL ASSY	E1E2
RC1	1C		A70-2067-15	REMOTE CONTROLLER ASSY (RC-527)	
-			B46-0612-14	ID CARD	E1E2
-			B46-0682-00	WARRANTY CARD	KM1E1
-			B59-1850-00	SUB-INSTRUCTION MANUAL	
-		*	B64-3396-00	INSTRUCTION MANUAL (ENGLISH)	K
-		*	B64-3397-00	INSTRUCTION MANUAL (FRENCH)	K
-		*	B64-3398-00	INSTRUCTION MANUAL (SPANISH)	K
-		*	B64-3399-00	INSTRUCTION MANUAL (ENGLISH)	M1
-		*	B64-3400-00	INSTRUCTION MANUAL (T-CHINESE)	M1
-		*	B64-3401-00	INSTRUCTION MANUAL (KOREAN)	M1
-		*	B64-3402-00	INSTRUCTION MANUAL (ENGLISH)	E1E2
-		*	B64-3403-00	INSTRUCTION MANUAL (FRENCH)	E1
-		*	B64-3404-00	INSTRUCTION MANUAL (GERMAN)	E1
-		*	B64-3405-00	INSTRUCTION MANUAL (DUTCH)	E1
-		*	B64-3406-00	INSTRUCTION MANUAL (ITALIAN)	E1
-		*	B64-3407-00	INSTRUCTION MANUAL (SPANISH)	E1
-		*	B64-3408-00	INSTRUCTION MANUAL (PORTUGUESE)	E1
-		*	B64-3409-00	INSTRUCTION MANUAL (RUSSIAN)	E2
205	1C		B07-3046-04	ESCUTCHEON ASSY	M1
206	1C		B07-3165-02	ESCUTCHEON	KE1E2
207	1C		B07-3172-12	ESCUTCHEON	KE1E2
208	3F		B10-4811-03	FRONT GLASS	
209	2F	*	B10-4787-03	FRONT GLASS ASSY	
210	2F		B19-2368-03	LIGHTING BOARD	
211	2E		B19-2370-04	LIGHTING BOARD	
213	2E		B19-2373-03	LIGHTING BOARD	
215	3E		B43-1535-04	BADGE	
216	1C		D10-4589-04	LEVER	KE1E2
217	2D		E30-6292-15	CORD WITH DIN CONNECTOR	E1E2
218	2D		E30-6533-05	CORD WITH CONNECTOR (WIREDREMO)	K
219	1D	*	E30-6535-05	CORD WITH CONNECTOR (USB)	
220	2D	*	E30-6537-05	CORD WITH PINPLUG	M1E1E2
220	2D	*	E30-6540-05	CORD WITH PINPLUG	K
△ DC1	1C		E30-6408-05	DC CORD	KM1
△ DC2	1C		E30-6412-05	DC CORD	E1E2
FC1	1D	*	E39-0812-05	FLAT CABLE (30P)	
223	2D		F29-0626-04	INSULATING COVER	
△ F1	3D		F52-0006-05	FUSE (MINI BLADE TYPE) 10A	
-			H10-4970-02	POLYSTYRENE FOAMED FIXTURE	M1
-			H10-4971-02	POLYSTYRENE FOAMED FIXTURE	KE1E2
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1164-04	PROTECTION BAG (0.5X350X480)	
-			H25-1170-04	PROTECTION BAG	M1
-		*	H54-3662-03	ITEM CARTON CASE	K
-		*	H54-3664-03	ITEM CARTON CASE	M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-3666-03	ITEM CARTON CASE	E1
-		*	H54-3667-03	ITEM CARTON CASE	E2
225	1D		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KE1E2
226	1D	*	J22-0429-13	MOUNTING HARDWARE ASSY	KE1E2
230	2F		K24-4445-03	PUSH KNOB (SRC)	
231	2E		K24-4448-03	PUSH KNOB (DISP)	
232	3F		K24-4450-03	PUSH KNOB (EJECT)	
234	2E		K24-4454-03	PUSH KNOB (ATT)	
235	3F		K25-1787-02	PUSH KNOB (PRESET)	
236	2F		K25-1801-03	PUSH KNOB (AUTO)	KM1
236	2F	*	K25-1820-03	PUSH KNOB (TI)	E1E2
237	3E		K28-0106-03	KEY TOP (CONTROL)	
238	3E		K29-7195-03	KNOB ASSY (VOL)	
240	3E		K29-7197-03	KNOB BASE (CONTROL)	
241	3E		K29-7198-03	KEY TOP (VOL)	
245	1C		N99-1779-05	SCREW SET	KM1
A	3E		N78-2660-48	PAN HEAD TAPTITE SCREW	
B	2F		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	1F		N80-2008-48	PAN HEAD TAPTITE SCREW	
D	3C		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
F	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
246	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
247	1C		W01-1673-05	COMPACT DISC	KM1
247	1C		W01-1674-05	COMPACT DISC	E1E2
DME1	1D		X92-5580-00	CD MECHANISM ASSY (DXM-6820W)	KM1
DME1	1D		X92-5580-04	CD MECHANISM ASSY (DXM-6824W)	E1E2
SWITCH UNIT (X16-352x-xx)					
D1			B30-1690-05	LED (1608,YG)	
D2			B30-1567-05	LED (1608,RED)	
D3,4			B30-1758-05	LED (1608,BLUE RANK)	
D5-8			B30-1731-05	LED (1608,BLUE)	
D9-22			B30-1567-05	LED (1608,RED)	KE1
D9-22			B30-1690-05	LED (1608,YG)	
D23			B30-1731-05	LED (1608,BLUE)	M1E2
C1			CK73FB0J106K	CHIP C 10UF K	
C8			CK73GB1A105K	CHIP C 1.0UF K	M1
C10			CK73GB1A105K	CHIP C 1.0UF K	
C11,12			CK73GB1H332K	CHIP C 3300PF K	M1
C13			CK73EB1A475K	CHIP C 4.7UF K	M1
C15			CK73FB1A225K	CHIP C 2.2UF K	M1
C16-18			CK73GB1H103K	CHIP C 0.010UF K	
C20-23			CK73GB1H103K	CHIP C 0.010UF K	
C24,25			CK73GB1H223K	CHIP C 0.022UF K	
C26,27			CK73GB1H103K	CHIP C 0.010UF K	
C28,29			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73GB1H103K	CHIP C 0.010UF K	
C32			CK73FB1A225K	CHIP C 2.2UF K	
C33			CK73GB1H103K	CHIP C 0.010UF K	
C34			CK73GB1C224K	CHIP C 0.22UF K	

E1 : DPX701U **E2** : DPX701UY (Europe)

K : DPX701 (North America)

M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-352x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C35,36			CK73GB1H103K	CHIP C 0.010UF K		R13			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C37			C93-1217-05	CHIP C 0.047UF 100WV		R14			RK73GB2A103J	CHIP R 10K J 1/10W	M1
C38			CK73FB1A225K	CHIP C 2.2UF K		R15,16			RK73GB2A274J	CHIP R 270K J 1/10W	M1
C39			CK73FB0J106K	CHIP C 10UF K		R18			RK73GB2A473J	CHIP R 47K J 1/10W	
C40			CK73GB1H104K	CHIP C 0.10UF K		R19			RK73GB2A100J	CHIP R 10 J 1/10W	M1
C41,42			CK73FB0J106K	CHIP C 10UF K		R20			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C43			CK73GB1H103K	CHIP C 0.010UF K		R23,24			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C44			CK73GB1H104K	CHIP C 0.10UF K		R26			RK73GB2A223J	CHIP R 22K J 1/10W	
C47			CC73GCH1H150J	CHIP C 15PF J	E1E2	R27,28			RK73GB2A103J	CHIP R 10K J 1/10W	
C48			CC73GCH1H470J	CHIP C 47PF J	E1E2	R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C49			CC73GCH1H150J	CHIP C 15PF J	E1E2	R30			RK73GB2A223J	CHIP R 22K J 1/10W	
C50			CC73GCH1H470J	CHIP C 47PF J	E1E2	R33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C105-109			CK73GB1H103K	CHIP C 0.010UF K		R34			RK73GB2A101J	CHIP R 100 J 1/10W	
J1			E59-0851-05	RECTANGULAR PLUG		R36			RK73GB2A101J	CHIP R 100 J 1/10W	
257	1F	*	J19-7118-03	HOLDER		R37			RK73GB2A473J	CHIP R 47K J 1/10W	
L5			L40-3975-38	SMALL FIXED INDUCTOR (39NH)	E1E2	R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L9			L40-4775-38	SMALL FIXED INDUCTOR (47NH)	E1E2	R39-41			RK73GB2A473J	CHIP R 47K J 1/10W	
X1			L78-1208-05	RESONATOR (6.6M)		R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CP2			RK74HB1J223J	CHIP-COM 22K J 1/16W		R43,44			RK73PB2H120J	CHIP R 12 J 1/2W	
CP3			RK74GA1J223J	CHIP-COM 22K J 1/16W		R45			RK73EB2E102J	CHIP R 1.0K J 1/4W	
CP4			RK74HB1J472J	CHIP-COM 4.7K J 1/16W		R46			RK73EB2E101J	CHIP R 100 J 1/4W	
CP5			RK74GA1J472J	CHIP-COM 4.7K J 1/16W		R47			RK73EB2E102J	CHIP R 1.0K J 1/4W	
CP6			RK74GA1J473J	CHIP-COM 47K J 1/16W		R48-50			RK73EB2E101J	CHIP R 100 J 1/4W	KE1E2
CP7			RK74HB1J473J	CHIP-COM 47K J 1/16W		R48-51			RK73EB2E101J	CHIP R 100 J 1/4W	M1
CP8			RK74GA1J331J	CHIP-COM 330 J 1/16W		R52			RK73GB2A223J	CHIP R 22K J 1/10W	
CP9-14			RK74HB1J331J	CHIP-COM 330 J 1/16W		R53			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CP15			RK74HB1J223J	CHIP-COM 22K J 1/16W		R54			RK73EB2E333J	CHIP R 33K J 1/4W	
CP16			RK74HB1J331J	CHIP-COM 330 J 1/16W		R55			RK73GB2A473J	CHIP R 47K J 1/10W	
CP17			RK74HB1J223J	CHIP-COM 22K J 1/16W		R56			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CP18			RK74HB1J331J	CHIP-COM 330 J 1/16W		R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CP19			RK74HB1J223J	CHIP-COM 22K J 1/16W		R59			RK73GB2A473J	CHIP R 47K J 1/10W	
CP20			RK74GA1J101J	CHIP-COM 100 J 1/16W		R60			RK73FB2B220J	CHIP R 22 J 1/8W	
CP21			RK74HB1J331J	CHIP-COM 330 J 1/16W		R61			RK73FB2B104J	CHIP R 100K J 1/8W	
CP22			RK74HB1J223J	CHIP-COM 22K J 1/16W		R62			RK73PB2H2R7J	CHIP R 2.7 J 1/2W	
CP23			RK74HB1J101J	CHIP-COM 100 J 1/16W		R64,65			RK73GB2A223J	CHIP R 22K J 1/10W	
CP24			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R66			RK73GB2A333J	CHIP R 33K J 1/10W	
CP25			RK74HB1J472J	CHIP-COM 4.7K J 1/16W		R81			RK73GB2A301J	CHIP R 300 J 1/10W	
CP26			RK74HB1J223J	CHIP-COM 22K J 1/16W		R82			RK73FB2B331J	CHIP R 330 J 1/8W	
CP27			RK74HB1J101J	CHIP-COM 100 J 1/16W		R83,84			RK73FB2B271J	CHIP R 270 J 1/8W	
CP28			RK74GA1J101J	CHIP-COM 100 J 1/16W		R85-88			RK73FB2B431J	CHIP R 430 J 1/8W	M1E2
CP29			RK74HB1J101J	CHIP-COM 100 J 1/16W		R85-88			RK73FB2B511J	CHIP R 510 J 1/8W	KE1
CP30			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R89			RK73EB2E621J	CHIP R 620 J 1/4W	M1E2
CP31			RK74HB1J223J	CHIP-COM 22K J 1/16W		R89,90			RK73EB2E681J	CHIP R 680 J 1/4W	KE1
CP34			RK74HB1J473J	CHIP-COM 47K J 1/16W		R90			RK73EB2E681J	CHIP R 680 J 1/4W	M1E2
CP35			RK74GA1J223J	CHIP-COM 22K J 1/16W		R100			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R1			RK73GB2A104J	CHIP R 100K J 1/10W		S2-5			S70-0051-15	TACT SWITCH	
R2			RK73GB2A102J	CHIP R 1.0K J 1/10W		S6-11			S70-0901-05	TACT SWITCH	
R3			RK73GB2A104J	CHIP R 100K J 1/10W		S12,13			S70-0051-15	TACT SWITCH	
R4			RK73FB2B101J	CHIP R 100 J 1/8W		S14			S70-0106-05	TACT SWITCH	
R9			RK73GB2A563J	CHIP R 56K J 1/10W	M1	S15			S70-0051-15	TACT SWITCH	
R10			RK73GB2A512J	CHIP R 5.1K J 1/10W	M1	S1			T99-0457-15	ROTARY ENCODER	
R11			RK73GB2A203J	CHIP R 20K J 1/10W	M1	D42			DA204U	DIODE	
R12			RK73GB2A683J	CHIP R 68K J 1/10W	M1	D44			DA204U	DIODE	
						ED1			JN12823AB	FLUORESCENT INDICATOR TUBE	

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-352x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC1 IC2 IC4 IC6 IC7		*	MX231613TI7V4 BA3830F 703134AGJ011A PNA4S22M02KW TC74LVX08FT	ROM IC ANALOGUE IC MICROCONTROLLER IC ANALOGUE IC MOS-IC	M1
IC8 IC9 IC10 IC11 Q1,2			TC7WT126FU-F TC7SH32FU-F SI-3025KMMF SI-3033LUSNF 2SC4617	MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC TRANSISTOR	
Q3 Q4,5 Q6 Q7 Q8			2SD2351(W) 2SC4617 2SB1689 2SA1774 DTC143ZE	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q9 Q10 Q11 Q12 Q13			2SC4617 2SA1774 2SC2713-F 2SC4667-F 2SB1198K	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q14			DTC144EUA	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5870-00)					
C3 C4 C5 C7 C8			CK73GB1A105K CC73GCH1H101J CK73GB1A105K CK73GB0J225K CK73GB1A105K	CHIP C 1.0UF K CHIP C 100PF J CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 1.0UF K	
C12-14 C17,18 C21 C25,26 C28			CK73GB1H104K CK73GB1H104K CK73GB1H102K CK73GB1H104K CK73FB0J106K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 10UF K	
C29 C30 C31 C32 C33			CK73GB1H104K CK73GB1H152K CC73GCH1H470J CK73GB1H104K CK73GB0J225K	CHIP C 0.10UF K CHIP C 1500PF K CHIP C 47PF J CHIP C 0.10UF K CHIP C 2.2UF K	
C34 C35,36 C37 C38 C39			CC73GCH1H560J CK73GB1H104K CK73GB1H102K CK73GB1H682K CK73GB1H104K	CHIP C 56PF J CHIP C 0.10UF K CHIP C 1000PF K CHIP C 6800PF K CHIP C 0.10UF K	
C40 C41 C44 C46 C47			CK73GB1A105K CK73GB0J225K CK73GB1A105K CK73GB1H682K CK73GB1H104K	CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 6800PF K CHIP C 0.10UF K	
C48 C49 C50 C51 C52			CC73GCH1H040C CK73GB1H332K CK73GB1H104K CC73GCH1H330J CK73FB1A225K	CHIP C 4.0PF C CHIP C 3300PF K CHIP C 0.10UF K CHIP C 33PF J CHIP C 2.2UF K	
C53 C54,55			CK73GB0J225K CK73GB1H103K	CHIP C 2.2UF K CHIP C 0.010UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C56,57 C58 C59-62 C63 C64,65			CC73GCH1H391J CK73GB1H472K CK73GB1H102K CK73GB1H152K CK73GB1H104K	CHIP C 390PF J CHIP C 4700PF K CHIP C 1000PF K CHIP C 1500PF K CHIP C 0.10UF K	
C66,67 C68,69 C72 C73 C76,77			CC73GCH1H100D CK73FB0J106K CK73GB0J225K CK73GB1H104K CK73GB1H104K	CHIP C 10PF D CHIP C 10UF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C78 C80 C82 C84 C85			CC73GCH1H151J CC73GCH1H151J CC73GCH1H681J CC73GCH1H681J CK73GB1H104K	CHIP C 150PF J CHIP C 150PF J CHIP C 680PF J CHIP C 680PF J CHIP C 0.10UF K	
C86 C87 C88 C89 C91			CK73GB1A105K CK73GB0J475K CK73GB1H473K CK73GB1A105K CK73GB1H104K	CHIP C 1.0UF K CHIP C 4.7UF K CHIP C 0.047UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C93-98 C99 C100 C101 C102			CK73GB1H104K CC73GCH1H060D CC73GCH1H020C CK73GB1H104K CC73GCH1H101J	CHIP C 0.10UF K CHIP C 6.0PF D CHIP C 2.0PF C CHIP C 0.10UF K CHIP C 100PF J	
C103 C305-308 C309 C310 C311,312			CK73GB1H103K CK73GB1H103K CK73GB1H222K CK73GB1H103K CC73GCH1H060D	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 2200PF K CHIP C 0.010UF K CHIP C 6.0PF D	
C313 C315 C316 C317,318 C319			CK73GB1H103K CK73GB1H104K CK73GB1H103K CK73GB1H102K CK73GB1A105K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 1.0UF K	
C320			CC73GCH1H070D	CHIP C 7.0PF D	
CN1 CN2			E41-2630-05 E41-2612-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L1 X1 X2 X3			L92-0615-05 L77-2863-05 L78-1215-05 L77-2923-05	CHIP FERRITE CRYSTAL RESONATOR (16.899M) RESONATOR (11.500MHZ) CRYSTAL RESONATOR (6.000MHZ,LF)	
CP2 CP5 CP7 CP10 CP11			RK74GA1J101J RK74GA1J102J RK74HB1J102J RK74HB1J103J RK74HB1J472J	CHIP-COM 100 J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 4.7K J 1/16W	
CP16 CP19 CP20-23 CP24,25 CP26			RK74HB1J104J RK74GA1J103J RK74HB1J153J RK74HB1J100J RK74GA1J100J	CHIP-COM 100K J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 15K J 1/16W CHIP-COM 10 J 1/16W CHIP-COM 10 J 1/16W	
CP27-30			RK74HB1J100J	CHIP-COM 10 J 1/16W	

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5870-00)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
CP31			RK74GA1J101J	CHIP-COM 100 J 1/16W		R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CP50			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R71-73			RK73GB2A101J	CHIP R 100 J 1/10W	
CP52			RK74GA1J472J	CHIP-COM 4.7K J 1/16W		R109			RK73GH2A822D	CHIP R 8.2K D 1/10W	
CP53			RK74GA1J473J	CHIP-COM 47K J 1/16W		R110			RK73GH2A562D	CHIP R 5.6K D 1/10W	
CP56,57			RK74GA1J103J	CHIP-COM 10K J 1/16W		R112			RK73GH2A752D	CHIP R 7.5K D 1/10W	
CP300			RK74HB1J680J	CHIP-COM 68 J 1/16W		R115			RK73GH2A822D	CHIP R 8.2K D 1/10W	
CP301			RK74GA1J680J	CHIP-COM 68 J 1/16W		R116			RK73GH2A752D	CHIP R 7.5K D 1/10W	
CP302,303			RK74HB1J101J	CHIP-COM 100 J 1/16W		R118,119			RK73GH2A100D	CHIP R 10 D 1/10W	
R1			RK73GB2A225J	CHIP R 2.2M J 1/10W		R121			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R3			RK73GB2A223J	CHIP R 22K J 1/10W		R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R4			RK73GB2A473J	CHIP R 47K J 1/10W		R132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W		R133			RK73GB2A561J	CHIP R 560 J 1/10W	
R6			RK73GH2A223D	CHIP R 22K D 1/10W		R138			RK73GB2A101J	CHIP R 100 J 1/10W	
R7			RK73GB2A223J	CHIP R 22K J 1/10W		R142			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W		R144			RK73GB2A223J	CHIP R 22K J 1/10W	
R9			RK73GB2A223J	CHIP R 22K J 1/10W		R148			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W		R150			RK73GB2A103J	CHIP R 10K J 1/10W	
R11			RK73GB2A220J	CHIP R 22 J 1/10W		R151			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R12			RK73GB2A223J	CHIP R 22K J 1/10W		R152			RK73GB2A221J	CHIP R 220 J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W		R153			RK73GB2A100J	CHIP R 10 J 1/10W	
R15			RK73GB2A223J	CHIP R 22K J 1/10W		R154,155			RK73GB2A330J	CHIP R 33 J 1/10W	
R17			RK73GB2A221J	CHIP R 220 J 1/10W		R156			RK73GB2A103J	CHIP R 10K J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W		R300,301			RK73GB2A680J	CHIP R 68 J 1/10W	
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W		R302			RK73GB2A101J	CHIP R 100 J 1/10W	
R20			RK73GB2A102J	CHIP R 1.0K J 1/10W		R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R21,22			RK73GB2A104J	CHIP R 100K J 1/10W		R306,307			RK73GB2A270J	CHIP R 27 J 1/10W	
R23,24			RK73GB2A103J	CHIP R 10K J 1/10W		R308-310			RK73GB2A153J	CHIP R 15K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W		R311-316			RK73GB2A100J	CHIP R 10 J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W		R320-323			RK73GB2A101J	CHIP R 100 J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W		R336			RK73GB2A101J	CHIP R 100 J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W		R337			RK73GB2A153J	CHIP R 15K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W		R339			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W		R345			RK73GB2A103J	CHIP R 10K J 1/10W	
R40			RK73GB2A274J	CHIP R 270K J 1/10W		R346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R41			RK73GB2A103J	CHIP R 10K J 1/10W		R348			RK73GB2A223J	CHIP R 22K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W		R351			RK73GB2A103J	CHIP R 10K J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W		R353			RK73GB2A473J	CHIP R 47K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W		R358,359			RK73GB2A473J	CHIP R 47K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W		R361,362			RK73GB2A223J	CHIP R 22K J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W		R366			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W		R367			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W		R368			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W		R370			RK73GB2A101J	CHIP R 100 J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W		R371			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W		R372,373			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W		R374			RK73GB2A473J	CHIP R 47K J 1/10W	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W		S1,2			S68-0863-05	PUSH SWITCH	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W		S3			S68-0862-05	PUSH SWITCH	
R60			RK73GB2A123J	CHIP R 12K J 1/10W		D2			DA204U	DIODE	
R61			RK73GB2A183J	CHIP R 18K J 1/10W		D3			DAN202U	DIODE	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W		D9			DA204U	DIODE	
R63			RK73GB2A133J	CHIP R 13K J 1/10W		IC1			M30620FCPPG	MICROCONTROLLER IC	
R64			RK73GB2A151J	CHIP R 150 J 1/10W		IC2			UPD63712GC	MOS-IC	
R67,68			RK73GB2A152J	CHIP R 1.5K J 1/10W							
R69			RK73GB2A682J	CHIP R 6.8K J 1/10W							

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5870-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC4 IC5 IC13 IC14 IC15			BA5824FP BD33KA5WFP-E2 NJM2100V-ZB TAR5S50-F CS7410-IQZ	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC16 IC17 IC18 IC19 IC20			IC42S164007TIG 29LV800CBT19V1 WM8716SEDS/R R1114N331B-TR S-1132B18U5T1G	DRAM IC ROM IC MOS-IC ANALOGUE IC (3.3V LF) ANALOGUE IC	
IC21 IC25 IC26 IC28 Q3			BD33KA5WFP-E2 TDUHC1240F0C00 TC74LCX00FT-F TC7WH125FK-F UMD9N	ANALOGUE IC MOS-IC MOS-IC MOS-IC TRANSISTOR	
Q6 Q7 Q8 Q9 Q10			UMD12N DTC124EE 2SB0970 DTC114YE DTC114YUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q16 Q17 Q18			DTA143ZE DTA143XUA DTC114YE	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

ELECTRIC UNIT (X34-413x-xx)

C1 C2 C10 C11 C12			C90-6784-05 CC73GCH1H070D CK73FB1C105K CD04AY1A221M CC73GCH1H070D	ELECTRO 3900UF 16WV CHIP C 7.0PF D CHIP C 1.0UF K ELECTRO 220UF 10WV CHIP C 7.0PF D	
C20 C21 C22 C23 C30			CD04BA0J101M C90-5692-05 CK73GB1H103K CE32CL1C100M CK73GB1A474K	ELECTRO 100UF 6.3WV ELECTRO 220UF 16WV CHIP C 0.010UF K CHIP EL 10UF 16WV CHIP C 0.47UF K	
C31 C40 C41 C42,43 C50			CD04AY1A101M CK73GB1H103K CD04BA0J470M CK73GB1H104K CK73GB1H104K	ELECTRO 100UF 10WV CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.10UF K CHIP C 0.10UF K	
C51 C81 C82 C84 C85			CD04AT1E101M C93-1382-05 C93-1381-05 C93-1381-05 C93-1382-05	ELECTRO 100UF 25WV CHIP C 1UF K CHIP C 1UF K CHIP C 1UF K CHIP C 1UF K	
C86 C87 C100 C102,103 C104-106			CK73EB1E105K CK73GB1H103K CK73GB1H104K CC73GCH1H220J CK73GB1H103K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 22PF J CHIP C 0.010UF K	
C107 C109,110 C112,113 C114 C201			CK73GB1H102K CK73GB1H103K CK73GB1H103K CD04AS0J470M CK73GB1H103K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K	

C203 C204 C205 C300 C301			CK73GB1H223K CK73GB1H103K CK73FB1C105K CD04AS1C470M CD04AS1H2R2M	CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 1.0UF K ELECTRO 47UF 16WV ELECTRO 2.2UF 50WV	
C303,304 C305 C306 C307 C308,309			CD04AS1H3R3M CK73FB1C105K CK73GB1H103K CE32BE1V100M CD04AS1H2R2M	ELECTRO 3.3UF 50WV CHIP C 1.0UF K CHIP C 0.010UF K CHIP EL 10UF 35WV ELECTRO 2.2UF 50WV	
C310,311 C364,365 C369 C384 C387,388			CK73FB1E474K CD04AS1H2R2M CK73FB1C105K CK73FB1C105K CC73GCH1H070D	CHIP C 0.47UF K ELECTRO 2.2UF 50WV CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 7.0PF D	
C402 C403 C404 C405 C407			CK73GB1H103K CK73FB1A225K CC73GCH1H331J CD04AS1V100M CK73GB1H103K	CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 330PF J ELECTRO 10UF 35WV CHIP C 0.010UF K	KE1E2 KE1E2 KE1E2 KE1E2
C409,410 C412 C414,415 C423 C453-455			CK73GB1H103K CK73GB1H103K CC73GCH1H150J CC73GCH1H070D CK73GB1H104K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 15PF J CHIP C 7.0PF D CHIP C 0.10UF K	KE1E2 K
C458 C500-504 C505 C506 C550,551			CK73GB1A105K CK73EB1A475K CK73GB1H103K CE32BE1V100M CK73GB1H103K	CHIP C 1.0UF K CHIP C 4.7UF K CHIP C 0.010UF K CHIP EL 10UF 35WV CHIP C 0.010UF K	K M1 M1 M1
C554 C593 C595 C599 C600,601			CC73GCH1H070D CK73GB1H102K CK73GB1A105K CK73GB1A105K CK73EB1E225K	CHIP C 7.0PF D CHIP C 1000PF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 2.2UF K	E1E2
C602 C603 C604 C605-608 C609			CK73GB1H103K CK73GB1H223K CD04AS1C220M CK73EB1E225K CD04BF1E101M	CHIP C 0.010UF K CHIP C 0.022UF K ELECTRO 22UF 16WV CHIP C 2.2UF K ELECTRO 100UF 25WV	
C610 C611 C612,613 C614,615 C616,617			CD04AS1C220M CE32BE1V100M CD04AS1V100M CE32BE1V100M CD04AS1V100M	ELECTRO 22UF 16WV CHIP EL 10UF 35WV ELECTRO 10UF 35WV CHIP EL 10UF 35WV ELECTRO 10UF 35WV	
C618,619 C620,621 C622 C623-628 C629			CE32BE1V100M CD04AS1V100M CE32BE1V100M CK73GB1H102K CK73FB1E474K	CHIP EL 10UF 35WV ELECTRO 10UF 35WV CHIP EL 10UF 35WV CHIP C 1000PF K CHIP C 0.47UF K	
C630 C631 C632 C633,634 C635-638			CD04AT0J470M CK73FB1E474K CK73GB1H103K CE32BE1V100M CK73GB1A105K	ELECTRO 47UF 6.3WV CHIP C 0.47UF K CHIP C 0.010UF K CHIP EL 10UF 35WV CHIP C 1.0UF K	

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-413x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C701			CK73FB1E474K	CHIP C 0.47UF K		L901			L33-2296-05	SMALL FIXED INDUCTOR	
C702			CD04AS0J470M	ELECTRO 47UF 6.3WV		L902			L33-2297-05	SMALL FIXED INDUCTOR	
C703			CK73FB1E474K	CHIP C 0.47UF K		X100			L78-0872-05	RESONATOR (12MHZ)	
C704			CK73GB1H103K	CHIP C 0.010UF K		X101			L77-2880-05	CRYSTAL RESONATOR	
C750			CK73FB1C105K	CHIP C 1.0UF K		X401			L77-2002-05	CRYSTAL RESONATOR	KE1E2
C752-755			C90-6781-05	ELECTRO 4.7UF 16WV		D	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C756			CD04BM1A101M	ELECTRO 100UF 10WV		G	3D		N80-3010-48	PAN HEAD TAPTITE SCREW	
C757			C90-6781-05	ELECTRO 4.7UF 16WV		H	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
C758			CK73GB1H103K	CHIP C 0.010UF K		CP100			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C759			CK73FB1C105K	CHIP C 1.0UF K		CP101-103			RK74GA1J101J	CHIP-COM 100 J 1/16W	K
C760-768			CC73GCH1H150J	CHIP C 15PF J		CP101,102			RK74GA1J101J	CHIP-COM 100 J 1/16W	M1E1E2
C771-775			CC73GCH1H150J	CHIP C 15PF J		CP107			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
C780			CC73GCH1H150J	CHIP C 15PF J		CP108			RK74GA1J222J	CHIP-COM 2.2K J 1/16W	
C782			CC73GCH1H150J	CHIP C 15PF J		CP109			RK74GB1J101J	CHIP-COM 100 J 1/16W	KE1E2
C800-802			CD04AS1V100M	ELECTRO 10UF 35WV		CP110,111			RK74GA1J101J	CHIP-COM 100 J 1/16W	
C803			CK73GB1H104K	CHIP C 0.10UF K		R1			RK73EB2E102J	CHIP R 1.0K J 1/4W	
C804			CK73GB1H103K	CHIP C 0.010UF K		R2,3			RK73EB2E103J	CHIP R 10K J 1/4W	
C805			CD04AS1C470M	ELECTRO 47UF 16WV		R10			RK73GH2A243D	CHIP R 24K D 1/10W	
C806,807			CK73GB1H102K	CHIP C 1000PF K		R11			RK73FB2B221J	CHIP R 220 J 1/8W	
C808			CD04BA1C101M	ELECTRO 100UF 16WV		R13			RK73GH2A432D	CHIP R 4.3K D 1/10W	
C811,812			CC73GCH1H070D	CHIP C 7.0PF D		R14			RK73GB2A160J	CHIP R 16 J 1/10W	
C816			CK73GB1H104K	CHIP C 0.10UF K		R20			RK73FB2B203J	CHIP R 20K J 1/8W	
C901			CC73GCH1H680J	CHIP C 68PF J		R21			RK73GB2A223J	CHIP R 22K J 1/10W	
C902			CK73GB1H332K	CHIP C 3300PF K		R23			RK73FB2B272J	CHIP R 2.7K J 1/8W	
C903,904			CK73GB1H104K	CHIP C 0.10UF K		R30			RK73FB2B152J	CHIP R 1.5K J 1/8W	
C905			CK73GB1H682K	CHIP C 6800PF K		R40			RK73FB2B223J	CHIP R 22K J 1/8W	
C907,908			CK73GB1H104K	CHIP C 0.10UF K		R41			RK73FB2B182J	CHIP R 1.8K J 1/8W	
C910,911			CD04BK1A221M	ELECTRO 220UF 10WV		R42			RK73GB2A105J	CHIP R 1.0M J 1/10W	
C913			CD04BK1E101M	ELECTRO 100UF 25WV		R44			RK73GB2A104J	CHIP R 100K J 1/10W	
C914			CK73EB1E105K	CHIP C 1.0UF K		R45,46			RK73PB2H1R0J	CHIP R 1.0 J 1/2W	
C915,916			CD04BK1E101M	ELECTRO 100UF 25WV		R50			RK73FB2B222J	CHIP R 2.2K J 1/8W	
C917,918			CK73GB1H104K	CHIP C 0.10UF K		R52			RK73FB2B104J	CHIP R 100K J 1/8W	
C951			CK73GB1H104K	CHIP C 0.10UF K		R80			RK73GH2A434D	CHIP R 430K D 1/10W	
C952			CD04BK1A221M	ELECTRO 220UF 10WV		R81			RK73GB2A473J	CHIP R 47K J 1/10W	
C953			CK73GB1H104K	CHIP C 0.10UF K		R82			RK73GH2A103D	CHIP R 10K D 1/10W	
C955			CK73GB1H104K	CHIP C 0.10UF K		R84			RK73GH2A153D	CHIP R 15K D 1/10W	
C981		*	C93-1408-05	CHIP C 4.7UF K		R100-102			RK73GB2A104J	CHIP R 100K J 1/10W	M1
CN5			E41-0944-05	PIN ASSY	KE1E2	R100-104			RK73GB2A104J	CHIP R 100K J 1/10W	KE1E2
CN550			E41-2358-05	FLAT CABLE CONNECTOR		R104			RK73GB2A104J	CHIP R 100K J 1/10W	M1
CN600			E41-0959-05	PIN ASSY		R105			RK73GB2A101J	CHIP R 100 J 1/10W	
CN900			E41-0930-05	PIN ASSY		R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	
△ J1			E58-0991-05	RECTANGULAR RECEPTACLE		R107			RK73GB2A473J	CHIP R 47K J 1/10W	
J2			E56-0855-05	CYLINDRICAL RECEPTACLE		R111			RK73GB2A104J	CHIP R 100K J 1/10W	
J500			E58-0993-05	RECTANGULAR RECEPTACLE		R112			RK73GB2A473J	CHIP R 47K J 1/10W	
J600			E63-0896-05	PIN JACK	M1E1E2	R113			RK73GB2A103J	CHIP R 10K J 1/10W	
J600			E63-0897-05	PIN JACK	K	R114			RK73GB2A473J	CHIP R 47K J 1/10W	
W400			E30-6218-15	CORD WITH PLUG (ANT)		R115			RK73GB2A101J	CHIP R 100 J 1/10W	
L1			L33-1988-05	CHOKE COIL ASSY		R117			RK73GB2A101J	CHIP R 100 J 1/10W	
L81		*	L33-2337-05	SMALL FIXED INDUCTOR		R119			RK73GB2A223J	CHIP R 22K J 1/10W	KE1E2
L101			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)		R122,123			RK73GB2A101J	CHIP R 100 J 1/10W	
L400			L33-2260-05	CHOKE COIL		R125			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2
L405			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	KE1E2	R126			RK73GB2A101J	CHIP R 100 J 1/10W	
L550			L92-0616-05	CHIP FERRITE		R127			RK73GB2A103J	CHIP R 10K J 1/10W	
L600			L41-2205-33	SMALL FIXED INDUCTOR (22U)		R128			RK73GB2A222J	CHIP R 2.2K J 1/10W	

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-413x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R132,133			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R134			RK73GB2A101J	CHIP R 100 J 1/10W	
R139			RK73GB2A473J	CHIP R 47K J 1/10W	
R141			RK73GB2A473J	CHIP R 47K J 1/10W	
R144,145			RK73GB2A101J	CHIP R 100 J 1/10W	
R146			RK73GB2A333J	CHIP R 33K J 1/10W	
R148			RK73GB2A473J	CHIP R 47K J 1/10W	
R149,150			RK73GB2A223J	CHIP R 22K J 1/10W	
R154-157			RK73GB2A223J	CHIP R 22K J 1/10W	E1
R154,155			RK73GB2A223J	CHIP R 22K J 1/10W	E2
R156-159			RK73GB2A223J	CHIP R 22K J 1/10W	K
R157			RK73GB2A223J	CHIP R 22K J 1/10W	E2
R157-160			RK73GB2A223J	CHIP R 22K J 1/10W	M1
R160			RK73GB2A223J	CHIP R 22K J 1/10W	E2
R161			RK73GB2A104J	CHIP R 100K J 1/10W	
R163			RK73GB2A104J	CHIP R 100K J 1/10W	
R164			RK73GB2A223J	CHIP R 22K J 1/10W	
R165,166			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R168			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W	
R187			RK73GB2A473J	CHIP R 47K J 1/10W	
R188			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R200			RK73EB2E473J	CHIP R 47K J 1/4W	
R201			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W	
R202			RK73GB2A183J	CHIP R 18K J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W	
R204			RK73GB2A393J	CHIP R 39K J 1/10W	
R205			RK73GB2A103J	CHIP R 10K J 1/10W	
R209			RK73FB2B683J	CHIP R 68K J 1/8W	
R210			RK73FB2B203J	CHIP R 20K J 1/8W	
R211			RK73GB2A103J	CHIP R 10K J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W	
R213,214			RK73GB2A104J	CHIP R 100K J 1/10W	
R215			RK73FB2B561J	CHIP R 560 J 1/8W	
R216			RK73GB2A223J	CHIP R 22K J 1/10W	KM1
R217			RK73PB2H221J	CHIP R 220 J 1/2W	KM1
R218,219			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R220			RK73PB2H221J	CHIP R 220 J 1/2W	KM1
R300			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R301			RK73GB2A103J	CHIP R 10K J 1/10W	
R335,336			RK73GB2A101J	CHIP R 100 J 1/10W	
R402			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R404			RK73GB2A223J	CHIP R 22K J 1/10W	
R405,406			RK73GB2A471J	CHIP R 470 J 1/10W	
R407,408			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R409			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R410-412			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2
R425-428			RK73GB2A910J	CHIP R 91 J 1/10W	
R429			RK73GB2A270J	CHIP R 27 J 1/10W	
R453,454			RK73GB2A102J	CHIP R 1.0K J 1/10W	K
R457			RK73GH2A241D	CHIP R 240 D 1/10W	K
R458			RK73GH2A111D	CHIP R 110 D 1/10W	K

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R500			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R502			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1
R503			RK73GB2A333J	CHIP R 33K J 1/10W	M1
R504,505			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R506			RK73GB2A821J	CHIP R 820 J 1/10W	M1
R507			RK73GB2A104J	CHIP R 100K J 1/10W	M1
R508			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R512,513			RK73GB2A334J	CHIP R 330K J 1/10W	M1
R516,517			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R518,519			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R520			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	M1
R550			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R551			RK73GB2A471J	CHIP R 470 J 1/10W	
R552,553			RK73GB2A104J	CHIP R 100K J 1/10W	
R554			RK73GB2A471J	CHIP R 470 J 1/10W	
R557			RK73GB2A161J	CHIP R 160 J 1/10W	
R600,601			RK73GB2A913J	CHIP R 91K J 1/10W	
R602			RK73GB2A103J	CHIP R 10K J 1/10W	
R603			RK73GB2A470J	CHIP R 47 J 1/10W	
R604			RK73GB2A274J	CHIP R 270K J 1/10W	
R605			RK73GB2A563J	CHIP R 56K J 1/10W	
R606			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R607			RK73GB2A470J	CHIP R 47 J 1/10W	
R608			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R609			RK73GB2A750J	CHIP R 75 J 1/10W	
R610			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R611			RK73GB2A361J	CHIP R 360 J 1/10W	
R612			RK73GB2A820J	CHIP R 82 J 1/10W	
R613			RK73GB2A123J	CHIP R 12K J 1/10W	
R614			RK73GB2A103J	CHIP R 10K J 1/10W	
R615			RK73GB2A223J	CHIP R 22K J 1/10W	
R616			RK73GB2A103J	CHIP R 10K J 1/10W	
R617			RK73GB2A223J	CHIP R 22K J 1/10W	
R618			RK73GB2A820J	CHIP R 82 J 1/10W	
R619			RK73GB2A123J	CHIP R 12K J 1/10W	
R620,621			RK73GB2A361J	CHIP R 360 J 1/10W	
R622			RK73GB2A820J	CHIP R 82 J 1/10W	
R623			RK73GB2A123J	CHIP R 12K J 1/10W	
R624			RK73GB2A103J	CHIP R 10K J 1/10W	
R625			RK73GB2A223J	CHIP R 22K J 1/10W	
R626			RK73GB2A103J	CHIP R 10K J 1/10W	
R627			RK73GB2A223J	CHIP R 22K J 1/10W	
R628			RK73GB2A820J	CHIP R 82 J 1/10W	
R629			RK73GB2A123J	CHIP R 12K J 1/10W	
R630,631			RK73GB2A361J	CHIP R 360 J 1/10W	
R632			RK73GB2A820J	CHIP R 82 J 1/10W	
R633			RK73GB2A123J	CHIP R 12K J 1/10W	
R634			RK73GB2A103J	CHIP R 10K J 1/10W	
R635			RK73GB2A223J	CHIP R 22K J 1/10W	
R636			RK73GB2A103J	CHIP R 10K J 1/10W	
R637			RK73GB2A223J	CHIP R 22K J 1/10W	
R638			RK73GB2A820J	CHIP R 82 J 1/10W	
R639			RK73GB2A123J	CHIP R 12K J 1/10W	
R640			RK73GB2A361J	CHIP R 360 J 1/10W	
R641			RK73EB2E100J	CHIP R 10 J 1/4W	

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-413x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R642			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R915,916			RK73GB2A154J	CHIP R 150K J 1/10W	
R643			RK73EB2E100J	CHIP R 10 J 1/4W		R951			RK73GB2A153J	CHIP R 15K J 1/10W	
R644			RK73GB2A102J	CHIP R 1.0K J 1/10W		R954			RK73GB2A153J	CHIP R 15K J 1/10W	
R655-660			RK73GB2A104J	CHIP R 100K J 1/10W		R959			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R700			RK73EB2E472J	CHIP R 4.7K J 1/4W		R960			RK73GB2A101J	CHIP R 100 J 1/10W	
R701			RK73EB2E101J	CHIP R 100 J 1/4W		R981,982			RK73PB2H1R0J	CHIP R 1.0 J 1/2W	
R702			RK73EB2E472J	CHIP R 4.7K J 1/4W		R983			RK73GB2A104J	CHIP R 100K J 1/10W	
R703-707			RK73EB2E101J	CHIP R 100 J 1/4W		R984			RK73FB2B431J	CHIP R 430 J 1/8W	
R708			RK73EB2E100J	CHIP R 10 J 1/4W		R985			RK73GB2A473J	CHIP R 47K J 1/10W	
R709			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R987			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R710			RK73EB2E100J	CHIP R 10 J 1/4W		W200			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1
R711			RK73GB2A102J	CHIP R 1.0K J 1/10W		W200,201			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
R712			RK73EB2E102J	CHIP R 1.0K J 1/4W		W401			R92-2053-05	CHIP R 0 OHM J 1/8W	
R713-715			RK73EB2E471J	CHIP R 470 J 1/4W	KE1E2	W500			R92-1252-05	CHIP R 0 OHM J 1/16W	
R750			RK73GB2A683J	CHIP R 68K J 1/10W	E1E2	W596			R92-1252-05	CHIP R 0 OHM J 1/16W	
R752			RK73GB2A102J	CHIP R 1.0K J 1/10W		W751			R92-1252-05	CHIP R 0 OHM J 1/16W	
R755-758			RK73GB2A910J	CHIP R 91 J 1/10W		W754			R92-1252-05	CHIP R 0 OHM J 1/16W	
R759-762			RK73GB2A103J	CHIP R 10K J 1/10W		D1			S2V60*A	DIODE	
R763			RK73GB2A100J	CHIP R 10 J 1/10W		D20			RB160L-40	DIODE	
R764			RK73GB2A103J	CHIP R 10K J 1/10W		D21			UDZS5.6B	ZENER DIODE	
R765			RK73GB2A432J	CHIP R 4.3K J 1/10W		D30			UDZS8.2B	ZENER DIODE	
R766			RK73GB2A680J	CHIP R 68 J 1/10W		D40			UDZS5.6B	ZENER DIODE	
R767			RK73GB2A220J	CHIP R 22 J 1/10W		D41			02DZ11F-Y	ZENER DIODE	
R768			RK73GB2A123J	CHIP R 12K J 1/10W		D50			UDZS20B	ZENER DIODE	
R771			RK73GB2A223J	CHIP R 22K J 1/10W		D80-82			RB060L-40	DIODE	
R772			RK73GB2A221J	CHIP R 220 J 1/10W		D101-104			DAP202U	DIODE	E1E2
R800			RK73GB2A391J	CHIP R 390 J 1/10W		D102-104			DAP202U	DIODE	K
R801			RK73GB2A242J	CHIP R 2.4K J 1/10W		D102-105			DAP202U	DIODE	M1
R803			RK73GH2A512D	CHIP R 5.1K D 1/10W		D200			DAP202U	DIODE	
R804			RK73GH2A472D	CHIP R 4.7K D 1/10W		D202			UDZS6.2B	ZENER DIODE	
R805,806			RK73GB2A102J	CHIP R 1.0K J 1/10W		D203			UDZS6.8B	ZENER DIODE	
R807			RK73GB2A103J	CHIP R 10K J 1/10W		D204			DAP202U	DIODE	
R808			RK73GB2A113J	CHIP R 11K J 1/10W		D205			UDZS6.8B	ZENER DIODE	
R809			RK73GB2A101J	CHIP R 100 J 1/10W		D206			UDZS4.7B	ZENER DIODE	
R810			RK73FB2B152J	CHIP R 1.5K J 1/8W		D207			02DZ5.6F-Y	ZENER DIODE	
R811			RK73GB2A104J	CHIP R 100K J 1/10W		D208,209			1SR154-400	DIODE	
R812			RK73FB2B4R7J	CHIP R 4.7 J 1/8W		D212,213			1SR154-400	DIODE	
R813			RK73GB2A332J	CHIP R 3.3K J 1/10W		D220			DAP202U	DIODE	
R815			RK73GB2A101J	CHIP R 100 J 1/10W		D302,303			UDZS5.6B	ZENER DIODE	
R817			RK73GB2A100J	CHIP R 10 J 1/10W		D504			DA204U	DIODE	M1
R822			RK73GB2A160J	CHIP R 16 J 1/10W		D550,551			IMSA-6802-E	SURGE ABSORBER	
R823			RK73FB2B1R0J	CHIP R 1.0 J 1/8W		D600			UDZS5.6B	ZENER DIODE	
R824			RK73GB2A3R9J	CHIP R 3.9 J 1/10W		D601			UDZS11B	ZENER DIODE	
R825			RK73GB2A1R5J	CHIP R 1.5 J 1/10W		D608,609			STZ6.8N	ZENER DIODE	
R826			RK73GB2A120J	CHIP R 12 J 1/10W		D700-704			STZ6.2N	ZENER DIODE	
R827			RK73GB2A270J	CHIP R 27 J 1/10W		D700-707			STZ6.2N	ZENER DIODE	
R841			RK73GB2A102J	CHIP R 1.0K J 1/10W	KE1E2	D706,707			STZ6.2N	ZENER DIODE	
R901,902			RK73GB2A104J	CHIP R 100K J 1/10W		D707			STZ6.2N	ZENER DIODE	
R907			RK73GH2A823D	CHIP R 82K D 1/10W		D750-753			1SR154-400	DIODE	M1
R908			RK73GH2A114D	CHIP R 110K D 1/10W		D755			DAP222	DIODE	
R909			RK73GH2A683D	CHIP R 68K D 1/10W		D756-759			1SR154-400	DIODE	
R910			RK73GH2A103D	CHIP R 10K D 1/10W		D800			UDZS6.8B	ZENER DIODE	
R911			RK73GH2A753D	CHIP R 75K D 1/10W		D802			UDZS16B	ZENER DIODE	
R913			RK73GH2A103D	CHIP R 10K D 1/10W		D803,804			DAP222	DIODE	
R914			RK73GH2A753D	CHIP R 75K D 1/10W							

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-413x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D901 D902 D952 D981 IC10			NSQ03A04G SFPB-54VNF STZ6.8N UDZS15B M5237ML-CF0J	DIODE DIODE ZENER DIODE ZENER DIODE ANALOGUE IC	KE1E2 K M1
IC80 IC100 IC102 IC103 IC104			LT3467A S-80836CNNB-J 30625MGP87GP TC7W02FU-F BR24L04FV-W	ANALOGUE IC MOS-IC MICROCONTROLLER IC MOS-IC ROM IC	
IC200 IC300 IC400 IC451 IC500			TPD1018F-F E-TDA7415C E-TDA7479AD MMA6261QR2 RC4580IDR	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC600 IC601-603 IC750 IC800 IC901			ICL7660SIBAZ NJM4565V-ZB E-TDA7560A RC4580IDR BD9302FP	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC951 Q10 Q11,12 Q20 Q21			MIC2026-1YM 2SB1565 UMC2N 2SB1565 2SD2351(W)	MOS-IC TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q22 Q23 Q30 Q32 Q34			2SA1577 DTC124EUA 2SB1565 2SC4081 UMC2N	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q40 Q41 Q42 Q43 Q44			2SB1565 2SB1443 UMD12N UMC2N 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q45 Q50 Q51 Q52 Q201			2SD2351(W) 2SB1449(R)-E UMC2N 2SC2873-F DTA124EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q202 Q204,205 Q206 Q207 Q208			2SC4081 2SC4081 DTA123JK DTC144EUA 2SB1184	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	KM1
Q209 Q210 Q402 Q403 Q500			DTC114YUA DTA124EUA 2SB1689 DTC124EUA 2SC4617	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	KM1 M1
Q600 Q601 Q602 Q603 Q604			2SC4081 2SA1576A 2SC4081 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q605 Q606 Q607 Q608-615 Q800			2SA1576A 2SC4081 2SB1443 DTC143TUA DTA124EUA	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q801 Q802 Q901,902 Q903 Q981			2SA1774 2SC2873-F DTC143TUA UMG2N 2SB1188(R)	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
Q982 Q983			2SD2351(W) UMD12N	TRANSISTOR TRANSISTOR	
A1 A1	3E 3E		X86-4000-11 X86-4002-70	FRONT-END UNIT FRONT-END UNIT	KM1 E1E2
DAUGHTER UNIT (X89-2830-10)					
J1 WH1		*	E59-0849-05 E39-0848-15	RECTANGULAR PLUG WIRING HARNESS	
CD MECHANISM ASSY (X92-5580-00/04) (DXM-6820W/6824W)					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-93	ARM ASSY	E1E2 KM1
8	2A		D10-4787-63	LEVER ASSY	
8	2A	*	D10-4901-13	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	KM1 E1E2
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	KM1 E1E2
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2172-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
37	1B		D39-0260-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CD MECHANISM ASSY (X92-5580-00/04) (DXM-6820W/6824W)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
46	3B		F09-1804-04	SHEET	E1E2						
47	3A	*	F09-2824-14	SHEET							
51	1A		J21-9676-32	MOUNTING HARDWARE							
52	3B		J21-9677-22	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)							
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)							
B	1B		N09-4472-25	MACHINE SCREW (M1.7X8.0)							
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)							
E	2B		N09-6007-15	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-15	TAPTITE SCREW (BIND P2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW							
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)							
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)							
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)							
DM2	2B		T42-1067-14	DC MOTOR (LOADING)							
DPU1	2B		X93-2010-01	OPTICAL PICKUP ASSY							

E1 : DPX701U E2 : DPX701UY (Europe)
K : DPX701 (North America)
M1 : DPX-MP7090U (Other Areas)

△ Indicates safety critical components.