

KDC-C465/Y


EXPLODED VIEW (MECHANISM)

A	M2x3.5	:	N09-4126-05
B	M2x2.5 (BLK)	:	N09-4228-05
C	M2x5	:	N86-2005-46
D	M1.7x1.5 (BLK)	:	N09-4189-05
E	φ 2x6	:	N09-4154-05
F	M1.7x3	:	N09-4181-05
G	M1.7x2.2	:	N39-1722-46
J	φ 1.55x3.8WASHER	:	N19-2105-04
K	φ 1.6x4 WASHER	:	N19-2058-04
L	φ 2x5 WASHER	:	N19-2080-04
M	φ 1.6x3.5 WASHER	:	N19-2028-04

1

2


3

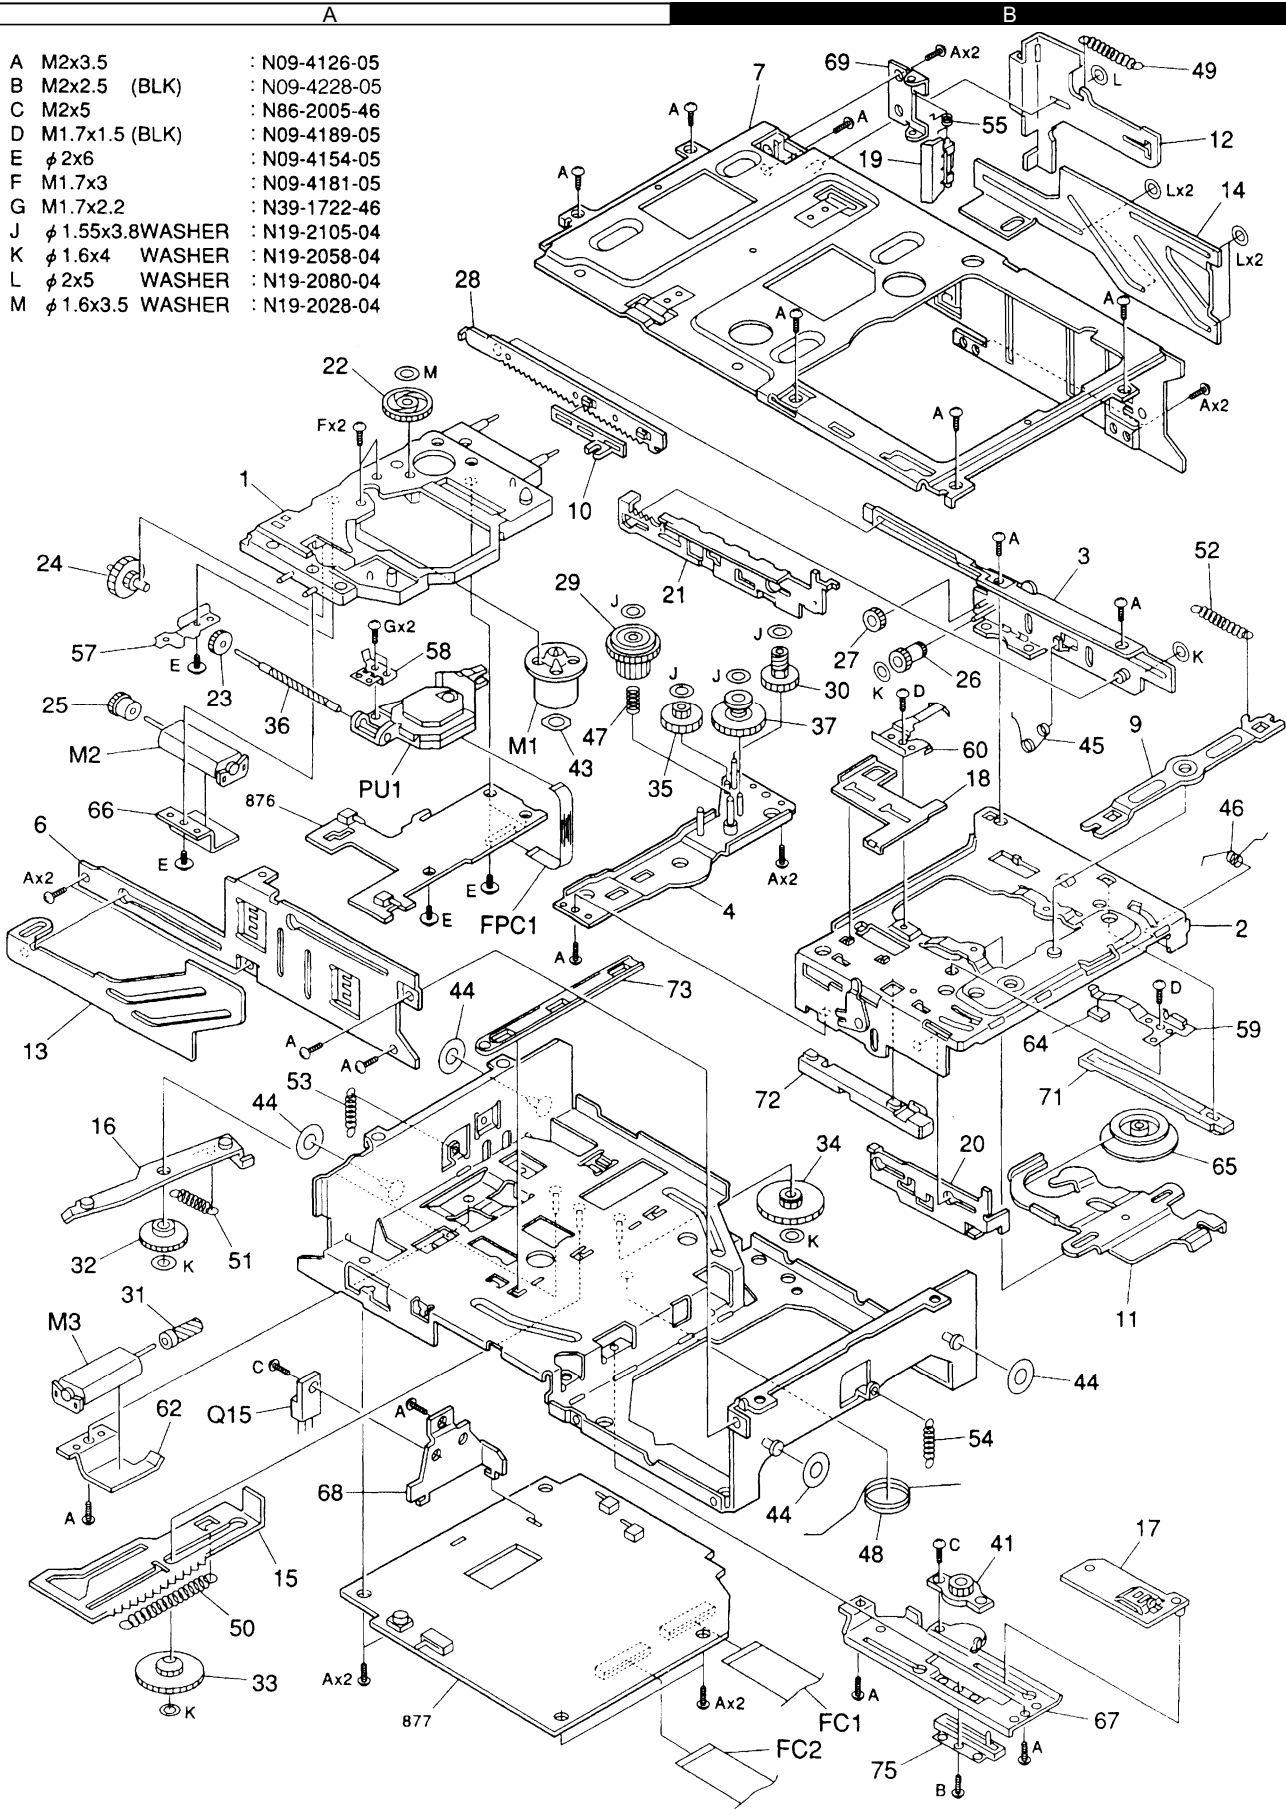

Parts with exploded numbers larger than 700 are not supplied.

KDC-C465/Y

EXPLODED VIEW (UNIT)

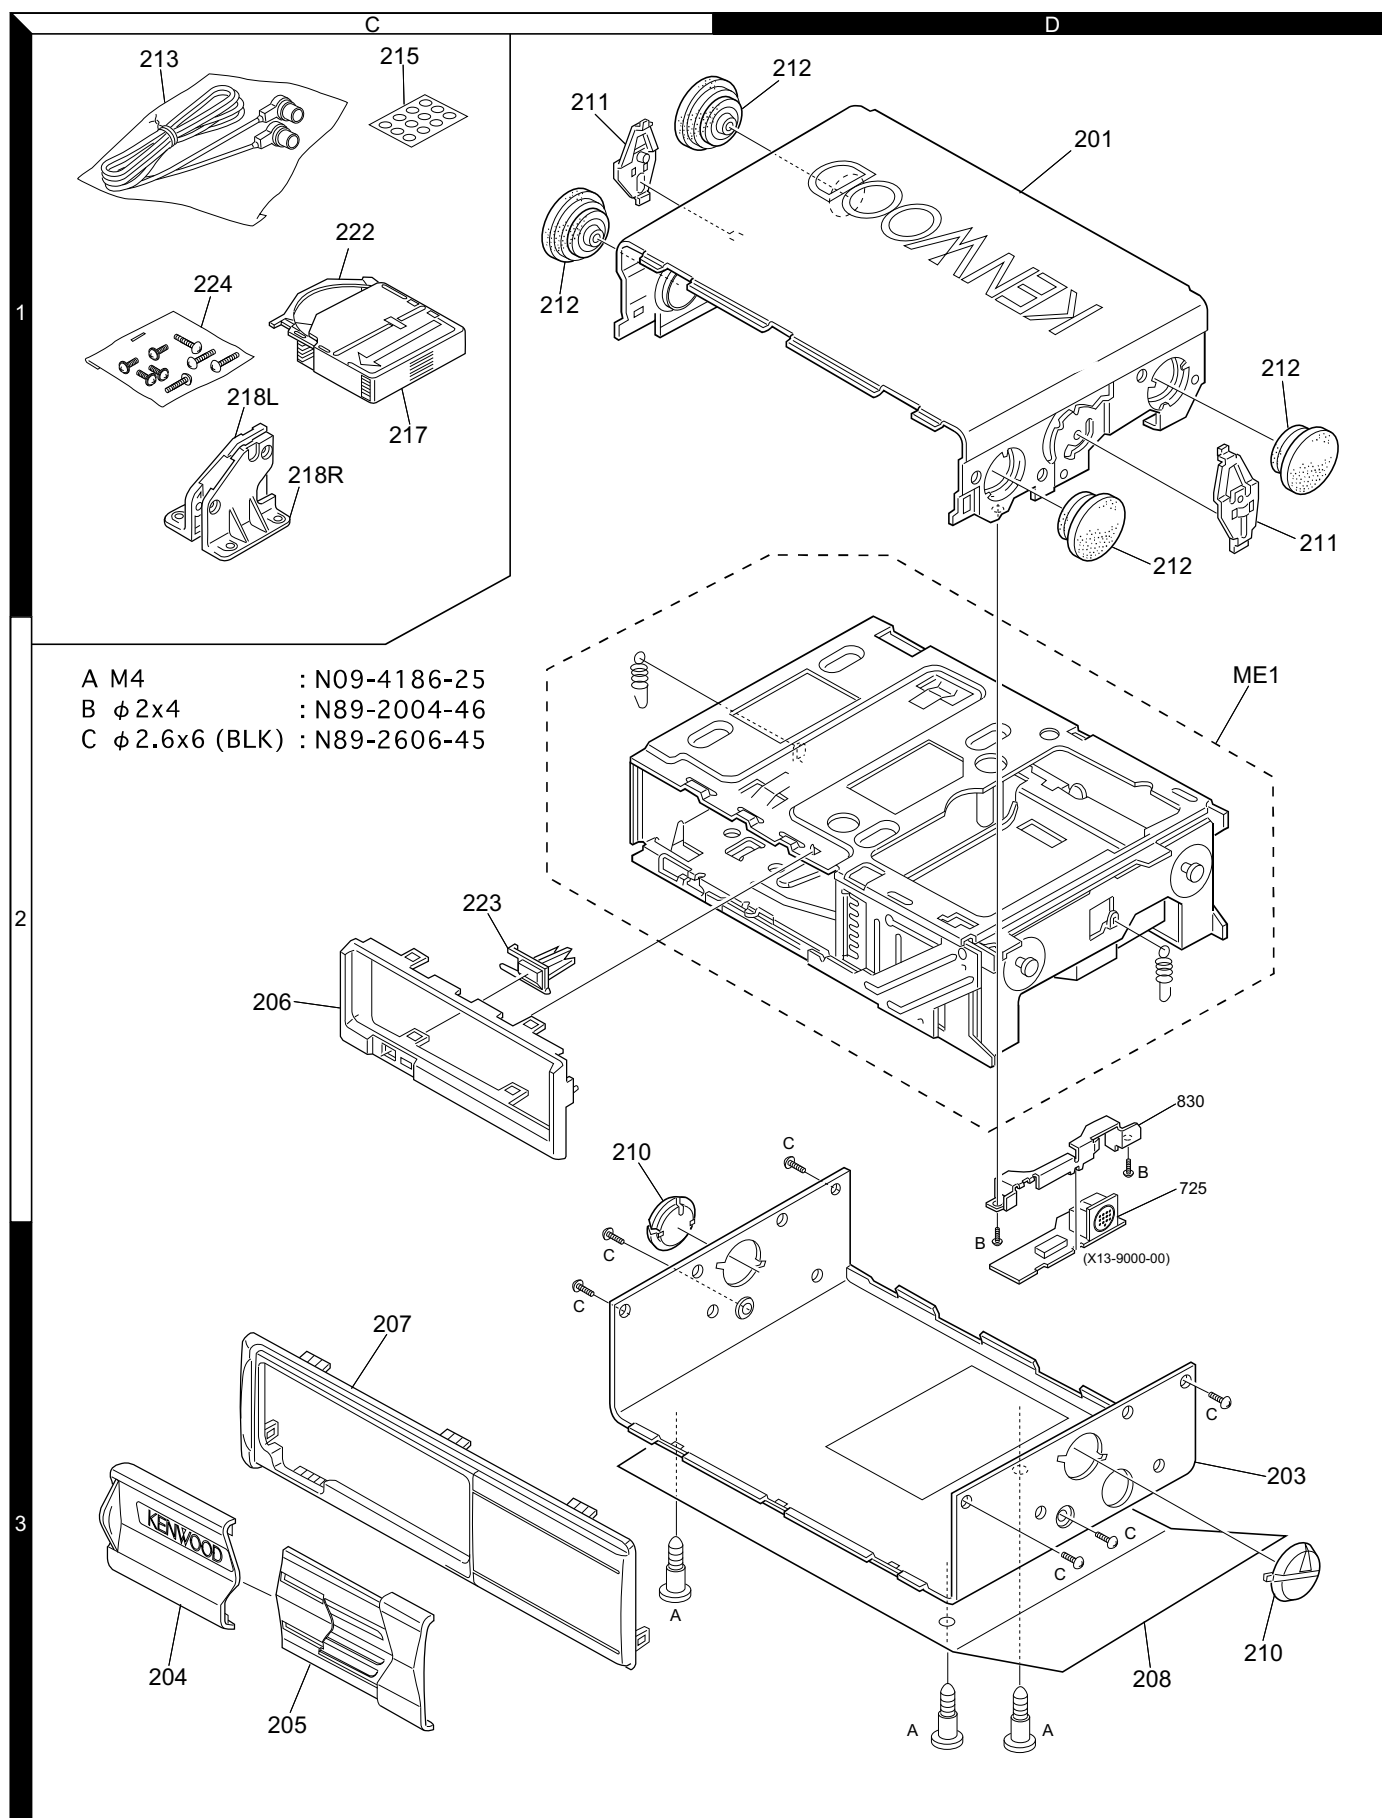

Parts with exploded numbers larger than 700 are not supplied.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

KDC-C465/Y

SUB CIRCUIT UNIT(X13-9000-00)

SUB CIRCUIT UNIT(X13-9730-00)

CD PLAYER UNIT(X32-4660-01)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-C465/Y					
201	1D		A01-2654-01	METALLIC CABINET	
203	3D		A10-4367-01	CHASSIS	
204	3C		A21-3530-12	DRESSING PANEL	E3
204	3C		A21-3531-02	DRESSING PANEL	K2E2
205	3C		A21-3532-12	DRESSING PANEL	E3
205	3C		A21-3533-02	DRESSING PANEL	K2E2
206	2C		A22-2239-12	SUB PANEL	
207	3C		A64-2003-01	PANEL	K2E2
207	3C		A64-2011-01	PANEL	E3
208	3D		B58-1275-04	CAUTION CARD	
-			B46-0100-50	WARRANTY CARD	
-			B46-0182-14	ID CARD	E2E3
-			B58-1236-04	CAUTION CARD	
-			B58-1285-04	CAUTION CARD	K2E3
-			B58-1289-04	CAUTION CARD	E2
-		*	B64-1569-00	INSTRUCTION MANUAL E,F,S,P	K2E3
-		*	B64-1575-00	INSTRUCTION MANUAL E,R,O	E2
-		*	B64-1576-00	INSTRUCTION MANUAL Z,H,C	E2
-		*	B64-1587-00	INSTRUCTION MANUAL G,D,I	E3
210	3D		D10-4204-03	ARM	
211	1C		D10-4033-14	LEVER	
212	1D		D39-0226-03	DAMPER	
213	1C		E30-4138-05	CORD WITH PLUG	
215	1C		F19-1303-04	BLIND PLATE	
-			H02-0813-13	INNER CARTON CASE	
-			H10-4554-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1115-04	PROTECTION BAG	
-		*	H54-1697-04	ITEM CARTON CASE	K2E3
-		*	H54-1701-04	ITEM CARTON CASE	E2
217	1C		J19-4687-32	HOLDER ASSY	
218L	1C		J19-4713-13	BRACKET	
218R	1C		J19-4715-13	BRACKET	
222	1C		J99-0604-21	TRAY	
223	2C		K24-1792-04	KNOB	
224	1C		N99-1645-15	SCREW SET	
A	3D		N09-4186-25	STEPPED SCREW	
B	2D		N89-2004-46	BINDING HEAD TAPTITE SCREW	
C	3D		N89-2606-45	BINDING HEAD TAPTITE SCREW	
ME1	2D		X92-3640-01	MECHANISM ASSY	
SUB CIRCUIT UNIT (X13-9000-00)					
CN1		*	E40-9555-05	FLAT CABLE CONNECTOR	
J1		*	E56-0825-05	CYLINDRICAL RECEPTACLE	
SUB CIRCUIT UNIT (X13-9730-00)					
CN1			E40-9487-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	
S1 ,2			S74-0811-05	MICRO SWITCH	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
CD PLAYER UNIT (X32-4660-01)					
C2			C92-0628-05	CHIP-TAN 10UF 10WV	
C3			CK73FB1H682K	CHIP C 6800PF K	
C4			CK73FB1H153K	CHIP C 0.015UF K	
C5			CC73FCH1H820J	CHIP C 82PF J	
C6			CC73FCH1H151J	CHIP C 150PF J	
C7			CC73FCH1H040C	CHIP C 4.0PF C	
C8			CC73FCH1H220J	CHIP C 22PF J	
C9			CK73FB1A105K	CHIP C 1.0UF K	
C10			CK73FB1H222K	CHIP C 2200PF K	
C11			CK73FB1H472K	CHIP C 4700PF K	
C12			CK73FB1H103K	CHIP C 0.010UF K	
C13 -16			CK73FB1C104K	CHIP C 0.10UF K	
C17			C92-1463-05	TANTALUM CAPACITOR	
C19			C92-1463-05	TANTALUM CAPACITOR	
C21			CK73FB1H821K	CHIP C 820PF K	
C23			CK73EB1A475K	CHIP C 4.7UF K	
C24			CK73FB1H102K	CHIP C 1000PF K	
C34			C92-0628-05	CHIP-TAN 10UF 10WV	
C46 ,47			C92-1393-05	ELECTRO 10UF 16WV	
C48 ,49			CK73FB1H821K	CHIP C 820PF K	
C52			CK73EB1A475K	CHIP C 4.7UF K	
C55			C92-0628-05	CHIP-TAN 10UF 10WV	
C56			CK73EB1A475K	CHIP C 4.7UF K	
C59			C92-1390-05	ELECTRO 100UF 6.3WV	
C60			CK73EB1A475K	CHIP C 4.7UF K	
C61			CK73FB1C104K	CHIP C 0.10UF K	
C62			C92-1392-05	ELECTRO 100UF 10WV	
C63			CK73EB1A475K	CHIP C 4.7UF K	
C64			C92-1388-05	ELECTRO 470UF 16WV	
C66			CK73EB1C105K	CHIP C 1.0UF K	
C67 -69			CK73FB1C104K	CHIP C 0.10UF K	
C70			CC73FCH1H101J	CHIP C 100PF J	
C71			C92-0628-05	CHIP-TAN 10UF 10WV	
C72			C92-1463-05	TANTALUM CAPACITOR	
C85			C92-0628-05	CHIP-TAN 10UF 10WV	
C180-184			CK73FB1C104K	CHIP C 0.10UF K	
C190			CK73FB1H821K	CHIP C 820PF K	
C192			CK73FB1C334K	CHIP C 0.33UF K	
C193			CK73FB1A684K	CHIP C 0.68UF K	
C194			CK73FB1C104K	CHIP C 0.10UF K	
C200-205			CK73FB1C104K	CHIP C 0.10UF K	
C206			CK73EB1H104K	CHIP C 0.10UF K	
C300			C92-0712-05	TANTALUM CAPACITOR	
C301			CK73FB1C104K	CHIP C 0.10UF K	
CN1			E40-9338-05	FLAT CABLE CONNECTOR	
CN2			E40-9404-05	FLAT CABLE CONNECTOR	
L1			L40-1001-78	SMALL FIXED INDUCTOR(10UH)	
L2			L92-0322-05	CHIP FERRITE	
X1			L78-0596-05	RESONATOR	
X2			L78-0568-05	RESONATOR	
CP1			R90-0720-05	MULTI-COMP 100K X4	
CP3			R90-0720-05	MULTI-COMP 100K X4	

K2: USA E2: E. Europe (KDC-C465Y) E3: Europe

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
CP5 ,6 CP7 ,8 CP9 CP12 CP14,15			R90-1014-05 R90-0720-05 R90-0725-05 R90-1014-05 R90-0720-05	MULTI-COMP MULTI-COMP MULTI-COMP MULTI-COMP MULTI-COMP	100 100K 1K 100 100K	X4 X4 X2 X4 X4	
CP16 CP17 R1 -3 R4 R5			R90-0724-05 R90-0720-05 RK73FB2A163J RK73FB2A391J RK73FB2A393J	MULTI-COMP MULTI-COMP CHIP R CHIP R CHIP R	1K 100K 16K 390 39K	X4 X4 J 1/10W J 1/10W J 1/10W	
R6 R7 R8 R9 ,10 R15			RK73FB2A163J RK73FB2A393J RK73EB2B100J RK73FB2A105J RK73FB2A104J	CHIP R CHIP R CHIP R CHIP R CHIP R	16K 39K 10 1.0M 100K	J 1/10W J 1/10W J 1/8W J 1/10W J 1/10W	
R16 R18 R19 R20 R21			RK73FB2A152J RK73FB2A103J RK73FB2A333J RK73FB2A104J RK73FB2A103J	CHIP R CHIP R CHIP R CHIP R CHIP R	1.5K 10K 33K 100K 10K	J 1/10W J 1/10W J 1/10W J 1/10W J 1/10W	
R22 R25 R26 R32 R50			RK73FB2A562J RK73FB2A113J RK73EB2B123J RK73FB2A104J RK73EB2B103J	CHIP R CHIP R CHIP R CHIP R CHIP R	5.6K 11K 12K 100K 10K	J 1/10W J 1/10W J 1/8W J 1/10W J 1/8W	
R53 ,54 R57 ,58 R60 ,61 R67 R68			RK73FB2A681J RK73FB2A223J RK73EB2B101J RK73FB2A124J RK73EB2B124J	CHIP R CHIP R CHIP R CHIP R CHIP R	680 22K 100 120K 120K	J 1/10W J 1/10W J 1/8W J 1/10W J 1/8W	
R69 ,70 R71 R72 ,73 R74 ,75 R76			RK73FB2A303J RK73FB2A912J RK73FB2A101J RK73FB2A223J RK73FB2A104J	CHIP R CHIP R CHIP R CHIP R CHIP R	30K 9.1K 100 22K 100K	J 1/10W J 1/10W J 1/10W J 1/10W J 1/10W	
R77 R78 R79 R80 R81			RK73FB2A183J RK73FB2A104J RK73FB2A332J RK73FB2A102J RK73FB2A103J	CHIP R CHIP R CHIP R CHIP R CHIP R	18K 100K 3.3K 1.0K 10K	J 1/10W J 1/10W J 1/10W J 1/10W J 1/10W	
R82 R83 R84 R85 -87 R93			RK73FB2A102J RK73EB2B102J RK73FB2A102J RK73FB2A104J RK73EB2B224J	CHIP R CHIP R CHIP R CHIP R CHIP R	1.0K 1.0K 1.0K 100K 220K	J 1/10W J 1/8W J 1/10W J 1/10W J 1/8W	
R95 R96 R97 ,98 R99 R100,101			RK73EB2B104J RK73FB2A104J RK73FB2A103J RK73FB2A104J RK73FB2A102J	CHIP R CHIP R CHIP R CHIP R CHIP R	100K 100K 10K 100K 1.0K	J 1/8W J 1/10W J 1/10W J 1/10W J 1/10W	
R102 R105,106 R107 R108 R110-113			RK73FB2A104J RK73FB2A102J RK73FB2A101J RK73FB2A104J RK73FB2A104J	CHIP R CHIP R CHIP R CHIP R CHIP R	100K 1.0K 100 100K 100K	J 1/10W J 1/10W J 1/10W J 1/10W J 1/10W	

CD PLAYER UNIT(X32-4660-01)									
Ref.No.	A d d	N e w	Parts No.	Description				Dest inati on	
R121 R122,123 R124 R126 R129			RK73FB2A103J RK73FB2A102J RK73FB2A103J RK73FB2A104J RK73EB2B102J	CHIP R CHIP R CHIP R CHIP R CHIP R	10K 1.0K 10K 100K 1.0K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/8W		
R134 R135-138 R139-143 R148,149 R150			RK73FB2A104J RK73FB2A101J RK73FB2A104J RK73FB2A101J RK73FB2A102J	CHIP R CHIP R CHIP R CHIP R CHIP R	100K 100 100K 100 1.0K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W		
R151 R152 R153,154 R155,156 R157			RK73FB2A471J RK73FB2A623J RK73FB2A472J RK73FB2A101J RK73FB2A102J	CHIP R CHIP R CHIP R CHIP R CHIP R	470 62K 4.7K 100 1.0K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W		
R161 R162 R180-184 R190 R191			RK73FB2A163J RK73FB2A472J RK73FB2A100J RK73FB2A472J RK73FB2A123J	CHIP R CHIP R CHIP R CHIP R CHIP R	16K 4.7K 10 4.7K 12K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/10W		
R192,193 R194 R201 R202,203 R205,206			RK73FB2A683J RK73FB2A224J RK73FB2A104J RK73FB2A103J RK73EB2B102J	CHIP R CHIP R CHIP R CHIP R CHIP R	68K 220K 100K 10K 1.0K	J J J J J	1/10W 1/10W 1/10W 1/10W 1/8W		
W5 -7 W9 ,10 W12 W16 ,17 W21			R92-2052-05 R92-2053-05 R92-2053-05 R92-2053-05 R92-2052-05	CHIP R CHIP R CHIP R CHIP R CHIP R	0 0 0 0 0	J J J J J	1/10W 1/8W 1/8W 1/8W 1/10W		
S1 S2 S3 S4			S68-0823-05 S70-0838-05 S68-0823-05 S62-0863-05	PUSH SWITCH TACT SWITCH PUSH SWITCH SLIDE SWITCH					
D1 D3 ,4 D5 D7 D8			DAP202K MA3056-M MAZ90750M MA3056-M MAZ90620M	DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE					
D9 ,10 D11 D12 D13 D14			M1F60 1SR154-400 DA204K DAN202U MAZ90910M	DIODE DIODE DIODE DIODE ZENER DIODE					
D15 D16 D20 D21 ,22 D23 ,24			DAP202K DAP202U DAN202U DAN202K DAN202U	DIODE DIODE DIODE DIODE DIODE					
IC1 IC4 IC5 IC7 IC8 IC9			UPD63711GC KIA78L05F LA6556 UPD784214GC062 S-24C01B S-80830ANNP	MOS-IC ANALOGUE IC ANALOGUE IC MI-COM IC MEMORY IC MOS-IC					

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

CD PLAYER UNIT(X32-4660-01)

MECHANISM ASSY(X92-3640-01)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
Q1			MCH6101	TRANSISTOR	
Q4			DTA124EK	DIGITAL TRANSISTOR	
Q5			DTA124EUA	DIGITAL TRANSISTOR	
Q6 ,7			DTC343TK	DIGITAL TRANSISTOR	
Q8			DTA124EK	DIGITAL TRANSISTOR	
Q9			2SB1202	TRANSISTOR	
Q10			2SB1295	TRANSISTOR	
Q11			DTC124EK	DIGITAL TRANSISTOR	
Q12			DTA124EUA	DIGITAL TRANSISTOR	
Q13			DTC124EUA	DIGITAL TRANSISTOR	
Q14			DTA143EK	DIGITAL TRANSISTOR	
Q16			2SC2412K	TRANSISTOR	
Q17			DTA143EK	DIGITAL TRANSISTOR	
Q18			DTC124EK	DIGITAL TRANSISTOR	
Q19			DTC124EUA	DIGITAL TRANSISTOR	
Q20			DTC124EK	DIGITAL TRANSISTOR	
Q21			2SB1202	TRANSISTOR	
Q22			2SC2412K	TRANSISTOR	
Q31			DTC124EUA	DIGITAL TRANSISTOR	
TH1			NTH5G20B333K07	THERMISTOR	
MECHANISM ASSY (X92-3640-01)					
1	1A		A10-4700-13	CHASSIS ASSY	
2	2B		A10-4231-22	CHASSIS CALKING ASSY	
3	1B		A10-4233-63	CHASSIS CALKING ASSY	
4	2B		A10-4235-84	CHASSIS CALKING ASSY	
5	3B		A10-4248-32	CHASSIS CALKING ASSY	
6	2A		A10-4247-12	CHASSIS	
7	1B		A10-4249-42	CHASSIS CALKING ASSY	
C1			C90-2945-05	ELECTRO 0.047F 5.5WV	
9	2B		D10-4018-23	ARM	
10	1A		D10-4293-03	ARM	
11	3B		D10-4020-33	LEVER	
12	1B		D10-4036-34	ARM	
13	2A		D10-4037-04	SLIDER ASSY	
14	1B		D10-4035-23	SLIDER	
15	3A		D10-4026-03	LEVER	
16	2A		D10-4027-04	LEVER ASSY	
17	3B		D10-4029-04	SLIDER ASSY	
18	2B		D10-4032-13	SLIDER	
19	1B		D10-4138-03	LEVER	
20	2B		D12-0618-13	CAM	
21	1B		D12-0619-33	CAM	
22	1A		D13-1251-14	GEAR	
23	2A		D13-1252-04	GEAR	
24	1A		D13-1253-04	GEAR	
25	2A		D13-1254-04	GEAR	
26	2B		D13-1255-24	GEAR	
27	2B		D13-1256-04	GEAR	
28	1A		D13-1257-14	GEAR ASSY	
29	2A		D13-1259-04	GEAR	
30	2B		D13-1262-34	GEAR	
31	3A		D13-1263-04	WORM	
32	3A		D13-1264-04	GEAR	
33	3A		D13-1265-04	GEAR	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
34	2B		D13-1266-04	GEAR	
35	2B		D13-1338-04	GEAR	
36	2A		D19-0614-24	LEAD SCREW	
37	2B		D19-0615-14	CLUTCH ASSY	
41	3B		D39-0225-05	DAMPER	
FC1	3B		E39-0172-15	FLAT CABLE	
FC2	3B		E39-0173-15	FLAT CABLE	
43	2A		F09-1220-04	SHEET	
44	3B		F09-1245-04	SHEET	
45	2B		G01-2778-04	TORSION COIL SPRING	
46	2B		G01-2779-04	TORSION COIL SPRING	
47	2A		G01-2781-04	COMPRESSION SPRING	
48	3B		G01-2782-14	TORSION COIL SPRING	
49	1B		G01-2783-14	EXTENSION SPRING	
50	3A		G01-2784-04	EXTENSION SPRING	
51	3A		G01-2785-04	EXTENSION SPRING	
52	1B		G01-2789-14	EXTENSION SPRING	
53	2A		G01-2810-04	EXTENSION SPRING	
54	3B		G01-2809-14	EXTENSION SPRING	
55	1B		G01-2814-24	TORSION COIL SPRING	
57	2A		G02-1235-24	FLAT SPRING	
58	2A		G02-1256-14	FLAT SPRING	
59	2B		G02-1237-13	FLAT SPRING	
60	2B		G02-1238-34	FLAT SPRING	
62	3A		G02-1240-04	FLAT SPRING	
64	2B		G10-1023-04	FELT	
65	2B		J11-0614-03	CLAMPER	
66	2A		J21-7695-04	MOUNTING HARDWARE	
67	3B		J21-7696-23	MOUNTING HARDWARE	
68	3A		J21-7698-14	MOUNTING HARDWARE	
69	1B		J21-7767-13	MOUNTING HARDWARE	
71	2B		J90-0777-23	GUIDE	
72	2B		J90-0759-03	GUIDE	
73	2B		J90-0760-03	RAIL	
FPC1	2A		J84-0099-05	FLEXIBLE PRINTED WIRING BOARD	
A	1B		N09-4126-05	MACHINE SCREW (2X3.5,C)	
B	3B		N09-4288-05	TAPTITE SCREW (2X2.5 S)	
C	3A		N86-2005-46	BINDING HEAD TAPTITE SCREW	
D	2B		N09-4189-05	TAPTITE SCREW (1.7X1.5(S))	
E	2A		N09-4154-05	TAPTITE SCREW	
F	1A		N09-4181-05	MACHINE SCREW (M1.7X3)	
G	2A		N39-1722-46	PAN HEAD MACHIN SCREW	
J	2B		N19-2105-14	FLAT WASHER	
K	2B		N19-2058-04	FLAT WASHER	
L	1B		N19-2080-14	FLAT WASHER	
M	1A		N19-2028-04	FLAT WASHER	
75	3B		R33-0201-05	SLIDE TYPE VARIABLE RESISTOR	
M1	2A		T42-0797-04	MOTOR ASSY	
M2,3	3A		T42-0788-05	DC MOTOR	
PU1	2A		T25-0216-05	OPTICAL PICKUP HEAD	
Q15			2SB1565(E,F)	TRANSISTOR	

K2: USA E2: E. Europe (KDC-C465Y) E3: Europe

⚠ indicates safety critical components.