

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
⚠	1 Power Cord	See Contrast table (2)	8	Packing Pad	DHA1989	
⚠	2 AC Adapter	See Contrast table (2)	9	Packing Pad	DHA1990	A
	3 USB Cable	DDE1150	10	Partition	DHC1106	
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)	11	Packing Case	See Contrast table (2)	
			12	Handle	DEC3783	
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Spacer	DEC3784	
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Packing Sheet	RHC1023	
	7 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 15	Polyethylene Bag	AHG7117	
			NSP 16	rekordbox dj license key card	DXA2304	
			NSP 17	Leaflet	DRM1410	
			NSP 18	Warranty	See Contrast table (2)	B

(2) CONTRAST TABLE

 
DDJ-800/FWLPWXJ, SYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-800 /FWLPWXJ	DDJ-800 /SYXJ	DDJ-800 /UXJCB	DDJ-800 /XJCN	
⚠	1	Power Cord	ADG1154	ADG1154	XDG3052	ADG7079	
⚠	2	AC Adapter	DWR1578	DWR1576	DWR1576	DWR1578	C
	4	Operating Instructions (Quick Start Guide)(En, Es)	DRH1527	Not used	Not used	Not used	
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru)	Not used	DRH1526	Not used	Not used	
	6	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	Not used	DRH1525	Not used	
	7	Operating Instructions (Quick Start Guide)(Zhc)	Not used	Not used	Not used	DRH1529	
	11	Packing Case	DHG3662	DHG3662	DHG3662	DHG3663	
NSP	18	Warranty	Not used	DRY1270	Not used	Not used	

F

Refer to
"9.3 CHASSIS, FADER, HP SECTION".

Refer to
"9.4 CONTROL PANEL (1/2)
SECTION".




BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	JOGH Assy	DWX4223	
2	JGLH Assy	DWX4224	A
3	FFC	DDD1888	
4	FFC	DDD1889	
5	Slider Knob 1	DAC2684	
6	Slider Knob 2	DAC2685	■
7	Leg	DEC3816	
8	Stopper/SLD	DNK6009	
9	Hook	DNK6755	
⚠ 10	Chassis	DNK6814	
11	Knob/CFC	DAA1326	B
12	Knob	DAA1395	
13	Knob	DAA1396	
14	Knob	DAA1360	
15	Dial Knob	DAA1246	
16	Knob	DAA1361	■
17	Knob	DAA1366	
18	Select Knob	DAA1205	
19	FX Sel Knob	DAA1213	
20	Knob	DAA1368	C
21	Knob/SLD	DNK5981	
22	Slide Sheet 1C	DAH2404	
23	Knob	DAC3238	
24	Stopper	DNK6440	
25	Cord Clamper (Steel)	RNH-184	■
26	Knob	DAA1441	
27			
28			
29			
30	Screw	BBZ30P060FTC	D
31	Screw	BBZ30P080FTB	
32	Screw	BPZ30P080FNI	
33	Screw	BPZ30P100FTB	■
34	Screw	BPZ30P120FTB	
			E
			■
			F


1 2 3 4

9.3 CHASSIS, FADER, HP SECTION

A ● Chassis Section

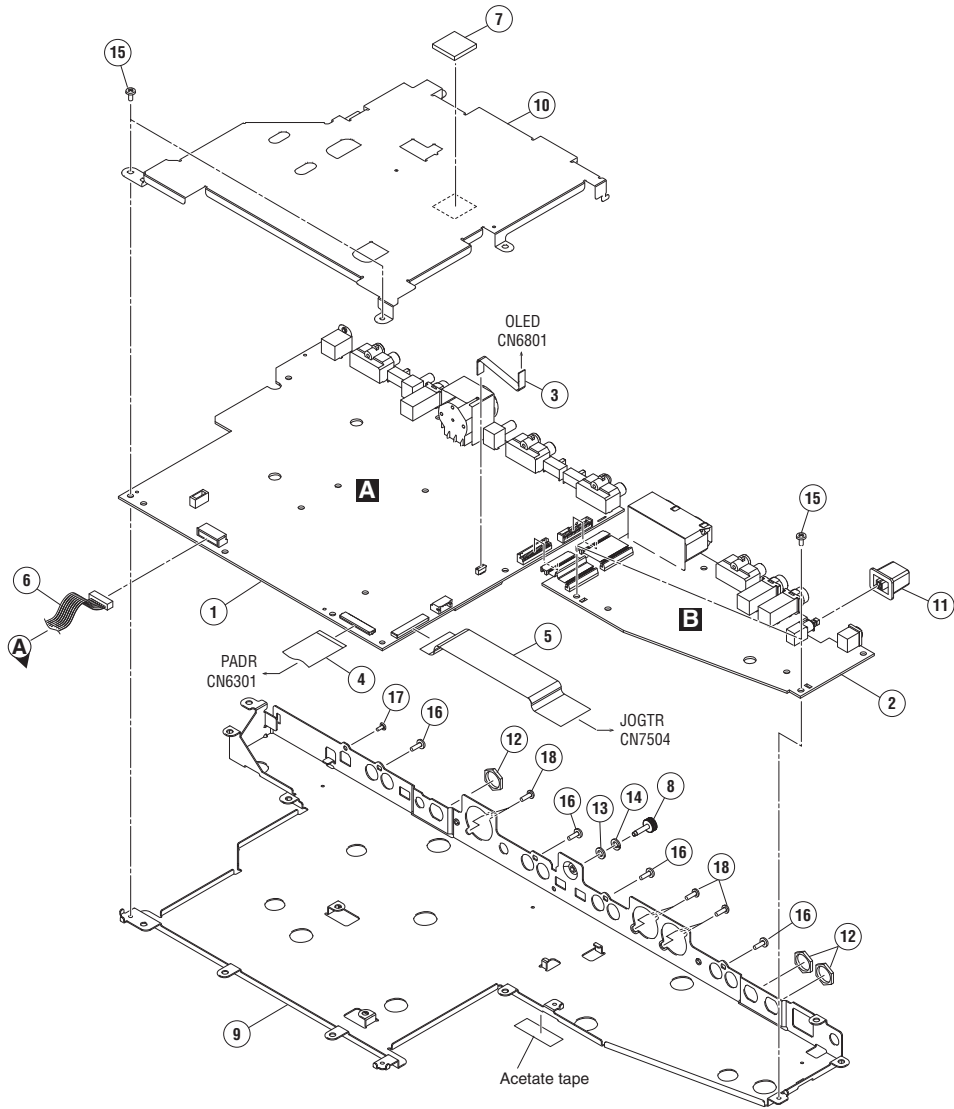


E ● HP Section

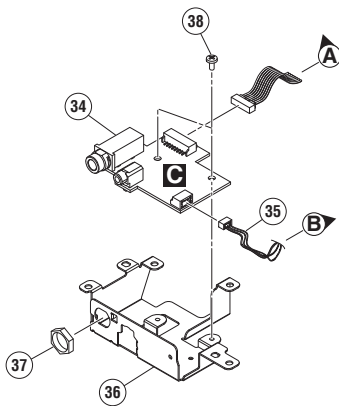

F ● Fader Section

Refer to "7. DISASSEMBLY"

 Lubricating oil
(GYA1001)

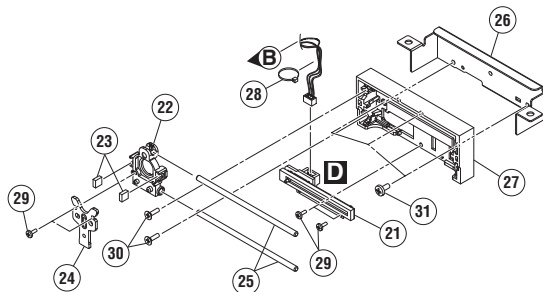


CHASSIS, FADER, HP SECTION PARTS LIST

Mark No.	Description	Part No.	
CHASSIS SECTION			
1	MAIN Assy	DWX4194	A
2	AOUT Assy	DWX4200	
3	FFC	DDD1892	
4	FFC	DDD1893	
5	FFC	DDD1895	
6	Connector Assy	PF07PP-C05	
7	Cushion	DEC3830	
8	Earth Terminal	DKE1015	
9	Stay	DNH3388	
10	Shield Plate	DNH3398	B
11	Power Knob	DAC2306	
12	Nut (M12)	NKX2FNI	
13	Washer	WA32F100Q050	
14	Spring Lock Washer	WS40FNI	
15	Screw	BBZ30P060FTC	
16	Screw	BPZ30P080FTB	
17	Screw (M3*5)	DBA1340	
18	Screw	PPZ30P080FTB	
19			C
20			
FADER SECTION			
21	CRFD Assy	DWX4206	
22	Slider	DNK6426	
NSP 23	Cushion	DEC3356	
24	Lever	DNH3211	
25	Guide Bar	VLL1514	
26	Stay	DNF2053	
27	Holder	DNK6425	D
28	Cable Tie	ZCA-SKB90BK	
29	Screw	BPZ20P050FTC	
30	Screw	CPZ26P080FTC	
31	Screw	BBZ30P060FTC	
32			
33			
HP SECTION			
34	HPJK Assy	DWX4203	
35	Connector Assy	PF03PP-B07	E
36	Stay	DNH3389	
37	Nut M12	DBN1018	
38	Screw	BBZ30P060FTC	


9.4 CONTROL PANEL (1/2) SECTION

A • Bottom view

● BFX Section

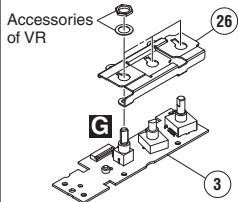

● Mixer Section

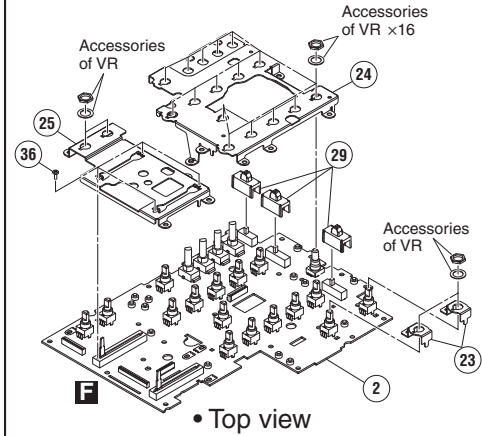


Refer to
"9.6 JOG DIAL (1/2)
SECTION".

Refer to
"9.6 JOG DIAL (1/2)
SECTION".

Refer to
"9.5 CONTROL PANEL (2/2) SECTION".

*: Be sure to use two sheets (DEC3672) in a stack.
Because the feeling of operation changes only with one sheet.

 *: シート (DEC3672) は必ず 2 枚重ねて使用してください。
1 枚だけだと操作感が変わってしまいます。



CONTROL PANEL (1/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	OLED Assy	DWX4208	
2	MXRB Assy	DWX4195	A
3	BFXB Assy	DWX4196	
4	DCKL Assy	DWX4199	
5	DCKR Assy	DWX4201	
6	PADL Assy	DWX4204	
7	PADR Assy	DWX4205	
8	LVMT Assy	DWX4207	
9	OLED Assy (Service)	DEA1084	
10	FFC	DDD1885	
11	FFC	DDD1890	B
12	FFC	DDD1891	
13	FFC	DDD1894	
14	FFC	DDD1896	
15	FFC	DDD1897	
16	Sheet	DEC3672	
17	Sheet	DEC3673	
18			
19	Shield Sheet	DEC3812	
20	Shield Sheet	DEC3819	C
21	Sheet	DEC3817	
22	Sheet	DEC3818	
23	Stay	DNF2039	
24	Stay	DNH3385	
25	Stay	DNH3386	
26	Stay	DNH3387	
27	Packing	DEC3642	
28	Sheet	DEC3795	
29	SW Cap	DAC2753	D
30	Button	DEB2035	
31			
32			
33	Screw	BPZ20P040FTB	
34	Screw	BPZ30P080FNI	
35	Screw	BPZ30P100FTB	
36	Screw	PMH20P040FTC	

1 2 3 4

9.5 CONTROL PANEL (2/2) SECTION

A • Bottom view


B

C


D

E

F

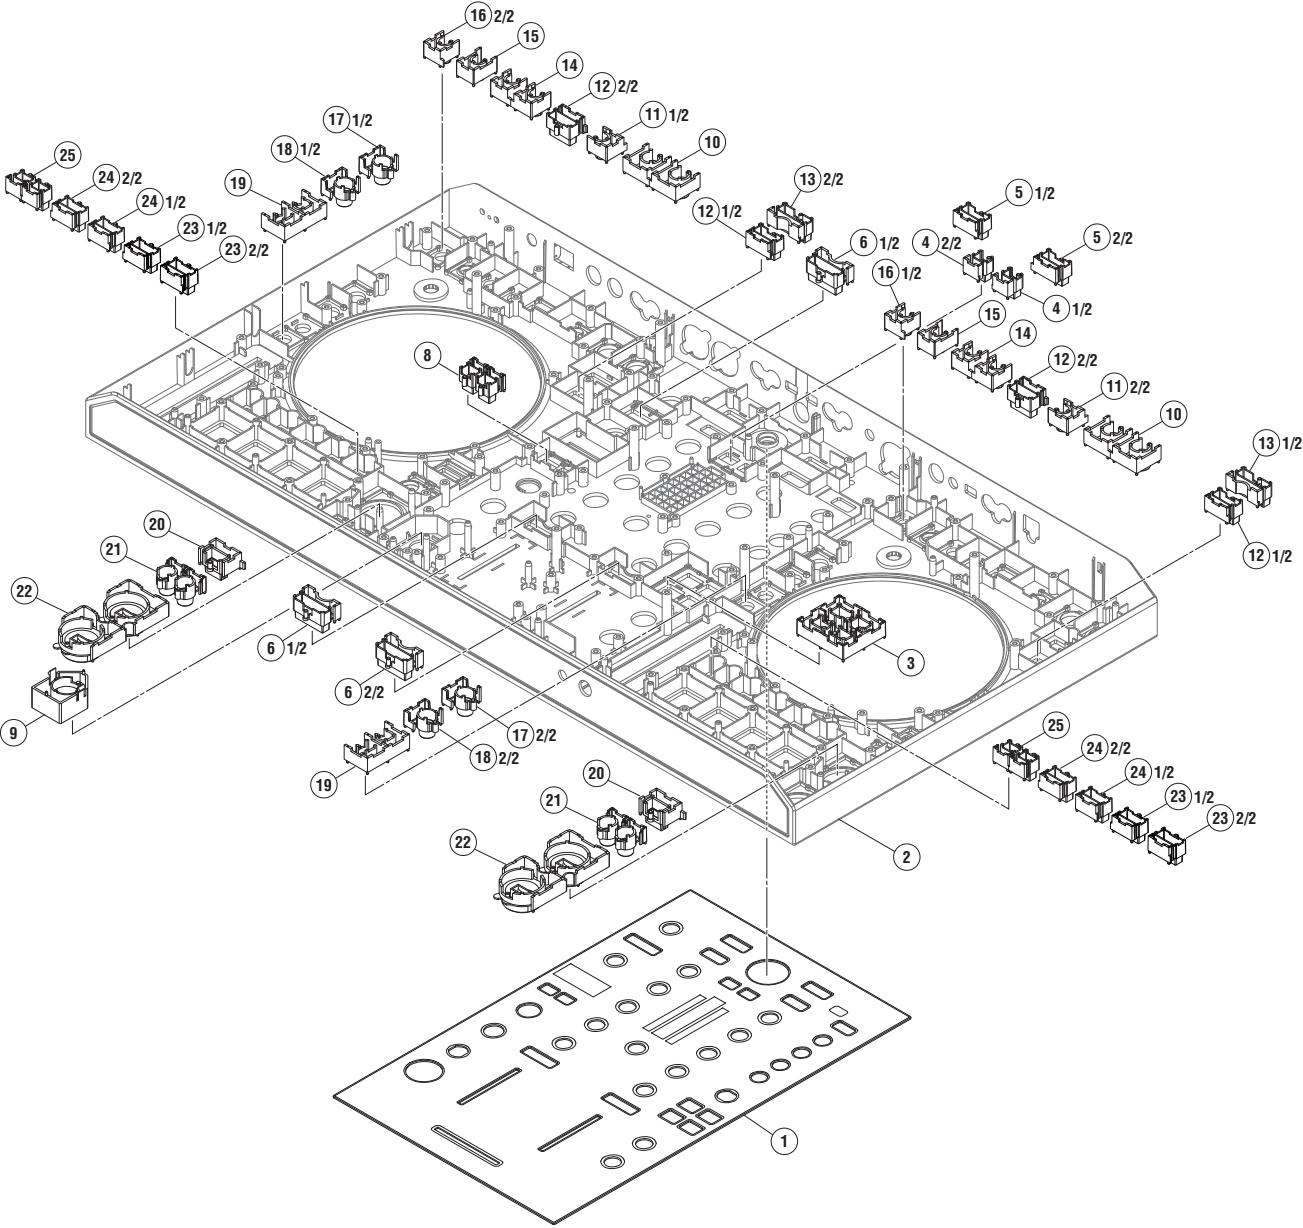

•The position of the divided parts / 分割部品に取り付け位置

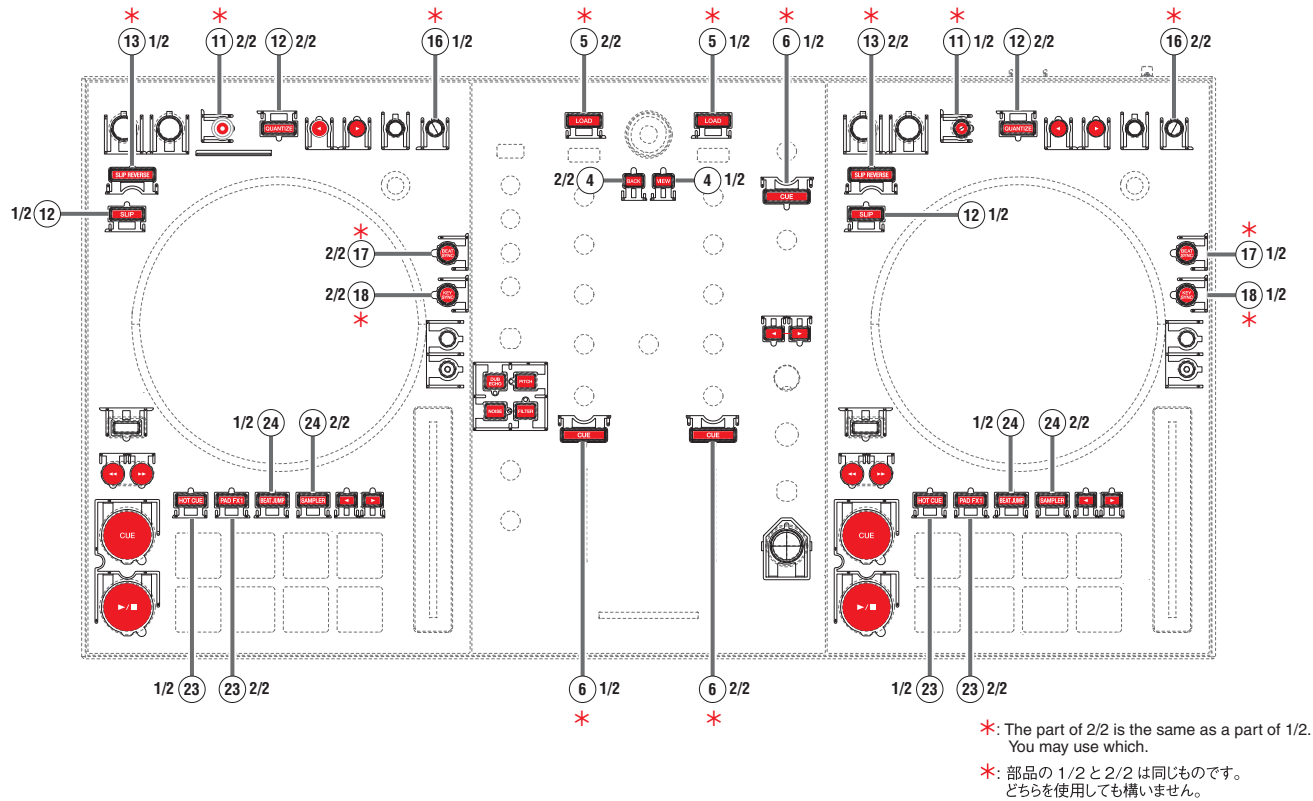

CONTROL PANEL (2/2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Plate	DAH3224	16	Button/TMP	DAC2845
2	Control Panel	DNK6813	17	Button	DAC3369
3	Button	DAC3426	18	Button	DAC3432
4	Button	DAC3427	19	Button	DAC3146
5	Button	DAC3428	20	Button	DAC3288
6	Button	DAC3219	21	Button	DAC3363
7	•••••		22	Button	DAC3433
8	Button	DAC3372	23	Button	DAC3434
9	Button	DAC3141	24	Button	DAC3435
10	Button/LOP	DAC3074	25	Button	DAC3436
11	Button/MT	DAC2875			
12	Button	DAC3430			
13	Button	DAC3359			
14	Button/CAL	DAC3020			
15	Button/DLT	DAC3021			

9.6 JOG DIAL (1/2) SECTION

• Bottom view

A



B

C

D

E




F

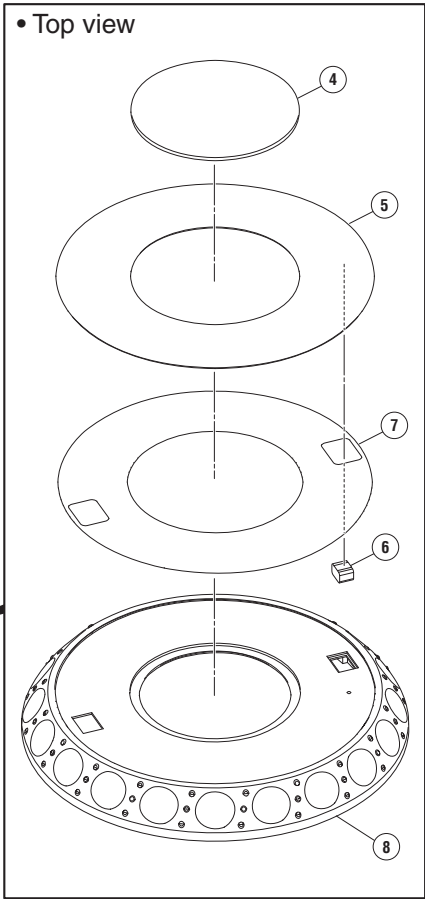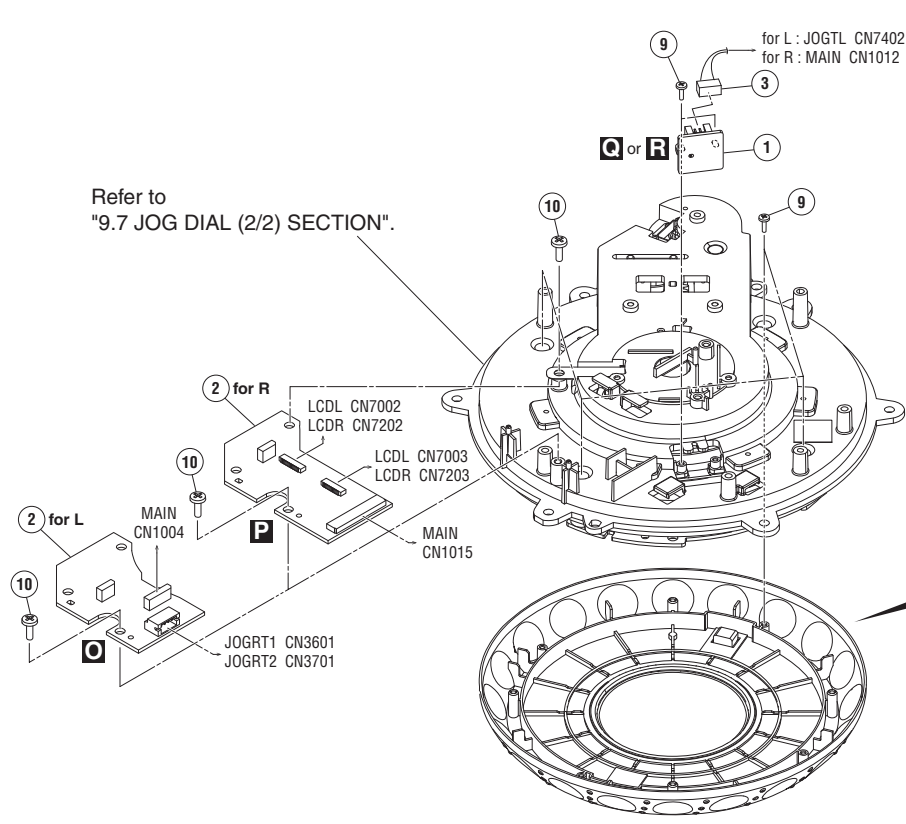

JOG DIAL (1/2) SECTION PARTS LIST

Mark No.	Description	Part No.
1	JOGRT1 Assy	DWX4197
1	JOGRT2 Assy	DWX4198
2	JOGTL Assy (for L)	DWX4211
2	JOGTR Assy (for R)	DWX4212
3	Connector Assy (for R)	PF04PP-B17
3	Connector Assy (for L)	PF04PP-B15
4	Window	DAH3233
5	Plate	DAH3234
6	Gasket/JOG	DEC3562
7	DS Tape	DEH1096
8	JOG Dial	DNK6822
9	Screw	BPZ20P060FTC
10	Screw	BPZ30P080FTC

9.7 JOG DIAL (2/2) SECTION

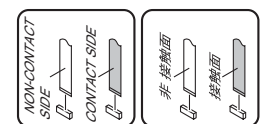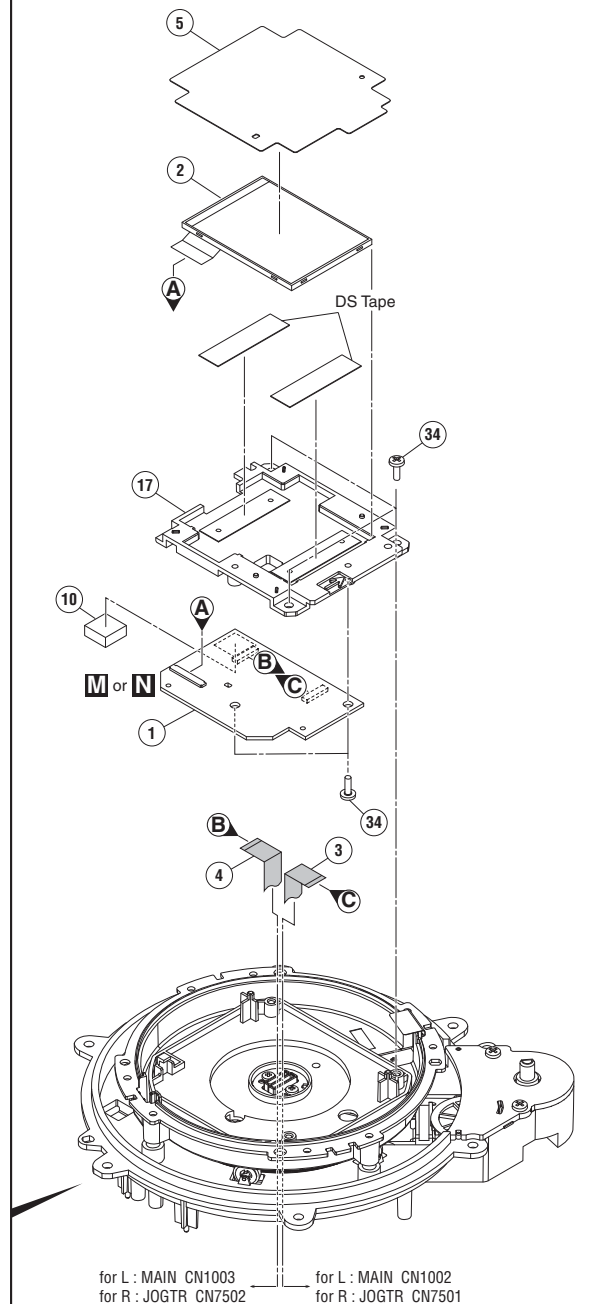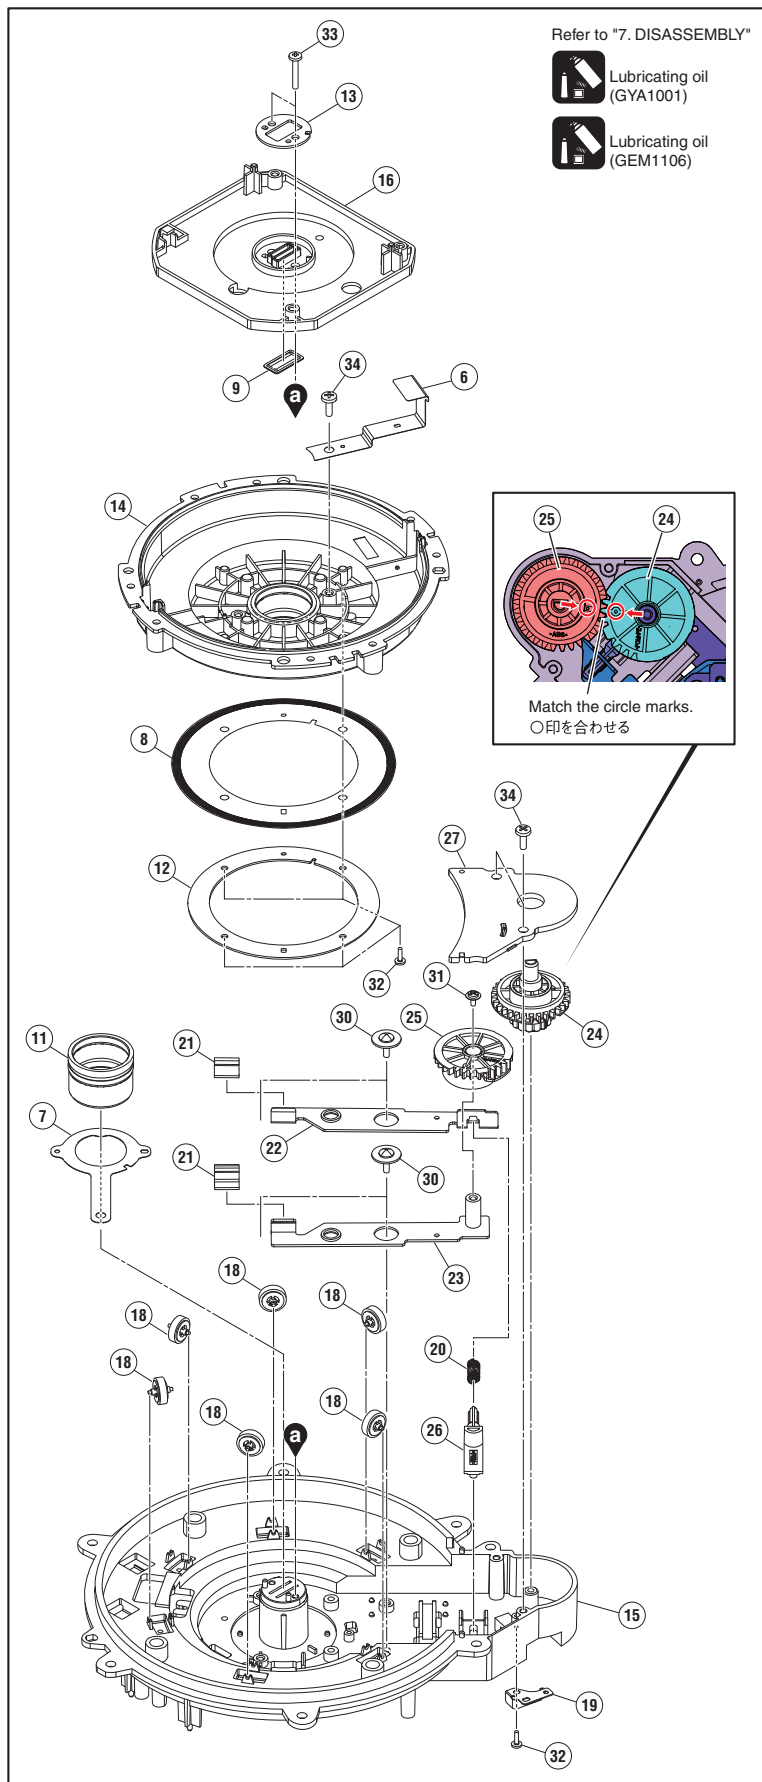

JOG DIAL (2/2) SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	LCDL Assy	DWX4209
	1	LCDR Assy	DWX4210
	2	TFT LCD	DWX4226
	3	FFC (for L)	DDD1911
	3	FFC (for R)	DDD1886
	4	FFC (for L)	DDD1912
	4	FFC (for R)	DDD1887
	5	Sheet (for L)	DEC3815
	5	Sheet (for R)	DEC3832
B	6	Leaf Spring	DBK1391
	7	Leaf Spring	DBK1392
	8	Slit/JOG	DEC3515
	9	Packing	DEC3820
	10	Cushion	DEC3831
C	11	Shaft	DLA2266
	12	Bracket/SLT	DNH3168
	13	Cover	DNH3391
	14	JOG Dial	DNK6820
	15	Base	DNK6821
D	16	Holder	DNK6829
	17	Holder	DNK6830
	18	Roller	DXB2178
	19	Leaf Spring	DBK1393
	20	Coil Spring	DBH1823
E	21	Felt	DED1188
	22	Lever	DNH3392
	23	Lever	DNH3393
	24	Gear	DNK6823
	25	Cam	DNK6824
F	26	Pin	DNK6825
	27	Cover	DNK6826
	28	•••••	
	29	•••••	
	30	DM Screw (FTC)	DBA1260
G	31	Screw	AMZ30P060FTC
	32	Screw	BPZ20P060FTC
	33	Screw	BPZ26P160FTC
	34	Screw	BPZ30P080FTC

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω — 56 $\times 10^1$ — 561 RD1/4PU $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} J$

47 k Ω — 47 $\times 10^3$ — 473 RD1/4PU $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ 0 \end{bmatrix} J$

0.5 Ω — R50 RN2H $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

1 Ω — 1R0 RSIP $\begin{bmatrix} 1 \\ R \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω — 562 $\times 10^1$ — 5621 RN1/4PC $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 1 \end{bmatrix} F$

Mark No. Description Part No.

LIST OF ASSEMBLIES

NSP 1..MOTHER ASSY DWM2696
2..MAIN ASSY DWX4194
2..OLED ASSY DWX4208
2..LCDL ASSY DWX4209
2..LCDR ASSY DWX4210

NSP 1..MIXER ASSY DWM2697
2..MXRB ASSY DWX4195
2..BFXB ASSY DWX4196
2..JOGRT1 ASSY DWX4197
2..JOGRT2 ASSY DWX4198

NSP 1..DECKL ASSY DWM2698
2..DCKL ASSY DWX4199
2..AOUT ASSY DWX4200

NSP 1..DECKR ASSY DWM2699
2..DCKR ASSY DWX4201
2..HPJK ASSY DWX4203
2..JOGH ASSY DWX4223
2..JGLH ASSY DWX4224

NSP 1..PAD ASSY DWM2700
2..PADL ASSY DWX4204
2..PADR ASSY DWX4205
2..CRFD ASSY DWX4206
2..LVMT ASSY DWX4207
2..JOGTL ASSY DWX4211
2..JOGTR ASSY DWX4212

Mark No. Description Part No.

MOTHER ASSY

Consists of

MAIN ASSY

OLED ASSY

LCDL ASSY

LCDR ASSY

A E M N MOTHER ASSY SEMICONDUCTORS

Δ IC 1102,1103 MM3542BF
 Δ IC 1105 S-1172B1C-U5
 Δ IC 1106,1110,1306 NJM2872BF33
 Δ IC 1107 NJM2831F05
 Δ IC 1108,1109,1305 NJM78M09DL1A

Δ IC 1301,1302 BD9851EFV

Mark No. Description Part No.

Δ IC 1303 NJM78M15DL1A
 Δ IC 1304 NJM79M15DL1A
 Δ IC 1307 NJM7805DL1A
IC 1501 TC7SZU04FUS2

Δ IC 1502 NJM2831F33
IC 1503,2105 TC7SZ08FUS2
IC 1504 TC74LCX08FK
IC 1601 DYW2150
*Part number of the initial firmware equipped
IC 1602 PST8430N

NSP IC 1801,2101 R5S72690W266FP
IC 1803,2107 TC7SH08FUS2
IC 1804,2109 W9864G6KH-5
IC 2106 DYW2149

*Part number of the initial firmware equipped
IC 2401,2403 NJM4565MD

IC 2402,2702,2703,2706 NJM4580MD
IC 2404,2603,2604 AK5720VT
IC 2405 AK5358AET
IC 2601,2602,2902 NJM2068MD
IC 2701 AK4382AVT

IC 2704,2705 NJM2068D
IC 2801,2901 PCM1753DBQ
IC 2802-2804 NJM4580MD
 Δ Q 1101,1104,1106,1107 RSQ035P03
Q 1102,1513,1514,1602 LTC024EEB

Q 1103,1505,1508,1510 2SC4081
Q 1103,1505,1508,1510 LSCR523UB
Q 1103,1505,1508,1510 2SC4154-11
Q 1105,1522 RT3N22M
Q 1301 RSR020P05

Δ Q 1302,1304 RSQ030P03
 Δ Q 1303 RTQ045N03
Q 1305,1306 LTC014EEB
 Δ Q 1307,1308 RTQ040P02
Q 1501,1502,1504,1506 ISA1602AM1

Q 1501,1502,1504,1506 LSAR523UB
Q 1501,1502,1504,1506 2SA1576A
Q 1507,1519,1524,1525 2SA1576A
Q 1507,1516,1518,1519 LSAR523UB
Q 1507,1519,1524,1525 ISA1602AM1

Q 1509 LTC014YEB
Q 1515,1521,2905,2907 LSCR523UB
Q 1523 RT3CLLM
Q 1523 HN1C01FUS1
Q 1524,1525,2906,2908 LSAR523UB

Mark	No.	Description	Part No.
	CN1011	CONNECTOR	AKM1293
	CN1012	CONNECTOR	AKM1290
	CN1015	FFC/FPC CONNECTOR	CKS6645
	CN6802	FFC/FPC CONNECTOR	CKS6476
	CN7001,7201	FFC/FPC CONNECTOR	DKN1677
	CN7202	FFC/FPC CONNECTOR	DKN1676
	CN7203	FFC/FPC CONNECTOR	DKN1675
	VA1801,2402-2408,2601	VARISTORS	EZJZ1V270RM
	VA2602	VARISTORS	EZJZ1V270RM
<u>RESISTORS</u>			
	R1001,1027,1355,1550		RS1/10SR0R0J
	R1004,1005,1008,1010		RAB4CQ0R0J
	R1011,1019,1031,1034		RAB4CQ0R0J
	R1036,1037,1978,1979		RAB4CQ0R0J
	R1119		RS1/16SS6801D
	R1120		RS1/16SS75R0D
	R1121,1124		RS1/16SS2201D
	R1122		RS1/16SS1202D
	R1123		RS1/16SS1000D
	R1126,1942,2954,2955		RS1/8SQ0R0J
	R1134,1344,1345,1347		RS1/4SA0R0J
	R1301,1303,1319		RS1/16SS1502D
	R1302,1304,1311,1320		RS1/16SS1002D
	R1305,1307,1327,1328		RS1/16SS3002D
	R1306,1308,1332,1334		RS1/16SS6802D
	R1309		RS1/16SS1803D
	R1310		RS1/16SS5102D
	R1314,1921,2186		RS1/16SS5601D
	R1318		RS1/16SS2200D

RESISTORS

R 1001,1027,1355,1550	RS1/10SR0R0J
R 1004,1005,1008,1010	RAB4CQ0R0J
R 1011,1019,1031,1034	RAB4CQ0R0J
R 1036,1037,1978,1979	RAB4CQ0R0J
R 1119	RS1/16SS6801D
R 1120	RS1/16SS75R0D
R 1121,1124	RS1/16SS2201D
R 1122	RS1/16SS1202D
R 1123	RS1/16SS1000D
R 1126,1942,2954,2955	RS1/8SQ0R0J
R 1134,1344,1345,1347	RS1/4SA0R0J
R 1301,1303,1319	RS1/16SS1502D
R 1302,1304,1311,1320	RS1/16SS1002D
R 1305,1307,1327,1328	RS1/16SS3002D
R 1306,1308,1332,1334	RS1/16SS6802D
R 1309	RS1/16SS1803D
R 1310	RS1/16SS5102D
R 1314,1921,2186	RS1/16SS5601D
R 1318	RS1/16SS2200D
R 1331	RS1/16SS6201D
R 1335,1338	RS1/16SS1002D
R 1339	RS1/16SS1503D
R 1340	RS1/16SS5101D
R 1341	RS1/16SS6202D
R 1342,2923-2926	RS1/16SS1001D
R 1343	RS1/16SS2002D
R 1346	RS1/16SS3001D
R 1348	RS1/4SA0R0J
R 1506,2837,2838,2913	RS1/10SR105J
R 1507	RS1/10SR222J
R 1539	RN1/16SE1000D
R 1554	RS1/16SS3302D
R 1555	RS1/16SS2701D
R 1569,1640	RS1/10SR104J
R 1570,1573-1576,1641	RS1/10SR332J
R 1571,1572	RS1/10SR473J
R 1601,1605,1608,1615	RAB4CQ560J
R 1603,1604,1617,1622	RAB4CQ101J
R 1616,1625-1628,1630	RAB4CQ560J
R 1631,1635,1636,1642	RAB4CQ560J
R 1655,1656	RAB4CQ222J
R 1657,1658	RAB4CQ473J
R 1659,1661	RS1/10SR5600D
R 1660,1662	RS1/10SR4300D
R 1663,1665	RS1/16SS1201D
R 1664,1666	RS1/16SS6800D
R 1667,1669	RS1/16SS2401D
R 1668,1670,2927-2930	RS1/16SS1801D
R 1672,1675-1677,1679	RS1/16SS9101D

Mark	No.	Description	Part No.
------	-----	-------------	----------

A	R	1673,1676,1678,1680	RS1/16SS8201D
	R	1684,1817,1833-1835	RAB4CQ560J
	R	1686,1962-1964,1967	RAB4CQ103J
	R	1801,1802,1994-1996	RS1/10SR0R0J
	R	1803,1864,1866,1881	RAB4CQ331J
R	1863,1874,1876,1878	RAB4CQ560J	

■	R	1887,1932-1934,1960	RAB4CQ560J
	R	1938,1940	RAB4CQ101J
	R	1961,1966,1968,1971	RAB4CQ560J
	R	1965,2249	RAB4CQ472J
	R	1969,1970,2191,2199	RAB4CQ103J

B	R	1997,2401-2406	RS1/10SR101J
	R	2107,2108,2444,2445	RS1/10SR0R0J
	R	2109,2153,2154,2161	RAB4CQ331J
	R	2110-2112,2116,2152	RAB4CQ560J
	R	2158,2160,2198,2246	RAB4CQ560J

■	R	2247,2250	RAB4CQ560J
	R	2248,2254	RAB4CQ103J
	R	2251	RAB4CQ104J
	R	2407-2412,2605-2608	RS1/10SR121J
	R	2413-2416,2419,2420	RS1/10SR3301D

C	R	2417,2418,2609-2612	RS1/10SR4702D
	R	2421,2423,2429,2430	RN1/16SE1501D
	R	2422,2424,2432,2434	RN1/16SE4701D
	R	2425,2426,2435,2436	RS1/10SR2201D
	R	2427,2428	RS1/10SR8200D

■	R	2437,2438,2458,2459	RS1/10SR103J
	R	2439,2440,2807,2808	RS1/10SR3301D
	R	2442,2443,2635-2638	RS1/10SR3601D
	R	2446,2447,2639-2642	RS1/10SR1801D
	R	2450,2451,2901	RS1/10SR0R0J

D	R	2454,2455	RS1/10SR1501D
	R	2456,2457,2705-2712	RS1/10SR3901D
	R	2460,2461	RS1/10SR2200D
	R	2467,2468,2657,2658	RAB4CQ220J
	R	2601-2604	RS1/10SR101J

■	R	2613-2620	RN1/16SE1801D
	R	2621-2624	RS1/10SR2703D
	R	2625,2627,2629,2631	RS1/10SR2202D
	R	2626,2628,2630,2632	RS1/10SR103J
	R	2702,2804,2904	RAB4CQ220J

E	R	2713-2720	RS1/10SR1302D
	R	2721-2728	RS1/10SR3001D
	R	2729-2736	RS1/10SR5601D
	R	2737-2740,2743-2750	RS1/10SR6801D
	R	2741,2742,2751,2752	RS1/10SR5101D

■	R	2753-2756 (330 ohm)	DCN1200
	R	2757,2759,2830,2832	RS1/10SR6800D
	R	2809,2810	RS1/10SR1202D
	R	2811,2812	RS1/10SR2701D
	R	2813-2820,2909,2910	RS1/10SR1102D

F	R	2821-2828	RS1/10SR3602D
	R	2834,2835	RS1/10SR6800D
	R	2907,2908	RS1/10SR3301D
	R	2911,2912	RS1/10SR2401D
	R	2914	RS1/10SR105J

	R	2915,2916	RS1/10SR183J
	R	2917,2918	RS1/8SQ680J
	R	2919-2922	RS1/10SR332J

Mark	No.	Description	Part No.
------	-----	-------------	----------

R	2931-2938	RS1/8SQ220J
	6801	RAB4CQ223J
	7009-7012,7209-7212	RAB4CQ0R0J
VR	2401,2402 POTENTIOMETER	DCS1111
Other	Resistors	RS1/16SS###J

CAPACITORS

C	1001,1002,1004-1007	CKSSYB104K10
C	1003,1008,1010,1016	CKSSYB104K16
C	1009,1014,1015	CKSSYB104K10
C	1011,1112,1138,2473	CKSRYB103K50
C	1012,1048,1050,1129	CKSRYB104K25

C	1017-1021,1023,1024	CKSSYB104K10
C	1022,1103,1104,1117	CKSSYB104K16
C	1041-1046,1605,1640	CKSSYB471K50
C	1047,1049,1149,1150	CCSSCH101J50
C	1051,1151,1152,1159	CCSSCH102J50

C	1101,1102,1163,1165 (10 uF/16 V)	DCH1263
C	1105,1106,1127,1128	CKSSYB102K50
C	1110,1111,1130,1131	CKSSYB104K10
C	1115,1116	CKSSYB153K16
C	1118,1146,1147,1162	CKSSYB104K16

C	1119,1124,1153,1154	CKSSYB103K25
C	1120	CKSSYB182K50
C	1121,1320	CCSSCH561J50
C	1132,1139,1144,1161 (10 uF)	CCG1234
C	1133,1135 (10 uF/10 V)	DCH1201

C	1136,2411-2414	CCSRCH222J50
C	1140 (150 uF/16 V)	DCH1356
C	1141,1142,1309,1515	CKSSYB103K16
C	1143,1145,1157,1158	CKSSYB104K10
C	1148,1609-1616	CKSSYB102K50

C	1160,1172,1174,1342	CKSSYB104K10
C	1166,1315,1316,1325 (10 uF/16 V)	DCH1263
C	1167,1330 (2.2 uF)	CCG1218
C	1168,1169,1502,1519	CKSSYB104K16
C	1173,2405,2407,2409	CCSRCH102J50

C	1175,1301,1321,1322	CKSRYB105K10
C	1176,2709 (100 uF/25 V)	CCH2000
C	1302	CKSRYB474K10
C	1304	CKSRYB334K10
C	1305	CCSSCH680J50

C	1306,1319	CCSSCH221J50
C	1308	CKSSYB223K16
C	1326,1344,1352 (10 uF/16 V)	DCH1263
C	1327-1329,1332	CKSQYB105K16
C	1333 (4.7 uF)	CCG1201

C	1337,1340	CKSSYB682K25
C	1341,1347,1363,1370	CKSRYB104K25
C	1343,1351,6804 (10 uF)	CCG1236
C	1345	CCSSCH271J50
C	1346,1947,1970,1971	CCSSCH471J50

C	1348,1362,1380,1381	CKSSYB104K10
C	1353,1354,1358,1359	CCSSCH102J50
C	1355,1364,2401,2402	CEVW470M25
C	1360,6806	CKSQYB105K25
C	1361,1945,2471,2656	CKSRYB105K10

C	1365-1369,1378,1379 (2.2 uF/25 V)	DCG1065
C	1371,2434,2436,2443	CKSRYB104K25
C	1373,1374,1385,1522	CKSSYB103K25

5			6			7			8			
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.		Mark	No.	Description	Part No.
	C	1375	CFHXSQ103J16		C	2439,2440,2710-2713	CCSSCH331J50					
	C	1376,1377,1383,1505	CCSSCH102J50		C	2444,2453,2454,2487	CKSRYB104K25					
					C	2445,2446	CEVWNP100M16					
	C	1386,1601,1897,1902 (10 uF)	CCG1234									A
	C	1387,1388,1506,1512	CKSSYB104K10		C	2447,2448,2455,2456	CEVW100M16					
	C	1501,1503,1628,1876	CCSSCH120J50		C	2457,2460,2462,2463	CEVW220M6R3					
	C	1504,1510,1811-1816	CCSSCH101J50		C	2464,2468,2469,2492	CCSSCH102J50					
	C	1507 (1 uF)	CCG1325		C	2465,2466,2809,2909	CKSSYB104K10					
					C	2467 (2.2 uF/25 V)	DCG1065					
	C	1508,2708 (0.1 uF/35 V)	DCE1031									
	C	1511,1516,1526,2459	CCSSCH102J50		C	2470,2655,2657	CKSRYB474K16					
	C	1514	CKSRYB104K10		C	2475,2477,2479,2482	CKSRYB103K50					
	C	1517	CCSSCH180J50		C	2476,2478,2486,2488	CCSRCH102J50					
	C	1518,1623,1817-1824	CKSSYB103K16		C	2480,2481,2667,2668	CKSSYB103K16					
					C	2485,2494	CCSRCH680J50					
	C	1523,1525,2910,2911 (220 uF/16 V)	GCH2090									B
	C	1524,2431,2432,2437	CKSSYB103K25		C	2489,2491,2631-2634	CKSRYB104K25					
	C	1603	CEVW101M4		C	2490,2601,2603,2661	CCSRCH102J50					
	C	1604,1617,1627,1629	CKSSYB104K10		C	2493,2647,2648,2653	CCSSCH102J50					
	C	1606-1608,1908,1909	CKSSYB222K50		C	2495,2496	CKSRYB102K50					
					C	2604	CKSQYB104K50					
	C	1618-1620,1622	CKSSYB102K50									
	C	1621,1901	CCSSCH100D50		C	2605-2608,2611-2614	CCSRCH221J50					
	C	1624-1626,1634-1637	CKSSYB102K50		C	2609,2610	CEVW470M25					
	C	1630,1807,1808,1884	CKSSYB104K10		C	2619-2622	CEVW101M16					
	C	1631	CKSSYB473K16		C	2623-2626 (0.012 uF)	ACE7125					
					C	2635-2638 (3300 pF)	DCG1049					
	C	1803,2107 (47 uF/16 V)	GCH1961									
	C	1804,2108,2805,2905	CEVW470M6R3		C	2639-2642	CEVW100M16					C
	C	1809,1810,1875,2113	CKSSYB471K50		C	2643,2644,2649,2650	CEVW220M6R3					
	C	1825,1830,1836,1841	CCSSCH101J50		C	2645,2646,2651,2652	CKSRYB104K16					
	C	1826,1832-1835	CKSSYB103K16		C	2654,2674-2677,2706	CCSSCH102J50					
					C	2658	CKSRYB105K10					
	C	1837-1840,1845,1846	CKSSYB103K16									
	C	1847,1848,1851,1852	CCSSCH101J50		C	2660,2662,2664,2669	CKSRYB103K50					
	C	1849,1850,1853,1854	CKSSYB103K16		C	2665,2673,2702,2704	CCSRCH102J50					
	C	1855,1858,1877	CCSSCH101J50		C	2670,2703,2750,2802	CKSRYB103K50					
	C	1856,1857,1862-1874	CKSSYB103K16		C	2701,6801,7002,7202	CKSSYB103K16					
					C	2707 (0.01 uF)	CCG1318					
	C	1881-1883,1972-1974	CCSSCH101J50									
	C	1885-1887,1904,1906	CKSSYB102K50		C	2714-2721	CCSSCH121J50					
	C	1889,1894,1895	CKSSYB103K16		C	2722-2725,2736-2739	CKSRYB104K25					D
	C	1896,1898,1899	CKSSYB104K10		C	2726,2727 (100 uF/16 V)	CCH1565					
	C	1903,1920-1922,1938 (10 uF)	CCG1234		C	2742-2745,2920,2921	CCSSCH101J50					
					C	2746,2747,2818,2819	CKSRYB104K25					
	C	1907,1928,1933,2163	CKSSYB102K50									
	C	1910-1912,1939-1943	CKSSYB103K16		C	2801,2803,2903	CCSRCH102J50					
	C	1913,1914,1918,1919	CKSSYB222K50		C	2804,2902,2904	CKSRYB103K50					
	C	1915-1917,1927,1931	CKSSYB104K10		C	2806	CKSRYB104K16					
	C	1923,1924	CKSSYB222K50		C	2807,2907,7001,7201	CCSSCH102J50					
					C	2810,2811	CEHVAW101M16					
	C	1937,1944,2200,2201	CCSSCH120J50									
	C	1948,1949,2115-2139	CKSSYB103K16		C	2812,2813,2912,2913	CEVW220M6R3					
	C	1979-1985,2140,2141	CCSSCH101J50		C	2814,2815,2914,2915	CCSSCH821J50					
	C	1994,2166,2174,2808 (10 uF)	CCG1234		C	2816,2817,2916,2917	CCSSCH151J50					E
	C	2111,2112,2165,2168	CKSSYB104K10		C	2820-2823,2828-2831	CCSSCH330J50					
					C	2824-2827,2833,2834	CKSRYB104K25					
	C	2114,2210-2212,2423	CKSSYB471K50									
	C	2142-2161,2164	CKSSYB103K16		C	2906 (0.1 uF)	CCG1321					
	C	2162,2732-2735	CCSSCH101J50		C	2908 (10 uF)	CCG1234					
	C	2170	CKSSYB102K50		C	2918,2919,2926-2929	CKSSYB104K16					
	C	2172,2173,2458,2461	CKSSYB104K10		C	2922,2923,6803,6807	CKSRYB104K25					
					C	6802,7003,7025,7203	CKSSYB104K10					
	C	2175-2179,2181,2182	CKSSYB103K16									
	C	2406,2408,2410,2602	CKSQYB104K50		C	7225	CKSSYB104K10					F
	C	2415-2422,2472,2474	CCSRCH102J50									
	C	2424	CKSSYB471K50									
	C	2425,2426,2441,2442	CCSSCH821J50									
	C	2427,2428,2615-2618	CKSSYB472K50									
	C	2438,2627-2630	CKSSYB103K25									

Mark No. Description Part No.

DECKL ASSY

Consists of

DCKL ASSY

AOUT ASSY

B K DECKL ASSY

SEMICONDUCTORS

Q 4001-4010,4014 2SC4154-11
Q 4001-4010,4014 LSCR523UB
Q 4001-4010,4014 2SC4081
Q 4011-4013 LTC124EUB
Q 4601-4606,4613-4620 INC2002AC1

D 4001,4003,4005,4016 SLI-343U8R
D 4002,4006,4007,4010 SLI-343Y8Y
D 4004,4038 SLI-343M8G
D 4011 SLR343WBC7T
D 4014 LTL17KCBH5D

D 4017 SLI-343U8R
D 4018-4033,4040 1SS355VM
D 4018-4033,4040 1SS355

MISCELLANEOUS

JA 4501 DC POWER JACK DKN1649
JA 4601,4602 CANON CONNECTOR DKB1093
JA 4603 RCA JACK DKB1125
JA 4604,4605 6.5 DIA JACK DKN1653
KN 4501 EARTH TERMINAL AKF7002

S 4001-4003,4006-4019 TACT SWITCH DSG1079
S 4004,4005 TACT SWITCH DSG1117
S 4501 PUSH SW ASG1102
CN 4001 40P CONNECTOR VKN2007
CN 4501 19P CONNECTOR 19P-1.25FJ

CN 4502 19P PLUG AKM7077
P 4501 PROTECTOR (4.0 A/24 V) DEK1104
VA 4035,4037,4501 VARISTORS EZJZ1V270RM
VA 4601-4614 VARISTORS EZJZ1V270RM

RESISTORS

R 4047,4048 RS1/10SR2201D
R 4052-4054,4058 RS1/4SAOR0J
VR 4001 SLIDE VR DCV1033
Other Resistors RS1/10SR###J

CAPACITORS

C 4001,4003,4005 CEJQ470M16
C 4002,4004,4006,4012 CKSRYB104K10
C 4011 (10 uF) CCG1234
C 4501 CEANP470M25
C 4502 (1 uF/25 V) DCE1030

C 4503 CKSRYB103K25
C 4504 (0.1 uF/35 V) DCE1031
C 4505,4510,4511 CKSRYB103K50
C 4506,4615,4617,4627 CCSRCH102J50
C 4507 CCSRCH101J50

C 4601,4602,4619-4622 CEAT101M16
C 4603-4606 (100 uF/25 V) ACH1480
C 4607-4610 (470 pF/50 V) ACE7119
C 4611,4612 (2200 pF/63 V) ACE7116
C 4613 CKSRYB102K50

C 4614,4616,4618,4628 CKSQYB104K50
C 4623-4626 CCSRCH471J50

Mark No. Description Part No.

DECKR ASSY

Consists of

DCKR ASSY

HPJK ASSY

JOGH ASSY

JGLH ASSY

C L DECKR ASSY

SEMICONDUCTORS

Q 5000,5012,5013 LTC124EUB
Q 5001-5009,5011 LSCR523UB
Q 5001-5009,5011 2SC4081
Q 5001-5009,5011 2SC4154-11
Q 5601,5602 INC2002AC1

D 5000,5017-5025 1SS355
D 5000,5017-5025 1SS355VM
D 5001,5004,5009,5015 SLI-343U8R
D 5002,5007,5008,5011 SLI-343Y8Y
D 5003,5005 SLI-343M8G

D 5012 SLR343WBC7T
D 5014 LTL17KCBH5D
D 5016 SLI-343U8R
D 5027-5032 1SS355
D 5027-5032 1SS355VM

D 5601-5604 DF2B18FU

MISCELLANEOUS

JA 5601 6.5 DIA JACK DKN1669
JA 5602 STEREO MINI JACK XKN3017
S 5000-5002,5005-5018 TACT SWITCH DSG1079
S 5003,5004 TACT SWITCH DSG1117
CN 5001 40P CONNECTOR VKN2007

CN 5601 L-PLUG(7P) KM200NA7L
CN 5602 L-PLUG(3P) KM200NA3L
VA 5000,5001,5602,5603 VARISTORS EZJZ1V270RM

RESISTORS

R 5000,5043 RS1/10SR2201D
R 5045,5048,5052,5053 RS1/4SAOR0J
R 5601,5602 RS1/8SQ1R5J
VR 5000 SLIDE VR DCV1033
Other Resistors RS1/10SR###J

CAPACITORS

C 5001,5003,5005 CEJQ470M16
C 5002,5004,5006,5008 CKSRYB104K10
C 5007 (10 uF) CCG1234
C 5601,5602 CEANP471M6R3
C 5603-5606 CKSRYB223K50

C 5607 CKSRYB102K50
C 5608 CKSQYB104K50
C 5609 CKSRYB471K50

Mark	No.	Description	Part No.
PAD ASSY			
Consists of			
PADL ASSY			
PADR ASSY			
CRFD ASSY			
LVMT ASSY			
JOGTL ASSY			
JOGTR ASSY			

D H I J O P

SEMICONDUCTORS

IC	6001,6002,6301,6302
NSP IC	7401,7501
Q	6001,6005,6007,6009
Q	6006,6008,6010,6303
Q	6011-6018,6022-6026

Q	6301,6302,6304,6306
Q	6305,6307,6702,6704
Q	6308-6320
Q	6701,6703,6705,6707
Q	6706,6708,6710

Q	6709
Q	6711-6719
Q	6711-6719
Q	6711-6719
D	6001-6004,6007-6012

D	6001-6004,6007-6012
D	6013-6016,6029-6032
D	6017-6028,6033-6044
D	6017-6028,6033-6044
D	6049-6052,6056

D	6049-6052,6056
D	6057,6059,6061,6063
D	6058,6060,6062,6064
D	6065,6067,6339,6343
D	6301-6310,6315-6326

D	6301-6310,6315-6326
D	6311-6314,6327-6330
D	6331-6338,6340,6342
D	6331-6338,6340,6342
D	6341,6349,6351,6353

D	6344,6346,6348,6350
D	6344,6346,6348,6350
D	6345,6347,6355,6357
D	6352,6354,6356,6601
D	6352,6354,6356

D	6602
D	6701,6710,6719,6728
D	6702-6705,6711-6714
D	6706-6709,6715-6718
D	6720-6723,6729-6732

D	6724-6727,6733-6736
D	6737
D	7401,7501
D	7402,7502

MISCELLANEOUS

L	7401,7402,7404,7501 INDUCTOR
L	7502,7504 INDUCTOR
KN	7401,7501 WRAPPING TERMINAL
S	6003,6006,6007,6010 PUSH SWITCH

PAD ASSY

74VHC595FT
PIC10F206-I/OT
LTC124EUB
2SB1689
LTC123JUB

LTC124EUB
2SB1689
LTC123JUB
LTC124EUB
2SB1689

LTC124EUB
LSCR523UB
2SC4081
2SC4154-11
1SS355VM

1SS355
NSSM124F-A21107
1SS355
1SS355VM
1SS355

1SS355VM
SML-D12U8W
SMLE12BC7T
SML-D12U8W
1SS355VM

1SS355
NSSM124F-A21107
1SS355
1SS355VM
SMLE12BC7T

1SS355
1SS355VM
SML-D12U8W
1SS355VM
1SS355

1SS355VM
SML-D12V8W
SML-D12Y8W
SML-D12M8W(NP)
SML-D12Y8W

SML-D12M8W(NP)
SML-D12V8W
DAN217UM
RB520G-30

Mark	No.	Description	Part No.
S	6011,6014,6301-6306	PUSH SWITCH	CSG1155
CN	6001,6301	FFC/FPC CONNECTOR	DKN1678
CN	6601	CONNECTOR	AKM1289
CN	6701	19P CONNECTOR	VKN1423
CN	7402	CONNECTOR	AKM1290
CN	7403	CONNECTOR	CKS3851
CN	7501	FFC/FPC CONNECTOR	DKN1676
CN	7502	FFC/FPC CONNECTOR	DKN1675
CN	7504	FFC/FPC CONNECTOR	CKS6645
VA	7401,7402,7501	SMD VARISTOR	EZJZ1V80010
VA	7502	SMD VARISTOR	EZJZ1V80010

RESISTORS

R	6001-6004,6007,6008	RS1/16SS332J
R	6017,6018,6301,6302	RS1/16SS332J
R	6039,6070,6097,6335	RS1/16SS152J
R	6044,6075,6102,6340	RS1/16SS103J
R	6045,6076,6103,6341	RS1/16SS563J

R	6126,6127,6426,6427	RS1/16SS472J
R	6150-6155,6303-6308	RS1/16SS0R0J
R	6156,6157,6428,6429	RAB4CQ101J
R	6309-6314	RS1/16SS332J
R	6366,6393	RS1/16SS152J

R	6371,6395,7406,7412	RS1/16SS103J
R	6372,6396,6703,6706	RS1/16SS563J
R	6701,6704,6707,6710	RS1/16SS223J
R	6709,6712,6715	RS1/16SS563J
R	6713	RS1/16SS223J

R	6725-6733	RS1/16SS222J
R	6734-6742	RS1/16SS473J
R	7401,7402,7502,7503 (750 ohm)	DCN1187
R	7403,7508	RS1/16SS2202D
R	7404,7510	RS1/16SS221J

R	7405,7411,7413,7414	RS1/16SS101J
R	7501,7509,7511,7520	RS1/16SS0R0J
R	7504-7507	RAB4CQ0R0J
R	7512,7518	RS1/16SS101J
R	7513,7519	RS1/16SS103J

R	7521	RS1/16SS0R0J
VR	6601 VARIABLE RESISTOR	CCW1024
Other Resistors		RS1/10SR###J

CAPACITORS

C	6001,6002,6018-6025	CKSSYB103K16
C	6003-6010,6316-6323	CCSSCH101J50
C	6011,6306	CEVW471M16
C	6012,6309,7403,7503 (10 uF)	CCG1234
C	6013,6311,6602,7402	CKSSYB104K10

C	6301-6305,6307	CKSSYB103K16
C	6312-6315	CKSSYB103K16
C	6601	CKSSYB471K50
C	6701 (10 uF/10 V)	DCH1201
C	7401,7501	CCSSCH221J50

C	7502	CKSSYB104K10
---	------	--------------

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
A		<u>MIXER ASSY</u>		C	3055,3057,3059		CEJQ470M16
		Consists of					
		<u>MXRB ASSY</u>		C	3056,3058,3060,3503		CKSRYB104K10
		<u>BFXB ASSY</u>		C	3062,3064,3066		CCSRCH101J50
		<u>JOGRT1 ASSY</u>		C	3063,3065,3067		CKSRYB102K50
		<u>JOGRT2 ASSY</u>		C	3501 (10 uF)		CCG1234
				C	3504,3506		CKSRYB104K10

F

G

Q

R

SEMICONDUCTORS

IC 3001

IC 3002-3004

Q 3001-3003,3005,3011

Q 3004

Q 3006,3012

NJM2903M

TC74HC4051AF

LTC124EUB

LTA143EUB

2SB1689

B

Q 3007-3010,3013-3016

Q 3007-3010,3013-3016

Q 3007-3010,3013-3016

Q 3020

Q 3501

2SC4081

2SC4154-11

LSCR523UB

LTC124EUB

LSCR523UB

Q 3501

Q 3501

D 3001-3015,3031-3033

D 3001-3005,3008-3015

D 3016-3018,3020-3022

2SC4154-11

2SC4081

1SS355VM

1SS355

SLI-343YYW

C

D 3019

D 3023-3026

D 3031-3033,3503-3506

D 3501,3502

D 3503-3506

SLI-343U8R

SLR343WBC7T

1SS355

SLR343BD2T

1SS355VM

■	<u>MISCELLANEOUS</u>				
D	KN	3001-3005 EARTH TERMINAL			AKF7002
	S	3001 SLIDE SWITCH			DSH1066
	S	3002,3004-3008,3010 TACT SWITCH			DSG1079
	S	3003,3009 SLIDE SWITCH			DSH1058
	S	3011 ROTARY ENCODER			DSX1133
■	S	3012-3017,3502 TACT SWITCH			DSG1079
	S	3501 ROTARY SWITCH			DSG1131
	S	3503 ROTARY ENCODER			DSX1137
	CN	3001 23P CONNECTOR			VKN1838
	CN	3002 34P CONNECTOR			VKN2004
E	CN	3003 CONNECTOR			VKN1193
	CN	3004 19P CONNECTOR			VKN1834
	CN	3501 CONNECTOR			CKS3831
	CN	3601,3701 PLUG(4P)			KM200NA4
	PC	3601,3701 PHOTO INTERRUPTER			KE-2N18-15

■	<u>RESISTORS</u>				
■	VR	3001,3002 VARIABLE RESISTOR			DCV1020
	VR	3003,3009 ROTARY VR			DCS1127
	VR	3004,3006,3011-3013 ROTARY VR			DCS1116
	VR	3005,3007,3008,3010 ROTARY VR			DCS1117
	VR	3014,3016,3019 ROTARY VR			DCS1117
■	VR	3015,3020 ROTARY VR			DCS1128
	VR	3017,3018,3021,3022 ROTARY VR			DCS1116
	VR	3501 POTENTIOMETER			DCS1065
	Other Resistors				RS1/10SR###J

■	<u>CAPACITORS</u>				
F	C	3006,3007,3061,3505			CKSRYB103K50
	C	3008-3010,3020-3022			CKSRYB104K16
	C	3011-3019,3023-3034			CCSRCH471J50
	C	3035-3054			CKSRYB104K16