

 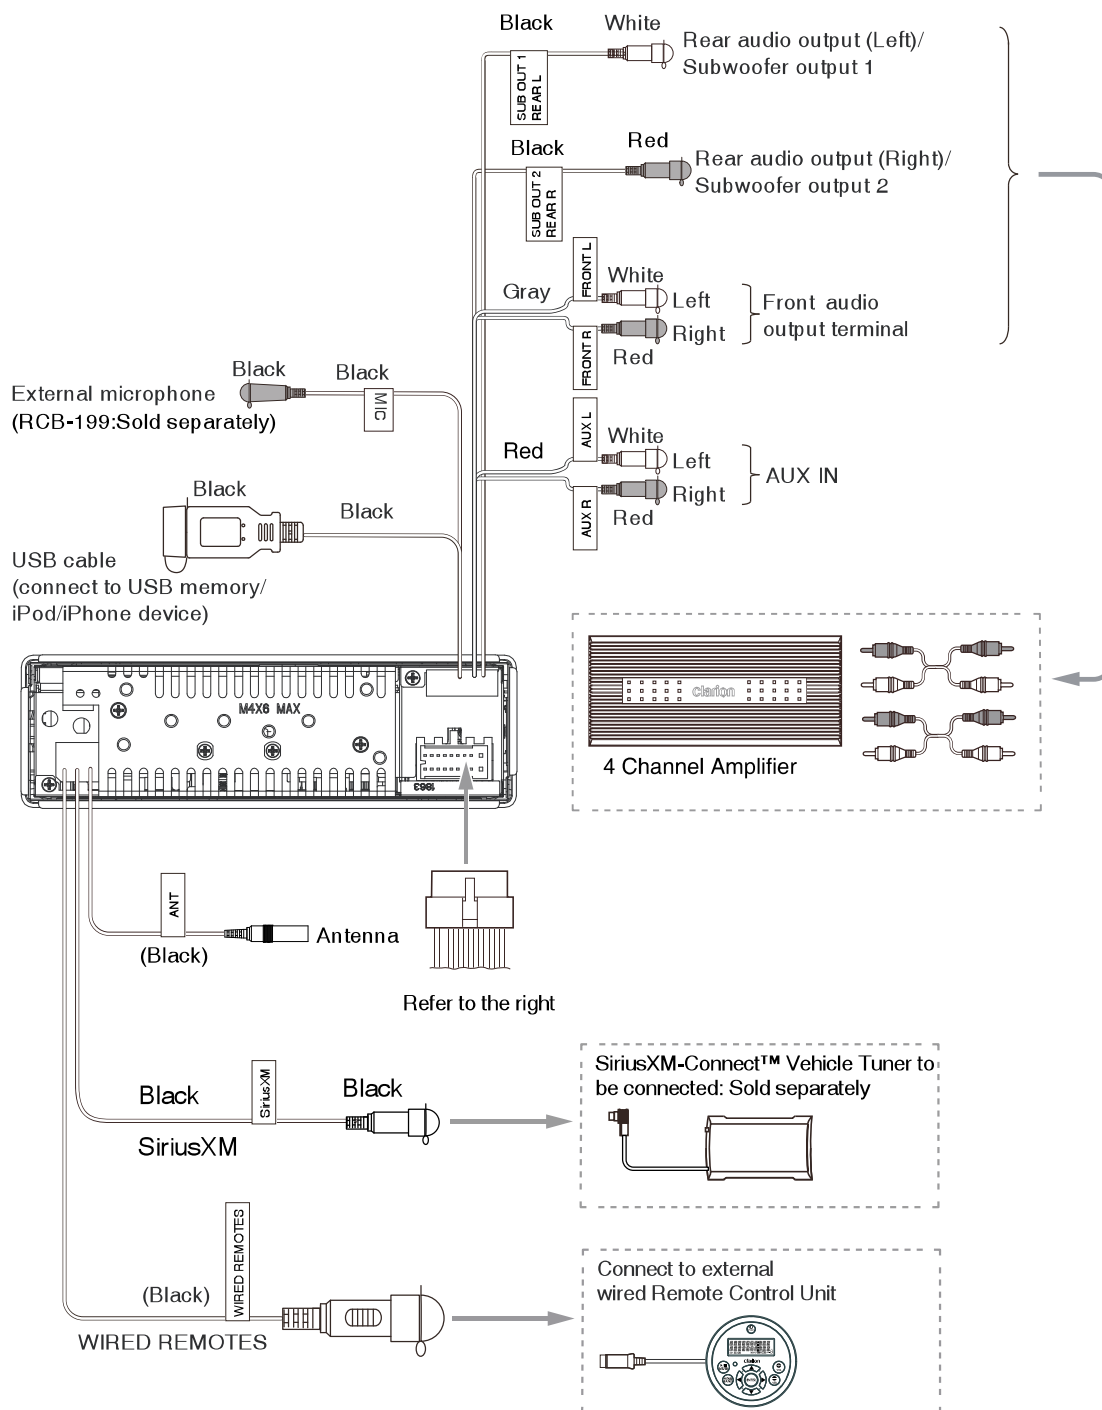
 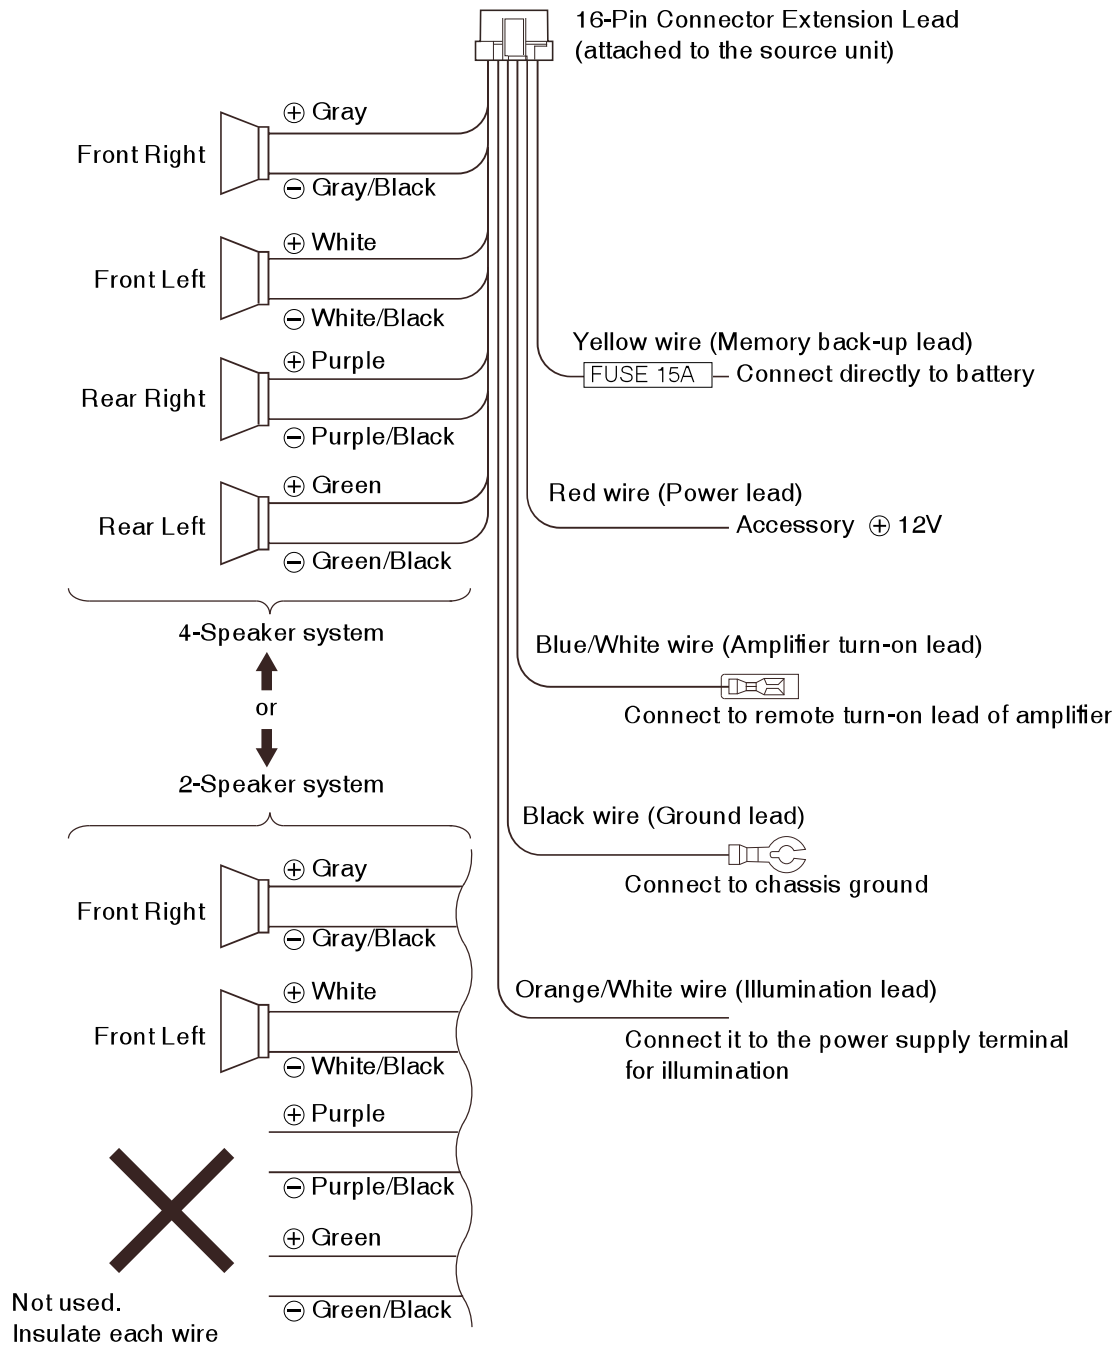
 


WIRING CONNECTION






Assembly parts list


Quotation of assembly parts for M303							
							Updated: March 5, 2013
NO.	Clarion Model	Part NO #	Qty	MOQ	Description	Lead time(day)	Assembly parts Picture
1	9482CMB1539194A	845CMB1539MB000	1	30	CMB1539 MB MI	TBC	
2	9482CMB1539194A	843CMB1539SB004	1	30	CMB1539 SB MI	TBC	
3	9482CMB1539194A	143830001337	1	30	I/O,CM1531,13P,130MM	TBC	
4	9482CMB1539194A	842CMB1539KB003	1	30	CMB1539 KB MI	TBC	
5	9482CMB1539194A	828DVU1284SS020	1	30	Lower Cover	TBC	
6	9482CMB1539194A	141000001854	1	30	Upper Cover (Mountain Bracket)	TBC	
7	9482CMB1539194A	845CMB1539AS000	1	30	Inner Escutcheon Assy	TBC	
8	9482CMB1539194A	141045000200	2	200	Lock Screw	TBC	
9	9482CMB1539194A	121090000327	2	200	L-KEY	TBC	

EXPLODED VIEW / PARTS LIST 1/2

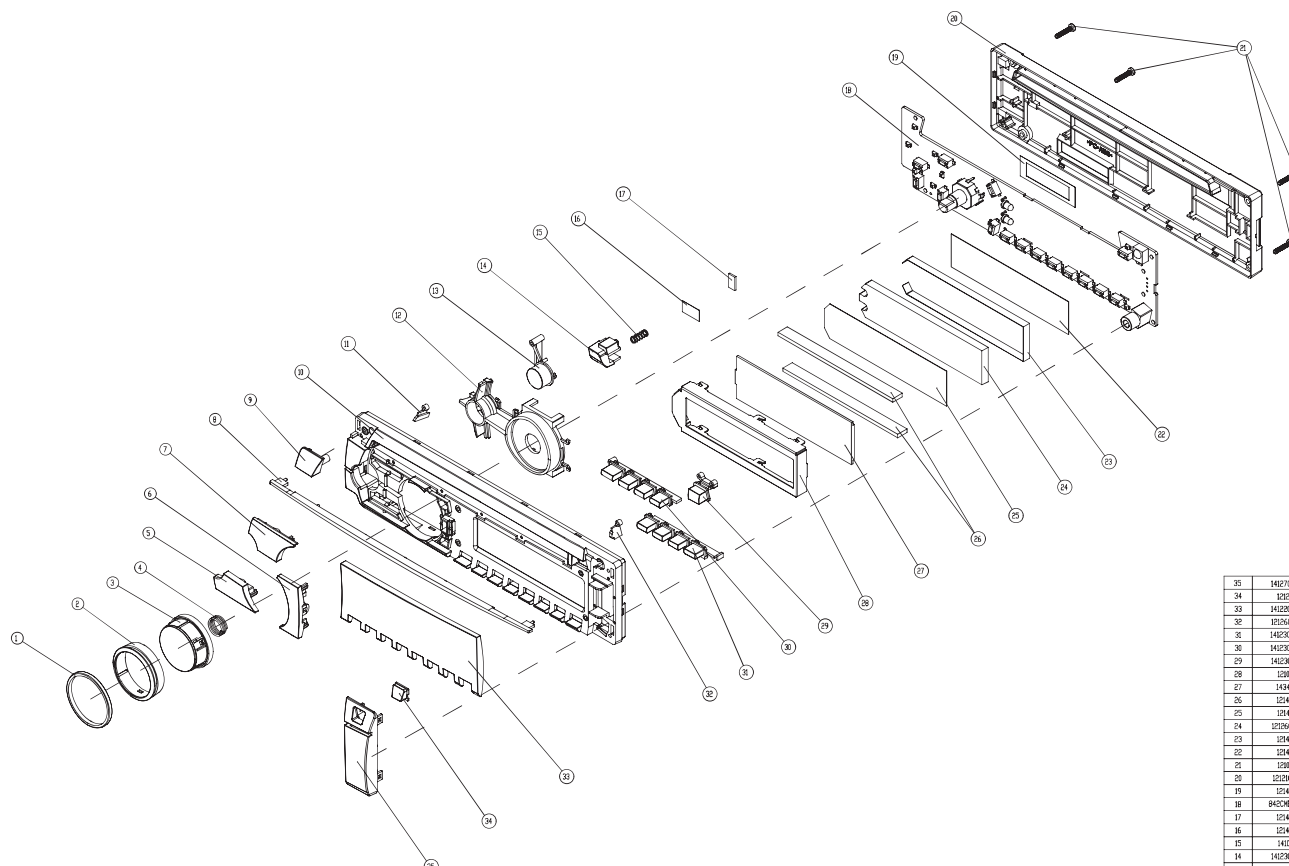

35	14127300099017	CHES39AP007 DEIG BACK.PC.LEN+SL	1	
34	12121000709	CHES39JR LENS.PC	1	
33	14120000578227	CHES39LENG.PMMA.SL	1	
32	1215400005000	CHES39LJ CDM LI-GUIDE.PC	1	
31	14123000237067	CHES39NUMBER BUTON.PC.LEN+SL	1	
30	14123000336037	CHES39NUMBER BUTON.PC.LEN+SL	1	
29	141230003341837	CHES39PROJECT BUTON.PC.LEN+SL	1	
28	12000000143	CHES39SLID COVER.SP.TE.TOS	1	
27	143400000263	LCD.CHES39AP007POSITIVE.WHTE	1	
26	121400000409	CHES39SEPA STOP.TORCH	2	
25	121460000780	CHES39FILTER SHEET.PC.TOS	1	
24	12154000036000	CHES39SLID LI-GUIDE.PMMA	1	
23	121460000407	CHES39SLID LI-GUIDE.PMMA	1	
22	121460000405	CHES39SLID B-LIGHT SHEET.PC.TOS	1	
21	121460000184	CHES39PP.PMMA.ZINC.ARM0	4	
20	1214600001700	CHES39SEPA PANEL.ABS	1	
19	121460000453	CHES39INSULATING SHEET.PC.T02	1	
18	040CHES39K003	CHES39 KB DMT ASSM	1	
17	121405000272	CHES39SHADE SPRNGE.VA.73H4019	1	
16	121460000524	CHES39FILTER FOR SHIELD.PMMA.T01	1	
15	1412300005	CHES39SPRING FOR RELEASE KEY.ABS+PB	1	
14	14123000334307	CHES39PROJECT BUTON.PC.LEN+SL	1	
13	14123000333037	CHES39JRC BUTON.PC.LEN+SL	1	
12	1215400004800	CHES39LI-GUIDE.PC	1	
11	1215400004600	CHES39LJ CDM LI-GUIDE.PC	1	
10	14120000348027	CHES39AP007 FRAME+SL	1	
9	14127300196027	CHES39SL DEIG BACK.PC.LEN+SL	1	
8	14127600052037	CHES39SEPA.DIGI BAR.ABS.PL+SL	1	
7	14123000333047	CHES39HAND MENU BUTON.PC.LEN+SL	1	
6	14123000333047	CHES39PT ALUMIN. BUTON.PC.LEN+SL	1	
5	14123000334047	CHES39NUMBER BUTON.PC.LEN+SL	1	
4	121540000559	CHES39SPRING FOR RELEASE KEY.ABS+PB	1	
3	1215400007000	CHES39SLID BACK.PC	1	
2	14123000334077	CHES39SEPA.T01 KNOB.ABS.PL+SL	1	
1	12149000073000	CHES39RUBBER RING+RUBBER	1	
Item	Assembly Part No.	Description(English)	QTY	Remark

EXPLODED VIEW / PARTS LIST 2/2

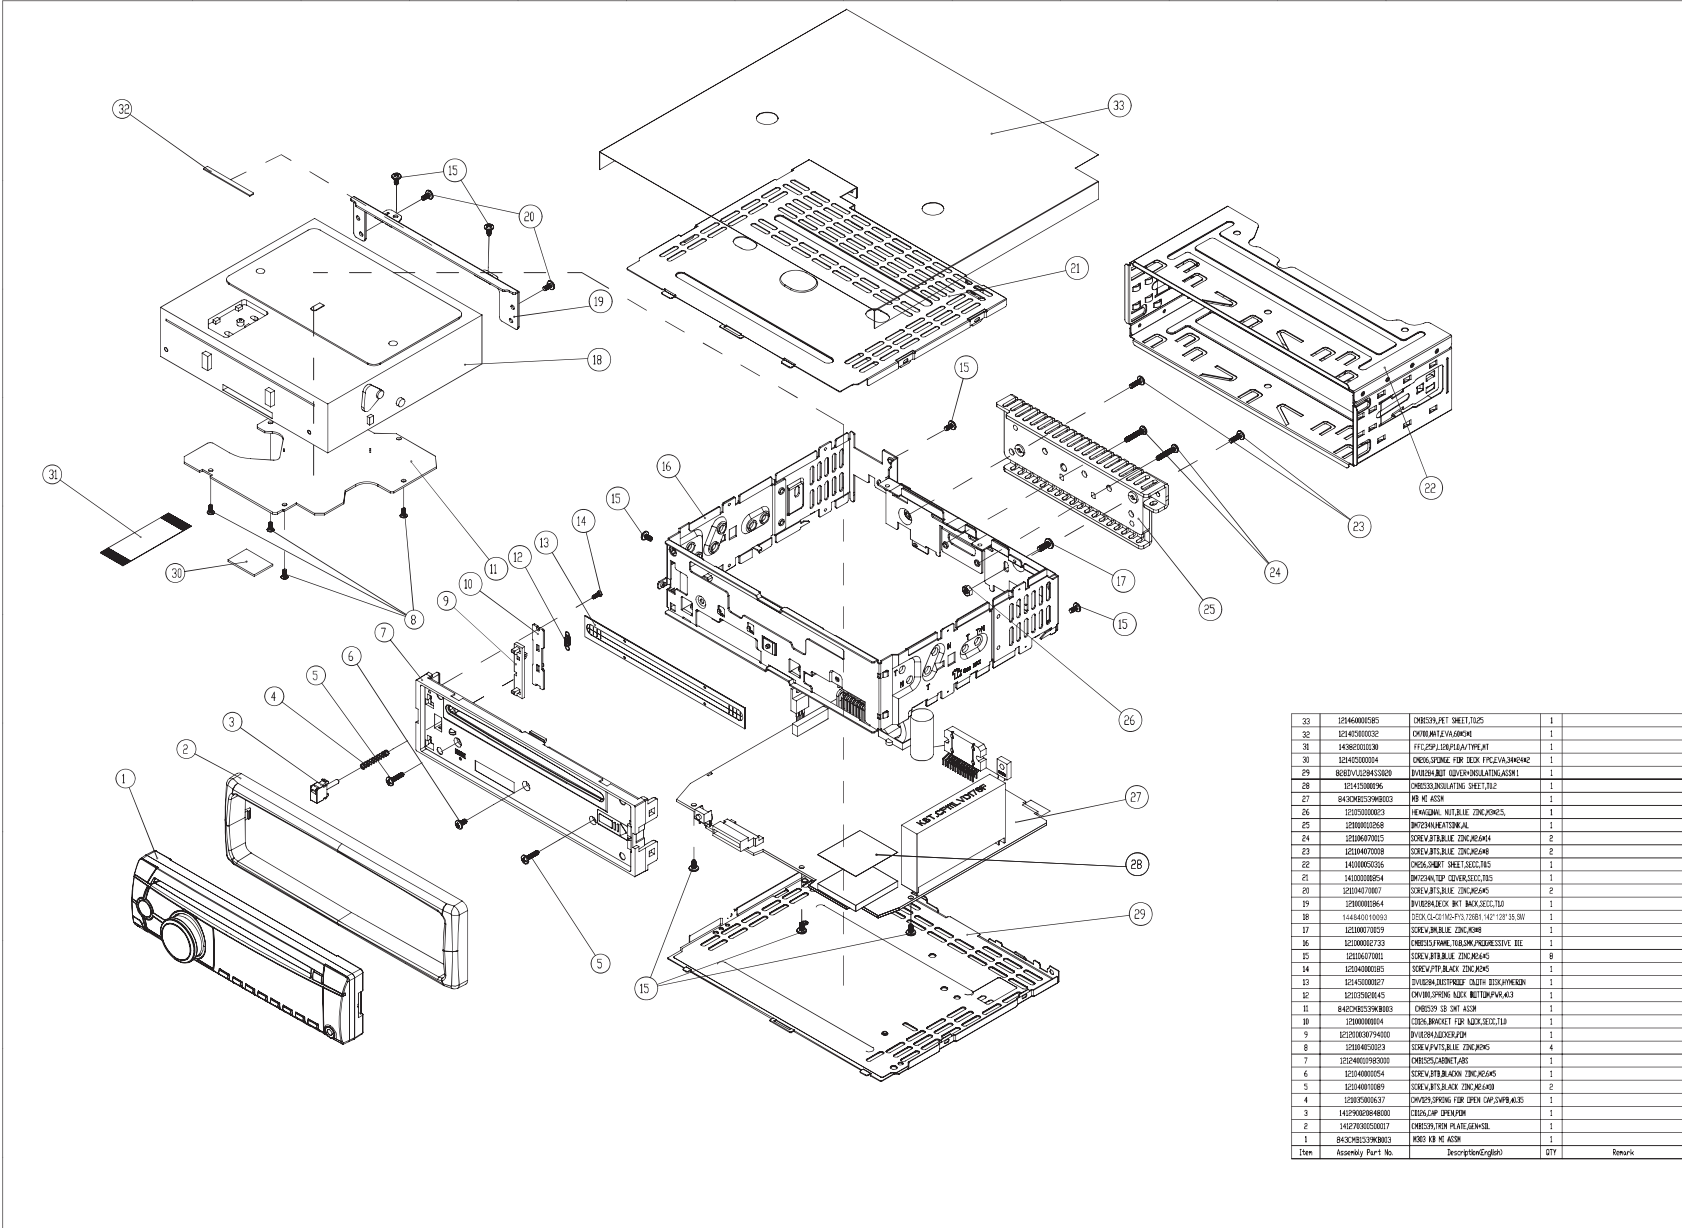

COMPONENTS VIEW / PARTS LIST

