


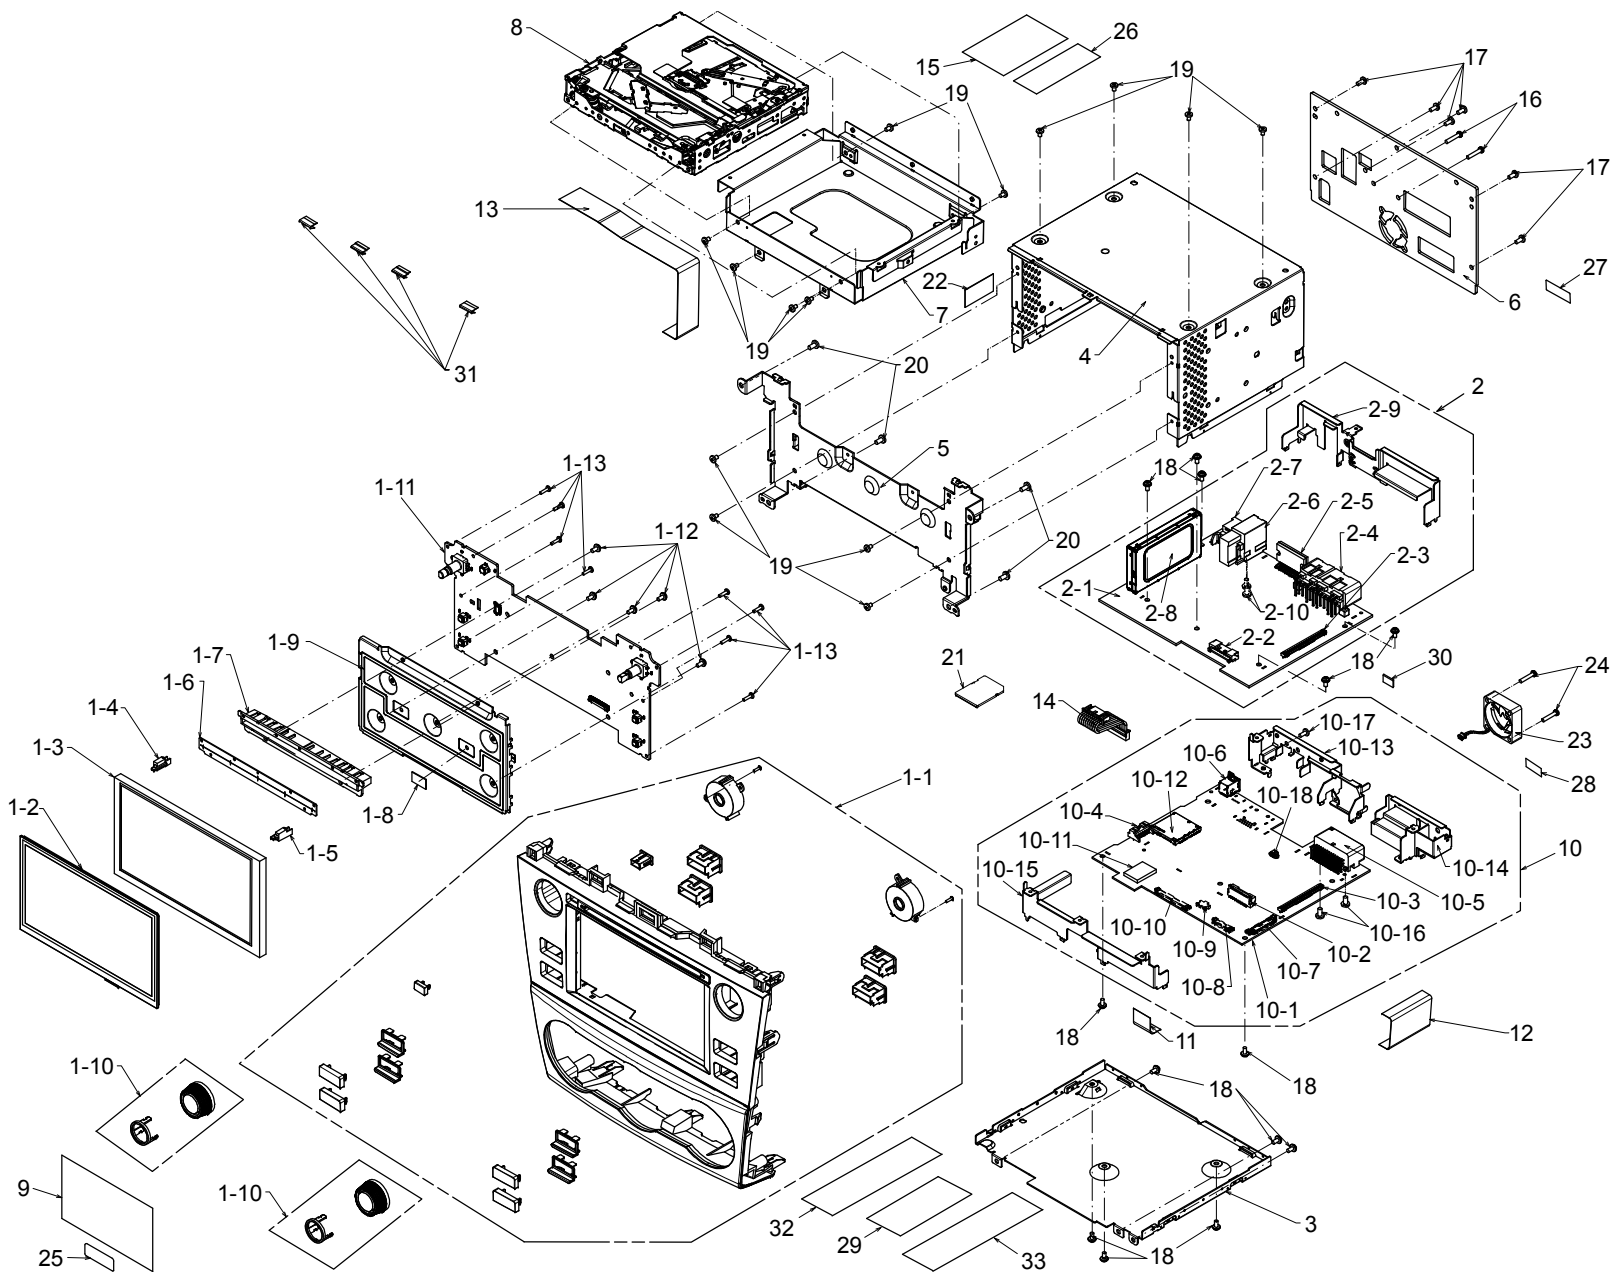

NO.	PART NO.	DESCRIPTION	Q'TY	NO.	PART NO.	DESCRIPTION	Q'TY
1	-----	*Unused number	-	10-7	074-2248-40	OUTLET SOCKET(40P)	1
1-1	940-8790-35	ES-ASSY(CM644UL)(for PF3678AA)	1	10-8	074-2248-30	OUTLET SOCKET(30P)	1
	940-8862-03	ES-ASSY(CM695UL)(for PF3678AB)	1	10-9	074-2249-04	OUTLET SOCKET(4P)	1
	940-8790-57	ES-ASSY(CM654UL)(for PF3755AA)	1	10-10	074-2248-60	OUTLET SOCKET(60P)	1
	940-8862-05	ES-ASSY(CM615UL)(for PF3755AB)	1	10-11	060-8162-90	BLUETOOTH MODULE	1
1-2	013-9745-00	TOUCH PANEL	1	10-12	074-8017-91	OUTLET SOCKET(16P)	1
1-3	379-0491-02	TFT	1	10-13	331-5533-03	PRESSED PART(BRKT-L)	1
1-4	335-9939-02	MOLDED PART(L)	1	10-14	331-5534-01	PRESSED PART(BRKT-R)	1
1-5	335-9938-02	MOLDED PART(R)	1	10-15	331-5586-01	PRESSED PART(BRKT-F)	1
1-6	346-0314-11	LEATHER SHEET	1	10-16	778-3006-00	TAP-SCREW	2
1-7	335-9937-00	MOLDED PART(DICS GUIDE)	1	10-17	714-2606-8B	MACHINE SCREW	1
1-8	331-3038-50	EARTH PLATE	1	10-18	076-0569-02	PLUG(2P)	1
1-9	331-5532-03	PRESSED PART(LCD HOLDER)	1	11	816-3135-55	FLAT WIRE(30P)	1
1-10	947-0863-02	KNOB ASSY	2	12	816-3105-55	FLAT WIRE(80P)	1
1-11	.990-1009A	SW PWB ASSY(3658B7-77)	1	13	816-3167-57	FLAT WIRE(40P)	1
1-12	716-0878-50	SPECIAL SCREW	5	14	854-4667-52	EXTENSION LEAD	1
1-13	716-0778-52	SPECIAL SCREW	8	15	-----	SETPLATE(113671-276)(for PF3678AA)	1
2	.990-1062A	MAIN PWB ASSY(3731A7-75)	1		-----	SETPLATE(153325-276)(for PF3678AB)	1
2-1	-----	MAIN PWB(461100-039)	1		-----	SETPLATE(113672-276)(for PF3755AA)	1
2-2	076-6021-60	PLUG(10P)	1		-----	SETPLATE(153327-276)(for PF3755AB)	1
2-3	074-2248-80	OUTLET SOCKET(80P)	1	16	714-2614-8B	MACHINE SCREW	2
2-4	074-1261-00	OUTLET SOCKET(10P+6P)	1	17	714-2606-8B	MACHINE SCREW	6
2-5	051-2077-00	IC	1	18	716-0878-50	SPECIAL SCREW	13
2-6	092-2260-00	ANT-RECEPT(RADIO)	1	19	714-2604-8B	MACHINE SCREW	14
2-7	-----	*Not mounted (ANT-RECEPT XM)	-	20	778-3006-51	TAP SCREW	4
2-8	-----	*Not mounted (XM TUNER)	-	21	.440-3679A	SD CARD(for PF3678AA, PF3755AA)	1
2-9	331-5535-04	BRKT-C	1		.440-3679B	SD CARD(for PF3678AB, PF3755AB)	1
2-10	778-3006-00	TAP-SCREW	2	22	347-9373-00	PAPER PART	1
3	311-2084-11	LOWER CASE	1	23	020-3066-00	DC-MOTOR	1
4	310-2026-12	UPPER CASE	1	24	732-2614-1B	SEMS SCREW	2
5	309-2002-01	FRONT PLATE	1	25	-----	*Not mounted (XM LABEL)	-
6	313-2194-12	HEAT SINK	1	26	-----	LABEL(HD)(075400-290)	1
7	331-5531-01	PRESSED PART(MECH BRKT)	1	27	290-0548-82	QR CODE LABEL(MR64)(for PF3678AA)	1
8	929-5400-80	CD-MECH-MODULE	1		290-0946-02	QR CODE LABEL(MR69)(for PF3678AB)	1
9	347-9449-02	PROTECTOR	1		290-0548-86	QR CODE LABEL(MR65)(for PF3755AA)	1
10	.990-1061A	NAVI PWB ASSY(3731A7-78)	1		290-0946-04	QR CODE LABEL(MR61)(for PF3755AB)	1
10-1	-----	NAVI PWB(448000-039)	1	28	347-9381-00	PROTECT-SHEET	1
10-2	076-6030-60	PLUG(10P)	1	29	-----	*Not mounted (LABEL)	-
10-3	074-2248-80	OUTLET SOCKET(80P)	1	30	-----	*Not mounted (GASKET)	-
10-4	076-6023-07	PLUG(7P)	1	31	347-9492-00	PAPER PART	4
10-5	074-1302-28	OUTLET SOCKET(28P)	1	32	-----	*Not mounted (LABEL)	-
10-6	074-4105-00	OUTLET SOCKET(4P)	1	33	-----	*Not mounted (BSMI LABEL)	-

< About the software of an SD card and the microcomputer>

- * The software of PF3678AA and PF3755AA is the same.
- The software of PF3678AB and PF3755AB is the same.

ELECTRICAL PARTS LIST / CIRCUIT DIAGRAM / PRINTED WIRING BOARD

- * Refer to the service manual of No.7672-01.