

EXPLODED VIEWS AND PARTS LIST

PACKING SECTION (Page 31)

PACKING SECTION PARTS LIST

**:Non spare part

Mark	No.	Description	DEH-S6100BS/XNUC	DEH-S6200BS/XNUC
*	1	Unit Box	QHG4394	QHG4536
	2	Contain Box	QHL4394	QHL4536
	5-1	Quick Start Guide	QRD3628	QRD3758
	5-2	Web IM	See Contents of Web IM	See Contents of Web IM

Mark	No.	Description	DEH-S6120BS/XNUC	DEH-S6220BS/XNUC
*	1	Unit Box	QHG4395	QHG4537
	2	Contain Box	QHL4395	QHL4537
	5-1	Quick Start Guide	QRD3628	QRD3758
	5-2	Web IM	See Contents of Web IM	See Contents of Web IM

Quick Start Guide

Part No.	Language
QRD3758	English, French, Spanish(Espanol)

CONTENTS OF WEB IM

Part No.	Language
* OPM_DEHS6200BSUC_3L_A	English, French, Spanish(Espanol)

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

EXTERIOR SECTION (Page 33)

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	DEH-S6100BS/XNUC	DEH-S6200BS/XNUC
D	1	Detach Grille Assy	QXA5621	QXA6164
	2	Keyboard Unit	QWM4984	QWM5096
	7	Grille Unit	QXA5531	QXA6304
	18	Plate	QNM3229	QNM3283
	25	Knob Unit	QXA5429	QXA6324
	36	Tuner Amp Unit	QWM4912	QWM5290

Mark	No.	Description	DEH-S6120BS/XNUC	DEH-S6220BS/XNUC
E	1	Detach Grille Assy	QXA5622	QXA6165
	2	Keyboard Unit	QWM4984	QWM5096
	7	Grille Unit	QXA5532	QXA6305
	18	Plate	QNM3229	QNM3283
	25	Knob Unit	QXA5429	QXA6324
	36	Tuner Amp Unit	QWM4911	QWM5291

CD MECHANISM MODULE (Page 35)

CD MECHANISM MODULE PARTS LIST

Mark	No.	Description	DEH-S6100BS/XNUC DEH-S6120BS/XNUC	DEH-S6200BS/XNUC DEH-S6220BS/XNUC
F	20	Pickup Unit(P10.6)(Service) for CXK5807	CXX3556	CXY3639

ELECTRICAL PARTS LIST (Page 61)

Tuner Amp Unit

Circuit Symbol and No.	Part Name	DEH-S6100BS/XNUC	DEH-S6200BS/XNUC
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	Flash ROM Unit	QVQ1050	QVQ1102
IC1302	Logic IC	TC7SH32FUS2	Not used
D1204	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1205	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1302	Rectifier Diode	RR1VWM4STF	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R113		XRS1/16SS682J	XRS1/16SS822J
R229		XRS1/16SS3902D	RS1/16SS393J
R242		XRS1/16SS4701D	RS1/16SS4701F
R519		XRS1/16SS271J	XRS1/16SS151J
R538		XRS1/16SS472J	XRS1/16SS103J
R539		Not used	XRS1/16SS473J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J
R857		Not used	RS1/16SS0R0J
R1305		Not used	RS1/16SS0R0J
R1309		RS1/8SQ0R0J	Not used
R1312		XRS1/16SS103J	XRS1/16SS272J
R1316		Not used	XRS1/10SR0R0J
R1416		XRS1/10SR0R0J	Not used
R1432		Not used	RS1/16SS0R0J
C246		CKSRYX104K50	Not used
C267		CKSSYB104K16	Not used
C723		CKSSYB102K50	CCSSCH120J50
C794		CCSSCH101J50	CCSSCH121J50
C855		Not used	CCSSCH7R0D50
C857		CKSSYX104K50	CCSSCH120J50
C1201		CCG1345	CKSRYB104K25
C1202		CKSSYX104K50	Not used
C1255		CKSSYB331K50	CCSSCH471J50
C1276		CKSSYB104K16	Not used
C1277		CKSSYB104K16	Not used
C1280		CKSSYB102K50	CCSSCH121J50
C1281		CKSSYB102K50	CCSSCH121J50
C1305		CKSSYB104K10	Not used
C1425		Not used	CKSRYB103K50
C1426		Not used	CKSSYB103K25

Circuit Symbol and No.	Part Name	DEH-S6120BS/XNUC	DEH-S6220BS/XNUC
IC711	RAM IC	M12L128168A-5TG2N	W9812G6KH-5
IC741	Flash ROM Unit	QVQ1050	QVQ1102
IC1302	Logic IC	TC7SH32FUS2	Not used

A

B

C

D

E

Circuit Symbol and No.	Part Name	DEH-S6120BS/XNUC	DEH-S6220BS/XNUC
D1204	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1205	Zener Diode	UDZV18(B)	UDZV6R2(B)
D1302	Rectifier Diode	RR1VWM4STF	Not used
P1276	Poly Switch	FSMD075-24R	Not used
R113		XRS1/16SS682J	XRS1/16SS822J
R229		XRS1/16SS3902D	RS1/16SS393J
R242		XRS1/16SS4701D	RS1/16SS4701F
R519		XRS1/16SS271J	XRS1/16SS151J
R538		Not used	XRS1/16SS473J
R539		XRS1/16SS473J	XRS1/16SS103J
R591		XRS1/16SS361J	XRS1/16SS221J
R610		Not used	XRS1/16SS222J
R702		XRS1/16SS472J	XRS1/16SS152J
R857		Not used	RS1/16SS0R0J
R1305		Not used	RS1/16SS0R0J
R1309		RS1/8SQ0R0J	Not used
R1312		XRS1/16SS103J	XRS1/16SS272J
R1316		Not used	XRS1/10SR0R0J
R1416		XRS1/10SR0R0J	Not used
R1432		Not used	RS1/16SS0R0J
C246		CKSRYX104K50	Not used
C267		CKSSYB104K16	Not used
C723		CKSSYB102K50	CCSSCH120J50
C794		CCSSCH101J50	CCSSCH121J50
C855		Not used	CCSSCH7R0D50
C857		CKSSYX104K50	CCSSCH120J50
C1201		CCG1345	CKSRYB104K25
C1202		CKSSYX104K50	Not used
C1255		CKSSYB331K50	CCSSCH471J50
C1276		CKSSYB104K16	Not used
C1277		CKSSYB104K16	Not used
C1280		CKSSYB102K50	CCSSCH121J50
C1281		CKSSYB102K50	CCSSCH121J50
C1305		CKSSYB104K10	Not used
C1425		Not used	CKSRYB103K50
C1426		Not used	CKSSYB103K25

Keyboard Unit

F

Circuit Symbol and No.	Part Name	DEH-S6100BS/XNUC DEH-S6120BS/XNUC	DEH-S6200BS/XNUC DEH-S6220BS/XNUC
IC1851	IR RC REC Module	PNJ4833M	SIR8440B5
D1922	Zener Diode	Not used	RSB6R8SM
D1923	Zener Diode	Not used	RSB6R8SM
D1951	LED	NSSM124F-A21107	NSSM124F-A27847
D1952	LED	NSSM124F-A21107	NSSM124F-A27847
D1953	LED	NSSM124F-A21107	NSSM124F-A27847

Circuit Symbol and No.	Part Name	DEH-S6100BS/XNUC DEH-S6120BS/XNUC	DEH-S6200BS/XNUC DEH-S6220BS/XNUC
D1954	LED	NSSM124F-A21107	NSSM124F-A27847
D1955	LED	NSSM124F-A21107	NSSM124F-A27847
R1802		XRS1/10SR472J	RS1/10SR472J
R1821		XRS1/10SR273J	RS1/10SR273J
R1854		XRS1/10SR101J	RS1/10SR101J
R1921		XRS1/10SR221J	RS1/10SR221J
R1922		XRS1/10SR221J	RS1/10SR221J
R1923		XRS1/10SR0R0J	RS1/10SR0R0J
R1941		XRS1/10SR222J	RS1/10SR222J
R1942		XRS1/10SR222J	RS1/10SR222J
R1943		XRS1/10SR222J	RS1/10SR222J
R1944		XRS1/10SR222J	RS1/10SR222J
R1951		XRS1/10SR332J	RS1/10SR332J
R1952		XRS1/10SR152J	RS1/10SR152J
R1953		XRS1/10SR332J	RS1/10SR332J
R1954		XRS1/10SR152J	RS1/10SR152J
R1955		XRS1/10SR332J	RS1/10SR332J
R1956		XRS1/10SR152J	RS1/10SR152J
R1957		XRS1/10SR680J	RS1/10SR680J
R1958		XRS1/10SR680J	RS1/10SR680J
R1959		XRS1/10SR680J	RS1/10SR680J
R1960		XRS1/10SR332J	RS1/10SR332J
R1961		XRS1/10SR152J	RS1/10SR152J
R1962		XRS1/10SR332J	RS1/10SR332J
R1963		XRS1/10SR152J	RS1/10SR152J
R1964		XRS1/10SR332J	RS1/10SR332J
R1965		XRS1/10SR152J	RS1/10SR152J
R1966		XRS1/10SR680J	RS1/10SR680J
R1967		XRS1/10SR680J	RS1/10SR680J
R1968		XRS1/10SR680J	RS1/10SR680J
R1969		XRS1/10SR221J	RS1/10SR221J
R1970		XRS1/10SR121J	RS1/10SR121J
R1971		XRS1/10SR121J	RS1/10SR121J

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.