
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

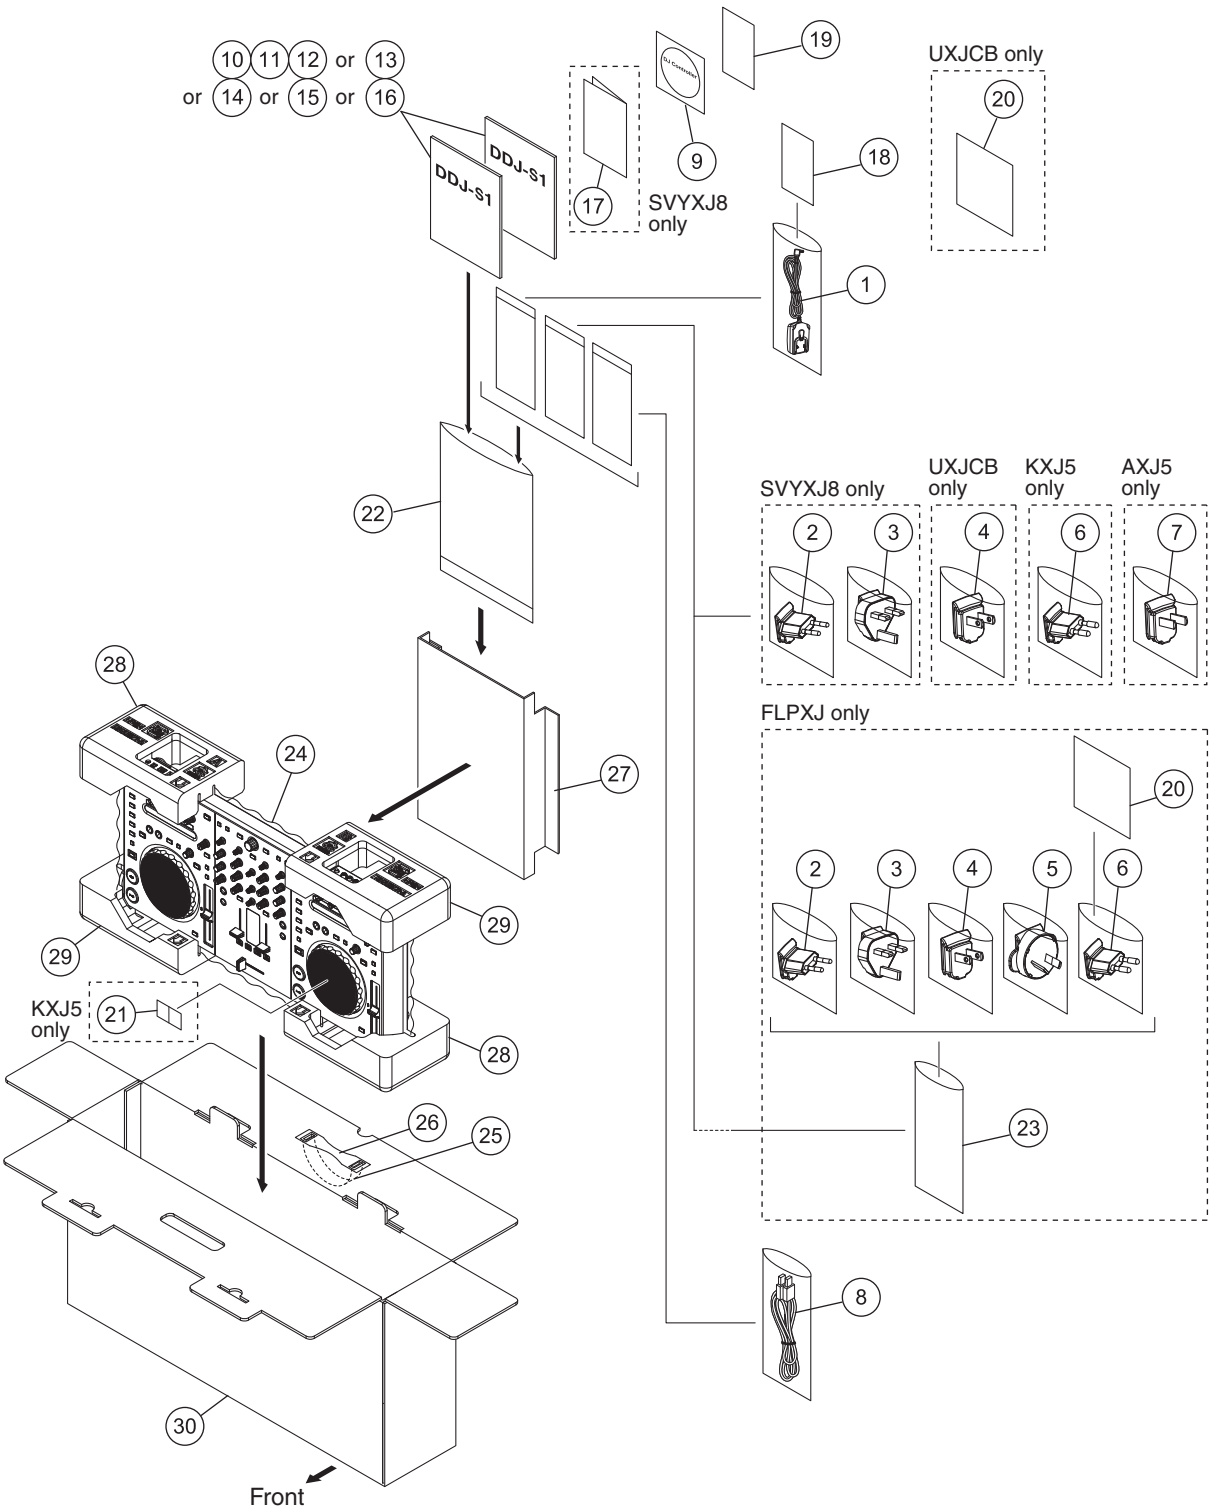

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
⚠	1	AC Adapter	DWR1506
⚠	2	Power Plug (EU)	See Contrast table (2)
⚠	3	Power Plug (UK)	See Contrast table (2)
⚠	4	Power Plug (US)	See Contrast table (2)
⚠	5	Power Plug (AUS)	See Contrast table (2)
⚠	6	Power Plug (KO)	See Contrast table (2)
⚠	7	Power Plug (CHI)	See Contrast table (2)
	8	USB Cable	DDE1128
	9	CD-ROM	DXX2662
	10	Operating Instructions	See Contrast table (2)
	11	Operating Instructions	See Contrast table (2)
	12	Operating Instructions	See Contrast table (2)
	13	Operating Instructions	See Contrast table (2)
	14	Operating Instructions	See Contrast table (2)
	15	Operating Instructions	See Contrast table (2)
	16	Operating Instructions	See Contrast table (2)
NSP	17	Warranty Card	See Contrast table (2)
	18	Caution Card/ADP	DRM1345
	19	Caution Card/VUP	DRM1355
	20	Caution Card/PLG	See Contrast table (2)
	21	Recycle Label (M)	See Contrast table (2)
NSP	22	Polyethylene Bag	AHG7117
	23	Vinyl Bag	See Contrast table (2)
	24	Packing Sheet	RHC1023
	25	Plastic Handle (PE)	VEC2292
	26	Spacer (PE)	VEC2293
	27	Accessary Pad	DHA1875
	28	Pad A	DHA1871
	29	Pad B	DHA1872
	30	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-S1/SVYXJ8, UXJCB, FLPXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-S1 /SVYXJ8	DDJ-S1/ UXJCB	DDJ-S1/ FLPXJ	DDJ-S1/ KXJ5	DDJ-S1/ AXJ5
⚠	2	Power Plug (EU)	DKX1048	Not used	DKX1048	Not used	Not used
⚠	3	Power Plug (UK)	DKX1049	Not used	DKX1049	Not used	Not used
⚠	4	Power Plug (US)	Not used	DKX1047	DKX1047	Not used	Not used
⚠	5	Power Plug (AUS)	Not used	Not used	DKX1050	Not used	Not used
⚠	6	Power Plug (KO)	Not used	Not used	DKX1051	DKX1051	Not used
⚠	7	Power Plug (CHI)	Not used	Not used	Not used	Not used	DKX1052
	10	Operating Instructions (En/Fr/De)	DRB1552	Not used	Not used	Not used	Not used
	11	Operating Instructions (It/Nl)	DRB1553	Not used	Not used	Not used	Not used
	12	Operating Instructions (Es, Ru)	DRB1566	Not used	Not used	Not used	Not used
	13	Operating Instructions (En)	Not used	DRB1551	Not used	Not used	Not used
	14	Operating Instructions (En/Es/Zhtw)	Not used	Not used	DRB1554	Not used	Not used
	15	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1556	Not used
	16	Operating Instructions (Zhcn/En)	Not used	Not used	Not used	Not used	DRB1555
NSP	17	Warranty Card	ARY7107	Not used	Not used	Not used	Not used
	20	Caution Card/PLG	Not used	Not used	DRM1346	Not used	Not used
	21	Recycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
	23	Vinyl Bag	Not used	Not used	Z21-013	Not used	Not used
	30	Packing Case	DHG3012	DHG3013	DHG3014	DHG3017	DHG3015

9.2 EXTERIOR SECION

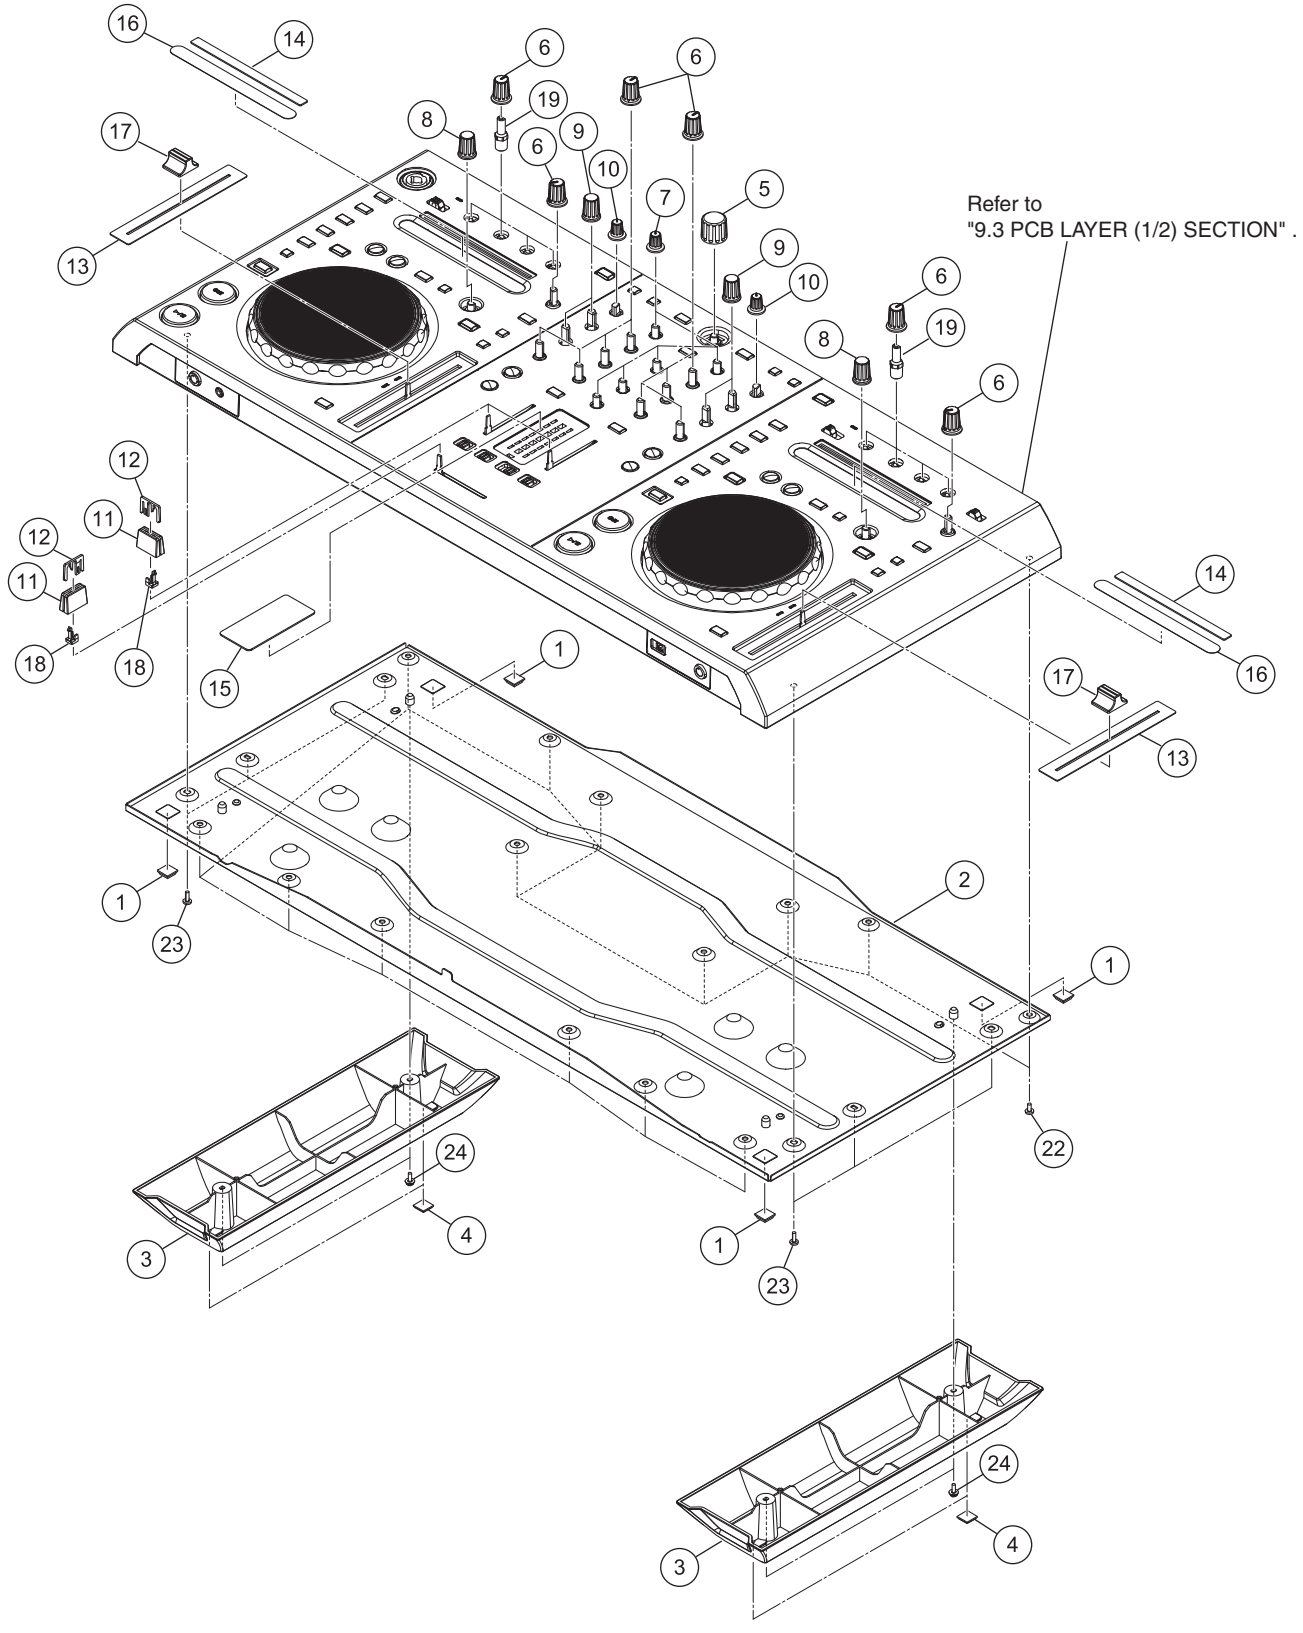


EXTERIOR SECION SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Rubber Foot (H6)	DEB1996
	2	Chassis CU	DNA1425
	3	Foot	DNK5864
	4	Rubber Foot	VEB1349
	5	Dial Knob	DAA1259
	6	Rotary Knob L (Black)	DAA1284
	7	Rotary Knob S (Black)	DAA1262
	8	Dial Knob S (B)	DAA1273
	9	Dial Knob S2 (B)	DAA1274
	10	Rotary Knob S2 (B)	DAA1275
	11	Slider Knob 1	DAC2684
	12	Slider Knob 2	DAC2685
	13	Slide Sheet 1C	DAH2404
	14	Address Plate	DAH2849
	15	Level Plate	DAH2851
	16	CDC Sheet	DEC3357
	17	Slide Knob (Metal)	DNK5876
	18	Slider Knob Stopper	DNK5888
	19	Shaft/EXT	DNK5980
	20	•••••	
	21	•••••	
	22	Screw	BBZ30P060FTC
	23	Screw	BPZ30P080FNI
	24	Screw	PMB30P080FTB

9.3 PCB LAYER SECTION (1/2)

• Bottom view

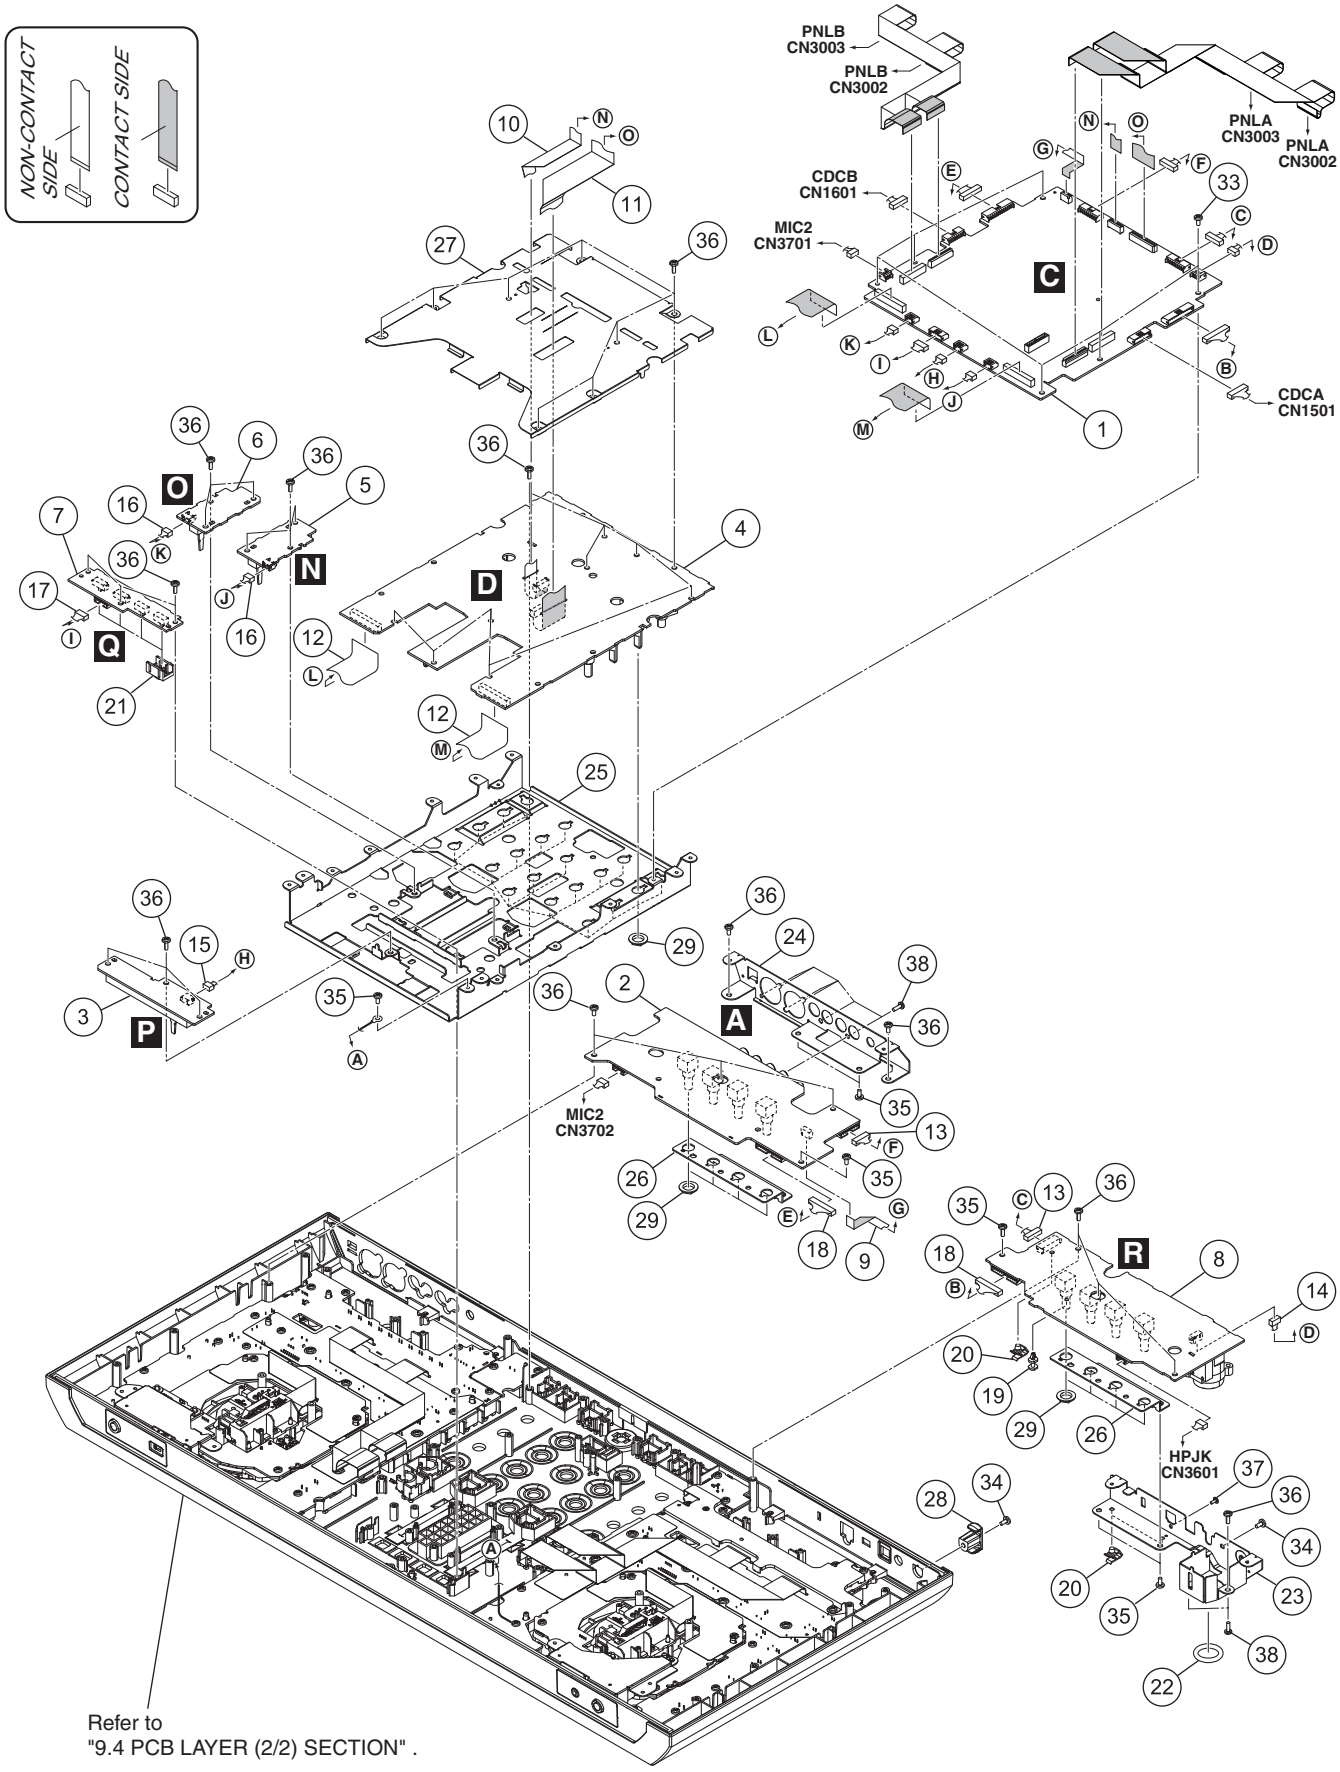


PCB LAYER SECTION (1/2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3227
	2	JACK Assy	DWX3230
	3	CROS Assy	DWX3246
	4	DJMB Assy	DWX3243
	5	CHF1 Assy	DWX3244
	6	CHF2 Assy	DWX3245
	7	MSWB Assy	DWX3247
	8	POWB Assy	DWX3248
	9	FFC/6P	DDD1562
	10	FFC/11P	DDD1572
	11	FFC/23P	DDD1573
	12	FFC/27P	DDD1574
	13	Crimp Connector/9P	DKP3907
	14	Crimp Connector/4P	DKP3910
	15	Connector Assy	PF03PP-B05
	16	Connector Assy	PF03PP-B07
	17	Crimp Connector	PF06PP-B05
	18	Connector Assy	PF13PP-D07
NSP	19	PCB Spacer	AEC1371
	20	Mini Clamp	AEC7507
	21	Cap/FDR	DAC2771
	22	Blind/MIC	DEC3369
	23	Rear Stay L	DNH2969
	24	Rear Stay R	DNH2970
	25	VR Stay L	DNH2971
	26	VR Stay M	DNH2972
	27	Shield Plate/M	DNH2983
	28	Cord Hook	DNK5928
	29	Flange Nut M9	DBN1008
	30	•••••	
	31	•••••	
	32	•••••	
	33	Screw	ABZ30P060FTC
	34	Screw	BBZ30P060FTB
	35	Screw	BBZ30P060FTC
	36	Screw	BPZ30P080FNI
	37	Screw (M3*5)	DBA1340
	38	Screw	PPZ30P080FTB

9.4 PCB LAYER SECTION (2/2)

• Bottom view

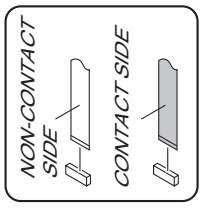


※
Either the CDCA Assy or CDCB Assy is assembled here.
The CDCA Assy and CDCB Assy are interchangeably used and handled similarly in their production management.

PCB LAYER SECTION (2/2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	PNLA Assy	DWX3231
	2	PNLB Assy	DWX3237
	3	CDCA Assy	DWX3228
	4	CDCB Assy	DWX3229
	5	LEDB Assy	DWX3240
	6	HPJB Assy	DWX3241
	7	MIC2 Assy	DWX3242
	8	LODA Assy	DWX3249
	9	LODB Assy	DWX3250
	10	FFC/21P	DDD1566
	11	FFC/22P	DDD1567
	12	FFC/19P	DDD1568
	13	FFC/22P	DDD1569
NSP	14	Cord with Plug	DE005VF0
	15	Connector Assy	PF08PP-B10
	16	Crimp Connector	PF08PP2B20
	17	Crimp Connector/3P	DKP3908
	18	Crimp Connector/5P	DKP3909
	19	Crimp Connector/4P	DKP3911
	20	SW Cap	DAC2753
	21	Slide Sw Packing (B)	DEC2590
	22	FFC Guard A	DEC3358
	23	FFC Guard B	DEC3359
	24	FFC Guard J	DEC3361
	25	Slit/SV	DEC3368
	26	Front Stay L	DNH2959
	27	Front Stay R	DNH2960
	28	VR Stay S	DNH2964
	29	Shield Plate/A	DNH2979
	30	Lens	DNK5862
	31	CDC Stopper	DNK5863
	32	Cord Clamper (Steel)	RNH-184
	33	Flange Nut M9	DBN1008
	34	Nut M12	DBN1018
	35	•••••	
	36	•••••	
	37	Screw	BBZ30P060FTC
	38	Screw	BPZ30P080FNI
	39	Screw	BPZ30P100FTB

9.5 BUTTON LAYER SECTION

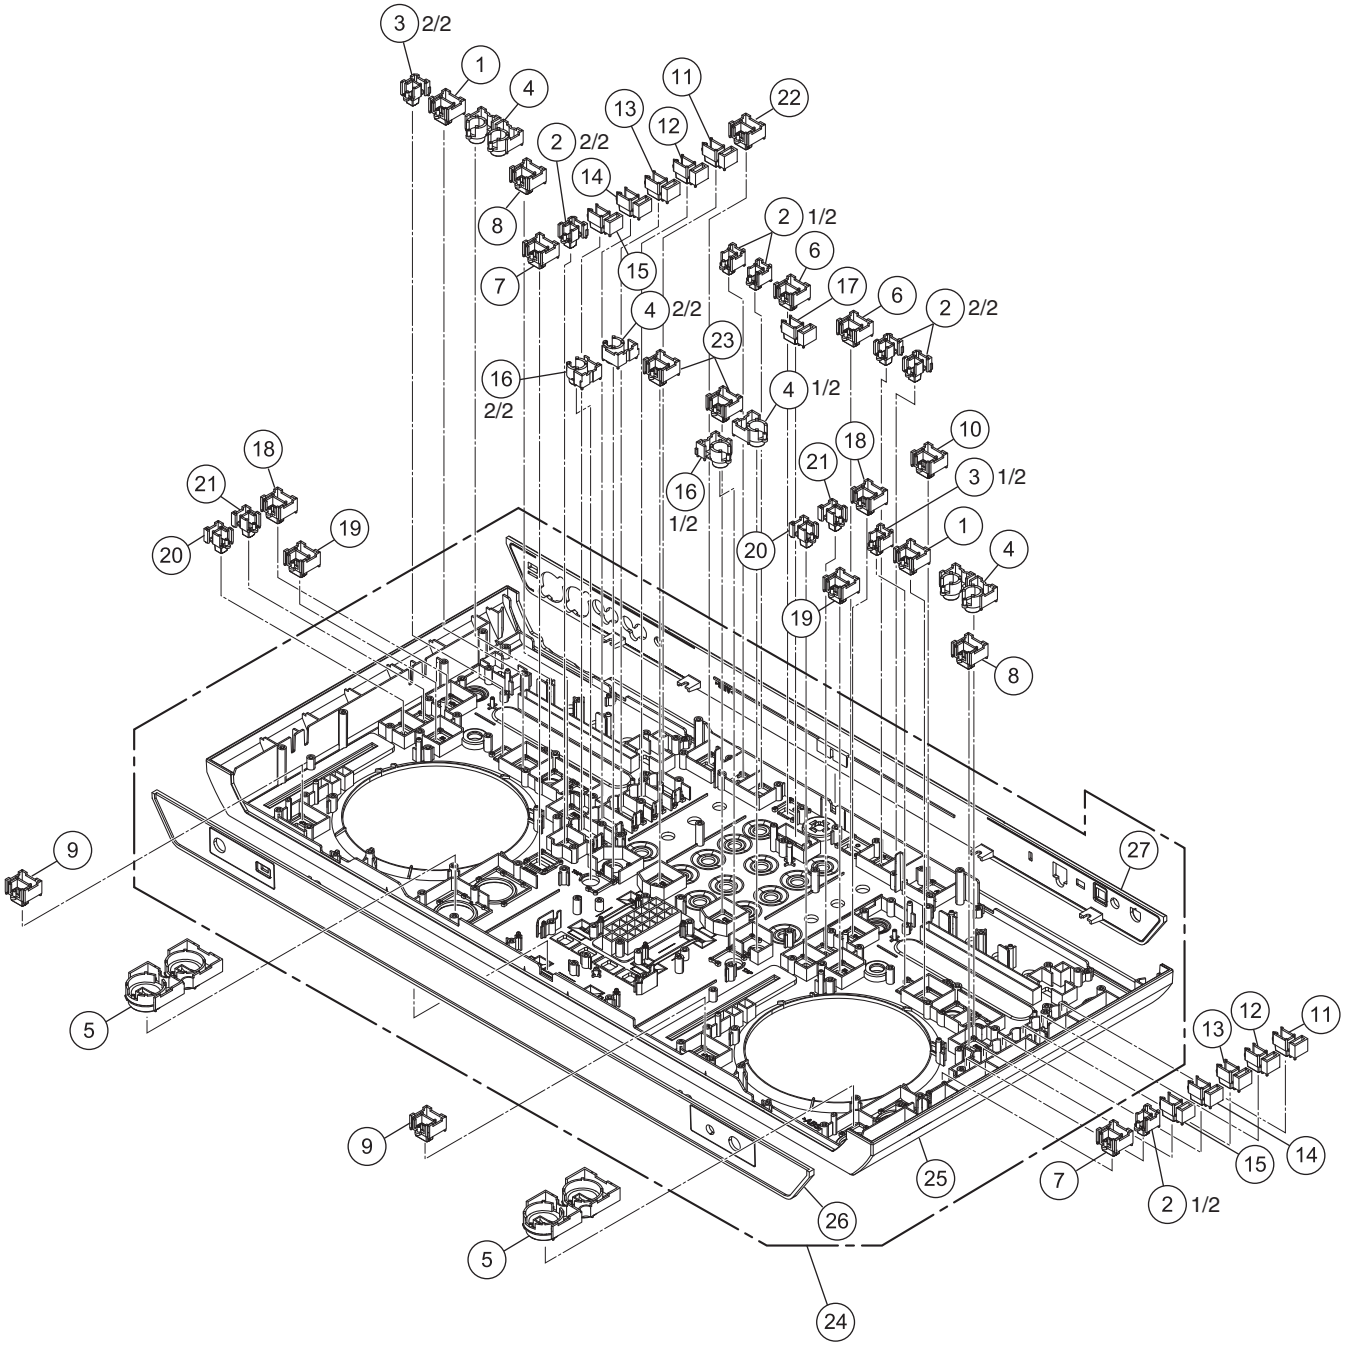

(1) BUTTON LAYER SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Button L (Opal)	DAC2657
	2	Button S (Opal)	DAC2662
	3	Button S (Black)	DAC2663
	4	Loop Button	DAC2671
	5	Play Button	DAC2682
	6	Button L (Black)	DAC2738
	7	Shift Button	DAC2740
	8	Rev Button	DAC2741
	9	Sync Button	DAC2742
	10	Load A Button	DAC2743
	11	HC1 Button	DAC2744
	12	HC2 Button	DAC2745
	13	HC3 Button	DAC2746
	14	HC4 Button	DAC2747
	15	HC5 Button	DAC2748
	16	TAP Button	DAC2749
	17	Button L Opal 1	DAC2750
	18	Vinyl Button	DAC2751
	19	Slip Button	DAC2752
	20	Button S (Opal) 1H	DAC2754
	21	Button S (Black) 1H	DAC2755
	22	Load B Button	DAC2756
	23	CUE Button	DAC2757
	24	1..Panel Assy/SY	See Contrast table (2)
	25	2..Control Panel	DNK5930
	26	2..Front Panel	DNK5931
	27	2..Rear Panel SY	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-S1/SVYXJ8, UXJCB, FLPXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-S1/ SVYXJ8	DDJ-S1/ UXJCB	DDJ-S1/ FLPXJ	DDJ-S1/ KXJ5	DDJ-S1/ AXJ5
	24	1..Panel Assy/SY	DXB2112	DXB2111	DXB2111	DXB2116	DXB2114
	27	2..Rear Panel SY	DNK5932	DNK5933	DNK5933	DNK5937	DNK5935

9.6 JOG SECTION

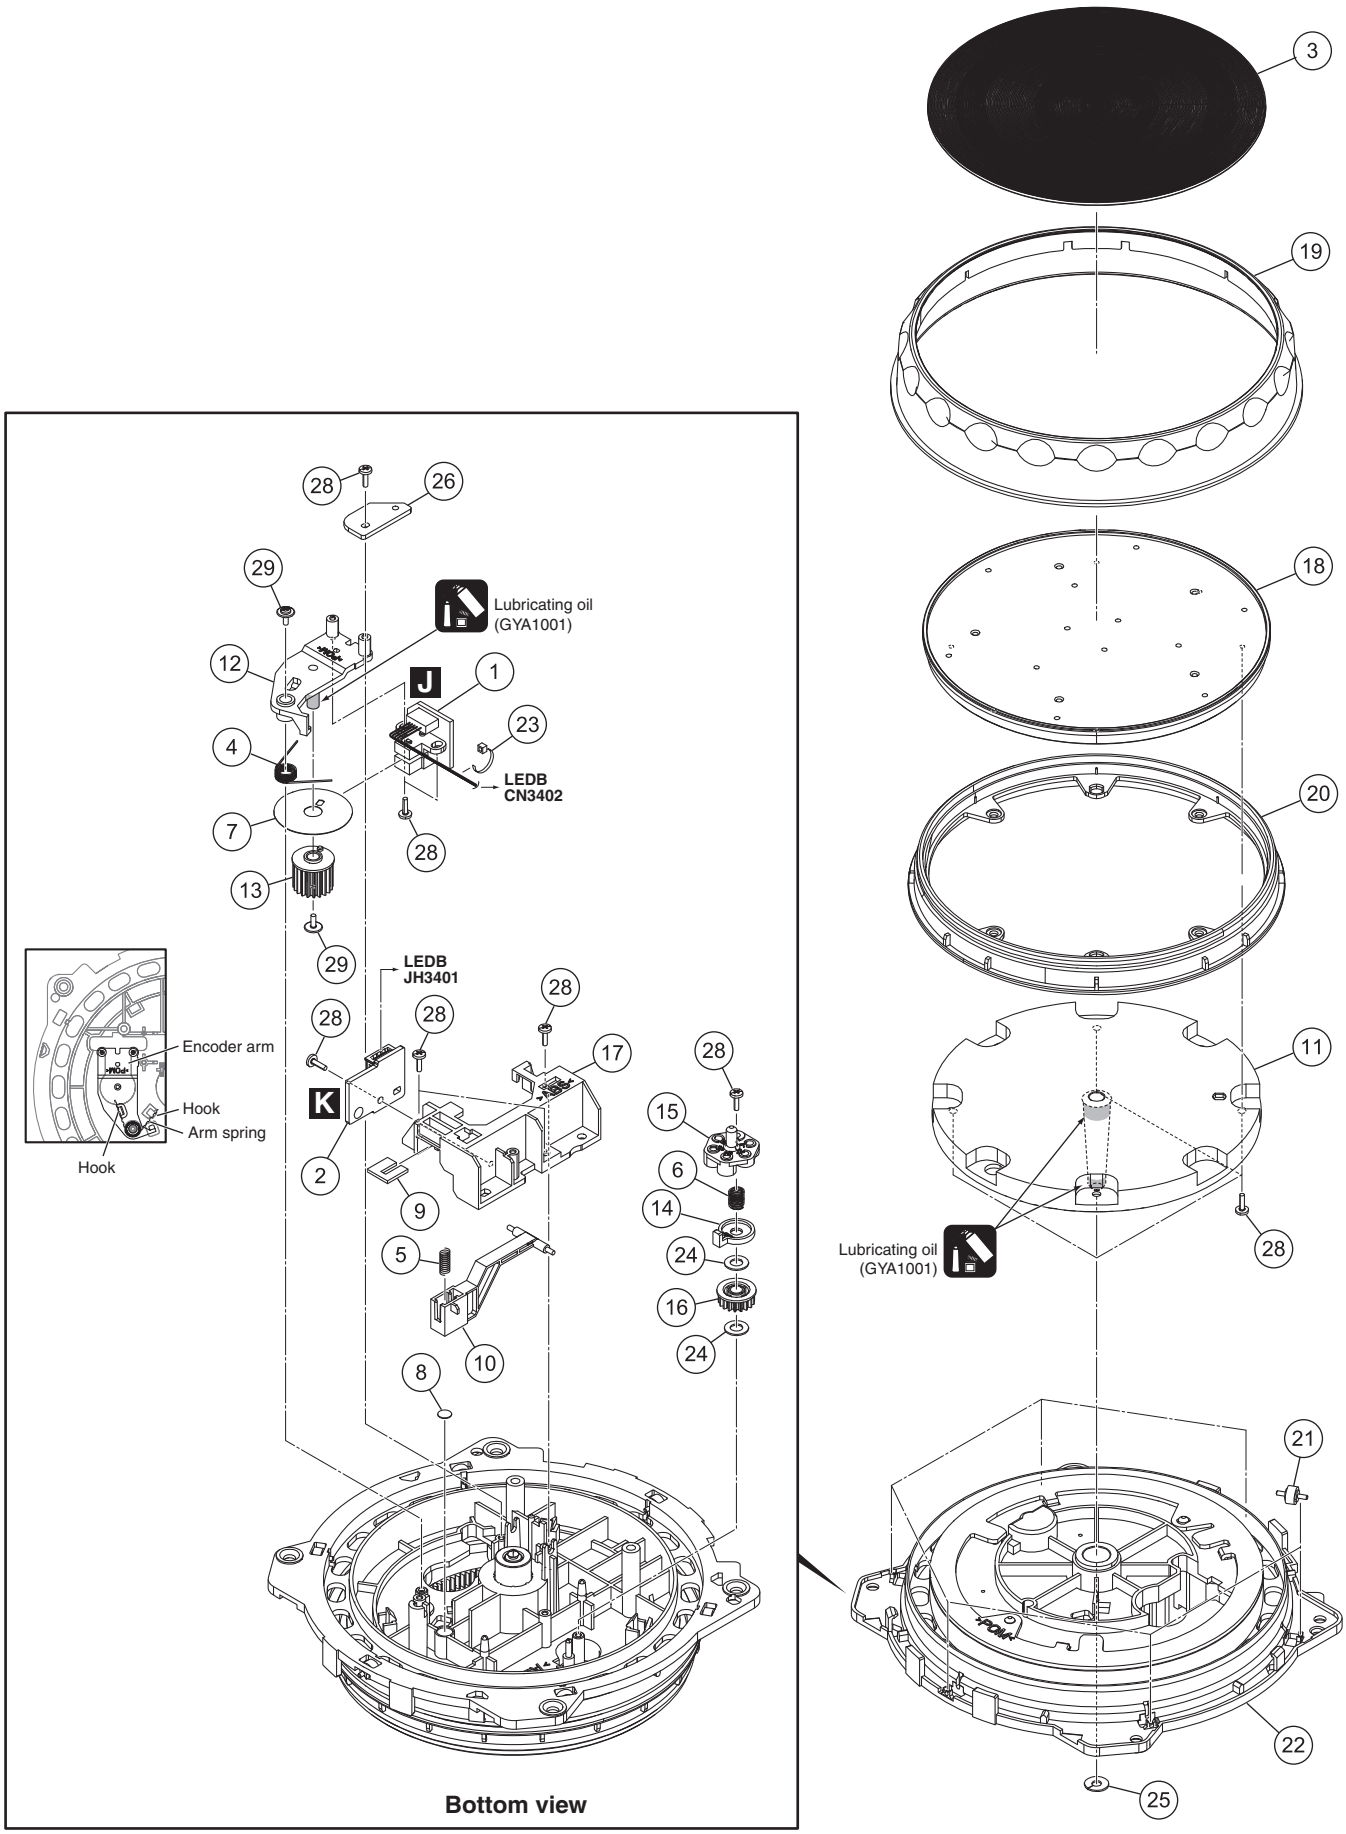

JOG SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	JOGB Assy	DWX3238
	2	TCHB Assy	DWX3239
	3	JOG Plate	DAH2858
	4	Arm Spring	DBH1612
	5	Lever Spring	DBH1626
	6	Load Spring	DBH1676
	7	Encorder Plate	DEC2889
	8	Lever Cushion (A)	DEC3001
	9	Lever Cushion (B)	DEC3002
	10	JOG Lever	DNK4763
	11	JOG Shaft	DNK4934
	12	Encorder Arm	DNK4936
	13	Encorder Gear	DNK4937
	14	Load Smoother	DNK4939
	15	Adjust Plate	DNK4943
	16	Load Gear	DNK5178
	17	Lever Holder	DNK5206
	18	JOG Dial A	DNK5860
	19	JOG Dial B	DNK5861
	20	Ring Lens	DNK5945
	21	Roller B Assy	DXB1877
	22	JOG Holder Assy	DXB2002
	23	Binder	ZCA-SKB90BK
	24	Washer	WA41D070D025
	25	Washer	WT32D080D050
	26	STPB Assy	DWX3280
	27	•••••	
	28	Screw	BPZ20P060FTC
	29	Screw (FE)	DBA1265

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω	→	*56 × 10[1]*	→	*561* ····· *RD1/4PU 5 6 1 J*
47 kΩ	→	*47 × 10[3]*	→	*473* ····· *RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50*		····· *RN2H R 5 0 K*
1 Ω	→	*1R0*		····· *RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ	→	*562 × 10[1]*	→	*5621* ····· *RN1/4PC 5 6 2 1 F*

● *Meaning of the figures and others in the parentheses in the parts list.*
Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.
IC 301 (A, 91, 111) IC NJM2068V

LIST OF ASSEMBLIES

Mark	No.	Description	Part No.
NSP	1	..MAJA ASSY	DWM2429
	2	..MAIN ASSY	DWX3227
	2	..CDCA ASSY	DWX3228
	2	..CDCB ASSY	DWX3229
	2	..JACK ASSY	DWX3230
NSP	1	..CDJA ASSY	DWM2430
	2	..PNLA ASSY	DWX3231
	2	..JOGB ASSY	DWX3238
	2	..TCHB ASSY	DWX3239
	2	..LEDB ASSY	DWX3240
	2	..LODA ASSY	DWX3249
	2	..STPB ASSY	DWX3280
NSP	1	..CDJB ASSY	DWM2431
	2	..PNLB ASSY	DWX3237
	2	..JOGB ASSY	DWX3238
	2	..TCHB ASSY	DWX3239
	2	..LEDB ASSY	DWX3240
	2	..HPJB ASSY	DWX3241
	2	..MIC2 ASSY	DWX3242
	2	..CROS ASSY	DWX3246
	2	..LODB ASSY	DWX3250
	2	..STPB ASSY	DWX3280
NSP	1	..DJMP ASSY	DWM2432
	2	..DJMB ASSY	DWX3243
	2	..CHF1 ASSY	DWX3244
	2	..CHF2 ASSY	DWX3245
	2	..MSWB ASSY	DWX3247
	2	..POWB ASSY	DWX3248

A JACK ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	IC	1701,1703,1708-1711	NJM4565MD
	IC	1704,1705	NJM2121MD
	IC	1801-1803	NJM4580MD
⚠	IC	1901,1902	BD9851EFV
⚠	IC	1903	BA00BC0WFP
	Q	1705	LTC124EUB
	Q	1801-1805,1807,1809	INC2002AC1
	Q	1811,1813-1816	INC2002AC1
	Q	1901,1904,1910,1912	RTQ040P02
	Q	1902,1911,1913	RTQ045N03
	Q	1903	RT1P141M
	Q	1905,1909,1914	LTC114EUB
	Q	1906	LSC4081UB
	Q	1907	LSA1576UB
	Q	1908	RT1P241M-11
	D	1901-1904	RB160L-40
	D	1905-1907	1SS352
MISCELLANEOUS			
	L	1901,1902 POWER INDUCTOR	ATH7047
	L	1903,1904 POWER INDUCTOR	ATH7011
	L	1905-1908 CHIP INDUCTOR	DTL1189
	JA	1701,1803 PIN JACK (2P)	AKB7181
	JA	1801,1802 CANON CONNECTOR	DKB1093
	KN	1901 EARTH TERMINAL	AKF7002
	VR	1701 POTENTIOMETER	DCS1115
	VR	1702 ROTARY VR	DCS1072
	VR	1703-1705 VARIABLE RESISTOR	DCS1100
	S	1801 SLIDE SWITCH	DSH1072
	CN	1701 L-PLUG (5P)	KM200NA5L
	CN	1801 L-PLUG (9P)	KM200NA9L
	CN	1802 6P CONNECTOR	VKN1237
	CN	1901 L-PLUG (13P)	KM200NA13L
⚠	P	1901,1902 PROTECTOR (1A) (1 A)	AEK1073
RESISTORS			
	R	1812,1837,1839,1846	RN1/16SE3901D
	R	1821,1823,1825,1827	RN1/16SE1002D
	R	1822,1824,1826,1828	RN1/16SE9101D
	R	1829-1832	RN1/16SE1101D
	R	1906,1909,1918	RS1/4SA682J
	R	1911,1965	RS1/10SR1202D
	R	1913,1964	RS1/10SR1003D
	R	1914,1915,1921,1948	RS1/10SR1502D
	R	1923	RS1/10SR1803D
	R	1932,1945,1950	RS1/10SR1002D

Mark	No.	Description	Part No.
	R	1934,1944	RS1/10SR1802D
	R	1935	RS1/10SR8202D
	R	1936	RS1/10SR8201D
	R	1946,1954	RS1/10SR3002D
	R	1947,1955	RS1/10SR6802D
	R	1949	RS1/10SR6201D
	R	1951	RS1/10SR1203D
	R	1952	RS1/10SR2202D
	R	1966	RS1/10SR4702D
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	1706,1707,1951	CCSRCH221J50
	C	1708,1711,1716,1721	CEJQ100M35
	C	1709,1710,1979	CCSRCH181J50
	C	1712,1718,1735,1741	CEJQ470M16
	C	1713,1715,1752,1754	CKSRYB103K50
	C	1714,1717,1731,1734	CKSRYB104K50
	C	1722,1724,1729,1745	CEJQ100M35
	C	1736,1737,1740,1742	CKSRYB104K50
	C	1746,1749-1751,1753	CEJQ100M35
	C	1755,1756,1759,1760	CKSRYB104K50
	C	1757,1758,1905,1907	CKSRYB103K50
	C	1761,1762	CCSRCH220J50
	C	1763,1764,1767,1768	CKSRYB104K50
	C	1765,1766	CKSRYB683K16
	C	1770-1772,1803	CKSRYB104K50
	C	1773,1774	CCSRCH101J50
	C	1801,1802,1826-1831	CEJQ470M16
	C	1808,1809,1818,1823	CEJQ101M16
	C	1810-1817	CCSRCH820J50
	C	1819-1822,1824,1825	CKSRYB104K50
	C	1832,1833,1836,1837	DCE1016
	C	1840,1841	CCSRCH222J50
	C	1901,1915,1928,1931	DCH1201
	C	1902,1929,1945,1960	CKSRYB104K50
	C	1904	CCSRCH561J50
	C	1906,1952	CKSRYB332K50
	C	1910,1983,1990,2006	CEJQ470M16
	C	1913,1973,1974	CKSRYB225K6R3
	C	1916	CKSRYB222K50
	C	1919,1933,1949,1964	CCSRCH102J50
	C	1934,1936,1938,1954	CKSRYB105K10
	C	1939	CKSRYB103K50
	C	1940,1941,1944,1950	DCH1201
	C	1943,1947,1959,1962	DCH1165
	C	1956	CKSRYB682K50
	C	1965,1967-1969,1982	CKSRYB105K10
	C	1971,1977,1978	DCH1201
	C	1981	CKSRYB104K50
	C	1985-1987	CCSRCH181J50
	C	2007	CEJQ470M16

B MIC2 ASSY

SEMICONDUCTORS

	IC	3701	NJM4565MD

MISCELLANEOUS

	JA	3701	MIC JACK	DKN1614
	S	3701	SLIDE SWITCH	DSH1025
	CN	3701	PLUG (3P)	KM200NA3
	CN	3702	L-PLUG (5P)	KM200NA5L
		0	SHIELD PLATE/MIC	DNH2986

RESISTORS

	R	3701	RN1/16SE1801D
	R	3702	RN1/16SE1001D
	R	3706	RN1/16SE2200D
	R	3707	RN1/16SE1202D
		Other Resistors	RS1/10SR###J

CAPACITORS

	C	3701	CFTLA103J50
	C	3704	CCSRCH470J50
	C	3705,3707,3711,3713	CKSRYB103K50
	C	3706	CEJQ100M35
	C	3708	CCSRCH331J50
	C	3709	CEJQ101M16
	C	3710,3714	CEJQ470M16
	C	3712	CCSRCH101J50

C MAIN ASSY

SEMICONDUCTORS

⚠	IC	1	NJM2872BF33
⚠	IC	2	NJM2872BF05
⚠	IC	3,6	S-1132B33-U5
	IC	4	S-80927CNMC-G8X
	IC	5	TC7SH08FUS1
	IC	7,8	TC7SH126FU
	IC	9	S-80942CNMC-G9C
	IC	101,102,104,304	NJM4565MD
	IC	103	AK5358AET
	IC	301,302	AK4387ET
	IC	303,306	NJM4580MD
	IC	305,307,310-312	NJM4565MD
	IC	501	TC7SH04FUS1
	IC	502	TC74VHC238FK
	IC	503	TC74VHC08FK
	IC	504	TC74HC4052AFT
	IC	505	PEG872A8-K
	IC	506	TC74LCX541FK
	IC	507	TC74LCX08FK
	IC	508	TUSB3200ACPAH
	IC	511	S-24CS64A0I
	Q	2,3,9,34	RT1P141M
	Q	6,8,10,12	LTC114EUB
	Q	7,26,27,31	LSA1576UB
	Q	20,21,32,33	LTC114EUB
	Q	22-25	RTQ040P02
	Q	28,30,38-41	LTC124EUB
	Q	29,306,311	LSC4081UB
	Q	35	RT1P141M
	Q	36	LTC114EUB
	Q	37	RT3N22M
	Q	101,105,108,302	RT3T22M
	Q	102,106,107,307	2SK209
	Q	109,305,310	LTC124EUB
	Q	110	INC2002AC1
	Q	308	2SK209
	Q	309,312	LSA1576UB
	D	1,3	RB160VA-40
	D	2	RKZ5.6KG(B2)

Mark	No.	Description	Part No.
	D	5-8,101	1SS352
	D	103,104	1SS302
	D	105-112,303-310	1SS352

MISCELLANEOUS

	L	501,506 CHIP SOLID INDUCTOR	QTL1013
	L	504 COIL	ATH7015
	L	507,509 CHIP SOLID INDUCTOR	QTL1013
	X	501 CERAMIC OSCILLATOR	CSS1616
	X	502 CRYSTAL RESONATOR (6 MHz)	DSS1136
	CN	1,301 L-PLUG (9P)	KM200NA9L
	CN	2,3 L-PLUG (13P)	KM200NA13L
	CN	4 L-PLUG (4P)	KM200NA4L
	CN	302 6P CONNECTOR	VKN1237
	CN	701,704 L-PLUG (8P)	KM200NA8L
	CN	702,705 21P CONNECTOR	VKN1252
	CN	703,706 22P CONNECTOR	VKN1253
	CN	901,902 27P CONNECTOR	VKN1842
	CN	903 11P CONNECTOR	VKN1242
	CN	904 23P CONNECTOR	VKN1838
	CN	905-908 L-PLUG (3P)	KM200NA3L
	CN	909 L-PLUG (6P)	KM200NA6L

RESISTORS

	R	307,312	RN1/16SE3300D
	R	309,314,321,326	RN1/16SE4301D
	R	310,315	RN1/16SE1002D
	R	311,316	RN1/16SE2701D
	R	320,322,325,395	RN1/16SE3302D
	R	323,412	RN1/16SE3901D
	R	517,518	RAB4C220J
	R	803	RS1/8SQ0R0J
	Other Resistors		RS1/10SR###J

CAPACITORS

	C	4,17,18,21	CKSRYB103K50
	C	14,47,102,105	CKSRYB104K50
	C	15,24,26-29	CKSRYB104K16
	C	16,48,327,328	CEVW101M16
	C	19,20,524,544	DCH1201
	C	22,30,31,135	CKSRYB103K50
	C	32,36,38,44	CKSRYB105K10
	C	33-35,42,43	CKSRYB104K16
	C	37,39,45,303	CCSRCH102J50
	C	40,50,140,148	CCSRCH222J50
	C	49,501-504,523	CKSRYB104K16
	C	101,110,111,116	CEVW100M16
	C	103,104,144,145	CEVW470M16
	C	106,107,339,340	CCSRCH151J50
	C	108,109,507-513	CKSRYB103K16
	C	112,113,117	CKSRYB104K50
	C	114,115	CKSRYB123K50
	C	118,119	CKSRYB102K50
	C	120,142,143,322	CEVW100M16
	C	121-125,127,128	CKSRYB104K50
	C	126,312,314	CEVW470M6R3
	C	129,130,385,389	CKSRYB105K16
	C	131,152,305,307	CKSRYB104K50
	C	141,149,151,397	CCSRCH100D50
	C	301,302,304,316	CKSRYB103K50
	C	306,326,329,330	CEVW470M16
	C	309,311,313,317	CKSRYB104K50
	C	315,319,323,522	CCSRCH102J50
	C	318,341,342	CCH1565
	C	320,324,550	CKSRYB103K50
	C	321,325,345,347	CKSRYB104K50
	C	333,334	CKSRYB682K50
	C	335,336	CCSRCH561J50
	C	337,338,358	CCSRCH222J50
	C	343,344,353,354	CEVW100M16
	C	348,350-352	CKSRYB104K50
	C	359,360	CEVW101M16
	C	361-364,383,384	CKSRYB104K50
	C	369-372,399,400	CEVW100M16
	C	379,380,561,714	CCSRCH101J50
	C	387,388,391,395	CKSRYB104K50
	C	393,394,401,402	CEVW470M16
	C	398	CCSRCH100D50
	C	413,415,901,914	CKSRYB104K50
	C	514,516,554,558	CKSRYB471K50
	C	515,517-520,528	CKSRYB103K16
	C	525-527,540-543	CKSRYB104K16
	C	538,539,579	CKSRYB103K16
	C	545,557,564,572	DCH1201
	C	547-549,551,555	CKSRYB104K16
	C	552,553	CCSRCH470J50
	C	556,560,565,569	CKSRYB104K16
	C	566	CCSRCH102J50
	C	568	CKSRYB471K50
	C	570	CCSRCH330J50
	C	571	CCSRCH270J50
	C	573,577,578	CKSRYB104K16
	C	701-704,719-722	DCH1201
	C	732	CCSRCH101J50
	C	737,738,903,904	DCH1201
	C	915,917,919,921	CKSRYB104K50

D DJMB ASSY

SEMICONDUCTORS

	IC	4003,4004	TC74HC4052AF
	IC	4201	NJM4580MD
	IC	4202	NJM4565MD
	Q	4001-4010,4023	LSC4081UB
	Q	4011,4013,4015,4017	LTC124EUB
	Q	4012,4014,4016,4018	2SB1197K
	Q	4019,4021	LTC124EUB
	Q	4020,4022	2SB1197K
	D	4001-4014	1SS352
	D	4015,4025,4035,4044	SLI-343U8R(HJK)
	D	4016,4017,4022-4024	SLI-343Y8Y(KLM)
	D	4018-4021,4028-4031	SLI-343M8G(GHJ)
	D	4026,4027,4032-4034	SLI-343Y8Y(KLM)
	D	4036,4037,4042,4043	SLI-343Y8Y(KLM)
	D	4038-4041	SLI-343M8G(GHJ)
	D	4045	SLI-343U8R(HJK)

MISCELLANEOUS

	VR	4001,4005 ROTARY VR	DCS1117
	VR	4002-4004,4006-4010 ROTARY VR	DCS1078
	VR	4201,4203 VARIABLE RESISTOR	RCV1118

Mark	No.	Description	Part No.
	VR	4202 POTENTIOMETER	DCS1092
	S	4001-4004,4007-4009 TACT SWITCH	DSG1089
	S	4005,4006,4010-4013 TACT SWITCH	DSG1079
	S	4014 ROTARY SW	CSD1153
	S	4015,4018 ROTARY SWITCH	DSG1099
	S	4016,4017,4019 12MM GS ENCODER	DSX1064
	S	4020 12MM GS ENCODER	DSX1064
	CN	4003,4004 27P CONNECTOR	VKN1842
	CN	4201 11P CONNECTOR	VKN1242
	CN	4202 23P CONNECTOR	VKN1838
RESISTORS			
	R	4058,4063	RS1/10SR2201D
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	4020-4023,4025-4029	CKSRYB104K50
	C	4036,4038,4044,4045	CKSRYB104K50
	C	4037,4039,4050,4051	CKSRYB103K50
	C	4048,4049,4052,4067	CKSRYB104K50
	C	4053,4054,4057-4060	CKSRYB103K50
	C	4061,4072,4203,4205	CEJQ470M16
	C	4074,4204,4206,4212	CKSRYB104K50
	C	4201,4202,4209,4210	CEJQ100M35
	C	4211,4213	CEJQ470M16
	C	4214	CKSRYB104K50

E PNLA ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	Q	3001-3008	LSC4081UB
	Q	3009,3011,3013,3015	LTC124EUB
	Q	3010,3012,3014,3016	LSA1576UB
	Q	3017,3019,3021,3023	LTC124EUB
	Q	3018,3020,3022,3024	LSA1576UB
	Q	3025,3027	LTC124EUB
	Q	3026,3028	LSA1576UB
	D	3001,3003-3009	1SS352
	D	3011-3021,3023-3025	1SS352
	D	3026-3033,3039,3047	SLI-343Y8Y(KLM)
	D	3034-3038,3040-3046	SLI-343U8R(HJK)
	D	3048,3051,3053	SLI-343M8C(FGHJ)
	D	3049	SLR343BC4T(JK)
	D	3050,3052	SLI-343U8R(HJK)
	D	3054	SLI-343Y8Y(KLM)
	D	3057-3060	1SS352
	D	3061	RKZ5.6KG(B2)
MISCELLANEOUS			
	VR	3001 ROTARY VR	DCS1104
	VR	3002 VR	DCV1009
	S	3001 ENCODER	DSX1082
	S	3003 SLIDE SWITCH	DSH1058
	S	3004,3005,3010-3012 TACT SWITCH	DSG1089
	S	3006,3013 TACT SWITCH	DSG1117
	S	3007-3009,3014-3016 TACT SWITCH	DSG1079
	S	3017-3019 TACT SWITCH	DSG1089
	S	3021-3023 TACT SWITCH	DSG1079
	CN	3001 19P CONNECTOR	VKN1250
	CN	3002 22P CONNECTOR	VKN1253
	CN	3003 21P CONNECTOR	VKN1252

Mark	No.	Description	Part No.
RESISTORS			
		All Resistors	RS1/10SR###J
CAPACITORS			
	C	3001,3002,3039,3041	CKSRYB103K16
	C	3028-3037,3040,3055	CKSRYB104K16
	C	3044,3047,3048,3058	DCH1201
	C	3057,3059	CKSRYB104K16
	C	3060	CEJQ101M16
	C	3061	CEAL101M16

F PNLB ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	Q	3001-3008	LSC4081UB
	Q	3009,3011,3013,3015	LTC124EUB
	Q	3010,3012,3014,3016	LSA1576UB
	Q	3017,3019,3021,3023	LTC124EUB
	Q	3018,3020,3022,3024	LSA1576UB
	Q	3025,3027	LTC124EUB
	Q	3026,3028	LSA1576UB
	D	3001-3009,3011-3021	1SS352
	D	3023-3025,3057-3060	1SS352
	D	3026-3033,3039,3047	SLI-343Y8Y(KLM)
	D	3034-3038,3040-3046	SLI-343U8R(HJK)
	D	3048,3051,3053	SLI-343M8C(FGHJ)
	D	3049	SLR343BC4T(JK)
	D	3050,3052	SLI-343U8R(HJK)
	D	3054	SLI-343Y8Y(KLM)
	D	3061	RKZ5.6KG(B2)
MISCELLANEOUS			
	VR	3001 ROTARY VR	DCS1104
	VR	3002 VR	DCV1009
	S	3001 ENCODER	DSX1082
	S	3002 SLIDE SWITCH	DSH1066
	S	3003 SLIDE SWITCH	DSH1058
	S	3004,3005,3010-3012 TACT SWITCH	DSG1089
	S	3006,3013 TACT SWITCH	DSG1117
	S	3007-3009,3014-3016 TACT SWITCH	DSG1079
	S	3017-3019 TACT SWITCH	DSG1089
	S	3021-3023 TACT SWITCH	DSG1079
	CN	3001 19P CONNECTOR	VKN1250
	CN	3002 22P CONNECTOR	VKN1253
	CN	3003 21P CONNECTOR	VKN1252
RESISTORS			
		All Resistors	RS1/10SR###J
CAPACITORS			
	C	3001,3002,3039,3041	CKSRYB103K16
	C	3028-3037,3040,3055	CKSRYB104K16
	C	3044,3047,3048,3058	DCH1201
	C	3057,3059	CKSRYB104K16
	C	3060	CEJQ101M16
	C	3061	CEAL101M16

G LEDB ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	Q	3401-3404	LTC124EUB

Mark	No.	Description	Part No.
	Q	3405-3408	LSA1576UB
	Q	3409-3414	LSC4081UB
	D	3401-3424	SLI-343U3R(HJKL)
MISCELLANEOUS			
	CN	3401 19P CONNECTOR	VKN1279
	CN	3402 L-PLUG (4P)	KM200NA4L
	JH	3401 3P CABLE HOLDER	51048-0300
	JP	3401 3P JUMPER WIRE	D20PDY0310E
RESISTORS			
	R	3401-3403,3405,3408	RS1/8SQ0R0J
	R	3432-3435,3437,3441	RS1/8SQ0R0J
	R	3464	RS1/8SQ472J
	R	3465,3485,3495,3513	RS1/8SQ0R0J
	Other Resistors		RS1/10SR###J
CAPACITORS			
	C	3401-3404	CKSRYB104K16

H LODA ASSY

SEMICONDUCTORS			
	D	3801	1SS352
	D	3802	SLR343WBC7T(MN)
MISCELLANEOUS			
	S	3801 TACT SWITCH	DSG1089
RESISTORS			
	All Resistors		RS1/10SR###J

I LODB ASSY

SEMICONDUCTORS			
	D	3901	1SS352
	D	3902	SLR343WBC7T(MN)
MISCELLANEOUS			
	S	3901 TACT SWITCH	DSG1089
RESISTORS			
	All Resistors		RS1/10SR###J

J JOGB ASSY

MISCELLANEOUS			
	CN	3301 CONNECTOR ASS'Y	PF04PG-B05
RESISTORS			
	All Resistors		RS1/10SR###J
MISCELLANEOUS			
	PC	3301 PHOTO INTERRUPTER	SEDS-7573
CAPACITORS			
	C	3301	CKSQYB225K10
	C	3302,3303	CKSRYB103K50

K TCHB ASSY

SEMICONDUCTORS			
	Q	3351	LSC4081UB
	D	3351	1SS352
MISCELLANEOUS			
	CN	3351 3PJUMPER CONNECTOR	52151-0310
	PC	3351 PHOTO INTERRUPTER	GP1S094HCZ0F
RESISTORS			
	R	3354	RS1/10SR1502F
	Other Resistors		RS1/10SR###J
CAPACITORS			
	C	3351	CKSRYB104K16

L CDCA ASSY

SEMICONDUCTORS			
	IC	1501	AD7147ACPZ500RL7
MISCELLANEOUS			
	L	1501-1505 INDUCTOR	CTF1639
	L	1506 CHIP SOLID INDUCTOR	XTL3010
RESISTORS			
	All Resistors		RS1/16SS###J
CAPACITORS			
	C	1501	CKSSYB103K16
	C	1503	CKSSYB104K10
	C	1504-1508	CCSSCH101J50
	C	1509	DCH1201

M CDCB ASSY

SEMICONDUCTORS			
	IC	1601	AD7147ACPZ500RL7
MISCELLANEOUS			
	L	1601-1605 INDUCTOR	CTF1639
	L	1606 CHIP SOLID INDUCTOR	XTL3010
RESISTORS			
	All Resistors		RS1/16SS###J
CAPACITORS			
	C	1601	CKSSYB103K16
	C	1603	CKSSYB104K10
	C	1604-1608	CCSSCH101J50
	C	1609	DCH1201

N CHF1 ASSY

SEMICONDUCTORS			
	D	4301,4302	1SS352
MISCELLANEOUS			
	KN	4301 EARTH TERMINAL	AKF7002
	VR	4301 VARIABLE RESISTOR	DCV1024
	CN	4302 L-PLUG (3P)	KM200NA3L

O CHF2 ASSY

SEMICONDUCTORS			
	D	4401,4402	1SS352
MISCELLANEOUS			
	KN	4401 EARTH TERMINAL	AKF7002
	VR	4401 VARIABLE RESISTOR	DCV1024
	CN	4402 L-PLUG (3P)	KM200NA3L

Mark	No.	Description	Part No.

P CROS ASSY

SEMICONDUCTORS

	D	4501,4502	1SS352

MISCELLANEOUS

	KN	4501 EARTH TERMINAL	AKF7002
	VR	4501 VARIABLE RESISTOR	DCV1023
	CN	4501 L-PLUG (3P)	KM200NA3L

RESISTORS

		All Resistors	RS1/4SA###J

CAPACITORS

	C	4502,4503	CKSRYB104K50

Q MSWB ASSY

SEMICONDUCTORS

	D	4601-4605	1SS352

MISCELLANEOUS

	S	4601,4602,4604 SLIDE SWITCH	ASH1039
	S	4603 SLIDE SWITCH	ASH1037
	CN	4601 L-PLUG (6P)	KM200NA6L

R POWB ASSY

SEMICONDUCTORS

	IC	4801	NJM4556AD
	IC	4802-4805	NJM4565MD
	Q	4804-4807	INC2002AC1
	D	4701	RKZ5.6KG(B2)
	D	4703,4704	RB160VA-40
	D	4705	NNCD6.2MF
	D	4706,4707	1SR154-400

MISCELLANEOUS

	JA	4701 DCIN JACK	DKN1523
	JA	4702 USB CONNECTOR	DKN1237
	JA	4801 CANON CONNECTOR	DKB1094
	KN	4710 SCREW PLATE	VNE1948
	VR	4801 ROTARY VR	DCS1105
	VR	4802-4804 ROTARY VR	DCS1078
	S	4701 SLIDE SWITCH	ASG1100
	CN	4701 L-PLUG (9P)	KM200NA9L
	CN	4702 PLUG (4P)	KM200NA4
	CN	4801 L-PLUG (4P)	KM200NA4L
	CN	4802 L-PLUG (13P)	KM200NA13L
	VA	4702 VARISTORS	EZJZ1V270RM

RESISTORS

	R	4801,4805	RN1/16SE1801D
	R	4802,4806	RN1/16SE1001D
	R	4809,4810	RN1/16SE3002D
	R	4817,4819	RN1/16SE2200D
	R	4820,4833	RN1/16SE1202D
	R	4854-4857	RS1/4SA330J
	R	4860,4861	RS1/4SA100J
	R	4862-4865	RS1/4SA6R8J
		Other Resistors	RS1/10SR###J

CAPACITORS

Mark	No.	Description	Part No.
	C	4706,4820,4823,4826	CEJQ101M16
	C	4707	CKSRYB473K50
	C	4709,4710,4712,4716	CKSRYB104K50
	C	4715,4804,4808,4809	CFTLA103J50
	C	4723,4739,4850,4853	CKSRYB103K50
	C	4738,4805,4806,4816	CEJQ100M35
	C	4802,4811	CCSRCH470J50
	C	4812,4813,4870	CCSRCH101J50
	C	4817,4825,4844,4847	CEJQ100M35
	C	4821,4822,4828,4829	CKSRYB104K50
	C	4827	CEJQ101M16
	C	4840,4842	CEJQ470M16
	C	4841,4843,4848,4849	CKSRYB104K50
	C	4851	CCSRCH220J50
	C	4852,4854	CEJQ100M35
	C	4855	CKSRYB103K50
	C	4856	CKSRYB683K16
	C	4857,4867,4868	CKSRYB104K50

S HPJB ASSY

MISCELLANEOUS

	L	3601,3602 INDUCTOR	CTF1382
	JA	3601 HEADPHONE JACK	DKN1622
	JA	3602 CONNECTOR	CKS4124
	CN	3601 L-PLUG (4P)	KM200NA4L

RESISTORS

		All Resistors	RS1/10SR###J

CAPACITORS

	C	3601,3602,3604,3605	CKSRYB473K50
	C	3603	CFTLA103J50

STPB ASSY

There is no service parts.