
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to ▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

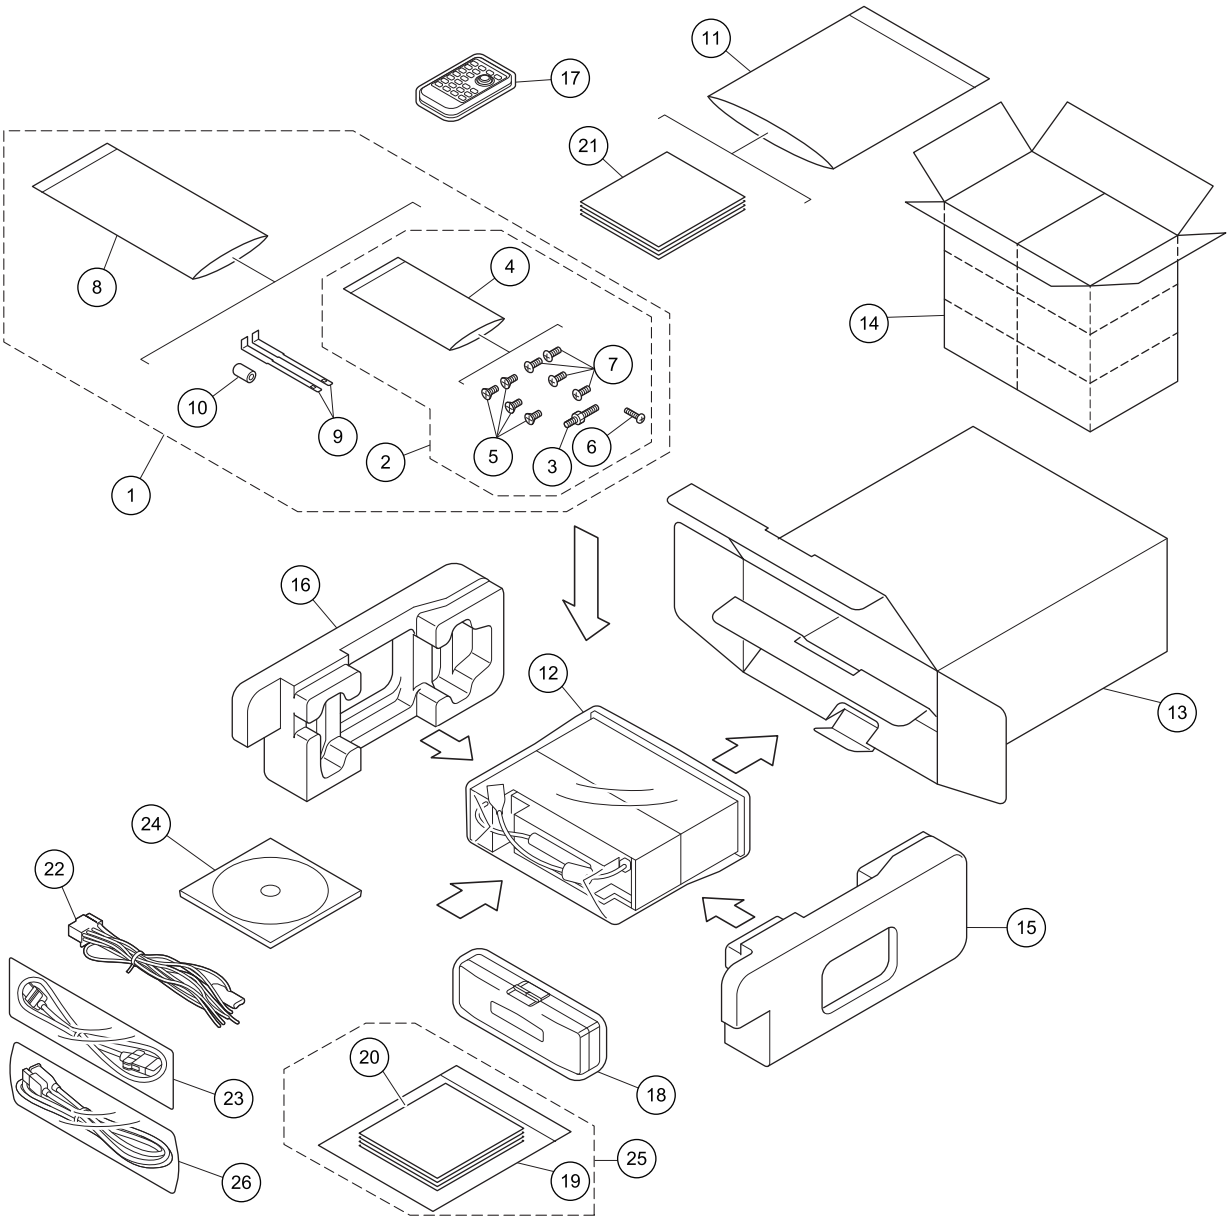

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
*	1	Accessory Assy	See Contrast table (2)
	2	Screw Assy	See Contrast table (2)
	3	Screw	CBA1650
*	4	Polyethylene Bag	CEG-127
	5	Screw	CRZ50P090FTC
	6	Screw	See Contrast table (2)
	7	Screw	TRZ50P080FTC
	8	Polyethylene Bag	CEG1160
	9	Handle	CND3707
	10	Bush	CNV3930
	11	Polyethylene Bag	CEG1116
	12	Polyethylene Bag	See Contrast table (2)
	13	Unit Box	See Contrast table (2)
	14	Contain Box	See Contrast table (2)
	15	Protector	CHP3502
	16	Protector	CHP3503
	17	Remote Control Unit	CXC9113
	18	Case Assy	QXA3049
*	19	Polyethylene Bag	CEG1250

Mark	No.	Description	Part No.
	20	Quick Start Guide	See Language table (3)
	21-1	Installation Manual	See Contrast table (2)
	21-2	Caution Card	CRP1310
*	21-3	Caution Card	See Contrast table (2)
*	21-4	Caution Card	CRP1366
*	21-5	Caution Card	XRP7002
*	21-6	Caution Card	See Contrast table (2)
*	21-7	Warranty Card	See Contrast table (2)
*	21-8	Service Network	See Contrast table (2)
	22	Cord Assy	XDP7004
	23	Cord Assy	See Contrast table (2)
	24	CD-ROM (Operation Manual)	See Contrast table (2)
	25	Owner's Manual Assy	See Contrast table (2)
	26	Cord Assy	CDP1040

(2) CONTRAST TABLE

DEH-P600UB/XN/UC, DEH-P6000UB/XN/UC, DEH-P6050UB/XN/ES and DEH-P6050UB/XN/ES1 are constructed the same except for the following:

Mark	No.	Description	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	DEH-P6050UB/XN/ES	DEH-P6050UB/XN/ES1
*	1	Accessory Assy	CEA7316	CEA7316	CEA7317	CEA7317
	2	Screw Assy	CEA5322	CEA5322	CEA3849	CEA3849
	6	Screw	JPZ20P060FTB	JPZ20P060FTB	Not used	Not used
	12	Polyethylene Bag	CEG1368	CEG1368	CEG1227	CEG1227
	13	Unit Box	CHG6390	CHG6389	CHG6392	CHG6408
	14	Contain Box	CHL6390	CHL6389	CHL6392	CHL6408
	21-1	Installation Manual	CRD4255	CRD4257	CRD4260	CRD4260
*	21-3	Caution Card	CRP1365	CRP1365	CRP1364	CRP1364
*	21-6	Caution Card	Not used	CRP1294	Not used	Not used
*	21-7	Warranty Card	CRY1070	CRY1246	Not used	CRY1250
*	21-8	Service Network	Not used	Not used	Not used	CRY1251
	23	Cord Assy	CDP1041	Not used	Not used	Not used
	24	CD-ROM (Operation Manual)	CPJ1215	CPJ1216	CPJ1217	CPJ1217
	25	Owner's Manual Assy	CXC9691	CXC9692	CXC9693	CXC9693

(3) Language of Quick Start Guide

Mark	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	Language
*	CRB2608	CRB2610	English
*	CRB2609	CRB2611	French

Mark	DEH-P6050UB/XN/ES, /ES1	Language
*	CRB2612	English
*	CRB2613	Spanish
*	CRB2614	Portuguese(B)
*	CRB2615	Traditional Chinese
*	CRB2616	Arabic


(4) CONTENTS OF CD-ROM (Operation Manual)

Mark	DEH-P600UB/XN/UC (CPJ1215)	DEH-P6000UB/XN/UC (CPJ1216)	Language
*	CRB2569	CRB2571	English
*	CRB2570	CRB2572	French

Mark	DEH-P6050UB/XN/ES, /ES1 (CPJ1217)	Language
*	CRB2573	English
*	CRB2574	Spanish
*	CRB2575	Portuguese(B)
*	CRB2576	Traditional Chinese
*	CRB2577	Arabic

All operation manuals are supplied in PDF files by the CD-ROM. No printed papers are available.

9.2 EXTERIOR(1)

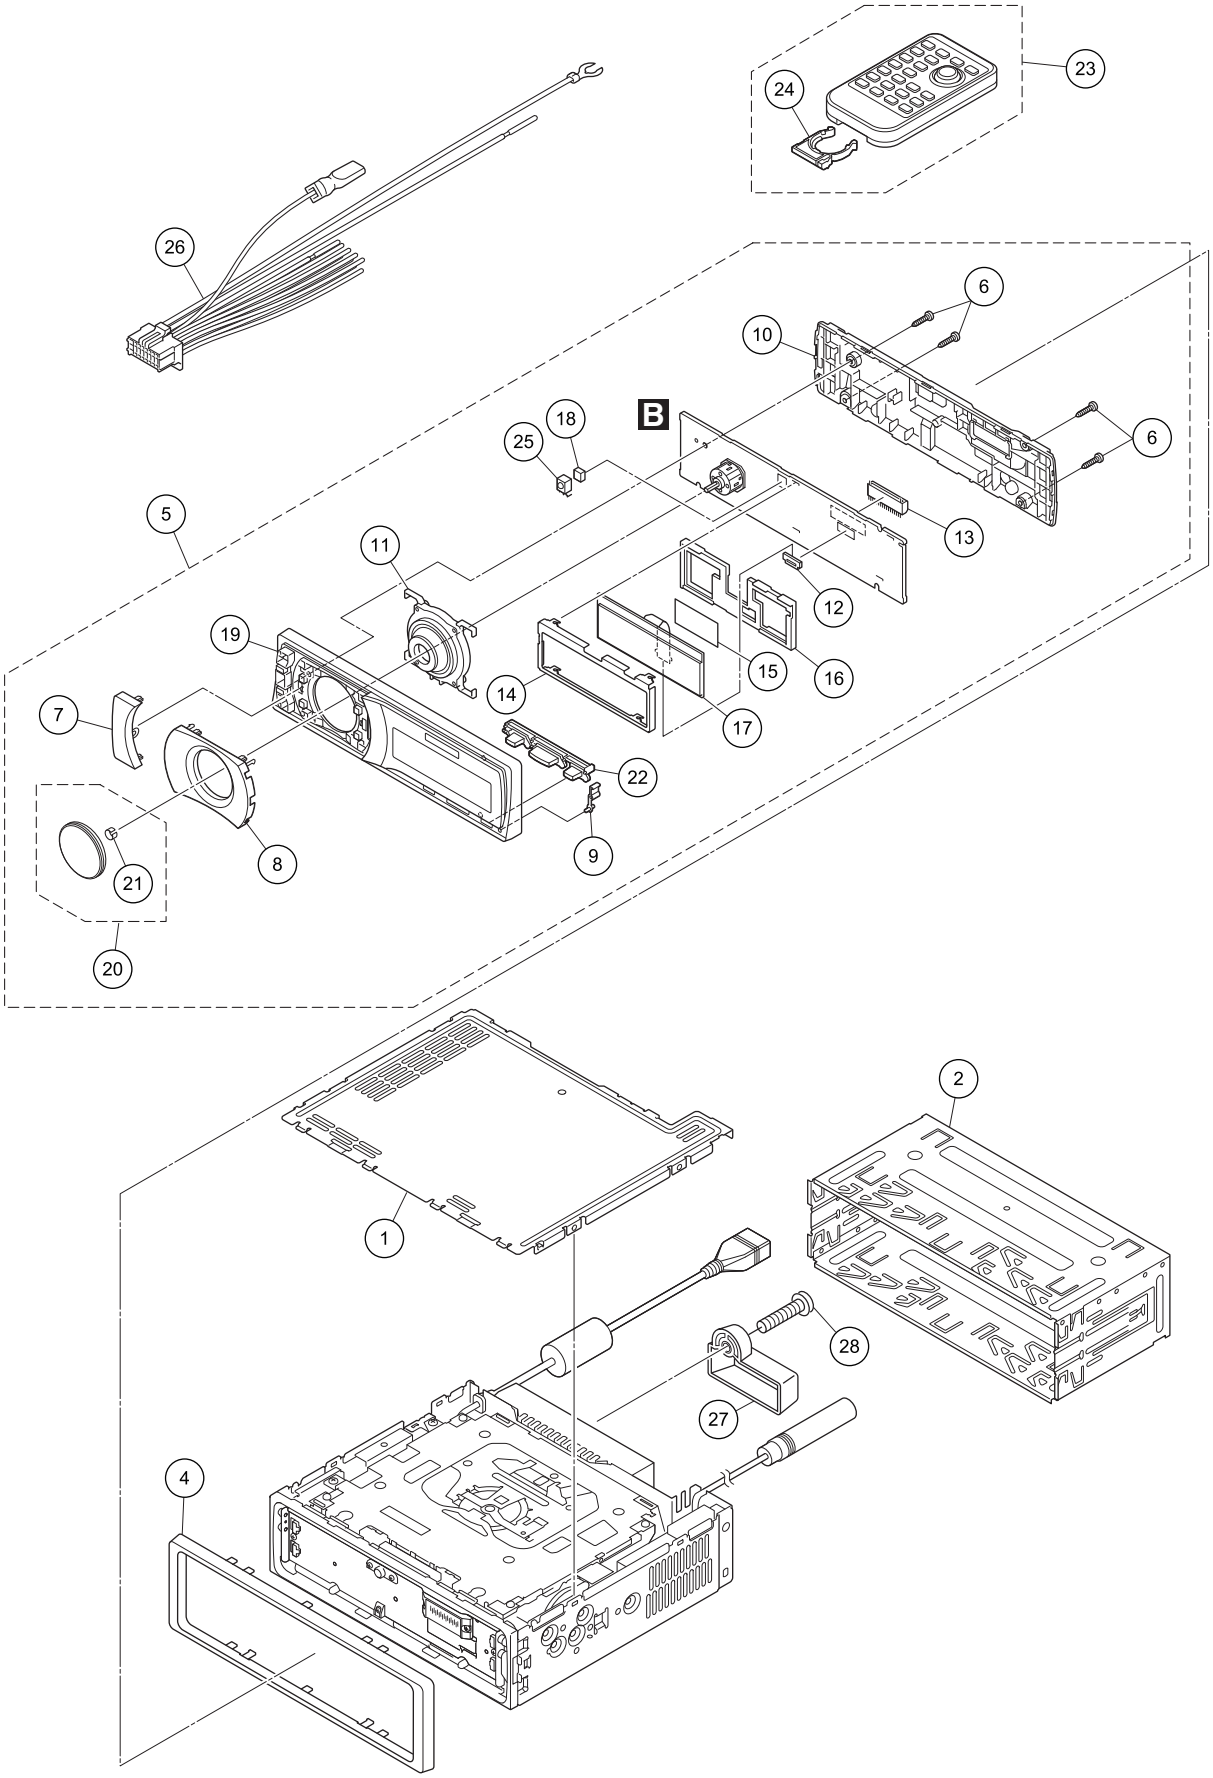

(1) EXTERIOR(1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Case	CNB3466
	2	Holder	CND3598
	3	.....	
	4	Panel	See Contrast tabel (2)
	5	Detach Grille Assy	See Contrast tabel (2)
	6	Screw	BPZ20P080FTB
	7	Button(SRC, BAND)	CAI1661
	8	Button Unit (DISP, S.Rtrv, RDM, SW)	See Contrast tabel (2)
	9	Button(Reset)	CAI1676
	10	Cover	CNS9294
	11	Lighting Conductor	CNV9883
	12	Connector(CN1961)	CKS5545
	13	Connector(CN1801)	CKS5662
	14	Holder	CND4267
	15	Double Side Tape	CNM8673
	16	Holder	CNV9886
	17	OEL Unit	MXS8260
	18	Spacer	CNN2403
	19	Grille Unit	See Contrast tabel (2)
	20	Knob Unit	See Contrast tabel (2)
	21	Spring	XBL7005
	22	Button Unit(CLOCK, LIST, OPEN)	CXC8936
	23	Remote Control Unit	CXC9113
	24	Cover	CZN5357
	25	IC(IC1931)	GP1UX31RK
	26	Cord Assy	XDP7004
	27	Holder	See Contrast tabel (2)
	28	Screw	See Contrast tabel (2)

(2) CONTRAST TABLE

DEH-P600UB/XN/UC, DEH-P6000UB/XN/UC, DEH-P6050UB/XN/ES and DEH-P6050UB/XN/ES1 are constructed the same except for the following:

Mark	No.	Description	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	DEH-P6050UB/XN/ES DEH-P6050UB/XN/ES1
	4	Panel	CNS9342	CNS9319	CNS9319
	5	Detach Grille Assy	CXC8930	CXC8929	CXC8931
	8	Button Unit (DISP, S.Rtrv, RDM, SW)	CXC8880	CAI1672 (Button)	CXC9427
	19	Grille Unit	CXC8879	CXC8873	CXC8874
	20	Knob Unit	CXC8883	CXC8911	CXC8883
	27	Holder	Not used	CNV7619	Not used
	28	Screw	Not used	BMZ40P140FTC	Not used

9.3 EXTERIOR(2)

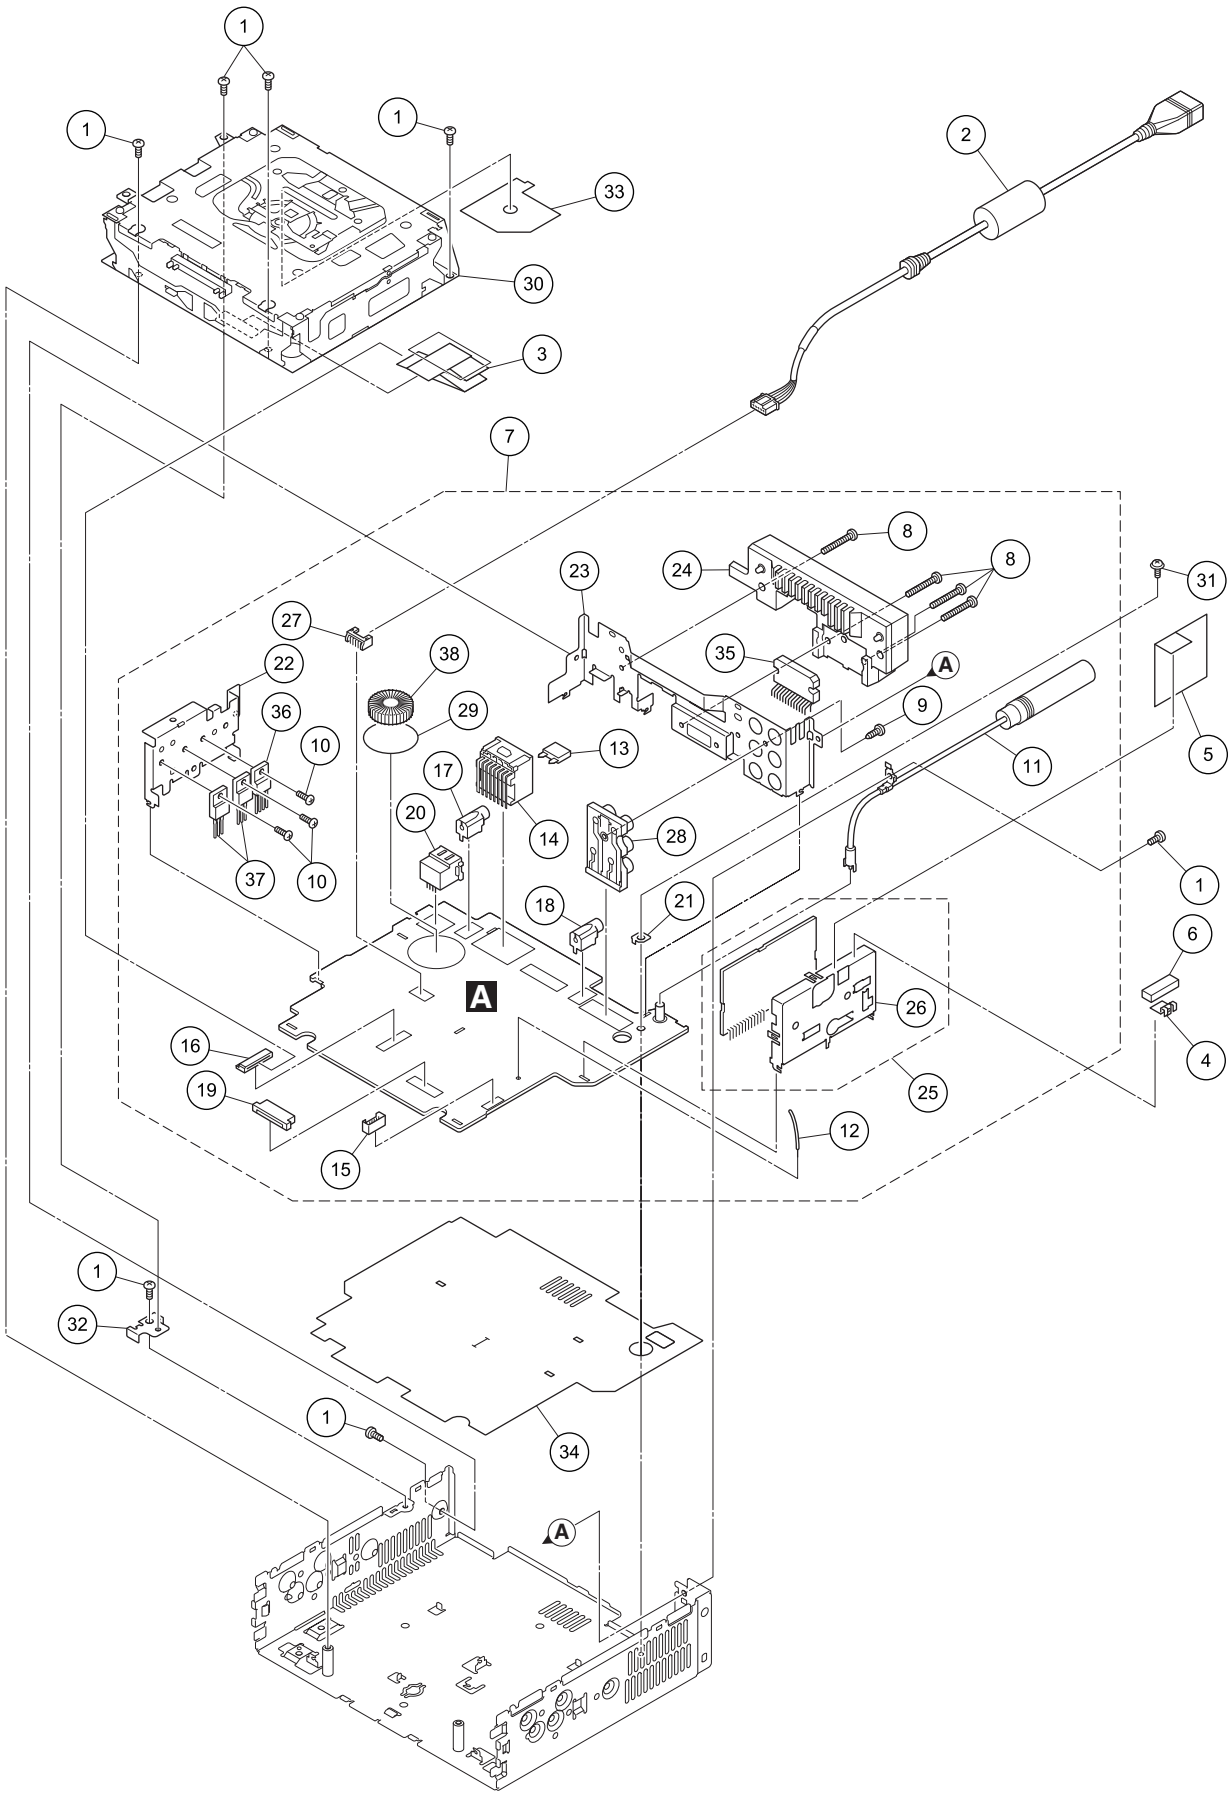

(1) EXTERIOR(2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Cord Assy	CDE8351
	3	Cable	CDE8549
	4	Earth Plate	CND2171
	5	Insulator	CNM8790
	6	Cushion	CNM9126
	7	Tuner Amp Unit	See Contrast table (2)
	8	Screw	BMZ26P180FTC
	9	Screw	BPZ26P070FTC
	10	Screw	BSZ26P060FTC
	11	Antenna Cable(CN402)	CDH1336
	12	Clamper	CEF1048
⚠	13	Fuse(10 A)	YEK5001
	14	Plug(CN981)	CKM1376
	15	Plug(CN871)	CKS-786
	16	Connector(CN701)	CKS3833
	17	Connector(CN151)	See Contrast table (2)
	18	Connector(CN181)	CKS4124
	19	Connector(CN801)	CKS4811
	20	Connector(CN101)	CKS5271
	21	Holder(CN401)	CNC5399
	22	Holder	CND3133
	23	Holder	See Contrast table (2)
	24	Heat Sink	CNR1940
	25	FM/AM Tuner Unit(Y401)	CWE2098
	26	Holder	CND4324
	27	Plug(CN781)	KM200NA5L
	28	Pin Jack(CN302)	XKB7001
	29	Insulator	XNM7031
	30	CD Mechanism Module(S10.5)	CXK5770
	31	Screw	ISS26P055FTC
	32	Holder	XNC7014
	33	Insulator	XNM7106
	34	Insulator	XNM7114
	35	IC(IC351)	PAL007C
	36	IC(IC911)	NJM2388F84
	37	Transistor(Q751,Q901)	2SD2396
	38	Choke Coil(L981)	CTH1280

(2) CONTRAST TABLE

DEH-P600UB/XN/UC, DEH-P6000UB/XN/UC, DEH-P6050UB/XN/ES and DEH-P6050UB/XN/ES1 are constructed the same except for the following:

Mark	No.	Description	DEH-P600UB/XN/UC	DEH-P6000UB/XN/UC	DEH-P6050UB/XN/ES DEH-P6050UB/XN/ES1
	7	Tuner Amp Unit	CWN3149	CWN3148	CWE3150
	17	Connector(CN151)	CKS4124	CKS4124	Not used
	23	Holder	CND4255	CND4255	CND4256


9.4 DRIVE UNIT

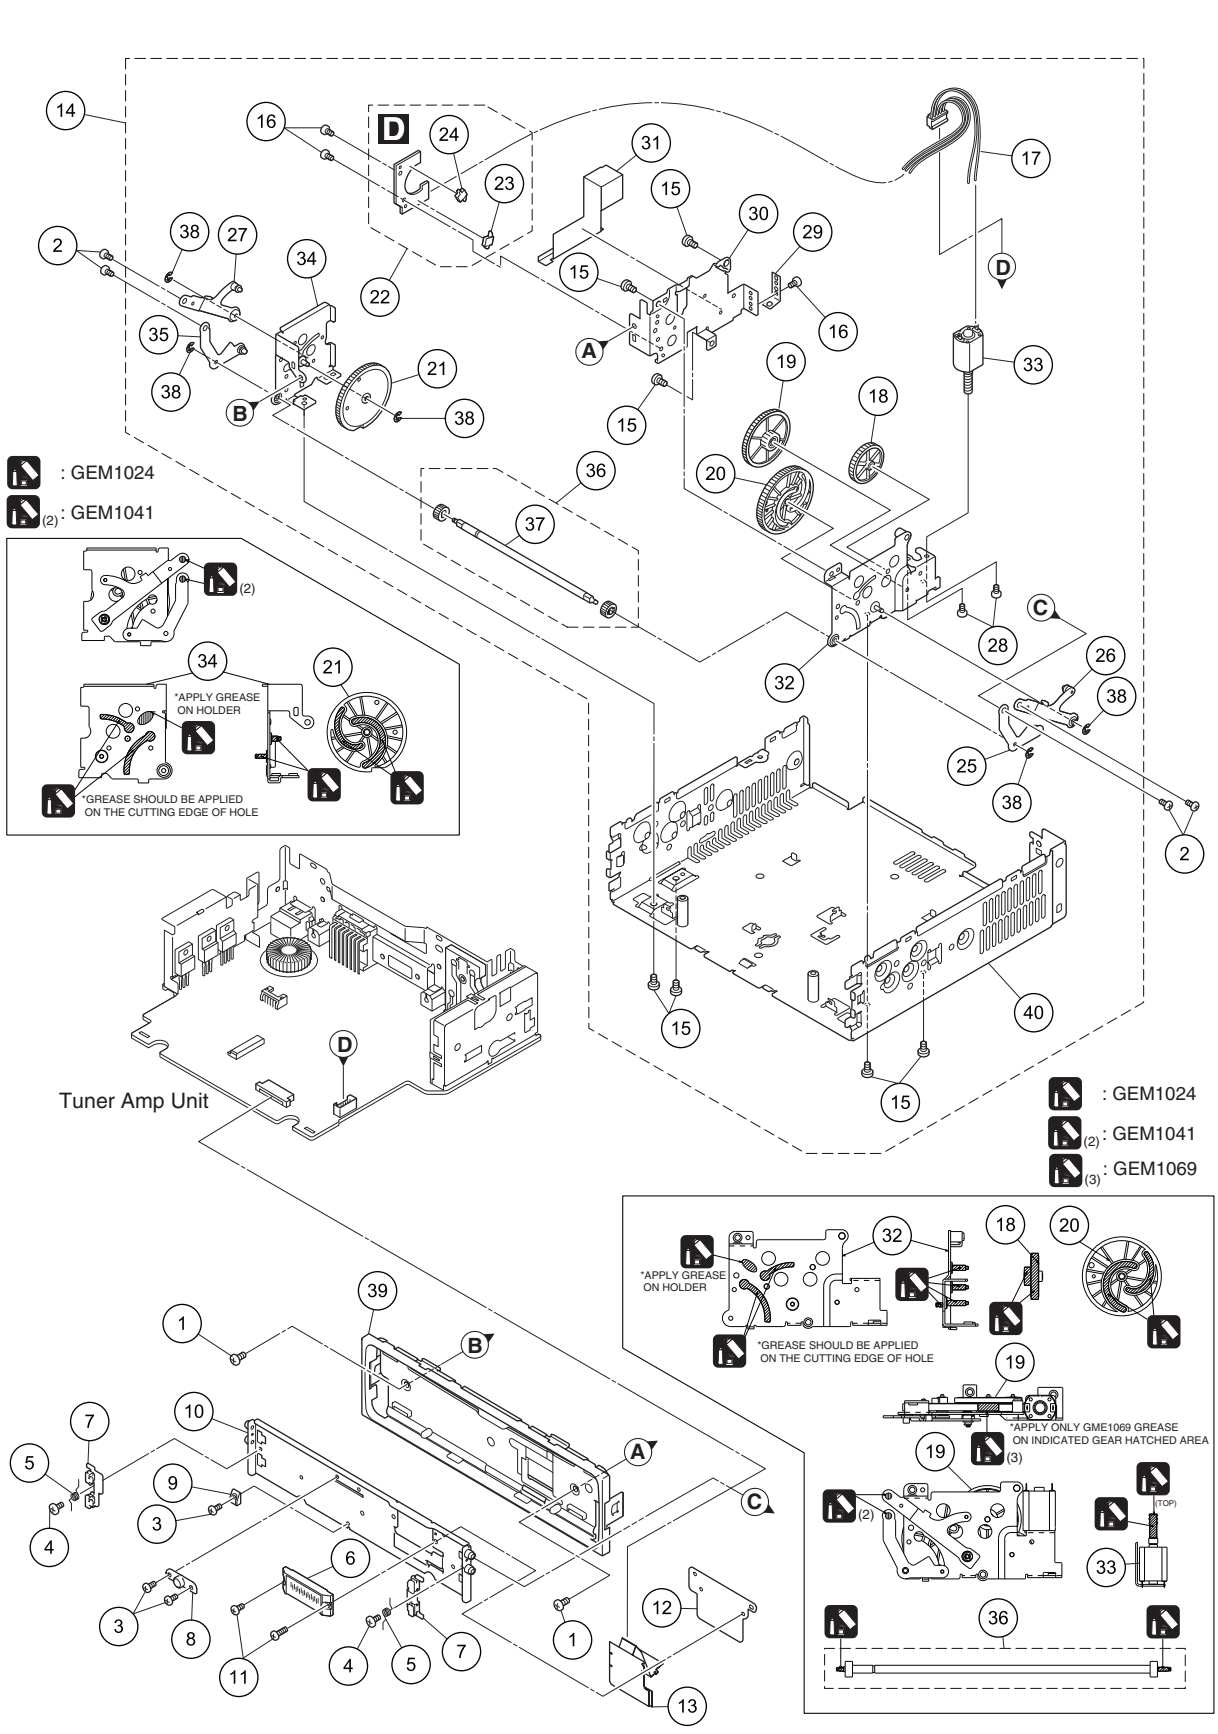

DRIVE UNIT SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw(M2.6 x 4)	CBA1828
	2	Screw(M2 x 2.5)	CBA1924
	3	Screw(M2 x 2)	CBA1871
	4	Screw(M2 x 1.9)	CBA1935
	5	Spring	CBH2530
	6	Connector	CKS5273
	7	Arm	CNV6962
	8	Guide	CNV6967
	9	Guide	CNV8048
	10	Case Unit	CXC6483
	11	Screw(M2 x 3.5)	XBA7002
	12	Holder	XNC7019
	13	Flexible PCB	XNP7026
	14	Drive Unit	CXC8854
	15	Screw	BMZ26P040FTC
	16	Screw(M2 x 2)	CBA1871
	17	Cord	CDE7392
	18	Gear	CNV7752
	19	Gear	CNV7753
	20	Gear	CNV7754
	21	Gear	CNV7755
	22	Switch Unit	CWS1389
	23	Switch	CSN1051
	24	Spring Switch	CSN1052
	25	Arm Unit	CXC2199
	26	Arm Unit	CXC6623
	27	Arm Unit	CXC6624
	28	Screw	JFZ20P020FTC
	29	Spring	XBL7003
	30	Holder	XNC7017
	31	Insulator	XNM7119
	32	Holder Unit	XXA7399
	33	Motor Unit	XXA7400
	34	Holder Unit	XXA7401
	35	Arm Unit	XXA7403
	36	Gear Unit	XXA7424
	37	Shaft	XLA7001
	38	Washer	YE15FTC
	39	Panel Unit	CXC8925
*	40	Chassis Unit	CXC8855

9.5 CD MECHANISM MODULE

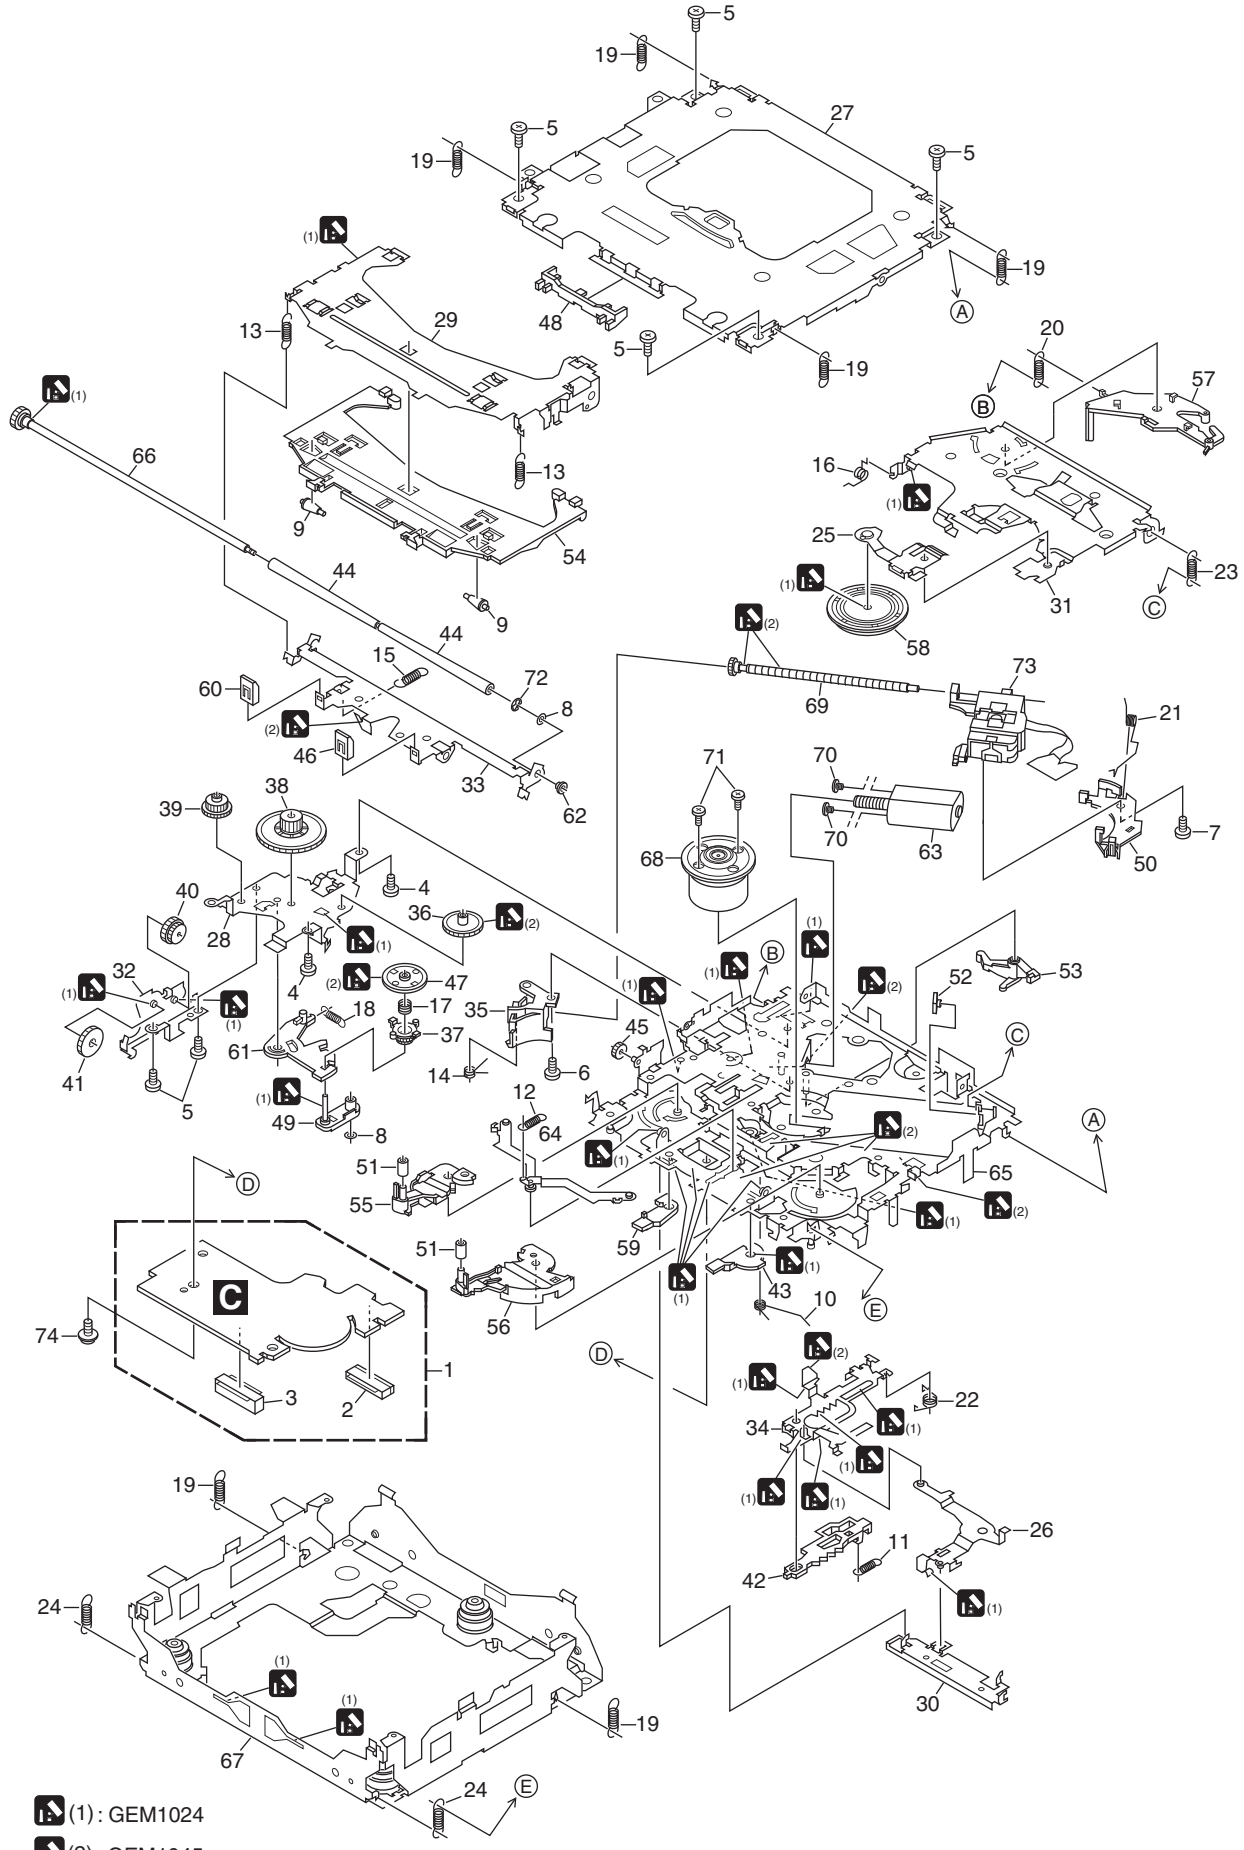

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP2-iPod)	CWX3526
	2	Connector(CN101)	CKS4182
	3	Connector(CN701)	CKS4186
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	Roller	CNV9499
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND3831
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV7218
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV7799
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV9498
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8938
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC7134
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. Part No.

Unit Number : CWN3149(P600UB)
Unit Number : CWN3148(P6000UB)
Unit Number : CWN3150(P6050UB)
Unit Name : Tuner Amp Unit
Unit Number : (P600UB)
Unit Number : (P6000UB)
Unit Number : (P6050UB)
Unit Name : Keyboard Unit
Unit Number : CWX3526
Unit Name : CD Core Unit
(S10.5COMP2-iPod)
Unit Number : CWS1389
Unit Name : Switch Unit

A

Unit Number : CWN3149(P600UB)
Unit Number : CWN3148(P6000UB)
Unit Number : CWN3150(P6050UB)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,90,62) IC	HA12241FP
IC 181	(A,113,110) IC	NJM2794V
IC 201	(A,124,85) IC	PML017A
IC 351	(A,90,136) IC	PAL007C
IC 451	(B,152,82) IC	NJM2885DL1-33
IC 501	(A,54,59) Regulator IC	BD9781HFP
IC 601	(A,126,47) IC	PEG430B8
IC 651	(A,139,63) IC	S-80835CNNB-B8U
IC 731	(B,59,37) IC	NJM2885DL1-33
IC 781	(B,65,71) IC	R5523N001B
IC 851	(A,40,24) IC	NJM2360M
IC 871	(A,149,17) IC	BA6288FS
IC 911	(A,16,80) IC	NJM2388F84
IC 951	(A,71,105) IC(P600UB)	TPD1018F
Q 101	(A,19,118) Transistor	UMF23N
Q 241	(A,106,80) Transistor	2SD1767
Q 242	(A,111,78) Transistor	UMD3N
Q 301	(A,124,107) Transistor	IMH23
Q 302	(A,144,124) Transistor	IMH23
Q 303	(A,130,124) Transistor	IMH23
Q 304	(A,90,89) Transistor	UMD3N
Q 351	(A,98,85) Chip Transistor	DTC114EUA
Q 352	(A,98,81) Chip Transistor	DTC114EUA
Q 381	(A,91,100) Transistor	2SC3052-12
Q 651	(A,138,37) Transistor	2SC3052-12
Q 751	(A,15,55) Transistor	2SD2396
Q 752	(A,23,49) Transistor	UMD3N
Q 821	(A,43,43) Transistor	2SD1767
Q 822	(A,36,45) Transistor	UMD3N
Q 831	(A,85,15) Chip Transistor	DTC114EUA
Q 841	(A,103,26) Transistor	UMF23N
Q 851	(A,23,35) Transistor	2SD1760F5
Q 852	(A,28,30) Transistor	UMD3N
Q 871	(A,63,9) Transistor	2SD1760F5
Q 872	(A,50,8) Transistor	UMD3N
Q 901	(A,15,71) Transistor	2SD2396
Q 902	(B,29,71) Transistor	UMD3N
Q 921	(A,79,65) Transistor	UMX1N
Q 931	(B,111,63) Chip Transistor	DTC114EUA
Q 961	(A,89,105) Transistor	2SA1576A
D 181	(A,122,123) Diode	MALS068X
D 182	(A,122,125) Diode	MALS068X
D 201	(A,138,69) Diode Network	DA204U
D 241	(A,107,87) Diode	HZS12L(B1)
D 301	(A,71,92) Diode	1SS133
D 381	(A,68,92) Diode	HZS9L(A3)
D 382	(A,98,77) Diode	DAN202U
D 453	(A,148,89) Diode	1SR154-400
D 501	(A,43,90) Diode	1SR154-400
D 502	(A,44,62) Diode	RB060L-40
D 751	(A,22,52) Diode	HZS7L(C3)
D 801	(B,97,22) Diode	DAP202U

Circuit Symbol and No.		Part No.
D 802	(B,102,22) Diode	DAN202U
D 803	(B,97,14) Diode	DAP202U
D 804	(B,102,14) Diode	DAN202U
D 805	(B,97,27) Diode	DAP202U
D 806	(B,102,27) Diode	DAN202U
D 821	(A,35,42) Diode	HZS11L(A1)
D 831	(A,89,10) LED	SMLE12BC7T(NP)
D 851	(A,38,17) Diode	RB551V-30
D 852	(A,35,32) Diode	HZS11L(A1)
D 871	(A,149,27) Diode	1SS133
D 872	(A,149,24) Diode	1SS133
D 873	(A,53,9) Diode	HZS7L(B3)
D 901	(A,22,67) Diode	HZS6L(B1)
D 902	(A,24,93) Diode	MPG06G-6415G50
D 921	(A,65,92) Diode	HZS7L(C3)
D 922	(A,85,69) Diode	HZS7L(B2)
D 931	(A,99,68) Diode	MPG06G-6415G50
D 941	(A,85,91) Diode(P6000UB, P6050)	MPG06G-6415G50
D 942	(A,81,91) Diode(P6000UB, P6050)	MPG06G-6415G50
D 952	(A,74,91) Diode(P600UB)	MPG06G-6415G50
D 953	(A,78,91) Diode(P600UB)	MPG06G-6415G50
D 961	(A,89,111) Diode	DAN202U
D 981	(A,60,109) Diode	MPG06G-6415G50
D 982	(A,64,106) Diode	MPG06G-6415G50
ZNR401	(B,158,145) Surge Protector	IMSA-6801-01Y901
L 201	(A,122,71) Inductor	LCTAW2R2J2520
L 401	(B,170,145) Inductor	LCTAW220J2520
L 402	(A,154,109) Inductor	LAU1R0K
L 403	(A,157,100) Inductor	LAU2R2K
L 501	(A,44,69) Inductor	CTH1385
L 601	(A,98,53) Ferri-Inductor	LAU100K
L 781	(A,57,74) Inductor	CTF1713
L 782	(A,71,33) Inductor	CTF1379
L 841	(A,112,31) Ferri-Inductor	LAU100K
L 852	(A,30,21) Inductor	CTF1660
L 961	(A,89,118) Inductor	LCTAW2R2J2520
L 981	(A,35,109) Choke Coil 600 µH	CTH1280
X 601	(A,125,63) Crystal Resonator 15.000 MHz	CSS1653
⚠FU301	(B,123,129) Fuse 3 A	CEK1286
⚠	Fuse 10A	YEK5001
SP601	(A,147,68) Buzzer	CPV1062
Y 401	(A,167,148) FM/AM Tuner Unit	CWE2098

RESISTORS

R 101	(B,23,128)	RS1/16S620J
R 102	(B,24,125)	RS1/16S101J
R 103	(B,23,131)	RS1/16S101J
R 104	(A,20,120)	RS1/16S222J
R 105	(A,11,118)	RS1/16S181J
R 106	(A,14,118)	RS1/16S181J
R 107	(A,14,117)	RS1/16S223J
R 108	(A,11,117)	RS1/16S223J
R 113	(A,14,115)	RS1/10SR102J
R 114	(A,11,115)	RS1/10SR102J
R 115	(A,19,115)	RS1/16S562J
R 116	(A,87,56)	RS1/10SR102J
R 117	(A,17,115)	RS1/16S332J
R 151	(B,29,131) (P600UB, P6000UB)	RS1/16S102J
R 152	(B,29,129) (P600UB, P6000UB)	RS1/16S102J
R 181	(A,117,124)	RS1/16S181J
R 182	(A,114,124)	RS1/16S181J
R 183	(A,115,121)	RS1/16S223J
R 184	(A,118,121)	RS1/16S223J
R 201	(A,119,75)	RAB4C102J
R 202	(A,115,75)	RS1/16S101J
R 203	(A,117,75)	RS1/16S101J
R 242	(A,109,75)	RS1/16S182J
R 301	(A,130,107)	RS1/16S390J
R 302	(A,118,107)	RS1/16S390J
R 303	(A,150,124)	RS1/16S390J
R 304	(A,136,124)	RS1/16S390J
R 305	(A,138,124)	RS1/16S390J
R 306	(A,124,124)	RS1/16S390J
R 307	(B,81,84)	RS1/16S102J
R 308	(A,129,107)	RS1/16S223J
R 309	(A,120,107)	RS1/16S223J
R 310	(A,149,124)	RS1/16S223J
R 311	(A,134,124)	RS1/16S223J
R 312	(A,140,124)	RS1/16S223J
R 313	(A,125,124)	RS1/16S223J
R 314	(B,129,125)	RS1/16S0R0J
R 316	(B,139,125)	RS1/16S0R0J
R 351	(B,130,95)	RS1/16S472J
R 352	(B,127,93)	RS1/16S472J
R 353	(A,95,115)	RS1/16S182J
R 354	(A,95,118)	RS1/16S272J
R 355	(A,98,115)	RS1/16S182J
R 356	(A,98,118)	RS1/16S272J
R 357	(A,98,79)	RS1/16S472J
R 358	(A,93,115)	RS1/16S182J
R 359	(A,95,117)	RS1/16S272J
R 360	(A,100,115)	RS1/16S182J
R 361	(A,98,117)	RS1/16S272J
R 362	(A,95,84)	RS1/16S103J
R 363	(A,97,87)	RS1/16S103J
R 364	(A,95,89)	RS1/16S331J
R 365	(B,88,84)	RS1/16S101J
R 366	(A,108,115)	RS1/16S103J
R 381	(A,91,96)	RS1/16S473J
R 382	(A,99,74)	RS1/16S223J
R 383	(A,91,97)	RS1/16S104J
R 401	(B,170,111)	RS1/16S681J
R 403	(A,159,110)	RS1/16S681J
R 405	(B,164,117)	RS1/16S681J
R 406	(B,163,129)	RS1/16S681J
R 407	(B,162,129)	RS1/16S681J
R 502	(B,39,59)	RS1/10SR471J
R 503	(A,46,54)	RS1/16S3302F
R 504	(A,45,52)	RS1/16S333J
R 505	(A,43,54)	RS1/16S8201F
R 506	(A,45,55)	RS1/16S683J
R 507	(A,45,60)	RS1/16S823J
R 601	(A,113,47)	RS1/16S104J
R 602	(A,113,43)	RS1/16S104J
R 603	(A,113,45)	RS1/10SR102J
R 604	(B,119,37)	RS1/16S681J
R 605	(A,116,61)	RS1/16S472J
R 606	(A,116,59)	RS1/16S472J
R 607	(A,118,33)	RS1/16S104J

Circuit Symbol and No.			Part No.
R 608	(A,123,28)		RS1/16S104J
R 609	(B,118,51)		RS1/16S222J
R 610	(B,121,55)		RS1/16S473J
R 611	(B,126,60)		RS1/16S0R0J
R 612	(B,124,37)		RS1/16S472J
R 613	(B,131,56)		RS1/16S473J
R 614	(B,149,53)		RS1/16S104J
R 615	(B,132,63)		RS1/16S102J
R 616	(B,110,55)		RS1/16S104J
R 617	(B,103,59)		RS1/16S104J
R 618	(A,123,68)		RS1/10SR102J
R 619	(B,103,61)		RS1/16S104J
R 620	(B,134,51)		RS1/16S103J
R 621	(B,142,49)		RS1/16S473J
R 622	(B,103,57)		RS1/16S223J
R 623	(B,135,46)		RS1/16S104J
R 624	(B,135,42)	(P6050UB)	RS1/16S104J
R 625	(A,140,43)	(P600UB, P6000UB)	RS1/16S0R0J
R 626	(B,135,44)	(P6000UB)	RS1/16S104J
R 627	(A,140,44)	(P600UB)	RS1/16S0R0J
R 628	(A,117,34)		RS1/16S104J
R 629	(A,106,66)		RS1/16S473J
R 641	(A,140,31)		RS1/16S104J
R 651	(A,140,59)		RS1/16S183J
R 652	(A,137,33)		RS1/16S473J
R 653	(A,135,62)		RS1/10SR102J
R 654	(A,136,35)		RS1/10SR102J
R 701	(B,63,44)		RS1/16S473J
R 702	(A,89,39)		RAB4C472J
R 703	(B,63,42)		RS1/16S104J
R 704	(B,90,44)		RS1/16S221J
R 705	(B,70,44)		RS1/16S221J
R 706	(B,90,41)		RS1/16S221J
R 707	(B,69,42)		RS1/16S221J
R 708	(B,90,39)		RS1/16S221J
R 709	(B,70,40)		RS1/16S102J
R 751	(A,22,55)		RD1/4PU102J
R 784	(B,92,54)		RS1/16S103J
R 801	(B,106,24)		RS1/16S222J
R 802	(B,114,27)		RS1/16S222J
R 803	(B,112,14)		RS1/16S222J
R 804	(B,116,27)		RS1/16S222J
R 805	(B,116,14)		RS1/16S222J
R 806	(B,108,16)		RS1/16S222J
R 807	(B,112,27)		RS1/16S104J
R 808	(B,102,17)		RS1/16S104J
R 821	(A,41,39)		RS1/16S473J
R 822	(A,44,39)		RS1/16S1R0J
R 824	(A,41,47)		RS1/10SR561J
R 831	(A,89,16)		RS1/16S331J
R 842	(A,100,24)		RS1/10SR102J
R 843	(A,100,25)		RS1/16S472J
R 851	(A,48,24)		RD1/4PU272J
R 853	(B,42,24)		RS1/16S101J
R 854	(B,42,22)		RS1/16S101J
R 855	(A,39,29)		RS1/10SR821J
R 856	(A,36,27)		RS1/16S1R0J
R 857	(A,24,30)		RS1/10SR561J
R 871	(A,51,11)		RS1/10SR102J
R 875	(A,145,35)		RAB4C102J

Circuit Symbol and No.			Part No.
R 901	(B,19,70)		RS1/16S223J
R 902	(B,28,73)		RS1/16S681J
R 903	(B,32,73)		RS1/16S681J
R 911	(B,19,88)		RS1/16S473J
R 921	(A,78,69)		RS1/16S104J
R 922	(A,81,64)		RS1/16S103J
R 923	(A,79,69)		RS1/16S473J
R 924	(A,82,64)		RS1/16S223J
R 925	(A,88,73)		RS1/16S472J
R 931	(B,116,65)		RS1/16S103J
R 955	(A,112,68)	(P600UB)	RS1/16S103J
R 961	(A,90,102)		RS1/10SR102J
R 962	(A,89,108)		RS1/16S472J
R 964	(A,88,114)		RS1/16S153J
R 982	(A,62,126)	(P600UB)	RS1/16S0R0J
R 983	(A,74,125)		RS1/4SA102J
R 984	(A,68,125)		RS1/4SA102J

CAPACITORS

C 101	(B,17,132)	CKSRYB104K16
C 102	(B,26,121)	CKSRYB102K50
C 103	(B,26,123)	CKSRYB102K50
C 181	(B,122,125)	CKSRYB104K16
C 182	(A,115,122)	CKSRYB472K50
C 183	(A,118,122)	CKSRYB472K50
C 184	(A,114,117)	CKSRYB105K10
C 185	(A,115,117)	CKSRYB105K10
C 186	(A,117,117)	CKSRYB105K10
C 187	(A,118,117)	CKSRYB105K10
C 188	(A,114,105)	CKSRYB104K16
C 189	(A,113,102)	CEJQ220M16
C 201	(A,126,75)	CEJQ470M16
C 202	(B,126,77)	CKSRYB104K16
C 203	(A,137,67)	CCSRCH470J50
C 205	(A,127,71)	CKSRYB474K10
C 206	(A,132,76)	CEJQ100M16
C 207	(B,110,78)	CKSRYB105K10
C 208	(B,108,76)	CKSRYB105K10
C 209	(B,107,71)	CKSRYB105K10
C 210	(B,109,73)	CKSRYB105K10
C 211	(B,139,85)	CKSRYB224K16
C 212	(B,140,82)	CKSRYB224K16
C 213	(B,84,71)	CKSRYB105K10
C 214	(B,88,75)	CKSRYB105K10
C 215	(B,88,73)	CKSRYB105K10
C 216	(B,83,74)	CKSRYB105K10
C 217	(A,114,84)	CKSQYB475K10
C 218	(A,135,84)	CKSQYB475K10
C 219	(A,112,88)	CKSQYB475K10
C 220	(A,137,88)	CKSQYB475K10
C 221	(A,115,91)	CKSQYB475K10
C 222	(A,135,92)	CKSQYB475K10
C 224	(A,119,97)	CEJQ100M16
C 241	(A,113,97)	CEJQ470M16
C 242	(B,113,93)	CKSRYB104K16
C 243	(A,104,87)	CKSRYB224K16
C 255	(B,128,80)	CKSRYB104K16
C 301	(A,129,102)	CEJQ100M16
C 302	(A,123,102)	CEJQ100M16

Circuit Symbol and No.		Part No.
C 303	(A,146,120)	CEJQ100M16
C 304	(A,133,120)	CEJQ100M16
C 305	(A,140,120)	CEJQ100M16
C 306	(A,126,120)	CEJQ100M16
C 307	(A,78,83)	CEJQ220M16
C 352	(A,95,121)	CKSRYB474K10
C 353	(A,98,121)	CKSRYB474K10
C 354	(A,100,121)	CKSRYB474K10
C 355	(A,93,121)	CKSRYB474K10
C 356	(A,85,83)	CEJQ330M10
C 357	(A,95,124)	CKSQYB474K16
C 358	(A,98,124)	CKSQYB474K16
C 359	(A,100,124)	CKSQYB474K16
C 360	(A,93,124)	CKSQYB474K16
C 361	(A,95,128)	CKSQYB225K10
C 362	(A,99,128)	CKSQYB225K10
C 364	(A,91,83)	CEJQ100M16
C 365	(B,97,144)	CKSRYB104K16
C 366	(A,54,118) 3 300 µF/16 V	CCH1486
C 402	(B,164,106)	CKSRYB103K50
C 403	(B,164,111)	CKSRYB103K50
C 404	(A,160,143)	CKSRYB103K50
C 405	(A,157,105)	CEJQ470M6R3
C 406	(A,157,115)	CEJQ101M16
C 451	(A,155,89)	CEJQ220M16
C 452	(B,148,87)	CKSRYB103K50
C 453	(B,147,74)	CKSYB475K16
C 501	(A,37,59) 100 µF/6.3 V	CCH1804
C 502	(A,42,79)	CEJQ221M16
C 503	(A,48,52)	CKSRYB221K50
C 504	(A,52,65)	CKSRYB105K16
C 506	(A,45,57)	CKSRYB102K50
C 507	(A,47,59)	CKSRYB104K16
C 603	(B,123,66)	CCSRCH180J50
C 604	(B,127,66)	CCSRCH180J50
C 606	(A,107,57)	CEJQ100M16
C 607	(B,126,55)	CKSRYB103K50
C 651	(A,137,62)	CKSRYB105K10
C 652	(A,138,34)	CKSRYB104K16
C 701	(B,82,20)	CKSRYB104K16
C 731	(A,57,45)	CEJQ220M16
C 732	(B,57,43)	CKSRYB103K50
C 733	(B,56,28)	CKSRYB474K10
C 751	(A,66,48)	CEJQ101M16
C 752	(B,80,47)	CKSRYB102K50
C 753	(B,23,50)	CKSRYB473K50
C 781	(B,63,76)	CKSRYB104K16
C 782	(B,60,69)	CKSRYB104K16
C 821	(B,35,44)	CKSRYB473K50
C 841	(B,120,27)	CKSRYB473K50
C 852	(A,51,19)	CEJQ470M25
C 853	(B,47,29)	CKSRYB103K50
C 854	(A,42,19)	CCSRCH331J50
C 855	(A,42,29)	CKSRYB104K16
C 856	(A,42,34)	CEJQ101M16
C 858	(B,34,34)	CKSRYB104K16
C 871	(B,149,29)	CCSRCH101J50
C 872	(B,146,32)	CKSRYB102K50
C 873	(B,149,22)	CCSRCH101J50
C 874	(A,73,7)	CEJQ220M16
C 875	(A,70,10)	CKSRYB104K16
C 877	(A,56,7)	CKSRYB224K16
C 901	(A,21,74)	CEHAR220M16
C 902	(B,25,75)	CKSRYB104K16
C 903	(B,22,64)	CKSRYB103K50
C 904	(A,31,86) 1 500 µ/16 V	CCH1201
C 911	(A,22,85)	CEHAS101M10
C 912	(B,19,84)	CKSRYB103K50
C 913	(A,18,98)	CEJQ101M16
C 931	(B,116,63)	CKSRYB105K16
C 941	(B,87,91) (P6000UB,P6050UB)	CKSRYB473K50
C 952	(A,71,109) (P600UB)	CKSRYB103K50
C 953	(B,75,85) (P600UB)	CKSRYB473K50
C 961	(A,90,114)	CKSRYB104K16
C 981	(B,52,138)	CKSRYB104K16
C 982	(B,54,138)	CKSRYB104K16

B

Unit Number : (P600UB)
Unit Number : (P6000UB)
Unit Number : (P6050UB)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1901	(B,96,23) IC	PEG432A
IC 1921	(A,148,25) IC(P600UB)	PD8178A
	(A,148,25) IC(P6000UB)	PD8177A
	(A,148,25) IC(P6050UB)	PD8180A
IC 1931	(A,77,35) IC	GP1UX31RK
IC 1951	(B,75,14) IC	S-1200B33-M5
Q 1831	(B,61,29) Transistor	UMD3N
Q 1832	(B,20,11) Digital Transistor	DTC143EUA
Q 1833	(B,33,10) Transistor	DTC123JU
Q 1961	(A,133,18) Transistor	2SC4617
Q 1962	(A,126,17) Transistor	2SD1664
D 1831	(A,60,12) LED	SMLE12BC7T(NP)
D 1832	(A,8,35) LED	SMLE12BC7T(NP)
D 1833	(A,153,5) LED	SMLE12BC7T(NP)
D 1834	(A,111,5) LED	SMLE12BC7T(NP)
D 1835	(A,132,5) LED	SMLE12BC7T(NP)
D 1836	(A,23,12) LED	SMLE12BC7T(NP)
D 1837	(A,23,34) LED	SMLE12BC7T(NP)
D 1838	(A,8,11) LED	SMLE12BC7T(NP)
D 1839	(A,60,34) LED	SMLE12BC7T(NP)
D 1901	(B,84,16) Diode	1SS355
L 1951	(B,81,10) Inductor	CTF1617
L 1961	(A,131,18) Inductor	CTF1617
TH1961	(A,136,22) Thermistor	CCX1037
X 1901	(B,83,19) Ceramic Resonator 16.000 MHz	CSS1616
S 1801	(A,162,6) Push Switch	CSG1155
S 1811	(A,42,23) Switch (MULTI CONTROL)	CSX1120
S 1831	(A,58,8) Push Switch	CSG1155
S 1832	(A,10,38) Push Switch	CSG1155
S 1833	(A,157,5) Push Switch	CSG1155
S 1834	(A,115,5) Push Switch	CSG1155
S 1835	(A,139,5) Push Switch	CSG1155
S 1836	(A,25,8) Push Switch	CSG1155
S 1837	(A,25,38) Push Switch	CSG1155
S 1838	(A,10,8) Push Switch	CSG1155

Circuit Symbol and No.			Part No.
S 1839	(A,58,38)	Push Switch	CSG1155

RESISTORS

R 1801	(B,102,38)	RS1/16S222J
R 1802	(B,102,36)	RS1/16S222J
R 1803	(B,157,28)	RS1/16S333J
R 1811	(B,54,27)	RS1/16S103J
R 1812	(B,29,26)	RS1/16S333J
R 1813	(B,29,28)	RS1/16S103J
R 1814	(B,54,24)	RS1/16S102J
R 1815	(B,52,30)	RS1/16S332J
R 1816	(B,29,23)	RS1/16S102J
R 1818	(B,66,11)	RS1/16S103J
R 1819	(B,54,16)	RS1/16S222J
R 1834	(B,66,6)	RS1/16S821J
R 1835	(B,20,15)	RS1/16S821J
R 1836	(B,18,14)	RS1/16S152J
R 1839	(B,29,14)	RS1/16S681J
R 1840	(B,30,14)	RS1/16S681J
R 1841	(B,30,11)	RS1/16S271J
R 1843	(B,32,14)	RS1/16S681J
R 1844	(B,34,14)	RS1/16S681J
R 1901	(A,98,33)	RS1/16S103J
R 1902	(A,93,25)	RS1/16S473J
R 1903	(B,81,15)	RS1/16S154J
R 1904	(B,84,27)	RAB4CQ102J
R 1905	(B,66,21)	RS1/16S104J
R 1906	(B,95,34)	RAB4CQ473J
R 1907	(B,93,11)	RAB4CQ102J
R 1908	(A,93,16)	RS1/16S221J
R 1909	(B,98,34)	RAB4CQ473J
R 1910	(B,141,13)	RAB4CQ101J
R 1911	(B,134,13)	RAB4CQ101J
R 1912	(B,130,15)	RAB4CQ101J
R 1913	(A,102,33)	RS1/16S101J
R 1914	(B,102,34)	RS1/16S101J
R 1915	(B,147,26)	RAB4CQ101J
R 1916	(A,147,16)	RAB4CQ101J
R 1917	(A,144,16)	RAB4CQ101J
R 1918	(A,131,30)	RAB4CQ101J
R 1919	(A,106,33)	RAB4CQ101J
R 1920	(A,108,23)	RAB4CQ101J
R 1931	(B,84,30)	RS1/16S101J
R 1932	(B,75,36)	RS1/16S103J
R 1933	(B,72,27)	RS1/16S2R2J
R 1951	(B,75,10)	RS1/16S222J
R 1961	(A,135,25)	RS1/16S333J
R 1962	(A,135,18)	RS1/16S183J
R 1963	(A,137,23)	RS1/16S563J
R 1964	(A,111,22)	RS1/16S392J
R 1965	(A,108,20)	RAB4CQ101J
R 1966	(A,128,22)	RS1/16S5101D

CAPACITORS

C 1901	(A,89,23)	CKSRYB103K50
C 1902	(B,81,17)	CKSRYF104Z25
C 1903	(B,106,25)	CKSRYB103K50
C 1921	(B,157,31)	CKSRYB103K50
C 1931	(B,78,26)	CKSYB106K6R3
C 1951	(B,75,18)	CKSRYB105K10
C 1952	(B,77,10)	CKSRYB105K10
C 1953	(B,81,12)	CKSRYB105K10
C 1963	(A,113,22)	CKSRYB104K16
C 1964	(B,121,19)	CKSRYB104K16
C 1965	(A,127,22)	CKSRYB104K25
C 1966	(A,124,21)	CKSRYB104K25

C

Unit Number : CWX3526
Unit Name : CD Core Unit
(S10.5COMP2-iPod)

MISCELLANEOUS

IC 201	(A,36,46)	IC	PE5611B
IC 202	(A,24,30)	IC	S-93C66BD0I-J8
IC 205	(B,25,47)	IC	341S2094
IC 301	(A,29,15)	IC	BA5839FP
Q 101	(B,58,70)	Transistor	2SA1577
Q 102	(B,49,58)	Chip Transistor	2SB1689
Q 201	(B,27,54)	Transistor	2SA1577
X 201	(A,23,38)	Ceramic Resonator 16.934 MHz	CSS1603
X 204	(B,17,45)	Oscillator 32.768 kHz	CSS1735
X 205	(B,34,63)	Oscillator 48.000 MHz	CSS1753
S 901	(A,55,37)	Switch(HOME)	CSN1067
S 903	(B,20,59)	Switch(DSCSNS)	CSN1067
S 904	(B,41,68)	Switch(12EJ)	CSN1068
S 905	(B,25,70)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,61,74)	RS1/10SR2R4J
R 102	(B,61,72)	RS1/10SR2R4J
R 103	(B,61,71)	RS1/10SR2R7J
R 104	(B,54,67)	RS1/16SS222J
R 105	(B,45,58)	RS1/16SS102J
R 107	(B,52,60)	RS1/16SS105J
R 201	(A,20,33)	RS1/16S472J
R 202	(A,27,33)	RS1/16SS473J
R 203	(A,51,44)	RS1/16S473J
R 204	(A,24,58)	RS1/16SS221J
R 206	(B,10,27)	RS1/16SS104J
R 210	(B,10,23)	RS1/16SS102J
R 214	(B,50,50)	RS1/16SS472J
R 216	(B,49,49)	RS1/16SS472J
R 221	(A,51,48)	RS1/16SS103J
R 222	(A,51,46)	RS1/16SS103J
R 223	(B,14,43)	RS1/16SS473J
R 225	(A,51,50)	RS1/16SS103J
R 226	(A,51,51)	RS1/16SS393J
R 227	(B,48,52)	RS1/16SS562J
R 228	(B,45,52)	RS1/16SS122J
R 229	(B,47,54)	RS1/16SS472J
R 230	(B,22,25)	RS1/16SS0R0J
R 232	(B,46,52)	RS1/16SS122J
R 233	(B,26,59)	RS1/16SS103J
R 234	(B,23,26)	RS1/16SS473J
R 235	(A,26,59)	RS1/16SS473J
R 237	(A,24,35)	RS1/16SS151J

Circuit Symbol and No.		Part No.
R 240	(B,14,26)	RS1/16S473J
R 241	(B,14,25)	RS1/16SS103J
R 243	(A,22,25)	RS1/16S0R0J
R 244	(B,22,55)	RS1/16SS473J
R 250	(B,25,52)	RS1/16SS101J
R 251	(B,22,51)	RS1/16SS101J
R 252	(B,21,48)	RS1/16SS101J
R 254	(A,26,64)	RS1/16SS104J
R 255	(A,26,63)	RS1/16SS104J
R 256	(A,26,62)	RS1/16SS104J
R 259	(A,28,66)	RS1/16SS0R0J
R 261	(A,26,65)	RS1/16SS104J
R 262	(A,30,60)	RS1/16SS0R0J
R 263	(A,28,63)	RS1/16SS0R0J
R 273	(B,19,48)	RS1/16SS103J
R 274	(B,18,51)	RS1/16SS104J
R 275	(B,19,51)	RS1/16SS104J
R 276	(B,20,51)	RS1/16SS104J
R 277	(B,24,52)	RS1/16SS103J
R 278	(B,27,51)	RS1/16SS1003D
R 279	(B,23,52)	RS1/16SS104J
R 282	(A,30,61)	RS1/16SS240J
R 283	(A,29,61)	RS1/16SS240J
R 284	(B,30,63)	RS1/16SS153J
R 285	(B,28,63)	RS1/16SS153J
R 289	(B,19,45)	RS1/16SS0R0J
R 291	(B,43,62)	RS1/16SS272J
R 292	(B,25,43)	RS1/16SS221J
R 293	(B,27,52)	RS1/16SS472J
R 294	(A,32,63)	RS1/16SS471J
R 295	(B,55,64)	RS1/16SS103J
R 307	(A,35,19)	RS1/16SS183J
R 308	(A,38,19)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J
R 310	(A,38,22)	RS1/16SS183J
R 601	(B,30,31)	RS1/16SS0R0J
R 602	(B,27,31)	RS1/16SS0R0J
R 606	(B,28,23)	RS1/16S0R0J
R 701	(B,12,37)	RS1/16SS221J
R 702	(A,24,56)	RS1/16SS221J
R 708	(B,15,37)	RS1/16S0R0J
R 712	(B,15,54)	RS1/16SS0R0J
R 713	(B,15,53)	RS1/16SS0R0J

CAPACITORS

C 106	(B,57,67)	CKSQYB475K6R3
C 201	(A,27,30)	CKSRYB104K16
C 202	(A,28,57)	CKSSYB104K10
C 204	(A,24,59)	CKSSYB103K16
C 205	(B,27,41)	CKSQYB475K6R3
C 206	(A,23,41)	CKSSYB104K10
C 207	(A,25,38)	CKSRYB104K16
C 209	(B,36,35)	CEVW220M6R3
C 210	(B,29,37)	CKSSYB104K10
C 211	(A,28,35)	CKSSYB104K10
C 212	(A,29,30)	CKSRYB104K16
C 213	(A,46,39)	CKSSYB104K10
C 214	(A,29,34)	CKSSYB104K10
C 216	(A,51,52)	CKSSYB332K50
C 217	(A,48,52)	CKSSYB104K10
C 218	(A,50,52)	CKSSYB473K10
C 219	(A,47,54)	CKSSYB104K10
C 220	(A,48,54)	CKSSYB182K50
C 221	(A,46,54)	CKSSYB104K10
C 222	(B,46,54)	CCSSCH560J50
C 223	(B,48,54)	CCSSCH4R0C50
C 224	(A,45,56)	CKSSYB104K10
C 226	(A,42,59)	CCSSCH680J50
C 227	(A,42,61)	CCSSCH470J50
C 228	(B,41,62)	CKSSYB103K16
C 229	(B,48,60)	CKSSYB104K10
C 236	(A,50,58)	CKSSYB104K10
C 239	(B,47,52)	CCSSCH220J50
C 240	(A,38,61)	CKSSYB104K10
C 243	(B,22,41)	CKSQYB475K6R3
C 250	(A,52,48)	CKSSYB102K50
C 251	(A,52,46)	CKSSYB102K50
C 260	(A,28,61)	CKSSYB104K10
C 261	(B,34,67)	CCSSCH8R0D50
C 262	(B,32,66)	CCSSCH8R0D50
C 290	(B,22,43)	CKSSYB104K10
C 291	(B,17,42)	CCSSCH5R0C50
C 292	(B,17,48)	CCSSCH5R0C50
C 293	(B,44,61)	CKSSYB102K50
C 294	(B,25,41)	CKSSYB103K16
C 295	(B,56,61)	CKSQYB106K6R3
C 296	(B,56,63)	CKSQYB106K6R3
C 303	(A,36,19)	CKSSYB472K25
C 304	(A,36,21)	CKSSYB223K16
C 307	(A,22,11)	CKSRYB104K16
C 308	(B,11,18)	CKSRYB105K10
C 703	(B,15,35)	CCSSCH101J50
C 704	(B,12,36)	CKSSYB102K50
C 711	(A,31,25)	CKSSYB104K10

D

Unit Number : CWS1389
Unit Name : Switch Unit

MISCELLANEOUS

S 1	(A,6,14) Switch(OPEN)	CSN1051
S 2	(A,32,12) Spring Switch(CLOSE)	CSN1052

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026
	Motor Unit(FLAP)	XXA7400