● **CD Player Service Precautions**

1. For pickup unit(CXX1480) handling, please refer to"Disassembly"(see page 49).
   During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a jumper-solder).
2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.
3. Please checking the grating after changing the service pickup unit(see page 43).

1. SAFETY INFORMATION

CAUTION


This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING(DEH-P730/X1N/UC)

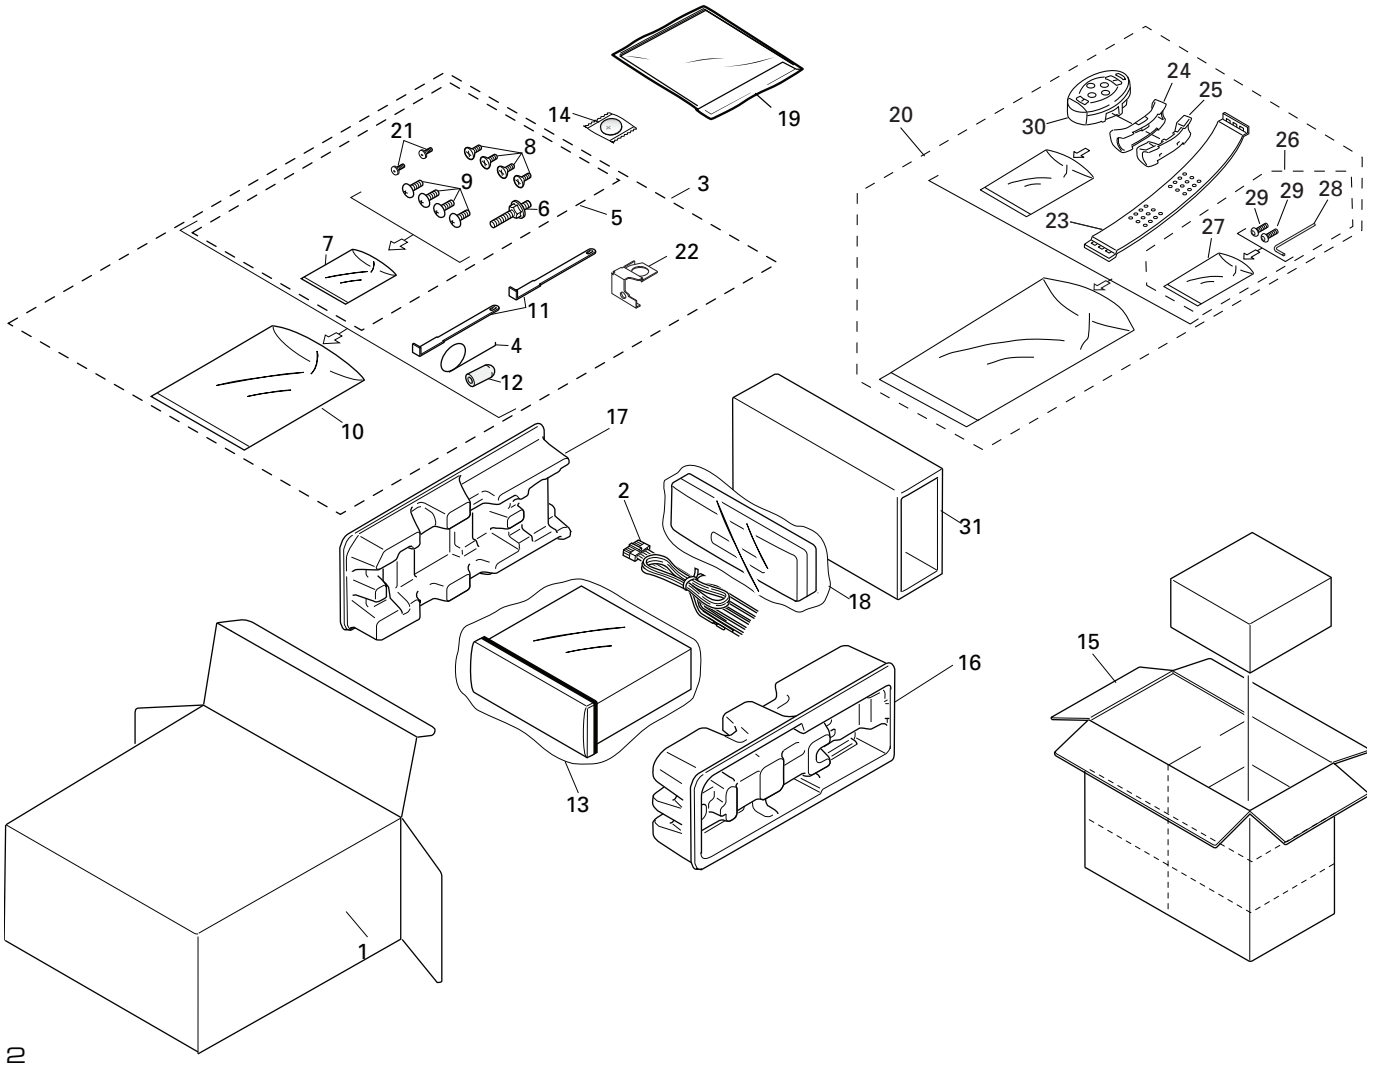

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.


● PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Carton	CHG4328
	2	Cord Assy	CDE6438
	3	Accessory Assy	CEA2773
	4	Spring	CBH1650
	5	Screw Assy	CEA2796
	6	Screw	CBA1002
*	7	Polyethylene Bag	CEG-127
	8	Screw	CRZ50P090FMC
	9	Screw	TRZ50P080FMC
*	10	Polyethylene Bag	CEG-158
	11	Handle	CNC5395
	12	Bush	CNV3930
	13	Polyethylene Bag	CEG1301
*	14	Battery	CEX1065
	15	Contain Box	CHL4328
	16	Protector	CHP2252
	17	Protector	CHP2251
	18	Case Assy	CXB3520
	19-1	Polyethylene Bag	CEG1116
	19-2	Owner's Manual	CRD3384
	19-3	Installation Manual	CRD3385
*	19-4	Caution Card	CRP1207
*	19-5	Warranty Card	CRY1070
*	19-6	Caution Card	CRP1220
	20	Remote Control Assy	CXB6860
	21	Screw	BPZ20P060FZK
	22	Earth Plate	CNC9450
	23	Belt	CZN7661
	24	Holder Assy	CZX3172
	25	Holder Assy	CZX3173
	26	Screw Assy	CZE3169
*	27	Polyethylene Bag	CEG-127
*	28	Hexagonal Wrench	CZE3176
*	29	Screw	RMZ30H060FBK
	30	Remote Control Assy	CZX3246
	31	Inner Box	CHW1754

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P730/X1N/UC	CRD3384	English, French
	CRD3385	English, French

2.2 PACKING(DEH-P7300/X1N/UC)

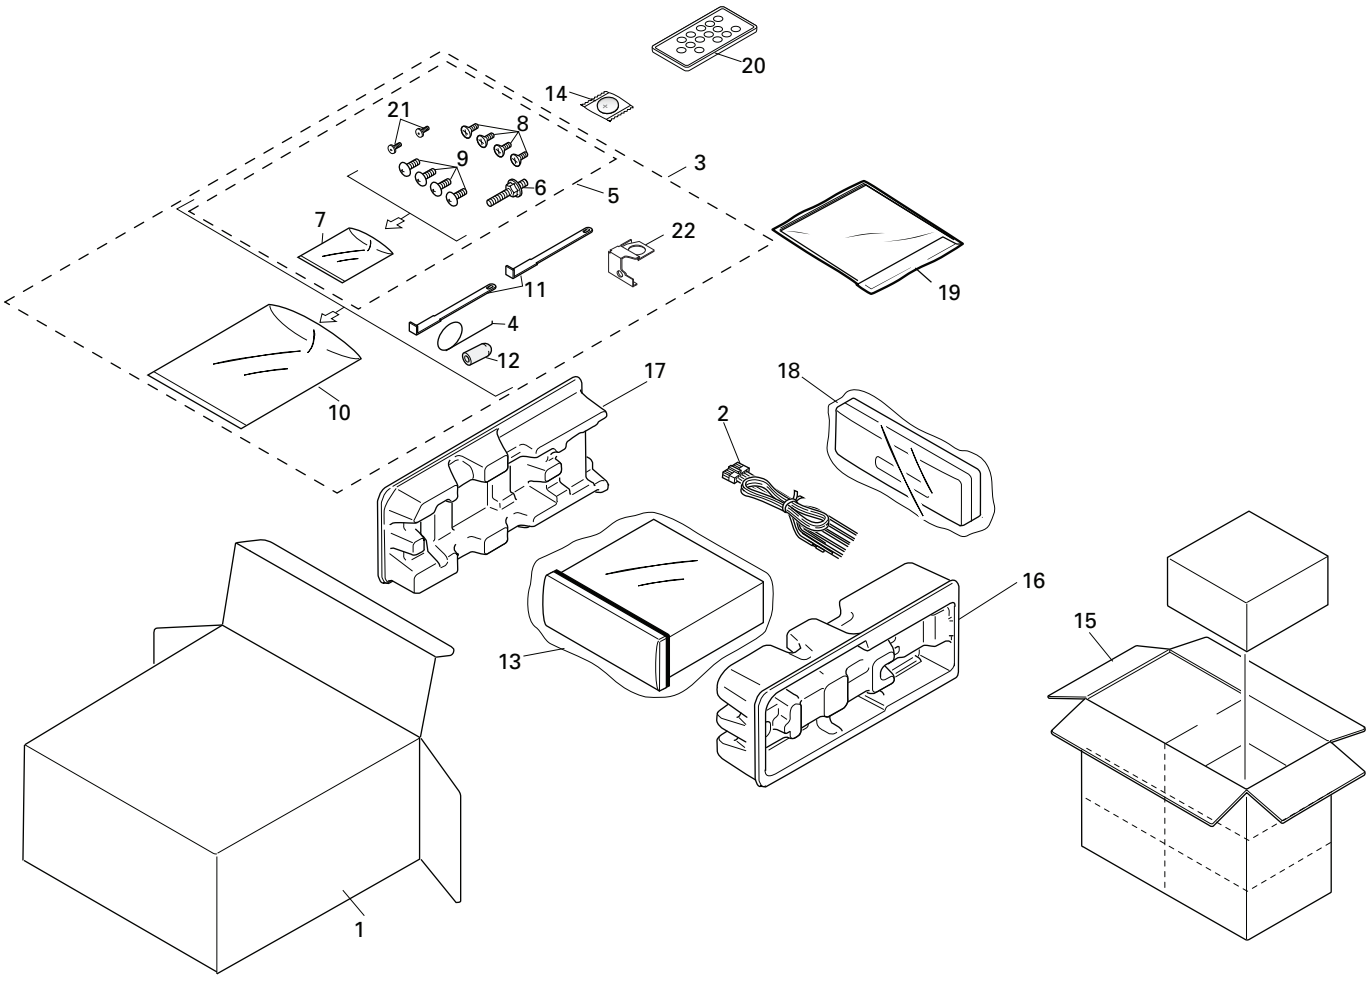


● PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Carton	CHG4327
	2	Cord Assy	CDE6438
	3	Accessory Assy	CEA2773
	4	Spring	CBH1650
	5	Screw Assy	CEA2796
	6	Screw	CBA1002
*	7	Polyethylene Bag	CEG-127
	8	Screw	CRZ50P090FMC
	9	Screw	TRZ50P080FMC
*	10	Polyethylene Bag	CEG-158
	11	Handle	CNC5395
	12	Bush	CNV3930
	13	Polyethylene Bag	CEG1301
*	14	Battery	CEX1065
	15	Contain Box	CHL4327
	16	Protector	CHP2252
	17	Protector	CHP2251
	18	Case Assy	CXB3520
	19-1	Polyethylene Bag	CEG1116
	19-2	Owner's Manual	CRD3382
	19-3	Installation Manual	CRD3383
*	19-4	Card	ARY1048
*	19-5	Caution Card	CRP1207
*	19-6	Caution Card	CRP1220
	20	Remote Control Unit	CXB6797
	21	Screw	BPZ20P060FZK
	22	Earth Plate	CNC9450

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P7300/X1N/UC	CRD3382	English, French
	CRD3383	English, French


2.3 EXTERIOR(DEH-P730/X1N/UC)

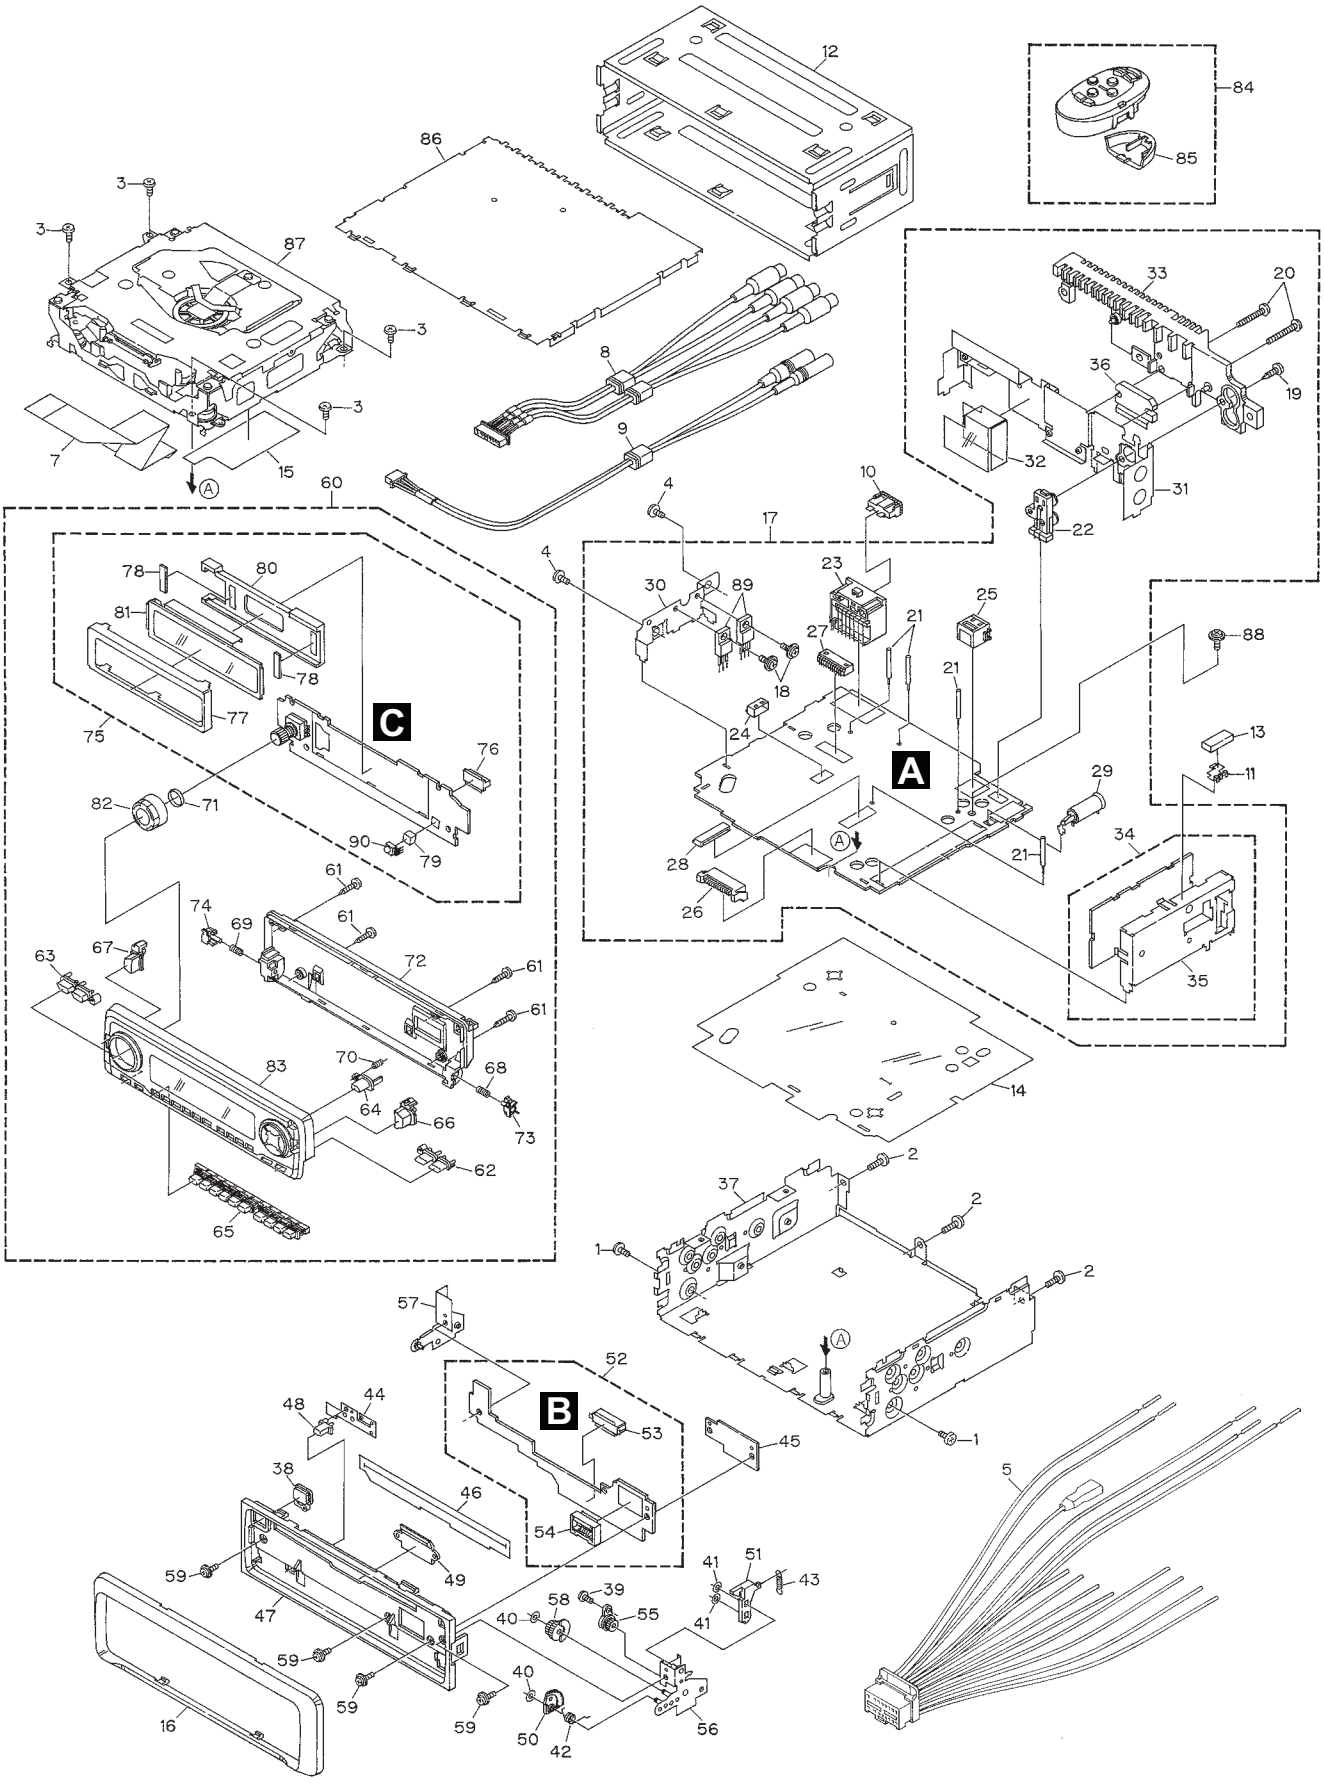

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BMZ30P100FMC
	3	Screw	BSZ26P060FMC
	4	Screw	BSZ30P040FMC
	5	Cord Assy	CDE6438
	6	•••••	
	7	Cable	CDE6451
	8	Cord Assy	CDE6453
	9	Cord Assy	CDE6455
	10	Fuse(10A)	CEK1136
	11	Holder	CNC5704
	12	Holder	CNC8659
	13	Cushion	CNM4870
	14	Insulator	CNM6948
	15	Insulator	CNM7214
	16	Panel	CNS6552
	17	Tuner Amp Unit	CWM7452
	18	Screw	ASZ26P060FMC
	19	Screw	BPZ26P120FMC
	20	Screw	BSZ26P160FMC
	21	Clamper	CEF1007
	22	Pin Jack(CN351)	CKB1035
	23	Plug(CN901)	CKM1330
*	24	Plug(CN451)	CKS1052
	25	Connector(CN101)	CKS3408
	26	Plug(CN801)	CKS3537
	27	Connector(CN352)	CKS3602
	28	Connector(CN653)	CKS3835
	29	Antenna Jack(CN401)	CKX1056
	30	Holder	CNC8615
	31	Holder	CNC9468
	32	Insulator	CNM6949
	33	Heat Sink	CNR1583
	34	FM/AM Tuner Unit	CWE1563
	35	Holder	CNC8815
	36	IC(IC301)	PAL006A
	37	Chassis Unit	CXB6100
	38	Button(EJECT)	CAC6839
	39	Screw(M2x2)	CBA1176
	40	Washer	CBF1038
	41	Washer	CBF1039
	42	Spring	CBH2428
	43	Spring	CBH2429
	44	Spring	CBL1512
	45	Holder	CNC9096
	46	Cover	CNM6854
	47	Panel	CNS6278
	48	Pin	CNV6486
	49	Lighting Conductor	CNV6487
	50	Gear	CNV6507
	51	Arm	CNV6508
	52	Panel Unit	CWM7375
	53	Socket(CN1950)	CKS3550
	54	Connector(CN1951)	CKS4206
	55	Damper Unit	CXB5070
	56	Holder Unit	CXB6356
	57	Holder Unit	CXB6357
	58	Clutch Unit	CXB6358
	59	Screw	IMS20P045FZK
	60	Detach Grille Assy	CXB6533
	61	Screw	BPZ20P100FZK
	62	Button(FUNC AUDIO)	CAC6776
	63	Button(SOURCE DISP)	CAC6777
	64	Button(OPEN)	CAC6780
	65	Button(1-6)	CAC6841
	66	Button(SFEQ)	CAC6842
	67	Button(EQ)	CAC6840
	68	Spring	CBH2430
	69	Spring	CBH2431
	70	Spring	CBH2491
	71	Spring	CBL1470
	72	Cover	CNS6282
	73	Holder	CNV6505
	74	Holder	CNV6506
	75	Keyboard Unit	CWM7808
	76	Connector(CN1901)	CKS4524
	77	Holder	CNC9112
	78	Cushion	CNM6633
	79	Cushion	CNM7469
	80	Holder	CNV6105
	81	OEL Unit	MXS8016
	82	Knob Unit	CXB7239
	83	Sub Grille Assy	CXB7247
	84	Remote Control Assy	CZX3246
	85	Cover	CZN7655
	86	Case Unit	CXB7482
	87	CD Mechanism Module(S9)	CXK5500
	88	Screw	ISS26P055FUC
	89	Transistor(Q921,998)	2SD2396
	90	IC(IC1903)	TSOP1840SB1


2.4 EXTERIOR(DEH-P7300/X1N/UC)

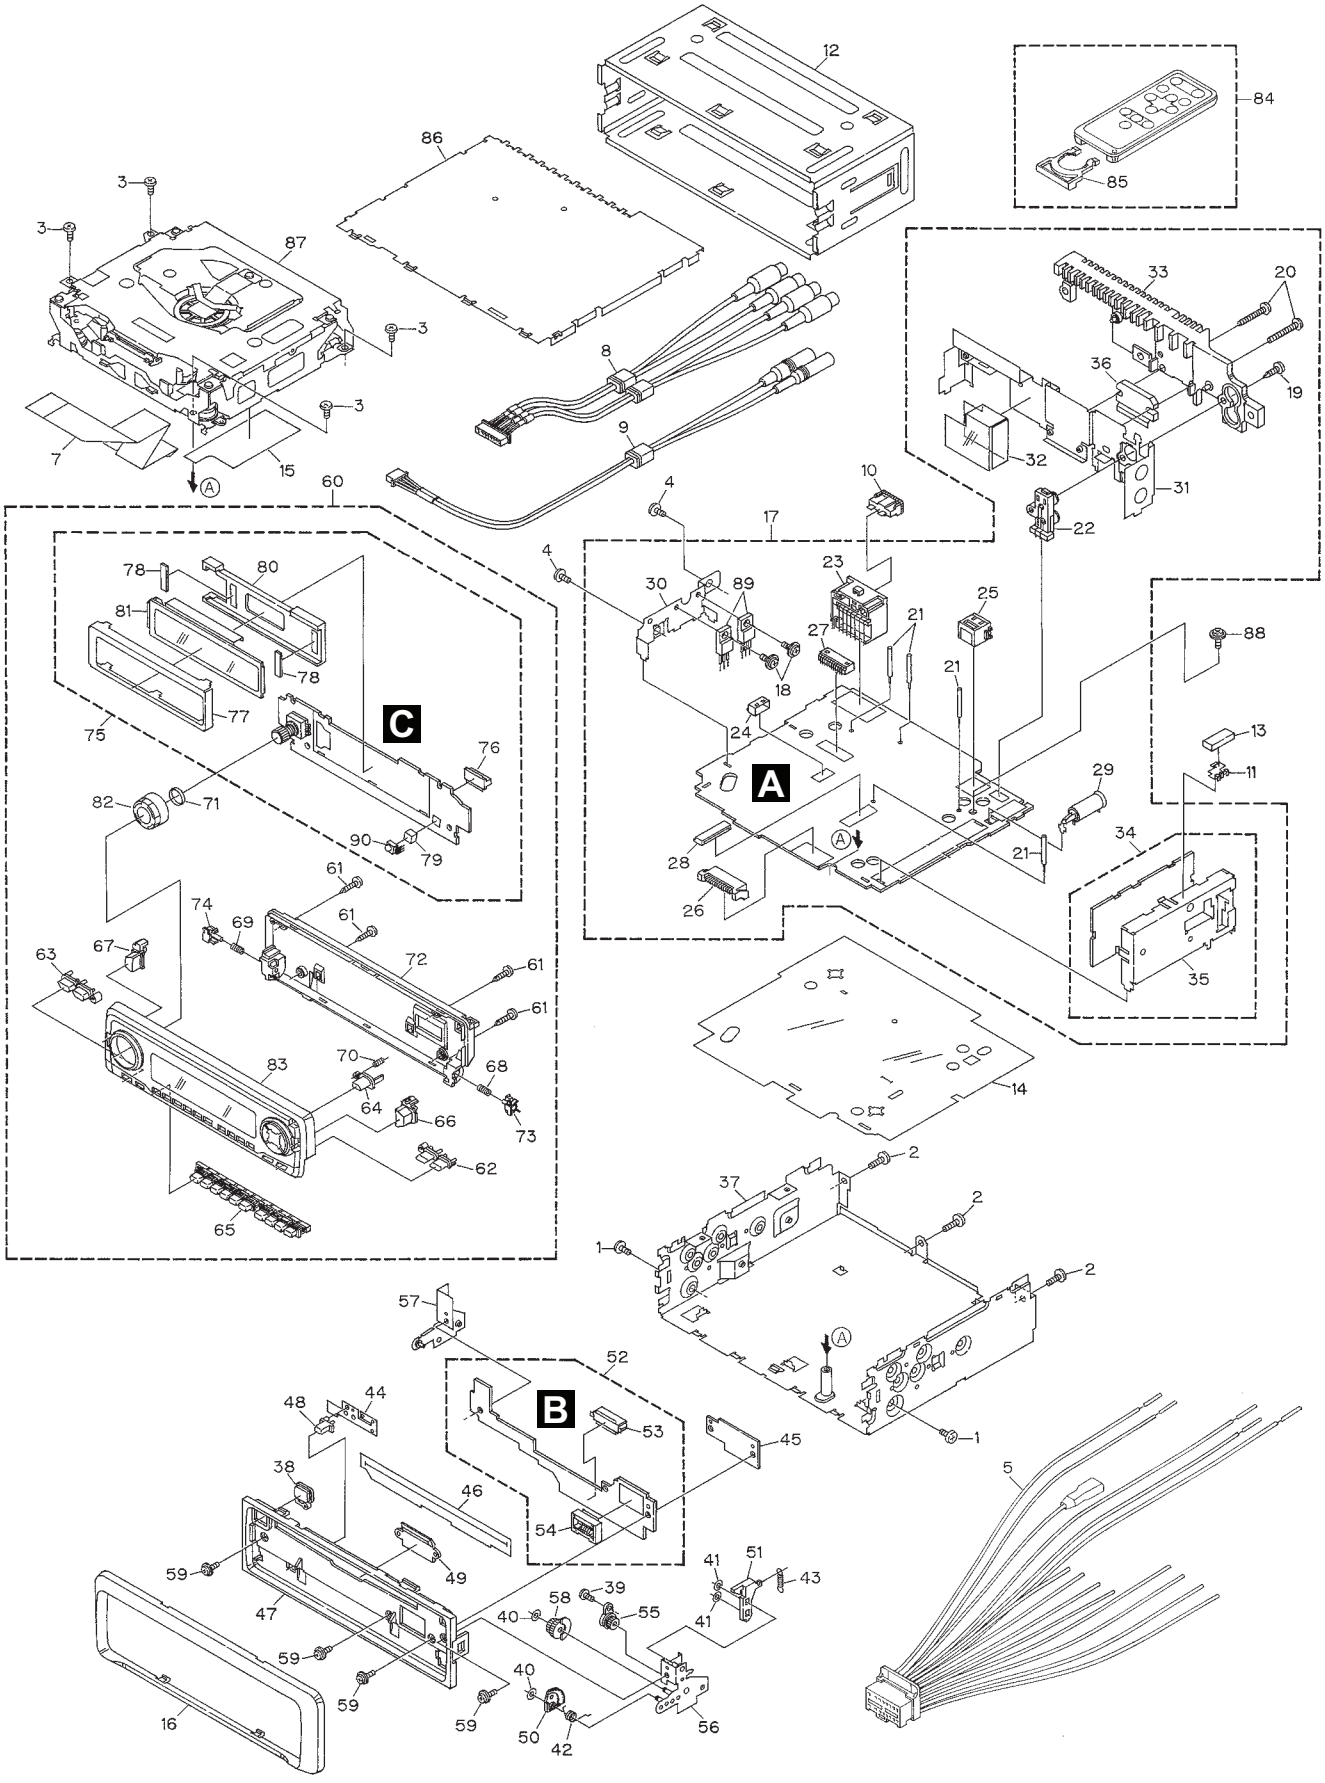

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BMZ30P100FMC
	3	Screw	BSZ26P060FMC
	4	Screw	BSZ30P040FMC
	5	Cord Assy	CDE6438
	6	•••••	
	7	Cable	CDE6451
	8	Cord Assy	CDE6453
	9	Cord Assy	CDE6455
	10	Fuse(10A)	CEK1136
	11	Holder	CNC5704
	12	Holder	CNC8659
	13	Cushion	CNM4870
	14	Insulator	CNM6948
	15	Insulator	CNM7214
	16	Panel	CNS6552
	17	Tuner Amp Unit	CWM7453
	18	Screw	ASZ26P060FMC
	19	Screw	BPZ26P120FMC
	20	Screw	BSZ26P160FMC
	21	Clamper	CEF1007
	22	Pin Jack(CN351)	CKB1035
	23	Plug(CN901)	CKM1330
*	24	Plug(CN451)	CKS1052
	25	Connector(CN101)	CKS3408
	26	Plug(CN801)	CKS3537
	27	Connector(CN352)	CKS3602
	28	Connector(CN653)	CKS3835
	29	Antenna Jack(CN401)	CKX1056
	30	Holder	CNC8615
	31	Holder	CNC9468
	32	Insulator	CNM6949
	33	Heat Sink	CNR1583
	34	FM/AM Tuner Unit	CWE1563
	35	Holder	CNC8815
	36	IC(IC301)	PAL006A
	37	Chassis Unit	CXB6100
	38	Button(EJECT)	CAC6839
	39	Screw(M2x2)	CBA1176
	40	Washer	CBF1038
	41	Washer	CBF1039
	42	Spring	CBH2428
	43	Spring	CBH2429
	44	Spring	CBL1512
	45	Holder	CNC9096
	46	Cover	CNM6854
	47	Panel	CNS6278
	48	Pin	CNV6486
	49	Lighting Conductor	CNV6487
	50	Gear	CNV6507
	51	Arm	CNV6508
	52	Panel Unit	CWM7375
	53	Socket(CN1950)	CKS3550
	54	Connector(CN1951)	CKS4206
	55	Damper Unit	CXB5070
	56	Holder Unit	CXB6356
	57	Holder Unit	CXB6357
	58	Clutch Unit	CXB6358
	59	Screw	IMS20P045FZK
	60	Detach Grille Assy	CXB6534
	61	Screw	BPZ20P100FZK
	62	Button(FUNC AUDIO)	CAC6776
	63	Button(SOURCE DISP)	CAC6777
	64	Button(OPEN)	CAC6780
	65	Button(1-6)	CAC6841
	66	Button(SFEQ)	CAC6842
	67	Button(EQ)	CAC6840
	68	Spring	CBH2430
	69	Spring	CBH2431
	70	Spring	CBH2491
	71	Spring	CBL1470
	72	Cover	CNS6282
	73	Holder	CNV6505
	74	Holder	CNV6506
	75	Keyboard Unit	CWM7467
	76	Connector(CN1901)	CKS4524
	77	Holder	CNC9112
	78	Cushion	CNM6633
	79	Cushion	CNM7469
	80	Holder	CNV6105
	81	OEL Unit	MXS8016
	82	Knob Unit	CXB7239
	83	Sub Grille Assy	CXB7245
	84	Remote Control Unit	CXB6797
	85	Cover	CNS6439
	86	Case Unit	CXB7482
	87	CD Mechanism Module(S9)	CXK5500
	88	Screw	ISS26P055FUC
	89	Transistor(Q921,998)	2SD2396
	90	IC(IC1903)	TSOP1840SB1

2.5 CD MECHANISM MODULE

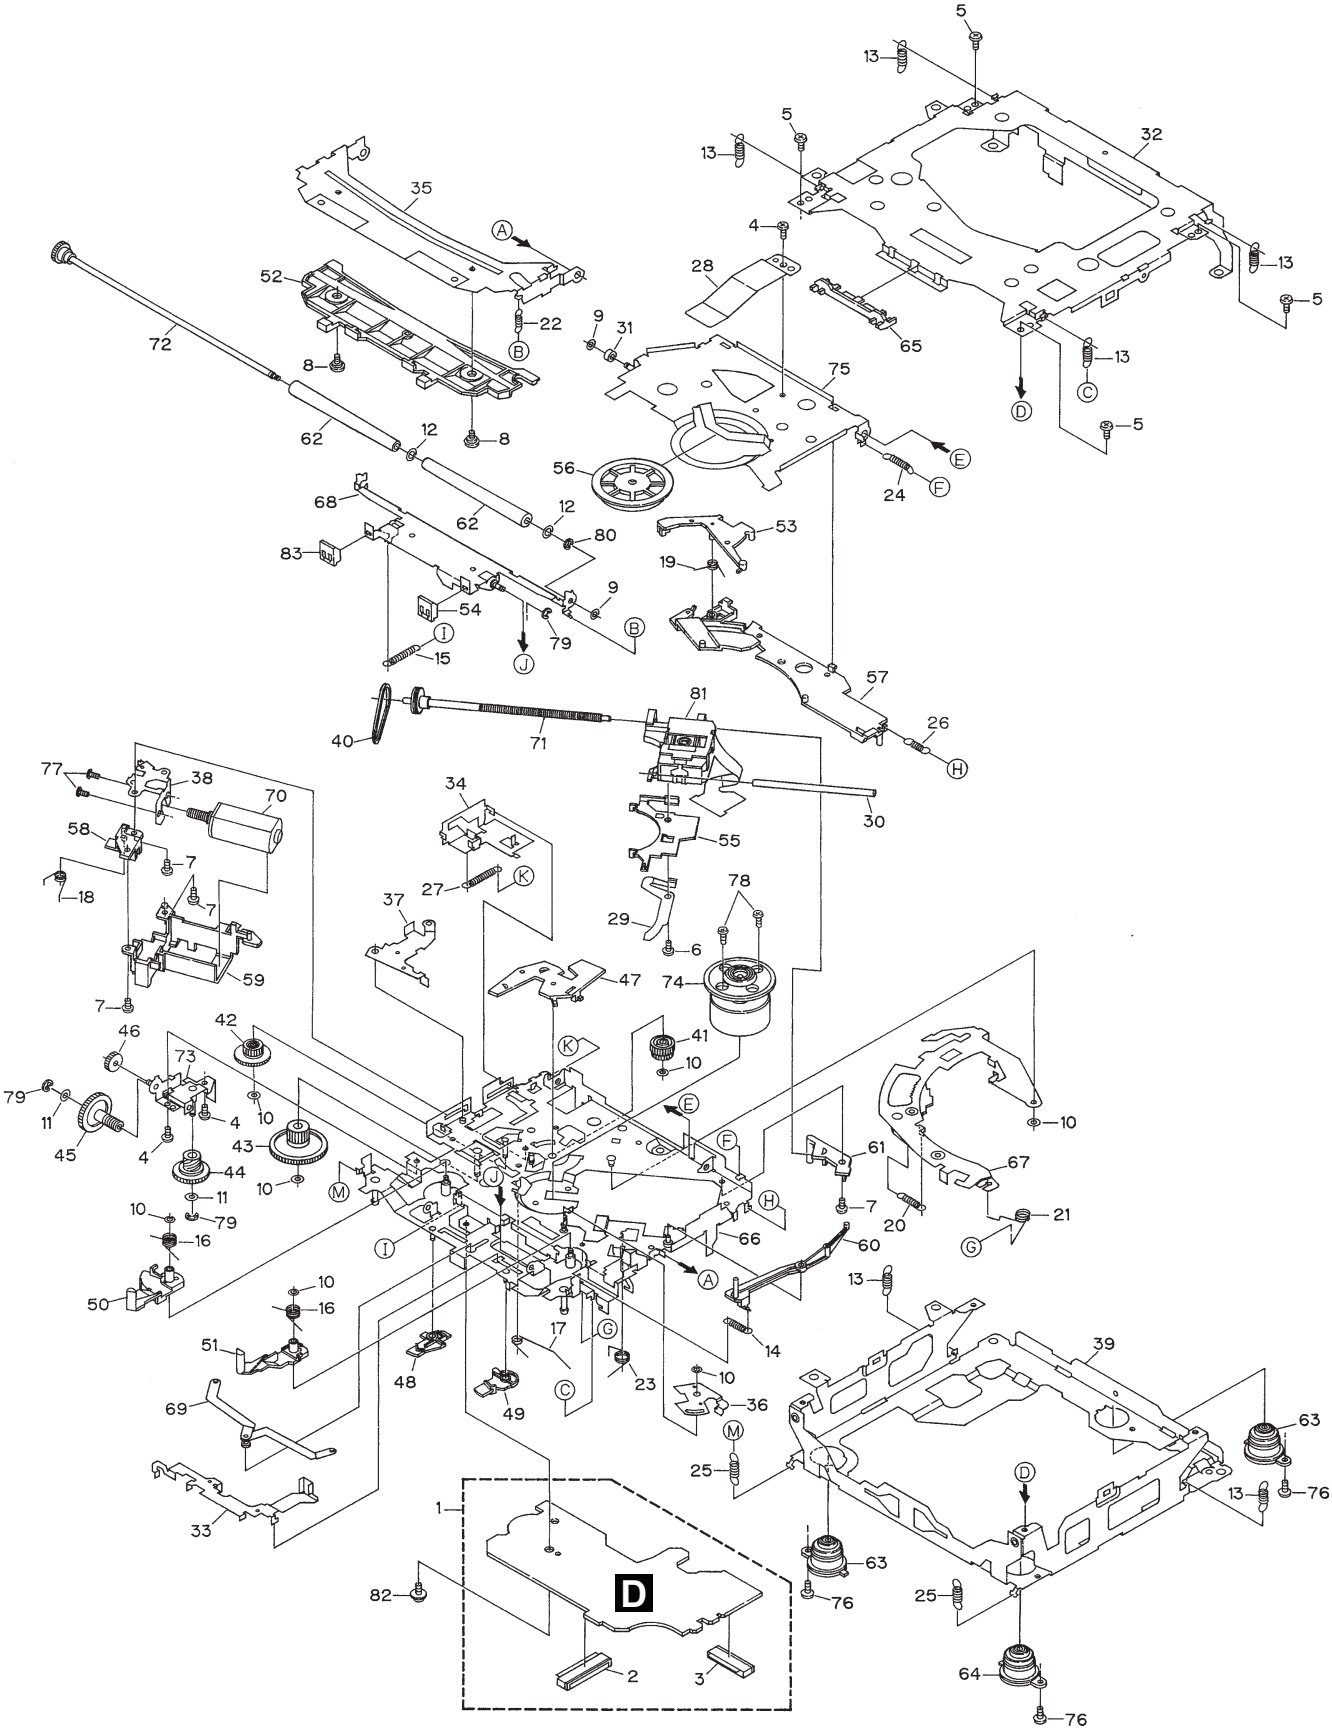

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Control Unit	CWX2481
2	Connector(CN701)	CKS1959
3	Connector(CN101)	CKS3486
4	Screw	BMZ20P025FMC
5	Screw	BSZ20P040FMC
6	Screw(M2x4)	CBA1362
7	Screw(M2x3)	CBA1527
8	Screw	CBA1545
9	Washer	CBF1037
10	Washer	CBF1038
11	Washer	CBF1039
12	Washer	CBF1060
13	Spring	CBH2378
14	Spring	CBH2379
15	Spring	CBH2380
16	Spring	CBH2381
17	Spring	CBH2382
18	Spring	CBH2383
19	Spring	CBH2384
20	Spring	CBH2385
21	Spring	CBH2386
22	Spring	CBH2387
23	Spring	CBH2390
24	Spring	CBH2391
25	Spring	CBH2392
26	Spring	CBH2426
27	Spring	CBH2444
28	Spring	CBL1494
29	Spring	CBL1495
30	Shaft	CLA3845
31	Roller	CLA3910
32	Frame	CNC8946
33	Lever	CNC8948
34	Lever	CNC8949
35	Arm	CNC8951
36	Arm	CNC9016
37	Arm	CNC9017
38	Bracket	CNC9123
39	Frame	CNC9263
40	Belt	CNT1086
41	Gear	CNV6315
42	Gear	CNV6316
43	Gear	CNV6317
44	Gear	CNV6318
45	Gear	CNV6319
46	Gear	CNV6320
47	Arm	CNV6322
48	Arm	CNV6323
49	Arm	CNV6324
50	Arm	CNV6325
51	Arm	CNV6326
52	Guide	CNV6327
53	Arm	CNV6328
54	Guide	CNV6329
55	Rack	CNV6330
56	Clamper	CNV6331
57	Arm	CNV6332
58	Guide	CNV6333
59	Cover	CNV6334
60	Arm	CNV6335
61	Guide	CNV6336
62	Roller	CNV6338
63	Damper	CNV6339
64	Damper	CNV6340
65	Guide	CNV6484
66	Chassis Unit	CXB5898
67	Arm Unit	CXB5899
68	Arm Unit	CXB5900
69	Arm Unit	CXB5901
70	Motor Unit(M2)	CXB5903
71	Screw Unit	CXB5904
72	Gear Unit	CXB5905
73	Bracket Unit	CXB6006
74	Motor Unit(M1)	CXB6007
75	Arm Unit	CXB6237
76	Screw(M2x5)	EBA1028
77	Screw	JFZ20P020FMC
78	Screw	JGZ17P020FZK
79	Washer	YE15FUC
80	Washer	YE20FUC
81	Pickup Unit(Service)(P9)	CXX1480
82	Screw	IMS26P030FMC
83	Guide	CNV6832

5. ELECTRICAL PARTS LIST

NOTES:

● Parts whose parts numbers are omitted are subject to being not supplied.

● The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7452(DEH-P730/X1N/UC)
Unit Number : CWM7453(DEH-P7300/X1N/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	101	IC	CA0008AM
IC	131	IC	BA3834F
IC	203	IC	PML009A
IC	271	IC	PA2028A
IC	301	IC	PAL006A
IC	452	IC	NJM2068MD
IC	601	IC	PD5615A
IC	851	IC	NJM2360M
IC	961	IC	S-80735ANDZI
Q	101	Transistor	2SA1162
Q	102	Transistor	DTC124EK
Q	131	Transistor	2SC2412K
Q	132	Transistor	2SA1162
Q	133	Transistor	DTC144EK
Q	301	Transistor	DTC124EK
Q	351	Transistor	IMH3A
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	401	Transistor	2SC2412K
Q	451	Transistor	2SC3326
Q	454	Transistor	2SA1162
Q	455	Transistor	DTC114EK
Q	801	Transistor	IMD2A
Q	802	Transistor	2SD1760F5
Q	803	Transistor	2SD1859
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EK
Q	851	Transistor	2SD1760F5
Q	852	Transistor	IMD2A
Q	911	Transistor	2SD1760F5
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	IMD2A
Q	931	Transistor	IMX1
Q	932	Transistor	2SC2412K
Q	951	Transistor	2SA1162
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
Q	991	Transistor	IMD2A
Q	998	Transistor	2SD2396
D	751	Diode Network	DA204U
D	801	Diode	HZS6L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	851	Diode	HZS9L(B2)
D	852	Diode	SB05-03C

=====Circuit Symbol and No.		===Part Name	Part No.
D	901	Diode	1SR139-400
D	902	Diode	1SR139-400
D	903	Diode	1SR139-400
D	904	Diode	1SR139-400
D	911	Diode	1SR139-400
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS9L(C1)
D	922	Diode	1SR139-400
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	951	Diode	DAN202U
D	981	Diode	DAN202U
D	982	Diode	HZS9L(B1)
D	991	Diode	HZS9L(B1)
ZNR	451	Surge Protector	DSP-201M-A21F
L	271	Ferri-Inductor	LAU101K
L	401	Ferri-Inductor	LAU2R2K
L	402	Ferri-Inductor	LAU4R7K
L	403	Ferri-Inductor	LAU1R0M
L	451	Inductor	CTF1378
L	601	Ferri-Inductor	LAU2R2K
L	801	Inductor	LAU100K
L	852	Inductor	CTF1510
L	853	Inductor	CTF1489
L	901	Choke Coil 600µH	CTH1221
L	951	Ferri-Inductor	LAU2R2K
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DETACH SENSE)	CSN1039
VR	751	Semi-fixed 10kΩ(B)	CCP1229
FU	451	Fuse 200mA	CEK1189
MIC	751	Microphone	CPM1011
BZ	641	Buzzer	CPV1050
		FM/AM Tuner Unit	CWE1563

RESISTORS

R	101		RS1/16S101J
R	102		RS1/16S470J
R	103		RS1/16S101J
R	104		RS1/16S222J
R	105		RS1/16S103J
R	106		RS1/16S562J
R	107		RS1/16S332J
R	108		RS1/16S150J
R	109		RS1/16S181J
R	110		RS1/16S181J
R	111		RS1/16S223J
R	112		RS1/16S223J
R	113		RS1/16S102J
R	114		RS1/16S102J
R	131		RS1/16S224J
R	132		RS1/16S224J
R	133		RS1/16S104J
R	134		RS1/16S102J
R	135		RS1/16S104J
R	136		RAB4C102J

=====Circuit Symbol and No.		===Part Name	Part No.
R	137		RS1/16S473J
R	138		RS1/16S102J
R	139		RS1/16S103J
R	140		RS1/16S103J
R	141		RS1/16S223J
R	142		RS1/16S822J
R	151		RS1/16S0R0J
R	152		RS1/16S0R0J
R	161		RS1/16S272J
R	162		RS1/16S272J
R	163		RS1/16S162J
R	164		RS1/16S162J
R	230		RS1/16S0R0J
R	245		RS1/16S101J
R	246		RS1/16S101J
R	247		RS1/16S101J
R	248		RS1/16S101J
R	249		RS1/16S101J
R	250		RS1/16S101J
R	283		RS1/16S223J
R	301		RS1/16S103J
R	302		RS1/16S103J
R	304		RS1/16S331J
R	351		RS1/16S820J
R	352		RS1/16S820J
R	353		RS1/16S820J
R	354		RS1/16S820J
R	355		RS1/16S820J
R	356		RS1/16S820J
R	357		RS1/16S223J
R	358		RS1/16S223J
R	359		RS1/16S223J
R	360		RS1/16S223J
R	361		RS1/16S223J
R	362		RS1/16S223J
R	363		RS1/16S0R0J
R	364		RS1/16S0R0J
R	365		RS1/16S0R0J
R	366		RS1/16S0R0J
R	367		RS1/16S0R0J
R	368		RS1/16S0R0J
R	369		RS1/16S471J
R	370		RS1/16S471J
R	371		RS1/16S471J
R	372		RS1/16S471J
R	373		RS1/16S471J
R	374		RS1/16S471J
R	401		RS1/16S473J
R	402		RS1/16S473J
R	403		RS1/16S681J
R	404		RS1/16S681J
R	409		RS1/16S681J
R	410		RS1/16S103J
R	411		RS1/16S681J
R	412		RS1/16S681J
R	413		RS1/16S681J
R	414		RS1/16S473J
R	415		RS1/16S472J
R	416		RS1/16S473J
R	417		RS1/16S473J
R	418		RS1/16S473J
R	419		RS1/16S222J
R	420		RS1/16S222J
R	424		RS1/16S393J
R	451		RS1/16S152J

=====Circuit Symbol and No.		===Part Name	Part No.
R	452		RS1/16S102J
R	453		RS1/16S471J
R	456		RS1/16S102J
R	457		RS1/16S102J
R	462		RS1/16S0R0J
R	463		RS1/16S0R0J
R	465		RS1/16S105J
R	468		RS1/16S223J
R	469		RS1/16S103J
R	470		RS1/16S105J
R	472		RS1/16S0R0J
R	473		RS1/16S103J
R	474		RS1/16S103J
R	475		RS1/16S123J
R	476		RS1/16S473J
R	477		RS1/16S103J
R	483		RS1/16S152J
R	484		RS1/16S223J
R	485		RS1/16S0R0J
R	506		RS1/16S0R0J
R	601		RS1/16S473J
R	603	(DEH-P7300/X1N/UC)	RS1/16S473J
R	604	(DEH-P730/X1N/UC)	RS1/16S473J
R	608		RS1/16S104J
R	611		RS1/16S102J
R	612		RS1/16S102J
R	613		RAB4C222J
R	614		RS1/16S222J
R	615		RS1/16S104J
R	616		RS1/16S473J
R	618		RS1/16S222J
R	619		RS1/16S473J
R	620		RS1/16S472J
R	621		RS1/16S473J
R	622		RS1/16S104J
R	623		RS1/16S473J
R	624		RS1/16S0R0J
R	627		RS1/16S104J
R	628		RS1/16S104J
R	630		RS1/16S104J
R	633		RS1/16S104J
R	641		RS1/16S102J
R	751		RS1/16S104J
R	752		RS1/16S222J
R	753		RS1/16S561J
R	754		RS1/16S104J
R	801		RS1/16S332J
R	805		RS1/16S271J
R	806		RS1/16S271J
R	807		RS1/16S473J
R	808		RS1/16S473J
R	809		RS1/16S102J
R	810		RS1/16S222J
R	811		RS1/16S222J
R	812		RS1/16S222J
R	813		RS1/16S222J
R	814		RS1/16S222J
R	815		RS1/16S473J
R	816		RS1/16S104J
R	817		RD1/4PU391J
R	819		RS1/16S222J
R	820		RS1/16S222J
R	851		RS1/16S331J
R	852		RD1/4PU302J
R	853		RD1/4PU302J

Circuit Symbol and No.	Part Name	Part No.
R 854		RS1/16S121J
R 855		RS1/16S391J
R 856		RS1/16S1R0J
R 857		RS1/16S331J
R 912		RS1/16S681J
R 913		RS1/16S223J
R 914		RS1/16S681J
R 922		RD1/4PU221J
R 923		RS1/16S102J
R 924		RS1/16S223J
R 931		RS1/16S472J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S104J
R 936		RS1/16S103J
R 937		RS1/16S473J
R 938		RD1/4PU102J
R 939		RD1/4PU102J
R 951		RD1/4PU153J
R 952		RS1/16S472J
R 953		RS1/16S472J
R 954		RS1/16S102J
R 962		RS1/16S102J
R 964		RS1/16S822J
R 982		RS1/16S473J
R 983		RS1/16S104J
R 984		RS1/16S473J
R 985		RD1/4PU102J
R 991		RD1/4PU221J
R 992		RD1/4PU221J
R 993		RS1/16S472J
R 994		RS1/16S222J
R 995		RS1/16S0R0J
R 997		RAB4C102J

CAPACITORS

Circuit Symbol and No.	Part Name	Part No.
C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 131		CKSRYB104K16
C 132		CKSRYB104K16
C 133		CKSRYB224K16
C 134		CKSRYB103K50
C 135		CEJQ1R0M50
C 136		CKSRYB104K16
C 137		CKSRYB104K16
C 138		CKSRYB104K16
C 161		CKSRYB183K25
C 162		CKSRYB183K25
C 171		CEJQ470M10
C 172		CKSRYB104K16
C 173		CEJQ100M16
C 177		CCSRCH100D50
C 178		CCSRCH100D50
C 179		CCSRCH100D50
C 180		CCSRCH100D50
C 191		CEJQ1R0M50
C 192		CEJQ1R0M50
C 205		CEJQR22M50
C 206		CEJQR22M50
C 207		CEJQ1R0M50
C 208		CEJQ1R0M50
C 209		CEJQ1R0M50
C 210		CEJQ1R0M50
C 211		CEJQNP4R7M16
C 212		CEJQNP4R7M16
C 213		CEJQNP4R7M16
C 214		CEJQNP4R7M16
C 215		CEJQNP4R7M16
C 216		CEJQNP4R7M16
C 217		CEJQNP4R7M16
C 218		CEJQNP4R7M16
C 271		CEJQNP1R0M50
C 272		CEJQNP1R0M50
C 273		CEJQNP1R0M50
C 274		CEJQNP1R0M50
C 275		CEJQNP1R0M50
C 276		CEJQNP1R0M50
C 277		CEJQ4R7M35
C 278		CEJQ101M16
C 279		CEJQ100M16
C 280		CEJQ100M16
C 281		CKSRYB105K10
C 282		CKSYB684K16
C 283		CASAQ4R7M16
C 284		CEJQ330M25
C 285		CEJQ330M25
C 306		CEJQ330M10
C 307	4700µF/16V	CCH1367
C 309		CKSRYB104K16
C 310		CEJQ100M16
C 311		CFTNA105J50
C 313		CFTNA224J50
C 314		CFTNA224J50
C 315		CFTNA224J50
C 316		CFTNA224J50
C 351		CEJQ100M35
C 352		CEJQ100M35
C 353		CEJQ100M35
C 354		CEJQ100M35
C 355		CEJQ100M35
C 356		CEJQ100M35
C 357		CKSRYB222K50
C 358		CKSRYB222K50
C 359		CKSRYB222K50
C 360		CKSRYB222K50
C 361		CKSRYB222K50
C 362		CKSRYB222K50
C 403		CKSRYB473K25
C 404		CEAL101M6R3
C 405		CKSRYB103K50
C 406		CEJQ220M10
C 407		CKSQYB103K50
C 408		CKSRYB223K25
C 409		CKSRYB223K25
C 411		CKSRYB472K50
C 440		CKSRYB103K25
C 451		CEJQ100M16
C 453		CKSRYB224K16
C 454		CKSRYB224K16
C 457		CKSRYB473K16
C 459		CKSRYB104K16
C 460		CKSRYB104K16
C 461		CKSRYB224K16
C 462		CCSRCH471J50
C 464		CEJQ100M16
C 465		CKSRYB104K16
C 466		CEJQ100M16
C 601		CEJQ4R7M35
C 602		CKSRYB102K50
C 604		CCSRCH180J50
C 605		CCSRCH180J50

=====Circuit Symbol and No.		===Part Name	Part No.
C	653		CKSRYB103K50
C	751		CEJQ100M16
C	752		CEJQ100M16
C	753		CEJQ220M10
C	754		CKSRYB474K10
C	756		CKSRYB474K10
C	801		CKSRYB103K50
C	802		CEJQ470M10
C	803		CKSRYB104K16
C	806		CKSRYB473K25
C	812		CKSYB475K16
C	851		CEJQ470M16
C	853	4.7µF/25V	CCG1111
C	855		CEJQ100M25
C	856		CCSRCH331J50
C	857		CEJQ330M25
C	858		CKSRYB104K16
C	859		CEJQ101M10
C	860		CKSRYB104K16
C	861		CKSRYB103K25
C	911		CEAT102M16
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921	330µF/10V	CCH1181
C	922		CKSRYB103K50
C	923		CEJQ100M16
C	931		CEJQ100M16
C	963		CEJQ2R2M50
C	991		CKSRYB473K25
C	992		CKSRYB102K50
C	993		CEJQ101M10

C Unit Number : CWM7808(DEH-P730/X1N/UC)
Unit Number : CWM7467(DEH-P7300/X1N/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1901	IC	PD5627A
IC	1902	IC (DEH-P730/X1N/UC)	PD8086A
		IC (DEH-P7300/X1N/UC)	PD8074A
IC	1903	IC	TSOP1840SB1
IC	1904	IC	PD5536A
Q	1907	Transistor	2SD1664
Q	1908	Transistor	2SC4617
D	1901	Diode	DAP202U
D	1902	Diode	DAN202U
D	1904	Diode	1SS355
D	1914	LED	CL170UBX
D	1917	Diode	DAN202U
D	1922	LED	CL170PGCD
D	1923	LED	CL170PGCD
D	1924	LED	CL170PGCD
D	1925	LED	CL170PGCD
L	1901	Chip-Inductor	LCTA2R2J3225
L	1904	Chip-Inductor	LCTA2R2J3225
L	1905	Inductor	LCTA220J2520
L	1906	Inductor-Array	CTF1421
L	1907	Inductor-Array	CTF1421
L	1908	Inductor	LCTA220J2520
L	1909	Inductor	CTF1484
L	1910	Inductor	CTF1410
L	1911	Inductor	CTF1410
L	1912	Inductor-Array	CTF1421
TH	1901	Thermistor	CCX1037
X	1901	Ceramic Resonator 15.62MHz	CSS1458
S	1901	Push Switch	CSG1112
S	1903	Push Switch	CSG1111

=====Circuit Symbol and No.		===Part Name	Part No.
S	1906	Push Switch	CSG1112
S	1907	Switch	CSG1107
S	1908	Push Switch	CSG1146
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Push Switch	CSG1112
S	1918	Push Switch	CSG1112
S	1919	Switch	CSG1107
S	1920	Push Switch	CSG1112
S	1922	Push Switch	CSG1112
S	1923	Push Switch	CSG1112
S	1924	Push Switch	CSG1112
S	1930	Encoder	CSD1059
VR	1902	Semi-fixed 20kΩ(B)	CCP1231
		OEL Unit	MXS8016

RESISTORS

R	1901		RS1/16S154J
R	1902		RS1/16S473J
R	1903		RS1/16S101J
R	1906		RS1/16S102J
R	1907		RS1/16S473J
R	1909		RS1/16S101J
R	1910		RAB4C101J
R	1911		RAB4C101J
R	1912		RAB4C101J
R	1913		RAB4C101J
R	1915		RAB4C101J
R	1918		RAB4C101J
R	1921		RAB4C102J
R	1922		RS1/16S121J
R	1923		RS1/16S2R2J
R	1924		RS1/16S222J
R	1925		RS1/16S222J
R	1928		RS1/16S102J
R	1929		RS1/16S102J
R	1930		RS1/16S222J
R	1931		RS1/16S101J
R	1932		RS1/16S333J
R	1933		RS1/16S683J
R	1934		RS1/16S393J
R	1935		RS1/16S392J
R	1940		RS1/16S0R0J
R	1949		RS1/16S1R0J
R	1960		RS1/16S202J
R	1961		RS1/16S121J
R	1962		RS1/16S121J
R	1963		RS1/16S121J
R	1964		RS1/16S391J
R	1965		RS1/16S121J
R	1966		RS1/16S121J
R	1967		RS1/16S202J
R	1968		RS1/16S391J
R	1969		RS1/16S121J
R	1970		RS1/16S121J
R	1971		RS1/16S121J
R	1972		RS1/16S121J
R	1973		RS1/16S121J
R	1979		RS1/16S0R0J
R	1989		RS1/16S222J
R	1990		RS1/16S822J
R	1991		RAB4C101J

=====Circuit Symbol and No.	===Part Name	Part No.
R 1992		RAB4C101J
R 1993		RS1/16S473J
R 1996		RS1/16S101J
R 1997		RS1/16S473J
R 1998		RS1/16S103J
CAPACITORS		
C 1902		CKSRYB103K25
C 1903		CSZSR100M16
C 1904		CSZSR100M16
C 1906		CKSRYB103K25
C 1907		CCSRCH101J50
C 1908		CKSRYB473K16
C 1913		CSZSR100M16
C 1922		CKSRYB104K16
C 1926		CKSRYB104K25
C 1927		CKSRYB104K25
C 1928		CKSRYB104K25
C 1929		CKSRYB104K16
C 1936		CKSRYB104K25
C 1937		CKSRYB104K16
C 1938		CKSRYB104K16
C 1941		CKSRYB104K16
C 1943	4.7µF/25V	CCG1111
C 1945		CKSRYB104K25
C 1946		CKSRYB104K16
C 1947		CKSRYB103K25
C 1948		CKSRYB103K25

B Unit Number : CWM7375
Unit Name : Panel Unit

MISCELLANEOUS

D	1950	LED	CL220PGC
S	1950	Push Switch(EJECT)	CSG1112

RESISTORS

R	1952		RS1/16S101J
R	1953		RS1/16S101J

D Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101	RS1/16S222J
R	102	RS1/8S120J
R	103	RS1/8S100J
R	201	RS1/16S513J
R	202	RS1/16S513J

=====Circuit Symbol and No.	===Part Name	Part No.
R 203		RS1/16S823J
R 204		RS1/16S823J
R 206		RS1/16S823J
R 208		RS1/16S124J
R 209		RS1/16S183J
R 210		RS1/16S153J
R 211		RS1/16S103J
R 212		RS1/16S103J
R 213		RS1/16S124J
R 215		RS1/16S0R0J
R 216		RS1/16S471J
R 301		RS1/16S333J
R 302		RS1/16S332J
R 303		RS1/16S332J
R 304		RS1/16S514J
R 306		RS1/16S102J
R 307		RS1/16S102J
R 312		RS1/16S103J
R 313		RS1/16S473J
R 315		RD1/4PU334J
R 321		RS1/16S331J
R 322		RS1/16S0R0J
R 323		RS1/16S332J
R 401		RS1/16S684J
R 402		RS1/16S103J
R 403		RS1/16S103J
R 404		RS1/16S183J
R 405		RS1/16S123J
R 407		RS1/16S622J
R 408		RS1/16S622J
R 409		RS1/16S113J
R 410		RS1/16S752J
R 701		RS1/16S102J
R 702		RS1/16S221J
R 703		RS1/16S221J
R 704		RS1/16S221J
R 705		RS1/16S221J
R 706		RS1/16S221J
R 707		RS1/16S221J
R 708		RS1/16S102J
R 709		RS1/16S102J
R 710		RS1/16S102J
R 901		RS1/16S104J
R 902		RS1/16S473J
R 903		RS1/16S273J

CAPACITORS

C	101	CEV470M6R3
C	102	CKSRYB102K50
C	103	CKSRYB104K16
C	104	CKSRYB224K16
C	105	CEV470M6R3
C	106	CKSRYB104K16
C	107	CKSRYB105K6R3
C	201	CKSRYB104K16
C	202	CCSRCH560J50
C	204	CKSRYB224K16
C	205	CKSRYB224K16
C	206	CKSRYB273K25
C	207	CKSRYB273K25
C	208	CKSRYB104K16
C	209	CKSRYB104K16
C	210	CCSRCK2R0C50
C	211	CCSRCH220J50
C	301	CKSRYB153K25
C	302	CKSRYB104K16
C	303	CKSRYB103K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	304		CKSRYB103K50
C	305		CKSRYB104K16
C	306		CKSRYB104K16
C	307		CKSRYB333K16
C	308		CKSRYB104K16
C	309		CKSRYB473K16
C	310		CKSRYB473K16
C	311		CKSRYB104K16
C	312		CKSRYB104K16
C	315		CEV220M6R3
C	317		CKSRYB104K16
C	318		CKSRYB104K16
C	319		CKSRYB104K16
C	320		CCSRCH470J50
C	325		CKSRYB471K50
C	328		CKSRYB472K50
C	329		CKSRYB104K16
C	330		CKSRYB104K16
C	331		CKSRYB104K16
C	401		CKSRYB221K50
C	402		CKSRYB221K50
C	403		CKSRYB153K25
C	404		CKSRYB103K50
C	405		CEV101M10
C	702		CKSRYB104K16
C	703		CKSRYB104K16
C	801	10µF/10V	CCH1349
C	802		CEV101M10
C	803		CKSRYB224K16

Miscellaneous Parts List

		Pickup Unit(Service)(P9)	CXX1480
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903