
9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKINGSECTION

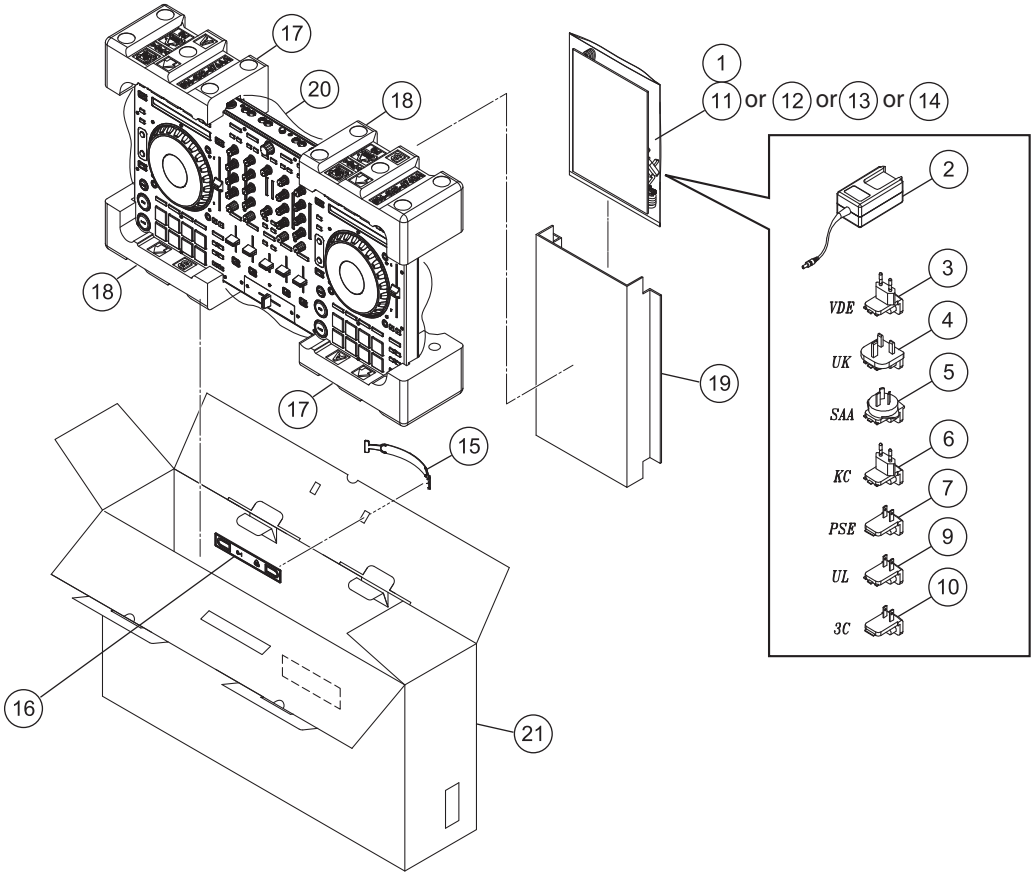

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	USB Cable (L = 1500 mm)	408-SUB-132
⚠	2	AC Adapter	411-SXMK3-957
⚠	3	Power Plug	See Contrast table (2)
⚠	4	Power Plug	See Contrast table (2)
⚠	5	Power Plug	See Contrast table (2)
⚠	6	Power Plug	See Contrast table (2)
⚠	7	Power Plug	See Contrast table (2)
	8	•••••	
⚠	9	Power Plug	See Contrast table (2)
⚠	10	Power Plug	See Contrast table (2)
	11	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	12	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	13	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	14	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	15	Handle	100-SX-3017
	16	Handle Base	100-SX-3018
	17	Polyfoam A	506-SX2-676AA
	18	Polyfoam B	506-SX2-676BA
	19	Pasterboard	507-S1-3372-HA
	20	Soft Bag	509-DDJSX-320-HA
	21	Gift Box	See Contrast table (2)

(2) CONTRAST TABLE


DDJ-RX/FJLPXEG, SVYXEG, UXEGCB and AXEG are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RX/FJLPXEG	DDJ-RX/SVYXEG	DDJ-RX/UXEGCB	DDJ-RX/AXEG
⚠	3	Power Plug	420-DJM250-407A	420-DJM250-407A	Not used	Not used
⚠	4	Power Plug	420-DJM250-362-HA	420-DJM250-362-HA	Not used	Not used
⚠	5	Power Plug	420-DJM250-363-HA	Not used	Not used	Not used
⚠	6	Power Plug	420-DJM250-364A	Not used	Not used	Not used
	7	Power Plug	420-DJM250-409A	Not used	Not used	Not used
	9	Power Plug	Not used	Not used	420-DJM250-361	Not used
	10	Power Plug	Not used	Not used	Not used	420-DJM250-408
	11	Operating Instructions (Quick Start Guide)(En, Es, Jp)	502-SXMK3F-3548	Not used	Not used	Not used
	12	Operating Instructions (Quick Start Guide) (En, De, Fr, It, Nl, Es, Ru, Pt)	Not used	502-SXMK3B-3546	Not used	Not used
	13	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	Not used	502-SXMK3A-3545	Not used
	14	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	Not used	502-SXMK3D-3547
	21	Gift Box	507-RXF-3370	507-RXB-3370	507-RXA-3370	507-RXD-3370

9.2 EXTERIOR SECTION

*1: To ensure performance of the product and protect of the parts, these parts must be attached.

*1: 性能確保、部品保護のため貼り付け必須部品。

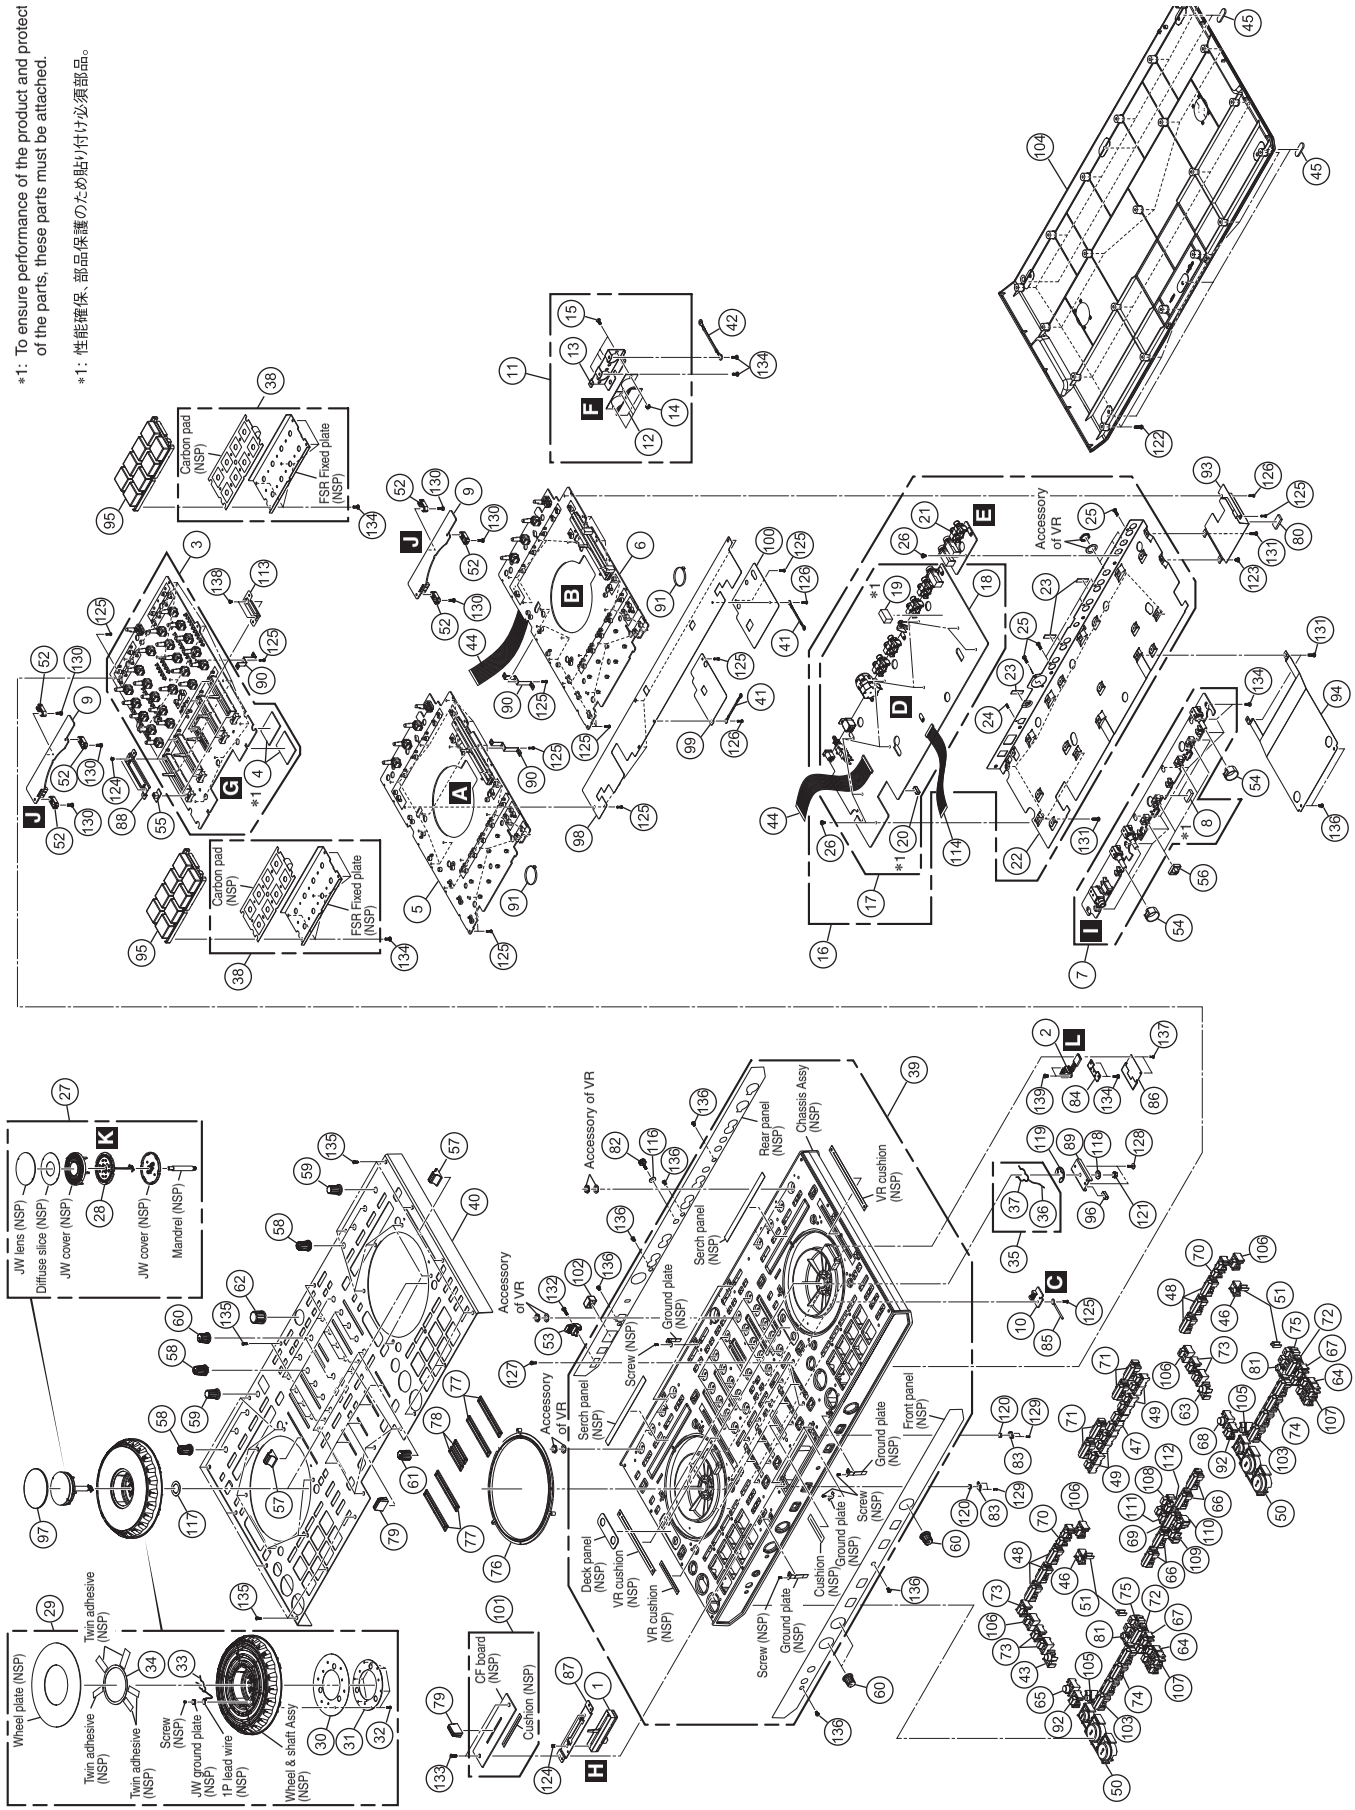

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CR FADER PCB Assy	704-EN1000-9788
	2	SENSOR PCB Assy	704-PDJ33-A007-HA
	3	1..MIX PCB Assy	704-SXMK3-B255
	4	2..Spacer	612-SX2-450
	5	CONTROL PCB Assy A	704-SXMK3-B252
	6	CONTROL PCB Assy B	704-SXMK3-B253
	7	1..FRONT PCB Assy	704-SXMK3-B254
	8	2..Spacer	612-SX2-459
	9	TOUCH PCB Assy	704-S1MK2-A957
	10	TRANSFER PCB Assy	704-SXMK3-B256
	11	1..BAL PCB & FIXED P. Assy	704-S1MK2-A986
	12	2..BAL. PCB Assy	704-S1MK2-A956
	13	2..XLR Fixed Plate	300-S1-2048-HA
	14	2..Nut + Gear Washer	601-R2150-033-HA
	15	2..Screw	602-HMD510B-198-HA
	16	1..I/O PCB & FIXED PLATE Assy	704-SXMK3-B272
	17	2..I/O PCB Assy Service	704-SXMK3-B332
	18	3..DSP PCB Assy	704-SXMK3-B271
	19	3..Cushion	612-SX2-362
	20	3..Sponge	612-DJFA-373-HA
	21	2..OUTPUT PCB Assy	704-S1MK2-A958
	22	2..Output Board	300-S1-2044A
	23	2..Sponge	612-F300-358-HA
	24	2..Screw	602-HP1010K-181-HA
	25	2..Screw	602-MK7-131-HA
	26	2..Screw	602-SA12-378
	27	1..LED & COVER Assy	704-S1MK2-A961
	28	2..LED PCB Assy	704-S1MK2-A959
	29	1..Wheel Assy	703-SX3-1383
	30	2..Encoder Plate	300-PROS2-848-HA
	31	2..Encoder Fixed Plate	300-PROS2-851-HA
	32	2..Screw	602-PROS2-363-HA
	33	2..Clip	603-S1-395-HA
	34	2..Twin Adhesive	501-S1-2526-HA
	35	1..Clip & Lead Wire Assy	704-S1-A586
	36	2..1P Lead Wire	406-S1-1231-HA
	37	2..Clip (1 mm)	603-S1-394-HA
	38	PAD & FSR Assy	704-S1MK2-A962
	39	Chassis Assy	705-SXMK3-1630
	40	Top Panel	300-SX3-2043B
	41	1P Lead Wire (L = 55 mm)	406-S1MK2-1301
	42	1P Ground Wire (L = 40 mm)	406-8001-833
	43	DECK 1 Button	100-S1-2990-HA
	44	37P 1.0 FFC Cable (L = 190 mm)	406-S1MK2-1294
	45	Foot Mat	612-S1-445-HA

Mark	No.	Description	Part No.
	46	Little Round Button	100-S1-2991-HA
	47	2 Key Button	100-S1-2992S-HA
	48	ON Button	100-S1-2993-HA
	49	1, 2 Button	100-S1-2994-HA
	50	PLAY SYNC Button	100-S1-2995-HA
	51	TEMPO Lens	100-S1-2998-HA
	52	Fixed Plate	100-S1-2999-HA
	53	Strain Relief Bush	100-S1-3000-HA
	54	VR Cover	100-S1-3002-HA
	55	CF Button	100-S1-3003-HA
	56	Button	100-S1-3004-HA
	57	Speed Push Button	100-S1-3005-HA
	58	FX Rotate Knob	100-S1-3006-HA
	59	BEAT Rotate Knob	100-S1-3007-HA
	60	GAIN Rotate Knob	100-S1-3008-HA
	61	FILTER Rotate Knob	100-SX3-3009
	62	BROWSER Rotate Knob	100-S1-3010-HA
	63	DECK 2 Button	100-S1A-2990-HA
	64	IN/OUT Button	100-S1A-2994-HA
	65	DECK 3 Button	100-S1B-2990-HA
	66	CUE Button	100-S1B-2993-HA
	67	2X Button	100-S1B-2994-HA
	68	DECK 4 Button	100-S1C-2990-HA
	69	MASTER CUE Button	100-SX3-2993
	70	Button	100-S1C-2994-HA
	71	LOAD Button	100-S1D-2993-HA
	72	AUTO BEAT LOOP Button	100-SX3A-2993
	73	Rectangular Button	100-SX-2989S-HA
	74	HOT CUE/ROLL Button	100-SX2-3156
	75	1, 2 Button	100-SX3-3256
	76	JW Ring	100-S1-3001-HA
	77	LM Lens	100-SXMK2-3154
	78	MASTER Lens	100-SXMK2-3155
	79	Push Button 1	100-SXMK2-3157
	80	Sponge	612-S1-461-HA
	81	Round Knob	100-SXMK2-3160A
	82	Ground Terminal	200-S1-665-HA
	83	Fixed Cover	300-33-1918-HA
	84	Sensor Fixed Plate	300-HDJ9800-981-HA
	85	Winding Fixture	300-HM510B-224-HA
	86	Dust-Proof Slice	501-HDJ9800-1648-HA
	87	CF Fixed Plate	300-S1-2045-HA
	88	CH Fader Fixed Plate	300-S1-2046-HA
	89	JW LED Base	300-S1-2049A-HA
	90	Ground Plate	300-S1-2051-HA

Mark	No.	Description	Part No.
	91	Cable Tie	504-S100-004-HA
	92	SHIFT Button	100-S1-2989-HA
	93	Cover	300-S1-2059-HA
	94	Isolation Plate	300-S1-2060-HA
	95	Velocity Soft Knob	604-SXMK2-651
	96	Sponge	612-DJFA-373-HA
	97	Windows Lens	100-SX3-2985
	98	Isolation Slice	501-S1-2542A
	99	MIC1 Isolation Slice	501-SX2-2645
	100	MIC2 Isolation Slice	501-SX2-2646
	101	CF Panel & Cushion Assy	703-SX3-1396
	102	Power Knob	100-HDJ2000-1641-HA
	103	HOT CUE/PAD FX1 Button	100-SX3-3156
	104	Base	100-SX3-3158
	105	Round Knob	100-SX3-3160A
	106	Button	100-SX3-3254
	107	LITTLE Button	100-SX3-3255
	108	CFX Button	100-SX3-3257
	109	SYNC Button	100-SX3-3258
	110	CUE Button	100-SX3-3259
	111	PITCH Button	100-SX3A-3258
	112	FILER Button	100-SX3A-3259
	113	CH Fixed Plate	300-SX3-2251
	114	30P 1.0 FFC Cable (L = 120 mm)	406-S1MK2-1295
	115	•••••	
	116	Washer	606-S1-007-HA
	117	Washer	606-S1-261-HA
	118	Washer	606-DDJLE-260-HA
	119	E Type Wsher	606-S1-262-HA
	120	Nut	601-A100-004-HA
	121	Nut	601-MM1000-029-HA
	122	Screw	602-PTP3012-571-HA
	123	Screw	602-QMX2BPM-322-HA
	124	Screw	602-SA12-414-HA
	125	Screw	602-SL24F-099-HA
	126	Screw	602-CDN88-563
	127	Screw	602-2002-077-HA
	128	Screw	602-3113-122-HA
	129	Screw	602-A700-494-HA
	130	Screw	602-B600-057-HA
	131	Screw	602-B600-072-HA
	132	Screw	602-BTB3012-446B-HA
	133	Screw	602-CTF3010-698B-HA
	134	Screw	602-DJ5500-452-HA
	135	Screw	602-HP1010K-182-HA
	136	Screw	602-MP3-324-HA
	137	Screw	602-PROS2-363-HA
	138	Screw	602-MK9-505
	139	Screw	602-CTP3050-774B

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

Mark	No.	Description	Part No.
		LIST OF ASSEMBLIES	
	1	..CR FADER PCB ASSY	704-EN1000-9788
	1	..SENSOR PCB ASSY	704-PDJ33-A007-HA
	1	..MIX PCB ASSY	704-SXMK3-B255
	1	..CONTROL PCB ASSY A	704-SXMK3-B252
	1	..CONTROL PCB ASSY B	704-SXMK3-B253
	1	..FRONT PCB ASSY	704-SXMK3-B254
	1	..TOUCH PCB ASSY	704-S1MK2-A957
	1	..TRANSFER PCB ASSY	704-SXMK3-B256
	1	..I/O & FIXED PLATE ASSY	704-SXMK3-B272
	2	..I/O PCB ASSY SERVICE	704-SXMK3-B332
	3	..DSP PCB ASSY	704-SXMK3-B271
	2	..OUTPUT PCB ASSY	704-S1MK2-A958
	1	..BAL. PCB & FIXED P. ASSY	704-S1MK2-A986
	2	..BAL. PCB ASSY	704-S1MK2-A956
	1	..LED & COVER ASSY	704-S1MK2-A961
	2	..LED PCB ASSY	704-S1MK2-A959

Mark	No.	Description	Part No.
A B		**CONTROL PCB ASSY A** **CONTROL PCB ASSY B**	
		SEMICONDUCTORS	
	IC	500-504,508-510	417-DDJLE-1080
	IC	506	417-MP3-429
	IC	507	417-RMP3-936
	IC	511	417-DDJLE-1078
	Q	500-502	416-MC6000-374
	D	503-505,516,519	410-DJ5000-253T
	D	507	410-CDI600-357T
	D	511,508,509,506	410-CDI600-357T
	D	514,500,501,510	410-CDI600-357T
	D	515,531	410-S1MK2-441
	D	517,521,522	410-HDJ2000-162T
	D	518	410-SXMK3-459
	D	520,532,545,546	410-DJ5000-253T
	D	523-530,533-540	410-MC7K-449
	D	541-544	410-HDJ2000-162T
	D	547-574,577,582	414-CD1000-075A-HA
	D	588	414-CD1000-075A-HA
	D	589	410-DJ5000-253T
	ZD	500,575 ESD DIODE	414-RMP3-285-HA
		MISCELLANEOUS	
	L	500 INDUCTANCE	415-USOLOPA-342-HA
	L	501 CHIP BEAD	415-COMBO-421
	L	502 CHIP BEAD	415-EN2000-376
	J	44,45,161 CHIP RESISTOR	412-DJ3000-414
	J	96,97 CHIP RESISTOR	412-DJ3000-414
	J	100-102,105 CHIP RESISTOR	412-DJ3000-414
	J	108,109 CHIP RESISTOR	412-DJ3000-414
	J	112-114,159 CHIP RESISTOR	412-DJ3000-414
	J	157 CHIP RESISTOR	412-HV3500K-367
	VR	500-502 ROTARY VR	418-S1-694
	CN	2B 37P 1.0 FFC SOCKET	404-S1-3740
	CN	14 2P 2.5 CONNECT WIRE	404-S1MK2-3883
	CN	501 4P SOCKET	404-DCM270E3-878A-HA
	CN	502 10P FFC CONNECTOR	404-CDMIX2-1142
		LEADWIRE	406-HF6011B-523
		CHASSIS TO CHASSIS8 1P GROUNG WIRE	406-S1-1239-HA
	P	500 SLIDE VR(10*2)	418-S1-695-HA
	SW	500,501,502-526,530-532 TACT SW	403-DDJLE-419-HA
	SW	519 TACT SW **	403-DDJLE-419-HA
		** : CONTROL PCB ASSY A only	
	SW	527,528 TACT SW	403-DDJLE-416-HA
	SW	529 ENCODER	403-DDJLE-418-HA
	W	500 6P 2.0 CONNECT WIRE	404-S1MK2-3886
		SPONGE(8*6*18MM) **	612-S1-451
		** : CONTROL PCB ASSY B only	
		RESISTORS	
	R	503,520	412-CDVD2001-521
	R	504,506-511,515	412-CDVD2001-530
	R	514,516,619,534	412-CDVD2001-530
	R	519,545,505,546	412-CDVD2001-530
	R	521,522,542-544	412-CDVD2001-554
	R	523,526,529,576	412-DV330-335
	R	524,527,530,577	412-DV330-333
	R	525,528,575,578	412-80-959
	R	531	412-007USB-698
	R	533,536,539,591,594,597,600,603	412-007USB-782
	R	537,540,592,595	412-CDVD2001-530
	R	538,541,593,596	412-CDVD2001-530
	R	547,548,609	412-900-983
	R	549-552,612,613	412-CDVD2001-534
	R	553	412-900-977
	R	554	412-DCM280-726
	R	555	412-MH2-1135
	R	556	412-CDVD2001-540
	R	557	412-3113-078-HA
	R	559,558,560-565	412-007USB-699
	R	566-573,500,501	412-CDVD2001-530
	R	574,517,518,532	412-CDVD2001-554
	R	579,582,585,588	412-DV330-335
	R	580,583,586,589	412-DV330-333
	R	581,584,587,590	412-80-959
	R	598,601,604,535	412-CDVD2001-530
	R	599,602,605	412-CDVD2001-530
	R	606	412-CDVD2001-554
	R	610	412-CD900-795
	R	611,614	412-007USB-704
	R	615-617,620	412-CDVD2001-534
	R	618	412-DV330-306
	R	621-627	412-007USB-697

Mark	No.	Description	Part No.
		CAPACITORS	
	C	500-505,507	413-DCM280-773
	C	506	413-100U-695
	C	508	413-SPPW3-235-HA
	C	509,510,529-536	413-DCM280-771
	C	511-514,518-520	413-DCM280-773
	C	516,558-564	413-DCM280-768
	C	517	413-S1MK2-1337
	C	521,522	413-CDVD2001-265-HA
	C	523,537	413-CDN34-355-HA
	C	525,524,527,526	413-HMA2200-5017-HA
	C	528,538-543,549	413-DCM280-773
	C	550,557	413-DCM280-773
	C	551-553	413-DCM280-769
	C	554-556	413-DCM280-767
	C	556	413-900-931

C TRANSFER PCB ASSY

MISCELLANEOUS

		6P SOCKET	404-90V1-101

D DSP PCB ASSY

SEMICONDUCTORS

	IC	1-12,37,43	417-ST150-599-HA
	IC	13	417-3113-018-HA
⚠	IC	16,39	417-200USB-1071
⚠	IC	17	417-PDJ33-1045-HA
⚠	IC	18,41	417-CTB200-500-HA
	IC	19	417-HDJ2000-503-HA
	IC	20	417-22SM-982
	IC	21	417-DAIA-711
	IC	22,26,27	417-IQ2UM-970A-HA
	IC	23	417-200USB-931
⚠	IC	28	417-IQ2UM-1004-HA
	IC	29	417-IQ2UM-941
	IC	30-33	417-IQ2UM-940-HA
⚠	IC	40	417-CDN34A-314
	IC	44	417-ST150-599-HA
	Q	1	416-CTB200-166-HA
	Q	2,3,47	416-UDJ200-347-HA
	Q	4,7,17,18	416-CDN88-044-HA
	Q	5	416-MC6000-373
	Q	6	416-CDN88-045-HA
	Q	8	416-HDJ9700-210
	Q	9,10,12	416-3000-378-HA
	Q	11,14	416-CTB200-178-HA
	Q	13,15,16,38,21-24,29-32,35-37,39-46	416-3000-378-HA
	D	1	414-MC6000-307
	D	3,4,18,23	414-007USB-148-HA
	D	6,5,7,12-14	414-CD1000-075A-HA
	D	24-27,32	414-COMBO-401
	D	8-11,28-31,34-39,40-42	414-DJ1100G-207-HA
	D	33	414-RMP3-285-HA
	ZD	5 ZENER DIODE	414-DDJLE-332-HA
	ZD	6-12 CHIP ZENER DIODE	414-DJM4000-331-HA

MISCELLANEOUS

Mark	No.	Description	Part No.
	L	1 CHOKE COIL	415-KM280A-021
	L	8 INDUCTANCE	415-IM-302
	L	11 CORE	415-PDJ33-381-HA
	L	2,4-6,7,9,10,12-14,17,18,19,21 BEAD CORE	415-HV3500K-090-HA
	L	15 TDK CHIP BEAD	415-FU801-316
	L	16 TDK COMMON FILTERS	415-FU800-305-HA
	L	20 CORE	415-MC2-401-HA
	L	23 INDUCTOR(10UH T-26MM	415-MPG100-047-HA
	L	24-32 CHIP BEAD	415-EN2000-376
	J	1 CHIP RESISTOR	412-HV3500K-367
	J	2 CHIP RESISTOR	412-DJ3000-414
	X	1 CRYSTAL	427-S1-143-HA
	X	2,3 CRYSTAL	427-S1-144-HA
	X	4 CRYSTAL	427-S1-145-HA
	CN	1A 30P 1.0 FFC SOCKET	404-S1-3739
	CN	2A,3A 37P 1.0 FFC SOCKET	404-S1-3740
	CN	4A 7P CONNECOTR WIRE	404-S1-3760-HA
	CN	5A,5B 8P SOCKET	404-DV300-506A
	CN	6,12,13 3P SOCKET	404-HP1010K-259A-HA
	CN	7 6P SOCKET	404-3113-052A-HA
	CN	8 5P SOCKET	404-1210S-094A-HA
	CN	14A,14B 2P 2.5SOCKET	404-KMD1500-607A
		FIXED PLATE ASS'Y	703-200U-1170A-HA
		CHIP RESISTOR	412-CDVD2001-523
	JK	1 DC POWER JACK	420-CDMIX1-078-HA
	JK	2 USB JACK	420-S1-377-HA
	JK	2 USB FIXED PLATE	300-S1-2069-HA
	JK	3 MIC JACK	420-MH2-223-HA
	JK	4-7 2P RCA JACK	420-CDN24A-051
	JK	8 JACK GROUND PLATE	300-300-1171-HA
	JK	8 3P HEADPHONE	420-CDMIX1-086
	SW	1 FIXED PLATE(M3*P0.5)	300-4500-2010A-HA
	SW	1 POWER SWICH	403-VP9812-162-HA
	W	9 4P 2.0 CONNET WIRE	404-S1MK2-3885

RESISTORS

	R	1	412-DDJLE-1529
	R	2	412-I1-1250
	R	4,5,12,35	412-CDVD2001-540
	R	6	412-007USB-700
	R	8,30,245,246	412-007USB-704
	R	9,15	412-007USB-703
	R	10	412-007USB-1401
	R	13,251,252,272	412-007USB-677
	R	14,16-18	412-CDVD2001-532
	R	20,21,227,247	412-CDVD2001-537
	R	22,342,344,452	412-007USB-699
	R	23	412-007USB-676
	R	24,394,454-457	412-007USB-693
	R	26	412-CDVD2001-550
	R	27	412-CDVD2001-549
	R	28,29,39	412-CD900-795
	R	31,50-83	412-CDVD2001-521
	R	32,33,42,44	412-CDVD2001-554
	R	34	412-PDJ1-1291
	R	36-38,221,222	412-CDVD2001-530
	R	40	412-CDVD2001-545
	R	49,105,220	412-CDVD2001-546
	R	106-125,128-134	412-CDVD2001-521
	R	152-154,184,230	412-CDVD2001-540
	R	155,172-183	412-CDVD2001-521

Mark	No.	Description	Part No.
	R	157,3,46,158	412-CDVD2001-534
	R	167-171	412-CD900-795
	R	185-190,192-196	412-CDVD2001-521
	R	191	412-007USB-781
	R	197-203,420	412-CDVD2001-552
	R	204,205,218,219	412-CDVD2001-554
	R	206-217,343,477	412-007USB-697
	R	223-226,232,243	412-CDVD2001-532
	R	228,229,292,458	412-900-994
	R	231,295	412-007USB-671
	R	233,297	412-900-987
	R	234,298	412-CDVD2001-543
	R	235,299	412-900-992
	R	236,294,296,422	412-CDVD2001-540
	R	237,238,249,250	412-CDVD2001-530
	R	239,240,260,261	412-CDVD2001-534
	R	241,242,262,263	412-900-1006
	R	244,264,265	412-CDVD2001-532
	R	248,257,268,269	412-CDVD2001-537
	R	253,254,274,275	412-900-1060
	R	255,256,276,277	412-900-974
	R	258,259,270,271	412-CDVD2001-530
	R	266,339-341,267	412-007USB-704
	R	273,401-404	412-007USB-677
	R	278,293,330,331	412-CDVD2001-537
	R	279,280,285,286	412-CDVD2001-530
	R	281,282,302,303	412-CDVD2001-534
	R	283,284,304,305	412-900-1006
	R	287-291	412-CDVD2001-532
	R	300,301,310,312	412-CDVD2001-530
	R	306-309,362,363	412-CDVD2001-554
	R	314-317	412-G9900-1196
	R	318-321,326-329	412-900-992
	R	322-325,436-451	412-810-966
	R	332,333,348-351	412-CDVD2001-540
	R	334,335	412-900-1010
	R	336,337	412-900-1014
	R	338,377-380,417	412-007USB-704
	R	345-347,360	412-CDVD2001-534
	R	352-355,385-388	412-DJM250-1488
	R	356-359,389-392	412-007USB-782
	R	361,367,373,395	412-900-992
	R	364-366,368-372	412-CDVD2001-534
	R	374-376,393,462	412-CDVD2001-534
	R	381-384,506-513	412-CDVD2001-540
	R	396,398-400	412-900-992
	R	397,486-493	412-CDVD2001-554
	R	405-408,421	412-CDVD2001-521
	R	409,410	412-CDG11-466-HA
	R	411,412	412-SA12-566-HA
	R	413,414,426,431	412-900-1002
	R	415,416	412-HT801K-219-HA
	R	418	412-007USB-702
	R	419	412-900-977
	R	423	412-CDVD2001-540
	R	425	412-DJ3000-414
	R	427-430,432-435	412-900-992
	R	453,464,465,470	412-007USB-699
	R	459,476,482-485	412-CDVD2001-530
	R	463,468,469	412-CDVD2001-534
	R	466,467,472,473	412-007USB-693
	R	471	412-007USB-699
	R	474,475	412-007USB-782
	R	478-481	412-HC1000S-1413
	R	494,495	412-CDVD2001-537
	R	496,497	412-007USB-673
	R	499-503	412-CDVD2001-521
	R	505,504	412-007USB-704
	R	515,516,100,151	412-CDVD2001-552
	R	518,101-104,156	412-CDVD2001-534

CAPACITORS

	C	5,167,168,176	413-SPPW3-235-HA
	C	6,12	413-HT8015-169-HA
	C	7-10,15,20	413-DCM280-773
	C	13,363,366,266	413-MC6000-1191-HA
	C	16,17,24,27	413-MC6000-1180
	C	19	413-DCM280-769
	C	23,26,30,33	413-DCM280-773
	C	25	413-M207-1090
	C	28,347,348	413-100U-695
	C	28,347,348	413-007USB-788
	C	29,149,150,152	413-007USB-784
	C	34,39-51,59	413-DCM280-773
	C	35,36,80,105	413-007USB-828-HA
	C	37,132,178,179	413-CDVD2001-265-HA
	C	38,109,169,199	413-HMA2200-5017-HA
	C	52,367,371,474	413-MC6000-1180
	C	55,141,142,165	413-DCM280-767
	C	56,58	413-810-922
	C	57,370,414,445	413-DCM280-768
	C	60,63,83,84	413-DCM280-773
	C	61,62,85,86	413-007USB-783
	C	64-79,87-90	413-DCM280-771
	C	81,104,354-361	413-HT801K-192-HA
	C	82,106	413-MAIE-1211-HA
	C	91,107,108	413-DCM280-773
	C	92-103,161,162	413-DCM280-771
	C	110-131,139,140	413-DCM280-773
	C	133,134,53,54	413-900-926
	C	137,138,145,146	413-007USB-787
	C	143,144,154-160	413-DCM280-773
	C	147,244,485,486	413-DM1000-346
	C	148,245	413-HC1421FR-277
	C	153,243,541-546	413-DCM280-767
	C	163,164,193,194	413-SPPW3-236-HA
	C	166,195,196,225	413-DCM280-767
	C	170,171,184-190	413-DCM280-773
	C	172-175,202,204	413-007USB-787
	C	177,197,198,206	413-SPPW3-235-HA
	C	180,181,210,211	413-205-958A-HA
	C	182,183,212,213	413-900-934A-HA
	C	191,192,221,222	413-DCM280-771
	C	200,201,214-220	413-DCM280-773
	C	205,232,233,240	413-007USB-787
	C	207,227,228,261	413-SPPW3-235-HA
	C	208,209,350,351	413-CDVD2001-265-HA
	C	223,224,257,258	413-SPPW3-236-HA
	C	226,259,260,236	413-DCM280-767

Mark	No.	Description	Part No.
	C	229,263	413-HMA2200-5017-HA
	C	230,231,238,239	413-DCM280-773
	C	237,344-346,349	413-DCM280-767
	C	242,246,247	413-007USB-784
	C	248-254,264,269	413-DCM280-773
	C	255,256,446-449	413-DCM280-771
	C	262,336	413-SPPW3-235-HA
	C	265	413-810-920
	C	267,268,270,271	413-007USB-827
	C	284,285,290-293	413-007USB-787
	C	289,294-296,302	413-DCM280-768
	C	297,273-275,288	413-DCM280-768
	C	298-301	413-HT801K-193-HA
	C	303,276-279	413-007USB-827
	C	304,280,281	413-MC6000-1191-HA
	C	305,364,368,374	413-DCM280-773
	C	306-316,419	413-007USB-827
	C	317-324	413-MC6000-1191-HA
	C	326-329,476,203	413-007USB-787
	C	330-333,286,287	413-HT801K-193-HA
	C	342,343	413-SPPW3-237-HA
	C	362	413-QSPAND-632-HA
	C	378-380,423,424	413-DCM280-773
	C	420	413-6K2-1296
	C	421,422	413-DV300-292-HA
	C	425,352	413-CDVD2001-265-HA
	C	430-432,441,442	413-DCM280-773
	C	443,1-3	413-DCM280-773
	C	444,472,478,479	413-DCM280-773
	C	475	413-X050-1058-HA
	C	477,480,481,484	413-DCM280-767
	C	482,483,487-492	413-DCM280-773
	C	495-499,501-503	413-DCM280-773
	C	504-507,509,510	413-CDVD2003-716
	C	508,511-522,524	413-DCM280-773
	C	523	413-MC6000-1180
	C	525,494,493	413-DCM280-773
	C	526,527	413-KT300-102
	C	528-532,539,540	413-DCM280-773
	C	533-536,552,553	413-CDVD2003-716
	C	547,556,557	413-DCM280-773
	C	549,537,538,548	413-CDVD2003-716
	C	550,551	413-007USB-828-HA
	C	554,555	413-007USB-781

E OUTPUT PCB ASSY

MISCELLANEOUS

		JACK GROUND PLATE	300-300-1171-HA
	W 6	3P CONNECOTR WIRE	404-S1-3754-HA
	W 8	5P 2.0 CONNECTWIRE	404-S1MK2-3881
	JK 9,10	3P HEADPHONE	420-CDMIX1-086
	JK 11	2P RCA JACK	420-CDN24A-051

F BAL.PCB ASSY

MISCELLANEOUS

	W 7	6P 2.0 CONNECT WIRE	404-S1MK2-3879
	JK 12,13	XLR JACK	420-S1-375A
⚠	F 1,2	SMD FUSE	422-S1-111-HA

Mark	No.	Description	Part No.

G MIX PCB ASSY

SEMICONDUCTORS

	IC	700-702	417-DDJLE-1080
	IC	704,705,707	417-QSPAND-432-HA
	IC	706	417-MP3-429
	Q	700	416-MC6000-374
	D	700-705,809	410-DJ5000-253T
	D	706	410-HDJ2000-162T
	D	720-749	410-SXMK3-459
	D	750-755,760-765	410-CDI600-357T
	D	756-759	410-S1MK2-441
	D	776-796,814-819	414-CD1000-075A-HA
	D	797	414-DFX1-144-HA
	D	798	414-RMP3-285-HA
	D	810-813	410-CDI600-357T

MISCELLANEOUS

	J	21-23,26-28 CHIP RESISTOR	412-DJ3000-414
	J	65,153 1P LEAD WIRE	406-SXMK3-1352
	J	37-40,44,49,52,54,62,68,91 CHIP RESISTOR	412-DJ3000-414
	J	107-111,113,114,120,127 CHIP RESISTOR	412-DJ3000-414
	J	140,142,169,183,190 CHIP RESISTOR	412-DJ3000-414
	J	166 1P WIRE	406-S1MK2-1307
	J	219-221,112 CHIP RESISTOR	412-DJ3000-414
	VR	700-715 ROTARY VR(20KB)	418-S1-693-HA
	VR	716,719 ROTARY VR	418-S1MK2-726
	VR	717,718,720,721 ROTARY VR(20KB)	418-S1-694-HA
	VR	723 SLIDE VR	418-SXMK3-748
	VR	724-727 SLIDE VR	418-S1MK2-725
	CN	1B 30P 1.0 FFC SOCKET	404-S1-3739
		SPACER	612-SX2-450
	SW	700-718,724-729 TACT SW	403-DDJLE-419-HA
	SW	719 ENCODER	403-DDJLE-418-HA
	SW	720-723 SLIDE SW	403-ID-333-HA
	W	01A 1P GROUND WIRE	406-MH2-825
	W	700 CONNECOTR WIRE	404-S1-3756-HA
	W	701 3P 2.0 CONNECTOR WIRE	404-S1MK2-3906
	W	702 3P 2.0 CONNECT WIRE	404-S1MK2-3884

RESISTORS

	R	700-708	412-810-966
	R	709-714,719-724	412-CD900-795
	R	715-718	412-ID-1296
	R	725-734,763	412-CDVD2001-554
	R	735,751,752,739	412-CDVD2001-534
	R	737,736	412-CDVD2001-540
	R	740,738	412-3113-068-HA
	R	741	412-M207-1308
	R	742-749	412-I1-1250
	R	750,753	412-007USB-704
	R	754-760	412-007USB-1401
	R	761,762	412-CDVD2001-552
	R	764	412-CDVD2001-530
	R	765-768	412-CD900-795
	R	769,770	412-007USB-697
	R	771	412-CDVD2001-534

CAPACITORS

	C	700,701,732-735	413-DCM280-771
	C	706	413-HMA2200-5017-HA

Mark	No.	Description	Part No.
	C	707	413-DCM280-773
	C	708	413-3113-035-HA
	C	702-704,736-738,740,742-745,	413-DCM280-77
	C	746	413-DV300-5155-HA
	C	747	413-HMA2200-5017
	C	748	413-CDN34-355-HA
	C	767,770,709-731	413-DCM280-773
	C	775,776,778,779	413-DCM280-767
	C	777	413-900-931
	C	780	413-300MXA-1322
	C	781	413-DCM280-768
	C	782	413-DCM280-767

H CR FADER PCB ASSY

MISCELLANEOUS

	CN 01	3P SOCKET	404-KMD3500-609A-HA
	116	PC SHEET	501-EN2000-2469

RESISTORS

P	115	SLIDE VR	418-EN2000-427

I FRONT PCB ASSY

SEMICONDUCTORS

	IC	1100	417-MP3-429

MISCELLANEOUS

	VR	1102,1103,1101 VR FIXED PLATE	300-6000-1874-HA
	VR	1102 ROTARY VR	418-SXMK3-749
	VR	1103,1101 ROTARY VR	418-S1MK2-735
	CN	04 7P SOCKET	404-HMD5000-785A-HA
	CN	9 4P SOCKET	404-DCM270E3-878A-HA
		SPACER	612-SX2-459
		FIXED PLATE(M3*P0.5)	300-4500-2010A-HA
		PH FIXED PLATE	300-S1-2061-HA
		FIXED PLATE	300-SC1M-1621-HA
		SPACER	501-MAIE-2451
	CHASSIS	9 1P GROUNG WIRE	406-S1-1240-HA
	JK	1100 HEADPHONE JACK	420-HDJ7100-063
	JK	1101 3P HEADPHONE	420-CDMIX1-086
	SW	1100-1103 SLIDE SW	403-S1-420-HA

RESISTORS

	R	1100	412-DFX1-653-HA
	R	1108	412-DV300-291-HA

CAPACITORS

	C	1100,1101	413-3113-041
	C	1103-1106,1108-1110,1115	413-3113-035-HA
	C	1112	413-CDVD2001-265-HA
	C	1113,1114	413-DCM280-773

J TOUCH PCB ASSY

SEMICONDUCTORS

	IC	475	417-S1-1081

MISCELLANEOUS

	W	5 8P 2.0 CONNEC WIRE	404-S1MK2-3882
	L	475-478 CHIP BEAD	415-JKME3-369

CAPACITORS

Mark	No.	Description	Part No.
	C	475,476	413-DCM280-773
	C	477	413-MC6000-1180

K LED PCB ASSY

SEMICONDUCTORS

	IC	1000-1004	417-DDJLE-1080
	Q	1000	416-MC6000-374
	D	1000-1035	410-S1-419
	D	1036	414-CD1000-075A-HA
	D	1037-1044	410-HDJ9700-214

MISCELLANEOUS

	A	1P SIGNAL WIRE	407-S1MK2-256
	B	1P SIGNAL WIRE	407-S1MK2-252
	BK	1P SIGNAL WIRE	407-S1MK2-254
	G	1P SIGNAL WIRE	407-S1MK2-255
	W	1P SIGNAL WIRE	407-S1MK2-253
	L	1000 CHIP BEAD	415-1300-240A

RESISTORS

	R	1P SIGNAL WIRE	407-S1MK2-251

CAPACITORS

	C	1000-1004	413-DCM280-773
	C	1006	413-MC6000-1180

L SENSOR PCB ASSY

SEMICONDUCTORS

	M	301	417-PS2-504

MISCELLANEOUS

	M	301 4P CONNECTOR WIRE	404-PDJ33-3591V-HA