
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

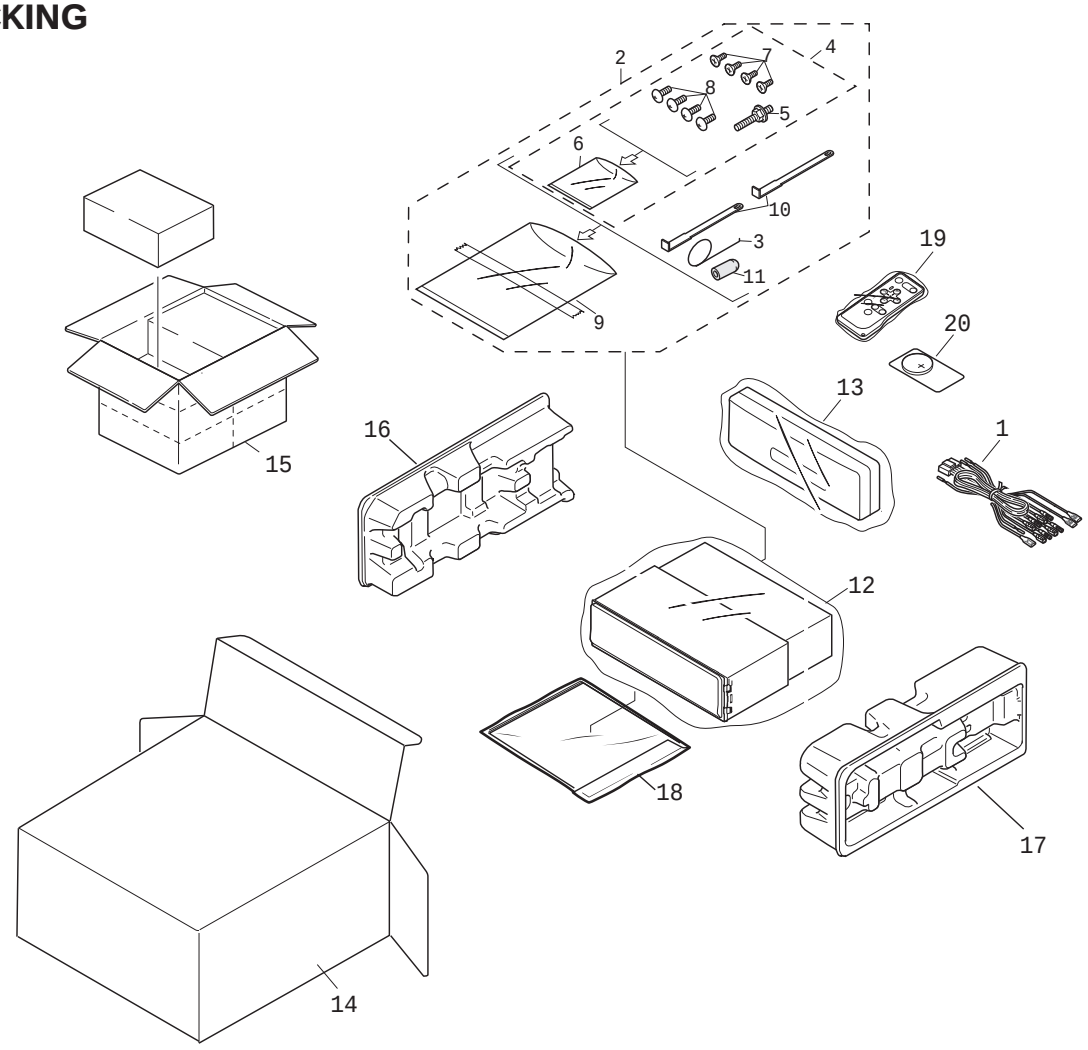

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table(2)
*	2	Accessory Assy	CEA2395
	3	Spring	CBH1650
*	4	Screw Assy	CEA2396
	5	Screw	CBA1002
*	6	Polyethylene Bag	CEG-127
	7	Screw	CRZ50P090FMC
	8	Screw	TRZ50P080FMC
*	9	Polyethylene Bag	CEG-158
	10	Handle	CNC5395
	11	Bush	CNV3930
	12	Polyethylene Bag	CEG1173
	13	Case Assy	CXB3520
	14	Carton	See Contrast table(2)
	15	Contain Box	See Contrast table(2)
	16	Protector	CHP2251
	17	Protector	CHP2252
	18-1	Polyethylene Bag	CEG1116
	18-2	Owner's Manual	See Contrast table(2)
	18-3	Owner's Manual	See Contrast table(2)
	18-4	Installation Manual	See Contrast table(2)
*	18-5	Warranty Card	See Contrast table(2)
*	18-6	Card	See Contrast table(2)
	19	Remote Control Unit	See Contrast table(2)
	20	Battery	See Contrast table(2)

(2) CONTRAST TABLE


DEH-P520/X1N/UC, DEH-P5200/X1N/UC and DEH-P5250/X1N/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No. DEH-P520/X1N/UC	DEH-P5200/X1N/UC	DEH-P5250/X1N/ES
1	Cord Assy	CDE6241	CDE6244	CDE6242
14	Carton	CHG4000	CHG3999	CHG3998
15	Contain Box	CHL4000	CHL3999	CHL3998
18-2	Owner's Manual	CRD3150	CRD3152	CRD3155
18-3	Owner's Manual	Not used	Not used	CRD3156
18-4	Installation Manual	CRD3151	CRD3154	CRD3157
* 18-5	Warranty Card	CRY1070	Not used	CRY1070
* 18-6	Card	Not used	ARY1048	Not used
19	Remote Control Unit	Not used	Not used	CXB4285
20	Battery	Not used	Not used	CEX1030

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P520/X1N/UC	CRD3150	English, French
	CRD3151	English, French
DEH-P5200/X1N/UC	CRD3152	English, French
	CRD3154	English, French
DEH-P5250/X1N/ES	CRD3155	English, Spanish, Portuguese(B)
	CRD3156	Arabic, Chinese
	CRD3157	English, Spanish, Portuguese(B), Arabic, Chinese

2.2 EXTERIOR

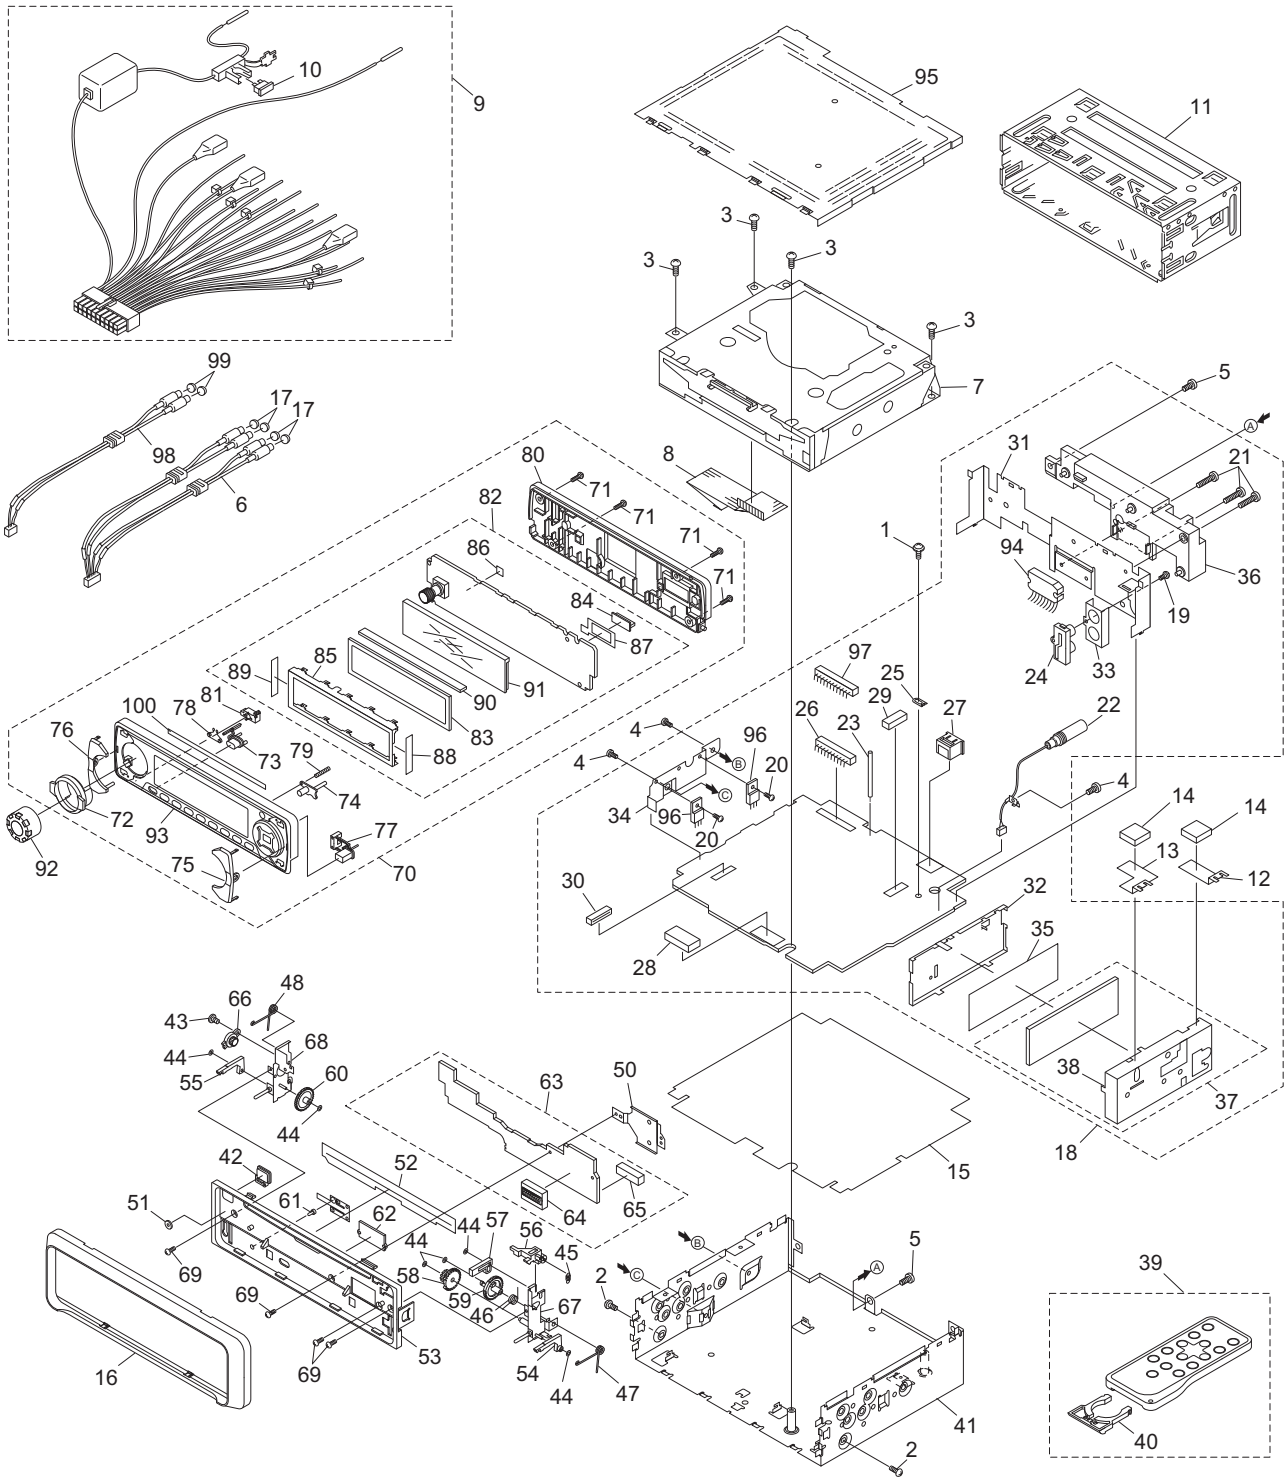
9
10
95
11
3
3
3
3
3
7
99
17
17
98
6
8
80
71
71
71
71
82
86
84
87
85
89
90
91
83
88
100
78
81
73
79
74
76
72
93
92
75
77
70
1
5
31
21
94
36
19
24
33
97
25
29
27
26
23
22
4
4
96
20
34
96
20
4
14
14
13
12
30
32
35
28
38
37
18
48
66
43
68
44
55
60
44
63
50
42
52
51
61
62
44
57
56
45
64
65
15
69
58
59
46
67
2
5
69
53
54
44
47
41
16
69
2
39
40

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.
1	Screw	ISS26P055FUC
2	Screw	BMZ30P040FZK
3	Screw	BSZ26P060FMC
4	Screw	BSZ30P060FMC
5	Screw	BSZ30P100FMC
6	Cord Assy	See Contrast table(2)
7	CD Mechanism Module(S8.1)	CXK5201
8	Cable	CDE6160
9	Cord Assy	See Contrast table(2)
10	Fuse(10A)	CEK1136
11	Holder	CNC6798
12	Holder	CNC8300
13	Holder	CNC8357
14	Spacer	CNM6482
15	Insulator	CNM6606
16	Panel	CNS5992
17	Cap	See Contrast table(2)
18	Tuner Amp Unit	See Contrast table(2)
19	Screw	BPZ26P060FMC
20	Screw	BSZ26P060FMC
21	Screw	BSZ26P160FMC
22	Antenna Cable(CN502)	CDH1254
23	Clamper	CEF1009
24	Pin Jack(CN431)	CKB1028
25	Terminal(CN501)	CKF1059
26	Plug(CN952)	See Contrast table(2)
27	Connector(CN411)	CKS3408
28	Plug(CN651)	CKS3537
29	Connector(CN433)	See Contrast table(2)
30	Connector(CN681)	CKS3838
31	Panel	See Contrast table(2)
32	Holder	CNC7533
33	Holder	CNC8298
34	Holder	CNC8615
35	Insulator	CNM5967
36	Heat Sink	CNR1550
37	FM/AM Tuner Unit	CWE1501
38	Holder	CNC7532
39	Remote Control Unit	See Contrast table(2)
40	Cover	See Contrast table(2)
41	Chassis Unit	CXB5063
42	Button(EJECT)	CAC6428
43	Screw(M2x2)	CBA1176
44	Washer	CBF1038
45	Spring	CBH2310
46	Spring	CBH2393
47	Spring	CBH2312
48	Spring	CBH2313
49	Spring	CBL1492
50	Holder	CNC8616
51	Cushion	CNM5486
52	Cover	CNM6854
53	Panel	CNS5791
54	Arm	CNV5991
55	Arm	CNV5992
56	Arm	CNV5993
57	Lever	CNV5994
58	Gear	CNV5995
59	Gear	CNV5996
60	Gear	CNV5997
61	Pin	CNV6027
62	Lighting Conductor	CNV6069
63	Panel PCB Unit	CWM7157
64	Socket(CN902)	CKS3550
65	Connector(CN903)	CKS4206
66	Damper Unit	CXB5070
67	Holder Unit	CXB5736
68	Holder Unit	CXB5737
69	Screw	IMS20P045FZK
70	Detach Grille Assy	See Contrast table(2)
71	Screw	BPZ20P100FZK
72	Knob	CAA1525
73	Button(SOURCE)	CAC6331
74	Button(OPEN)	CAC6333
75	Button(F,A)	CAC6337
76	Button(DISP)	CAC6340
77	Button(BAND)	CAC6442
78	Spring	CBH2316
79	Spring	CBH2320
80	Cover	CNS5737
81	Holder	CNV6177
82	Keyboard Unit	See Contrast table(2)
83	LCD(LCD901)	CAW1565
84	Connector(CN901)	CKS4205
85	Holder	CNC8562
86	Spacer	CNM6710
87	Spacer	CNM6711
88	Spacer	CNM6733
89	Spacer	CNM6734
90	Connector	CNV5990
91	Lighting Conductor	CNV6001
92	Knob Unit	CXB5350
93	Grille Unit	See Contrast table(2)
94	IC(IC551)	PAL005A
95	Case Unit	CXB5788
96	Transistor(Q954,Q991)	2SD2396
97	Plug(CN951)	See Contrast table(2)
98	Cord Assy	See Contrast table(2)
99	Cap	See Contrast table(2)
100	Spacer	CNM6871

(2) CONTRAST TABLE

DEH-P520/X1N/UC, DEH-P5200/X1N/UC and DEH-P5250/X1N/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P520/X1N/UC	DEH-P5200/X1N/UC	DEH-P5250/X1N/ES
6	Cord Assy	CDE6146	Not used	Not used
9	Cord Assy	CDE6241	CDE6244	CDE6242
17	Cap	CNV2680	Not used	Not used
18	Tuner Amp Unit	CWM6900	CWM6901	CWM6902
26	Plug(CN952)	Not used	CKM1294	CKM1294
29	Connector(CN433)	CKS3602	CKS3598(CN432)	CKS3598(CN432)
31	Panel	CNB2375	CNB2378	CNB2378
39	Remote Control Unit	Not used	Not used	CXB4285
40	Cover	Not used	Not used	CNS4948
70	Detach Grille Assy	CXB4914	CXB4915	CXB4916
82	Keyboard Unit	CWM6908	CWM6909	CWM6908
93	Grille Unit	CXB5378	CXB5379	CXB5380
97	Plug(CN951)	CKM1296	Not used	Not used
98	Cord Assy	Not used	CDE6147	CDE6147
99	Cap	Not used	CNV2680	CNV2680

2.3 CD MECHANISM MODULE

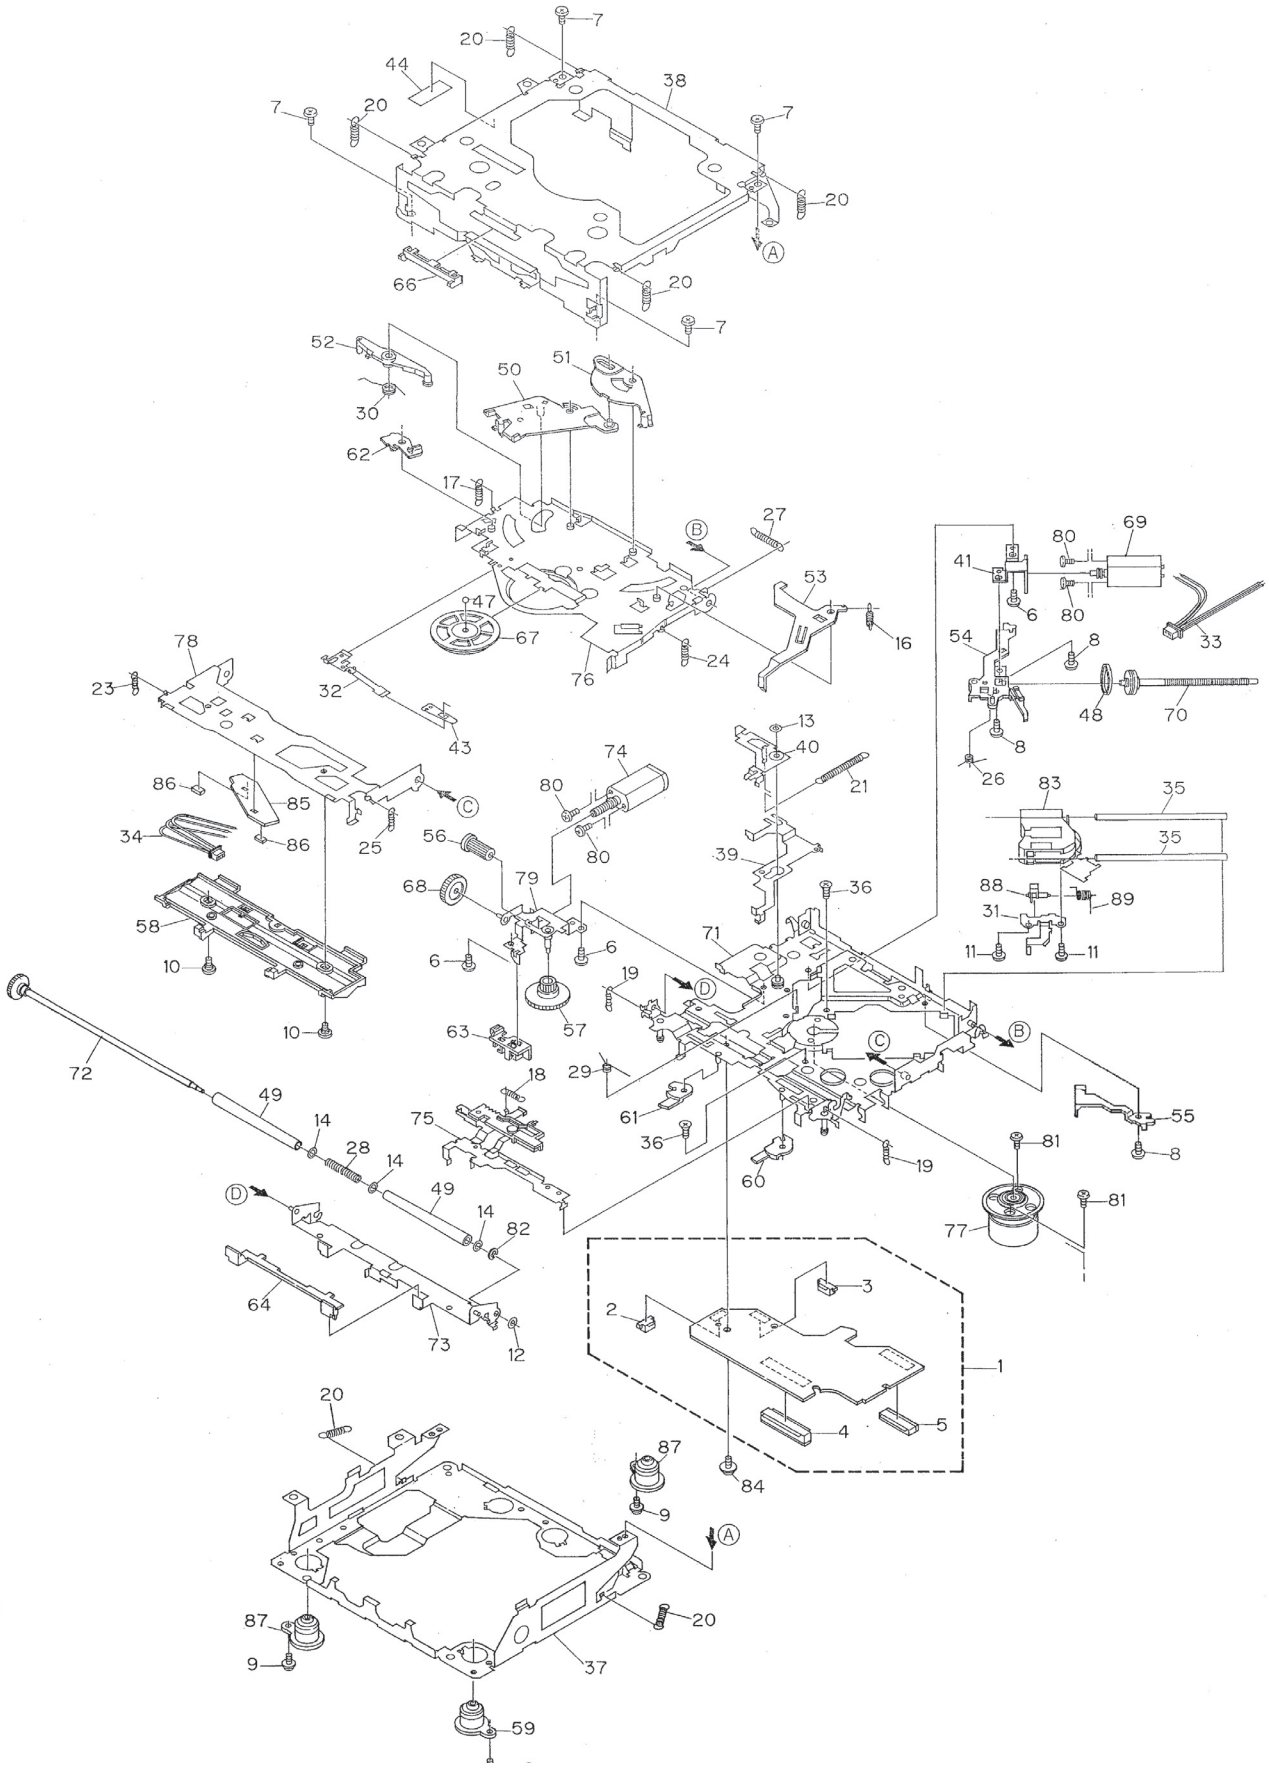

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2411
	2	Connector(CN802)	CKS2192
	3	Connector(CN801)	CKS2193
	4	Connector(CN701)	CKS2773
	5	Connector(CN101)	CKS3486
	6	Screw	BMZ20P030FMC
	7	Screw	BSZ20P040FMC
	8	Screw(M2x3)	CBA1077
	9	Screw(M2x5)	EBA1028
	10	Screw	CBA1243
	11	Screw(M2x4)	CBA1362
	12	Washer	CBF1037
	13	Washer	CBF1038
	14	Washer	CBF1060
	15	•••••	
	16	Spring	CBH2079
	17	Spring	CBH2117
	18	Spring	CBH2314
	19	Spring	CBH2110
	20	Spring	CBH2282
	21	Spring	CBH2318
	22	•••••	
	23	Spring	CBH2324
	24	Spring	CBH2118
	25	Spring	CBH2161
	26	Spring	CBH2163
	27	Spring	CBH2189
	28	Spring	CBH2377
	29	Spring	CBH2260
	30	Spring	CBH2262
	31	Bracket	CNC8568
	32	Spring	CBL1369
	33	Connector	CDE5531
	34	Connector	CDE5532
	35	Shaft	CLA3304
	36	Screw(M2.6x6)	CBA1458
	37	Frame	CNC8565
	38	Frame	CNC8749
	39	Lever	CNC7546
	40	Arm	CNC8663
	41	Bracket	CNC8567
	42	•••••	
	43	Spacer	CNM3315
	44	Sheet	CNM6659
	45	•••••	
	46	•••••	
	47	Ball	CNR1189
	48	Belt	CNT1086
	49	Roller	CNV4509
	50	Arm	CNV6037
	51	Arm	CNV5247
	52	Arm	CNV5248
	53	Arm	CNV5249
	54	Guide	CNV5254
	55	Guide	CNV5255
	56	Gear	CNV5257
	57	Gear	CNV5256
	58	Guide	CNV6272
	59	Damper	CNV6010
	60	Arm	CNV6096
	61	Arm	CNV6031
	62	Arm	CNV6211
	63	Guide	CNV6012
	64	Guide	CNV5510
	65	•••••	
	66	Guide	CNV5751
	67	Clamper	CNV6013
	68	Gear	CNV5813
	69	Motor Unit(M1)	CXB2190
	70	Screw Unit	CXB5892
	71	Chassis Unit	CXB4797
	72	Gear Unit	CXB4728
	73	Arm Unit	CXB5753
	74	Motor Unit(M2)	CXB2195
	75	Lever Unit	CXB4730
	76	Arm Unit	CXB4731
	77	Motor Unit(M3)	CXB2562
	78	Arm Unit	CXB4732
	79	Bracket Unit	CXB4795
	80	Screw	JFZ20P025FMC
	81	Screw	JGZ17P025FZK
	82	Washer	YE20FUC
	83	Pickup Unit(Service)(P8)	CXX1285
	84	Screw	IMS26P030FMC
*	85	PCB	CNX2982
	86	Photo-transistor(Q1, 2)	CPT230SX-TU
	87	Damper	CNV6011
	88	Rack	CNV6014
	89	Spring	CBH2315