
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

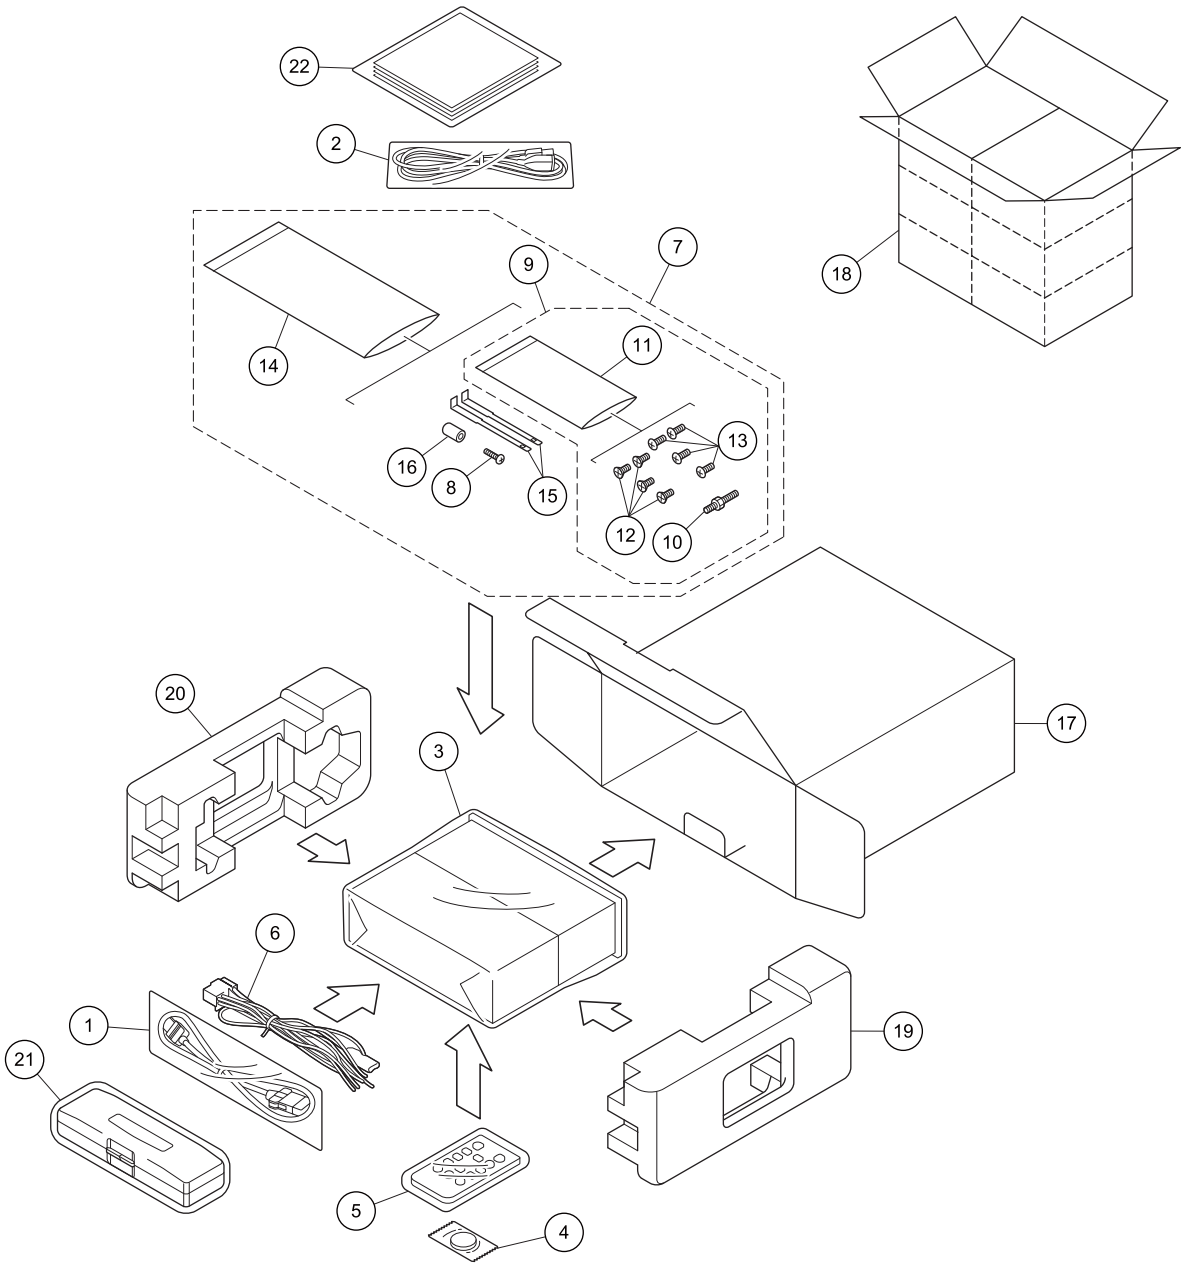

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table(2)
	2	Cord Assy	CDP1040
	3	Polyethylene Bag	See Contrast table(2)
*	4	Battery	CEX1065
	5	Remote Control Assy	CXC8885
	6	Cord Assy	XDP7001
*	7	Accessory Assy	See Contrast table(2)
	8	Screw	See Contrast table(2)
	9	Screw Assy	CEA3849
	10	Screw	CBA1650
*	11	Polyethylene Bag	CEG-127
	12	Screw	CRZ50P090FTC
	13	Screw	TRZ50P080FTC
*	14	Polyethylene Bag	See Contrast table(2)
	15	Handle	CND3707
	16	Bush	CNV3930
	17	Unit Box	See Contrast table(2)
	18	Contain Box	See Contrast table(2)
	19	Protector	See Contrast table(2)
	20	Protector	See Contrast table(2)
	21	Case Assy	See Contrast table(2)
	22-1	Caution Card	CRP1310
	22-2	Caution Card	See Contrast table(2)
*	22-3	Warranty Card	See Contrast table(2)
	22-4	Installation Manual	See Contrast table(2)
	22-5	Owner's Manual	See Contrast table(2)
	22-6	Owner's Manual	See Contrast table(2)
*	22-7	Caution Card	See Contrast table(2)

(2) CONTRAST TABLE


DEH-P400UB/XS/UC, DEH-P4000UB/XS/UC, DEH-P4050UB/XS/ES and DEH-P4050UB/XU/CN5 are constructed the same except for the following:

Mark	No.	Description	DEH-P400UB/XS/UC	DEH-P4000UB/XS/UC	DEH-P4050UB/XS/ES	DEH-P4050UB/XU/CN5
	1	Cord Assy	CDP1041	Not used	Not used	Not used
	3	Polyethylene Bag	CEG1173	CEG1173	CEG-162	CEG-162
	7	Accessory Assy	*YEA5012	*YEA5012	CEA6708	YEA5013
	8	Screw	BPZ20P080FTC	BPZ20P080FTC	Not used	Not used
*	14	Polyethylene Bag	CEG-158	CEG-158	CEG1160	CEG-158
	17	Unit Box	YHG5356	YHG5165	YHG5353	YHG5354
	18	Contain Box	YHL5356	YHL5167	YHL5353	YHL5354
	19	Protector	YHP5041	YHP5041	YHP5039	YHP5039
	20	Protector	YHP5042	YHP5042	YHP5040	YHP5040
	21	Case Assy	Not used	Not used	CXB3520	CXB3520
	22-2	Caution Card	Not used	CRP1294	Not used	Not used
*	22-3	Warranty Card	CRY1070	CRY1246	Not used	ARY7046
	22-4	Installation Manual	YRD5170	YRD5132	YRD5167	Not used
	22-5	Owner's Manual	YRD5164	YRD5131	YRD5165	YRB5075
	22-6	Owner's Manual	Not used	Not used	YRD5161	Not used
*	22-7	Caution Card	YRP5011	YRP5011	YRP5012	YRP5012

Owner's Manual,Installation Manual

Part No.	Language
YRD5164,YRD5170,YRD5131,YRD5132	English, French
YRD5161	English, Spanish, Portuguese(B)
YRD5165	Traditional Chinese, Arabic
YRD5167	English, Spanish, Portuguese(B), Traditional Chinese, Arabic
YRB5075	Simplified Chinese

9.2 EXTERIOR(1)

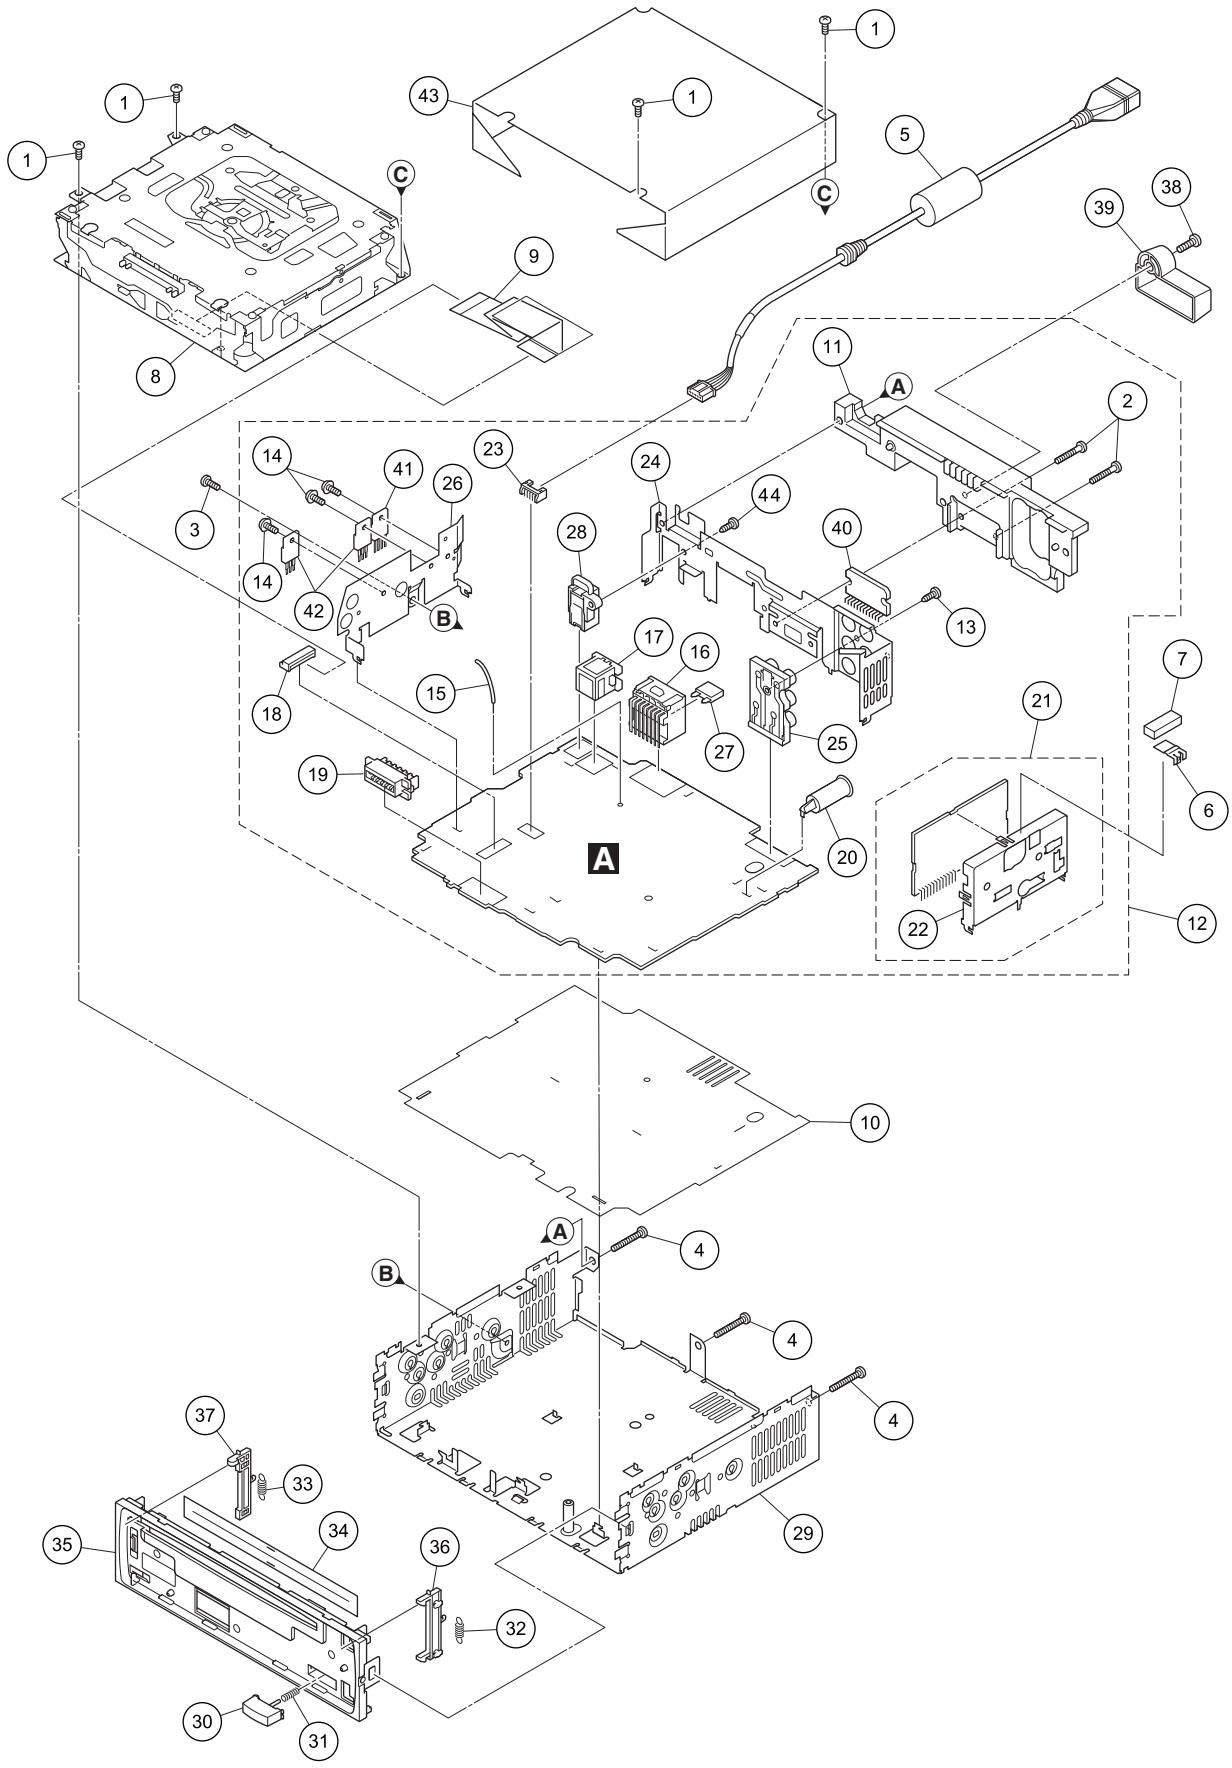

(1) EXTERIOR(1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ26P200FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cord Assy	CDE8351
	6	Earth Plate	CNC8915
	7	Cushion	CNM8890
	8	CD Mechanism Module(S10.5)	CXK5770
	9	Cable	YDE5030
	10	Insulator	YNM5062
	11	Heat Sink	YNR5031
	12	Tuner Amp Unit	See Contrast table(2)
	13	Screw	BPZ26P080FTC
	14	Screw	BSZ26P060FTC
	15	Clamper	CEF1050
	16	Plug(CN901)	CKM1376
	17	Connector(CN101)	CKS3408
	18	Connector(CN701)	CKS3833
	19	Connector(CN803)	CKS5664
	20	Antenna Jack(CN401)	CKX1056
	21	FM/AM Tuner Unit(Y401)	CWE2098
	22	Holder	CND4324
	23	5P Plug(CN251)	KM200NA5L
	24	Holder	See Contrast table(2)
	25	Pin Jack(CN351)	XKB7001
	26	Holder	XNC7030
⚠	27	Fuse(10 A)	YEK5001
	28	Jack(CN621)	See Contrast table(2)
	29	Chassis Unit	YXA5196
	30	Button	CAC4836
	31	Spring	CBH2367
	32	Spring	CBH2961
	33	Spring	CBH2962
	34	Cover	CNN1665
	35	Panel	CNS9206
	36	Arm	CNV9311
	37	Arm	CNV9312
	38	Screw	See Contrast table(2)
	39	Holder	See Contrast table(2)
	40	IC(IC301)	PAL007C
	41	IC(IC921)	NJM2388F84
	42	Transistor (Q702,Q911)	2SD2396
	43	Sheet	See Contrast table(2)
	44	Screw	See Contrast table(2)


(2) CONTRAST TABLE

DEH-P400UB/XS/UC, DEH-P4000UB/XS/UC, DEH-P4050UB/XS/ES and DEH-P4050UB/XU/CN5 are constructed the same except for the following:

Mark	No.	Description	DEH-P400UB/XS/UC	DEH-P4000UB/XS/UC	DEH-P4050UB/XS/ES	DEH-P4050UB/XU/CN5
	12	Tuner Amp Unit	YWM5171	YWM5173	YWM5177	YWM5179
	24	Holder	QNC3001	QNC3001	YNC5057	YNC5057
	28	Jack(CN621)	YKS5002	YKS5002	Not used	Not used
	38	Screw	Not used	BMZ40P140FTC	Not used	Not used
	39	Holder	Not used	CNV7619	Not used	Not used
NOTE	43	Sheet	Not used	Not used	Not used	CNM9404
	44	Screw	BPZ26P080FTC	BPZ26P080FTC	Not used	Not used

<NOTE> Sheet, #43 has to be replaced if it is removed.

9.3 EXTERIOR(2)

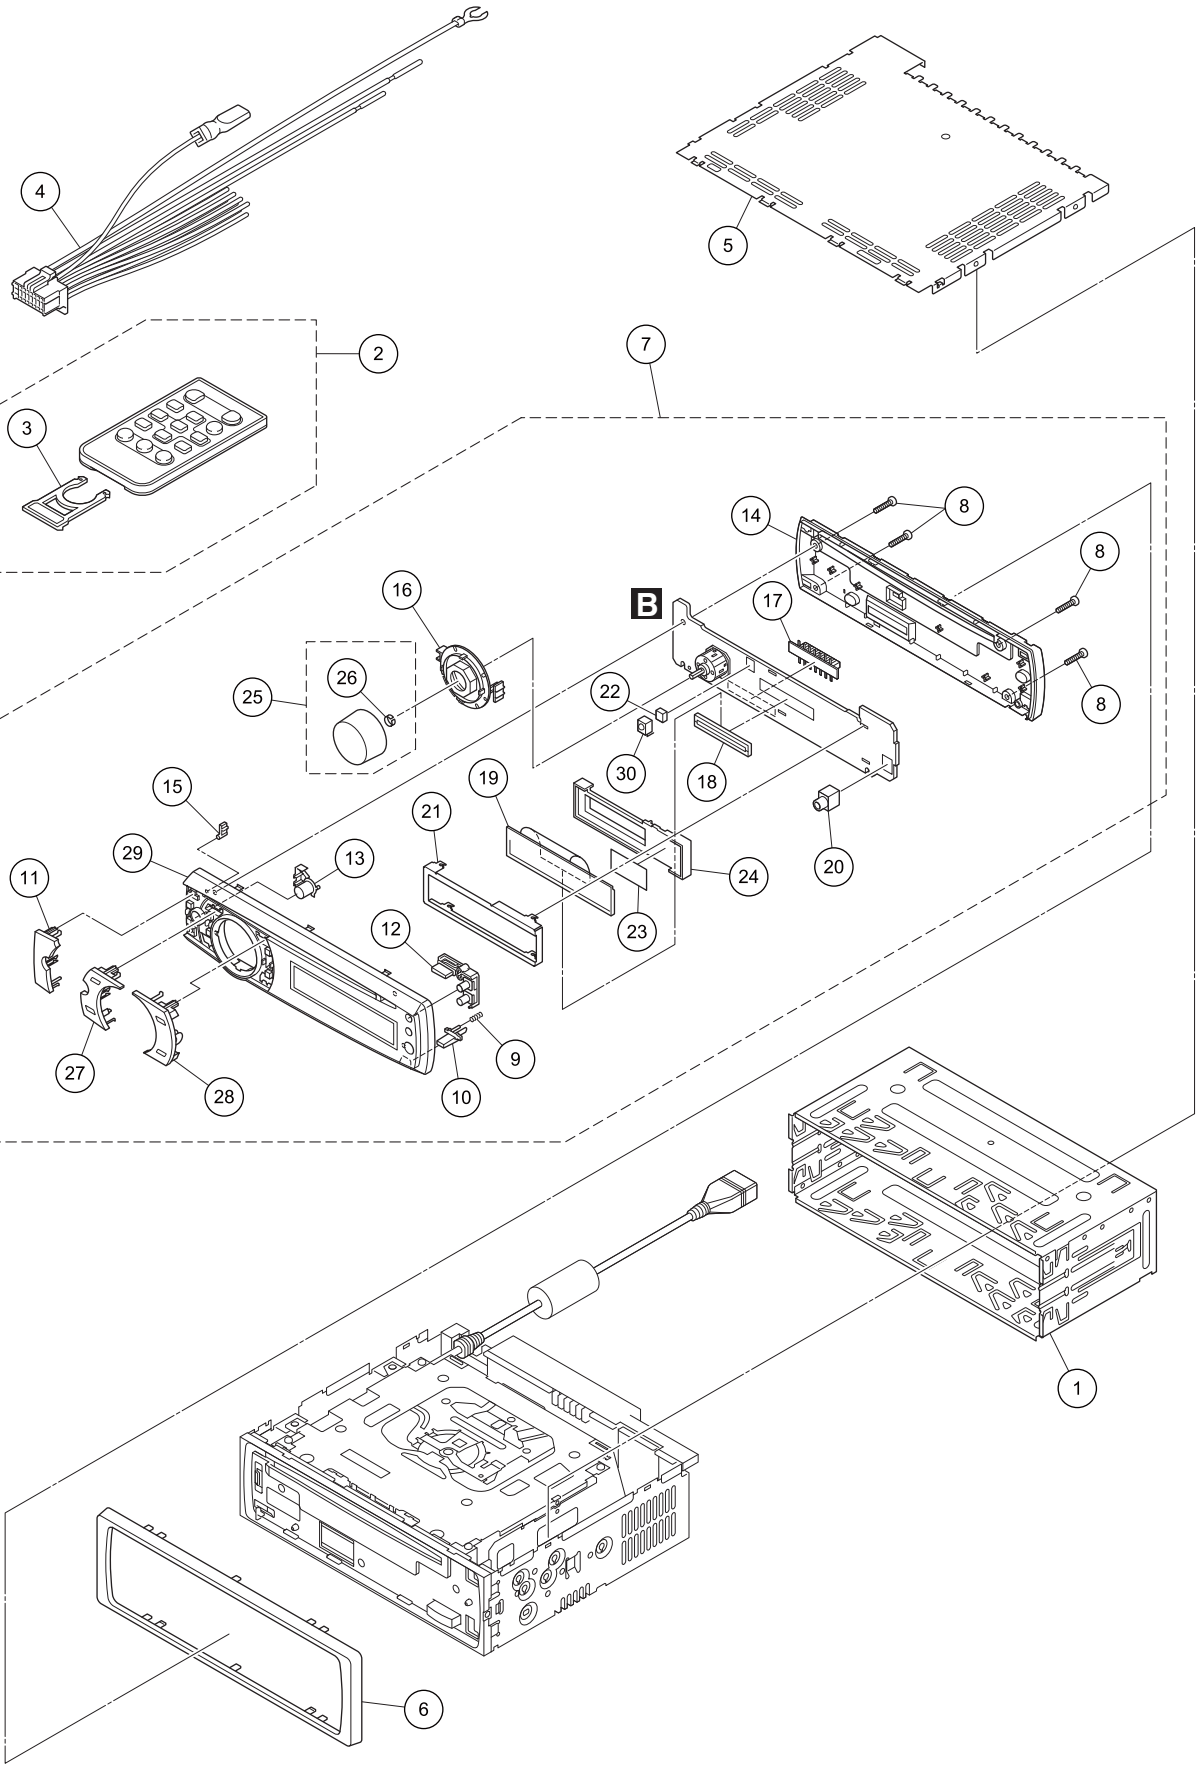

(1) EXTERIOR(2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Holder	CND3598
	2	Remote Control Assy	CXC8885
	3	Cover	CNS7068
	4	Cord Assy	XDP7001
	5	Case	YNB5014
	6	Panel	See Contrast table(2)
	7	Detachable Assy	See Contrast table(2)
	8	Screw	BPZ20P100FTB
	9	Spring	CBH2210
	10	Button(Detach)	YAC5231
	11	Button(SOURCE, BAND)	YAC5243
	12	Button(EJECT, CLOCK, SW/BASS)	YAC5244
	13	Button(LIST)	YAC5245
	14	Cover	YNS5394
	15	Lighting Conductor	YNV5165
	16	Lighting Conductor	YNV5126
	17	Connector(CN1801)	CKS5663
	18	Connector(CN1803)	CKS5865
	19	OLED	MXS8250
	20	Jack(CN1802)	YKN5001
	21	Holder	YNC5048
	22	Cushion	YNM5029
	23	Double Sided Tape	YNM5092
	24	Holder	YNV5129
	25	Knob Unit	YXA5298
	26	Spring	YBL5013
	27	Button Unit(DISP, RDM)	YXA5324
	28	Button Unit(S.Rtrv, RPT)	See Contrast table(2)
	29	Grille Unit	See Contrast table(2)
	30	IC(IC1801)	GP1UX51RK

(2) CONTRAST TABLE

DEH-P400UB/XS/UC, DEH-P4000UB/XS/UC, DEH-P4050UB/XS/ES and DEH-P4050UB/XU/CN5 are constructed the same except for the following:

Mark	No.	Description	DEH-P400UB/XS/UC	DEH-P4000UB/XS/UC	DEH-P4050UB/XS/ES	DEH-P4050UB/XU/CN5
	6	Panel	YNS5313	YNS5390	YNS5390	YNS5390
	7	Detachable Assy	YXA5271	YXA5272	YXA5273	YXA5274
	28	Button Unit(S.Rtrv, RPT)	YXA5325	YXA5325	YXA5426	YXA5426
	29	Grille Unit	YXA5327	YXA5326	YXA5394	YXA5394

9.4 CD MECHANISM MODULE

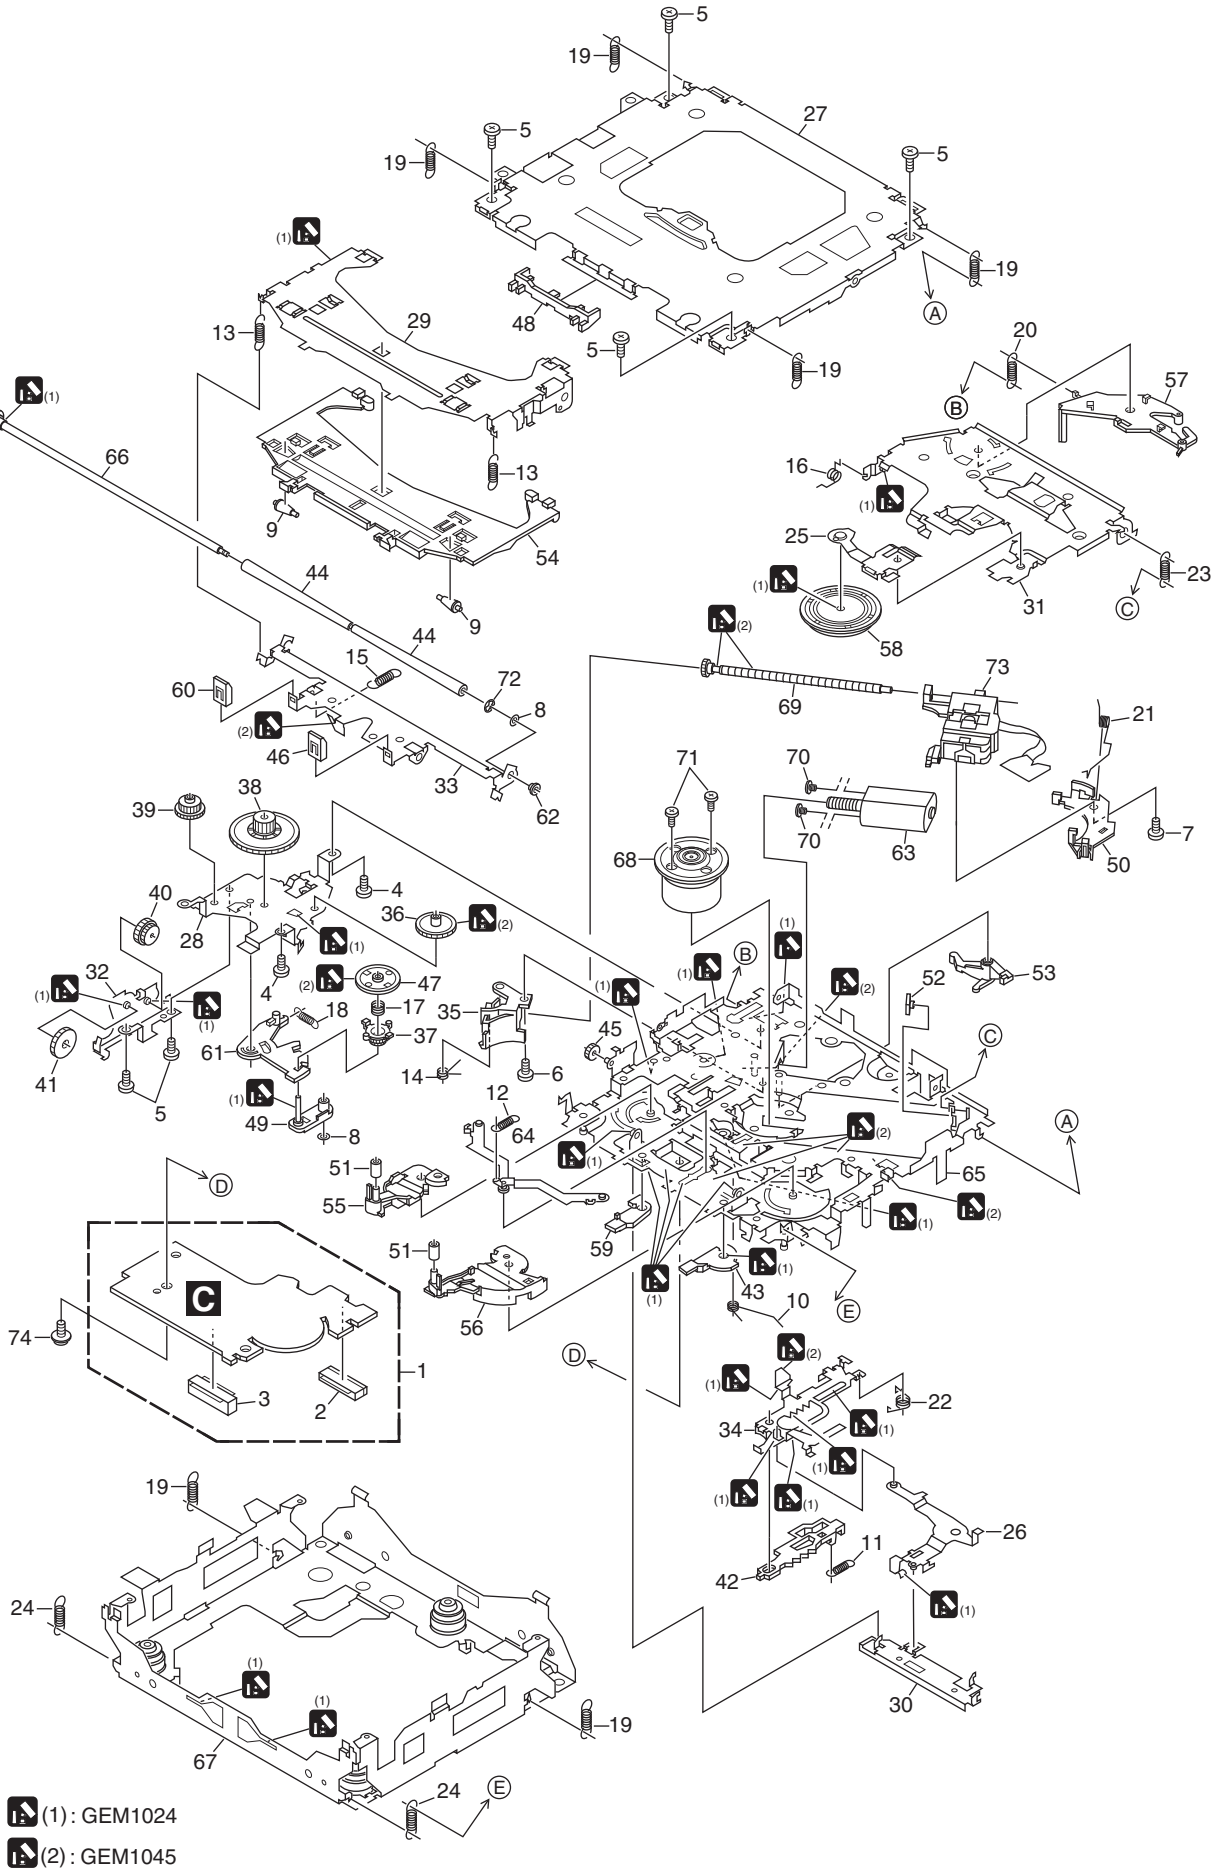

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP2-iPod)	CWX3526
	2	Connector(CN101)	CKS4911
	3	Connector(CN701)	CKS4915
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	Roller	CNV9499
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND3831
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV9522
	36	Gear	CNV7207
	37	Gear	CNV9513
	38	Gear	CNV7209
	39	Gear	CNV9514
	40	Gear	CNV9515
	41	Gear	CNV9516
	42	Rack	CNV9517
	43	Arm	CNV7216
	44	Roller	CNV8189
	45	Gear	CNV9518
	46	Guide	CNV9519
	47	Gear	CNV7595
	48	Guide	CNV9520
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV9498
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV9521
	62	Collar	CNV8447
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC7134
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P025FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Unit Number : YWM5171
(A:DEH-P400UB/XS/UC)
Unit Number : YWM5173
(B:DEH-P4000UB/XS/UC)
Unit Number : YWM5177
(C:DEH-P4050UB/XS/ES)
Unit Number : YWM5179
(D:DEH-P4050UB/XU/CN5)
Unit Name : Tuner Amp Unit
Unit Number : (A:DEH-P400UB/XS/UC)
Unit Number : (B:DEH-P4000UB/XS/UC)
Unit Number : (C:DEH-P4050UB/XS/ES)
Unit Number : (D:DEH-P4050UB/XU/CN5)
Unit Name : Keyboard Unit
Unit Number : CWX3526
Unit Name : CD Core Unit
(S10.5COMP2-iPod)

A

Unit Number : YWM5171
(A:DEH-P400UB/XS/UC)
Unit Number : YWM5173
(B:DEH-P4000UB/XS/UC)
Unit Number : YWM5177
(C:DEH-P4050UB/XS/ES)
Unit Number : YWM5179
(D:DEH-P4050UB/XU/CN5)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	(B,77,63) IC	HA12241FP
IC 151	(B,135,85) IC	PML018A
IC 171	(B,148,26) IC	NJM2360M
IC 251	(B,44,69) IC	R5523N001B
IC 301	(A,105,139) IC	PAL007C
IC 401	(B,165,29) IC	NJM2885DL1-33
IC 501	(B,16,32) Regulator IC	BD9781HFP
IC 601	(B,96,58) IC	PEG407A
IC 702	(B,58,29) IC	NJM2885DL1-33
IC 921	(A,6,120) IC	NJM2388F84
IC 961	(B,98,33) IC	S-80835CNMC-B8U
Q 101	(B,40,96) Transistor	2SA1576A
Q 102	(B,31,115) Transistor	RT1N141M-11
Q 171	(B,129,30) Transistor	RT3T22M
Q 172	(B,126,35) Transistor	2SD1767
Q 181	(B,137,72) Transistor	RT3T22M
Q 182	(B,130,68) Transistor	2SC4081
Q 351	(B,166,126) Transistor	RT3N66M
Q 352	(B,140,122) Transistor	RT3N66M
Q 353	(B,135,125) Transistor	RT3N66M
Q 451	(B,117,119) Transistor	RT1N241M
Q 453	(B,116,116) Transistor	RT3T22M
Q 701	(B,20,60) Transistor	RT3T22M
Q 702	(A,7,70) Transistor	2SD2396
Q 841	(B,131,23) Transistor	2SA1036K
Q 842	(B,139,17) Transistor	RT1N141M-11
Q 851	(B,33,16) Transistor	2SA1036K
Q 852	(B,24,16) Transistor	RT1N141M-11
Q 911	(A,7,104) Transistor	2SD2396
Q 912	(B,16,73) Transistor	RT3T22M
Q 931	(B,64,94) Transistor	RT3CLLM
Q 971	(B,87,94) Transistor	RT1N141M-11
D 171	(A,131,37) Diode	MTZJA10(B)
D 172	(B,139,29) Diode	RB551V-30
D 173	(B,99,74) Diode	MC2848-11
D 181	(A,138,69) Diode	HZS12L(B1)
D 251	(B,50,60) Diode	EZJZ1V800AM
D 252	(B,51,61) Diode	EZJZ1V800AM
D 454	(A,94,105) Diode	1SS133

Circuit Symbol and No.		Part No.
D 501	(B,22,44) Diode	RB060L-40
D 502	(A,16,58) Diode	S5688G
D 701	(A,26,65) Diode	HZS7L(C3)
D 801	(B,63,6) Diode	EZJZ1V270RM
D 802	(B,64,6) Diode	EZJZ1V270RM
D 803	(B,68,6) Diode	EZJZ1V270RM
D 805	(B,74,6) Diode	EZJZ1V270RM
D 806	(B,78,6) Diode	EZJZ1V270RM
D 808	(B,72,6) Diode	EZJZ1V270RM
D 809	(B,80,14) Diode	EZJZ1V270RM
D 901	(A,74,111) Diode	S5688G
D 902	(A,78,107) Diode	S5688G
D 903	(A,62,103) Diode	S5688G
D 904	(A,59,103) Diode	S5688G
D 911	(A,16,81) Diode	S5688G
D 912	(A,16,75) Diode	HZS6L(B2)
D 931	(A,55,96) Diode	HZS7L(C3)
D 932	(A,54,93) Diode	HZS7L(A1)
D 971	(A,68,103) Diode	1SS133
ZNR401	(B,165,113) Surge Protector	IMSA-6801-01Y901
L 101	(A,76,69) Inductor	LAU2R2K
L 161	(A,122,99) Inductor	LAU2R2K
L 171	(A,146,32) Inductor	YTF5001
L 181	(A,138,61) Ferri-Inductor	LAU100K
L 251	(B,52,55) Inductor	DTH1197
L 401	(A,150,91) Inductor	LAU1R0K
L 402	(B,159,106) Inductor	LCTAW220J2520
L 403	(A,156,34) Inductor	LAU1R0K
L 501	(A,29,41) Inductor	YTF5003
L 601	(A,94,41) Ferri-Inductor	LAU100K
L 602	(A,104,34) Inductor	LAU2R2K
L 852	(A,37,16) Inductor	LAU2R2K
L 901	(A,39,103) Choke Coil 600 µH	CTH1280
X 601	(A,84,44) Oscillator 15.000 MHz	YSS5002
⚠FU353	(B,131,133) Fuse 3 A	CEK1286
BZ601	(A,29,17) Buzzer	CPV1062
Y 401	(A,163,101) FM/AM Tuner Unit	CWE2098

RESISTORS

R 101	(B,31,123)	RS1/16S181J
R 102	(B,34,114)	RS1/16S222J
R 103	(B,25,129)	RS1/16S181J
R 104	(B,36,134)	RS1/16S101J
R 105	(B,33,135)	RS1/16S101J
R 106	(B,30,122)	RS1/16S223J
R 107	(B,25,125)	RS1/16S223J
R 108	(B,27,125)	RS1/16S102J
R 109	(B,28,122)	RS1/16S102J
R 110	(B,37,96)	RS1/16S332J
R 111	(B,32,112)	RS1/16S562J
R 112	(B,74,72)	RS1/16S102J
R 113	(B,81,66)	RS1/16S472J
R 114	(B,78,59)	RS1/16S472J
R 116	(B,31,135)	RS1/16S470J
R 117	(B,30,135)	RS1/16S150J
R 118	(B,66,75)	RS1/16S0R0J
R 151	(B,146,89)	RS1/16S102J
R 152	(B,147,87)	RS1/16S102J
R 153	(B,145,86)	RS1/16S102J
R 171	(B,130,33)	RS1/16S122J
R 172	(B,123,29)	RS1/16S122J
R 173	(B,146,32)	RS1/16S1R0J
R 174	(B,144,30)	RS1/16S391J
R 175	(B,134,33)	RS1/16S821J
R 176	(B,134,30)	RS1/16S102J
R 177	(B,140,34)	RS1/10S4701F
R 181	(B,133,67)	RS1/16S391J
R 254	(B,45,72)	RS1/16S681J
R 257	(B,58,52)	RS1/16S103J
R 301	(B,124,111)	RS1/16S682J
R 302	(B,137,109)	RS1/16S123J
R 303	(B,128,109)	RS1/16S682J
R 304	(B,140,109)	RS1/16S682J
R 305	(B,126,109)	RS1/16S123J
R 306	(B,134,109)	RS1/16S682J
R 307	(B,123,109)	RS1/16S123J
R 308	(B,141,109)	RS1/16S123J
R 309	(A,98,107)	RD1/4PU153J
R 351	(B,159,115)	RS1/16S390J
R 352	(B,156,120)	RS1/16S0R0J
R 353	(B,131,109)	RS1/16S390J
R 354	(B,132,109)	RS1/16S390J
R 355	(B,136,122)	RS1/16S390J
R 356	(B,132,97)	RS1/16S390J
R 358	(B,131,129)	RS1/16S390J
R 359	(B,163,133)	RS1/16S223J
R 360	(B,159,132)	RS1/16S223J
R 361	(B,158,117)	RS1/16S223J
R 362	(B,159,136)	RS1/16S223J
R 363	(B,134,129)	RS1/16S223J
R 364	(B,137,129)	RS1/16S223J
R 381	(B,136,129)	RS1/16S0R0J
R 382	(B,140,126)	RS1/16S0R0J
R 383	(B,140,124)	RS1/16S0R0J
R 384	(B,148,118)	RS1/16S0R0J
R 385	(B,148,116)	RS1/16S0R0J
R 386	(B,144,124)	RS1/16S0R0J
R 391	(B,143,126)	RS1/16S0R0J
R 392	(B,144,130)	RS1/16S0R0J
R 401	(B,152,54)	RS1/16S681J
R 403	(B,156,85)	RS1/16S681J
R 404	(B,157,88)	RS1/16S681J
R 405	(B,157,90)	RS1/16S681J
R 406	(B,156,91)	RS1/16S681J
R 407	(B,156,93)	RS1/16S0R0J
R 414	(A,157,24)	RD1/4PU4R7J
R 421	(B,155,86)	RS1/16S0R0J
R 451	(B,121,118)	RS1/16S103J
R 452	(B,119,122)	RS1/16S221J
R 453	(B,121,126)	RS1/16S153J
R 454	(A,117,112)	RD1/4PU102J
R 502	(B,26,25)	RS1/16S3302F
R 503	(B,24,27)	RS1/16S333J
R 505	(B,28,32)	RS1/16S8201F
R 506	(B,27,31)	RS1/16S683J
R 507	(B,82,57)	RS1/16S222J
R 510	(B,28,45)	RS1/16S823J
R 511	(B,28,22)	RS1/10SR471J

Circuit Symbol and No.		Part No.
R 512	(B,53,22)	RS1/16S0R0J
R 513	(B,32,22)	RS1/16S222J
R 602	(B,83,49)	RS1/16S103J
R 603	(B,98,86) (A,B)	RS1/16S103J
R 604	(B,109,62)	RS1/16S681J
R 605	(B,113,59)	RS1/16S681J
R 606	(B,103,29) (A,B)	RS1/16S103J
R 607	(B,110,60)	RS1/16S681J
R 608	(B,107,41) (B,C,D)	RS1/16S104J
R 609	(B,105,43) (A,C,D)	RS1/16S104J
	(B,105,43) (B)	RS1/16S473J
R 610	(B,106,66)	RS1/16S473J
R 613	(B,110,83)	RS1/16S104J
R 616	(B,36,27)	RS1/16S473J
R 617	(B,42,64)	RS1/16S473J
R 618	(B,74,59)	RS1/16S102J
R 620	(B,109,66)	RS1/16S0R0J
R 621	(B,14,140) (A,B)	RS1/16S102J
R 622	(B,12,140) (A,B)	RS1/16S102J
R 627	(B,114,92)	RS1/16S102J
R 628	(B,13,136) (C,D)	RS1/16S104J
R 629	(B,14,136) (C,D)	RS1/16S104J
R 701	(A,16,63)	RD1/4PU271J
R 703	(B,49,43)	RS1/16S472J
R 704	(B,32,26)	RS1/16S104J
R 705	(B,49,46)	RS1/16S472J
R 706	(B,49,48)	RS1/16S104J
R 707	(B,36,29)	RS1/16S104J
R 708	(B,47,51)	RS1/16S221J
R 709	(B,36,24)	RS1/16S102J
R 710	(B,49,45)	RS1/16S221J
R 711	(B,37,40)	RS1/16S221J
R 712	(B,49,42)	RS1/16S221J
R 713	(B,35,26)	RS1/16S221J
R 714	(B,46,54)	RS1/16S104J
R 806	(B,62,17)	RS1/16S222J
R 807	(B,62,19)	RS1/16S222J
R 808	(B,82,39)	RS1/16S104J
R 816	(B,118,19)	RS1/16S1R0J
R 825	(B,77,49)	RS1/16S102J
R 832	(B,49,10)	RS1/16S0R0J
R 834	(B,128,41)	RS1/16S1R0J
R 835	(B,100,15)	RS1/16S0R0J
R 841	(B,134,23)	RS1/16S103J
R 842	(B,135,23)	RS1/16S472J
R 851	(B,34,19)	RS1/16S153J
R 852	(B,24,19)	RS1/16S472J
R 853	(B,44,8)	RS1/16S222J
R 911	(B,20,71)	RS1/16S223J
R 912	(A,16,78)	RD1/4PU152J
R 922	(B,11,110)	RS1/16S473J
R 930	(B,107,84)	RS1/16S104J
R 931	(B,82,50)	RS1/16S104J
R 932	(B,113,78)	RS1/16S104J
R 933	(B,64,96)	RS1/16S104J
R 934	(B,64,98)	RS1/16S473J
R 935	(B,61,91)	RS1/16S473J
R 936	(B,60,98)	RS1/16S473J
R 937	(B,63,118)	RS1/16S472J
R 938	(B,59,125)	RS1/4SA102J
R 951	(B,106,106)	RS1/16S473J

Circuit Symbol and No.		Part No.
R 962	(B,102,33)	RS1/16S822J
R 967	(B,90,36)	RS1/16S102J
R 971	(B,62,125)	RS1/4SA102J
R 972	(B,75,100)	RS1/16S103J

CAPACITORS

C 101	(B,28,135)	CKSRYB104K25
C 104	(B,74,71)	CKSRYB103K50
C 151	(B,145,76)	CKSRYB105K10
C 152	(B,145,79)	CKSRYB105K10
C 153	(B,159,74)	CKSRYB224K10
C 154	(B,145,78)	CKSRYB105K10
C 155	(B,163,72)	CKSRYB224K10
C 156	(B,119,80)	CKSRYB105K10
C 157	(B,119,86)	CKSRYB105K10
C 158	(B,119,90)	CKSRYB105K10
C 159	(B,119,79)	CKSRYB105K10
C 160	(A,124,83)	CEJQ100M16
C 162	(A,124,89)	CEJQ470M10
C 163	(B,124,86)	CKSRYB104K25
C 165	(A,135,98)	CEJQ100M16
C 171	(B,125,30)	CKSRYB104K25
C 172	(A,132,27)	CEJQ101M16
C 173	(B,139,23)	CKSRYB104K25
C 174	(A,140,25)	CEJQ101M16
C 175	(B,140,27)	CCSRCH471J50
C 176	(B,138,32)	CKSRYB223K25
C 177	(A,135,37)	CEJQ470M16
C 181	(B,141,72)	CKSRYB473K25
C 182	(B,129,73)	CKSRYB104K25
C 183	(A,132,72)	CEJQ470M16
C 251	(B,50,68)	CKSRYB104K25
C 252	(B,44,63)	CKSRYB104K25
C 253	(B,42,66)	CKSRYB103K50
C 305	(B,135,113)	CKSQYB474K25
C 306	(B,127,113)	CKSQYB474K25
C 307	(B,129,113)	CKSQYB474K25
C 308	(B,132,113)	CKSQYB474K25
C 309	(B,125,135)	CKSQYB225K10
C 310	(B,127,132)	CKSQYB225K10
C 311	(A,103,127)	CEJQ100M16
C 313	(A,51,124) 3 300 µF/16 V	CCH1494
C 315	(B,134,117)	CKSRYB474K10
C 316	(B,125,114)	CKSRYB474K10
C 317	(B,123,114)	CKSRYB474K10
C 318	(B,131,117)	CKSRYB474K10
C 351	(A,130,98)	CEJQ2R2M50
C 352	(A,141,98)	CEJQ2R2M50
C 353	(A,135,103)	CEJQ2R2M50
C 354	(A,140,103)	CEJQ2R2M50
C 355	(A,130,103)	CEJQ2R2M50
C 356	(A,147,104)	CEJQ2R2M50
C 401	(A,155,55)	CEJQ470M6R3
C 402	(B,158,56)	CKSRYB103K50
C 403	(B,157,38)	CKSRYB103K50
C 405	(A,154,102)	CEJQ101M10
C 406	(B,167,94)	CKSRYB104K25
C 407	(B,159,68)	CKSRYB103K50
C 408	(A,157,30)	CEJQ220M10

Circuit Symbol and No.		Part No.
C 410	(B,157,26)	CKSRYB474K10
C 411	(B,167,92) (A,B,C)	CCSRCH470J50
C 412	(B,128,136)	CKSRYB105K10
C 451	(A,119,126)	CEJQ330M10
C 501	(A,29,27) 150 µF/6.3 V	CCH1781
C 502	(A,17,50)	CEJQ221M16
C 503	(B,24,23)	CCSRCH221J50
C 504	(B,17,54)	CKSRYB105K16
C 505	(B,25,31)	CCSRCH101J50
C 506	(B,27,36)	CKSRYB332K50
C 507	(B,28,44)	CKSRYB104K25
C 508	(B,29,22)	CKSRYB105K10
C 601	(B,83,46)	CCSRCH180J50
C 602	(B,87,46)	CCSRCH180J50
C 604	(B,101,43)	CKSRYB105K10
C 605	(A,103,40)	CEJQ100M16
C 606	(B,112,34)	CKSRYB104K25
C 607	(A,97,37)	CEJQ100M16
C 609	(B,110,65)	CCSRCH470J50
C 623	(B,111,93)	CKSRYB104K25
C 701	(B,21,58)	CKSRYB473K25
C 703	(A,24,53)	CEJQ101M10
C 704	(B,145,68)	CKSRYB105K10
C 705	(B,127,84)	CKSRYB105K10
C 708	(A,39,27)	CEJQ220M10
C 709	(B,48,29)	CKSRYB105K10
C 710	(B,45,28)	CKSRYB474K10
C 720	(B,39,53)	CKSRYB105K10
C 851	(B,25,13)	CKSRYB104K25
C 901	(B,54,117)	CKSRYB104K25
C 911	(A,15,69)	CEJQ470M10
C 912	(B,21,74)	CKSRYB103K50
C 913	(A,24,74)	CEAT102M16
C 921	(B,12,112)	CKSRYB103K50
C 922	(A,18,99)	CEJQ221M10
C 923	(A,16,117)	CEJQ101M16
C 924	(B,15,115)	CKSRYB103K50
C 961	(B,101,36)	CKSRYB473K25
C 962	(A,93,33)	CEJQ100M16
C 971	(A,89,97)	CEJQ1R0M50

B

Unit Number : (A:DEH-P400UB/XS/UC)
Unit Number : (B:DEH-P4000UB/XS/UC)
Unit Number : (C:DEH-P4050UB/XS/ES)
Unit Number : (D:DEH-P4050UB/XU/CN5)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(A,15,66) Remote IC	GP1UX51RK
IC 1802	(B,18,127) IC	PEG412A
IC 1803	(B,28,109) IC	PML019A
Q 1802	(B,36,138) Transistor	2SC2412K
D 1801	(B,14,111) Diode	MC2846-11
D 1802	(B,14,116) Diode	MC2848-11
D 1803	(A,10,9) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,10,9) LED(B)	SML-310PT
D 1804	(A,31,6) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,31,6) LED(B)	SML-310PT

Circuit Symbol and No.		Part No.
D 1805	(A,21,10) LED	CL-197HB1-D(CDE)
D 1806	(A,14,19) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,14,19) LED(B)	SML-310PT
D 1807	(A,32,14) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,32,14) LED(B)	SML-310PT
D 1808	(A,16,56) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,16,56) LED(B)	SML-310PT
D 1809	(A,35,56) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,35,56) LED(B)	SML-310PT
D 1810	(A,5,147) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,5,147) LED(B)	SML-310PT
D 1811	(A,7,159) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,7,159) LED(B)	SML-310PT
D 1812	(A,15,159) LED(A,C,D)	CL-197HB1-D(CDE)
	(A,15,159) LED(B)	SML-310PT
D 1813	(A,12,35) LED	CL-197HB1-D(CDE)
D 1814	(A,28,22) LED	CL-197HB1-D(CDE)
D 1815	(A,41,38) LED	CL-197HB1-D(CDE)
D 1816	(A,25,50) LED	CL-197HB1-D(CDE)
D 1817	(B,20,140) Diode	1SS355
D 1836	(A,4,7) LED(B)	SML-310PT
X 1801	(B,18,134) Radiator 10.0 MHz	CSS1577
S 1801	(A,35,15) Push Switch	CSG1155
S 1802	(A,34,6) Push Switch	CSG1155
S 1803	(A,8,7) Push Switch	CSG1155
S 1804	(A,11,18) Push Switch	CSG1155
S 1805	(A,13,55) Push Switch	CSG1155
S 1806	(A,8,146) Push Switch	CSG1155
S 1807	(A,22,14) Push Switch	CSG1155
S 1808	(A,11,159) Push Switch	CSG1155
S 1809	(A,19,159) Push Switch	CSG1155
S 1810	(A,38,56) Push Switch	CSG1155
S 1811	(A,26,36) Switch	CSX1120

RESISTORS

R 1801	(B,14,85)	RS1/16S222J
R 1802	(B,13,85)	RS1/16S222J
R 1804	(B,26,72)	RS1/16S101J
R 1805	(B,17,70)	RS1/16S103J
R 1806	(B,14,65)	RS1/16S2R2J
R 1807	(B,26,138)	RS1/16S102J
R 1808	(B,26,23)	RS1/16S333J
R 1809	(B,22,23)	RS1/16S822J
R 1810	(B,22,21)	RS1/16S332J
R 1811	(B,14,23)	RS1/16S102J
R 1812	(B,26,21)	RS1/16S222J
R 1813	(B,32,17)	RS1/16S103J
R 1814	(B,14,120)	RS1/16S103J
R 1815	(B,25,135)	RS1/16S103J
R 1816	(B,27,135)	RS1/16S103J
R 1817	(B,29,135)	RS1/16S103J
R 1818	(B,37,15)	RS1/16S333J
R 1819	(B,11,5)	RS1/16S822J
R 1820	(B,9,6)	RS1/16S332J
R 1821	(B,14,21)	RS1/16S222J
R 1822	(B,6,153)	RS1/16S333J
R 1823	(B,9,158)	RS1/16S822J
R 1824	(B,10,155)	RS1/16S332J
R 1825	(B,30,138)	RS1/16S222J

Circuit Symbol and No.		Part No.
R 1826	(B,34,14) (A,C,D)	RS1/4SA272J
	(B,34,14) (B)	RS1/4SA102J
R 1827	(B,23,9)	RS1/4SA222J
R 1828	(B,20,17) (A,C,D)	RS1/4SA392J
	(B,20,17) (B)	RS1/4SA102J
R 1829	(B,7,148) (A,C,D)	RS1/4SA392J
	(B,7,148) (B)	RS1/4SA102J
R 1830	(B,10,150) (A,C,D)	RS1/4SA392J
	(B,10,150) (B)	RS1/4SA102J
R 1831	(B,35,21)	RS1/4SA272J
R 1832	(B,37,29)	RS1/4SA272J
R 1833	(B,14,18) (B)	RS1/4SA122J
R 1834	(B,28,146)	RS1/16S393J
R 1835	(B,32,149)	RS1/16S683J
R 1836	(B,32,146)	RS1/16S682J
R 1837	(B,32,140)	RS1/16S392J
R 1840	(B,23,137)	RS1/16S103J
R 1841	(B,22,137)	RS1/16S473J
R 1842	(B,20,143)	RS1/16S473J
R 1843	(B,20,141)	RS1/16S154J
R 1844	(B,35,131)	RS1/16S473J
R 1845	(B,31,124)	RS1/16S101J
R 1846	(B,34,124)	RS1/16S101J
R 1847	(B,36,124)	RS1/16S101J
R 1848	(B,33,124)	RS1/16S101J
R 1849	(B,30,124)	RS1/16S101J
R 1850	(B,39,115)	RS1/16S1802D
R 1852	(B,36,150)	RS1/16S0R0J
R 1863	(B,38,117)	RS1/16S0R0J
R 1864	(B,20,46)	RS1/16S0R0J
R 1867	(B,36,131)	RS1/16S473J
R 1868	(B,23,12) (A,C,D)	RS1/4SA562J
	(B,23,12) (B)	RS1/4SA122J
R 1869	(B,13,83)	RS1/16S0R0J
R 1870	(B,17,53)	RS1/16S0R0J
R 1871	(B,22,155)	RS1/16S101J
R 1872	(B,20,157)	RS1/16S101J
R 1873	(B,17,158)	RS1/16S223J
R 1874	(B,13,160)	RS1/16S223J

CAPACITORS

C 1804	(B,26,69)	CKSYF106Z10
C 1820	(B,40,103)	CKSRYB104K50
C 1821	(B,20,146)	CKSRYB103K50
C 1824	(B,18,136)	CKSRYB104K50
C 1825	(B,31,121)	CKSRYB105K10
C 1925	(B,38,115)	CKSRYB104K50
C 1931	(B,16,158)	CKSRYB472K50
C 1932	(B,19,160)	CKSRYB472K50

Circuit Symbol and No.		Part No.

C

Unit Number : CWX3526
Unit Name : CD Core Unit
(S10.5COMP2-iPod)

MISCELLANEOUS

IC 201	(A,36,46)	IC	PE5611B
IC 205	(B,25,47)	IC	341S2094
IC 301	(A,29,15)	IC	BA5839FP
Q 101	(B,58,70)	Transistor	2SA1577
Q 102	(B,49,58)	Chip Transistor	2SB1689
Q 201	(B,27,54)	Transistor	2SA1577
X 201	(A,23,38)	Ceramic Resonator 16.934 MHz	CSS1603
X 204	(B,17,45)	Oscillator 32.768 kHz	CSS1735
X 205	(B,34,63)	Oscillator 48.000 MHz	CSS1753
S 901	(A,55,37)	Switch(HOME)	CSN1067
S 903	(B,20,59)	Switch(DSCSNS)	CSN1067
S 904	(B,41,68)	Switch(12EJ)	CSN1068
S 905	(B,25,70)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,61,74)	RS1/10SR2R4J
R 102	(B,61,72)	RS1/10SR2R4J
R 103	(B,61,71)	RS1/10SR2R7J
R 104	(B,54,67)	RS1/16SS222J
R 105	(B,45,58)	RS1/16SS102J
R 107	(B,52,60)	RS1/16SS105J
R 202	(A,27,33)	RS1/16SS473J
R 203	(A,51,44)	RS1/16S473J
R 204	(A,24,58)	RS1/16SS221J
R 206	(B,10,27)	RS1/16SS104J
R 210	(B,10,23)	RS1/16SS102J
R 214	(B,50,50)	RS1/16SS472J
R 216	(B,49,49)	RS1/16SS472J
R 221	(A,51,48)	RS1/16SS103J
R 222	(A,51,46)	RS1/16SS103J
R 223	(B,14,43)	RS1/16SS473J
R 225	(A,51,50)	RS1/16SS103J
R 226	(A,51,51)	RS1/16SS393J
R 227	(B,48,52)	RS1/16SS562J
R 228	(B,45,52)	RS1/16SS122J
R 229	(B,47,54)	RS1/16SS472J
R 230	(B,22,25)	RS1/16SS0R0J
R 232	(B,46,52)	RS1/16SS122J
R 233	(B,26,59)	RS1/16SS103J
R 234	(B,23,26)	RS1/16SS473J
R 235	(A,26,59)	RS1/16SS473J
R 237	(A,24,35)	RS1/16SS151J
R 240	(B,14,26)	RS1/16S473J
R 241	(B,14,25)	RS1/16SS103J
R 244	(B,22,55)	RS1/16SS473J
R 250	(B,25,52)	RS1/16SS101J
R 251	(B,22,51)	RS1/16SS101J
R 252	(B,21,48)	RS1/16SS101J
R 254	(A,26,64)	RS1/16SS104J
R 255	(A,26,63)	RS1/16SS104J
R 256	(A,26,62)	RS1/16SS104J
R 259	(A,28,66)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 261	(A,26,65)	RS1/16SS104J
R 262	(A,30,60)	RS1/16SS0R0J
R 263	(A,28,63)	RS1/16SS0R0J
R 273	(B,19,48)	RS1/16SS103J
R 274	(B,18,51)	RS1/16SS104J
R 275	(B,19,51)	RS1/16SS104J
R 276	(B,20,51)	RS1/16SS104J
R 277	(B,24,52)	RS1/16SS103J
R 278	(B,27,51)	RS1/16SS1003D
R 279	(B,23,52)	RS1/16SS104J
R 282	(A,30,61)	RS1/16SS240J
R 283	(A,29,61)	RS1/16SS240J
R 284	(B,30,63)	RS1/16SS153J
R 285	(B,28,63)	RS1/16SS153J
R 289	(B,19,45)	RS1/16SS0R0J
R 291	(B,43,62)	RS1/16SS272J
R 292	(B,25,43)	RS1/16SS221J
R 293	(B,27,52)	RS1/16SS472J
R 294	(A,32,63)	RS1/16SS471J
R 295	(B,55,64)	RS1/16SS103J
R 307	(A,35,19)	RS1/16SS183J
R 308	(A,38,19)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J
R 310	(A,38,22)	RS1/16SS183J
R 601	(B,30,31)	RS1/16SS0R0J
R 602	(B,27,31)	RS1/16SS0R0J
R 606	(B,28,23)	RS1/16S0R0J
R 701	(B,12,37)	RS1/16SS221J
R 702	(A,24,56)	RS1/16SS221J
R 708	(B,15,37)	RS1/16S0R0J
R 712	(B,15,54)	RS1/16SS0R0J
R 713	(B,15,53)	RS1/16SS0R0J

CAPACITORS

C 106	(B,57,67)	CKSQYB475K6R3
C 202	(A,28,57)	CKSSYB104K10
C 204	(A,24,59)	CKSSYB103K16
C 205	(B,27,41)	CKSQYB475K6R3
C 206	(A,23,41)	CKSSYB104K10
C 207	(A,25,38)	CKSRYB104K16
C 209	(B,36,35)	CEVW220M6R3
C 210	(B,29,37)	CKSSYB104K10
C 211	(A,28,35)	CKSSYB104K10
C 212	(A,29,30)	CKSRYB104K16
C 213	(A,46,39)	CKSSYB104K10
C 214	(A,29,34)	CKSSYB104K10
C 216	(A,51,52)	CKSSYB332K50
C 217	(A,48,52)	CKSSYB104K10
C 218	(A,50,52)	CKSSYB473K10
C 219	(A,47,54)	CKSSYB104K10
C 220	(A,48,54)	CKSSYB182K50
C 221	(A,46,54)	CKSSYB104K10
C 222	(B,46,54)	CCSSCH560J50
C 223	(B,48,54)	CCSSCH4R0C50
C 224	(A,45,56)	CKSSYB104K10
C 226	(A,42,59)	CCSSCH680J50
C 227	(A,42,61)	CCSSCH470J50
C 228	(B,41,62)	CKSSYB103K16
C 229	(B,48,60)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 236	(A,50,58)	CKSSYB104K10
C 239	(B,47,52)	CCSSCH220J50
C 240	(A,38,61)	CKSSYB104K10
C 243	(B,22,41)	CKSQYB475K6R3
C 250	(A,52,48)	CKSSYB102K50
C 251	(A,52,46)	CKSSYB102K50
C 260	(A,28,61)	CKSSYB104K10
C 261	(B,34,67)	CCSSCH8R0D50
C 262	(B,32,66)	CCSSCH8R0D50
C 290	(B,22,43)	CKSSYB104K10
C 291	(B,17,42)	CCSSCH5R0C50
C 292	(B,17,48)	CCSSCH5R0C50
C 293	(B,44,61)	CKSSYB102K50
C 294	(B,25,41)	CKSSYB103K16
C 295	(B,56,61)	CKSQYB106K6R3
C 296	(B,56,63)	CKSQYB106K6R3
C 303	(A,36,19)	CKSSYB472K25
C 304	(A,36,21)	CKSSYB223K16
C 307	(A,22,11)	CKSRYB104K16
C 308	(B,11,18)	CKSRYB105K10
C 703	(B,15,35)	CCSSCH101J50
C 704	(B,12,36)	CKSSYB102K50
C 711	(A,31,25)	CKSSYB104K10

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026