
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

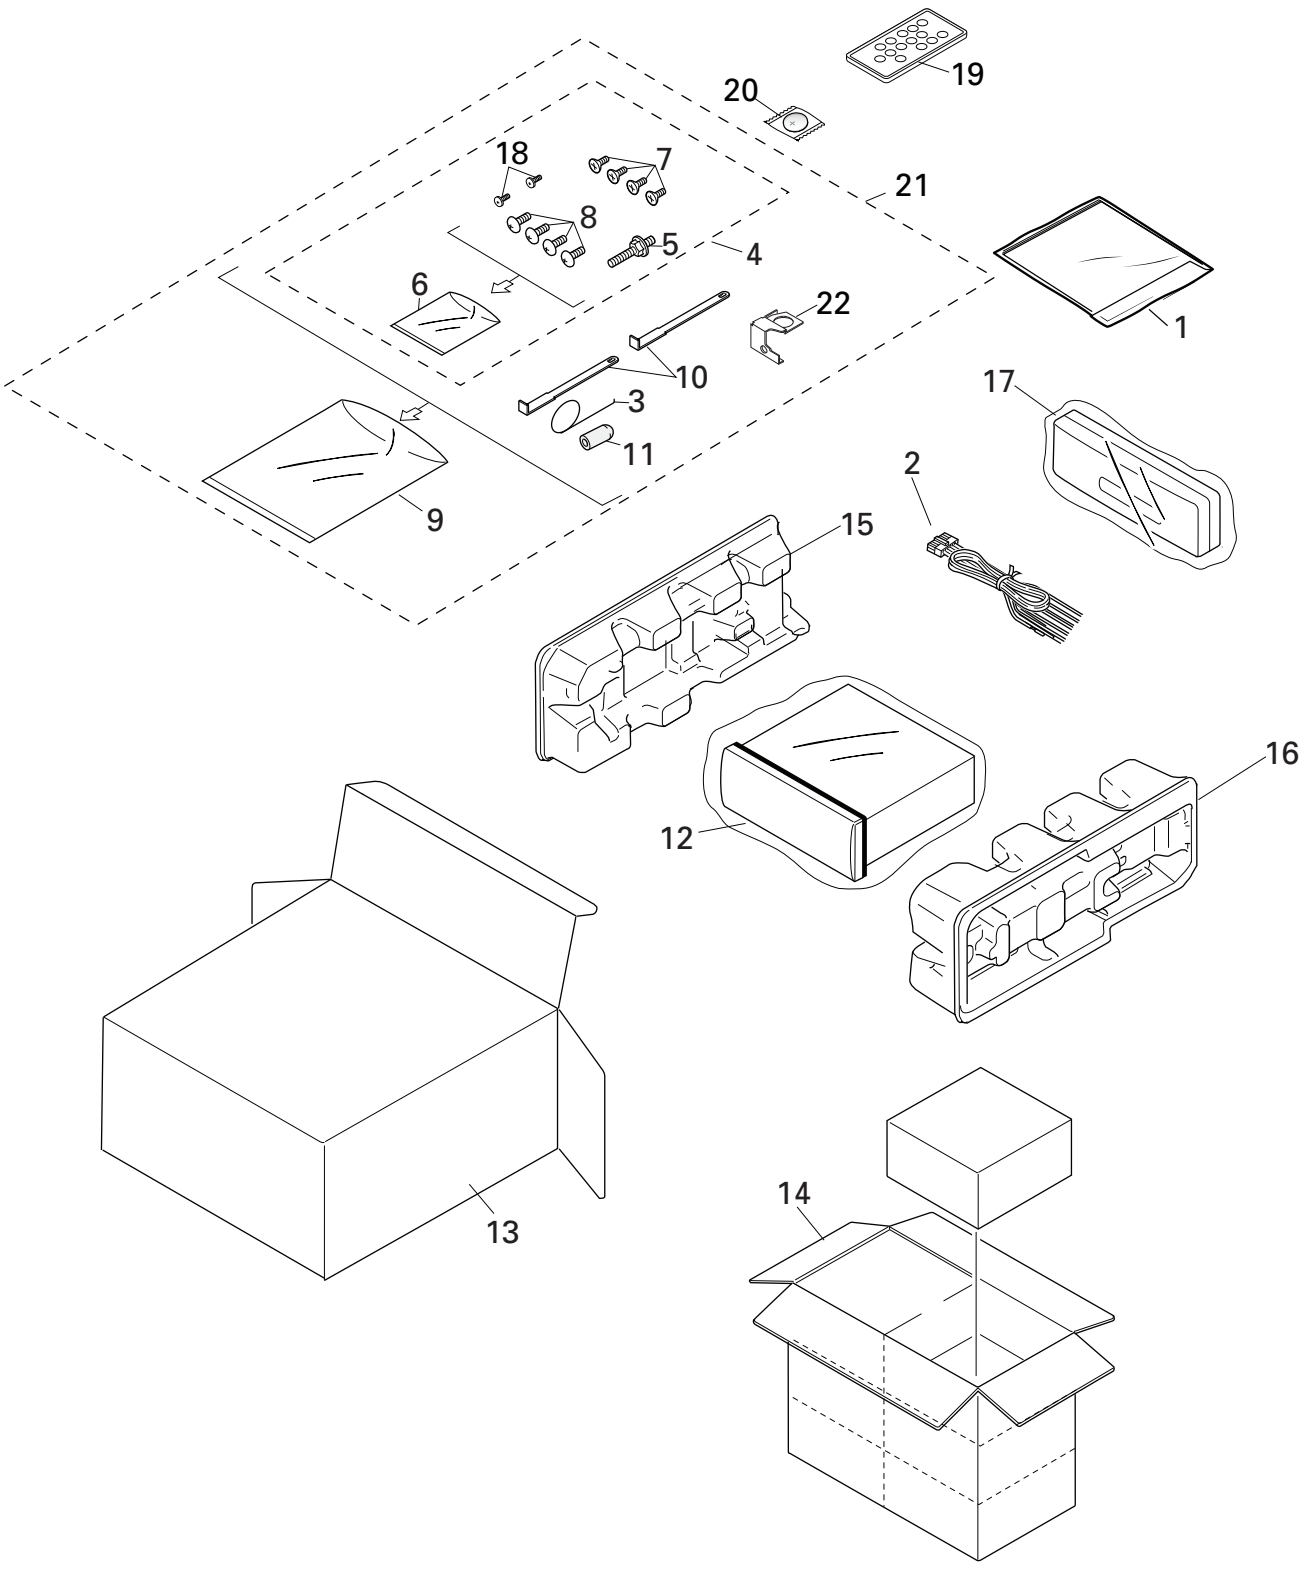

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1-1	Owner's Manual	See Contrast table(2)
	1-2	Installation Manual	See Contrast table(2)
*	1-3	Card	See Contrast table(2)
*	1-4	Warranty Card	See Contrast table(2)
	1-5	Polyethylene Bag	CEG1116
	2	Cord Assy	CDE6468
	3	Spring	CBH1650
	4	Screw Assy	CEA2796
	5	Screw	CBA1002
*	6	Polyethylene Bag	CEG-127
	7	Screw	CRZ50P090FMC
	8	Screw	TRZ50P080FMC
*	9	Polyethylene Bag	CEG-158
	10	Handle	CNC5395
	11	Bush	CNV3930
	12	Polyethylene Bag	CEG1173
	13	Carton	See Contrast table(2)
	14	Contain Box	See Contrast table(2)
	15	Protector	CHP2251
	16	Protector	CHP2252
	17	Case Assy	See Contrast table(2)
	18	Screw	BPZ20P060FZK
	19	Remote Control Unit	CXB8743
*	20	Battery	CEX1065
	21	Accessory Assy	CEA2773
	22	Earth Plate	CNC9450

(2) CONTRAST TABLE


DEH-340/XN/UC, DEH-3400/XN/UC and DEH-34/XN/UC are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No.		
			DEH-340/XN/UC	DEH-3400/XN/UC	DEH-34/XN/UC
	1-1	Owner's Manual	CRD3497	CRD3498	CRD3498
	1-2	Installation Manual	CRD3501	CRD3502	CRD3502
*	1-3	Card	Not used	ARY1048	ARY1048
*	1-4	Warranty Card	CRY1070	Not used	Not used
	13	Carton	CHG4550	CHG4547	CHG4549
	14	Contain Box	CHL4550	CHL4547	CHL4549
	17	Case Assy	CXB3520	CXB3520	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-340/XN/UC	CRD3497	English, French, Spanish
	CRD3501	
DEH-3400/XN/UC	CRD3498	English, French, Spanish
DEH-34/XN/UC	CRD3502	

2.2 EXTERIOR(DEH-340/XN/UC)

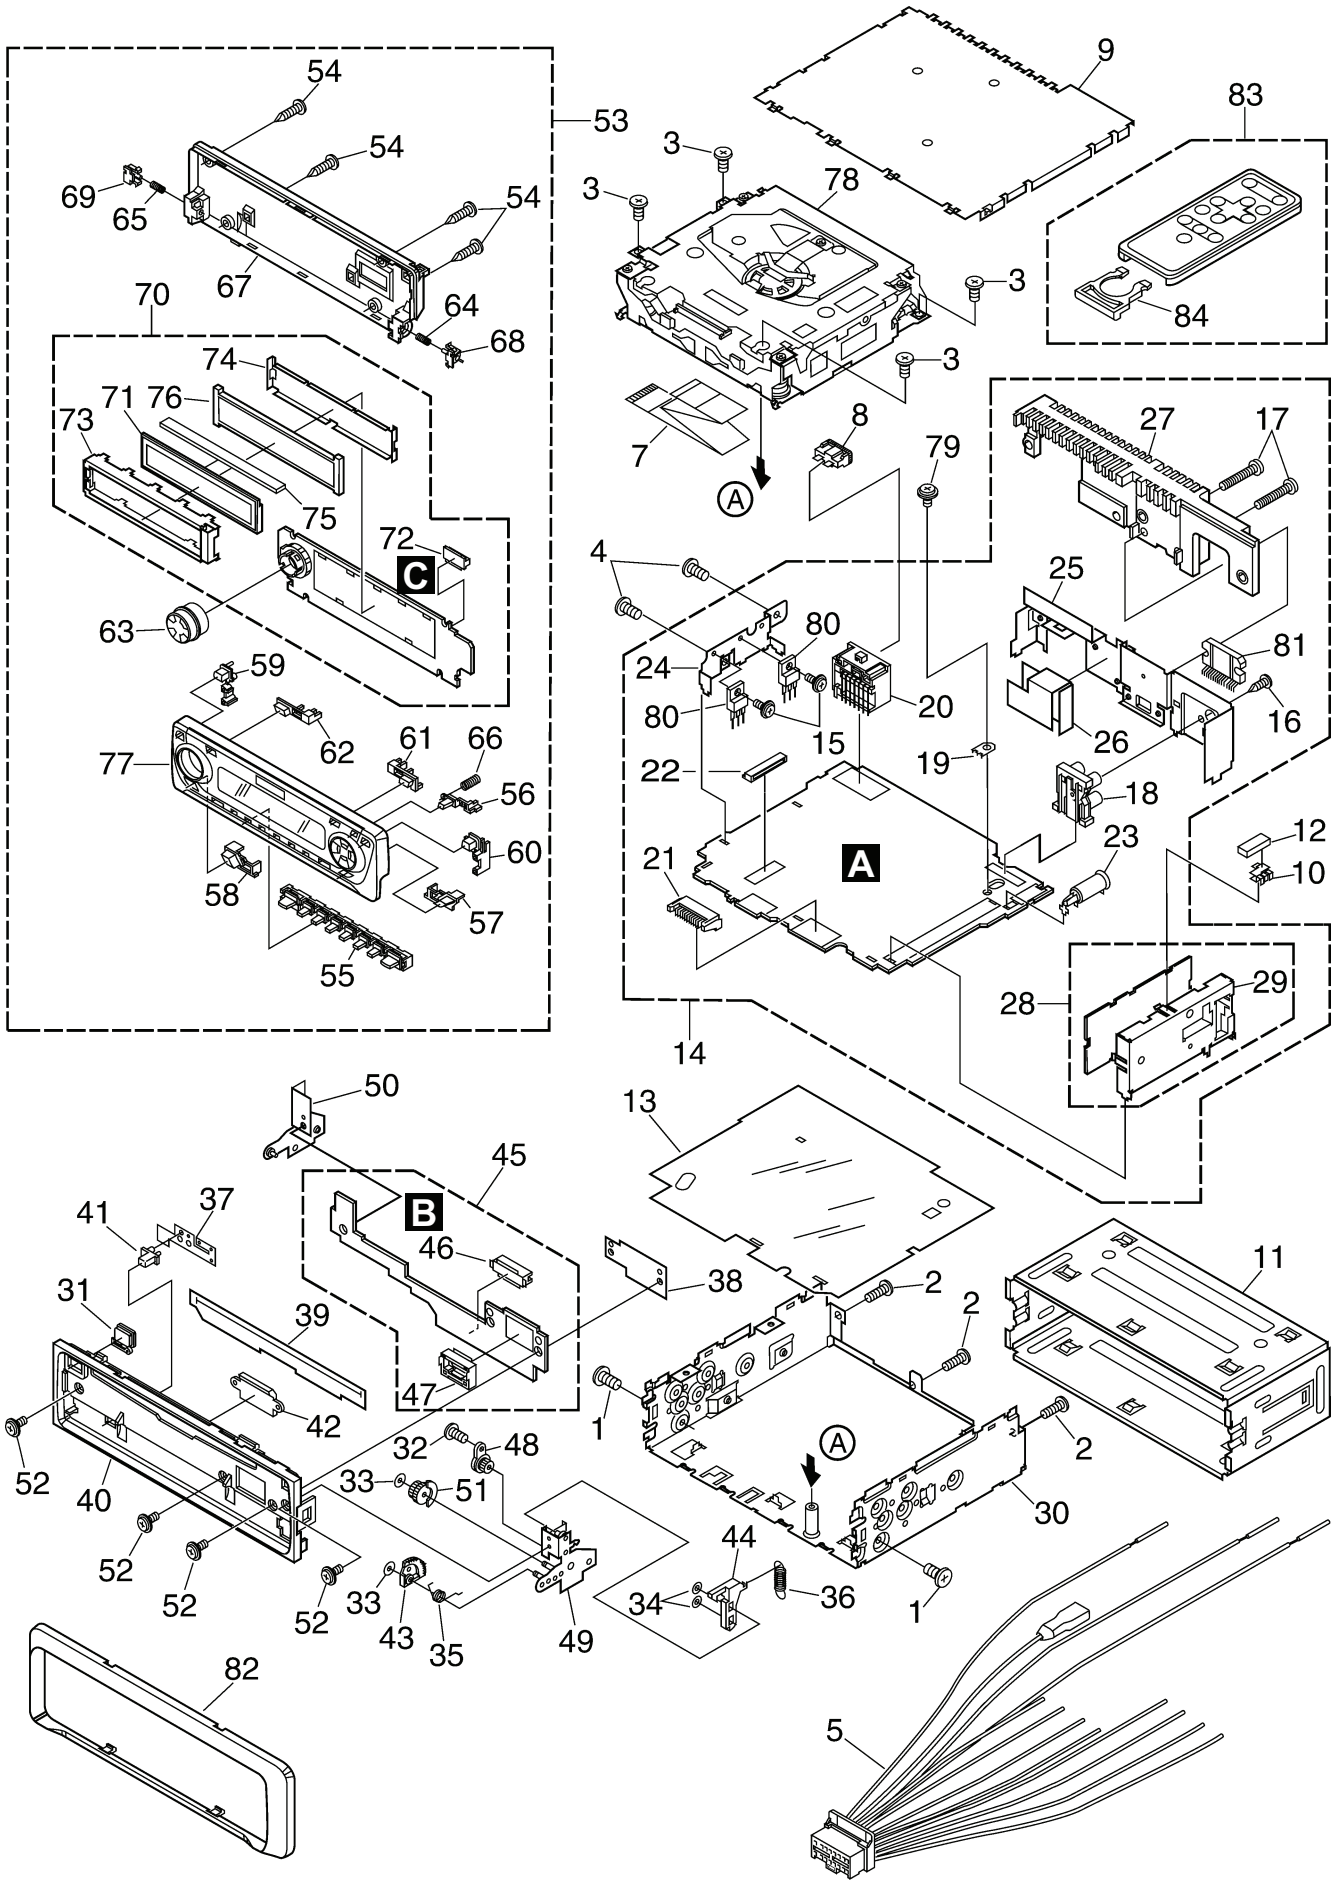


● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK
2	Screw	BMZ30P100FMC
3	Screw	BSZ26P060FMC
4	Screw	BSZ30P060FMC
5	Cord Assy	CDE6468
6	•••••	
7	Cable	CDE6610
8	Fuse(10A)	CEK1136
9	Case	CNB2686
10	Holder	CNC5704
11	Holder	CNC8659
12	Cushion	CNM4870
13	Insulator	CNM6948
14	Tuner Amp Unit	CWM7960
15	Screw	ASZ26P060FMC
16	Screw	BPZ26P080FMC
17	Screw	BSZ26P160FMC
18	Pin Jack(CN351)	CKB1051
19	Terminal(CN404)	CKF1059
20	Plug(CN901)	CKM1330
21	Plug(CN750)	CKS3537
22	Connector(CN501)	CKS3835
23	Antenna Jack(CN402)	CKX1056
24	Holder	CNC8615
25	Holder	CNC9618
26	Insulator	CNM6949
27	Heat Sink	CNR1614
28	FM/AM Tuner Unit	CWE1563
29	Holder	CNC8815
30	Chassis Unit	CXB6100
31	Button(EJECT)	CAC6839
32	Screw(M2x2)	CBA1176
33	Washer	CBF1038
34	Washer	CBF1039
35	Spring	CBH2428
36	Spring	CBH2429
37	Spring	CBL1512
38	Holder	CNC9096
39	Cover	CNM6854
40	Panel	CNS6278

Mark No.	Description	Part No.
41	Pin	CNV6486
42	Lighting Conductor	CNV6487
43	Gear	CNV6507
44	Arm	CNV6508
45	Panel Unit	CWM7375
46	Socket(CN1950)	CKS3550
47	Connector(CN1951)	CKS4206
48	Damper Unit	CXB5070
49	Holder Unit	CXB6356
50	Holder Unit	CXB6357
51	Clutch Unit	CXB6358
52	Screw	IMS20P045FZK
53	Detach Grille Assy	CXB8403
54	Screw	BPZ20P100FZK
55	Button(1-6)	CAC7225
56	Button(OPEN)	CAC7227
57	Button(LOUD)	CAC7229
58	Button(EQ)	CAC7231
59	Button(CLOCK)	CAC7233
60	Button(AUDIO)	CAC7234
61	Button(LOCAL)	CAC7235
62	Button(BSM)	CAC7236
63	Knob	CAC7528
64	Spring	CBH2430
65	Spring	CBH2431
66	Spring	CBH2630
67	Cover	CNS6740
68	Holder	CNV6505
69	Holder	CNV6506
70	Keyboard Unit	CWM7961
71	LCD	CAW1699
72	Connector(CN1901)	CKS4524
73	Holder	CNC9757
74	Sheet	CNM7647
75	Connector	CNV6440
76	Lighting Conductor	CNV7244
77	Sub Grille Assy	CXB8420
78	CD Mechanism Module(S9ANA)	CXK5501
79	Screw	ISS26P055FUC
80	Transistor(Q510,910)	2SD2396
81	IC(IC361)	PAL007A
82	Panel	CNS6935
83	Remote Control Unit	CXB8743
84	Cover	CNS7068

2.3 EXTERIOR(DEH-3400/XN/UC, DEH-34/XN/UC)

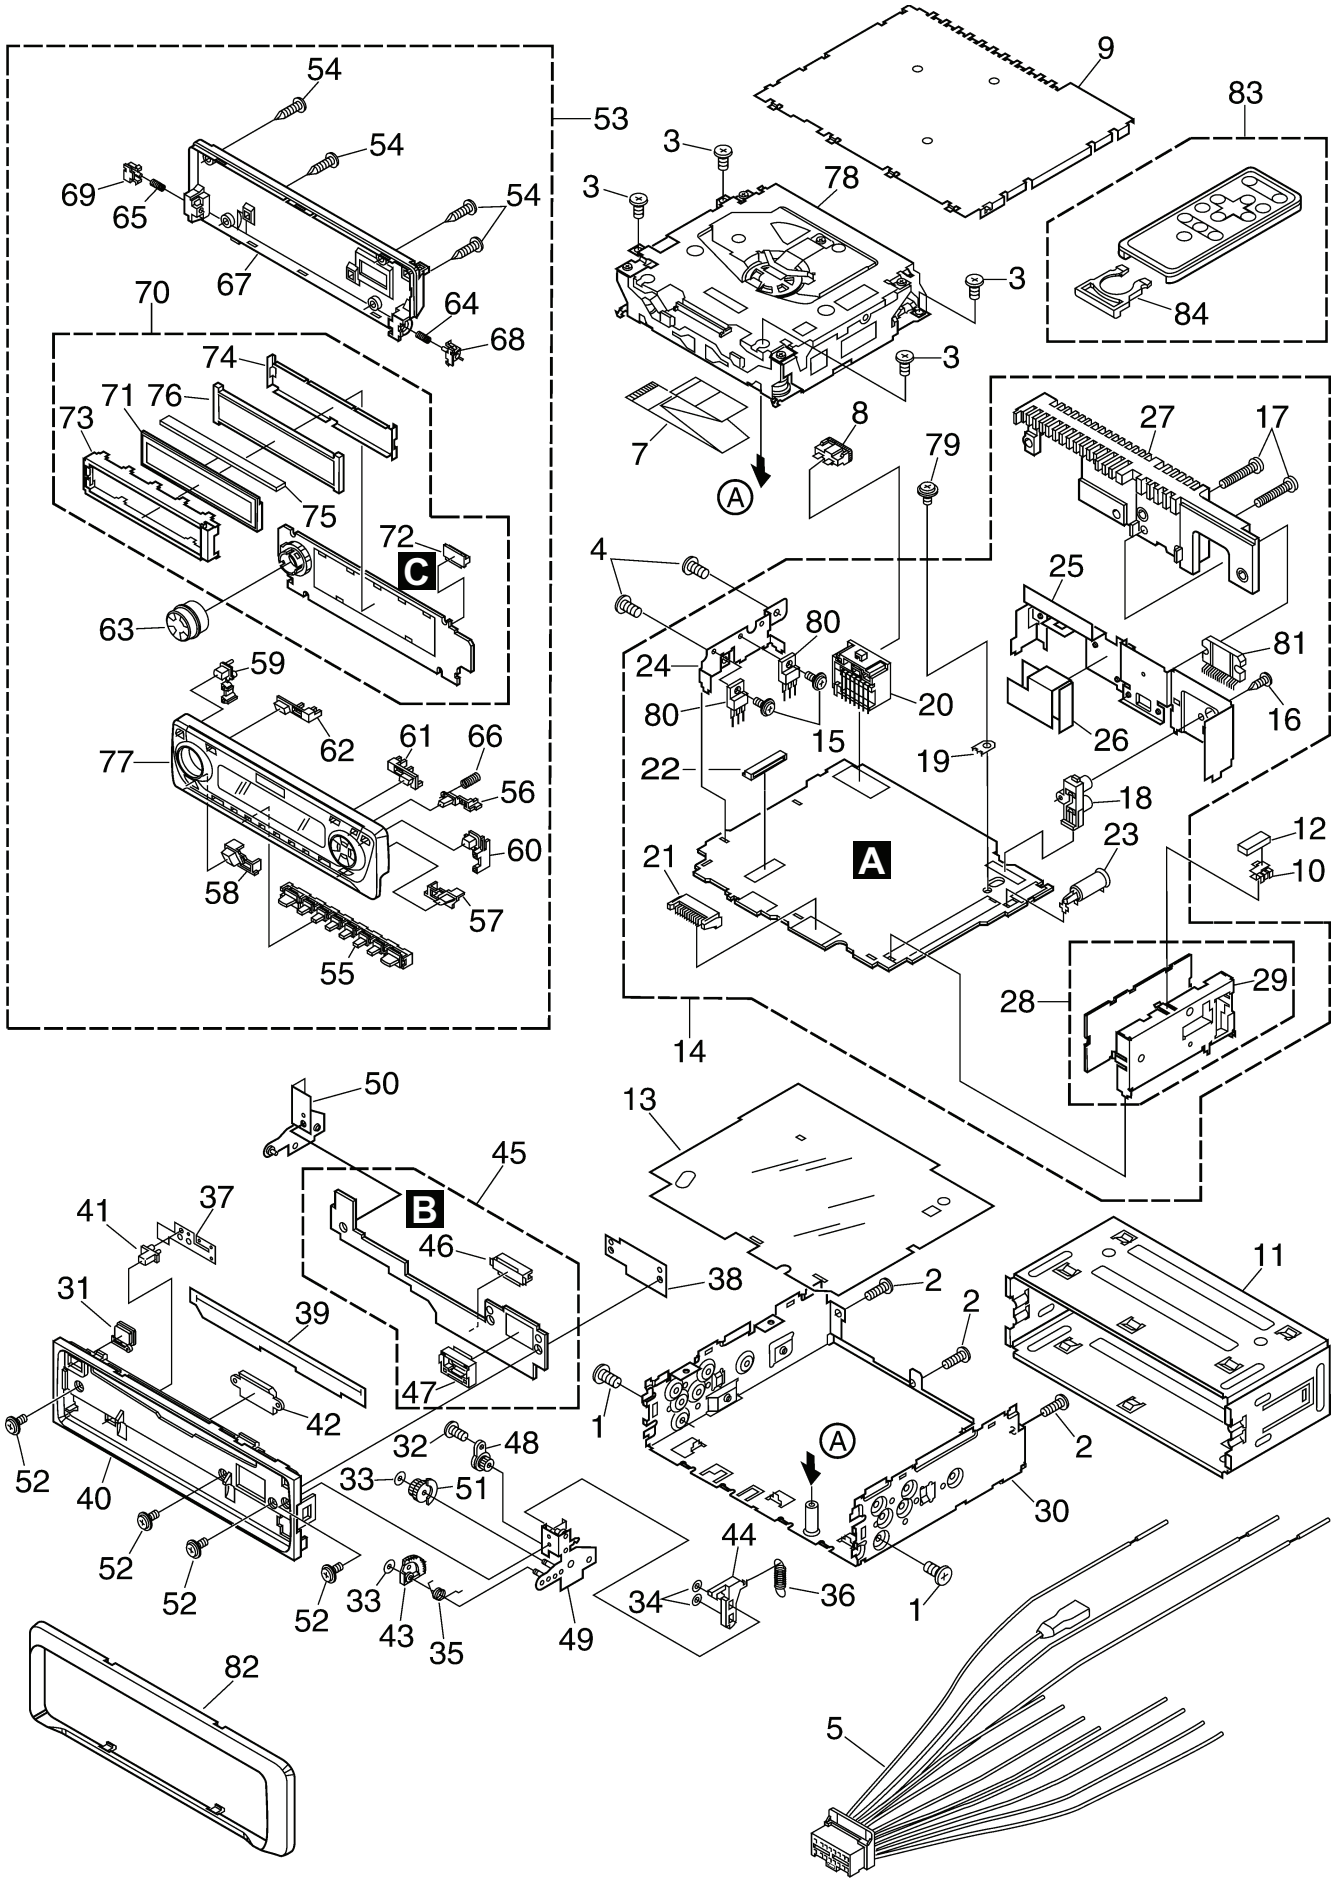

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK
2	Screw	BMZ30P100FMC
3	Screw	BSZ26P060FMC
4	Screw	BSZ30P060FMC
5	Cord Assy	CDE6468
6	•••••	
7	Cable	CDE6610
8	Fuse(10A)	CEK1136
9	Case	CNB2686
10	Holder	CNC5704
11	Holder	CNC8659
12	Cushion	CNM4870
13	Insulator	CNM6948
14	Tuner Amp Unit	CWM7974
15	Screw	ASZ26P060FMC
16	Screw	BPZ26P080FMC
17	Screw	BSZ26P160FMC
18	Pin Jack(CN351)	CKB1028
19	Terminal(CN404)	CKF1059
20	Plug(CN901)	CKM1330
21	Plug(CN750)	CKS3537
22	Connector(CN501)	CKS3835
23	Antenna Jack(CN402)	CKX1056
24	Holder	CNC8615
25	Holder	CNC9619
26	Insulator	CNM6949
27	Heat Sink	CNR1614
28	FM/AM Tuner Unit	CWE1563
29	Holder	CNC8815
30	Chassis Unit	CXB6100
31	Button(EJECT)	CAC6839
32	Screw(M2x2)	CBA1176
33	Washer	CBF1038
34	Washer	CBF1039
35	Spring	CBH2428
36	Spring	CBH2429
37	Spring	CBL1512
38	Holder	CNC9096
39	Cover	CNM6854
40	Panel	CNS6278
41	Pin	CNV6486
42	Lighting Conductor	CNV6487
43	Gear	CNV6507
44	Arm	CNV6508
45	Panel Unit	CWM7375
46	Socket(CN1950)	CKS3550
47	Connector(CN1951)	CKS4206
48	Damper Unit	CXB5070
49	Holder Unit	CXB6356
50	Holder Unit	CXB6357
51	Clutch Unit	CXB6358
52	Screw	IMS20P045FZK
53	Detach Grille Assy	See Contrast table(2)
54	Screw	BPZ20P100FZK
55	Button(1-6)	CAC7225
56	Button(OPEN)	CAC7227
57	Button(LOUD)	CAC7229
58	Button(EQ)	CAC7231
59	Button(CLOCK)	CAC7233
60	Button(AUDIO)	CAC7234
61	Button(LOCAL)	CAC7235
62	Button(BSM)	CAC7236
63	Knob	CAC7527
64	Spring	CBH2430
65	Spring	CBH2431
66	Spring	CBH2630
67	Cover	CNS6740
68	Holder	CNV6505
69	Holder	CNV6506
70	Keyboard Unit	See Contrast table(2)
71	LCD	CAW1707
72	Connector(CN1901)	CKS4524
73	Holder	CNC9757
74	Sheet	CNM7647
75	Connector	CNV6440
76	Lighting Conductor	CNV7244
77	Sub Grille Assy	See Contrast table(2)
78	CD Mechanism Module(S9ANA)	CXK5501
79	Screw	ISS26P055FUC
80	Transistor(Q510,910)	2SD2396
81	IC(IC361)	PAL007A
82	Panel	CNS7070
83	Remote Control Unit	CXB8743
84	Cover	CNS7068

(2) CONTRAST TABLE

DEH-3400/XN/UC and DEH-34/XN/EW are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-3400/XN/UC	DEH-34/XN/UC
53	Detach Grille Assy	CXB8400	CXB8402
70	Keyboard Unit	CWM7979	CWM7980
77	Sub Grille Assy	CXB8417	CXB8419

2.4 CD MECHANISM MODULE

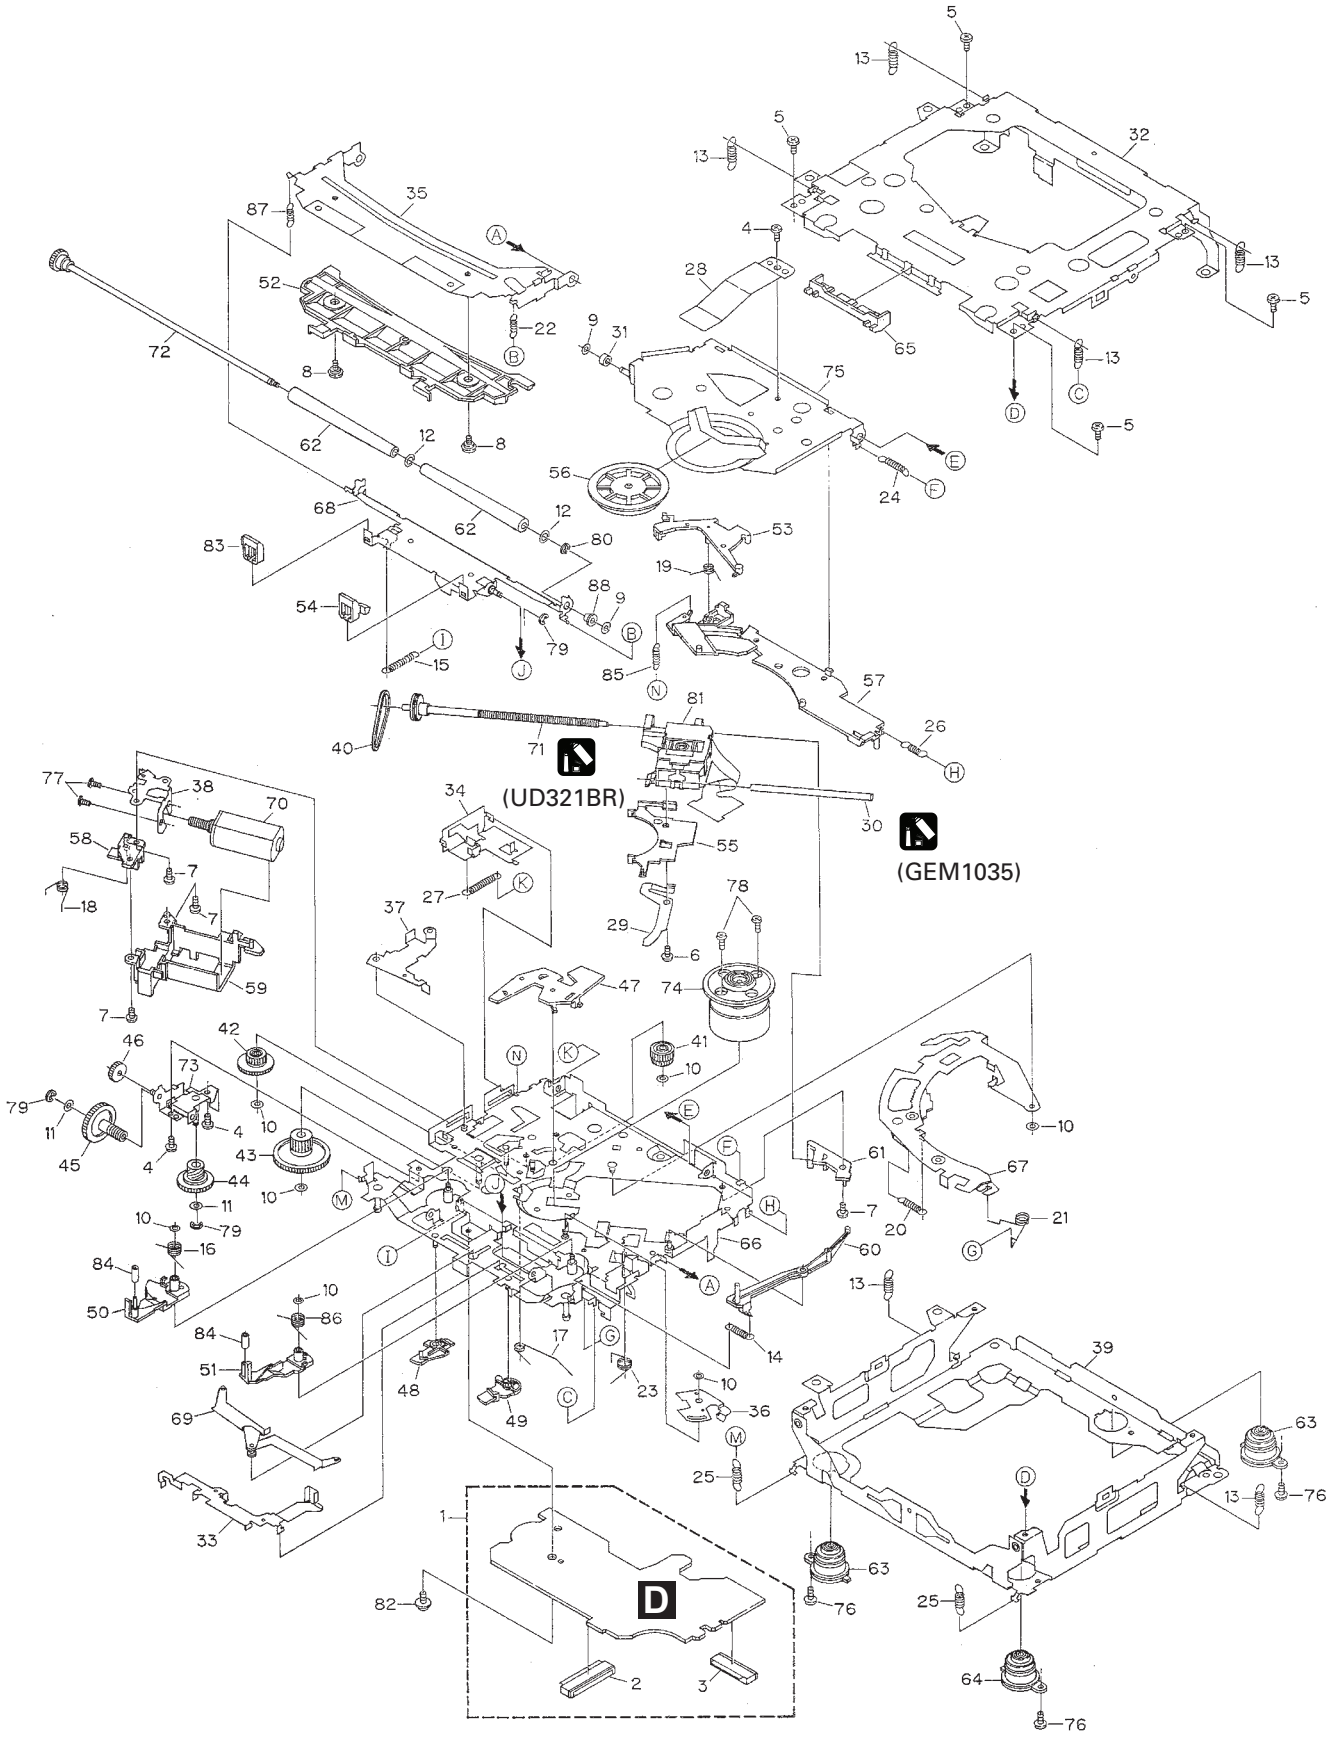

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2481
	2	Connector(CN701)	CKS1959
	3	Connector(CN101)	CKS3486
	4	Screw	BMZ20P025FMC
	5	Screw	BSZ20P040FMC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1527
	8	Screw	CBA1545
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1039
	12	Washer	CBF1060
	13	Spring	CBH2378
	14	Spring	CBH2379
	15	Spring	CBH2514
	16	Spring	CBH2533
	17	Spring	CBH2382
	18	Spring	CBH2383
	19	Spring	CBH2384
	20	Spring	CBH2527
	21	Spring	CBH2386
	22	Spring	CBH2537
	23	Spring	CBH2390
	24	Spring	CBH2391
	25	Spring	CBH2523
	26	Spring	CBH2426
	27	Spring	CBH2444
	28	Spring	CBL1561
	29	Spring	CBL1553
	30	Shaft	CLA3845
	31	Roller	CLA3910
	32	Frame	CNC9654
	33	Lever	CNC9664
	34	Lever	CNC8949
	35	Arm	CNC9661
	36	Arm	CNC9016
	37	Arm	CNC9017
	38	Bracket	CNC9123
	39	Frame	CNC9656
	40	Belt	CNT1086
	41	Gear	CNV6886
	42	Gear	CNV6316
	43	Gear	CNV6317
	44	Gear	CNV6318
	45	Gear	CNV6319
	46	Gear	CNV6320
	47	Arm	CNV6322
	48	Arm	CNV6323
	49	Arm	CNV6324
	50	Arm	CNV6888
	51	Arm	CNV6889
	52	Guide	CNV6327
	53	Arm	CNV6924
	54	Guide	CNV6921
	55	Rack	CNV6923
	56	Clamper	CNV6331
	57	Arm	CNV6332
	58	Guide	CNV6333
	59	Cover	CNV6334
	60	Arm	CNV6335
	61	Guide	CNV6336
	62	Roller	CNV6338
	63	Damper	CNV6339
	64	Damper	CNV6340
	65	Guide	CNV6925
	66	Chassis Unit	CXB7980
*	67	Arm Unit	CXB7983
	68	Arm Unit	CXB7984
	69	Arm Unit	CXB7985
	70	Motor Unit(M2)	CXB5903
	71	Screw Unit	CXB5904
	72	Gear Unit	CXB8076
	73	Bracket Unit	CXB7982
	74	Motor Unit(M1)	CXB6007
	75	Arm Unit	CXB8504
	76	Screw(M2x5)	EBA1028
	77	Screw	JFZ20P020FMC
	78	Screw	JGZ17P020FZK
	79	Washer	YE15FUC
	80	Washer	YE20FUC
	81	Pickup Unit(Service)(P9)	CXX1480
	82	Screw	IMS26P030FMC
	83	Guide	CNV6922
	84	Roller	CNV6887
	85	Spring	CBH2509
	86	Spring	CBH2512
	87	Spring	CBH2536
	88	Collar	CNV6906

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7960(DEH-340/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	301	IC	PML003AM
IC	361	IC	PAL007A
IC	603	IC	S-80834ANY
IC	610	IC	PE5262A
Q	341	Transistor	IMH3A
Q	351	Transistor	IMH3A
Q	359	Transistor	DTA124EK
Q	361	Transistor	DTC124EK
Q	410	Transistor	2SC2412K
Q	510	Transistor	2SD2396
Q	511	Transistor	RN46A1
Q	750	Transistor	2SA1037K
Q	751	Transistor	2SA1036K
Q	752	Transistor	DTC114EK
Q	753	Transistor	DTC114EK
Q	909	Transistor	RN46A1
Q	910	Transistor	2SD2396
Q	911	Transistor	2SB1243
Q	912	Transistor	DTC114EK
Q	913	Transistor	2SD1859
Q	920	Transistor	IMX1
Q	921	Transistor	DTA124EK
D	361	Diode	S5688G
D	362	Diode	S5688G
D	510	Diode	HZS9L(B1)
D	750	Diode	1SS270
D	751	Diode	1SS270
D	752	Diode	1SS270
D	753	Diode	1SS270
D	754	Diode	1SS270
D	755	Diode	1SS270
D	756	Diode	1SS270
D	757	Diode Network	DA204U
D	758	Diode	1SS270
D	759	Diode	MA152WA
D	767	Diode	1SS270
D	768	Diode	1SS270
D	910	Diode	HZS9L(B3)
D	911	Diode	HZS6L(B2)
D	912	Diode	S5688G
D	913	Diode	HZS7L(C2)
D	914	Diode	HZS7L(A1)
D	919	Diode	S5688G
D	920	Diode	S5688G
D	921	Diode	DAN202U
L	310	Inductor	LAU1R0K
L	361	Choke Coil 600µH	CTH1221
L	410	Ferri-Inductor	LAU4R7K
L	411	Ferri-Inductor	LAU2R2K
L	412	Ferri-Inductor	LAU2R2K

=====Circuit Symbol and No.		===Part Name	Part No.
L	617	Ferri-Inductor	LAU101K
L	618	Ferri-Inductor	LAU2R2K
L	750	Ferri-Inductor	LAU2R2K
X	610	Crystal Resonator 4.194304MHz	CSS1023
S	750	Switch(DSENS)	CSN1039
		FM/AM Tuner Unit	CWE1563
AR	410	Surge Protector	DSP-201M-S00B

RESISTORS

R	310		RS1/16S101J
R	311		RS1/16S101J
R	314		RS1/16S101J
R	315		RS1/16S101J
R	341		RS1/16S223J
R	342		RS1/16S821J
R	343		RS1/16S821J
R	344		RS1/16S223J
R	345		RS1/16S0R0J
R	351		RD1/4PU821J
R	352		RS1/16S821J
R	353		RS1/16S223J
R	354		RS1/16S223J
R	355		RS1/16S0R0J
R	361		RS1/16S103J
R	362		RS1/16S103J
R	363		RS1/16S331J
R	364		RD1/4PU153J
R	410		RS1/16S222J
R	411		RS1/16S222J
R	413		RS1/16S473J
R	414		RS1/16S473J
R	415		RS1/16S393J
R	417		RS1/16S681J
R	418		RS1/16S681J
R	419		RS1/16S681J
R	420		RS1/16S103J
R	421		RS1/16S681J
R	422		RD1/4PU473J
R	423		RD1/4PU472J
R	424		RD1/4PU473J
R	429		RS1/16S681J
R	430		RS1/16S681J
R	431		RS1/16S473J
R	432		RS1/16S473J
R	437		RS1/16S0R0J
R	438		RS1/16S0R0J
R	445		RS1/16S272J
R	446		RS1/16S272J
R	447		RS1/16S162J
R	448		RS1/16S162J
R	490		RS1/16S0R0J
R	510		RD1/4PU221J
R	511		RD1/4PU221J
R	512		RD1/4PU472J

Circuit Symbol and No.	Part Name	Part No.
R 513		RD1/4PU222J
R 516		RS1/16S104J
R 517		RD1/4PU222J
R 519		RD1/4PU102J
R 520		RS1/16S0R0J
R 521		RS1/16S0R0J
R 522		RS1/16S0R0J
R 523		RS1/16S0R0J
R 525		RS1/16S0R0J
R 527		RS1/16S0R0J
R 531		RD1/4PU222J
R 532		RD1/4PU222J
R 536		RD1/4PU102J
R 537		RS1/16S104J
R 538		RS1/16S0R0J
R 612		RS1/16S0R0J
R 613		RD1/4PU102J
R 614		RS1/16S821J
R 615		RS1/16S473J
R 616		RS1/16S682J
R 617		RS1/16S473J
R 618		RS1/16S223J
R 622		RD1/4PU393J
R 623		RD1/4PU104J
R 625		RS1/16S0R0J
R 712		RD1/4PU104J
R 750		RD1/4PU104J
R 751		RS1/16S103J
R 752		RS1/16S153J
R 753		RS1/16S153J
R 754		RS1/16S222J
R 756		RS1/16S473J
R 757		RS1/16S104J
R 758		RS1/16S102J
R 760		RD1/4PU222J
R 761		RD1/4PU472J
R 762		RD1/4PU222J
R 763		RD1/4PU222J
R 765		RS1/16S1R0J
R 766		RD1/4PU102J
R 767		RS1/16S103J
R 768		RD1/4PU102J
R 769		RS1/16S102J
R 771		RS1/16S104J
R 772		RD1/4PU222J
R 773		RD1/4PU222J
R 774		RS1/16S0R0J
R 775		RS1/16S1R0J
R 777		RS1/16S152J
R 778		RS1/16S152J
R 779		RD1/4PU103J
R 781		RS1/16S104J
R 783		RD1/4PU391J
R 784		RD1/4PU222J
R 786		RS1/16S102J
R 787		RD1/4PU222J
R 791		RS1/16S0R0J
R 910		RS1/16S1R0J
R 911		RD1/4PU220J
R 912		RD1/4PU132J
R 913		RD1/4PU122J
R 914		RS1/16S103J
R 915		RS1/16S222J
R 916		RD1/4PU153J
R 917		RS1/16S104J
R 918		RS1/16S104J
R 919		RS1/16S104J
R 920		RS1/16S473J
R 921		RS1/16S103J
R 922		RS1/16S473J
R 923		RD1/4PU102J
R 924		RS1/16S472J
R 927		RS1/16S102J
R 928		RS1/16S473J
R 937		RS1/16S152J
R 939		RS1/16S0R0J

CAPACITORS

Circuit Symbol and No.	Part Name	Part No.
C 307		CEJQ470M10
C 308		CEJQ100M16
C 309		CKSRYB104K25
C 310		CKSRYB105K6R3
C 311		CKSRYB104K25
C 312		CKSRYB104K25
C 313		CKSRYB105K6R3
C 314		CEJQ4R7M35
C 315		CEJQ4R7M35
C 316		CKSRYB153K25
C 321		CKSRYB153K25
C 324		CCSRCH100D50
C 326		CCSRCH100D50
C 327		CCSRCH100D50
C 329		CCSRCH100D50
C 342		CEJQ2R2M50
C 343		CEJQ2R2M50
C 351		CEJQ2R2M50
C 352		CEJQ2R2M50
C 361	3300µF/16V	CCH1368
C 362		CKSRYB104K25
C 363		CKSQYB474K16
C 364		CKSQYB474K16
C 365		CKSQYB474K16
C 366		CKSQYB474K16
C 367		CKSQYB474K16
C 368		CKSQYB474K16
C 369		CKSQYB474K16
C 370		CKSQYB474K16
C 371		CEJQ330M10
C 373		CKSQYB225K10
C 374		CKSQYB225K10
C 375		CEJQ100M16
C 410		CKSQYB103K25
C 412		CKSRYB223K50
C 413		CKSRYB102K50
C 414		CEJQ220M10
C 415		CKSRYB223K50
C 417		CKSRYB472K50
C 418		CEJQ101M6R3
C 419		CKSRYB473K50
C 424		CKSRYB183K25
C 425		CKSRYB183K25
C 510		CKSRYB473K50
C 511		CKSRYB102K50
C 512		CEJQ101M10
C 515		CKSRYB102K50
C 516		CKSRYB102K50
C 614		CKSRYB473K50
C 615		CEJQ2R2M50

=====Circuit Symbol and No.		===Part Name	Part No.
C	616		CKSRYB104K25
C	617		CCSRCH101J50
C	618		CEJQ4R7M35
C	619		CKSRYB473K50
C	620		CCSRCH150J50
C	621		CCSRCH150J50
C	750		CKSRYB103K50
C	751		CKSRYB104K25
C	910	330µF/16V	CCH1326
C	911		CKSRYB103K50
C	912		CEJQ101M16
C	913		CEJQ101M10
C	914		CKSRYB473K50
C	915		CKSRYB103K50
C	916	470µF/16V	CCH1331

A

Unit Number : CWM7974(DEH-3400/XN/UC, DEH-34/XN/UC)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	301	IC	PML003AM
IC	361	IC	PAL007A
IC	603	IC	S-80834ANY
IC	610	IC	PE5262A
Q	351	Transistor	IMH3A
Q	359	Transistor	DTA124EK
Q	361	Transistor	DTC124EK
Q	410	Transistor	2SC2412K
Q	510	Transistor	2SD2396
Q	511	Transistor	RN46A1
Q	750	Transistor	2SA1037K
Q	751	Transistor	2SA1036K
Q	752	Transistor	DTC114EK
Q	753	Transistor	DTC114EK
Q	909	Transistor	RN46A1
Q	910	Transistor	2SD2396
Q	911	Transistor	2SB1243
Q	912	Transistor	DTC114EK
Q	913	Transistor	2SD1859
Q	920	Transistor	IMX1
Q	921	Transistor	DTA124EK
D	361	Diode	S5688G
D	362	Diode	S5688G
D	510	Diode	HZS9L(B1)
D	750	Diode	1SS270
D	751	Diode	1SS270
D	752	Diode	1SS270
D	753	Diode	1SS270
D	754	Diode	1SS270
D	755	Diode	1SS270
D	756	Diode	1SS270
D	757	Diode Network	DA204U
D	758	Diode	1SS270
D	759	Diode	MA152WA
D	767	Diode	1SS270
D	768	Diode	1SS270
D	910	Diode	HZS9L(B3)
D	911	Diode	HZS6L(B2)
D	912	Diode	S5688G
D	913	Diode	HZS7L(C2)
D	914	Diode	HZS7L(A1)
D	919	Diode	S5688G
D	920	Diode	S5688G
D	921	Diode	DAN202U
L	310	Inductor	LAU1R0K

=====Circuit Symbol and No.		===Part Name	Part No.
L	361	Choke Coil 600µH	CTH1221
L	410	Ferri-Inductor	LAU4R7K
L	411	Ferri-Inductor	LAU2R2K
L	412	Ferri-Inductor	LAU2R2K
L	617	Ferri-Inductor	LAU101K
L	618	Ferri-Inductor	LAU2R2K
L	750	Ferri-Inductor	LAU2R2K
X	610	Crystal Resonator 4.194304MHz	CSS1023
S	750	Switch(DSENS)	CSN1039
		FM/AM Tuner Unit	CWE1563
AR	410	Surge Protector	DSP-201M-S00B

RESISTORS

R	310		RS1/16S101J
R	311		RS1/16S101J
R	314		RS1/16S101J
R	315		RS1/16S101J
R	351		RD1/4PU821J
R	352		RS1/16S821J
R	353		RS1/16S223J
R	354		RS1/16S223J
R	355		RS1/16S0R0J
R	361		RS1/16S103J
R	362		RS1/16S103J
R	363		RS1/16S331J
R	364		RD1/4PU153J
R	410		RS1/16S222J
R	411		RS1/16S222J
R	413		RS1/16S473J
R	414		RS1/16S473J
R	415		RS1/16S393J
R	417		RS1/16S681J
R	418		RS1/16S681J
R	419		RS1/16S681J
R	420		RS1/16S103J
R	421		RS1/16S681J
R	422		RD1/4PU473J
R	423		RD1/4PU472J
R	424		RD1/4PU473J
R	429		RS1/16S681J
R	430		RS1/16S681J
R	431		RS1/16S473J
R	432		RS1/16S473J
R	437		RS1/16S0R0J
R	438		RS1/16S0R0J
R	445		RS1/16S272J
R	446		RS1/16S272J
R	447		RS1/16S162J
R	448		RS1/16S162J
R	490		RS1/16S0R0J
R	510		RD1/4PU221J
R	511		RD1/4PU221J
R	512		RD1/4PU472J
R	513		RD1/4PU222J
R	516		RS1/16S104J
R	517		RD1/4PU222J
R	519		RD1/4PU102J
R	520		RS1/16S0R0J
R	521		RS1/16S0R0J
R	522		RS1/16S0R0J
R	523		RS1/16S0R0J
R	525		RS1/16S0R0J
R	527		RS1/16S0R0J

=====Circuit Symbol and No.		===Part Name	Part No.
R	531		RD1/4PU222J
R	532		RD1/4PU222J
R	536		RD1/4PU102J
R	537		RS1/16S104J
R	538		RS1/16S0R0J
R	612		RS1/16S0R0J
R	613		RD1/4PU102J
R	614		RS1/16S821J
R	615		RS1/16S473J
R	616		RS1/16S682J
R	617		RS1/16S473J
R	618		RS1/16S223J
R	622		RD1/4PU393J
R	623		RD1/4PU104J
R	625		RS1/16S0R0J
R	712		RD1/4PU104J
R	750		RD1/4PU104J
R	751		RS1/16S103J
R	752		RS1/16S153J
R	753		RS1/16S153J
R	754		RS1/16S222J
R	756		RS1/16S473J
R	757		RS1/16S104J
R	758		RS1/16S102J
R	760		RD1/4PU222J
R	761		RD1/4PU472J
R	762		RD1/4PU222J
R	763		RD1/4PU222J
R	765		RS1/16S1R0J
R	766		RD1/4PU102J
R	767		RS1/16S103J
R	768		RD1/4PU102J
R	769		RS1/16S102J
R	771		RS1/16S104J
R	772		RD1/4PU222J
R	773		RD1/4PU222J
R	774		RS1/16S0R0J
R	775		RS1/16S1R0J
R	777		RS1/16S152J
R	778		RS1/16S152J
R	779		RD1/4PU103J
R	781		RS1/16S104J
R	783		RD1/4PU391J
R	784		RD1/4PU222J
R	786		RS1/16S102J
R	787		RD1/4PU222J
R	791		RS1/16S0R0J
R	910		RS1/16S1R0J
R	911		RD1/4PU220J
R	912		RD1/4PU132J
R	913		RD1/4PU122J
R	914		RS1/16S103J
R	915		RS1/16S222J
R	916		RD1/4PU153J
R	917		RS1/16S104J
R	918		RS1/16S104J
R	919		RS1/16S104J
R	920		RS1/16S473J
R	921		RS1/16S103J
R	922		RS1/16S473J
R	923		RD1/4PU102J
R	924		RS1/16S472J
R	927		RS1/16S102J
R	928		RS1/16S473J
R	937		RS1/16S152J
R	939		RS1/16S0R0J

CAPACITORS

=====Circuit Symbol and No.		===Part Name	Part No.
C	307		CEJQ470M10
C	308		CEJQ100M16
C	309		CKSRYB104K25
C	310		CKSRYB105K6R3
C	311		CKSRYB104K25
C	312		CKSRYB104K25
C	313		CKSRYB105K6R3
C	314		CEJQ4R7M35
C	315		CEJQ4R7M35
C	316		CKSRYB153K25
C	321		CKSRYB153K25
C	324		CCSRCH100D50
C	326		CCSRCH100D50
C	327		CCSRCH100D50
C	329		CCSRCH100D50
C	351		CEJQ2R2M50
C	352		CEJQ2R2M50
C	361	3300µF/16V	CCH1368
C	362		CKSRYB104K25
C	363		CKSQYB474K16
C	364		CKSQYB474K16
C	365		CKSQYB474K16
C	366		CKSQYB474K16
C	367		CKSQYB474K16
C	368		CKSQYB474K16
C	369		CKSQYB474K16
C	370		CKSQYB474K16
C	371		CEJQ330M10
C	373		CKSQYB225K10
C	374		CKSQYB225K10
C	375		CEJQ100M16
C	410		CKSQYB103K25
C	412		CKSRYB223K50
C	413		CKSRYB102K50
C	414		CEJQ220M10
C	415		CKSRYB223K50
C	417		CKSRYB472K50
C	418		CEJQ101M6R3
C	419		CKSRYB473K50
C	424		CKSRYB183K25
C	425		CKSRYB183K25
C	510		CKSRYB473K50
C	511		CKSRYB102K50
C	512		CEJQ101M10
C	515		CKSRYB102K50
C	516		CKSRYB102K50
C	614		CKSRYB473K50
C	615		CEJQ2R2M50
C	616		CKSRYB104K25
C	617		CCSRCH101J50
C	618		CEJQ4R7M35
C	619		CKSRYB473K50
C	620		CCSRCH150J50
C	621		CCSRCH150J50
C	750		CKSRYB103K50
C	751		CKSRYB104K25
C	910	330µF/16V	CCH1326
C	911		CKSRYB103K50
C	912		CEJQ101M16
C	913		CEJQ101M10

=====Circuit Symbol and No.		===Part Name	Part No.
C	914		CKSRYB473K50
C	915		CKSRYB103K50
C	916	470µF/16V	CCH1331

C Unit Number : CWM7961(DEH-340/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1900	IC	PD6340A
IC	1902	IC	RS-140
D	1901	Diode	MA152WK
D	1902	Diode	MA152WA
D	1917	LED	NSSW440-9159
D	1918	LED	NSSW440-9159
D	1919	LED	SML-310PT
D	1920	LED	SML-310PT
X	1900	Ceramic Resonator 4.97MHz	CSS1573
S	1900	Switch	CSG1107
S	1901	Switch	CSG1107
S	1902	Switch	CSG1107
S	1903	Switch	CSG1107
S	1904	Switch	CSG1107
S	1905	Switch	CSG1107
S	1906	Switch	CSG1107
S	1907	Push Switch	CSG1111
S	1908	Switch	CSG1107
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Push Switch	CSG1111
S	1922	Switch(VOLUME)	CSD1077
		LCD	CAW1699

RESISTORS

R	1901		RS1/16S222J
R	1902		RS1/16S222J
R	1903		RS1/16S470J
R	1904		RS1/16S470J
R	1905		RS1/16S121J
R	1910		RS1/16S151J
R	1911		RS1/16S181J
R	1912		RS1/16S151J
R	1913		RS1/16S181J
R	1914		RS1/16S181J
R	1915		RS1/16S181J
R	1917		RS1/16S121J
R	1919		RS1/16S121J
R	1920		RS1/16S121J
R	1927		RS1/16S472J
R	1935		RS1/16S104J
R	1936		RS1/16S151J
R	1939		RS1/16S151J
R	1941		RS1/16S121J
R	1942		RS1/16S151J
R	1943		RS1/16S151J
R	1950		RS1/16S104J
R	1954		RS1/16S151J
R	1955		RS1/16S181J
R	1956		RS1/16S181J
R	1957		RS1/16S181J
R	1958		RS1/16S151J
R	1959		RS1/16S181J
R	1960		RS1/16S151J
R	1961		RS1/16S181J

=====Circuit Symbol and No.		===Part Name	Part No.
R	1962		RS1/16S181J
R	1963		RS1/16S121J
R	1964		RS1/16S121J
R	1965		RS1/16S2R2J
R	1970		RS1/16S181J
R	1971		RS1/16S151J
R	1972		RS1/16S181J

CAPACITORS

C	1901		CSZS100M6R3
C	1902		CKSRYB104K25
C	1923		CKSQYF104Z50
C	1930		CKSQYF104Z50

C Unit Number : CWM7979(DEH-3400/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1900	IC	PD6340A
IC	1902	IC	RS-140
D	1901	Diode	MA152WK
D	1902	Diode	MA152WA
D	1917	LED	NSSW440-9159
D	1918	LED	NSSW440-9159
D	1919	LED	SML-310PT
D	1920	LED	SML-310PT
X	1900	Ceramic Resonator 4.97MHz	CSS1573
S	1900	Switch	CSG1107
S	1901	Switch	CSG1107
S	1902	Switch	CSG1107
S	1903	Switch	CSG1107
S	1904	Switch	CSG1107
S	1905	Switch	CSG1107
S	1906	Switch	CSG1107
S	1907	Push Switch	CSG1111
S	1908	Switch	CSG1107
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107
S	1913	Switch	CSG1107
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1107
S	1917	Push Switch	CSG1111
S	1922	Switch(VOLUME)	CSD1077
		LCD	CAW1707

RESISTORS

R	1901		RS1/16S222J
R	1902		RS1/16S222J
R	1903		RS1/16S470J
R	1904		RS1/16S470J
R	1905		RS1/16S121J
R	1910		RS1/16S151J
R	1911		RS1/16S181J
R	1912		RS1/16S151J
R	1913		RS1/16S181J
R	1914		RS1/16S181J
R	1915		RS1/16S181J
R	1917		RS1/16S121J
R	1919		RS1/16S121J
R	1920		RS1/16S121J
R	1927		RS1/16S472J
R	1935		RS1/16S104J
R	1936		RS1/16S151J
R	1939		RS1/16S151J
R	1941		RS1/16S121J
R	1942		RS1/16S151J

=====Circuit Symbol and No.	===Part Name	Part No.
R 1943		RS1/16S151J
R 1950		RS1/16S104J
R 1954		RS1/16S151J
R 1955		RS1/16S181J
R 1956		RS1/16S181J
R 1957		RS1/16S181J
R 1958		RS1/16S151J
R 1959		RS1/16S181J
R 1960		RS1/16S151J
R 1961		RS1/16S181J
R 1962		RS1/16S181J
R 1963		RS1/16S121J
R 1964		RS1/16S121J
R 1965		RS1/16S2R2J
R 1970		RS1/16S181J
R 1971		RS1/16S151J
R 1972		RS1/16S181J

CAPACITORS

C 1901		CSZS100M6R3
C 1902		CKSRYB104K25
C 1923		CKSQYF104Z50
C 1930		CKSQYF104Z50

C Unit Number : CWM7980(DEH-34/XN/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1900	IC		PD6340A
IC 1902	IC		RS-140
D 1901	Diode		MA152WK
D 1902	Diode		MA152WA
D 1917	LED		NSSW440-9159
D 1918	LED		NSSW440-9159
D 1919	LED		SML-310DT
D 1920	LED		SML-310DT
X 1900	Ceramic Resonator 4.97MHz		CSS1573
S 1900	Push Switch		CSG1133
S 1901	Push Switch		CSG1117
S 1902	Push Switch		CSG1117
S 1903	Push Switch		CSG1117
S 1904	Push Switch		CSG1117
S 1905	Push Switch		CSG1117
S 1906	Push Switch		CSG1117
S 1907	Push Switch		CSG1111
S 1908	Push Switch		CSG1117
S 1909	Push Switch		CSG1117
S 1910	Push Switch		CSG1117
S 1911	Push Switch		CSG1117
S 1912	Push Switch		CSG1117
S 1913	Push Switch		CSG1117
S 1914	Push Switch		CSG1117
S 1915	Push Switch		CSG1117
S 1916	Push Switch		CSG1117
S 1917	Push Switch		CSG1111
S 1922	Switch(VOLUME)		CSD1077
	LCD		CAW1707

RESISTORS

R 1901		RS1/16S222J
R 1902		RS1/16S222J
R 1903		RS1/16S470J
R 1904		RS1/16S470J
R 1905		RS1/16S121J
R 1910		RS1/16S151J
R 1911		RS1/16S181J
R 1912		RS1/16S151J
R 1913		RS1/16S181J
R 1914		RS1/16S181J

=====Circuit Symbol and No.	===Part Name	Part No.
R 1915		RS1/16S181J
R 1917		RS1/16S121J
R 1919		RS1/16S121J
R 1920		RS1/16S121J
R 1927		RS1/16S472J
R 1935		RS1/16S104J
R 1936		RS1/16S151J
R 1939		RS1/16S151J
R 1941		RS1/16S121J
R 1942		RS1/16S151J
R 1943		RS1/16S151J
R 1950		RS1/16S104J
R 1954		RS1/16S151J
R 1955		RS1/16S181J
R 1956		RS1/16S181J
R 1957		RS1/16S181J
R 1958		RS1/16S151J
R 1959		RS1/16S181J
R 1960		RS1/16S151J
R 1961		RS1/16S181J
R 1962		RS1/16S181J
R 1963		RS1/16S121J
R 1964		RS1/16S121J
R 1965		RS1/16S2R2J
R 1970		RS1/16S181J
R 1971		RS1/16S151J
R 1972		RS1/16S181J

CAPACITORS

C 1901		CSZS100M6R3
C 1902		CKSRYB104K25
C 1923		CKSQYF104Z50
C 1930		CKSQYF104Z50

B Unit Number : CWM7375
Unit Name : Panel Unit

D 1950	LED		CL220PGC
S 1950	Push Switch(EJECT)		CSG1112
R 1952			RS1/16S101J
R 1953			RS1/16S101J

D Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC 101	IC		TA2153FN
IC 201	IC		TC9495F2
IC 401	IC		BA5996FM
IC 701	IC		BA05SFP
Q 101	Transistor		2SD1664
Q 102	Transistor		UMD2N
L 201	Inductor		CTF1546
L 202	Inductor		CTF1546
X 301	Ceramic Resonator 16.934MHz		CSS1525
S 901	Spring Switch(HOME)		CSN1051
S 902	Spring Switch(CLAMP)		CSN1052
S 903	Spring Switch(DSCSNS)		CSN1051
S 904	Spring Switch(12EJ)		CSN1052
S 905	Spring Switch(8EJ)		CSN1051

RESISTORS

R 101		RS1/16S222J
R 102		RS1/8S120J
R 103		RS1/8S100J
R 201		RS1/16S513J
R 202		RS1/16S513J

=====Circuit Symbol and No.		===Part Name	Part No.
R	203		RS1/16S823J
R	204		RS1/16S823J
R	206		RS1/16S823J
R	208		RS1/16S124J
R	209		RS1/16S183J
R	210		RS1/16S153J
R	211		RS1/16S103J
R	212		RS1/16S103J
R	213		RS1/16S124J
R	215		RS1/16S0R0J
R	216		RS1/16S471J
R	301		RS1/16S333J
R	302		RS1/16S332J
R	303		RS1/16S332J
R	304		RS1/16S514J
R	306		RS1/16S102J
R	307		RS1/16S102J
R	312		RS1/16S103J
R	313		RS1/16S473J
R	315		RS1/16S334J
R	321		RS1/16S331J
R	322		RS1/16S0R0J
R	323		RS1/16S332J
R	401		RS1/16S684J
R	402		RS1/16S103J
R	403		RS1/16S103J
R	404		RS1/16S183J
R	405		RS1/16S123J
R	407		RS1/16S622J
R	408		RS1/16S622J
R	409		RS1/16S113J
R	410		RS1/16S752J
R	701		RS1/16S102J
R	702		RS1/16S221J
R	703		RS1/16S221J
R	704		RS1/16S221J
R	705		RS1/16S221J
R	706		RS1/16S221J
R	707		RS1/16S221J
R	708		RS1/16S102J
R	709		RS1/16S102J
R	710		RS1/16S102J
R	901		RS1/16S104J
R	902		RS1/16S473J
R	903		RS1/16S273J

CAPACITORS

C	101		CEV470M6R3
C	102		CKSRYB102K50
C	103		CKSRYB104K16
C	104		CKSRYB224K16
C	105		CEV470M6R3
C	106		CKSRYB104K16
C	107		CKSRYB105K6R3
C	201		CKSRYB104K16
C	202		CCSRCH560J50
C	204		CKSRYB224K16
C	205		CKSRYB224K16
C	206		CKSRYB273K25
C	207		CKSRYB273K25
C	208		CKSRYB104K16
C	209		CKSRYB104K16
C	210		CCSRCK2R0C50
C	211		CCSRCH220J50
C	301		CKSRYB153K25
C	302		CKSRYB104K16
C	303		CKSRYB103K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	304		CKSRYB103K50
C	305		CKSRYB104K16
C	306		CKSRYB104K16
C	307		CKSRYB333K16
C	308		CKSRYB104K16
C	309		CKSRYB473K16
C	310		CKSRYB473K16
C	311		CKSRYB104K16
C	312		CKSRYB104K16
C	315		CEV220M6R3
C	317		CKSRYB104K16
C	318		CKSRYB104K16
C	319		CKSRYB104K16
C	320		CCSRCH470J50
C	325		CKSRYB471K50
C	328		CKSRYB472K50
C	329		CKSRYB104K16
C	330		CKSRYB104K16
C	331		CKSRYB104K16
C	401		CKSRYB221K50
C	402		CKSRYB221K50
C	403		CKSRYB153K25
C	404		CKSRYB103K50
C	405		CEV101M10
C	702		CKSRYB104K16
C	703		CKSRYB104K16
C	801	10µF/10V	CCH1349
C	802		CEV101M10
C	803		CKSRYB224K16

Miscellaneous Parts List

		Pickup Unit(Service)(P9)	CXX1480
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903