
● **This service manual should be used together with the manual(s) listed below.**
For the parts numbers, adjustments, etc. which are not shown in this manual, refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
FX-MG8217ZT-02/UC	CRT2926		
FX-MG8217ZT/UC	CRT2584		
CX-631	CRT1640	2L	Cassette Mech. Module:Mech.Description, Disassembly
CX-890	CRT2376	G1	CD Mech. Module:Circuit Description, Mech.Description, Disassembly

EXPLODED VIEWS AND PARTS LIST

PACKING

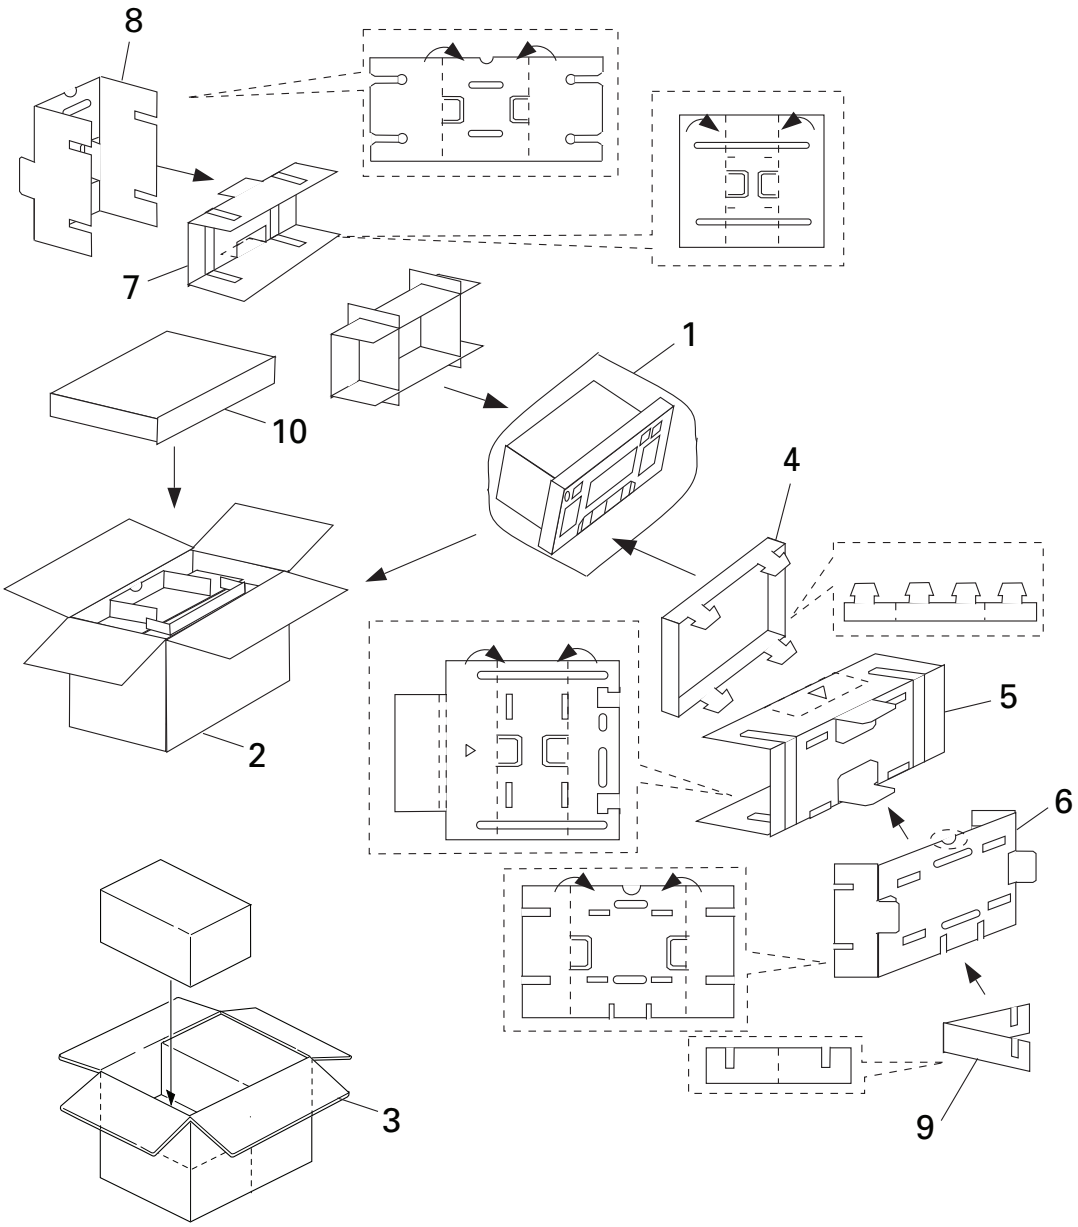

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

● PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
1	Polyethylene Bag	CEG1174
2	Carton	CHA3117
3	Contain Box	CHD3117
4	Protector	CHP2408
5	Protector	CHP2409
6	Protector	CHP2410
7	Protector	CHP2411
8	Protector	CHP2412
9	Protector	CHP2413
10	Protector	CHP2414