1. SAFETY INFORMATION

CAUTION


This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.


WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

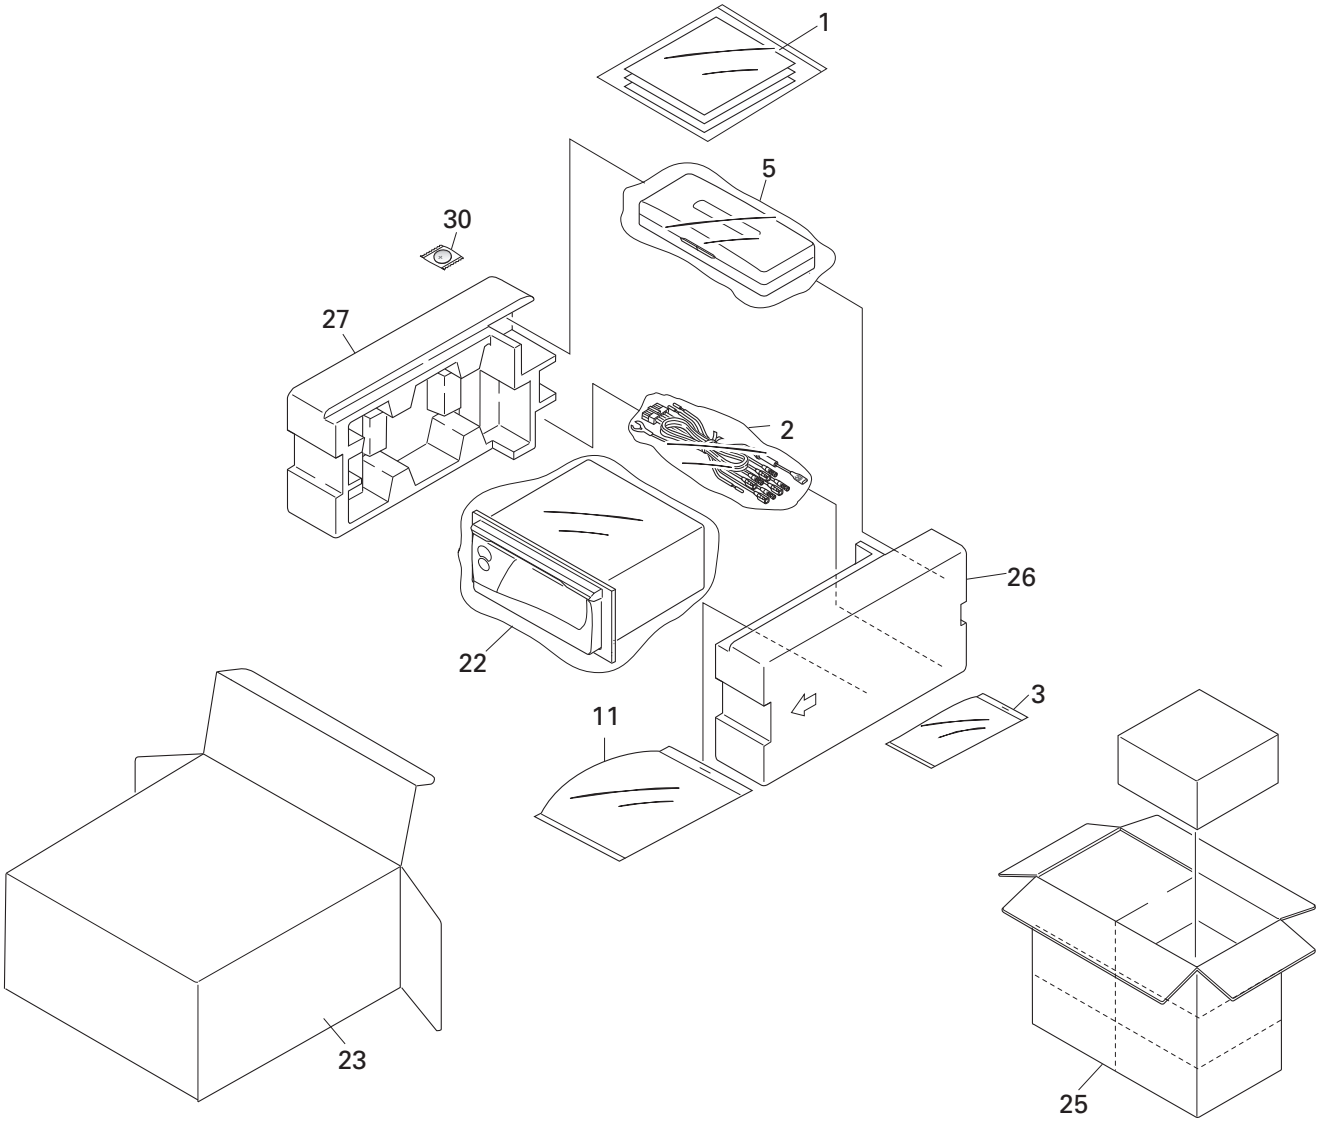

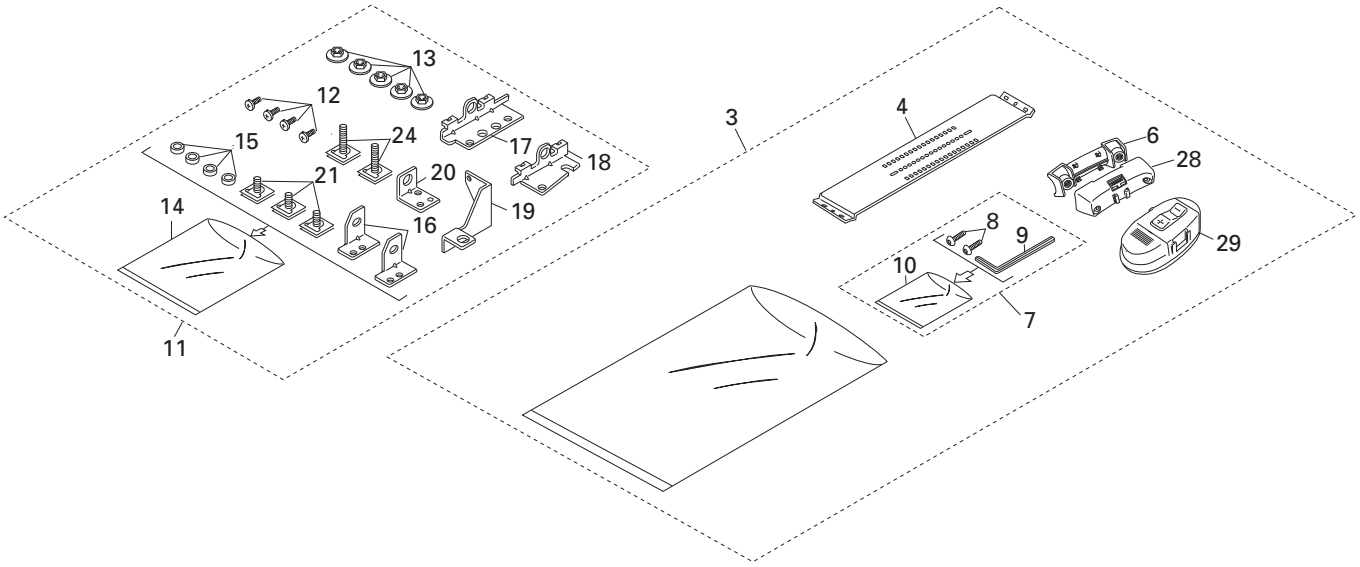

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.

(1)PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
*	1-1	Card	ARY1048
	1-2	Owner's Manual	See Contrast table(2)
	1-3	Installation Manual	See Contrast table(2)
	1-4	Polyethylene Bag	CEG1116
*	1-5	Caution Card	CRP1158
*	1-6	Label	CRW1343
*	1-7	Caution Card	See Contrast table(2)
	2	Cord	CDE5885
	3	Remote Control Assy	CXB3488
	4	Belt	CZN6416
	5	Detach Case Assy	CXB3705
	6	Holder Assy	CZX3173
	7	Screw Assy	CZE3169
*	8	Screw	RMZ30H060FBK
*	9	Hexagonal Wrench	CZE3176
*	10	Polyethylene Bag	CEG-127
	11	Accessory Assy	CEA2006
	12	Screw	BSZ30P050FMC
	13	Nut	CBN1012
*	14	Polyethylene Bag	CEG1101
	15	Spacer	CLA2598
	16	Bracket	CNC6767
	17	Bracket	CNC5506
	18	Bracket	CNC5507
	19	Bracket	CNC5686
	20	Bracket	CNC5687
	21	Bolt Unit	CXA7960
	22	Cover	CEG1228
	23	Carton	See Contrast table(2)
	24	Bolt Unit	CXA7961
	25	Contain Box	See Contrast table(2)
	26	Protector	CHP2113
	27	Protector	CHP2114
	28	Holder Assy	CZX3172
	29	Remote Control Assy	CZX3231
	30	Battery	CEX1030


(2) CONTRAST TABLE

DEH-P86DHR/UC and DEH-P76DH/UC have the same construction except for the following:

Mark	No.	Description	Part No.	
			DEH-P86DHR/UC	DEH-P76DH/UC
	1-2	Owner's Manual	CRB1530(English)	CRD2867(English, French)
	1-3	Installation Manual	CRB1531(English)	CRD2868(English, French)
*	1-7	Caution Card	CRN1051	Not used
	23	Carton	CHG3675	CHG3676
	25	Contain Box	CHL3675	CHL3676

2.2 EXTERIOR


● **DEH-P86DHR**

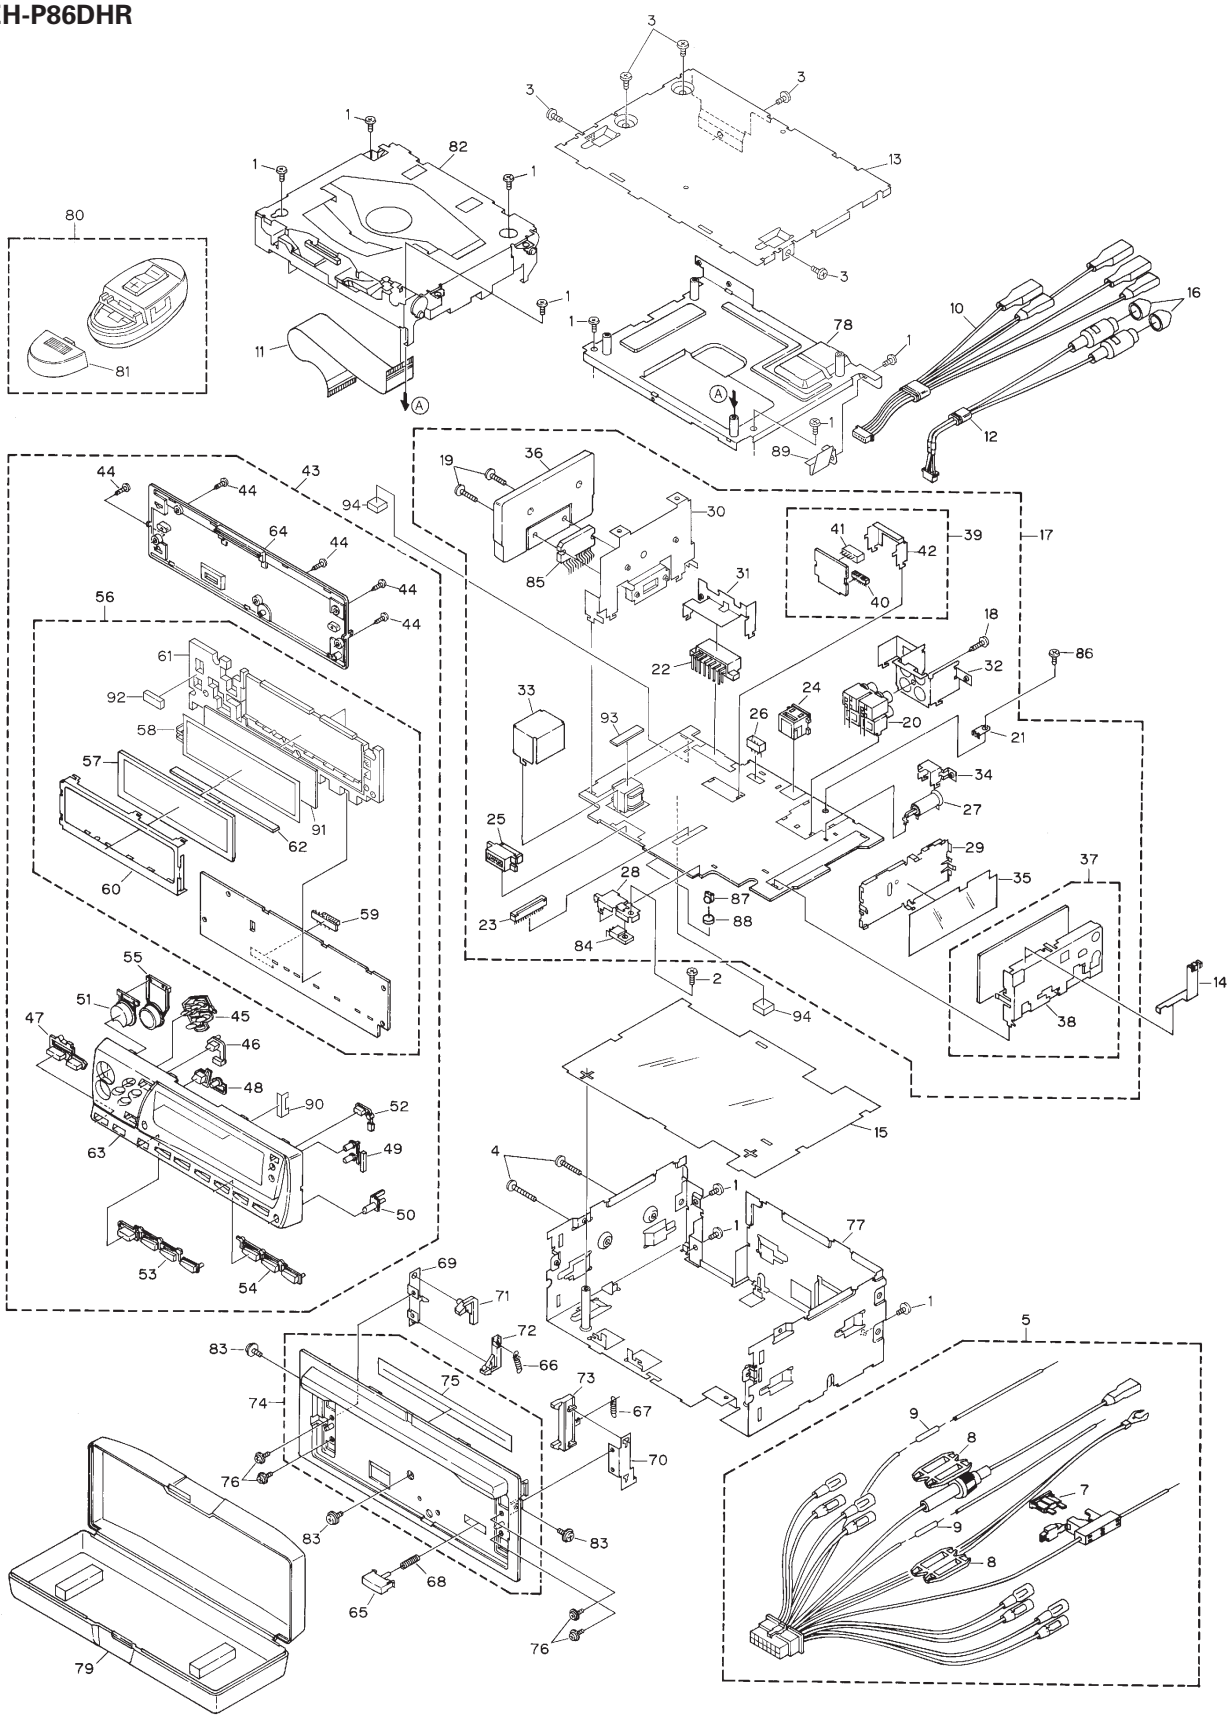

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FMC
	2	Screw	BSZ26P080FMC
	3	Screw	BSZ30P050FMC
	4	Screw	BSZ30P200FMC
	5	Cord Assy	CDE5885
	6	•••••	
	7	Fuse(10A)	CEK1136
	8	Cap	CNS1472
	9	Resistor	RS1/2PMF102J
	10	Cord Assy	CDE5997
	11	Cable	CDE5269
	12	Cord Assy	CDE5297
	13	Case	CNB2468
	14	Holder	CNC7005
	15	Insulator	CNM5076
	16	Cap	CNV2680
	17	Tuner Amp Unit	CWM6379
	18	Screw	BPZ26P100FMC
	19	Screw	BSZ26P160FMC
	20	Pin Jack(CN251)	CKB1031
	21	Terminal(CN504)	CKF1059
	22	Plug(CN901)	CKM1304
	23	Connector(CN651)	CKS2255
	24	Connector(CN101)	CKS3408
	25	Connector(CN801)	CKS3581
	26	Connector(CN271)	CKS3584
	27	Antenna Jack(CN503)	CKX1056
	28	Holder	CNC5013
	29	Holder	CNC8021
	30	Holder	CNC8278
	31	Holder	CNC6880
	32	Holder	CNC7196
	33	Holder	CNC6889
	34	Holder	CNC7001
	35	Insulator	CNM4684
	36	Heat Sink	CNR1435
	37	FM/AM Tuner Unit	CWE1472
	38	Holder	CNC6554
	39	Detach Alarm Unit	CWM5291
	40	Plug(CN852)	CKS1617
	41	Connector(CN851)	CKS3585
	42	Holder	CNC6912
	43	Detach Grille Assy	CXB3728
	44	Screw	BPZ20P100FZK
	45	Button	CAC5947
	46	Button(FUNC)	CAC4887
	47	Button(SOURCE)	CAC4888
	48	Button(AUDIO)	CAC4889
	49	Button(LOUD,CLOCK)	CAC4893
	50	Button(DETACH)	CAC5951
	51	Button(+)	CAC6033
	52	Button(EJECT)	CAC6035
	53	Button(1,2,3,DISP)	CAC6093
	54	Button(4,5,6)	CAC6094
	55	Button(-)	CAC6034
	56	Keyboard Unit	CWX2069
	57	LCD	CAW1389
	58	EL	CEL1488
	59	Connector(CN1901)	CKS3580
	60	Holder	CNC7198
	61	Holder	CNV4772
	62	Connector	CNV4791
	63	Grille Unit	CXB3509
	64	Cover Unit	CXB3513
	65	Button	CAC5180
	66	Spring	CBH1834
	67	Spring	CBH1835
	68	Spring	CBH1996
	69	Bracket	CNC6135
	70	Bracket	CNC6791
	71	Arm	CNV4692
	72	Arm	CNV4693
	73	Arm	CNV4951
	74	Panel Unit	CXB3507
	75	Cover	CNM4875
	76	Screw	IMS20P040FZK
	77	Chassis Unit	CXA9714
	78	Chassis Unit	CXA9718
	79	Detach Case Assy	CXB3705
	80	Remote Control Assy	CZX3231
	81	Cover	CZN6410
	82	CD Mechanism Module	CXK5005
	83	Screw	ISS26P060FZK
	84	Transistor(Q971)	2SD2396
	85	IC(IC201)	PAL005A
	86	Screw	ISS26P060FMC
	87	LED(D851)	BR4361F
	88	Bush	CNV-724
	89	Holder	CNC8190
	90	Spacer	CNM5385
*	91	Cushion	CNM5316
*	92	Cushion	CNM5315
*	93	Cushion	CNM6297
	94	Spacer	CNM4154


● DEH-P76DH

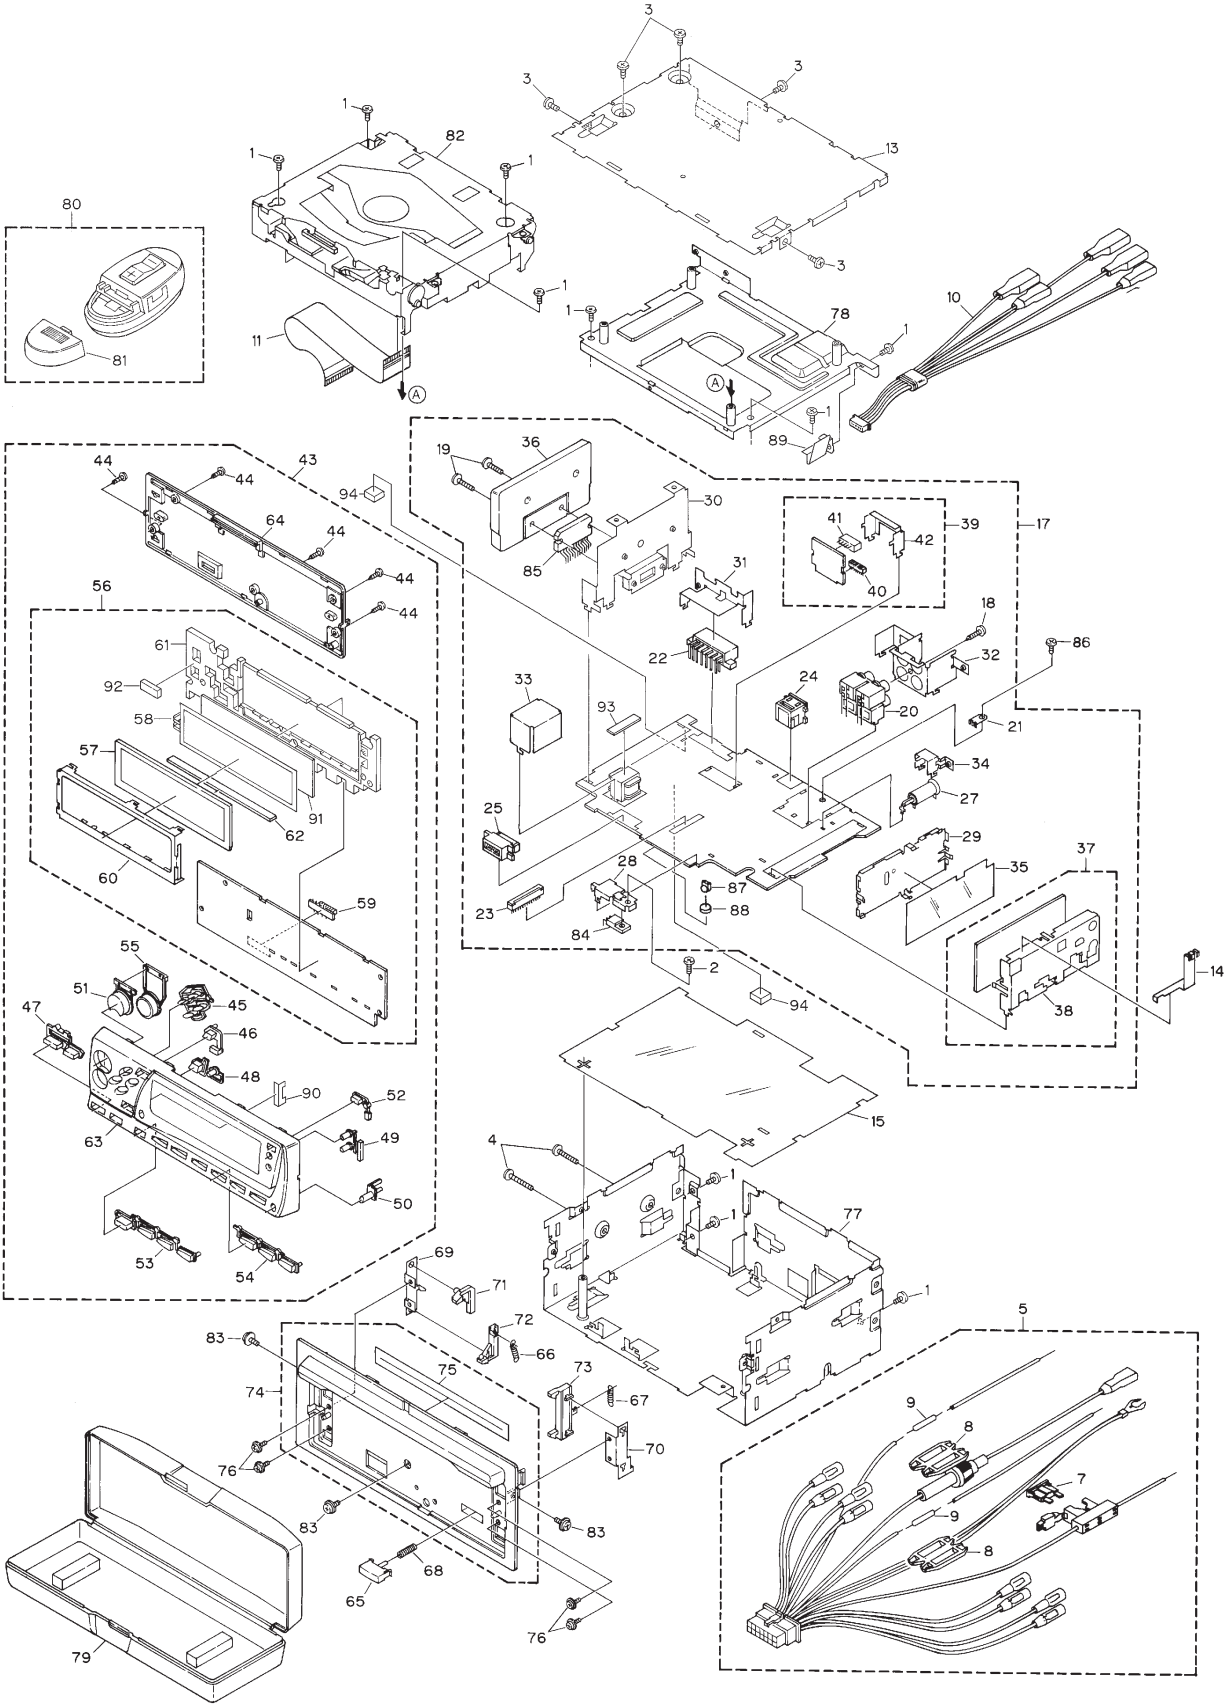

● EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FMC
	2	Screw	BSZ26P080FMC
	3	Screw	BSZ30P050FMC
	4	Screw	BSZ30P200FMC
	5	Cord Assy	CDE5885
	6	•••••	
	7	Fuse(10A)	CEK1136
	8	Cap	CNS1472
	9	Resistor	RS1/2PMF102J
	10	Cord Assy	CDE5997
	11	Cable	CDE5269
	12	•••••	
	13	Case	CNB2468
	14	Holder	CNC7005
	15	Insulator	CNM5076
	16	•••••	
	17	Tuner Amp Unit	CWM6380
	18	Screw	BPZ26P100FMC
	19	Screw	BSZ26P160FMC
	20	Pin Jack(CN251)	CKB1031
	21	Terminal(CN504)	CKF1059
	22	Plug(CN901)	CKM1304
	23	Connector(CN651)	CKS2255
	24	Connector(CN101)	CKS3408
	25	Connector(CN801)	CKS3581
	26	•••••	
	27	Antenna Jack(CN503)	CKX1056
	28	Holder	CNC5013
	29	Holder	CNC8021
	30	Holder	CNC8278
	31	Holder	CNC6892
	32	Holder	CNC7196
	33	Holder	CNC6889
	34	Holder	CNC7001
	35	Insulator	CNM4684
	36	Heat Sink	CNR1435
	37	FM/AM Tuner Unit	CWE1417
	38	Holder	CNC6555
	39	Detach Alarm Unit	CWM5291
	40	Plug(CN852)	CKS1617
	41	Connector(CN851)	CKS3585
	42	Holder	CNC6912
	43	Detach Grille Assy	CXB3729
	44	Screw	BPZ20P100FZK
	45	Button	CAC5947
	46	Button(FUNC)	CAC4887
	47	Button(SOURCE)	CAC4888
	48	Button(AUDIO)	CAC4889
	49	Button(LOUD,CLOCK)	CAC4893
	50	Button(DETACH)	CAC5951
	51	Button(+)	CAC6033
	52	Button(EJECT)	CAC6035
	53	Button(1,2,3,DISP)	CAC6036
	54	Button(4,5,6)	CAC6037
	55	Button(-)	CAC6034
	56	Keyboard Unit	CWX2070
	57	LCD	CAW1390
	58	EL	CEL1488
	59	Connector(CN1901)	CKS3580
	60	Holder	CNC7198
	61	Holder	CNV4772
	62	Connector	CNV4791
	63	Grille Unit	CXB3510
	64	Cover Unit	CXB3513
	65	Button	CAC5180
	66	Spring	CBH1834
	67	Spring	CBH1835
	68	Spring	CBH1996
	69	Bracket	CNC6135
	70	Bracket	CNC6791
	71	Arm	CNV4692
	72	Arm	CNV4693
	73	Arm	CNV4951
	74	Panel Unit	CXB3507
	75	Cover	CNM4875
	76	Screw	IMS20P040FZK
	77	Chassis Unit	CXA9714
	78	Chassis Unit	CXA9718
	79	Detach Case Assy	CXB3705
	80	Remote Control Assy	CZX3231
	81	Cover	CZN6510
	82	CD Mechanism Module	CXK5005
	83	Screw	ISS26P060FZK
	84	Transistor(Q971)	2SD2396
	85	IC(IC201)	PAL005A
	86	Screw	ISS26P060FMC
	87	LED(D851)	BR4361F
	88	Bush	CNV-724
	89	Holder	CNC8190
	90	Spacer	CNM5385
*	91	Cushion	CNM5316
*	92	Cushion	CNM5315
*	93	Cushion	CNM6297
	94	Spacer	CNM4154

2.3 CD MECHANISM MODULE

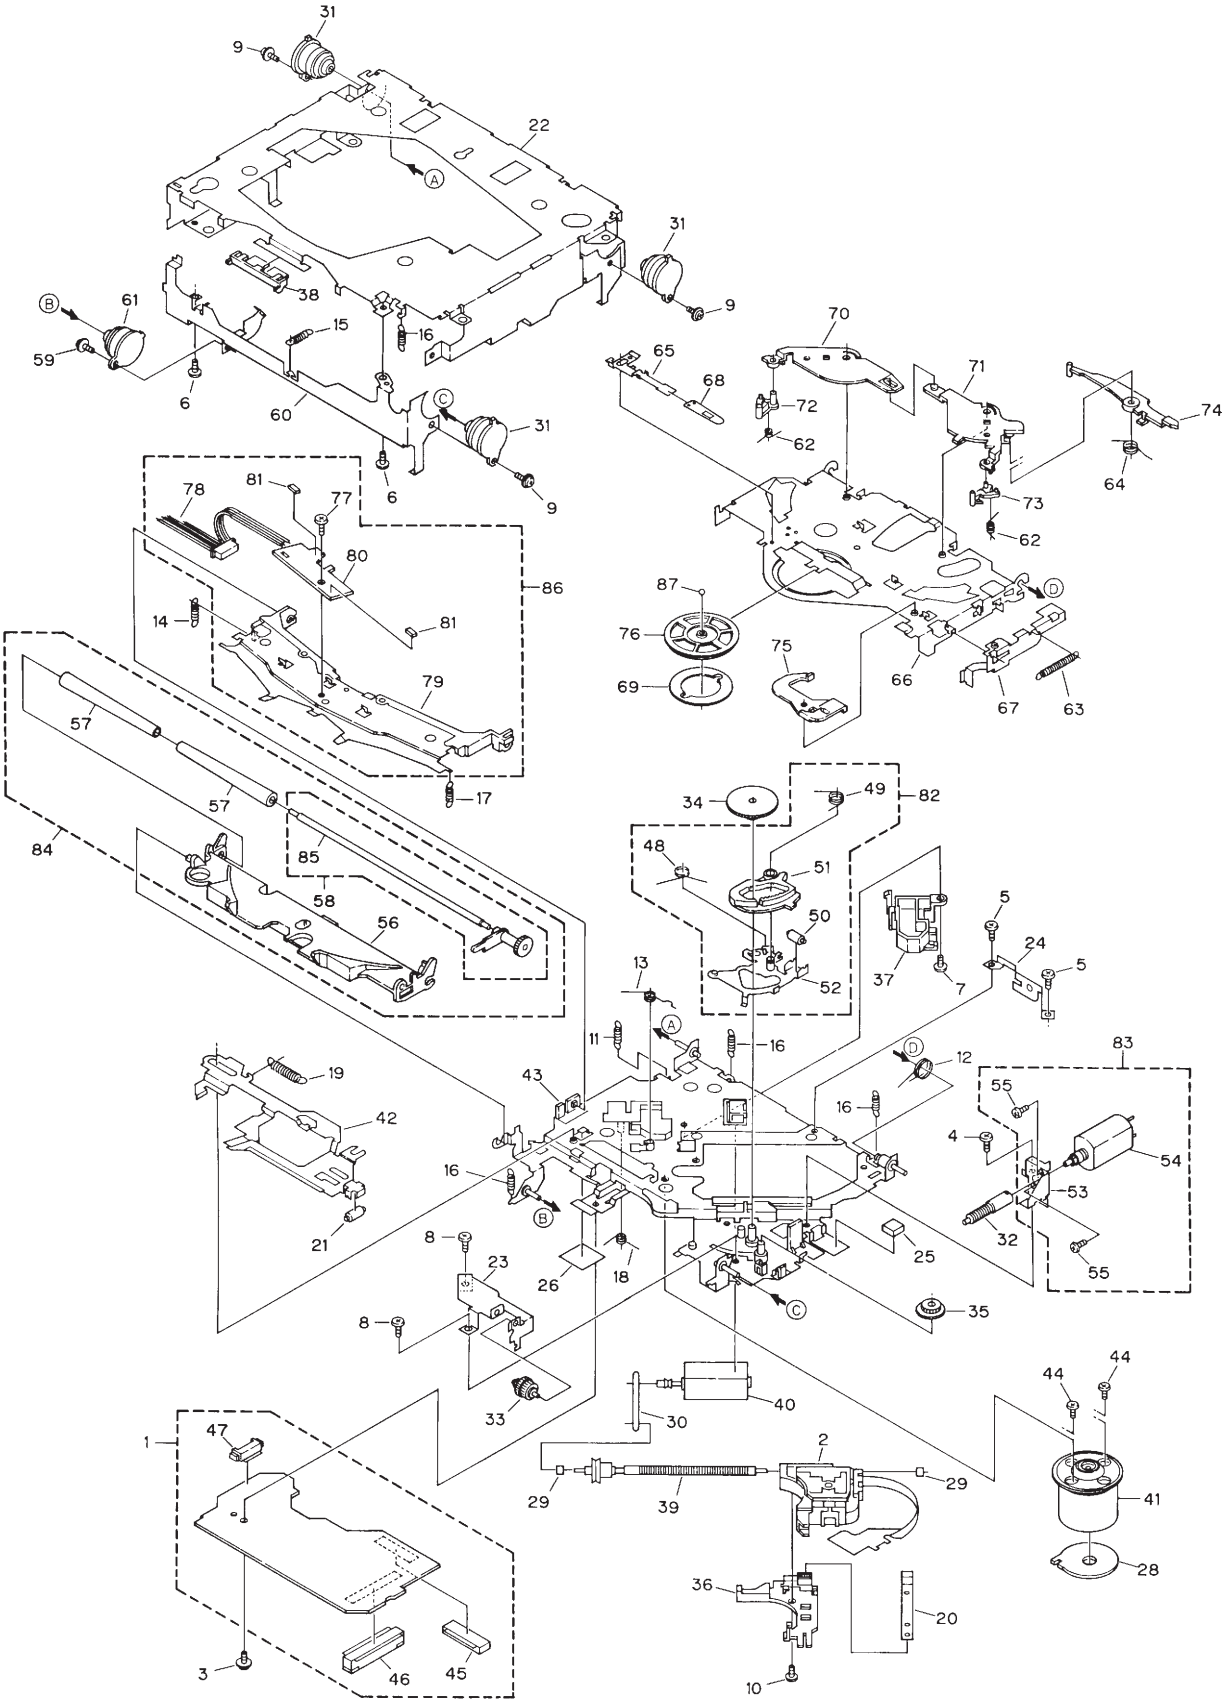

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2268
	2	Pickup Unit(Service)	CXX1230
	3	Screw	IMS26P035FMC
	4	Screw	BMZ20P025FMC
	5	Screw	BMZ20P040FMC
	6	Screw	BSZ20P040FMC
	7	Screw	CBA1077
	8	Screw	CBA1250
	9	Screw	CBA1296
	10	Screw	CBA1362
	11	Spring	CBH1724
	12	Spring	CBH1729
	13	Spring	CBH1730
	14	Spring	CBH1731
	15	Spring	CBH1732
	16	Spring	CBH1745
	17	Spring	CBH1848
	18	Spring	CBH1849
	19	Spring	CBH1939
	20	Spring	CBL1214
	21	Roller	CLA2627
	22	Frame	CNC5796
	23	Bracket	CNC5871
*	24	Bracket	CNC6376
	25	Cushion	CNM3917
	26	Sheet	CNM4873
	27	•••••	
*	28	PCB	CNP4230
	29	Bearing	CNR1415
	30	Belt	CNT1071
	31	Damper	CNV3974
	32	Gear	CNV5789
	33	Gear	CNV5820
	34	Gear	CNV4857
	35	Gear	CNV5821
	36	Holder	CNV4663
	37	Holder	CNV5071
	38	Guide	CNV5823
	39	Screw Unit(S7)	CXA8699
	40	CRG Motor Unit(S7)(M2)	CXB3043
	41	Motor Unit(M1)	CXA8912
	42	Lever Unit	CXA9300
	43	Chassis Unit	CXB2574
	44	Screw	JFZ20P025FMC
	45	Connector(CN101)	CKS1953

Mark	No.	Description	Part No.
	46	Connector(CN701)	CKS2774
	47	Connector(CN801)	CKS2196
	48	Spring	CBH1832
	49	Spring	CBH1833
	50	Roller	CLA2627
	51	Arm	CNV4136
	52	Arm Unit	CXA8565
	53	Bracket	CNC6056
	54	Load Motor Unit(S7)(M3)	CXA8702
	55	Screw	JFZ20P025FMC
	56	Arm	CNV4120
	57	Roller	CNV4509
	58	Gear Unit(S7)	CXA8701
	59	Screw	CBA1455
	60	Frame	CNC5797
	61	Damper	CNV3974
	62	Spring	CBH1736
	63	Spring	CBH1863
	64	Spring	CBH1945
	65	Spring	CBL1326
	66	Arm	CNC8364
	67	Lever	CNC6054
	68	Spacer	CNM3315
	69	Sheet	CNM4849
	70	Arm	CNV5031
	71	Arm	CNV4123
	72	Arm	CNV4124
	73	Arm	CNV4125
	74	Arm	CNV4138
	75	Arm	CNV5032
	76	Clamper	CNV5308
	77	Screw	CBA1250
	78	Connector(CN1)	CDE4576
	79	Arm	CNC7383
*	80	Gathering PCB	CNX2445
	81	Photo-transistor(Q1, 2)	CPT-230S-X
	82	Elbow Arm Assy(S7)	CXA8889
	83	Load Motor Assy(S7)	CXA8891
	84	LO Arm Assy(S7)	CXA8892
	85	Shaft	CLA3133
	86	Guide Arm Assy(S7)	CXB1850
	87	Ball	CNR1189

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

B Unit Number : CWE1472 (DEH-P86DHR)
Unit Number : CWE1417 (DEH-P76DH)
Unit Name : FM/AM Tuner Unit

MISCELLANEOUS

Circuit Symbol	No.	Part Name	Part No.
IC	1	IC	PA4023B
IC	2	IC	PA4024A
Q	1	Transistor	2SC2412K
Q	2	Transistor	DTC124EU
Q	3	FET	3SK263
Q	31	Transistor	2SC2412K
Q	201	FET	2SK932
Q	202	Transistor	2SC2412K
Q	203	Transistor	DTC124EU
D	1	Diode	RD39JS
D	2	Diode	RD39JS
D	4	Diode	1SV250
D	5	Diode	KV1410-F1
D	6	Diode	MA157
D	7	Diode	KV1410-F1
D	8	Diode	KV1410-F1
D	201	Diode	MA157
D	202	Diode	MA157
D	231	Diode	SVC253
L	2	Coil(DEH-P86DHR)	CTC1126
L	2	Coil(DEH-P76DH)	CTC1108
L	3	Inductor	LCTB2R2K2125
L	4	Coil(DEH-P86DHR)	CTC1126
L	4	Coil(DEH-P76DH)	CTC1108
L	5	Coil(DEH-P86DHR)	CTC1125
L	5	Coil(DEH-P76DH)	CTC1107
L	51	Ferri-Inductor	LAU150K
L	201	Ferri-Inductor	LAU4R7K
L	202	Ferri-Inductor	LAU330K
L	203	Inductor	CTF1287
L	208	Inductor	LAU121K
L	231	Inductor	LCTA3R3J3225
T	31	Coil	CTE1116
T	51	Coil(DEH-P86DHR)	CTC1159
T	51	Coil(DEH-P76DH)	CTC1136
CF	51	Ceramic Filter(DEH-P86DHR)	CTF1442
CF	51	Ceramic Filter(DEH-P76DH)	CTF1441
CF	52	Ceramic Filter(DEH-P86DHR)	CTF1442
CF	52	Ceramic Filter(DEH-P76DH)	CTF1441
CF	53	Ceramic Filter(DEH-P86DHR)	CTF1442
CF	53	Ceramic Filter(DEH-P76DH)	CTF1441
CF	232	Ceramic Filter	CTF1348
X	151	Resonator 920.5kHz	CSS1365
X	231	Crystal Resonator 10.26MHz	CSS1111
VR	154	Semi-fixed 150kΩ(B)	CCP1213

RESISTORS

Circuit Symbol	No.	Part No.
R	1	RS1/16S225J
R	2	RS1/16S225J
R	4	RS1/16S154J
R	5	RS1/16S391J
R	6	RS1/16S223J
R	7	RS1/16S123J
R	8	RS1/16S332J
R	9	RS1/16S473J
R	10	RS1/16S223J
R	11	RS1/16S124J
R	13	RS1/16S563J
R	15	RS1/16S271J
R	16	RS1/16S104J
R	17	RS1/16S332J
R	18	RS1/16S332J
R	31	RS1/16S470J
R	32	RS1/16S822J
R	33	RS1/16S822J
R	34	RS1/16S331J
R	35	RS1/16S331J
R	51	RS1/16S271J
R	52	RS1/16S560J
R	55	RS1/16S102J
R	56	RS1/16S823J
R	61	RS1/16S392J
R	62	RS1/16S273J
R	101	RS1/16S272J
R	102	RS1/16S682J
R	103	RS1/16S333J
R	104	RS1/16S334J
R	105	RS1/16S683J
R	107	RS1/16S222J
R	151	RS1/16S222J
R	152	RS1/16S393J
R	155	RS1/16S273J
R	156	RS1/16S243J
R	157	RS1/16S203J
R	160	RS1/16S222J
R	161	RS1/16S563J
R	162	RS1/16S105J
R	163	RS1/16S223J
R	202	RS1/16S223J
R	203	RS1/16S225J
R	204	RS1/16S103J
R	206	RS1/16S220J
R	207	RS1/16S101J
R	208	RS1/16S102J
R	209	RS1/16S471J
R	214	RS1/16S822J
R	215	RS1/16S822J

Circuit Symbol and No.		Part Name	Part No.
R	217		RS1/16S102J
R	231		RS1/16S272J
R	232		RS1/16S473J
R	237		RS1/16S103J
R	238		RS1/16S104J
R	239		RS1/16S104J
R	240		RS1/16S332J
R	241		RS1/16S202J
R	243		RS1/16S183J
R	244		RS1/16S392J
R	247		RS1/16S123J
CAPACITORS			
C	1		CCSQCH6R0D50
C	2		CCSRCK2R0C50
C	4		CCSRCH820J50
C	6		CCSRCH820J50
C	8		CKSRYB103K25
C	9		CKSQYB104K16
C	10		CCSRCKR50C50
C	11		CEJA1R0M50
C	12		CKSRYB222K50
C	13		CKSRYB222K50
C	14		CCSRCH220J50
C	15		CCSRCH6R0D50
C	16		CCSRCH8R0D50
C	17		CKSRYB222K50
C	18		CKSRYB103K25
C	19		CKSRYB222K50
C	20		CKSRYB222K50
C	21		CEJA100M16
C	22		CCSRTH9R0D50
C	23		CCSRTH120J50
C	24		CCSRCH471J50
C	25		CKSRYB103K25
C	26		CCSRCH101J50
C	31		CKSRYB103K25
C	32		CKSQYB472K50
C	33		CCSRCH5R0C50
C	34		CKSQYB104K16
C	36		CCSRRH201J50
C	51		CKSRYB223K25
C	52		CKSRYB103K25
C	54		CCSRCH470J50
C	55		CKSQYB223K25
C	56		CKSQYB104K16
C	57		CKSRYB472K50
C	58		CEJA330M10
C	59		CKSRYB103K25
C	60	(DEH-P76DH)	CKSRYB102K50
C	61		CCSRCH270J50
C	62		CKSRYB103K25
C	63		CEJAR22M50
C	101		CEJANP100M10
C	102		CKSRYB182K50
C	103		CKSRYB682K25
C	104		CEJA2R2M50
C	105		CKSRYB103K25
C	106		CCSRCH151J50
C	107		CKSRYB103K25
C	151		CKSRYB472K50
C	152		CKSQYB104K16
C	153		CEJA3R3M50
C	154		CKSQYB104K16
C	157		CEJA3R3M50
C	158		CKSYB474K16
C	159		CEJA220M6R3
C	160		CKSQYB104K16

Circuit Symbol and No.		Part Name	Part No.
C	161		CKSQYB104K16
C	162		CEJA3R3M50
C	163		CKSRYB102K50
C	170		CCSRCH100D50
C	201		CCSRCH471J50
C	202		CCSRCH100D50
C	203		CKSRYB332K50
C	204		CKSQYB473K16
C	205		CKSQYB473K16
C	206		CKSQYB104K16
C	207		CCSRCH560J50
C	209		CKSQYB104K16
C	211		CCSRCH101J50
C	212		CEJA470M6R3
C	213		CKSRYB103K25
C	216		CCSRCH101J50
C	217		CEJA1R5M50
C	219		CCSRCH471J50
C	220		CKSRYB103K25
C	230		CKSRYB103K25
C	231		CCSRCH330J50
C	232		CCSRCH150J50
C	233		CKSQYB104K16
C	234		CEJA330M10
C	235		CKSRYB332K50
C	236		CKSQYB473K16
C	237		CCSRCH120J50
C	239		CKSRYB472K50
C	240		CEJAR47M50
C	241		CKSQYB104K16
C	242		CEJAR47M50
C	243		CEJAR33M50
C	244		CKSQYB473K16
C	245		CKSRYB333K16
C	246		CKSQYB473K16
C	250		CCSRCH471J50

E

Unit Number : CWX2268
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	UPC2572GS
IC	201	IC	UPD63702AGF
IC	301	IC	BA6997FM
IC	302	IC	BA6285FP
IC	601	IC	TA2063F
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	MA151WA
Q	601	Transistor	2SD1781K
Q	602	Transistor	2SD1781K
Q	603	Transistor	2SB709A
D	601	Diode	MA151WA
D	701	Diode	1SR154-400
D	801	Chip LED	CL200IRX
D	802	Chip LED	CL200IRX
X	201	Ceramic Resonator 16.93MHz	CSS1363
S	801	Switch (Home)	CSN1028
S	802	Spring Switch (Clamp)	CSN1044

RESISTORS

R	101		RS1/8S100J
R	102		RS1/8S120J
R	103		RS1/16S102J
R	104		RS1/16S822J
R	105		RS1/16S682J

=====Circuit Symbol and No.	Part Name=====	Part No.
R 106		RS1/16S183J
R 107		RS1/16S822J
R 108		RS1/16S333J
R 109		RS1/16S683J
R 110		RS1/16S134J
R 111		RS1/16S273J
R 112		RS1/16S222J
R 113		RS1/16S103J
R 114		RS1/16S103J
R 115		RS1/16S102J
R 116		RS1/16S163J
R 117		RS1/16S163J
R 201		RS1/16S104J
R 202		RS1/16S473J
R 501		RS1/16S0R0J
R 505		RS1/16S102J
R 507		RA3C102J
R 508		RA4C681J
R 601		RS1/16S102J
R 602		RS1/16S102J
R 603		RS1/16S223J
R 604		RS1/16S223J
R 605		RS1/16S162J
R 606		RS1/16S162J
R 607		RS1/16S103J
R 801		RS1/8S751J
R 802		RS1/8S751J
CAPACITORS		
C 101		CEV101M6R3
C 102		CKSQYB104K16
C 103		CEV470M6R3
C 104		CKSYB334K16
C 105		CCSRCH330J50
C 106		CKSRYB103K25
C 107		CEV4R7M35
C 108		CKSQYB273K50
C 109		CCSRCH101J50
C 110		CKSQYB104K16
C 111		CKSRYB332K50
C 112		CKSQYB473K16
C 113		CKSRYB103K25
C 114		CKSRYB391K50
C 115		CCSRCH121J50
C 116		CKSRYB682K50
C 117		CKSRYB333K16
C 118		CKSYB334K16
C 119		CKSYB334K16
C 120		CKSYB334K16
C 121		CKSYB334K16
C 122		CKSQYB104K16
C 123		CKSRYB472K50
C 124		CKSQYB104K16
C 125		CCSRCH6R0D50
C 126		CKSRYB153K25
C 127		CCSRCH102J25
C 201		CKSYB334K16
C 202		CKSQYB104K16
C 203		CKSQYB104K16
C 303		CEV470M16
C 304		CKSRYB103K25
C 305		CKSRYB103K25
C 306		CKSRYB103K25
C 307		CEV100M25
C 502		CKSRYB471K50
C 601		CEV101M6R3
C 602		CKSQYB104K16
C 603		CEV4R7M35
C 604		CEV4R7M35

=====Circuit Symbol and No.	Part Name=====	Part No.
C 605		CKSRYB152K50
C 606		CKSRYB152K50
C 607		CEV220M6R3
C 701	22µF/6.3V	CCH1300
C 702		CKSYB334K16
C 703		CEV101M6R3
C 901		CCSRCH471J50
C 902		CCSRCH271J50
C 903		CCSRCH471J50
C 904		CCSRCH101J50

F Unit Number : CWM5291
Unit Name : Detach Alarm Unit

MISCELLANEOUS

IC	851	IC	TPD1018F
IC	852	IC	TPD1018F
Q	851	Transistor	IMD2A
Q	852	Transistor	DTC123EK
Q	853	Transistor	DTC123EK
Q	854	Transistor	DTC123EK
D	858	Diode	ERA15-02VH
D	859	Diode	ERA15-02VH
D	860	Diode	ERA15-02VH
D	861	Diode	ERA15-02VH

RESISTORS

R	852	RS1/10S103J
R	853	RS1/10S103J
R	854	RS1/10S223J
R	856	RS1/10S163J
R	858	RS1/10S163J
R	860	RS1/10S103J
R	861	RS1/10S103J
R	862	RS1/8S102J
R	863	RS1/8S102J
R	864	RS1/8S102J

CAPACITORS

C	852	CKSQYB473K25
C	854	CKSQYB473K25
C	855	CKSQYB103K50
C	856	CKSQYB103K50
C	857	CKSQYB103K50

A Unit Number : CWM6379(DEH-P86DHR)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	TA2050S
IC	102	IC	CA0008AM
IC	151	IC	SN761027DL
IC	201	IC	PAL005A
IC	271	IC	M5282FP
IC	272	IC	MC14052BF
IC	273	IC	NJM2068MD
IC	501	IC	LC72146M
IC	601	IC	PD4722B
IC	661	IC	PD4623B
IC	701	IC	PD6191A
IC	731	IC	PMW001B
IC	751	IC	PD8027A
IC	941	IC	S-80734ANDYI
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	201	Transistor	DTC124EK
Q	251	Transistor	IMH3A
Q	252	Transistor	IMH3A
Q	253	Transistor	IMD2A

Circuit Symbol and No.		Part Name	Part No.
Q	271	Transistor	DTC343TK
Q	301	Transistor	DTA124EK
Q	302	Transistor	IMH3A
Q	501	Transistor	2SC2412K
Q	502	Transistor	2SK208
Q	503	Transistor	2SC2412K
Q	601	Transistor	DTC124EK
Q	661	Transistor	DTA124EK
Q	801	Transistor	2SA1037K
Q	802	Transistor	2SD1760F5
Q	803	Transistor	DTC114EK
Q	804	Transistor	DTA143EK
Q	805	Transistor	DTC114EK
Q	806	Transistor	2SC2412K
Q	807	Transistor	2SB1238
Q	808	Transistor	DTC143EK
Q	809	Transistor	2SD1864
Q	911	Transistor	2SD1760F5
Q	921	Transistor	IMX1
Q	922	Transistor	DTC114EK
Q	941	Transistor	DTA144TK
Q	951	Transistor	2SD2396
Q	952	Transistor	2SB1243
Q	953	Transistor	DTC124EK
Q	954	Transistor	2SA1674
Q	955	Transistor	2SA1674
Q	956	Transistor	IMH1A
Q	957	Transistor	2SC2412K
Q	958	Transistor	DTC144EK
Q	971	Transistor	2SD2396
Q	972	Transistor	IMD2A
D	201	Diode	DAN202K
D	501	Diode	DAN202K
D	502	Diode	HZS3LL(B)
D	731	Diode	MA3047(M)
D	801	Diode	DA204K
D	802	Diode	DA204K
D	803	Diode	DA204K
D	804	Diode	MA3062(M)
D	805	Diode	HZS9L(B3)
D	806		HZS5LL(A)
D	851	LED	BR4361F
D	901	Diode	ERA15-02VH
D	902	Diode	ERA15-02VH
D	911	Diode	ERA15-02VH
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS7L(C3)
D	922	Diode	1SS133
D	923	Diode	HZS7L(A1)
D	931	Diode	ERA15-02VH
D	932	Diode	ERA15-02VH
D	941	Diode	DAN212K
D	951	Diode	HZS9L(B3)
D	952	Diode	HZS9L(A2)
D	953	Diode	1SS133
D	971	Diode	HZS9L(B1)
L	101	Inductor	LAU3R3K
L	501	Ferri-Inductor	LAU2R2K
L	502	Ferri-Inductor	LAU220K
L	503	Inductor	LCTBR39K2125
L	601	Ferri-Inductor	LAU2R2K
L	602	Inductor	LAU100K
L	661	Ferri-Inductor	LAU2R2K
L	701	Inductor	LAU100K
L	731	Ferri-Inductor	LAU2R2K

Circuit Symbol and No.		Part Name	Part No.
L	751	Inductor	LAU100K
L	801	Ferri-Inductor	LAU2R2K
L	802	Transformer	MTX9005
L	901	Choke Coil 600µH	CTH1171
X	501	Crystal Resonator 7.2MHz	CSS1334
X	601	Ceramic Resonator 6.29MHz	CSS1310
X	661	Resonator 8.380MHz	CSS1354
X	701	Crystal Resonator 4.332MHz	CSS1056
S	941	Switch(Reset)	CSG1059
		FM/AM Tuner Unit	CWE1472
		Detach Alarm Unit	CWM5291
BZ	601	Buzzer	CPV1011

RESISTORS

R	101		RS1/10S620J
R	102		RS1/10S101J
R	103		RS1/10S101J
R	104		RS1/10S222J
R	105		RS1/10S122J
R	106		RS1/10S122J
R	107		RS1/10S181J
R	108		RS1/10S181J
R	109		RS1/10S153J
R	110		RS1/10S153J
R	111		RS1/10S222J
R	112		RS1/10S222J
R	113		RS1/10S102J
R	114		RS1/10S102J
R	115		RS1/10S473J
R	116		RS1/10S473J
R	117		RS1/10S332J
R	118		RS1/10S682J
R	119		RS1/10S103J
R	133		RS1/10S162J
R	134		RS1/10S162J
R	151		RS1/10S272J
R	152		RS1/10S272J
R	153		RS1/10S151J
R	154		RS1/10S151J
R	201		RS1/10S103J
R	202		RS1/10S331J
R	204		RS1/10S103J
R	205		RS1/10S103J
R	251		RS1/10S821J
R	252		RS1/10S821J
R	253		RS1/10S471J
R	254		RS1/10S471J
R	255		RS1/10S223J
R	256		RS1/10S223J
R	257		RS1/10S223J
R	258		RS1/10S223J
R	271		RS1/10S183J
R	272		RS1/10S183J
R	273		RS1/10S103J
R	274		RS1/10S243J
R	275		RS1/10S683J
R	276		RS1/10S473J
R	277		RS1/10S103J
R	278		RS1/10S103J
R	279		RS1/10S104J
R	280		RS1/10S104J
R	281		RS1/10S104J
R	282		RS1/10S104J
R	283		RS1/10S104J

=====Circuit Symbol and No. Part Name=====		Part No.
R	284	RS1/10S104J
R	285	RS1/10S105J
R	286	RS1/10S821J
R	287	RS1/10S223J
R	301	RS1/10S471J
R	302	RS1/10S471J
R	303	RS1/10S104J
R	304	RS1/10S104J
R	501	RS1/10S102J
R	502	RS1/10S102J
R	503	RS1/10S102J
R	506	RS1/10S103J
R	508	RS1/10S472J
R	509	RS1/10S152J
R	510	RS1/10S102J
R	511	RS1/10S472J
R	512	RS1/10S103J
R	513	RS1/10S102J
R	515	RS1/10S103J
R	516	RS1/10S222J
R	517	RS1/10S473J
R	518	RS1/10S473J
R	519	RS1/10S473J
R	520	RS1/10S224J
R	521	RS1/10S473J
R	522	RS1/10S473J
R	523	RS1/10S472J
R	524	RS1/10S472J
R	525	RS1/10S222J
R	526	RS1/10S223J
R	601	RS1/10S473J
R	602	RS1/10S473J
R	603	RS1/10S473J
R	604	RS1/10S473J
R	605	RS1/10S473J
R	606	RS1/10S473J
R	607	RS1/10S473J
R	608	RS1/10S221J
R	609	RS1/10S682J
R	610	RA4C221J
R	611	RS1/10S682J
R	613	RS1/10S682J
R	615	RS1/10S682J
R	617	RA4C681J
R	623	RS1/10S473J
R	624	RS1/10S102J
R	625	RS1/10S202J
R	626	RS1/10S473J
R	627	RS1/10S473J
R	628	RS1/10S473J
R	629	RS1/10S473J
R	630	RS1/10S222J
R	631	RS1/10S473J
R	633	RS1/10S473J
R	634	RS1/10S473J
R	637	RS1/10S393J
R	651	RS1/10S681J
R	652	RS1/10S102J
R	653	RS1/10S102J
R	654	RS1/10S102J
R	662	RS1/10S473J
R	663	RS1/10S222J
R	668	RS1/10S103J
R	669	RS1/10S203J
R	670	RS1/10S222J

=====Circuit Symbol and No. Part Name=====		Part No.
R	671	RS1/10S473J
R	672	RS1/10S222J
R	673	RS1/10S473J
R	674	RS1/10S473J
R	701	RS1/10S681J
R	702	RS1/10S681J
R	703	RS1/10S222J
R	704	RS1/10S105J
R	705	RS1/10S681J
R	706	RS1/10S0R0J
R	710	RS1/10S473J
R	711	RA3C681J
R	712	RS1/10S0R0J
R	713	RS1/10S473J
R	714	RA4C473J
R	731	RA3C102J
R	732	RS1/10S681J
R	733	RS1/10S393J
R	735	RS1/10S102J
R	736	RD1/4PU151J
R	751	RS1/10S473J
R	752	RS1/10S473J
R	753	RS1/10S473J
R	802	RS1/8S222J
R	804	RS1/8S472J
R	806	RS1/8S472J
R	808	RS1/10S472J
R	809	RS1/10S472J
R	810	RS2PMF100J
R	811	RD1/4PU471J
R	812	RS1/10S103J
R	813	RS1/10S224J
R	814	RS1/10S222J
R	815	RD1/4PU102J
R	816	RS1/10S391J
R	817	RS1/10S752J
R	818	RS1/10S104J
R	819	RS2P300JL
R	851	RS1/8S331J
R	865	RS1/10S103J
R	866	RS1/10S102J
R	867	RS1/10S473J
R	868	RS1/10S473J
R	869	RS1/10S473J
R	911	RS1/10S332J
R	912	RS1/10S101J
R	921	RS1/10S103J
R	922	RS1/10S473J
R	923	RS1/10S103J
R	924	RS1/10S103J
R	925	RS1/10S473J
R	926	RS1/10S472J
R	931	RS1/10S103J
R	941	RS1/10S102J
R	942	RS1/10S822J
R	943	RS1/8S471J
R	944	RS1/10S473J
R	951	RD1/4PU221J
R	952	RD1/4PU301J
R	953	RS1/10S1R0J
R	954	RD1/4PU331J
R	955	RD1/4PU331J
R	956	RS1/8S472J
R	957	RD1/4PU102J
R	958	RS1/10S472J

Circuit Symbol and No.		Part Name	Part No.
R	959		RD1/4PU102J
R	960		RS1/10S472J
R	961		RS1/10S103J
R	962		RS1/10S473J
R	963		RS1/10S473J
R	971		RD1/4PU221J
R	972		RS1/10S221J
R	973		RS1/10S472J
R	974		RS1/8S122J
CAPACITORS			
C	103		CEJA1R0M50
C	104		CEJA1R0M50
C	105		CEJA1R0M50
C	106		CEJA1R0M50
C	107		CEJA100M16
C	108		CKSQYB473K25
C	109		CKSQYB104K16
C	131		CEJA4R7M35
C	132		CEJA4R7M35
C	133		CKSQYB473K25
C	134		CKSQYB473K25
C	135		CEJA4R7M35
C	136		CEJA4R7M35
C	137		CEJA4R7M35
C	138		CEJA4R7M35
C	151		CKSQYB104K16
C	152		CEAS470M10
C	153		CEJANP100M10
C	154		CEJANP100M10
C	155		CKSQYB822K50
C	156		CKSQYB822K50
C	157		CEJA1R0M50
C	158		CEJA1R0M50
C	159		CKSQYB183K25
C	160		CKSQYB183K25
C	161		CKSQYB102K50
C	162		CKSQYB102K50
C	163		CEJANP2R2M35
C	164		CEJANP2R2M35
C	165		CKSQYB333K25
C	166		CKSQYB333K25
C	167		CEJA220M6R3
C	168		CEJA2R2M50
C	169		CKSQYB104K16
C	201		CKSYB224K16
C	202		CKSYB224K16
C	203		CKSYB224K16
C	204		CKSYB224K16
C	205		CEHAR010M50
C	206	3300µF/16V	CCH1163
C	207		CKSQYB103K50
C	208		CEHAR100M16
C	209		CKSYB105K16
C	210		CEHAR330M10
C	251		CEJA4R7M35
C	252		CEJA4R7M35
C	253		CEJA4R7M35
C	254		CEJA4R7M35
C	255		CKSQYB221K50
C	256		CKSQYB221K50
C	257		CKSQYB221K50
C	258		CKSQYB221K50
C	271		CEAS220M10
C	272		CEAS101M10
C	273		CKSQYB472K50

Circuit Symbol and No.		Part Name	Part No.
C	274		CEJA4R7M35
C	275		CEJANP220M10
C	276		CKSQYB222K50
C	277		CKSQYB183K25
C	278		CKSQYB473K25
C	279		CKSQYB273K25
C	280		CKSQYB103K50
C	281		CKSQYB223K25
C	282		CKSQYB153K50
C	283		CEAS4R7M25
C	284		CKSQYB104K16
C	285		CKSYB105K16
C	301		CEJA3R3M50
C	302		CEJA3R3M50
C	501		CKSQYB223K25
C	502		CKSQYB223K25
C	503		CKSQYB103K50
C	504		CKSQYB103K50
C	505		CKSQYB103K50
C	506		CKSQYB473K25
C	507		CKSQYB102K50
C	509		CKLSR473K16
C	510		CKSQYB103K50
C	512		CEJA100M16
C	513		CKSQYB103K50
C	514		CCSQCH101J50
C	515		CCSQCH101J50
C	516		CKSQYB103K50
C	518	4.7µF/16V	CCH1250
C	519		CKSQYB103K50
C	520		CCSQCH150J50
C	521		CCSQCH150J50
C	522		CKSQYB223K25
C	603		CEJA100M16
C	604		CKSQYB103K50
C	605		CCSQCH101J50
C	606		CCSQCH101J50
C	607		CASA1R0M16
C	609		CCSQCH101J50
C	661		CCSQCH101J50
C	662		CEJA4R7M35
C	663		CKSQYB104K16
C	664		CKSQYB473K25
C	702		CCSQCH270J50
C	703		CCSQCH270J50
C	705		CKSYB473K16
C	706		CKSQYB473K25
C	708		CKSQYB104K16
C	731		CEJA100M16
C	733		CKSQYB102K50
C	734		CKSQYB472K50
C	735		CKSQYB104K16
C	736		CKSYB105K16
C	737		CKSQYB104K16
C	738		CEJA100M16
C	751		CEJA100M16
C	752		CKSQYB103K50
C	753		CKSYB103K50
C	801		CKSYB104K16
C	802		CCSQCH101J50
C	803		CEHAR100M16
C	804		CKSQYB103K50
C	805		CEHAR100M16
C	806		CKSQYB103K50
C	807		CKSQYB333K25

=====Circuit Symbol and No.		Part Name=====	Part No.
C	808		CKSQYB333K25
C	809		CEJANP4R7M16
C	858		CKSQYB473K25
C	901		CKSQYB103K50
C	911		CKSQYB103K50
C	912	0.22F/5.5V	CCL1037
C	913		CKSQYB472K50
C	914		CEHAQ102M16
C	915		CEAS470M10
C	921		CKSYB105K16
C	922		CKSYB102K50
C	931		CKSQYB473K25
C	941		CEJA2R2M50
C	951		CKSQYB103K50
C	952		CEHAQ101M16
C	953		CKSQYB103K50
C	954	330µF/10V	CCH1181
C	971		CKSQYB473K25
C	972		CKSQYB102K50
C	973		CEAS101M10

A Unit Number : CWM6380(DEH-P76DH)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	TA2050S
IC	102	IC	CA0008AM
IC	151	IC	SN761027DL
IC	201	IC	PAL005A
IC	501	IC	LC72146M
IC	601	IC	PD4754B
IC	661	IC	PD4623B
IC	701	IC	PD6194A
IC	751	IC	PD8027A
IC	941	IC	S-80734ANDYI
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC124EK
Q	201	Transistor	DTC124EK
Q	251	Transistor	IMH3A
Q	252	Transistor	IMH3A
Q	253	Transistor	IMD2A
Q	301	Transistor	DTA124EK
Q	302	Transistor	IMH3A
Q	501	Transistor	2SC2412K
Q	502	Transistor	2SK208
Q	503	Transistor	2SC2412K
Q	601	Transistor	DTC124EK
Q	661	Transistor	DTA124EK
Q	801	Transistor	2SA1037K
Q	802	Transistor	2SD1760F5
Q	803	Transistor	DTC114EK
Q	804	Transistor	DTA143EK
Q	805	Transistor	DTC114EK
Q	806	Transistor	2SC2412K
Q	807	Transistor	2SB1238
Q	808	Transistor	DTC143EK
Q	809	Transistor	2SD1864
Q	911	Transistor	2SD1760F5
Q	921	Transistor	IMX1
Q	922	Transistor	DTC114EK
Q	941	Transistor	DTA144TK
Q	951	Transistor	2SD2396
Q	952	Transistor	2SB1243
Q	953	Transistor	DTC124EK
Q	954	Transistor	2SA1674

=====Circuit Symbol and No.		Part Name=====	Part No.
Q	955	Transistor	2SA1674
Q	956	Transistor	IMH1A
Q	957	Transistor	2SC2412K
Q	958	Transistor	DTC144EK
Q	971	Transistor	2SD2396
Q	972	Transistor	IMD2A
D	201	Diode	DAN202K
D	501	Diode	DAN202K
D	502	Diode	HZS3LL(B)
D	801	Diode	DA204K
D	802	Diode	DA204K
D	803	Diode	DA204K
D	804	Diode	MA3062(M)
D	805	Diode	HZS9L(B3)
D	806		HZS5LL(A)
D	851	LED	BR4361F
D	901	Diode	ERA15-02VH
D	902	Diode	ERA15-02VH
D	911	Diode	ERA15-02VH
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS7L(C3)
D	922	Diode	1SS133
D	923	Diode	HZS7L(A1)
D	931	Diode	ERA15-02VH
D	932	Diode	ERA15-02VH
D	941	Diode	DAN212K
D	951	Diode	HZS9L(B3)
D	952	Diode	HZS9L(A2)
D	953	Diode	1SS133
D	971	Diode	HZS9L(B1)
L	101	Inductor	LAU3R3K
L	501	Ferri-Inductor	LAU2R2K
L	502	Ferri-Inductor	LAU220K
L	503	Inductor	LCTBR39K2125
L	601	Ferri-Inductor	LAU2R2K
L	602	Inductor	LAU100K
L	661	Ferri-Inductor	LAU2R2K
L	701	Inductor	LAU100K
L	751	Inductor	LAU100K
L	801	Ferri-Inductor	LAU2R2K
L	802	Transformer	MTX9005
L	901	Choke Coil 600µH	CTH1171
X	501	7.2MHz	CSS1334
X	601	Ceramic Resonator 6.29MHz	CSS1310
X	661	Resonator 8.380MHz	CSS1354
X	701	Crystal Resonator 4.330MHz	CSS1338
S	941	Switch(Reset)	CSG1059
		FM/AM Tuner Unit	CWE1417
		Detach Alarm Unit	CWM5291
BZ	601	Buzzer	CPV1011

RESISTORS

R	101	RS1/10S620J
R	102	RS1/10S101J
R	103	RS1/10S101J
R	104	RS1/10S222J
R	105	RS1/10S122J
R	106	RS1/10S122J
R	107	RS1/10S181J
R	108	RS1/10S181J
R	109	RS1/10S153J
R	110	RS1/10S153J
R	111	RS1/10S222J
R	112	RS1/10S222J
R	113	RS1/10S102J
R	114	RS1/10S102J
R	115	RS1/10S473J

Circuit Symbol and No.	Part Name	Part No.
R 116		RS1/10S473J
R 117		RS1/10S332J
R 118		RS1/10S682J
R 119		RS1/10S103J
R 133		RS1/10S162J
R 134		RS1/10S162J
R 151		RS1/10S272J
R 152		RS1/10S272J
R 153		RS1/10S151J
R 154		RS1/10S151J
R 201		RS1/10S103J
R 202		RS1/10S331J
R 204		RS1/10S103J
R 205		RS1/10S103J
R 251		RS1/10S821J
R 252		RS1/10S821J
R 253		RS1/10S471J
R 254		RS1/10S471J
R 255		RS1/10S223J
R 256		RS1/10S223J
R 257		RS1/10S223J
R 258		RS1/10S223J
R 301		RS1/10S471J
R 302		RS1/10S471J
R 303		RS1/10S104J
R 304		RS1/10S104J
R 501		RS1/10S102J
R 502		RS1/10S102J
R 503		RS1/10S102J
R 506		RS1/10S103J
R 508		RS1/10S472J
R 509		RS1/10S152J
R 510		RS1/10S102J
R 511		RS1/10S472J
R 512		RS1/10S103J
R 513		RS1/10S102J
R 515		RS1/10S103J
R 516		RS1/10S222J
R 517		RS1/10S473J
R 518		RS1/10S473J
R 519		RS1/10S473J
R 520		RS1/10S224J
R 521		RS1/10S473J
R 522		RS1/10S473J
R 523		RS1/10S472J
R 524		RS1/10S472J
R 525		RS1/10S222J
R 526		RS1/10S223J
R 601		RS1/10S473J
R 602		RS1/10S473J
R 603		RS1/10S473J
R 604		RS1/10S473J
R 605		RS1/10S473J
R 606		RS1/10S473J
R 607		RS1/10S473J
R 608		RS1/10S221J
R 609		RS1/10S682J
R 610		RA4C221J
R 611		RS1/10S682J
R 613		RS1/10S682J
R 615		RS1/10S682J
R 617		RA4C681J
R 623		RS1/10S473J
R 624		RS1/10S102J
R 625		RS1/10S202J
R 626		RS1/10S473J
R 627		RS1/10S473J
R 628		RS1/10S473J
R 629		RS1/10S473J
R 630		RS1/10S222J
R 631		RS1/10S473J
R 633		RS1/10S473J
R 635		RS1/10S473J
R 637		RS1/10S393J
R 651		RS1/10S681J
R 652		RS1/10S102J
R 653		RS1/10S102J
R 654		RS1/10S102J
R 662		RS1/10S473J
R 663		RS1/10S222J
R 668		RS1/10S103J
R 669		RS1/10S203J
R 670		RS1/10S222J
R 671		RS1/10S473J
R 672		RS1/10S222J
R 673		RS1/10S473J
R 674		RS1/10S473J
R 701		RS1/10S681J
R 702		RS1/10S681J
R 703		RS1/10S0R0J
R 704		RS1/10S105J
R 705		RS1/10S681J
R 706		RS1/10S0R0J
R 710		RS1/10S473J
R 711		RA3C681J
R 713		RS1/10S473J
R 714		RA4C473J
R 751		RS1/10S473J
R 752		RS1/10S473J
R 753		RS1/10S473J
R 802		RS1/8S222J
R 804		RS1/8S472J
R 806		RS1/8S472J
R 808		RS1/10S472J
R 809		RS1/10S472J
R 810		RS2PMF100J
R 811		RD1/4PU471J
R 812		RS1/10S103J
R 813		RS1/10S224J
R 814		RS1/10S222J
R 815		RD1/4PU102J
R 816		RS1/10S391J
R 817		RS1/10S752J
R 818		RS1/10S104J
R 819		RS2P300JL
R 851		RS1/8S331J
R 865		RS1/10S103J
R 866		RS1/10S102J
R 867		RS1/10S473J
R 868		RS1/10S473J
R 869		RS1/10S473J
R 911		RS1/10S332J
R 912		RS1/10S101J
R 921		RS1/10S103J
R 922		RS1/10S473J
R 923		RS1/10S103J
R 924		RS1/10S103J
R 925		RS1/10S473J
R 926		RS1/10S472J
R 931		RS1/10S103J

=====Circuit Symbol and No.	Part Name=====	Part No.
R 941		RS1/10S102J
R 942		RS1/10S822J
R 943		RS1/8S471J
R 944		RS1/10S473J
R 951		RD1/4PU221J
R 952		RD1/4PU301J
R 953		RS1/10S1R0J
R 954		RD1/4PU331J
R 955		RD1/4PU331J
R 956		RS1/8S472J
R 957		RD1/4PU102J
R 958		RS1/10S472J
R 959		RD1/4PU102J
R 960		RS1/10S472J
R 961		RS1/10S103J
R 962		RS1/10S473J
R 963		RS1/10S473J
R 971		RD1/4PU221J
R 972		RS1/10S221J
R 973		RS1/10S472J
R 974		RS1/8S122J
CAPACITORS		
C 103		CEJA1R0M50
C 104		CEJA1R0M50
C 105		CEJA1R0M50
C 106		CEJA1R0M50
C 107		CEJA100M16
C 108		CKSQYB473K25
C 109		CKSQYB104K16
C 131		CEJA4R7M35
C 132		CEJA4R7M35
C 133		CKSQYB473K25
C 134		CKSQYB473K25
C 135		CEJA4R7M35
C 136		CEJA4R7M35
C 137		CEJA4R7M35
C 138		CEJA4R7M35
C 151		CKSQYB104K16
C 152		CEAS470M10
C 153		CEJANP100M10
C 154		CEJANP100M10
C 155		CKSQYB822K50
C 156		CKSQYB822K50
C 157		CEJA1R0M50
C 158		CEJA1R0M50
C 159		CKSQYB183K25
C 160		CKSQYB183K25
C 161		CKSQYB102K50
C 162		CKSQYB102K50
C 163		CEJANP2R2M35
C 164		CEJANP2R2M35
C 165		CKSQYB333K25
C 166		CKSQYB333K25
C 167		CEJA220M6R3
C 168		CEJA2R2M50
C 169		CKSQYB104K16
C 201		CKSYB224K16
C 202		CKSYB224K16
C 203		CKSYB224K16
C 204		CKSYB224K16
C 205		CEHAR010M50
C 206	3300µF/16V	CCH1163
C 207		CKSQYB103K50
C 208		CEHAR100M16
C 209		CKSYB105K16
C 210		CEHAR330M10
C 251		CEJA4R7M35

=====Circuit Symbol and No.	Part Name=====	Part No.
C 252		CEJA4R7M35
C 253		CEJA4R7M35
C 254		CEJA4R7M35
C 255		CKSQYB221K50
C 256		CKSQYB221K50
C 257		CKSQYB221K50
C 258		CKSQYB221K50
C 301		CEJA3R3M50
C 302		CEJA3R3M50
C 501		CKSQYB223K25
C 502		CKSQYB223K25
C 503		CKSQYB103K50
C 504		CKSQYB103K50
C 505		CKSQYB103K50
C 506		CKSQYB473K25
C 507		CKSQYB102K50
C 509		CKLSR473K16
C 510		CKSQYB103K50
C 512		CEJA100M16
C 513		CKSQYB103K50
C 514		CCSQCH101J50
C 515		CCSQCH101J50
C 516		CKSQYB103K50
C 518	4.7µF/16V	CCH1250
C 519		CKSQYB103K50
C 520		CCSQCH150J50
C 521		CCSQCH150J50
C 522		CKSQYB223K25
C 603		CEJA100M16
C 604		CKSQYB103K50
C 605		CCSQCH101J50
C 606		CCSQCH101J50
C 607		CASA1R0M16
C 609		CCSQCH101J50
C 661		CCSQCH101J50
C 662		CEJA4R7M35
C 663		CKSQYB104K16
C 664		CKSQYB473K25
C 705		CKSYB473K16
C 706		CKSQYB473K25
C 708		CKSQYB104K16
C 751		CEJA100M16
C 752		CKSQYB103K50
C 753		CKSYB103K50
C 801		CKSYB104K16
C 802		CCSQCH101J50
C 803		CEHAR100M16
C 804		CKSQYB103K50
C 805		CEHAR100M16
C 806		CKSQYB103K50
C 807		CKSQYB333K25
C 808		CKSQYB333K25
C 809		CEJANP4R7M16
C 858		CKSQYB473K25
C 901		CKSQYB103K50
C 911		CKSQYB103K50
C 912	0.22F/5.5V	CCL1037
C 913		CKSQYB472K50
C 914		CEHAQ102M16
C 915		CEAS470M10
C 921		CKSYB105K16
C 922		CKSYB102K50
C 931		CKSQYB473K25
C 941		CEJA2R2M50
C 951		CKSQYB103K50

=====Circuit Symbol and No.	Part Name=====	Part No.
C 952		CEHAQ101M16
C 953		CKSQYB103K50
C 954	330µF/10V	CCH1181
C 971		CKSQYB473K25
C 972		CKSQYB102K50
C 973		CEAS101M10

C Unit Number : CWX2069(DEH-P86DHR)
Unit Number : CWX2070(DEH-P76DH)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1901	IC	PD6197A
IC	1902	IC	RS-140
D	1901	Diode	DA204K
D	1902	Diode	DA204K
D	1903	LED	CL220PGC
D	1904	LED	CL220PGC
D	1905	LED	CL220PGC
D	1906	LED	CL170PGCD
D	1907	LED	CL170PGCD
D	1908	LED	CL170PGCD
L	1901	Inductor	LCTB1R0K2125
X	1901	Ceramic Resonator 4.9152MHz	CSS1449
S	1901	Switch	CSG1085
S	1902	Switch	CSG1084
S	1903	Switch	CSG1085
S	1904	Switch	CSG1085
S	1905	Switch	CSG1085
S	1906	Switch	CSG1085
S	1907	Switch	CSG1085
S	1908	Switch	CSG1085
S	1909	Switch	CSG1061
S	1910	Switch	CSG1061
S	1911	Switch	CSG1084
S	1912	Switch	CSG1084
S	1913	Switch	CSG1084
S	1914	Switch	CSG1084
S	1915	Switch	CSG1084
S	1916	Switch	CSG1084
S	1917	Switch	CSG1085
S	1918	Switch	CSG1084
S	1919	Switch	CSG1084
S	1920	Switch	CSG1084
S	1921	Switch	CSG1086
		LCD(DEH-P86DHR)	CAW1389
		LCD(DEH-P76DH)	CAW1390
		EL	CEL1488

RESISTORS

R	1901	RS1/8S222J
R	1902	RS1/8S222J
R	1903	RS1/8S562J
R	1904	RS1/8S470J
R	1905	RS1/8S2R2J
R	1906	RS1/8S121J
R	1907	RS1/8S121J
R	1908	RS1/8S121J
R	1909	RS1/8S121J
R	1910	RS1/8S121J
R	1911	RS1/8S121J
R	1912	RS1/8S121J
R	1913	RS1/8S121J
R	1914	RS1/8S121J
R	1915	RS1/8S121J

=====Circuit Symbol and No.	Part Name=====	Part No.
R 1916		RS1/8S0R0J
R 1917		RS1/8S0R0J

CAPACITORS

C	1901	CKSQYB103K50
C	1902	CEV470M6R3
C	1903	CKSQYB104K16
C	1904	CKSQYB104K16
C	1905	CKSYB104K25
C	1906	CKSQYB104K16

D Unit Number :
Unit Name : Photo Unit

Q	1	Photo-transistor	CPT-230S-X
Q	2	Photo-transistor	CPT-230S-X

Miscellaneous Parts List

		Pickup Unit(SERVICE)	CXX1230
M	1	Motor Unit(Spindle)	CXA8912
M	2	CRG Motor Unit(Carriage)	CXB3043
M	3	Load Motor Unit(Loading)	CXA8702