Pioneer sound.vision.soul

Service Manual

ORDER NO.
CRT2862

AV RECEIVER/DVD PLAYER WITH 7.0 INCH DISPLAY

AVH-P7480DVD UC

COMPACT disc DIGITAL AUDIO

DVD VIDEO

● This service manual should be used together with the manual(s) listed below. For the parts numbers, adjustments, etc. which are not shown in this manual, refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
AVX-P7300DVD/UC	CRT2672		7 Inch Wide AV System Display/DVD Player Section
AVM-P8000R/UC	CRT2519		Audio Visual Master Unit Section
CX-954	CRT2670	MS2	DVD Mech. Module:Circuit Description, Mech.Description, Disassembly

EXPLODED VIEWS AND PARTS LIST(AVX-P7300DVD/UC)

EXTERIOR(1/3)(AVX-P7300DVD/UC)(Page 6)

● **EXTERIOR SECTION PARTS LIST**

Mark No.	Description	Part No. AVX-P7300DVD/UC	Part No. AVH-P7480DVD/UC
55	Remote Control Unit	CXB7969	Not used
56	Cover	CZN5357	Not used

EXTERIOR(AVM-P8000R/UC)(Page 6)

● **EXTERIOR SECTION PARTS LIST**

Mark No.	Description	Part No. AVM-P8000R/UC	Part No. AVH-P7480DVD/UC
74	Remote Control Assy	CXB6029	CXB9291
75	Cover	CZN5357	CZN5434(Battery Cover)


PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER EUROPE NV Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© PIONEER CORPORATION 2002

K-ZZD. APR. 2002 Printed in Japan

EXPLODED VIEWS AND PARTS LIST

PACKING

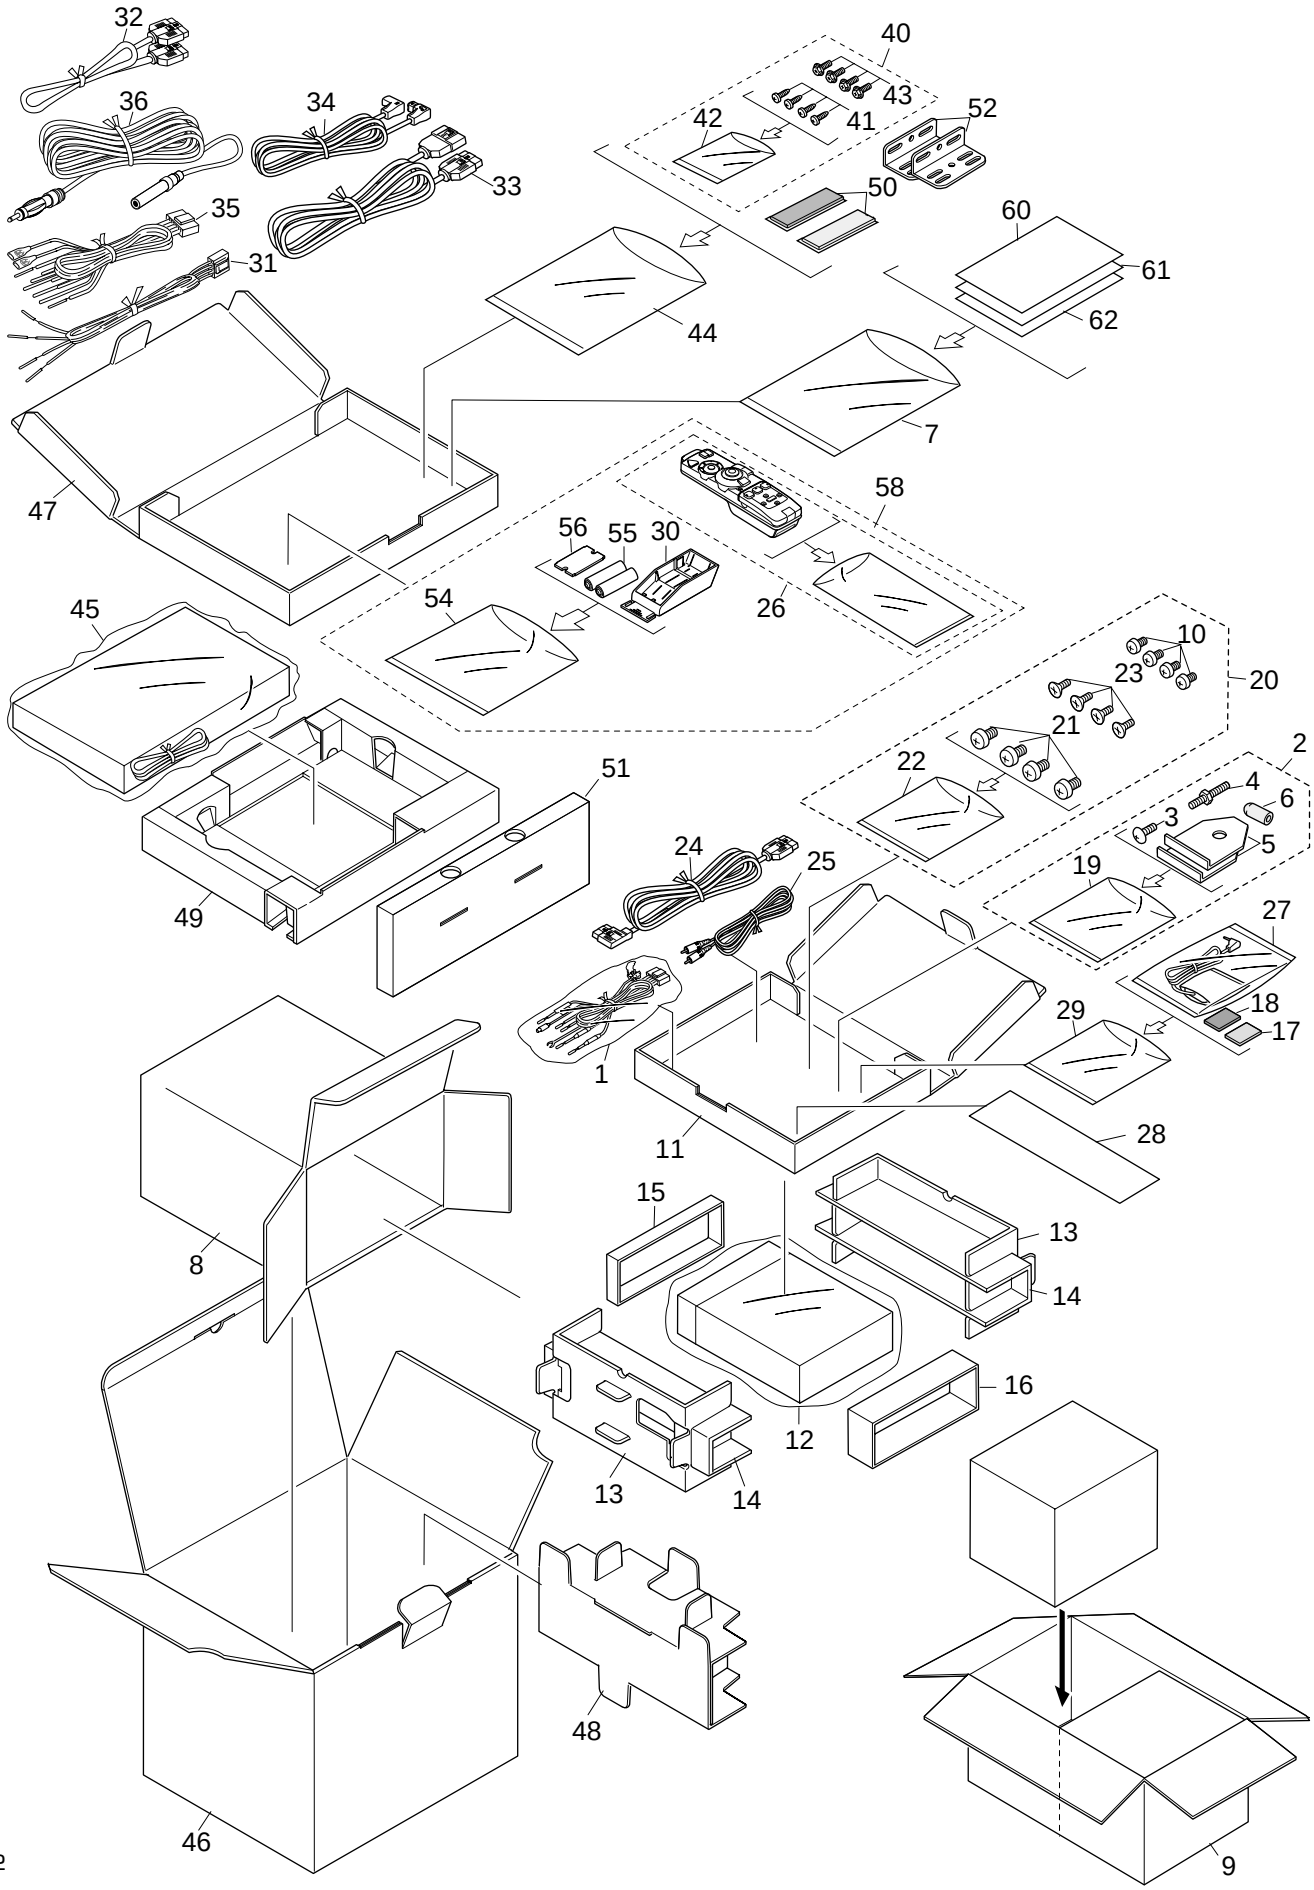

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

● PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE6668
	2	Accessory Assy	CEA2876
	3	Screw	BPZ20P060FMC
	4	Screw	CBA1002
	5	Bracket	CNC9383
	6	Bush	CNV1917
	7	Polyethylene Bag	CEG1116
	8	Sub Carton	CHG4729
	9	Contain Box	CHL4728
	10	Screw(M4x3)	CBA1468
	11	Sub Carton	CHA3172
	12	Polyethylene Bag	CEG1173
	13	Protector	CHP2445
	14	Protector	CHP2446
	15	Protector	CHP2385
	16	Protector	CHP2386
*	17	Fastener	CNM6544
*	18	Fastener	CNM6545
*	19	Polyethylene Bag	E36-615
	20	Screw Assy	CEA2927
	21	Screw	BMZ50P060FMC
*	22	Polyethylene Sheet	CNM4338
	23	Screw	CMZ50P060FMC
	24	Cord	CDE6570
	25	Cord Assy	CDE6376
	26	Remote Control Assy	CXB9291
	27	Speaker Unit	CXB6699
	28	Sheet	CNM7244
	29	Polyethylene Bag	CEG1116
	30	Holder	CNS5606
	31	Cord Assy	CDE5905
	32	Cord Assy	CDE5906
	33	Cord Assy	CDE5908
	34	Cord Assy	CDE6016
	35	Cord Assy	CDE6369
	36	Antenna Cord	CDH1265
	37	•••••	
	38	•••••	
	39	•••••	
*	40	Screw Assy	CEA2440
	41	Screw	BNC40P120FZK
*	42	Polyethylene Bag	CEG1158
	43	Screw	HMF40P080FZK
*	44	Polyethylene Bag	CEG1101
	45	Polyethylene Bag	CEG1181
	46	Carton	CHG4728
	47	Sub Carton	CHG4089
	48	Protector	CHP2572
	49	Protector	CHP2280
	50	Fastener	CNM3728
	51	Spacer	CHW1929
	52	Angle	CNB2351
	53	•••••	
	54	Polyethylene Bag	CEG1011
	55	Battery	CEX1021
	56	Sheet	CNM6370
	57	•••••	
	58	Accessory Assy	CEA3302
	59	•••••	
	60	Owner's Manual	CRB1766
	61	Installation Manual	CRB1767
*	62	Card	ARY1048

● Owner's Manual, Installation Manual

Model	Part No.	Language
AVH-P7480DVD/UC	CRB1766	English
	CRB1767	English