
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

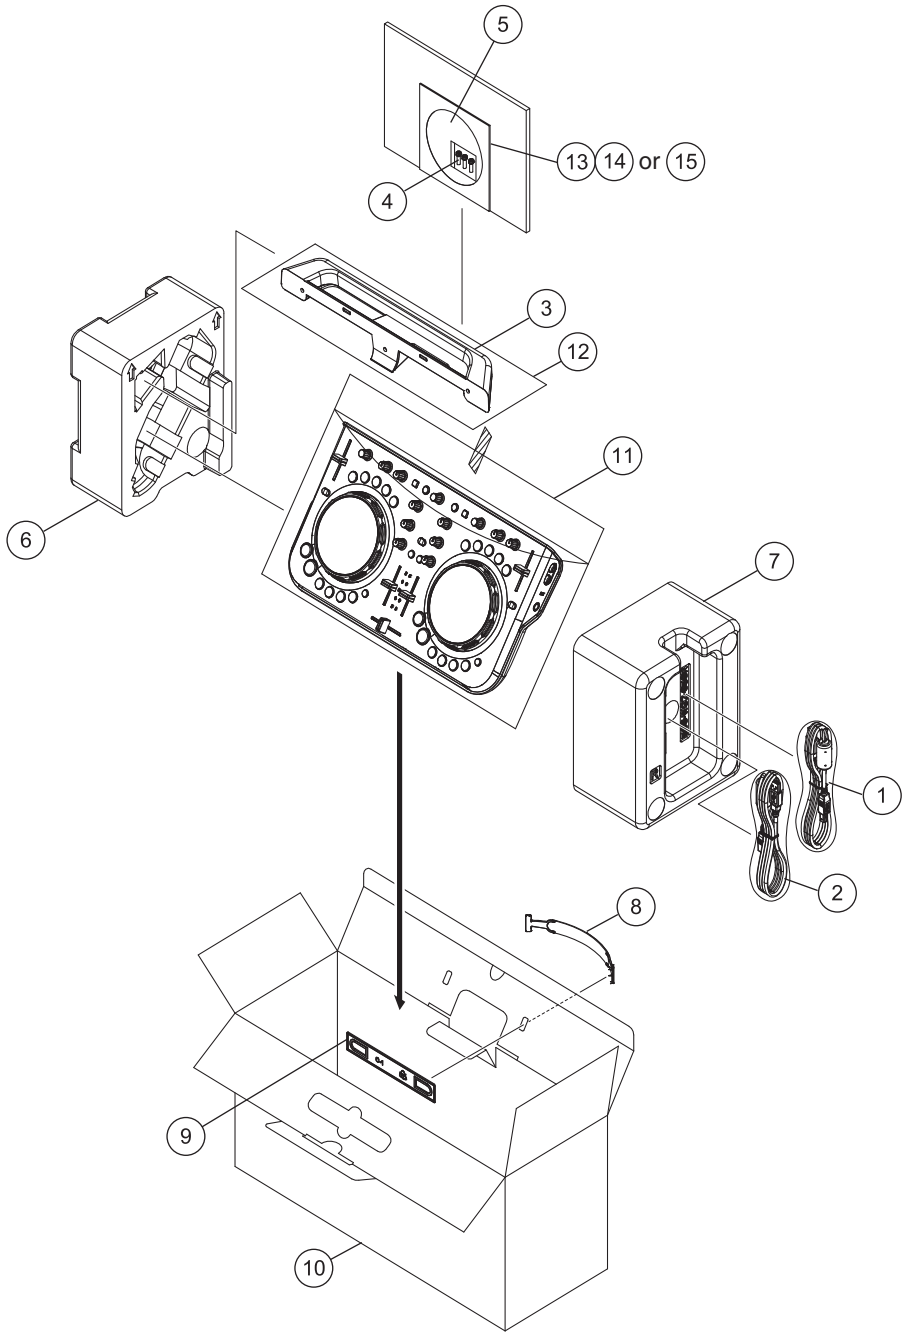

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	USB Cable (L = 1500 mm)	408-SUB-132
	2	iPhone/iPad Connection Cable (Lightning)	408-WG2-129
	3	iPhone/iPad stand	See Contrast table (2)
	4	Stand fixing screws	See Contrast table (2)
	5	VIRTUAL DJ LE software/ driver software/ operating instructions CD-ROM	••••• (To Be Determined)
	6	Polyfoam L	506-WG2-658L
	7	Polyfoam R	506-WG2-658R
	8	Handle	100-DDJLE-3012
	9	Handle Base	100-DDJLE-3013
	10	Gift Box	See Contrast table (2)
	11	Soft Bag	509-DDJLE-318
	12	Soft Bag For Support	509-WG2-327
	13	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
	14	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
	15	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-WEGO2-K/XE5, XE25, /XECN5, DDJ-WEGO2-R/XE5, XE25, XECN5, DDJ-WEGO2-W/XE5, XE25 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO2-K /XE5, XE25	DDJ-WEGO2-K /XECN5	DDJ-WEGO2-R /XE5, XE25	DDJ-WEGO2-R /XECN5	DDJ-WEGO2-W /XE5, XE25	DDJ-WEGO2-W /XECN5
	3	iPhone/iPad stand	701-WG2K-5403	701-WG2K-5403	701-WG2R-5403	701-WG2R-5403	701-WG2-5403	701-WG2-5403
	4	Stand fixing screws	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745Z	602-SWISO415-745Z
	10	Gift Box	507-WG2KA-3447B	507-WG2KB-3447A	507-WG2RA-3447B	507-WG2RB-3447A	507-WG2WA-3447B	507-WG2WB-3447A
	13	Read Before Use (Important)/ Quick Start Guide (En, Fe, De, It, Nl)	502-WG2A-3328A	Not used	502-WG2A-3328A	Not used	502-WG2A-3328A	Not used
	14	Read Before Use (Important)/ Quick Start Guide (Es, Pt, Ru, Ko, Ja)	502-WG2A-3329A	Not used	502-WG2A-3329A	Not used	502-WG2A-3329A	Not used
	15	Read Before Use (Important)/ Quick Start Guide (Zhcn)	Not used	502-WG2B-3330	Not used	502-WG2B-3330	Not used	502-WG2B-3330

9.2 EXTERIOR SECTION

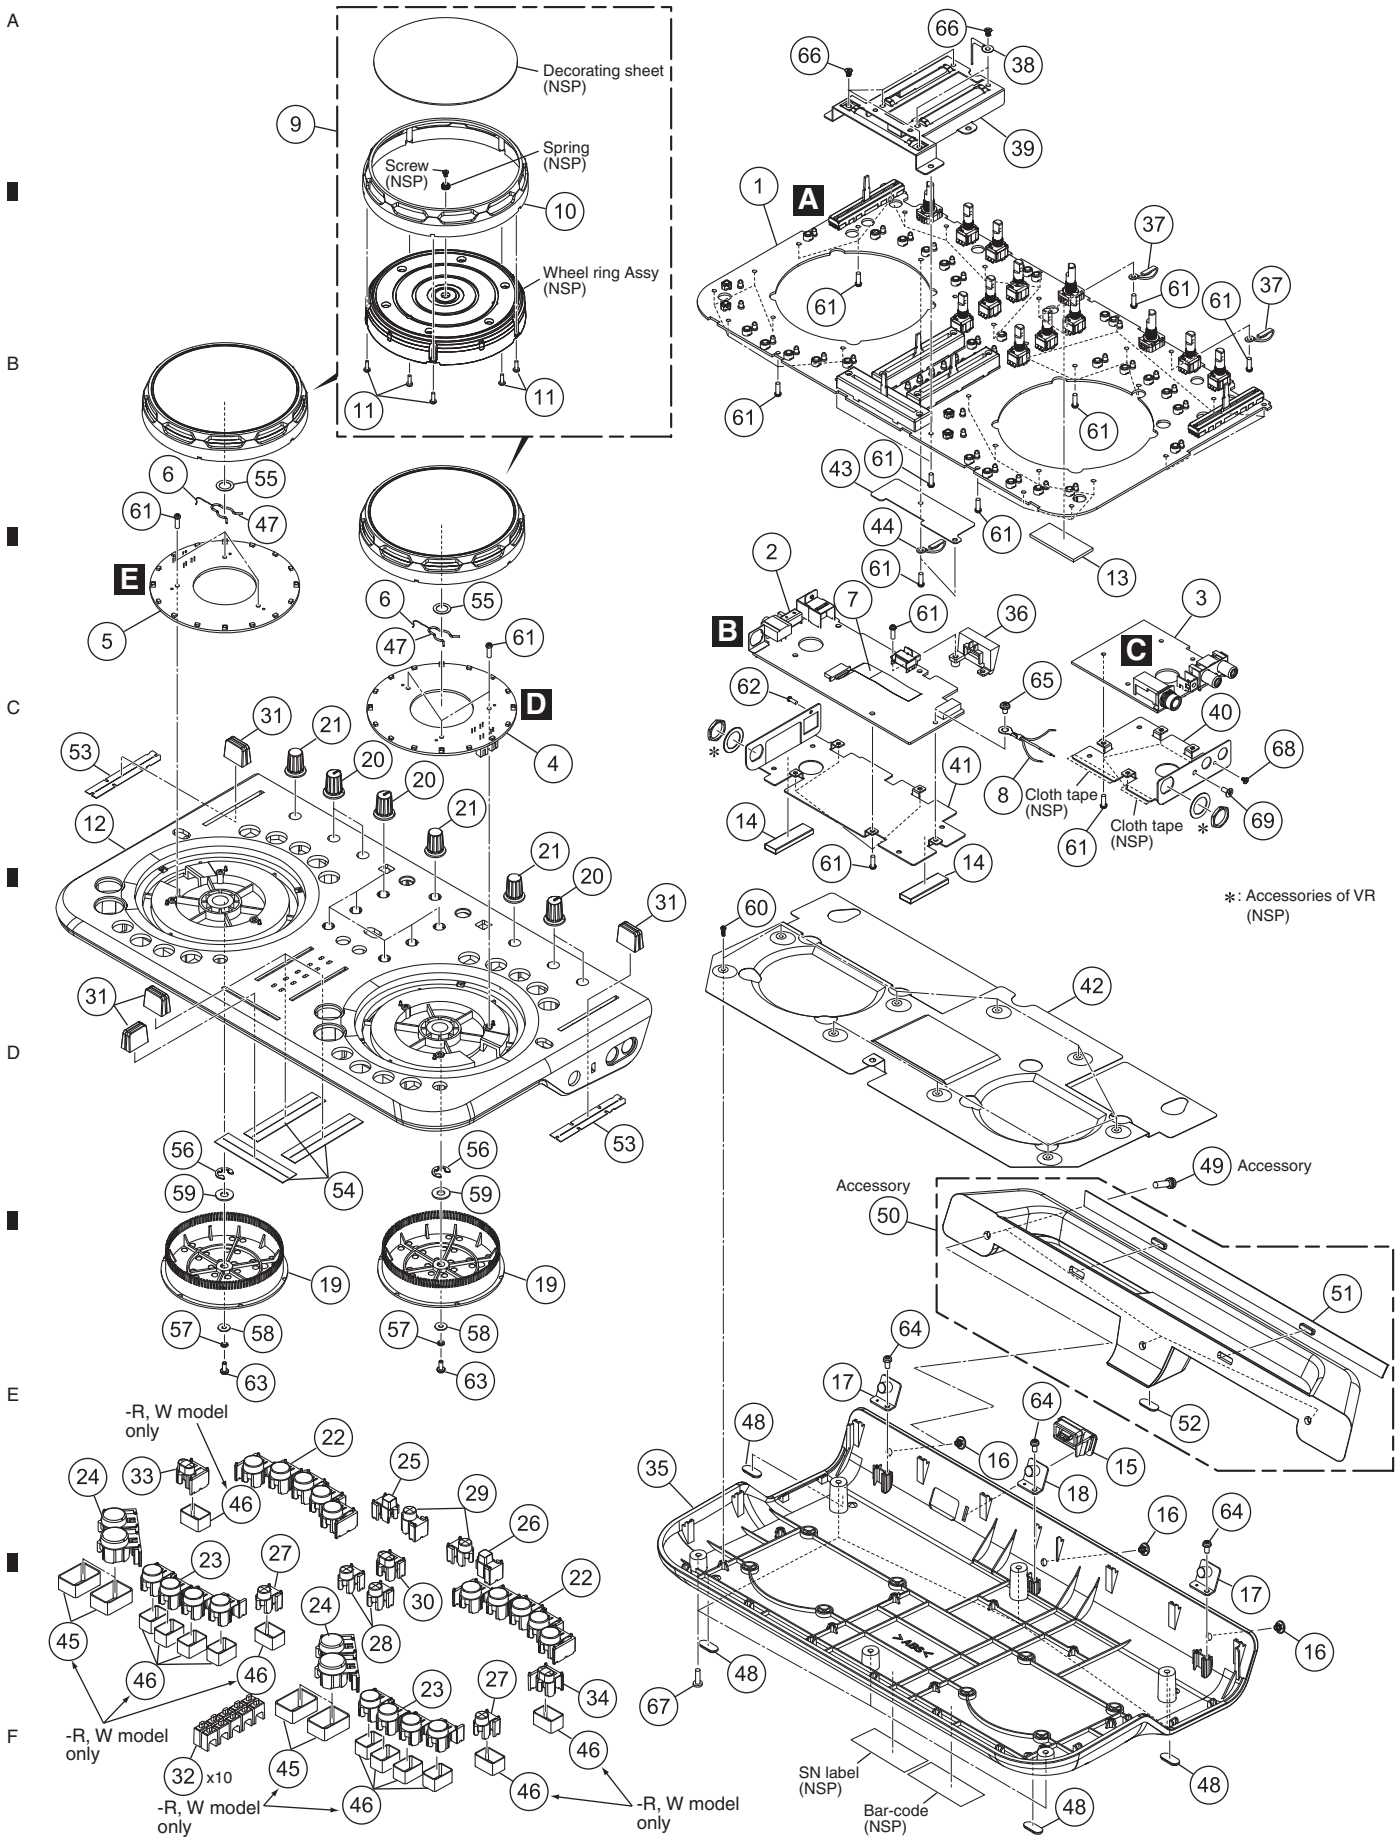

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CONTROL PCB Assy	704-WG2-A604
	2	IO PCB Assy	704-WG2-A607
	3	MASTER PCB Assy	704-WG2-A608
	4	WHEEL (R) PCB Assy	704-WG2-A609
	5	WHEEL (L) PCB Assy	704-WG2-A610
	6	1P Lead Wire	406-DDJLE-1227
	7	11P 1.0 FFC Cable	406-WG2-1261
	8	3P Ground Wire	406-WG2-1263
	9	1..Wheel Assy	See Contrast table (2)
	10	2..Wheel Frame	See Contrast table (2)
	11	2..Screw	See Contrast table (2)
	12	Chassis Assy	See Contrast table (2)
	13	Spacer	612-DDJLE-447
	14	Sponge	612-PDJ22-428
	15	Protected Cover	See Contrast table (2)
	16	Plug	See Contrast table (2)
	17	Fixed Base Assy	703-DDJLE-1376
	18	Fixed Plate Assy	703-WG2-1391
	19	Wheel Tooth	100-DDJLE-2943
	20	Jog Tuning Knob	See Contrast table (2)
	21	Rotate Knob	See Contrast table (2)
	22	FX Knob	See Contrast table (2)
	23	Hot Cue Knob	See Contrast table (2)
	24	Playcue Knob	See Contrast table (2)
	25	Square Knob	100-DDJLE-2949
	26	Square Knob	100-DDJLEA-2949
	27	Circular Knob	See Contrast table (2)
	28	Circular Knob	See Contrast table (2)
	29	Circular Knob	See Contrast table (2)
	30	Elliptic Knob	See Contrast table (2)
	31	Push Knob	See Contrast table (2)
	32	LED Lens	100-DDJLE-2953
	33	Left Knob	See Contrast table (2)
	34	Right Knob	See Contrast table (2)
	35	Base	See Contrast table (2)
	36	Little Frame Plastic	See Contrast table (2)
	37	Locking Cable Clip	300-HM510B-224
	38	Locking Cable Clip	300-HM510B-224A
	39	VR Fixed Plate	300-DDJLE-2029A
	40	R Output Fixed Plate	300-DDJLE-2031
	41	L Output Fixed Plate	300-WG2-2099
	42	Ground Plate	300-WG2-2100
	43	Separate Sheet	501-WG2-2586
	44	Locking Cable Clip	504-HV3500K-033
	45	Anti-Dazzling Bag	See Contrast table (2)
	46	Anti-Dazzling Bag	See Contrast table (2)
	47	Clip	603-PROS2-256A
	48	Foot Pad	604-DDJLE-604
	49	Stand fixing screws	See Contrast table (2)
	50	1..iPhone/iPad stand	See Contrast table (2)
	51	2..Pad	See Contrast table (2)
	52	2..Foot Pad	604-WG2-642
	53	Cushion	612-DDJLE-441
	54	Cushion	612-202-220
	55	Pulley Washer	606-F200-003
	56	E Ring	606-DJ3000-105
	57	Washer	606-MCD810-204
	58	Washer	606-MCD810-205
	59	Washer	606-DDJLE-260
	60	Screw	602-M100-031
	61	Screw	602-SL24F-099
	62	Screw	602-HP1010K-181
	63	Screw	602-STR885-354
	64	Screw	602-LC58FA-371
	65	Screw	602-SA12-377
	66	Screw	602-SA12-414
	67	Screw	See Contrast table (2)
	68	Screw	602-STS2003-677
	69	Screw	602-ST306-728B

(2) CONTRAST TABLE

DDJ-WEGO2-K/XE5, XE25, /XECN5, DDJ-WEGO2-R/XE5, XE25, XECN5, DDJ-WEGO2-W/XE5, XE25 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-WEGO2-K /XE5, XE25	DDJ-WEGO2-K /XECN5	DDJ-WEGO2-R /XE5, XE25	DDJ-WEGO2-R /XECN5	DDJ-WEGO2-W /XE5, XE25	DDJ-WEGO2-W /XECN5
	9	Wheel Assy	701-WG2K-5349	701-WG2K-5349	701-WG2R-5349	701-WG2R-5349	701-WG2-5349	701-WG2-5349
	10	Wheel Frame	100-DDJLE-2942S	100-DDJLE-2942S	100-DDJLE-2942S	100-DDJLE-2942S	100-WG2-2942	100-WG2-2942
	11	Screw	602-PTB2006-733B	602-PTB2006-733B	602-PTB2006-733B	602-PTB2006-733B	602-PROS2-363	602-PROS2-363
	12	Chassis Assy	701-WG2K-5223	701-WG2K-5223	701-WG2R-5223	701-WG2R-5223	701-WG2-5223	701-WG2-5223
	15	Protected Cover	604-WG2K-624	604-WG2K-624	604-WG2R-624	604-WG2R-624	604-WG2-624	604-WG2-624
	16	Plug	604-DDJLEB-606	604-DDJLEB-606	604-WG2R-606	604-WG2R-606	604-WG2-606	604-WG2-606
	20	Jog Tuning Knob	100-DDJLE-2944	100-DDJLE-2944	100-DDJLE-2944	100-DDJLE-2944	100-WG2-2944	100-WG2-2944
	21	Rotate Knob	100-DDJLE-2945	100-DDJLE-2945	100-DDJLE-2945	100-DDJLE-2945	100-WG2-2945	100-WG2-2945
	22	FX Knob	100-WG2K-2946	100-WG2K-2946	100-WG2K-2946	100-WG2K-2946	100-WG2-2946	100-WG2-2946
	23	Hot Cue Knob	100-DDJLE-2947	100-DDJLE-2947	100-DDJLE-2947	100-DDJLE-2947	100-WG2-2947	100-WG2-2947
	24	Playcue Knob	100-WG2K-2948	100-WG2K-2948	100-WG2K-2948	100-WG2K-2948	100-DDJLE-2948	100-DDJLE-2948
	27	Circular Knob	100-DDJLE-2950	100-DDJLE-2950	100-DDJLE-2950	100-DDJLE-2950	100-WG2-2950	100-WG2-2950
	28	Circular Knob	100-DDJLEA-2950	100-DDJLEA-2950	100-DDJLEA-2950	100-DDJLEA-2950	100-WG2A-2950	100-WG2A-2950
	29	Circular Knob	100-DDJLEB-2950	100-DDJLEB-2950	100-DDJLEB-2950	100-DDJLEB-2950	100-WG2B-2950S	100-WG2B-2950S
	30	Elliptic Knob	100-DDJLE-2951	100-DDJLE-2951	100-DDJLE-2951	100-DDJLE-2951	100-WG2-2951	100-WG2-2951
	31	Push Knob	100-DDJLE-2952	100-DDJLE-2952	100-DDJLE-2952	100-DDJLE-2952	100-WG2-2952	100-WG2-2952
	33	Left Knob	100-DDJLE-2954	100-DDJLE-2954	100-DDJLE-2954	100-DDJLE-2954	100-WG2-2954	100-WG2-2954
	34	Right Knob	100-DDJLE-2955	100-DDJLE-2955	100-DDJLE-2955	100-DDJLE-2955	100-WG2-2955	100-WG2-2955
	35	Base	100-WG2KA-3064A	100-WG2KB-3064	100-WG2RA-3064A	100-WG2RB-3064	100-WG2WA-3064A	100-WG2WB-3064
	36	Little Frame Plastic	100-WG2K-3065	100-WG2K-3065	100-WG2K-3065	100-WG2K-3065	100-WG2-3065	100-WG2-3065
	45	Anti-Dazzling Bag	Not used	Not used	505-80DSP-239	505-80DSP-239	505-80DSP-239	505-80DSP-239
	46	Anti-Dazzling Bag	Not used	Not used	505-80DSP-240	505-80DSP-240	505-80DSP-240	505-80DSP-240
	49	Stand fixing screws	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745B	602-SWISO415-745Z	602-SWISO415-745Z
	50	iPhone/iPad stand	701-WG2K-5403	701-WG2K-5403	701-WG2R-5403	701-WG2R-5403	701-WG2-5403	701-WG2-5403
	51	Pad	604-WG2K-625	604-WG2K-625	604-WG2R-625	604-WG2R-625	604-WG2-625	604-WG2-625
	67	Screw	602-PTB3010-674B	602-PTB3010-674B	602-PTB3010-674B	602-PTB3010-674B	602-PTB3010-674Z	602-PTB3010-674Z

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *Although the cables that are directly mounted on each PCB Assy are listed individually as electrical parts of the corresponding PCB Assy in the parts list, those cables are included with each PCB Assy for service when it is supplied.*

Mark	No.	Description	Part No.

LIST OF ASSEMBLIES

	CONTROL PCB ASSY	704-WG2-A604
	IO PCB ASSY	704-WG2-A607
	MASTER PCB ASSY	704-WG2-A608
	WHEEL (R) PCB ASSY	704-WG2-A609
	WHEEL (L) PCB ASSY	704-WG2-A610

Mark	No.	Description	Part No.

A CONTROL PCB ASSY

SEMICONDUCTORS

	IC 502	417-DDJLE-1078
	IC 601-608	417-DDJLE-1080
	IC 610,611	417-RMP3-936
	Q 605,606	416-CTB200-166
	Q 601-604,801,803,805,807,809,811,813	416-HDJ2460-234
	Q 817,819,821,825,827,829,831,833,835	416-HDJ2460-234
	Q 837,841,843,845	416-HDJ2460-234
	D 601-636	414-CD1000-075A
	ZD 603	414-DDJLE-332
	D 662-665	414-DJ1100G-207
	D 601,602,654-657,660	414-RMP3-285
	D 658,661,666,667,670,671	414-UDJ200-284
	D 801,803,805,807,809,811,813,816,817	410-DJ5000-253T
	D 819,821,823-825,827	410-DJ5000-253T
	D 829,831,833,835,837,840,841,843,845	410-DJ5000-253T
	D 847,848,849,851-861	410-DJ5000-253T
	D 815,839	410-HDJ2000-162T

MISCELLANEOUS

	SW632-634 ENCODER	403-DDJLE-418
	W01A TO 01B,W02A TO W02B WIRE HARNESS	404-DDJLE-3721
	604 WIRE HARNESS	404-DDJLE-3722
	CN 01A,02A CONNECTOR	404-PDJ33-3584
	CHASSIS 1 WIRE	406-DDJLE-1229
	CHASSIS 2 TO G5 1P WIRE	406-M207-1028
	W3A TO W3B WIRE	406-DDJLE-1237
	W4A TO W4B WIRE	406-H464-020
	G1A TO G1B WIRE	406-MX200-1110
	IS/ISA/AG\TO IS/ISA 3P-2P LEAD WIRE	406-WG2-1262
	L 601-605,610,616-618 COIL	415-HT8015-040
	L 607,613-615,619 MICRO INDUCTOR	415-RCC955A-094
	L 606 INDUCTOR	415-HMD5000-097
	SW606,607,615,616 TACT SW	403-DDJLE-416
	SW601-605,608-614,617-631,635,636 SWITCH	403-MC2-383

RESISTORS

	VR 618	418-DDJLE-690
	VR 619,620	418-DDJLE-691
	VR 601,609-611,613-615	418-MC1000-667
	VR 616,617	418-PDJ33-672
	VR 602,603,621	418-SINN7-606
	R 885,886,889	412-900-975
	R 801-814,817-822,825-838,841-846	412-900-994
	R 620,621	412-3113-048
	R 892-897	412-3113-058L
	R 614,676	412-3113-078
	R 631-635	412-HV3363K-349

CAPACITORS

	C 644	413-3113-035
	C 693	413-3113-045
	C 611	413-MC6000-1191
	C 628	413-MEP4-1245
	C 513,601,605,612,613,626,627,635-643	413-DCM280-773
	C 645,646,668,675,679,682,696,697	413-DCM280-773
	C 604	413-MAIE-1211
	C 692,698	413-MC6000-1180

B IO PCB ASSY

SEMICONDUCTORS

⚠	IC 1	417-200USB-1071
	IC 3	417-9000-740
	IC 302	417-DDJLE-1079
	IC 200,300	417-HP400U-995
⚠	IC 10	417-PDJ33-1045
	IC 201,301	417-ST150-599
⚠	IC 6	417-U101-497
	Q 203,204	416-3000-378
	Q 21	416-DFX1-201
	Q 907i	416-HDJ2460-234
	Q 6	416-HDJ9700-210
	Q 7	416-S300-327
	Q 10,905i	416-UDJ200-347
	D 5,50	414-007USB-148
	D 2,3,4,6,7	414-CD1000-075A
	D 1	414-DDJLE-348
	D 902i,904i	414-DJ1100G-207
	ZD 500,901,902	414-RMP3-285
	D 505,506	414-UDJ200-284

MISCELLANEOUS

	JK 302 JACK GROUND PLATE	300-300-1171
	JK 501 USB GROUND PLATE	300-DDJLE-2071
	JK 901 FIXED PLATE	300-WG2-2103
	SW01 SLIDE SW	403-DV300-5007
	CN 501 7P SOCKET	404-HMD5000-785A
	L 301,302 INDUCTANCE	415-USOLOPA-342
	JK 501 USB JACK	420-007USB-150
	JK 302 3P HEADPHONE JACK	420-CDMIX1-086
	JK 301 HEADPHONE JACK	420-HDJ7100-063

Mark	No.	Description	Part No.
	JK 901i	USB CONNECTOR	420-WG2-385
	X 500	CRYSTAL (6 MHz)	427-S1-143
	CN 605A	11P 1.0 FFC SOCKET	404-500C-3711
	L 35,61-64,203-205,305,500	CHIP BEAD	415-1300-240A
	L 4	INDUCTOR	415-DDJLE-407
	L 902,903	COMMON MODE FILTERS	415-FU800-305
	L 201-304	TDK CHIP BEAD	415-FU801-316
	L 50	POWER CHOKE	415-MC6000-356
	L 3	INDUCTOR	415-WG2-425
	L 501	CHIP BEAD	415-WG2-432
⚠	F 500	CHIP FUSE (1.5 A/63 V,1206)	422-80-065
	L 1,2	BEAD	415-DCM370E3-134
	RESISTORS		
	R 295,395		412-KC220-132
	R 70,71		412-KM501-293
	R 1		412-900-994
	R 502,503		412-CDVD2001-554
	R 515		412-PDJ1-1291
	R 207,208,305,306		412-X1100-1368
	CAPACITORS		
	C 343		413-MC6000-1191
	C 201,301		413-MEP4-1245
	C 1,6,61,64,71,73,209,210,313,314,501		413-DCM280-773
	C 503,504,506-508,511,512,514,601-604		413-DCM280-773
	C 5903i,905i,906i		413-DCM280-773
	C 8,17,70,76,322		413-MC6000-1180
	C 319,321		413-U5000-1005
	C 200,303		413-007USB-828
	C 527		413-1430-071
	C 4		413-810-920
	C 202,241,302,341		413-900-835
	C 63		413-CDMIX2-631
	C 317,366		413-DV300-5156
	C 3		413-HT801K-192
	C 525		413-QSPAND-632
	C 205,206,253,254,305,306,311,312		413-SPPW3-235

C MASTER PCB ASSY

Mark	No.	Description	Part No.
	SEMICONDUCTORS		
	IC 100,101,202		417-ST150-599
	Q 201,202,205,206		416-3000-378
	MISCELLANEOUS		
	JK 101	JACK GROUND PLATE	300-300-1171
	JK 102	GROUND PLATE	300-33-1917
		FIXED PLATE	300-4500-2010A
	CN 604	3P SOCKET	404-HP1010K-259A
	JK 102	2P RCA JACK	420-100U-256
	JK 101	MIC JACK	420-Q3433-107
	W 501	CONNECTOR WIRE	404-WG2-3806
	CAPACITORS		
	C 103		413-SP2U-1136
	C 109-112,118,217,218		413-DCM280-773
	C 78,79		413-DV300-5155
	C 213,214		413-HT801K-191
	C 115,223,224		413-SPPW3-235
	C 104		413-SPPW3-236

D WHEEL (R) PCB ASSY

Mark	No.	Description	Part No.
	SEMICONDUCTORS		
	IC 615-617		417-DDJLE-1080
	D 651,652		417-HDJ2000-411
	MISCELLANEOUS		
	CN 02B	FFC CABLE	406-DDJLE-1226
	CAPACITORS		
	C 904-906		413-DCM280-773
	C 992		413-U5000-1005

D WHEEL (L) PCB ASSY

Mark	No.	Description	Part No.
	SEMICONDUCTORS		
	IC 612-614		417-DDJLE-1080
	D 653,658		417-HDJ2000-411
	MISCELLANEOUS		
	CN 01B	FFC CABLE	406-DDJLE-1226
	CAPACITORS		
	C 901-903		413-DCM280-773
	C 991		413-U5000-1005