
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

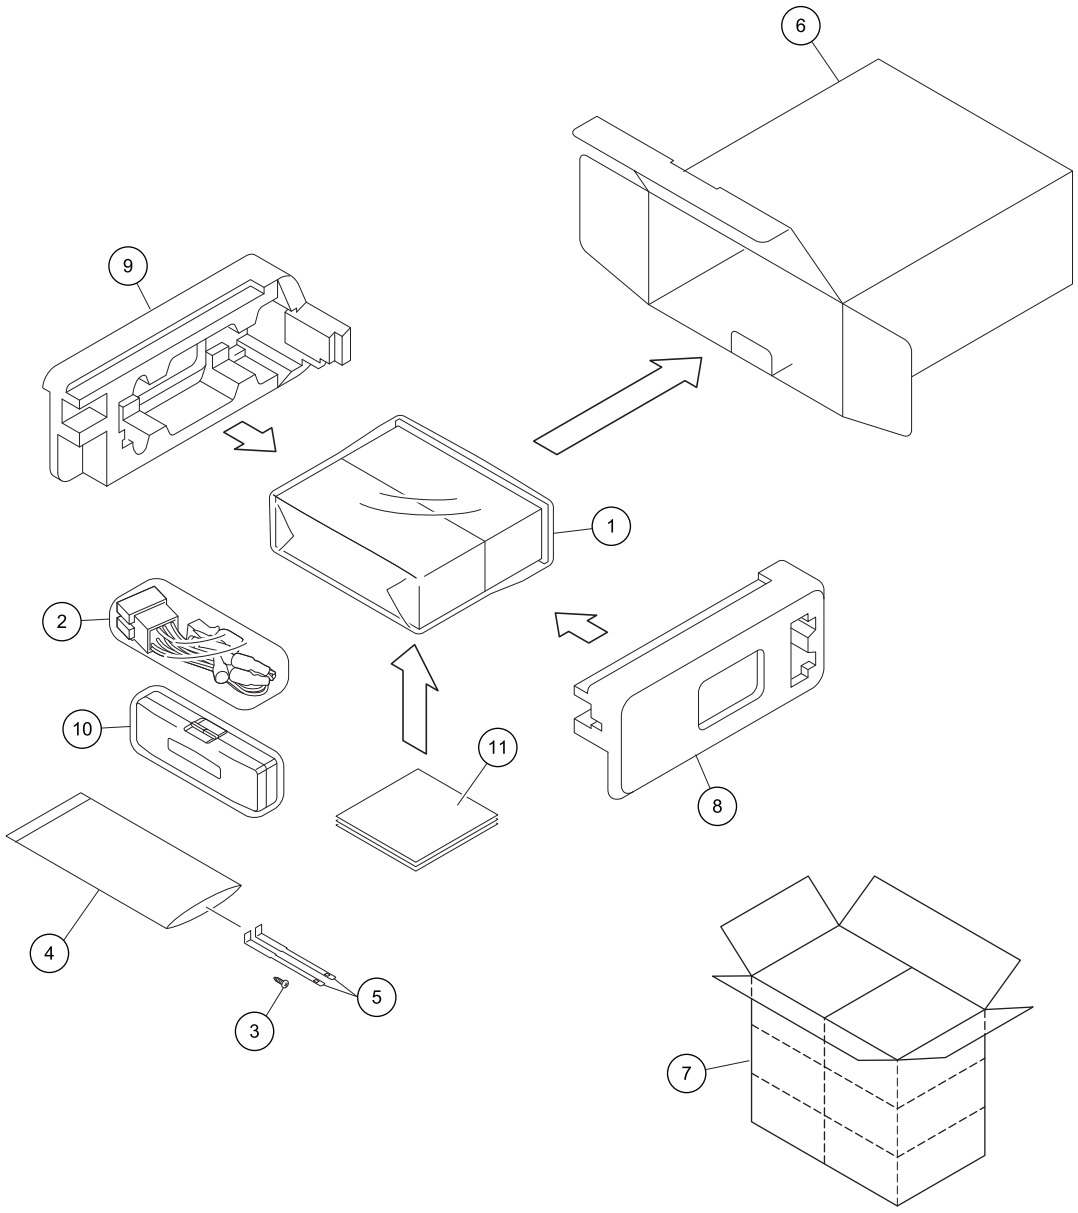

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	QEG3001
	2	Cord Assy	See Contrast table (2)
	3	Screw	BPZ20P060FTC
	4	Polyethylene Bag	CEG1160
	5	Handle	CND3707
	6	Unit Box	See Contrast table (2)
	7	Contain Box	See Contrast table (2)
	8	Protector	YHP5069
	9	Protector	YHP5070
	10	Case Assy	YXB5009
*	11-1	Warranty Card	See Contrast table (2)
	11-2	Owner's Manual	See Contrast table (2)
	11-3	Installation Manual	See Contrast table (2)

(2) CONTRAST TABLE


DEH-2200UB/XSEW5, DEH-2200UBB/XSEW5, DEH-2220UB/XSEW5 and DEH-2210UB/XSUR are constructed the same except for the following:

Mark	No.	Description	DEH-2200UB/XSEW5	DEH-2200UBB/XSEW5	DEH-2220UB/XSEW5	DEH-2210UB/XSUR
	2	Cord Assy	YDP5037	YDP5037	YDP5037	YDP5041
	6	Unit Box	YHG5540	YHG5542	YHG5541	YHG5544
	7	Contain Box	YHL5540	YHL5542	YHL5541	YHL5544
*	11-1	Warranty Card	CRY1279	CRY1279	CRY1279	YRY5003
	11-2	Owner's Manual	YRD5303	YRD5303	YRD5303	YRB5127
	11-3	Installation Manual	YRD5304	YRD5304	YRD5304	Not used

Owner's Manual,Installation Manual

Part No.	Language
YRD5303	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
YRD5304	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
YRB5127	Russian

9.2 EXTERIOR(1)

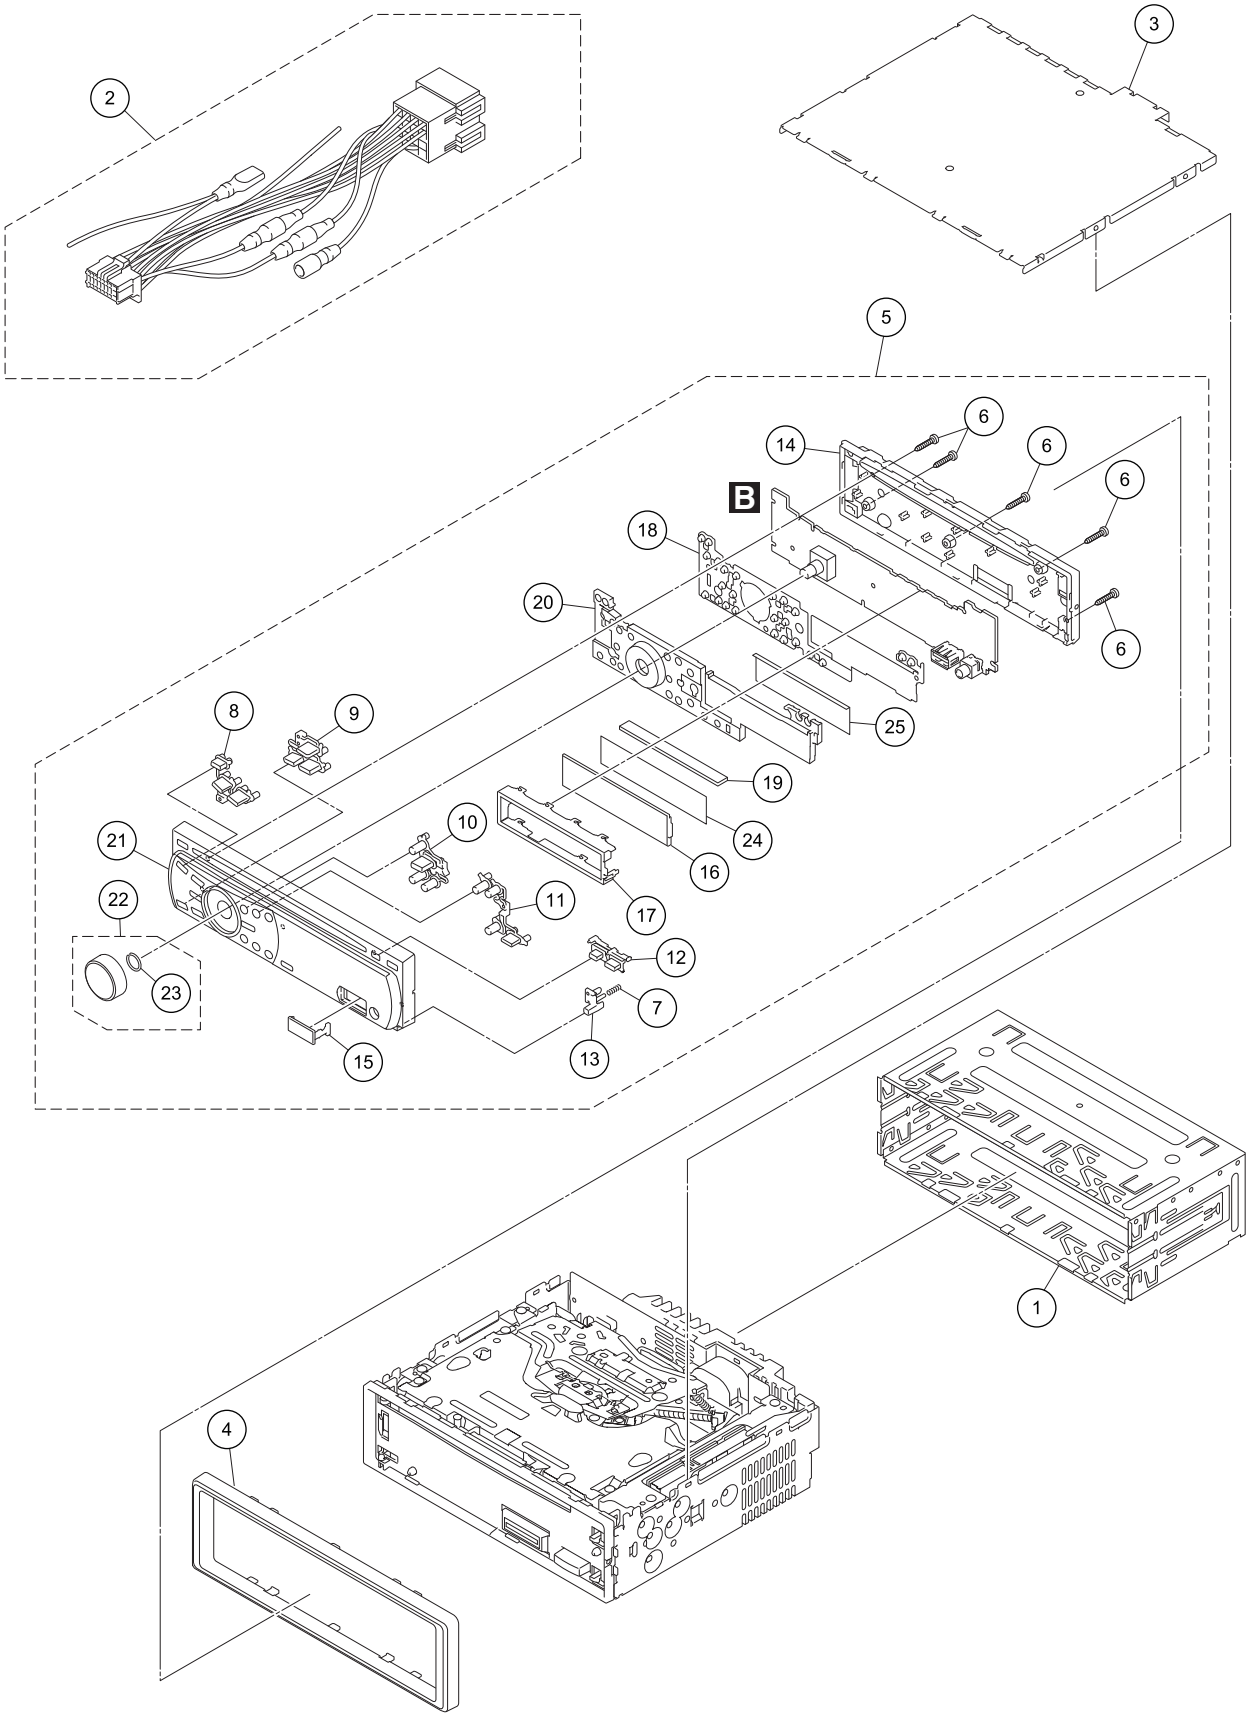

(1) EXTERIOR(1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Holder	CND3598
	2	Cord Assy	See Contrast table (2)
	3	Case	YNB5063
	4	Panel	YNS5537
	5	Detachable Assy	See Contrast table (2)
	6	Screw	BPZ20P100FTC
	7	Spring	CBH2210
	8	Button(DISP, SRC, UP)	YAC5384
	9	Button(ESC, DOWN, LEFT)	YAC5385
	10	Button(1, RIGHT, 4, 5)	YAC5386
	11	Button(2, 3, 6, LIST)	YAC5387
	12	Button(EJECT, TA/AF)	YAC5388
	13	Button(DETACH)	YAC5389
	14	Cover	YNS5536
	15	Grip(USB)	YNV5194
	16	LCD(LCD1801)	See Contrast table (2)
	17	Holder	YNC5083
	18	Rubber	YNV5191
	19	Connector	YNV5192
	20	Lighting Conductor	YNV5193
	21	Grille Unit	See Contrast table (2)
	22	Knob Unit	YXC5123
	23	Spring	YBL5010
	24	Sheet	See Contrast table (2)
	25	Sheet	See Contrast table (2)

(2) CONTRAST TABLE

DEH-2200UB/XSEW5, DEH-2200UBB/XSEW5, DEH-2220UB/XSEW5 and DEH-2210UB/XSUR are constructed the same except for the following:

Mark	No.	Description	DEH-2200UB/XSEW5	DEH-2200UBB/XSEW5	DEH-2220UB/XSEW5	DEH-2210UB/XSUR
	2	Cord Assy	YDP5037	YDP5037	YDP5037	YDP5041
	5	Detachable Assy	YXA5676	YXA5678	YXA5677	YXA5679
	16	LCD(LCD1801)	CAW1970	YAW5107	CAW1970	CAW1970
	21	Grille Unit	YXA5648	YXA5687	YXA5649	YXA5689
	24	Sheet	Not used	CNN1381	Not used	Not used
	25	Sheet	Not used	CNN1382	Not used	Not used

9.3 EXTERIOR(2)

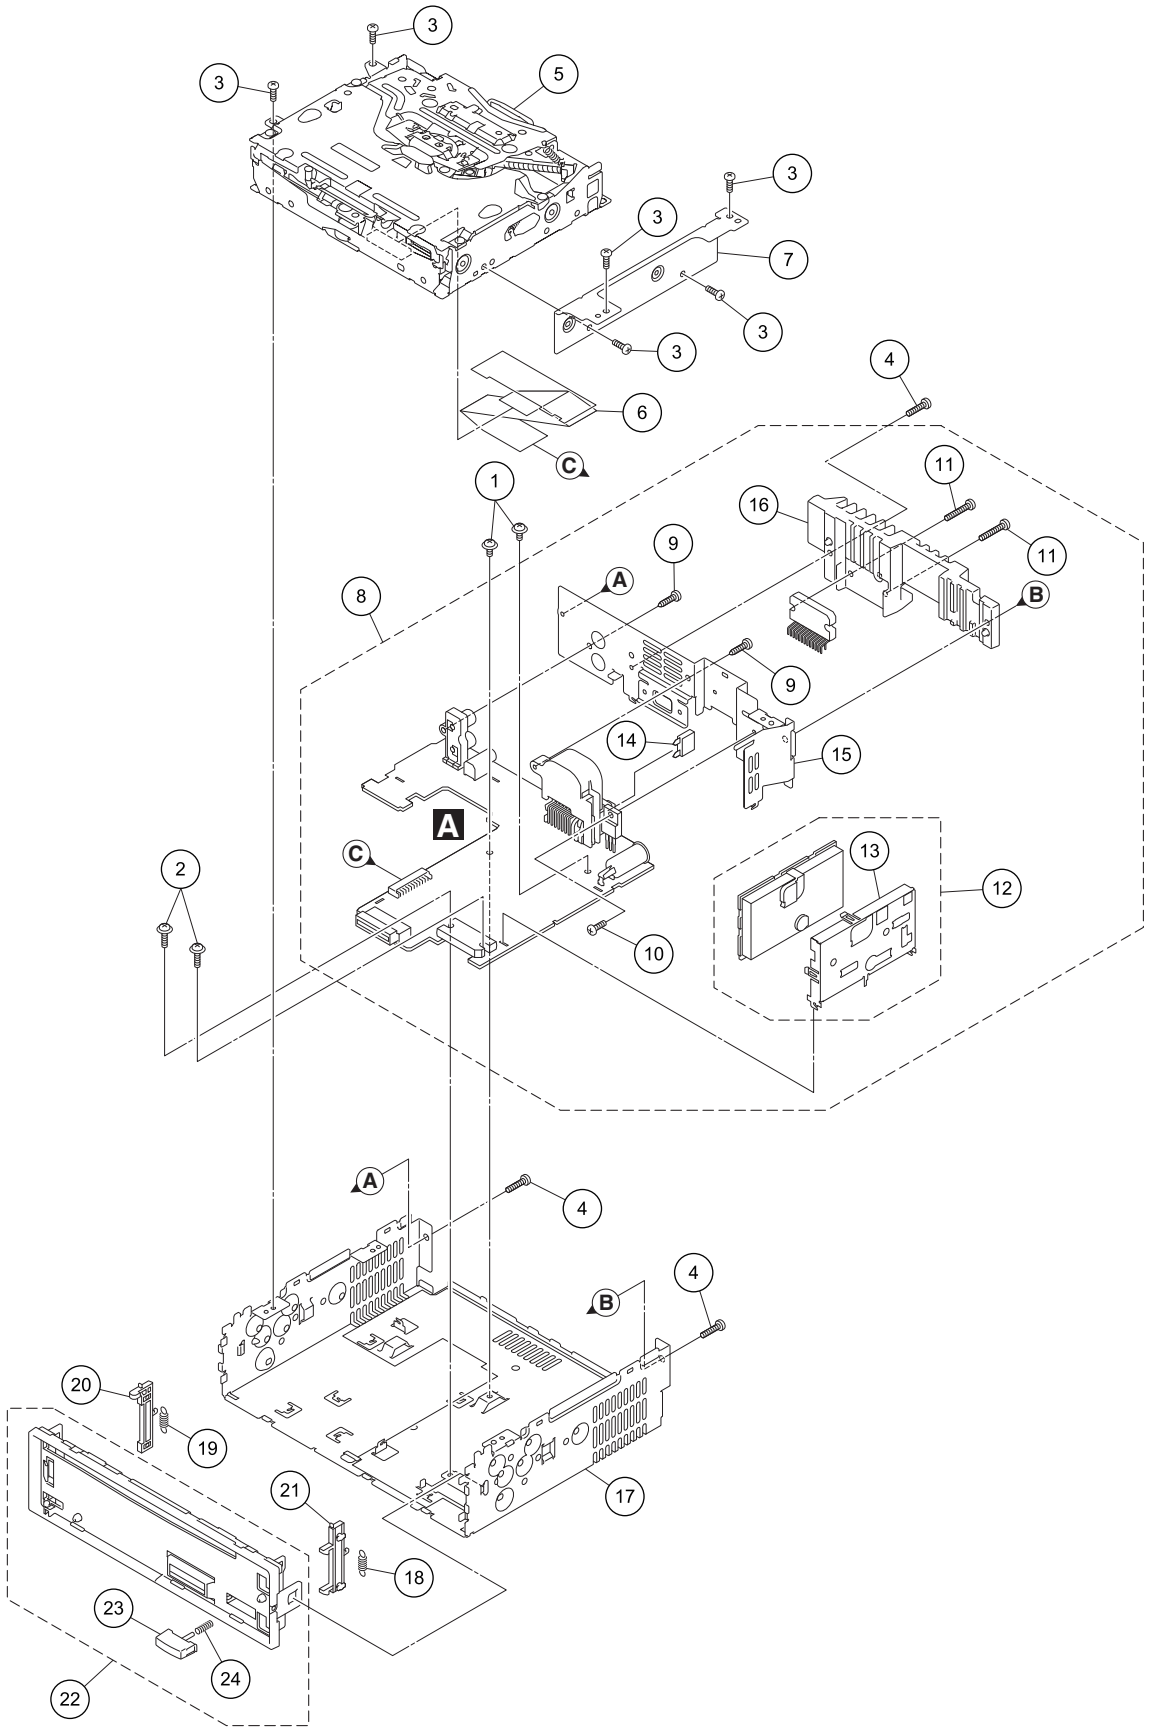

(1) EXTERIOR(2) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	ASZ26P080FTC
	3	Screw	BSZ26P060FTC
	4	Screw	BSZ26P100FTC
	5	CD Mechanism Module(S11)	CXK5870
	6	Cable	YDE5059
	7	Holder	YND5048
	8	Tuner Amp Unit	See Contrast table (2)
	9	Screw	BPZ26P080FTC
	10	Screw	BSZ26P060FTC
	11	Screw	BSZ26P160FTC
	12	FM/AM Tuner Unit	See Contrast table (2)
	13	Holder	CND3466
⚠	14	Fuse(10 A)	YEK5001
	15	Holder	See Contrast table (2)
	16	Heat Sink	YNR5139
	17	Chassis Unit	See Contrast table (2)
	18	Spring	CBH2961
	19	Spring	CBH2962
	20	Arm	CNV9312
	21	Arm	CNW1439
	22	Panel Unit	YXA5650
	23	Button	CAC4836
	24	Spring	YBH5012

(2) CONTRAST TABLE

DEH-2200UB/XSEW5, DEH-2200UBB/XSEW5, DEH-2220UB/XSEW5 and DEH-2210UB/XSUR are constructed the same except for the following:

Mark	No.	Description	DEH-2200UB/XSEW5	DEH-2200UBB/XSEW5	DEH-2220UB/XSEW5	DEH-2210UB/XSUR
	8	Tuner Amp Unit	YWM5445	YWM5447	YWM5446	YWM5448
	12	FM/AM Tuner Unit	CWE2106	CWE2106	CWE2106	CWE2123
	15	Holder	YND5043	YND5043	YND5043	YND5045
	17	Chassis Unit	YXA5651	YXA5651	YXA5651	YXA5652

9.4 CD MECHANISM MODULE

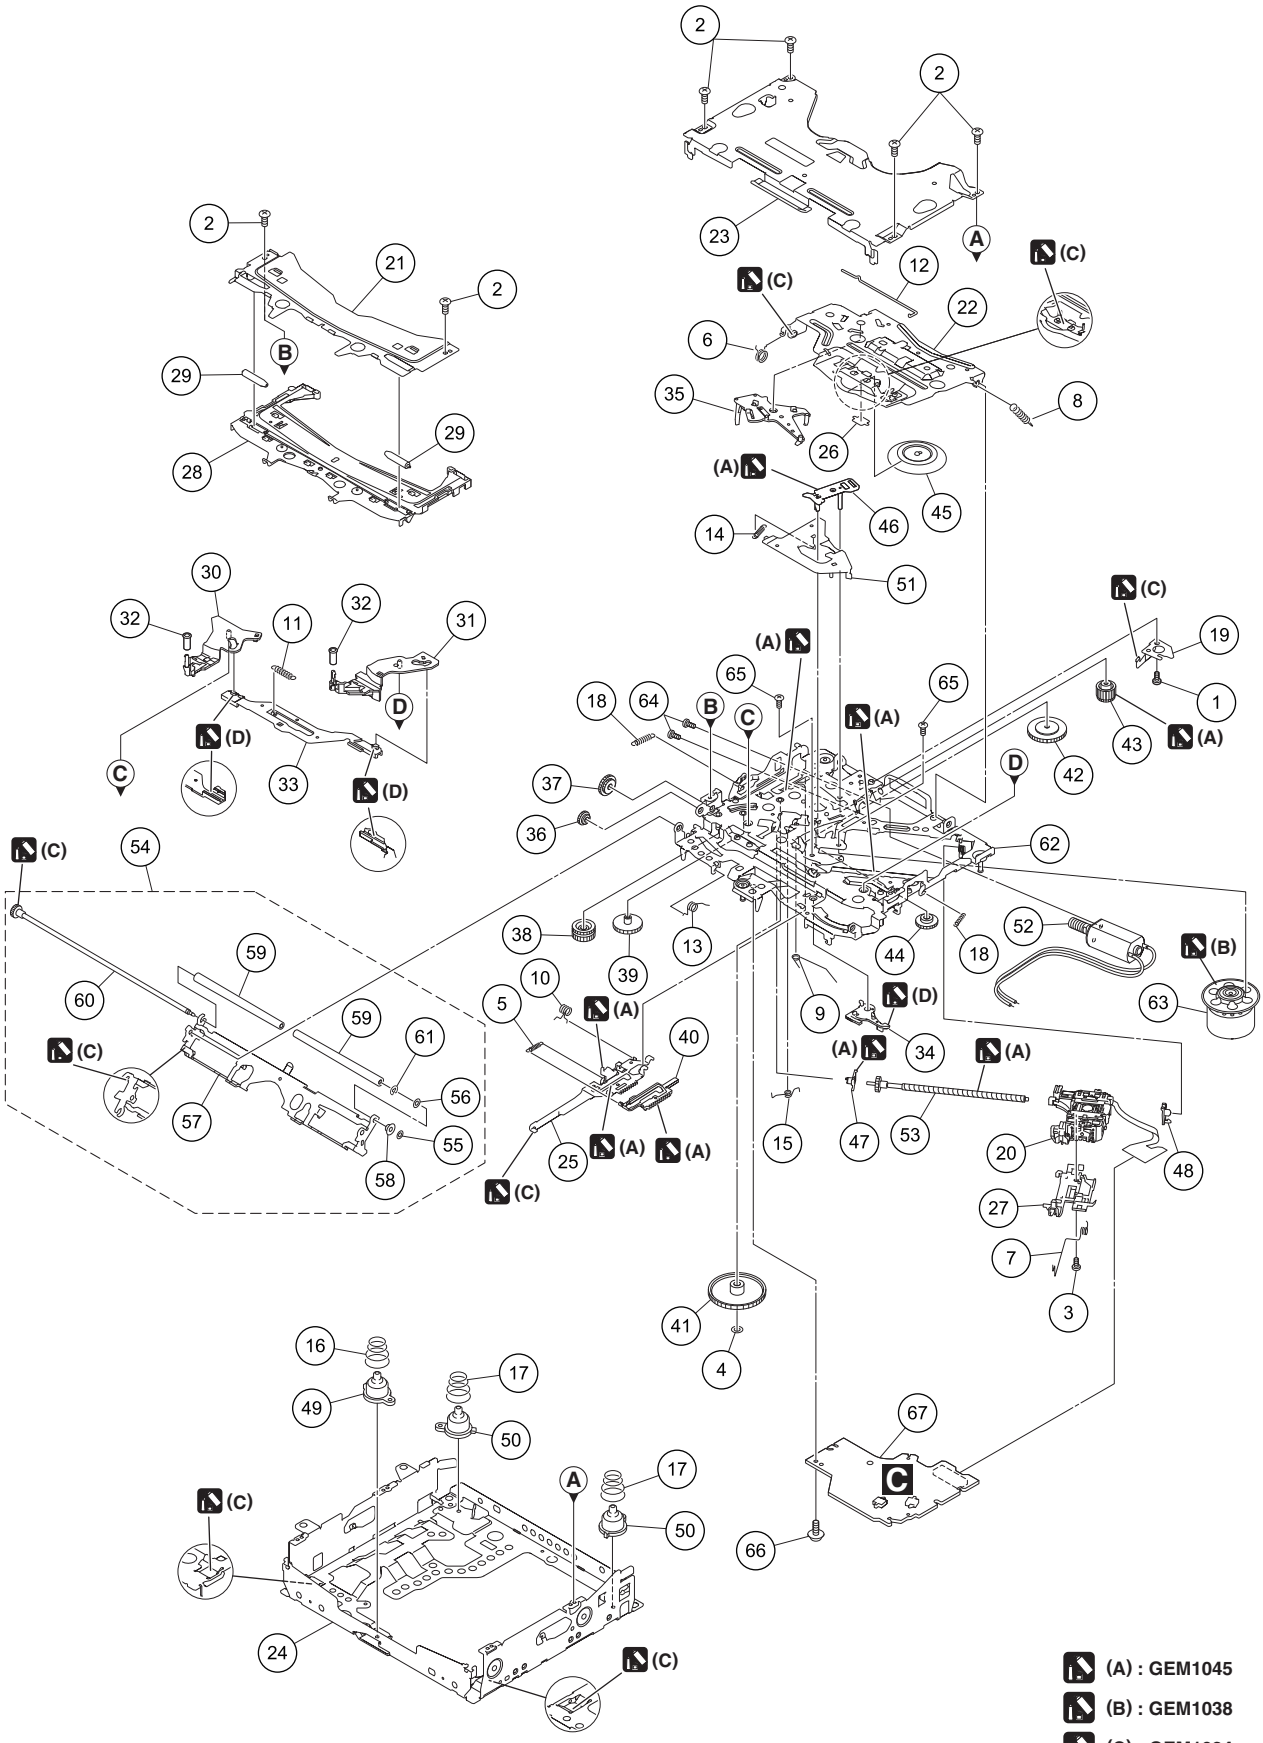

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ20P020FTC
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	Spring	CBH2609
10	Spring	CBH3011
11	Spring	CBH3012
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3018
17	Spring	CBH3019
18	Spring	CBH3020
19	Spring	CBL1797
20	Pickup Unit(S10.5)(Service)	CXX1942
21	Bracket	CND4553
22	Arm	CND4555
23	Frame	CND4557
24	Frame	CND5217
25	Lever	CND5398
26	Sheet	CNN2280
27	Rack	CNV8342
28	Guide	CNW1171
29	Roller	CNW1172
30	Arm	CNW1173
31	Arm	CNW1174
32	Roller	CNW1175
33	Lever	CNW1176
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	Gear	CNW1182
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW1188
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXC8896
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND4554
58	Collar	CNV6906
59	Roller	CNW1196
60	Gear Unit	CXC8893
61	Washer	YE15FTC
62	Chassis Unit	CXE1946
63	Motor Unit	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	IMS20P030FTC
67	CD Core Unit (S11USB)	CWX3776

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

A:DEH-2200UB/XSEW5
B:DEH-2200UBB/XSEW5
C:DEH-2220UB/XSEW5
D:DEH-2210UB/XSUR

Unit Number : YWM5445(A)
Unit Number : YWM5447(B)
Unit Number : YWM5446(C)
Unit Number : YWM5448(D)
Unit Name : Tuner Amp Unit
Unit Number : (A)
Unit Number : (B)
Unit Number : (D)
Unit Name : Keyboard Unit
Unit Number : (C)
Unit Name : Keyboard Unit
Unit Number : CWX3776
Unit Name : CD Core Unit(S11USB)

A:DEH-2200UB/XSEW5
C:DEH-2220UB/XSEW5
D:DEH-2210UB/XSUR

A

Unit Number : YWM5445(A)
Unit Number : YWM5447(B)
Unit Number : YWM5446(C)
Unit Number : YWM5448(D)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.			Part No.
IC 201	(A,102,109)	IC	PML014A
IC 301	(A,74,141)	IC	PAL007C
IC 501	(A,16,114)	IC	BD9007F
IC 601	(A,117,83)	IC	PN5034B
IC 712	(A,36,123)	IC	BD6538G
IC 911	(A,141,28)	IC	BA49181-V12
Q 251	(A,21,130)	Transistor	UMH3N
Q 351	(A,31,131)	Transistor	RT3T22M
Q 601	(A,136,63)	Transistor	2SD1858
Q 751	(A,137,139)	Transistor	2SD2396
Q 752	(A,136,128)	Transistor	RT3T22M
Q 801	(A,107,42)	Transistor	2SA1036K
Q 802	(A,107,38)	Transistor	RT1N141M-11
Q 851	(A,91,124)	Transistor(A,B,C)	2SA1036K
Q 921	(A,127,106)	Transistor	LSC4081UB
D 301	(A,93,128)	Diode	1SR154-400
D 302	(A,113,114)	Diode	1SR154-400
D 501	(A,17,125)	Diode	1SR154-400
D 502	(A,23,107)	Diode	RB160L-40
D 601	(A,98,100)	Diode(A,B,C)	RB551V-30
D 602	(A,89,100)	Diode(A,B,C)	RB751V-40
D 751	(A,135,132)	Diode	HZU7R5(B3)
D 801	(A,108,22)	Diode	MALS068X
D 802	(A,108,21)	Diode	MALS068X
D 803	(A,114,21)	Varistor	EZJP0V270RM
D 804	(A,115,22)	Varistor	EZJP0V270RM
D 851	(A,94,122)	Diode(A,B,C)	MC2848-11
D 901	(A,133,123)	Diode	1SR154-400
D 902	(A,127,117)	Diode	1SR154-400
D 911	(A,113,56)	Diode	1SR154-400
D 912	(A,113,53)	Diode	1SR154-400
D 921	(A,123,106)	Diode	HZU6R2(B3)
L 401	(A,146,54)	Inductor	LCTAW2R2J2520
L 402	(A,146,97)	Inductor	LCTAW2R2J2520
L 403	(A,146,57)	Inductor	CTF1473
L 501	(A,29,110)	Choke Coil 47 uH	CTH1420
L 604	(A,126,68)	Chip Coil	LCTAW1R0J2520
L 607	(A,133,83)	Inductor	CTF1379
L 608	(A,133,72)	Chip Coil	LCTAW1R5J2520
L 609	(A,134,70)	Chip Coil	LCTAW1R5J2520
L 610	(A,136,77)	Inductor	LCTAW1R2J2520
L 611	(A,138,71)	Inductor	CTF1379

Circuit Symbol and No.		Part No.
L 612	(A,137,69) Inductor	CTF1379
L 614	(A,122,69) Inductor	CTF1379
L 617	(A,132,85) Inductor	CTF1389
L 618	(A,121,65) Inductor	CTF1389
L 621	Chip Ferrite Bead	CTF1399
L 701	(A,93,47) Inductor	CTF1713
L 702	(A,93,48) Inductor	CTF1473
L 801	(A,94,31) Inductor	LCTAW2R2J2520
L 851	(A,95,125) Inductor(A,B,C)	LCTAW2R2J2520
L 902	(A,107,140) Choke Coil 600 u	HCTH1432
X 601	(A,141,78) Oscillator 74.1 MHz	CSS1758
X 681	(A,114,62) Oscillator 4.7186 MHz(D)	CSS1796
FU251	(A,5,129) Fuse 3 A	CEK1286
AR401	(A,145,110) Surge Protector	IMSA-6802-01Y900
ANT401	(A,153,128) Antenna Jack	CKX1070
CN251	(A,17,139) Pin Jack	YKB5010
CN651	(A,85,40) Connector	CKS3833
CN832	(A,105,3) Connector	CKS6188
CN941	(A,38,139) Connector(A,B,C)	CKS4124
JA901	(A,109,141) Plug	CKM1586
Z 401	(A,153,105) FM/AM Tuner Unit(A,B,C)	CWE2106
	(A,153,105) FM/AM Tuner Unit(D)	CWE2123

RESISTORS

R 201	(A,118,97)	RAB4CQ102J
R 206	(A,90,112)	RS1/16SS681J
R 207	(A,91,105)	RS1/16SS681J
R 213	(A,90,107)	RS1/16SS331J
R 221	(A,91,106)	RS1/16SS223J
R 222	(A,91,112)	RS1/16SS223J
R 251	(A,19,131)	RS1/16SS223J
R 252	(A,24,131)	RS1/16SS223J
R 253	(A,27,131)	RS1/16SS821J
R 254	(A,17,131)	RS1/16SS821J
R 303	(A,59,132)	RS1/16SS153J
R 331	(A,71,126)	RS1/16SS471J
R 332	(A,79,128)	RS1/16SS471J
R 333	(A,71,128)	RS1/16SS471J
R 334	(A,78,126)	RS1/16SS471J
R 351	(A,57,127)	RS1/16SS103J
R 352	(A,55,130)	RS1/16SS153J
R 353	(A,55,129)	RS1/16SS221J
R 404	(A,129,94)	RS1/16SS102J
R 405	(A,147,47)	RS1/16SS102J
R 406	(A,136,91)	RS1/16SS102J
R 407	(A,136,90)	RS1/16SS102J
R 408	(A,140,93)	RAB4CQ104J
R 409	(A,131,92)	RS1/16SS391J
R 410	(A,131,91)	RS1/16SS681J
R 411	(A,133,91)	RS1/16SS681J
R 412	(A,131,90)	RS1/16SS681J
R 413	(A,131,89)	RS1/16SS472J
R 501	(A,11,114)	RS1/16SS473J
R 502	(A,11,113)	RS1/16SS392J
R 503	(A,22,113)	RS1/16SS183J
R 504	(A,18,117)	RS1/10SR4702F
R 505	(A,16,117)	RS1/16SS682J
R 506	(A,16,120)	RS1/10SR1002F
R 507	(A,18,120)	RS1/10SR471J

Circuit Symbol and No.		Part No.
R 601	(A,103,89)	RS1/16SS473J
R 602	(A,101,78)	RS1/16SS222J
R 603	(A,95,69)	RS1/16SS473J
R 604	(A,132,87)	RS1/16SS681J
R 605	(A,122,98)	RS1/16SS0R0J
R 606	(A,123,63)	RS1/16SS473J
R 607	(A,110,49)	RS1/16SS473J
R 608	(A,131,79)	RS1/16SS470J
R 610	(A,129,69)	RS1/16SS473J
R 611	(A,131,76)	RS1/16SS182J
R 612	(A,88,115)	RS1/16SS563J
R 613	(A,130,86)	RS1/16SS302J
R 615	(A,92,102)	RS1/16SS563J
R 616	(A,129,97)	RS1/16SS104J
R 617	(A,116,96)	RS1/16SS473J
R 618	(A,129,95)	RS1/16SS473J
R 619	(A,129,96)	RS1/16SS104J
R 622	(A,132,80)	RS1/16SS0R0J
R 643	(A,128,99)	RS1/16SS104J
R 656	(A,101,70)	RS1/16SS104J
R 657	(A,98,70)	RS1/16SS104J
R 659	(A,103,71)	RS1/16SS472J
R 660	(A,100,70)	RS1/16SS472J
R 661	(A,103,83)	RS1/16SS221J
R 666	(A,136,89)	RS1/16SS103J
R 674	(A,102,94)	RS1/16SS104J
R 675	(A,93,69)	RS1/16SS473J
R 678	(A,89,101)	RS1/16SS103J
R 679	(A,99,100)	RS1/16SS103J
R 680	(A,96,99) (D)	RS1/16SS473J
R 681	(A,95,101) (A,B,C)	RS1/16SS473J
R 683	(A,95,76)	RS1/10SR473J
R 685	(A,101,97)	RS1/16SS104J
R 686	(A,104,97)	RS1/16SS104J
R 687	(A,104,96)	RS1/16SS104J
R 689	(A,93,74)	RS1/16SS0R0J
R 702	(A,94,40)	RS1/16SS221J
R 704	(A,92,37)	RS1/16SS221J
R 708	(A,94,35)	RS1/16SS104J
R 712	(A,94,84)	RS1/16SS103J
R 751	(A,133,132)	RS1/4SA271J
R 802	(A,109,42)	RS1/16SS103J
R 803	(A,107,40)	RS1/16SS562J
R 804	(A,98,22)	RS1/10SR101J
R 805	(A,101,22)	RS1/10SR101J
R 810	(A,96,26)	RS1/10SR222J
R 811	(A,94,26)	RS1/10SR222J
R 812	(A,111,26)	RS1/10SR222J
R 813	(A,110,26)	RS1/10SR222J
R 814	(A,113,26)	RS1/10SR222J
R 815	(A,114,26)	RS1/10SR222J
R 816	(A,92,71)	RS1/16SS104J
R 817	(A,106,31)	RS1/16SS473J
R 818	(A,94,69)	RS1/16SS104J
R 819	(A,90,21)	RS1/16SS102J
R 820	(A,103,41)	RS1/10SR103J
R 831	(A,104,26)	RS1/10SR222J
R 832	(A,102,25)	RS1/10SR222J
R 836	(A,91,71)	RS1/16SS104J
R 837	(A,103,25)	RS1/16SS222J
R 851	(A,87,125) (A,B,C)	RS1/16SS472J

Circuit Symbol and No.		Part No.
R 853	(A,96,122) (A,B,C)	RS1/16SS153J
R 854	(A,91,122) (A,B,C)	RS1/16SS102J
R 855	(A,93,120)	RS1/16SS473J
R 921	(A,129,104)	RS1/16SS104J
R 922	(A,125,106)	RS1/16SS223J
R 923	(A,117,116)	RS1/4SA102J
R 924	(A,120,106)	RS1/16SS473J
R 925	(A,121,108)	RS1/16SS473J
R 941	(A,32,134) (A,B,C)	RS1/10SR102J
R 942	(A,31,134) (A,B,C)	RS1/10SR102J

CAPACITORS

C 201	(A,93,103)	CKSSYB224K6R3
C 202	(A,92,115)	CKSSYB224K6R3
C 203	(A,93,104)	CKSRYB105K6R3
C 204	(A,93,114)	CKSRYB105K6R3
C 205	(A,110,105) 10 uF	CCG1192
C 206	(A,93,112)	CKSRYB105K6R3
C 207	(A,93,106)	CKSRYB105K6R3
C 212	(A,93,111)	CKSRYB105K6R3
C 213	(A,93,107)	CKSRYB105K6R3
C 214	(A,116,105) 4.7 uF	CCG1201
C 215	(A,113,106)	CKSSYB104K10
C 216	(A,107,102)	CCSRCH100D50
C 253	(A,43,130)	CEVW2R2M50
C 254	(A,26,127)	CEVW2R2M50
C 301	(A,70,129)	CKSRYB474K10
C 302	(A,68,129)	CKSRYB474K10
C 303	(A,76,128)	CKSRYB474K10
C 304	(A,77,128)	CKSRYB474K10
C 305	(A,71,132)	CKSQYB474K25
C 306	(A,69,132)	CKSQYB474K25
C 307	(A,75,131)	CKSQYB474K25
C 308	(A,76,131)	CKSQYB474K25
C 309	(A,82,127)	CKSQYB225K10
C 310	(A,84,127)	CKSQYB225K10
C 311	(A,98,128)	CKSRYB104K16
C 312	(A,64,129)	CEVW100M16
C 313	(A,53,135)	CKSRYB104K16
C 331	(A,69,125)	CCSSCH101J50
C 332	(A,79,129)	CCSSCH101J50
C 333	(A,71,130)	CCSSCH101J50
C 334	(A,76,126)	CCSSCH101J50
C 351	(A,47,136)	CEVW330M10
C 401	(A,146,58)	CCSRCH270J50
C 402	(A,143,96)	CKSSYB103K16
C 404	(A,144,104)	CEVW101M16
C 405	(A,143,98)	CKSSYB103K16
C 409	(A,131,93)	CCSSCH100D50
C 416	(A,133,92)	CCSSCH390J50
C 501	(A,8,122)	CEVW221M16
C 502	(A,9,113)	CKSQYB225K16
C 503	(A,21,114)	CCSSCH220J50
C 504	(A,23,113)	CKSRYB153K50
C 505	(A,26,119)	CEVW221M10
C 601	(A,98,88)	CKSRYB105K6R3
C 603	(A,102,88)	CKSSYB103K16
C 605	(A,111,68)	CKSSYB104K10
C 606	(A,103,63)	CKSSYB103K16
C 607	(A,117,69)	CKSRYB105K6R3
C 609	(A,129,66)	CKSRYB331K50
C 610	(A,104,49)	CEVW101M4
C 611	(A,129,65)	CKSRYB331K50
C 612	(A,119,69) (A,B,C)	CKSRYB105K6R3
	(A,119,69) (D)	CKSRYB103K50
C 613	(A,99,57)	CEVW471M10
C 614	(A,146,92)	CKSSYB102K50
C 615	(A,129,68)	CKSRYB331K50
C 616	(A,124,70)	CKSSYB103K16
C 622	(A,130,84)	CKSRYB105K6R3
C 623	(A,131,75)	CKSSYB102K50
C 624	(A,130,74)	CKSSYB102K50
C 625	(A,134,74)	CCSSCH270J50
C 626	(A,134,68)	CCSSCH270J50
C 627	(A,136,72)	CCSSCH150J50
C 628	(A,134,78)	CKSSYB102K50
C 629	(A,132,78)	CCSSCH4R0C50
C 630	(A,134,76)	CCSSCH8R0D50
C 631	(A,118,68)	CKSSYB223K16
C 632	(A,102,93)	CKSSYB104K10
C 633	(A,120,96)	CKSSYB104K10
C 635	(A,134,88)	CKSSYB104K10
C 640	(A,122,70)	CKSSYB104K10
C 650	(A,104,45)	CKSSYB103K16
C 651	(A,127,110)(A,B,C)	CCSRCH270J50
C 671	(A,91,102)	CKSSYB122K50
C 672	(A,88,114)	CKSSYB122K50
C 681	(A,114,66) (D)	CCSSCH270J50
C 682	(A,116,66) (D)	CCSSCH270J50
C 702	(A,95,35)	CKSSYB103K16
C 703	(A,93,39)	CKSSYB104K10
C 711	(A,33,122)	CKSRYB105K6R3
C 712	(A,39,124)	CKSRYB105K6R3
C 751	(A,137,132)	CKSSYB473K10
C 752	(A,143,130)	CEVW101M16
C 802	(A,99,26)	CKSRYB104K16
C 803	(A,102,29)	CCSRCH221J50
C 804	(A,98,29)	CCSRCH221J50
C 805	(A,94,21)	CKSRYB104K16
C 806	(A,94,22)	CKSRYB104K16
C 807	(A,103,22)	CKSRYB104K16
C 808	(A,105,22)	CKSRYB104K16
C 809	(A,103,21)	CKSRYB104K16
C 810	(A,111,21)	CCSRCH221J50
C 811	(A,111,22)	CCSRCH221J50
C 812	(A,103,38)	CKSRYB104K16
C 818	(A,96,22)	CKSRYB104K16
C 819	(A,91,23)	CKSRYB104K16
C 820	(A,91,26)	CKSRYB104K16
C 821	(A,119,26)	CKSRYB104K16
C 822	(A,90,22)	CCSRCH221J50
C 901	(A,128,125) 3 300 uF/16 V	CCH1732
C 911	(A,124,41) 4.7 uF	CCG1201
C 912	(A,119,54)	CEAT102M16
C 913	(A,132,41)	CKSRYB104K16
C 914	(A,130,45) 4.7 uF	CCG1201
C 915	(A,142,47) 4.7 uF	CCG1201
C 916	(A,142,44) 4.7 uF	CCG1201

Circuit Symbol and No.		Part No.
C 917	(A,129,40)	CKSSYB102K50
C 918	(A,141,40)	CKSRYB104K16
C 919	(A,147,41)	CCSRCH680J50
C 941	(A,32,138) (A,B,C)	CKSRYB103K50
C 942	(A,31,138) (A,B,C)	CKSRYB103K50

B

Unit Number : (A)
Unit Number : (B)
Unit Number : (D)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,123,25) IC	PD6340A
D 1801	(B,96,25) Diode	MC2848-11
D 1802	(B,100,25) Diode	MC2846-11
D 1851	(A,163,23) White LED	DS2XA4WBETW1(Z1)
D 1852	(A,62,21) LED	CL-195SR-CD
D 1853	(A,60,12) LED	CL-195SR-CD
D 1854	(A,68,11) LED	CL-195SR-CD
D 1855	(A,77,33) LED	CL-195SR-CD
D 1856	(A,68,28) LED	CL-195SR-CD
D 1857	(A,60,27) LED	CL-195SR-CD
D 1861	(A,26,28) LED	CL-195SR-CD
D 1862	(A,24,21) LED	CL-195SR-CD
D 1863	(A,26,11) LED	CL-195SR-CD
D 1864	(A,13,30) LED	CL-195SR-CD
D 1865	(A,7,37) LED	CL-195SR-CD
D 1866	(A,12,7) LED	CL-195SR-CD
D 1867	(A,89,8) LED	CL-195SR-CD
D 1868	(A,77,6) LED	CL-195SR-CD
D 1869	(A,148,41) LED	CL-195SR-CD
D 1870	(A,164,41) LED	CL-195SR-CD
D 1911	(B,150,17) Diode	MALS068X
D 1912	(B,148,23) Diode	MALS068X
X 1801	(B,112,24) Ceramic Resonator 5.00 MHz	CSS1731
S 1845	(A,43,20) Rotary Switch	CSD1153
VA1901	(B,159,19) Varistor	EZJZ1V270RM
VA1902	(B,157,21) Varistor	EZJZ1V270RM
VA1903	(B,154,21) Varistor	EZJZ1V270RM
VA1904	(B,160,19) Varistor	EZJZ1V270RM
LCD1801	(A,158,33) LCD(A,D)	CAW1970
	LCD(B)	YAW5107
CN1821	(B,109,10) Connector	CKS6049
CN1901	(A,153,9) Jack	YKN5001
CN1911	(A,137,9) Connector	YKS5036

RESISTORS

R 1801	(B,103,24)	RS1/10SR473J
R 1805	(B,99,23)	RS1/10SR222J
R 1806	(B,101,21)	RS1/10SR222J
R 1821	(B,57,8)	RS1/10SR473J
R 1823	(B,95,22)	RS1/10SR0R0J
R 1824	(B,29,15)	RS1/10SR0R0J
R 1851	(B,156,24)	RS1/4SA681J
R 1852	(B,68,28)	RS1/4SA821J
R 1853	(B,74,28)	RS1/4SA821J
R 1855	(B,23,22)	RS1/4SA821J
R 1856	(B,26,17)	RS1/4SA681J
R 1857	(B,81,15)	RS1/4SA102J
R 1858	(B,154,24)	RS1/4SA222J
R 1866	(B,68,18)	RS1/10SR0R0J
R 1901	(B,158,19)	RS1/10SR101J
R 1902	(B,156,19)	RS1/10SR101J

CAPACITORS

C 1802	(B,85,16)	CKSRYB105K10
C 1901	(B,154,20)	CKSRYB472K50
C 1902	(B,154,18)	CKSRYB472K50

B

Unit Number : (C)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,123,25) IC	PD6340A
D 1801	(B,96,25) Diode	MC2848-11
D 1802	(B,100,25) Diode	MC2846-11
D 1851	(A,163,23) White LED	DS2XA4WBETW1(Z1)
D 1852	(A,62,21) LED	CL-195PG-CD
D 1853	(A,60,12) LED	CL-195PG-CD
D 1854	(A,68,11) LED	CL-195PG-CD
D 1855	(A,77,33) LED	CL-195PG-CD
D 1856	(A,68,28) LED	CL-195PG-CD
D 1857	(A,60,27) LED	CL-195PG-CD
D 1861	(A,26,28) LED	CL-195PG-CD
D 1862	(A,24,21) LED	CL-195PG-CD
D 1863	(A,26,11) LED	CL-195PG-CD
D 1864	(A,13,30) LED	CL-195PG-CD
D 1865	(A,7,37) LED	CL-195PG-CD
D 1866	(A,12,7) LED	CL-195PG-CD
D 1867	(A,89,8) LED	CL-195PG-CD
D 1868	(A,77,6) LED	CL-195PG-CD
D 1869	(A,148,41) LED	CL-195PG-CD
D 1870	(A,164,41) LED	CL-195PG-CD
D 1911	(B,150,17) Diode	MALS068X
D 1912	(B,148,23) Diode	MALS068X
X 1801	(B,112,24) Ceramic Resonator 5.00 MHz	CSS1731
S 1845	(A,43,20) Rotary Switch	CSD1153
VA1901	(B,159,19) Varistor	EZJZ1V270RM
VA1902	(B,157,21) Varistor	EZJZ1V270RM
VA1903	(B,154,21) Varistor	EZJZ1V270RM
VA1904	(B,160,19) Varistor	EZJZ1V270RM
LCD1801	(A,158,33) LCD	CAW1970
CN1821	(B,109,10) Connector	CKS6049
CN1901	(A,153,9) Jack	YKN5001
CN1911	(A,137,9) Connector	YKS5036

RESISTORS

R 1801	(B,103,24)	RS1/10SR473J
R 1805	(B,99,23)	RS1/10SR222J
R 1806	(B,101,21)	RS1/10SR222J
R 1821	(B,57,8)	RS1/10SR473J
R 1823	(B,95,22)	RS1/10SR0R0J
R 1824	(B,29,15)	RS1/10SR0R0J

Circuit Symbol and No.		Part No.
R 1851	(B,156,24)	RS1/4SA681J
R 1852	(B,68,28)	RS1/4SA821J
R 1853	(B,74,28)	RS1/4SA821J
R 1855	(B,23,22)	RS1/4SA561J
R 1856	(B,26,17)	RS1/4SA561J
R 1857	(B,81,15)	RS1/4SA102J
R 1858	(B,154,24)	RS1/4SA222J
R 1866	(B,68,18)	RS1/10SR0R0J
R 1901	(B,158,19)	RS1/10SR101J
R 1902	(B,156,19)	RS1/10SR101J

CAPACITORS

C 1802	(B,85,16)	CKSRYB105K10
C 1901	(B,154,20)	CKSRYB472K50
C 1902	(B,154,18)	CKSRYB472K50

C

Unit Number : CWX3776
Unit Name : CD Core Unit(S11USB)

MISCELLANEOUS

IC 201	(A,31,33)	IC	PE5715A
IC 301	(A,64,27)	IC	BA5839FP
Q 101	(B,9,56)	Transistor	2SA1577
Q 102	(B,19,47)	Digital TR(PNP)	UNR511MG
X 201	(A,40,20)	Ceramic Resonator 16.934 MHz	CSS1603
X 205	(B,12,36)	Oscillator 48.000 MHz	CSS1753
S 901	(A,42,53)	Switch(HOME)	CSN1067
S 903	(B,21,12)	Switch(DSCSNS)	CSN1068
S 905	(B,11,25)	Switch(8EJ)	CSN1068
CN101	(A,15,58)	Connector	CKS4808
CN701	(A,36,10)	Connector	CKS5854

RESISTORS

R 101	(B,5,59)	RS1/10SR2R4J
R 102	(B,7,59)	RS1/10SR2R4J
R 103	(B,8,59)	RS1/10SR2R7J
R 104	(B,12,52)	RS1/16SS222J
R 107	(B,17,48)	RS1/16SS105J
R 202	(A,47,25)	RS1/16SS473J
R 204	(A,22,19)	RS1/16SS221J
R 206	(B,31,27)	RS1/16SS104J
R 210	(B,51,12)	RS1/16SS102J
R 214	(B,28,48)	RS1/16SS472J
R 216	(B,29,47)	RS1/16SS472J
R 221	(A,31,49)	RS1/16SS103J
R 222	(A,33,49)	RS1/16SS103J
R 223	(B,38,14)	RS1/16SS473J
R 225	(A,28,48)	RS1/16SS103J
R 226	(A,27,48)	RS1/16SS393J
R 227	(B,25,45)	RS1/16SS562J
R 228	(B,23,42)	RS1/16SS122J
R 229	(B,23,44)	RS1/16SS472J
R 232	(B,25,43)	RS1/16SS122J
R 233	(B,19,24)	RS1/16SS103J
R 234	(A,48,18)	RS1/16SS473J
R 235	(B,23,32)	RS1/16SS473J
R 237	(A,42,22)	RS1/16SS471J
R 240	(B,49,10)	RS1/16S473J
R 241	(B,49,11)	RS1/16SS103J
R 244	(B,27,28)	RS1/16SS473J
R 254	(A,19,22)	RS1/16SS104J
R 256	(A,18,22)	RS1/16SS104J
R 259	(A,12,23)	RS1/16SS0R0J
R 261	(A,14,24)	RS1/16SS104J
R 280	(B,30,20)	RS1/16SS103J
R 282	(A,15,28)	RS1/16SS240J
R 283	(A,15,27)	RS1/16SS240J
R 284	(B,17,27)	RS1/16SS153J
R 285	(B,18,27)	RS1/16SS153J
R 290	(B,29,20)	RS1/16SS103J
R 291	(B,16,44)	RS1/16SS272J
R 294	(A,14,29)	RS1/16SS221J
R 307	(A,60,33)	RS1/16SS183J
R 308	(A,60,35)	RS1/16SS183J
R 309	(A,58,33)	RS1/16SS183J
R 310	(A,57,36)	RS1/16SS183J
R 701	(A,36,21)	RS1/16SS221J
R 702	(A,22,22)	RS1/16SS221J
R 714	(B,30,12)	RS1/16S0R0J

CAPACITORS

C 106	(B,12,54)	CKSQYB475K6R3
C 202	(A,20,26)	CKSSYB104K10
C 204	(A,21,20)	CKSSYB103K16
C 205	(B,36,24)	CKSQYB475K6R3
C 206	(A,37,22)	CKSSYB104K10
C 207	(A,40,22)	CKSRYB104K16
C 209	(B,43,32)	CEVW220M6R3
C 210	(B,40,27)	CKSSYB104K10
C 211	(A,42,26)	CKSSYB104K10
C 213	(A,38,44)	CKSSYB104K10
C 214	(A,44,27)	CKSSYB104K10
C 215	(B,38,31)	CKSSYB104K10
C 216	(A,26,49)	CKSSYB332K50
C 217	(A,25,46)	CKSSYB104K10
C 218	(A,26,48)	CKSSYB473K10
C 219	(A,24,44)	CKSSYB104K10
C 220	(A,24,45)	CKSSYB182K50
C 221	(A,23,43)	CKSSYB104K10
C 222	(B,23,43)	CCSSCH560J50
C 223	(B,23,45)	CCSSCH4R0C50
C 224	(A,21,42)	CKSSYB104K10
C 226	(A,18,41)	CCSSCH680J50
C 227	(A,18,39)	CCSSCH470J50
C 228	(B,15,42)	CKSSYB103K16
C 229	(B,23,37)	CKSSYB104K10
C 236	(B,24,37)	CKSSYB104K10
C 239	(B,25,44)	CCSSCH220J50
C 240	(A,15,36)	CKSSYB104K10
C 250	(A,31,50)	CKSSYB102K50
C 251	(A,33,50)	CKSSYB102K50
C 260	(A,17,27)	CKSSYB104K10
C 261	(B,9,38)	CCSSCJ3R0C50
C 262	(B,9,34)	CCSSCJ3R0C50
C 293	(B,15,43)	CKSSYB102K50
C 303	(A,60,34)	CKSSYB472K25

Circuit Symbol and No.		Part No.
C 304	(A,58,34)	CKSSYB223K16
C 307	(A,68,20)	CKSRYB105K10
C 703	(B,36,14)	CCSSCH101J50
C 704	(B,40,13)	CKSSYB102K50
C 711	(A,53,28)	CKSSYB104K10

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXE2273
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026