
# 2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by "* " are generally unavailable because they are not in our Master Spare Parts List.*
*• Screw adjacent to ▽ mark on the product are used for disassembly.*
*• For the applying amount of lobricants or glue, follow the instructions in this manual.*
*(In the case of no amount instructions,apply as you think it appropriate.)*

## 2.1 PACKING(DEH-P760MP,P7600MP)

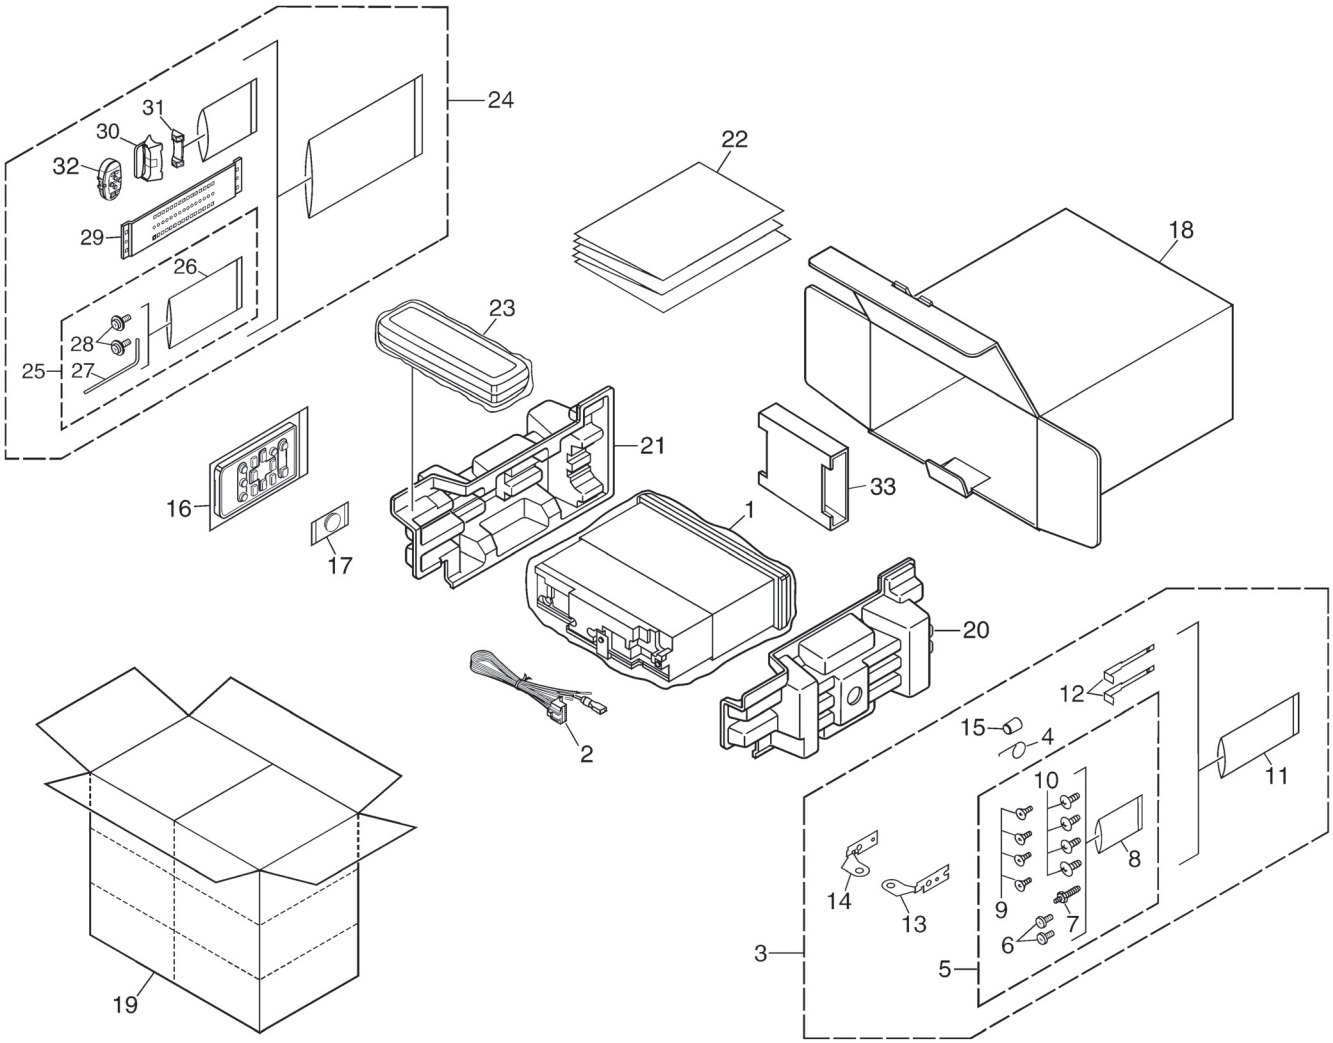

## (1) PACKING(DEH-P760MP,DEH-P7600MP) SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | Polyethylene Bag | CEG1173 |
| | 2 | Cord Assy | CDE7154 |
| | 3 | Accessory Assy | CEA3376 |
| | 4 | Spring | CBH1650 |
| | 5 | Screw Assy | CEA3848 |
| | 6 | Fixing screw | BPZ20P060FZK |
| | 7 | Screw | CBA1650 |
| * | 8 | Polyethylene Bag | CEG-127 |
| | 9 | Screw | CRZ50P090FTC |
| | 10 | Screw | TRZ50P080FTC |
| * | 11 | Polyethylene Bag | CEG-158 |
| | 12 | Handle | CNC5395 |
| | 13 | Holder | CND1249 |
| | 14 | Holder | CND1250 |
| | 15 | Bush | CNV3930 |
| | 16 | Remote Control Assy | See Contrast table(2) |
| * | 17 | Battery | See Contrast table(2) |
| | 18 | Carton | See Contrast table(2) |
| | 19 | Contain Box | See Contrast table(2) |
| | 20 | Protector | CHP2663 |
| | 21 | Protector | CHP2664 |
| | 22-1 | Owner's Manual | See Contrast table(2) |
| | 22-2 | Installation Manual | See Contrast table(2) |
| * | 22-3 | Warranty Card | See Contrast table(2) |
| * | 22-4 | Card | See Contrast table(2) |
| * | 22-5 | Caution Card | CRP1207 |
| * | 22-6 | Caution Card | See Contrast table(2) |
| * | 22-7 | Caution Card | XRP7001 |
| | 23 | Case Assy | CXB3520 |
| | 24 | Remote Control Assy | See Contrast table(2) |
| | 25 | Screw Assy | See Contrast table(2) |
| * | 26 | Polyethylene Bag | See Contrast table(2) |
| * | 27 | Hexagonal Wrench | See Contrast table(2) |
| * | 28 | Screw | See Contrast table(2) |
| | 29 | Belt | See Contrast table(2) |
| | 30 | Holder Assy | See Contrast table(2) |
| | 31 | Holder Assy | See Contrast table(2) |
| | 32 | Remote Control Assy | See Contrast table(2) |
| | 33 | Inner Box | XHW7001 |

## (2) CONTRAST TABLE


DEH-P760MP/XN/UC and DEH-P7600MP/XN/UC are constructed the same except for the following:

| Mark | NO | Description | DEH-P760MP/XN/UC | DEH-P7600MP/XN/UC |
|---|---|---|---|---|
| | 16 | Remote Control Assy | Not used | CXC3173 |
| * | 17 | Battery | Not used | CEK1065 |
| | 18 | Carton | XHG7024 | XHG7025 |
| | 19 | Contain Box | XHL7024 | XHL7025 |
| | 22-1 | Owner's Manual | XRD7040 | XRD7042 |
| | 22-2 | Installation Manual | XRD7041 | XRD7043 |
| * | 22-3 | Warranty Card | CRY1070 | Not used |
| * | 22-4 | Card | Not used | ARY1048 |
| * | 22-6 | Caution Card | Not used | CRP1294 |
| | 24 | Remote Control Assy | CXB9202 | Not used |
| | 25 | Screw Assy | CZE3169 | Not used |
| * | 26 | Polyethylene Bag | CEG-127 | Not used |
| * | 27 | Hexagonal Wrench | CZE3176 | Not used |
| * | 28 | Screw | RMZ30H060FBK | Not used |
| | 29 | Belt | CZN7661 | Not used |
| | 30 | Holder Assy | CZX3172 | Not used |
| | 31 | Holder Assy | CZX3173 | Not used |
| | 32 | Remote Control Assy | CZX3257 | Not used |

### Owner's Manual,Installation Manual

| Part No. | Language |
|---|---|
| XRD7040,<br>XRD7041,<br>XRD7042,<br>XRD7043 | English,French,Spanish |

# 2.2 PACKING(DEH-P7650MP)

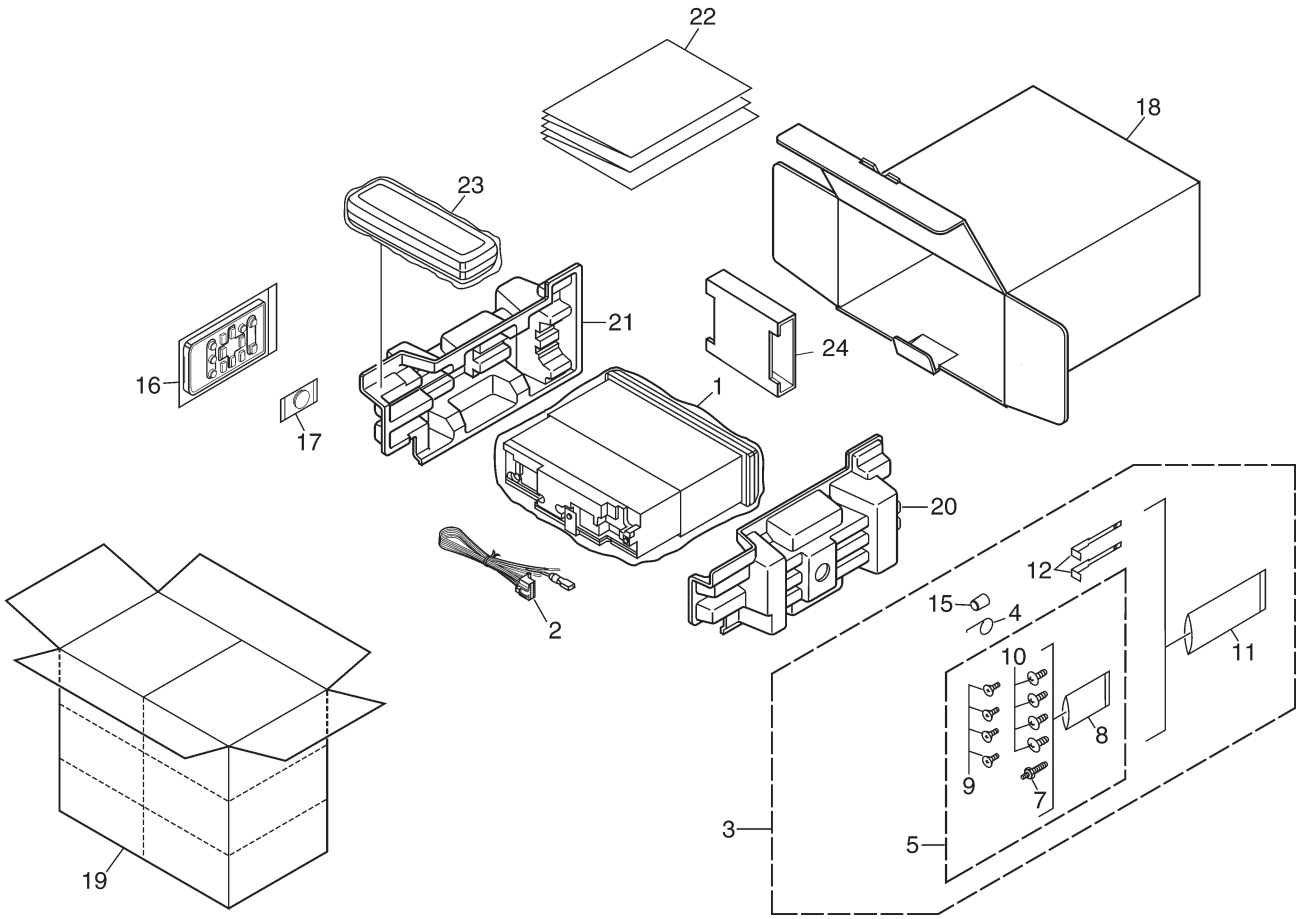


## PACKING(DEH-P7650MP) SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | Polyethylene Bag | CEG-162 |
| | 2 | Cord Assy | CDE7154 |
| | 3 | Accessory Assy | CEA3439 |
| | 4 | Spring | CBH1650 |
| | 5 | Screw Assy | CEA3849 |
| | 6 | ••••• | |
| | 7 | Screw | CBA1650 |
| * | 8 | Polyethylene Bag | CEG-127 |
| | 9 | Screw | CRZ50P090FTC |
| | 10 | Screw | TRZ50P080FTC |
| * | 11 | Polyethylene Bag | CEG-158 |
| | 12 | Handle | CNC5395 |
| | 13 | ••••• | |
| | 14 | ••••• | |
| | 15 | Bush | CNV3930 |
| | 16 | Remote Control Assy | CXC3173 |
| * | 17 | Battery | CEX1065 |
| | 18 | Carton | XHG7026 |
| | 19 | Contain Box | XHL7026 |
| | 20 | Protector | CHP2663 |
| | 21 | Protector | CHP2664 |
| | 22-1 | Owner's Manual | XRD7044 |
| | 22-2 | Owner's Manual | XRD7054 |
| | 22-3 | Installation Manual | XRD7045 |
| * | 22-4 | Caution Card | CRP1207 |
| * | 22-5 | Caution Card | CRP1216 |
| * | 22-6 | Caution Card | XRP7001 |
| | 23 | Case Assy | CXB3520 |
| | 24 | Inner Box | XHW7001 |

### Owner's Manual,Installation Manual

| Part No. | Language |
|---|---|
| XRD7044 | English,Spanish,Portuguese(B) |
| XRD7054 | English,Traditional Chinese,Arabic |
| XRD7045 | English,Spanish,Portuguese(B),Traditional Chinese,Arabic |

# 2.3 EXTERIOR

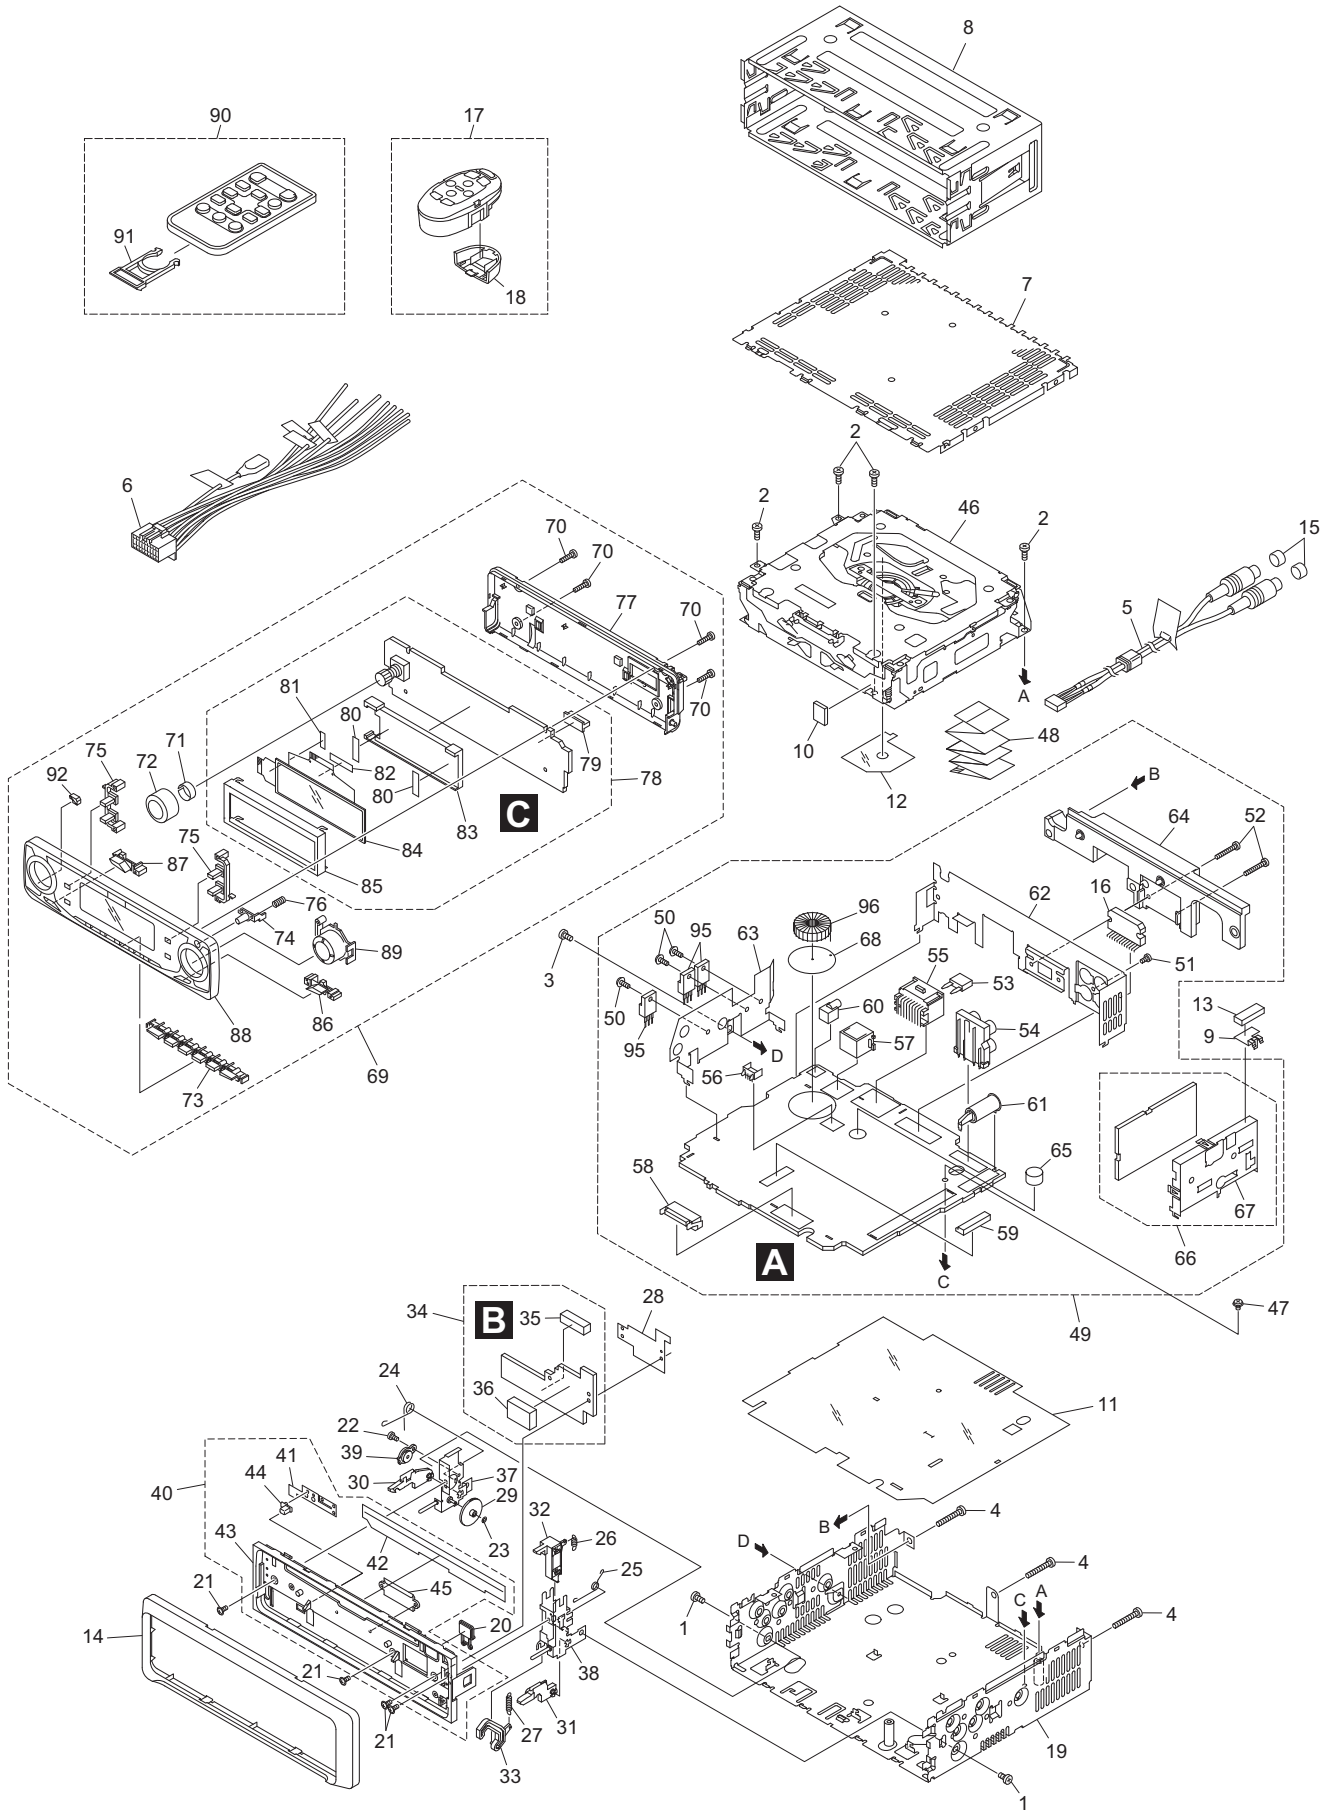
8
90
17
91
18
7
6
2
46
15
5
10
12
48
70
77
81
80
82
79
78
83
84
85
71
72
75
92
87
76
74
89
88
86
73
69
C
64
52
B
62
16
96
68
63
50
95
55
53
51
60
57
54
13
9
56
61
65
58
59
67
66
A
49
47
34
35
28
36
24
22
39
41
44
40
30
37
29
23
43
42
45
21
14
20
32
26
25
38
31
27
33
11
4
D
1
19

## (1) EXTERIOR SECTION PARTS LIST


| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | Screw | BMZ30P040FZK |
| | 2 | Screw | BSZ26P060FTC |
| | 3 | Screw | BSZ30P060FTC |
| | 4 | Screw | BSZ30P200FTC |
| | 5 | Cord Assy | CDE7129 |
| | 6 | Cord Assy | CDE7154 |
| | 7 | Case | CNB2870 |
| | 8 | Holder | CNC8659 |
| | 9 | Earth Plate | CNC8915 |
| | 10 | Insulator | CNM7682 |
| | 11 | Insulator | CNM7935 |
| | 12 | Insulator | CNM8174 |
| | 13 | Cushion | CNM8890 |
| | 14 | Panel | See Contrast table(2) |
| | 15 | Cap | CNV6727 |
| | 16 | ••••• | |
| | 17 | Remote Control Assy | See Contrast table(2) |
| | 18 | Cover | See Contrast table(2) |
| | 19 | Chassis Unit | CXB9528 |
| | 20 | Button(EJECT) | CAC7752 |
| | 21 | Screw(M2x4.5) | CBA1647 |
| | 22 | Screw(M2x4) | CBA1649 |
| | 23 | Washer | CBF1038 |
| | 24 | Spring | CBH2650 |
| | 25 | Spring | CBH2651 |
| | 26 | Spring | CBH2652 |
| | 27 | Spring | CBH2653 |
| | 28 | Holder | CND1254 |
| | 29 | Gear | CNV5997 |
| | 30 | Arm | CNV7400 |
| | 31 | Arm | CNV7401 |
| | 32 | Arm | CNV7402 |
| | 33 | Arm | CNV7403 |
| | 34 | Panel Unit | CWM8758 |
| | 35 | Socket(CN1950) | CKS3550 |
| | 36 | Connector(CN1951) | CKS4806 |
| | 37 | Holder Unit | CXB9501 |
| | 38 | Holder Unit | CXB9502 |
| | 39 | Damper Unit | CXB9503 |
| | 40 | Panel Unit(Service) | CXX1691 |
| | 41 | Spring | CBL1512 |
| | 42 | Cover | CNM6854 |
| | 43 | Panel | CNS7245 |
| | 44 | Pin | CNV6486 |
| | 45 | Lighting Conductor | CNV6487 |
| | 46 | CD Mechanism Module(S10CODE2) | CXK5665 |
| | 47 | Screw | ISS26P055FTC |
| | 48 | Cable | XDE7002 |
| | 49 | Tuner Amp Unit | See Contrast table(2) |
| | 50 | Screw | ASZ26P060FTC |
| | 51 | Screw | BPZ26P080FTC |
| | 52 | Screw | BSZ26P160FTC |
| | 53 | Fuse(10A) | CEK1208 |
| | 54 | Pin Jack(CN352) | CKB1051 |
| | 55 | Plug(CN901) | CKM1376 |
| | 56 | Plug(CN351) | CKS1238 |
| | 57 | Connector(CN101) | CKS3408 |
| | 58 | Plug(CN801) | CKS3537 |
| | 59 | Connector(CN651) | CKS3837 |
| | 60 | Connector(CN161) | See Contrast table(2) |
| | 61 | Antenna Jack(CN401) | CKX1056 |
| | 62 | Holder | See Contrast table(2) |
| | 63 | Holder | CND1352 |
| | 64 | Heat Sink | CNR1668 |
| | 65 | Microphone(CN751) | CPM1011 |
| | 66 | FM/AM Tuner Unit | CWE1646 |
| | 67 | Holder | CND1054 |
| | 68 | Insulator | XNM7031 |
| | 69 | Detachable Assy | See Contrast table(2) |
| | 70 | Screw | BPZ20P100FZK |
| | 71 | Spring | CBL1470 |
| | 72 | Knob | See Contrast table(2) |
| | 73 | Button(1-6) | XAC7005 |
| | 74 | Button(OPEN) | See Contrast table(2) |
| | 75 | Button(TEXT/SCRL/AUDIO/FUNC) | XAC7041 |
| | 76 | Spring | XBH7001 |
| | 77 | Cover | XNS7013 |
| | 78 | Keyboard Unit | See Contrast table(2) |
| | 79 | Connector(CN1901) | CKS4524 |
| | 80 | Cushion | CNM6633 |
| | 81 | Spacer | CNM7697 |
| | 82 | Spacer | CNM7698 |
| | 83 | Holder | CNV6910 |
| | 84 | OEL Unit | MXS8201 |
| | 85 | Holder | XNC7006 |
| | 86 | Button Unit(EQ-EX) | XXA7007 |
| | 87 | Button Unit(EQ) | XXA7008 |
| | 88 | Sub Grille Assy | See Contrast table(2) |
| | 89 | Sub Button Assy | See Contrast table(2) |
| | 90 | Remote Control Unit | See Contrast table(2) |
| | 91 | Cover | See Contrast table(2) |
| | 92 | Cushion | XNM7041 |
| | 93,94 | ••••• | |
| | 95 | Transistor(Q651,911,921) | 2SD 2396 |
| | 96 | Choke Coil(L301) | CTH1280 |

## (2) CONTRAST TABLE

DEH-P760MP/XN/UC , DEH-P7600MP/XN/UC and DEH-P7650MP/XN/ES are constructed the same except for the following:

| Mark | NO | Description | DEH-P760MP/XN/UC | DEH-P7600MP/XN/UC | DEH-P7650MP/XN/ES |
|---|---|---|---|---|---|
| | 14 | Panel | CNS6935 | XNS7070 | CNS6935 |
| | 17 | Remote Control Assy | CZX3257 | Not used | Not used |
| | 18 | Cover | CZN7655 | Not used | Not used |
| | 49 | Tuner Amp Unit | XWM7045 | XWM7046 | XWM7047 |
| | 60 | Connector(CN161) | CKS4124 | CKS4124 | Not used |
| | 62 | Holder | CND1270 | CND1270 | CND1239 |
| | 69 | Detachable Assy | XXA7167 | XXA7168 | XXA7169 |
| | 72 | Knob | XAA7012 | XAA7018 | XAA7012 |
| | 74 | Button | XAC7026 | XAC7012 | XAC7026 |
| | 78 | Keyboard Unit | XWM7053 | XWM7052 | XWM7052 |
| | 88 | Sub Grille Assy | XXA7160 | XXA7161 | XXA7162 |
| | 89 | Sub Button Assy | XXA7226 | XXA7227 | XXA7226 |
| | 90 | Remote Control Unit | Not used | CXC3173 | CXC3173 |
| | 91 | Cover | Not used | CNS7068 | CNS7068 |

# 2.4 CD MECHANISM MODULE

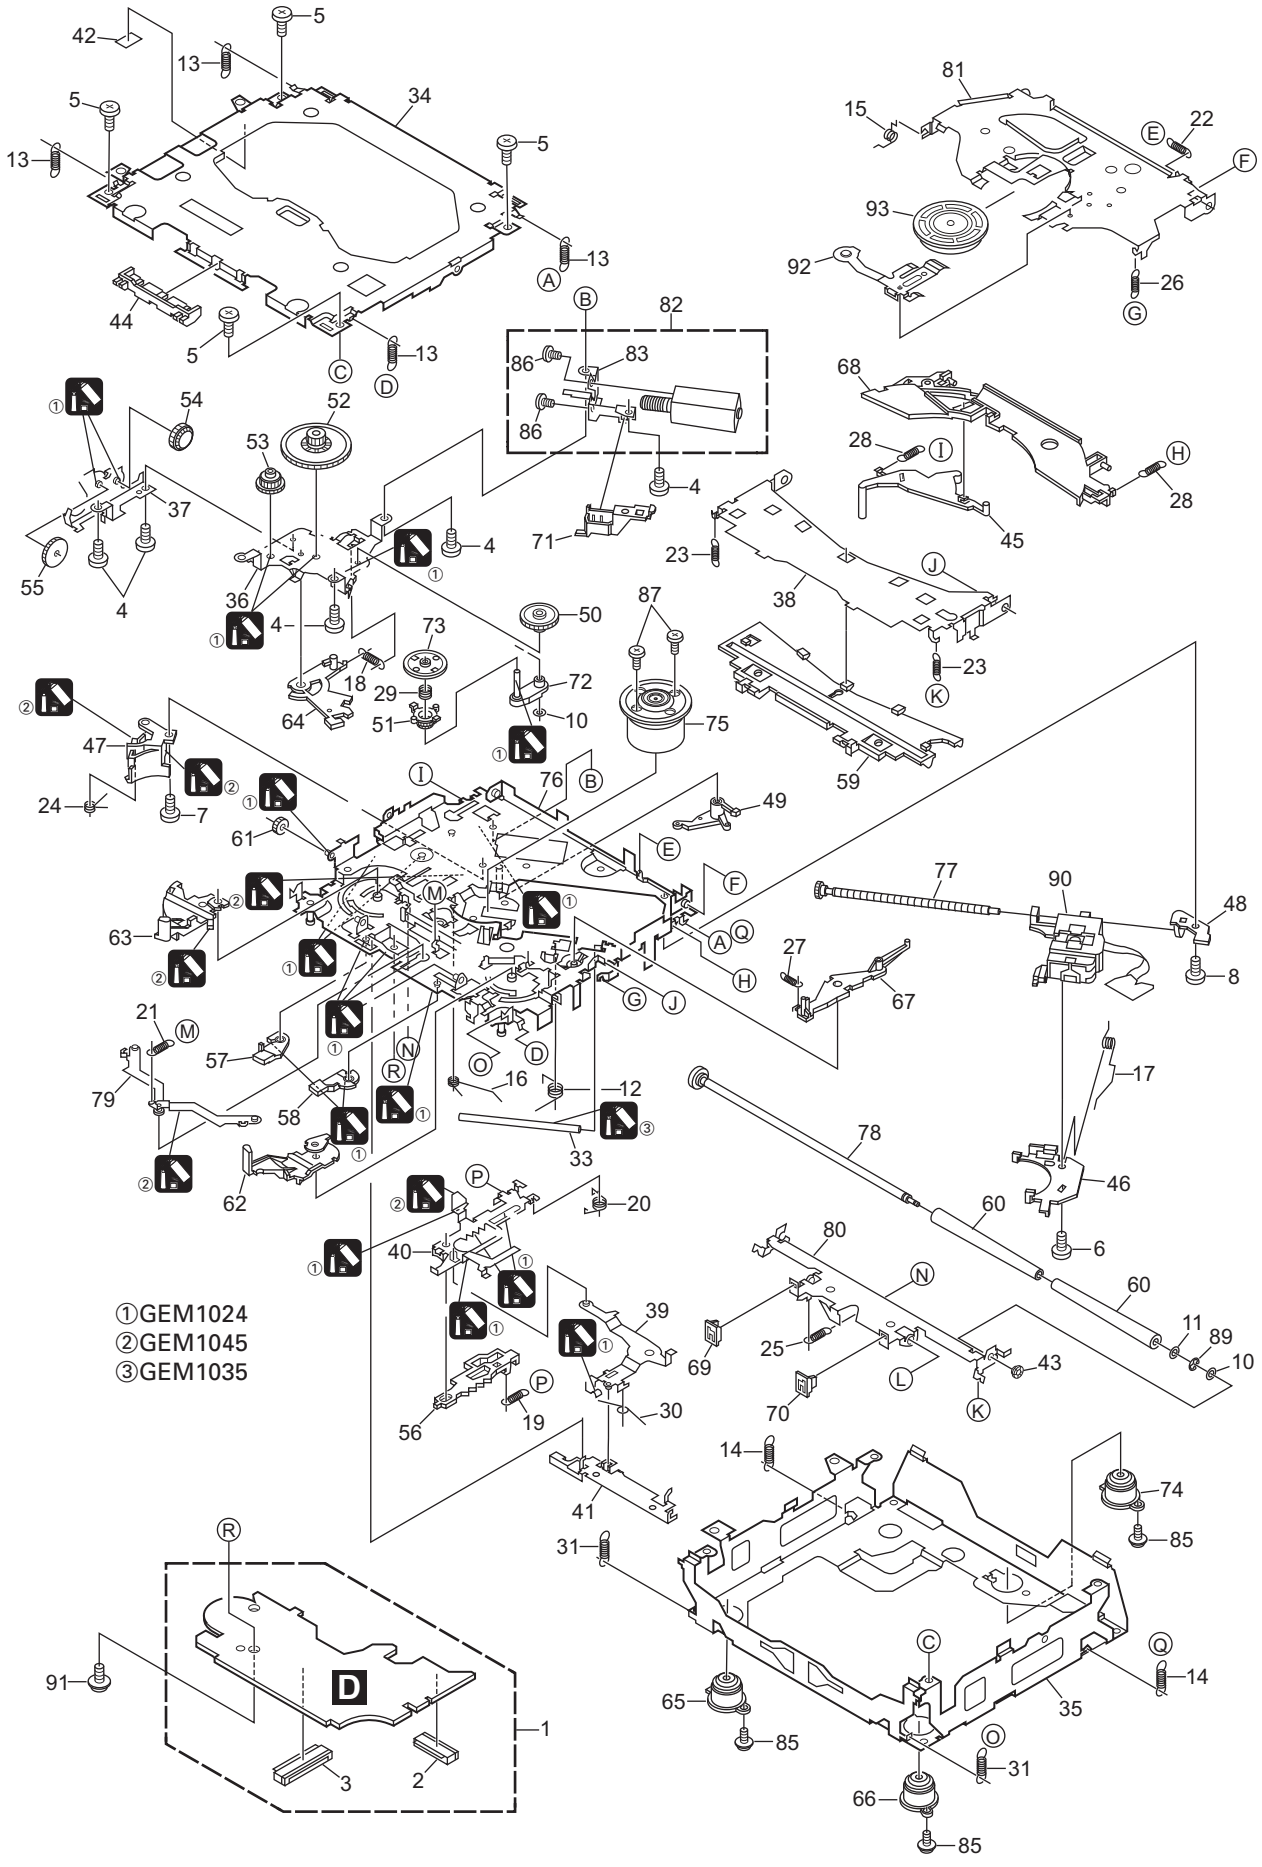

## CD MECHANISM MODULE SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | CD Core Unit(S10WMA) | CWX2851 |
| | 2 | Connector(CN101) | CKS4182 |
| | 3 | Connector(CN901) | CKS4017 |
| | 4 | Screw | BMZ20P035FTC |
| | 5 | Screw | BSZ20P040FTC |
| | 6 | Screw(M2x4) | CBA1362 |
| | 7 | Screw(M2x3) | CBA1511 |
| | 8 | Screw(M2x3) | CBA1527 |
| | 9 | ••••• | |
| | 10 | Washer | CBF1038 |
| | 11 | Washer | CBF1060 |
| | 12 | Spring | CBH2390 |
| | 13 | Spring | CBH2606 |
| | 14 | Spring | CBH2607 |
| | 15 | Spring | CBH2608 |
| | 16 | Spring | CBH2609 |
| | 17 | Spring | CBH2610 |
| | 18 | Spring | CBH2735 |
| | 19 | Spring | CBH2612 |
| | 20 | Spring | CBH2613 |
| | 21 | Spring | CBH2614 |
| | 22 | Spring | CBH2615 |
| | 23 | Spring | CBH2616 |
| | 24 | Spring | CBH2617 |
| | 25 | Spring | CBH2620 |
| | 26 | Spring | CBH2621 |
| | 27 | Spring | CBH2641 |
| | 28 | Spring | CBH2642 |
| | 29 | Spring | CBH2643 |
| | 30 | Spring | CBH2659 |
| | 31 | Spring | CBH2688 |
| | 32 | ••••• | |
| | 33 | Shaft | CLA4441 |
| | 34 | Frame | CNC9962 |
| | 35 | Frame | CNC9963 |
| | 36 | Bracket | CNC9966 |
| | 37 | Bracket | CND1895 |
| | 38 | Arm | CNC9968 |
| | 39 | Arm | CND1909 |
| | 40 | Lever | CND2032 |
| | 41 | Lever | CNC9984 |
| | 42 | Sheet | CNM8134 |
| | 43 | Collar | CNV7798 |
| | 44 | Guide | CNV7799 |
| | 45 | Arm | CNV7800 |
| | 46 | Rack | CNV7199 |
| | 47 | Holder | CNV7201 |
| | 48 | Holder | CNV7202 |
| | 49 | Arm | CNV7203 |
| | 50 | Gear | CNV7207 |
| | 51 | Gear | CNV7208 |
| | 52 | Gear | CNV7209 |
| | 53 | Gear | CNV7210 |
| | 54 | Gear | CNV7211 |
| | 55 | Gear | CNV7212 |
| | 56 | Rack | CNV7214 |
| | 57 | Arm | CNV7215 |
| | 58 | Arm | CNV7216 |
| | 59 | Guide | CNV7217 |
| | 60 | Roller | CNV7218 |
| | 61 | Gear | CNV7219 |
| | 62 | Arm | CNV7221 |
| | 63 | Arm | CNV7220 |
| | 64 | Arm | CNV7222 |
| | 65 | Damper | CNV7313 |
| | 66 | Damper | CNV7314 |
| | 67 | Arm | CNV7341 |
| | 68 | Arm | CNV7342 |
| | 69 | Guide | CNV7360 |
| | 70 | Guide | CNV7361 |
| | 71 | Holder | CNV7437 |
| | 72 | Arm | CNV7805 |
| | 73 | Gear | CNV7595 |
| | 74 | Damper | CNV7618 |
| | 75 | Motor Unit(M1) | CXB6007 |
| | 76 | Chassis Unit | CXC2318 |
| | 77 | Screw Unit | CXB8729 |
| | 78 | Gear Unit | CXC2397 |
| | 79 | Arm Unit | CXC2316 |
| | 80 | Arm | CND1896 |
| | 81 | Arm | CND1894 |
| | 82 | Motor Unit(M2) | CXB8933 |
| | 83 | Bracket | CNC9985 |
| | 84 | ••••• | |
| | 85 | Screw(M2x5) | EBA1028 |
| | 86 | Screw | JFZ20P020FTC |
| | 87 | Screw | JGZ17P022FTC |
| | 88 | ••••• | |
| | 89 | Washer | YE20FTC |
| | 90 | Pickup Unit(P10)(Service) | CXX1641 |
| | 91 | Screw | IMS26P030FTC |
| | 92 | Spring | CBL1635 |
| | 93 | Clamper | CNV7197 |

# 5. ELECTRICAL PARTS LIST

*NOTE:*

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

*Chip Resistor*

*RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J*

*Chip Capacitor (except for CQS.....)*

*CKS....., CCS....., CSZS.....*

**A**

**Unit Number:XWM7045(P760MP)**
**Unit Number:XWM7046(P7600MP)**
**Unit Number:XWM7047(P7650MP/ES)**
**Unit Name:Tuner Amp Unit**

**MISCELLANEOUS**

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| IC 101 | IC | HA12240FP |
| IC 131 | IC | NJM4558MD |
| IC 201 | IC | PML009A |
| IC 301 | IC | PAL007A |
| IC 401 | IC | NJM2391DL1-33 |
| IC 601 | IC | PD5921A |
| IC 602 | IC | S-80835CNUA-B8U |
| IC 801 | IC | TC7SET08FU |
| IC 851 | IC | NJM2360M |
| Q 101 | Transistor | 2SA1576 |
| Q 102 | Transistor | DTC114EU |
| Q 301 | Transistor | DTC124EU |
| Q 351 | Transistor | UMH3N |
| Q 352 | Transistor | UMH3N |
| Q 353 | Transistor | UMH3N |
| Q 650 | Transistor | 2SD1760F5 |
| Q 651 | Transistor | 2SD2396 |
| Q 652 | Transistor | UMD2N |
| Q 653 | Transistor | UMD2N |
| Q 803 | Transistor | 2SD1767 |
| Q 804 | Transistor | UMD2N |
| Q 805 | Transistor | DTC143EU |
| Q 807 | Transistor | 2SA1576 |
| Q 808 | Transistor | DTC114EU |
| Q 851 | Transistor | 2SD1760F5 |
| Q 852 | Transistor | UMD2N |
| Q 911 | Transistor | 2SD2396 |
| Q 913 | Transistor | UMD2N |
| Q 921 | Transistor | 2SD2396 |
| Q 922 | Transistor | DTC114EU |
| Q 923 | Transistor | 2SB1243 |
| Q 931 | Transistor | UMX1N |
| Q 932 | Transistor | DTC114EU |
| Q 951 | Transistor | 2SA1576 |
| Q 981 | Transistor | 2SC4081 |
| Q 982 | Transistor | UMD2N |
| D 131 | Diode Network | DA204U |
| D 132 | Diode Network | DA204U |
| D 133 | Diode | DAN202U |
| D 134 | Diode | DAP202U |
| D 301 | Diode | S5688G |
| D 302 | Diode | S5688G |
| D 303 | Diode | S5688G |
| D 304 | Diode | S5688G |
| D 401 | Diode | S5688G |
| D 402 | Diode | S5688G |
| D 403 | Diode | S5688G |
| D 650 | Diode | HZS6L(C1) |
| D 651 | Diode | HZS9L(B1) |
| D 751 | Diode | RB706F-40 |
| D 803 | Diode Network | DA204U |
| D 804 | Diode | DAN202U |
| D 805 | Diode | DAP202U |
| D 806 | Diode | DAN202U |
| D 807 | Diode | DAP202U |
| D 808 | Diode | HZS11L(A1) |
| D 851 | Diode | HZS11L(A1) |
| D 852 | Diode | RB411D |
| D 911 | Diode | S5688G |
| D 912 | Diode | HZS6L(B1) |
| D 921 | Diode | HZS9L(B3) |
| D 931 | Diode | HZS7L(A1) |
| D 932 | Diode | HZS7L(C3) |
| D 937 | Diode | MA111 |
| D 951 | Diode | DAN202U |
| D 981 | Diode | DAN202U |
| D 982 | Diode | HZS9L(A2) |
| L 101 | Inductor | LAU2R2K |
| L 201 | Ferri-Inductor | LAU4R7K |
| L 301 | Choke Coil 600µH | CTH1280 |
| L 401 | Ferri-Inductor | LAU4R7K |
| L 403 | Inductor | LAU1R0K |
| L 404 | Inductor | LAU1R0K |
| L 405 | Inductor | LAUR47K |
| L 406 | Inductor | CTF1385 |
| L 601 | Ferri-Inductor | LAU100K |
| L 683 | Ferri-Inductor | LAU100K |
| L 802 | Inductor | CTF1382 |
| L 852 | Inductor | CTF1510 |
| L 853 | Inductor | CTF1489 |
| L 951 | Inductor | LAU2R2K |
| X 601 | Radiator 10.00MHz | CSS1599 |
| S 802 | Switch(DETACH SENSE) | CSN1039 |
| VR751 | Semi-fixed 10kΩ(B) | CCP1229 |
| FU351 | Fuse 3A | CEK1286 |
| FU353 | Fuse 3A | CEK1286 |

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| BZ641 | Buzzer | CPV1062 |
| AR401 | Surge Protecror | DSP-201M-S00B |
| | FM/AM Tuner Unit | CWE1646 |
| | Fuse 10A | CEK1208 |

## RESISTORS

| | | |
|---|---|---|
| R 101 | | RS1/16S101J |
| R 102 | | RS1/16S620J |
| R 103 | | RS1/16S101J |
| R 104 | | RS1/16S222J |
| R 105 | | RS1/16S102J |
| R 106 | | RS1/16S472J |
| R 107 | | RS1/16S223J |
| R 108 | | RS1/16S472J |
| R 109 | | RS1/16S821J |
| R 110 | | RS1/16S821J |
| R 111 | | RS1/16S223J |
| R 112 | | RS1/16S223J |
| R 113 | | RS1/16S102J |
| R 114 | | RS1/16S102J |
| R 115 | | RS1/16S472J |
| R 133 | | RS1/16S563J |
| R 134 | | RS1/16S104J |
| R 139 | | RS1/16S563J |
| R 140 | | RS1/16S104J |
| R 147 | | RS1/16S474J |
| R 148 | | RS1/16S474J |
| R 161 | (P760MP,P7600MP) | RS1/16S102J |
| R 162 | (P760MP,P7600MP) | RS1/16S102J |
| R 163 | (P760MP,P7600MP) | RS1/16S103J |
| R 164 | (P760MP,P7600MP) | RS1/16S103J |
| R 165 | (P7650MP) | RS1/16S104J |
| R 201 | | RAB4C102J |
| R 241 | | RS1/16S102J |
| R 242 | | RS1/16S102J |
| R 247 | | RS1/16S101J |
| R 248 | | RS1/16S101J |
| R 249 | | RS1/16S101J |
| R 250 | | RS1/16S101J |
| R 301 | | RS1/16S103J |
| R 302 | | RS1/16S103J |
| R 303 | | RS1/16S153J |
| R 304 | | RS1/16S331J |
| R 351 | | RS1/16S821J |
| R 352 | | RS1/16S821J |
| R 353 | | RS1/16S821J |
| R 354 | | RS1/16S821J |
| R 355 | | RS1/16S821J |
| R 356 | | RS1/16S821J |
| R 357 | | RS1/16S223J |
| R 358 | | RS1/16S223J |
| R 359 | | RS1/16S223J |
| R 360 | | RS1/16S223J |
| R 361 | | RS1/16S223J |
| R 362 | | RS1/16S223J |
| R 403 | | RS1/16S681J |
| R 405 | | RS1/16S681J |
| R 406 | | RS1/16S681J |
| R 407 | | RS1/16S681J |
| R 408 | | RS1/16S681J |

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| R 410 | | RS1/16S681J |
| R 416 | | RS1/16S681J |
| R 417 | | RS1/16S681J |
| R 419 | | RS1/16S681J |
| R 421 | | RS1/16S681J |
| R 601 | (P760MP,P7650MP) | RS1/16S104J |
| R 602 | (P7600MP) | RS1/16S104J |
| R 603 | (P760MP,P7600MP) | RS1/16S104J |
| R 604 | (P7650MP) | RS1/16S104J |
| R 605 | | RS1/16S0R0J |
| R 606 | | RS1/16S104J |
| R 607 | | RS1/16S822J |
| R 608 | | RS1/16S221J |
| R 609 | | RS1/16S221J |
| R 610 | | RS1/16S682J |
| R 611 | | RS1/16S682J |
| R 612 | | RS1/16S104J |
| R 613 | | RS1/16S102J |
| R 616 | | RS1/16S473J |
| R 617 | | RS1/16S102J |
| R 618 | (P7650MP) | RS1/16S104J |
| R 630 | | RS1/16S104J |
| R 632 | | RS1/16S104J |
| R 641 | | RS1/16S102J |
| R 645 | | RS1/16S271J |
| R 651 | | RD1/4PU221J |
| R 652 | | RD1/4PU221J |
| R 656 | | RS1/16S102J |
| R 657 | | RS1/16S102J |
| R 665 | | RD1/4PU0R0J |
| R 666 | | RS1/16S0R0J |
| R 669 | | RS1/16S0R0J |
| R 671 | | RS1/16S0R0J |
| R 672 | | RS1/16S0R0J |
| R 676 | | RS1/16S102J |
| R 677 | | RS1/16S104J |
| R 678 | | RS1/16S102J |
| R 680 | | RS1/16S222J |
| R 681 | | RS1/16S104J |
| R 689 | | RS1/16S0R0J |
| R 751 | | RS1/16S104J |
| R 752 | | RS1/16S222J |
| R 753 | | RS1/16S561J |
| R 754 | | RS1/16S104J |
| R 802 | | RS1/16S222J |
| R 803 | | RS1/16S472J |
| R 804 | | RS1/16S1R0J |
| R 805 | | RS1/16S391J |
| R 806 | | RS1/16S391J |
| R 807 | | RS1/16S473J |
| R 808 | | RS1/16S473J |
| R 809 | | RS1/16S102J |
| R 810 | | RS1/16S222J |
| R 811 | | RS1/16S222J |
| R 812 | | RS1/16S222J |
| R 813 | | RS1/16S222J |
| R 814 | | RS1/16S222J |
| R 815 | | RS1/16S473J |
| R 816 | | RS1/16S104J |
| R 817 | | RD1/4PU391J |

| Circuit Symbol and No. | Part No. |
|---|---|
| R 818 | RS1/16S104J |
| R 819 | RS1/16S222J |
| R 820 | RS1/16S222J |
| R 823 | RS1/16S102J |
| R 824 | RS1/16S473J |
| R 825 | RS1/16S102J |
| R 826 | RS1/16S102J |
| R 827 | RS1/16S102J |
| R 828 | RS1/16S102J |
| R 851 | RS1/16S331J |
| R 852 | RD1/4PU302J |
| R 853 | RD1/4PU302J |
| R 854 | RS1/16S121J |
| R 855 | RS1/16S391J |
| R 856 | RS1/16S1R0J |
| R 857 | RS1/16S331J |
| R 903 | RS1/16S223J |
| R 912 | RS1/16S222J |
| R 913 | RS1/16S223J |
| R 914 | RS1/16S104J |
| R 915 | RS1/16S104J |
| R 916 | RS1/16S104J |
| R 923 | RS1/16S103J |
| R 924 | RD1/4PU122J |
| R 925 | RS1/16S182J |
| R 931 | RS1/16S472J |
| R 932 | RS1/16S473J |
| R 933 | RS1/16S103J |
| R 934 | RS1/16S473J |
| R 935 | RS1/16S104J |
| R 936 | RS1/16S103J |
| R 938 | RD1/4PU102J |
| R 939 | RD1/4PU102J |
| R 951 | RD1/4PU153J |
| R 952 | RS1/16S472J |
| R 953 | RS1/16S472J |
| R 954 | RS1/16S102J |
| R 983 | RS1/16S223J |
| R 984 | RS1/16S473J |
| R 985 | RS1/16S102J |

## CAPACITORS

| Circuit Symbol and No. | Part No. |
|---|---|
| C 101 | CKSRYB104K16 |
| C 102 | CKSRYB473K25 |
| C 131 | CKSRYB104K16 |
| C 132 | CKSRYB104K16 |
| C 141 | CKSRYB104K16 |
| C 142 | CKSRYB103K50 |
| C 143 | CKSRYB474K10 |
| C 144 | CKSRYB474K10 |
| C 145 | CCSRCH101J50 |
| C 146 | CCSRCH101J50 |
| C 147 | CKSRYB104K16 |
| C 201 | CEJQ1R0M50 |
| C 202 | CEJQ1R0M50 |
| C 203 | CKSRYB104K16 |
| C 204 | CKSRYB104K16 |
| C 205 | CKSRYB105K10 |
| C 206 | CEJQ470M16 |
| C 207 | CEJQ1R0M50 |
| C 208 | CEJQ1R0M50 |
| C 209 | CEJQ1R0M50 |
| C 210 | CEJQ1R0M50 |
| C 211 | CEJQ4R7M35 |
| C 212 | CEJQ4R7M35 |
| C 213 | CEJQ4R7M35 |
| C 214 | CEJQ4R7M35 |
| C 215 | CEJQ4R7M35 |
| C 216 | CEJQ4R7M35 |
| C 217 | CEJQ4R7M35 |
| C 218 | CEJQ4R7M35 |
| C 219 | CCSRCH120J50 |
| C 220 | CCSRCH120J50 |
| C 221 | CCSRCH120J50 |
| C 222 | CCSRCH120J50 |
| C 225 | CEJQ100M16 |
| C 241 | CKSRYB152K50 |
| C 242 | CKSRYB152K50 |
| C 306 | CEJQ330M10 |
| C 307 | 3300µF/16V CCH1486 |
| C 309 | CKSRYB104K16 |
| C 310 | CEJQ100M16 |
| C 311 | CKSYB475K16 |
| C 312 | CKSYB475K16 |
| C 317 | CKSRYB474K10 |
| C 318 | CKSRYB474K10 |
| C 321 | CKSRYB474K10 |
| C 322 | CKSRYB474K10 |
| C 323 | CKSRYB474K10 |
| C 324 | CKSRYB474K10 |
| C 325 | CKSQYB225K10 |
| C 326 | CKSQYB225K10 |
| C 327 | CKSRYB474K10 |
| C 328 | CKSRYB474K10 |
| C 351 | CEJQ4R7M35 |
| C 352 | CEJQ4R7M35 |
| C 353 | CEJQ4R7M35 |
| C 354 | CEJQ4R7M35 |
| C 355 | CEJQ4R7M35 |
| C 356 | CEJQ4R7M35 |
| C 363 | CKSRYB104K16 |
| C 401 | CKSRYB103K50 |
| C 402 | CEJQ101M10 |
| C 404 | CKSYB475K16 |
| C 406 | CEJQ470M10 |
| C 408 | CKSYB475K16 |
| C 409 | CEJQ1R0M50 |
| C 411 | CCSRCH101J50 |
| C 412 | CCSRCH470J50 |
| C 601 | CEJQ4R7M35 |
| C 602 | CKSQYB105K16 |
| C 603 | CEJQ2R2M50 |
| C 604 | CCSRCH200J50 |
| C 605 | CCSRCH200J50 |
| C 609 | CCSRCH101J50 |
| C 644 | CEJQ101M10 |
| C 645 | CKSRYB473K16 |
| C 646 | CCSRCH470J50 |
| C 647 | CKSRYB683K16 |

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| C 651 | | CEJQ101M10 |
| C 652 | | CKSRYB473K25 |
| C 654 | | CKSRYB152K50 |
| C 655 | | CKSRYB152K50 |
| C 657 | | CCSRCH470J50 |
| C 658 | 470µF/16V | CCH1183 |
| C 662 | | CCSRCH471J50 |
| C 751 | | CEJQ100M16 |
| C 752 | | CEJQNP100M16 |
| C 753 | | CEJQ220M10 |
| C 754 | | CKSRYB474K10 |
| C 756 | | CKSRYB474K10 |
| C 805 | | CKSRYB473K25 |
| C 806 | | CKSRYB473K25 |
| C 807 | | CKSRYB473K25 |
| C 851 | | CEJQ470M16 |
| C 853 | 4.7µF | CCG1111 |
| C 855 | | CEJQ100M25 |
| C 856 | | CCSRCH331J50 |
| C 857 | | CEJQ330M25 |
| C 858 | | CKSRYB104K16 |
| C 859 | | CEJQ101M10 |
| C 860 | | CKSRYB104K16 |
| C 861 | | CKSRYB223K50 |
| C 911 | 470µF/16V | CCH1331 |
| C 912 | | CKSRYB472K50 |
| C 913 | | CKSRYB103K50 |
| C 914 | | CEJQ470M10 |
| C 921 | | CEJQ221M10 |
| C 922 | | CKSRYB103K50 |
| C 923 | | CEJQ101M16 |
| C 931 | | CEJQ1R0M50 |
| C 932 | | CKSRYB104K16 |
| C 910 | | CKSQYB225K10 |

# C

## Unit Number:XWM7053(P760MP)
## Unit Number:
## XWM7052(P7600MP,P7650MP)
## Unit Name:Keyboard Unit

### MISCELLANEOUS

| | | |
|---|---|---|
| IC 1901 | IC | RS-140 |
| IC 1902 | IC | S-818A33AUC-BGN |
| IC 1940 | IC | PD5932A |
| IC 1990 | IC(P760MP) | PD8123A |
| IC 1990 | IC(P7600MP,P7650MP) | PD8119A |
| Q 1960 | Transistor | 2SC4617 |
| Q 1961 | Transistor | 2SC2411K |
| D 1903 | LED | CL-190UB2-X |
| D 1904 | LED | CL-190UB2-X |
| D 1905 | LED | CL-190UB2-X |
| D 1906 | LED | CL-190UB2-X |
| D 1907 | LED | CL-190UB2-X |
| D 1908 | LED | CL-190UB2-X |
| D 1909 | LED | CL-190UB2-X |
| D 1910 | LED | CL-190UB2-X |

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| D 1911 | LED | CL-190UB2-X |
| D 1912 | LED | CL-190UB2-X |
| D 1914 | LED | CL-195PG-CD |
| D 1940 | Diode | 1SS355 |
| L 1901 | Inductor | CTF1530 |
| L 1940 | Inductor | CTF1530 |
| TH1960 | Thermistor | CCX1037 |
| X 1940 | Radiator 10.0MHz | CSS1577 |
| S 1901 | Encoder(VOLUME) | XSD7002 |
| S 1902 | Push Switch | CSG1112 |
| S 1903 | Push Switch | CSG1112 |
| S 1904 | Push Switch | CSG1111 |
| S 1905 | Push Switch | CSG1111 |
| S 1906 | Switch | CSG1110 |
| S 1907 | Push Switch | CSG1112 |
| S 1908 | Switch | CSG1107 |
| S 1909 | Switch | CSG1107 |
| S 1910 | Switch | CSG1107 |
| S 1911 | Switch | CSG1107 |
| S 1912 | Switch | CSG1107 |
| S 1913 | Switch | CSG1107 |
| S 1914 | Push Switch | CSG1111 |
| S 1915 | Push Switch | CSG1111 |
| S 1916 | Switch | CSG1110 |
| S 1917 | Push Switch | CSG1112 |
| S 1918 | Switch | CSG1110 |
| S 1919 | Switch | CSG1110 |
| S 1921 | Switch | CSG1110 |
| S 1922 | Switch | CSG1110 |
| VR1970 | Semi-fixed 20kΩ(B) | CCP1231 |
| VR1971 | Semi-fixed 15kΩ(B) | CCP1230 |

### RESISTORS

| | |
|---|---|
| R 1901 | RS1/16S222J |
| R 1902 | RS1/16S222J |
| R 1903 | RS1/16S473J |
| R 1905 | RS1/16S680J |
| R 1906 | RS1/16S680J |
| R 1907 | RS1/16S680J |
| R 1908 | RS1/16S680J |
| R 1909 | RS1/16S680J |
| R 1910 | RS1/16S680J |
| R 1911 | RS1/16S103J |
| R 1912 | RS1/16S682J |
| R 1913 | RS1/16S121J |
| R 1914 | RS1/16S184J |
| R 1915 | RS1/16S2R2J |
| R 1916 | RS1/16S680J |
| R 1917 | RS1/16S680J |
| R 1918 | RS1/16S680J |
| R 1919 | RS1/16S680J |
| R 1920 | RS1/16S181J |
| R 1922 | RS1/16S560J |
| R 1924 | RS1/16S560J |
| R 1940 | RS1/16S222J |
| R 1941 | RS1/16S101J |
| R 1942 | RAB4C101J |
| R 1943 | RAB4C101J |
| R 1945 | RAB4C101J |

| Circuit Symbol and No. | Part No. |
|---|---|
| R 1947 | RAB4C101J |
| R 1948 | RAB4C101J |
| R 1949 | RAB4C101J |
| R 1950 | RAB4C101J |
| R 1952 | RS1/16S101J |
| R 1954 | RAB4C473J |
| R 1955 | RS1/16S473J |
| R 1956 | RS1/16S103J |
| R 1957 | RAB4C101J |
| R 1958 | RS1/16S473J |
| R 1959 | RS1/16S154J |
| R 1960 | RS1/16S223J |
| R 1961 | RS1/16S683J |
| R 1962 | RS1/16S392J |
| R 1963 | RS1/16S393J |
| R 1980 | RS1/16S473J |
| R 1991 | RS1/16S101J |
| R 1992 | RS1/16S101J |
| R 1993 | RS1/16S101J |
| R 1994 | RS1/16S101J |
| R 1995 | RS1/16S473J |
| R 1996 | RS1/16S222J |
| R 1997 | RS1/16S332J |
| R 1998 | RS1/16S102J |
| R 1999 | RS1/16S102J |
| R 2104 | RS1/16S101J |
| R 2105 | RS1/16S101J |
| R 2106 | RS1/16S101J |
| R 2107 | RS1/16S101J |
| R 2108 | RS1/16S101J |
| R 2109 | RS1/16S101J |
| R 2110 | RS1/16S101J |
| R 2111 | RS1/16S101J |
| R 2112 | RS1/16S102J |
| R 2113 | RS1/16S102J |
| R 2114 | RS1/16S102J |
| R 2115 | RS1/16S102J |

**CAPACITORS**

| | |
|---|---|
| C 1908 | CKSYF106Z10 |
| C 1909 | CSZSR4R7M16 |
| C 1910 | CSZSR4R7M10 |
| C 1911 | CKSRYB104K16 |
| C 1912 | CKSRYB104K16 |
| C 1913 | CKSRYB104K16 |
| C 1914 | CKSRYB104K16 |
| C 1915 | CKSRYB104K16 |
| C 1916 | CKSRYB104K16 |
| C 1917 | CKSRYB104K16 |
| C 1918 | CKSRYB104K16 |
| C 1919 | CKSRYB104K16 |
| C 1920 | CKSRYB104K16 |
| C 1940 | CKSRYB103K50 |
| C 1941 | CKSRYB473K25 |
| C 1942 | CKSRYB105K10 |
| C 1943 | CKSRYB103K50 |
| C 1944 | CSZSR4R7M10 |
| C 1972 | CKSRYB104K16 |
| C 1973 | CKSRYB104K25 |

| Circuit Symbol and No. | Part No. |
|---|---|
| C 1974 | CKSRYB104K25 |
| C 1975 | CKSRYB104K25 |
| C 1976 | CKSRYB104K25 |
| C 1990 | CKSRYB103K50 |
| C 1991 | CKSRYB104K25 |
| C 1992 | CKSRYB104K25 |

## B

## Unit Number:CWM8758
## Unit Name:Panel Unit

**MISCELLANEOUS**

| | | |
|---|---|---|
| D 1970 | LED | CL220PGC |
| S 1970 | Push Switch(EJECT) | CSG1112 |

**RESISTORS**

| | |
|---|---|
| R 1970 | RS1/16S101J |
| R 1971 | RS1/16S101J |
| R 1972 | RS1/16S0R0J |

**CAPACITORS**

| | |
|---|---|
| C 1970 | CKSRYB104K16 |

## D

## Unit Number:CWX2851
## Unit Name:CD CORE UNIT(S10WMA)

**MISCELLANEOUS**

| | | |
|---|---|---|
| IC 201 | IC | UPD63761GJ |
| IC 203 | IC | NJM2391DL1-33 |
| IC 301 | IC | BA5835FM |
| IC 501 | IC | S-L2980A15MC-C6A |
| IC 701 | IC | PE5440A |
| IC 703 | IC | S-812C33AUA-C2N |
| Q 101 | Transistor | 2SB1132 |
| Q 601 | Transistor | IMH20 |
| Q 603 | Transistor | 2SB709A |
| Q 701 | Transistor | UN2111 |
| D 101 | Diode | 1SS355 |
| D 601 | Diode | MA152WA |
| L 203 | Inductor | CTF1389 |
| L 207 | Inductor | CTF1389 |
| L 209 | Inductor | CTF1389 |
| L 703 | Inductor | CTF1389 |
| X 201 | Ceramic Resonator 16.934MHz | CSS1603 |
| X 701 | Ceramic Resonator 4.00MHz | CSS1652 |
| S 901 | Switch(HOME) | CSN1051 |
| S 902 | Switch(CLAMP) | CSN1051 |
| S 903 | Spring Switch(DSCSNS) | CSN1052 |
| S 904 | Switch(12EJ) | CSN1051 |
| S 905 | Switch(8EJ) | CSN1051 |

**RESISTORS**

| | |
|---|---|
| R 101 | RS1/10S1R5J |
| R 102 | RS1/10S1R5J |
| R 103 | RS1/10S1R5J |
| R 104 | RS1/10S1R5J |

| Circuit Symbol and No. | Part No. |
|---|---|
| R 105 | RS1/10S1R5J |
| R 107 | RS1/16SS0R0J |
| R 201 | RS1/16SS102J |
| R 202 | RS1/16SS333J |
| R 205 | RS1/16SS473J |
| R 207 | RS1/16SS473J |
| R 209 | RS1/16SS473J |
| R 214 | RS1/16SS472J |
| R 216 | RS1/16SS472J |
| R 218 | RS1/16SS472J |
| R 220 | RS1/16SS472J |
| R 221 | RS1/16SS103J |
| R 222 | RS1/16SS103J |
| R 223 | RS1/16SS0R0J |
| R 224 | RS1/16SS0R0J |
| R 225 | RS1/16SS103J |
| R 226 | RS1/16SS393J |
| R 227 | RS1/16SS562J |
| R 228 | RS1/16SS122J |
| R 229 | RS1/16SS472J |
| R 231 | RS1/16SS0R0J |
| R 232 | RS1/16SS122J |
| R 233 | RS1/16SS0R0J |
| R 240 | RS1/16SS0R0J |
| R 241 | RS1/16SS333J |
| R 242 | RS1/16SS0R0J |
| R 243 | RS1/16SS333J |
| R 245 | RS1/16SS333J |
| R 250 | RS1/16SS0R0J |
| R 256 | RS1/16SS0R0J |
| R 261 | RS1/16S0R0J |
| R 262 | RS1/16S0R0J |
| R 263 | RS1/16S0R0J |
| R 264 | RS1/16S0R0J |
| R 267 | RS1/16S0R0J |
| R 301 | RS1/16SS183J |
| R 302 | RS1/16SS822J |
| R 304 | RS1/16SS183J |
| R 305 | RS1/16SS822J |
| R 307 | RS1/16SS183J |
| R 308 | RS1/16SS183J |
| R 309 | RS1/16SS183J |
| R 310 | RS1/16SS183J |
| R 501 | RS1/16SS0R0J |
| R 601 | RS1/16S101J |
| R 602 | RS1/16S101J |
| R 603 | RS1/16S223J |
| R 604 | RS1/16S223J |
| R 605 | RS1/16SS103J |
| R 606 | RS1/16S0R0J |
| R 701 | RS1/16S0R0J |
| R 702 | RS1/16SS0R0J |
| R 703 | RS1/16SS104J |
| R 704 | RS1/16SS104J |
| R 705 | RS1/16SS221J |
| R 706 | RS1/16SS221J |
| R 707 | RS1/16SS0R0J |
| R 708 | RS1/16SS221J |
| R 709 | RS1/16SS473J |

| Circuit Symbol and No. | Part No. |
|---|---|
| R 710 | RS1/16SS102J |
| R 711 | RS1/16SS102J |
| R 712 | RS1/16SS102J |
| R 713 | RS1/16SS102J |
| R 714 | RS1/16SS473J |
| R 715 | RS1/16SS0R0J |
| R 716 | RS1/16SS472J |
| R 719 | RS1/16SS221J |
| R 720 | RS1/16SS471J |
| R 721 | RS1/16S0R0J |
| R 724 | RS1/16S473J |
| R 725 | RS1/16SS222J |
| R 726 | RS1/16SS103J |
| R 727 | RS1/16SS473J |
| R 729 | RS1/16SS223J |
| R 730 | RS1/16SS473J |
| R 731 | RS1/16SS104J |
| R 732 | RS1/16SS104J |
| R 733 | RS1/16SS104J |
| R 735 | RS1/16SS473J |
| R 737 | RS1/16SS104J |
| R 740 | RS1/16SS473J |
| R 742 | RS1/16SS104J |
| R 745 | RS1/16SS473J |
| R 746 | RS1/16SS104J |
| R 750 | RS1/16SS473J |
| R 754 | RS1/16SS102J |
| R 755 | RS1/16SS102J |
| R 756 | RS1/16SS104J |
| R 765 | RAB4CQ221J |
| R 769 | RAB4CQ221J |
| R 773 | RAB4CQ221J |
| R 777 | RS1/16SS221J |
| R 778 | RS1/16SS221J |
| R 779 | RS1/16SS221J |
| R 901 | RAB4CQ221J |
| R 902 | RS1/16S0R0J |
| R 905 | RS1/16SS221J |
| R 906 | RS1/16SS221J |
| R 908 | RS1/16SS0R0J |
| R 910 | RS1/16SS0R0J |

## CAPACITORS

| | | |
|---|---|---|
| C 101 | | CKSSYB104K10 |
| C 102 | | CKSSYB104K10 |
| C 103 | 100µF/16V | CCH1504 |
| C 104 | 47µF/6.3V | CCH1506 |
| C 105 | | CKSSYB104K10 |
| C 106 | | CCSSCH101J50 |
| C 107 | | CKSRYB224K16 |
| C 108 | | CKSSYB104K10 |
| C 110 | | CKSSYB104K10 |
| C 201 | | CKSSYB471K50 |
| C 202 | | CKSSYB104K10 |
| C 203 | | CKSSYB104K10 |
| C 204 | 22µF/6.3V | CCH1507 |
| C 205 | | CKSSYB104K10 |
| C 207 | 220µF/4V | CCH1590 |
| C 208 | | CKSSYB104K10 |

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| C 209 | | CKSSYB104K10 |
| C 216 | | CKSSYB332K50 |
| C 217 | | CKSSYB104K10 |
| C 218 | | CKSSYB223K16 |
| C 219 | | CKSSYB104K10 |
| C 220 | | CKSSYB103K16 |
| C 221 | | CKSSYB104K10 |
| C 222 | | CCSSCH560J50 |
| C 223 | | CCSSCH5R0C50 |
| C 224 | | CKSSYB104K10 |
| C 225 | | CKSSYB103K16 |
| C 226 | | CCSSCH680J50 |
| C 227 | | CCSSCH470J50 |
| C 228 | | CKSSYB682K25 |
| C 230 | | CKSSYB104K10 |
| C 232 | | CKSSYB104K10 |
| C 233 | 10µF/6.3V | CCH1470 |
| C 234 | 220µF/4V | CCH1590 |
| C 235 | | CKSRYB224K16 |
| C 237 | | CKSSYB104K10 |
| C 239 | | CCSSCH330J50 |
| C 242 | | CKSSYB104K10 |
| C 246 | | CKSSYB104K10 |
| C 250 | | CKSRYB102K50 |
| C 251 | | CKSRYB102K50 |
| C 260 | | CKSSYB104K10 |
| C 301 | | CKSSYB221K50 |
| C 302 | | CKSSYB221K50 |
| C 303 | | CKSSYB472K25 |
| C 304 | | CKSSYB103K16 |
| C 305 | 100µF/16V | CCH1504 |
| C 306 | | CKSSYB104K10 |
| C 307 | | CKSSYB104K10 |
| C 501 | | CKSRYB224K16 |
| C 505 | | CKSQYB475K6R3 |
| C 601 | | CCSRCH102J50 |
| C 602 | | CCSRCH102J50 |
| C 603 | 4.7µF/25V | CCH1568 |
| C 604 | 4.7µF/25V | CCH1568 |
| C 701 | | CKSSYB104K10 |
| C 702 | | CKSSYB471K50 |
| C 703 | | CKSSYB103K16 |
| C 704 | 4.7µF/25V | CCH1592 |
| C 706 | | CKSSYB104K10 |
| C 707 | | CKSSYB104K10 |
| C 712 | | CKSRYB224K16 |
| C 713 | | CKSSYB104K10 |
| C 714 | | CKSSYB104K10 |
| C 716 | | CKSSYB103K16 |
| C 720 | | CKSQYB225K10 |
| C 722 | | CKSRYB105K10 |
| C 903 | | CKSSYB471K50 |
| C 906 | | CKSRYB224K16 |
| C 907 | | CKSSYB103K16 |
| C 910 | | CKSQYB225K10 |

| Circuit Symbol and No. | | Part No. |
|---|---|---|
| M 2 | Motor Unit(LOADING/CARRIAGE) | CXB8933 |

## Miscellaneous Parts List

| | | |
|---|---|---|
| | Pickup Unit(P10)(Service) | CXX1641 |
| M 1 | Motor Unit(SPINDLE) | CXB6007 |