
2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to▽mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

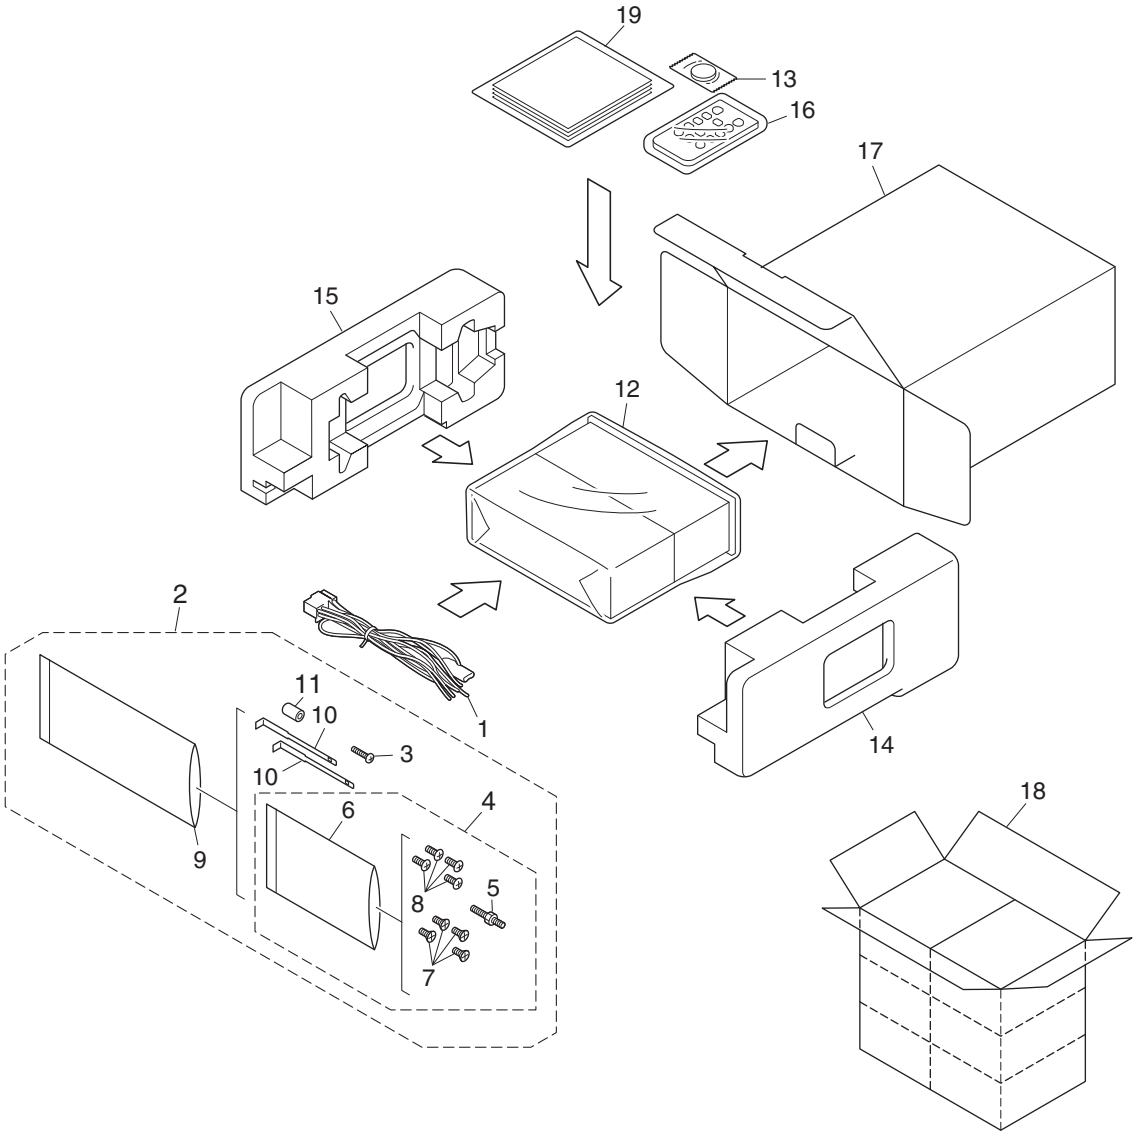


PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1017
	2	Accessory Assy	CEA6707
	3	Screw	BPZ20P080FTC
	4	Screw Assy	CEA3849
	5	Screw	CBA1650
*	6	Polyethylene Bag	CEG-127
	7	Screw	CRZ50P090FTC
	8	Screw	TRZ50P080FTC
	9	Polyethylene Bag	CEG1160
	10	Handle	CND3707
	11	Bush	CNV3930
	12	Polyethylene Bag	CEG1374
*	13	Battery	CEX1065
	14	Protector	CHP3279
	15	Protector	CHP3280
	16	Remote Control Assy	CXC5719
	17	Carton	YHG5114
	18	Contain Box	YHL5114
	19-1	Owner's Manual	YRD5077
	19-2	Installation Manual	YRD5078
	19-3	Caution Card	CRP1310
*	19-4	Warranty Card	CRY1246

Owner's Manual,Installation Manual

Part No.	Language
YRD5077	English, French, Spanish
YRD5078	English, French, Spanish


2.2 EXTERIOR

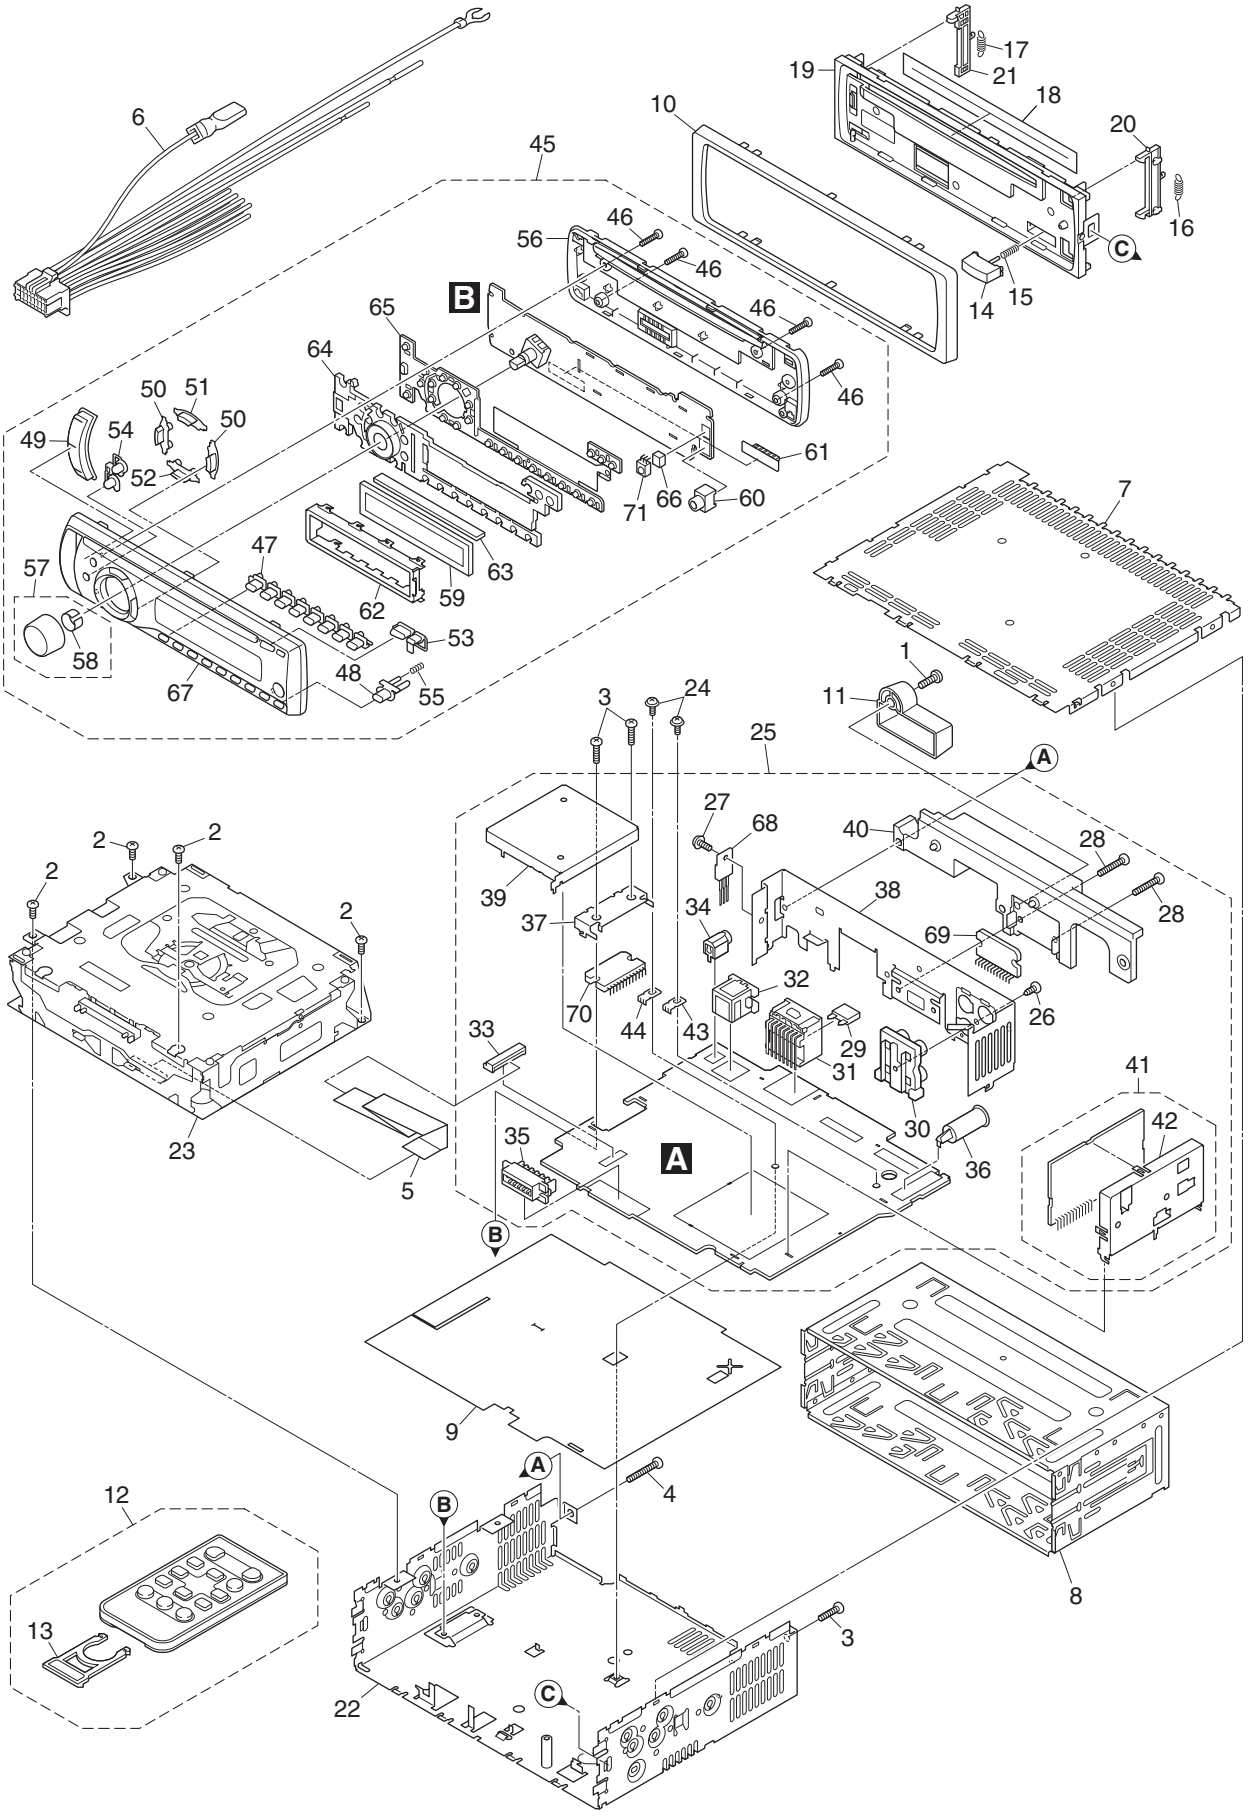
1
2
3
4
A
B
C
D
E
F
6
45
10
19
17
21
18
20
16
56
46
B
65
64
50
51
49
54
52
61
71
66
60
7
57
47
63
59
62
53
58
67
48
55
11
24
25
27
68
40
28
39
37
38
34
69
70
44
43
32
26
33
29
31
30
41
42
35
36
23
5
9
12
13
22
8

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ40P140FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P100FTC
	4	Screw	BSZ26P180FTC
	5	Cable	CDE8336
	6	Cord Assy	CDP1017
	7	Case	CNB2793
	8	Holder	CND3598
	9	Insulator	CNN1385
	10	Panel	CNS8762
	11	Holder	CNV7619
	12	Remote Control Assy	CXC5719
	13	Cover	CNS7068
	14	Button(DETACH)	CAC4836
	15	Spring	CBH2367
	16	Spring	CBH2961
	17	Spring	CBH2962
	18	Cover	CNN1665
	19	Panel	CNS8760
	20	Arm	CNV9311
	21	Arm	CNV9312
	22	Chassis Unit	CXC7391
	23	CD Mechanism Module(S10.5)	CXK5760
	24	Screw	ISS26P055FTC
	25	Tuner Amp Unit	YWM5129
	26	Screw	BPZ26P080FTC
	27	Screw	BSZ26P060FTC
	28	Screw	BSZ26P160FTC
⚠	29	Fuse(10 A)	CEK1208
	30	Pin Jack(CN351)	CKB1051
	31	Plug(CN901)	CKM1376
	32	Connector(CN101)	CKS3408
	33	Connector(CN651)	CKS3829
	34	Connector(CN871)	CKS4124
	35	Connector(CN831)	CKS5664
	36	Antenna Jack(CN401)	CKX1056
	37	Holder	CND3545
	38	Holder	CND3546
	39	Holder	CND3706
	40	Heat Sink	CNR1668
	41	FM/AM Tuner Unit	CWE2025
	42	Holder	CND3466
	43	Terminal(CN402)	VNF1084
	44	Terminal(CN601)	VNF1084
	45	Detachable Assy	YXA5198
	46	Screw	BPZ20P100FTC
	47	Button(1-6)	CAC9866
	48	Button(Detach)	CAC9941
	49	Button(AUDIO/FUNC)	CAC9942
	50	Button(L/R)	CAC9946
	51	Button(UP)	CAC9947
	52	Button(DOUN)	CAC9948
	53	Button(EJECT)	CAC9949
	54	Button(EQ/BAND)	CAC9950
	55	Spring	CBH2210
	56	Cover	CNS8758
	57	Knob Unit(SOURCE, VOLUME)	CXC7054
	58	Spring	CBL1761
	59	LCD	CAW1930
	60	Jack(CN1802)	CKN1047
	61	Connector(CN1801)	CKS5663
	62	Holder	CND3646
	63	Connector	CNV9306
	64	Lighting Conductor	CNV9308
	65	Rubber	CNV9310
	66	Cushion	YNM5029
	67	Grille Unit	YXC5041
	68	Transistor(Q991)	2SD2396
	69	IC(IC301)	PAL007C
	70	IC(IC911)	BA4918-V12
	71	IC(IC1802)	GP1UX51RK

2.3 CD MECHANISM MODULE

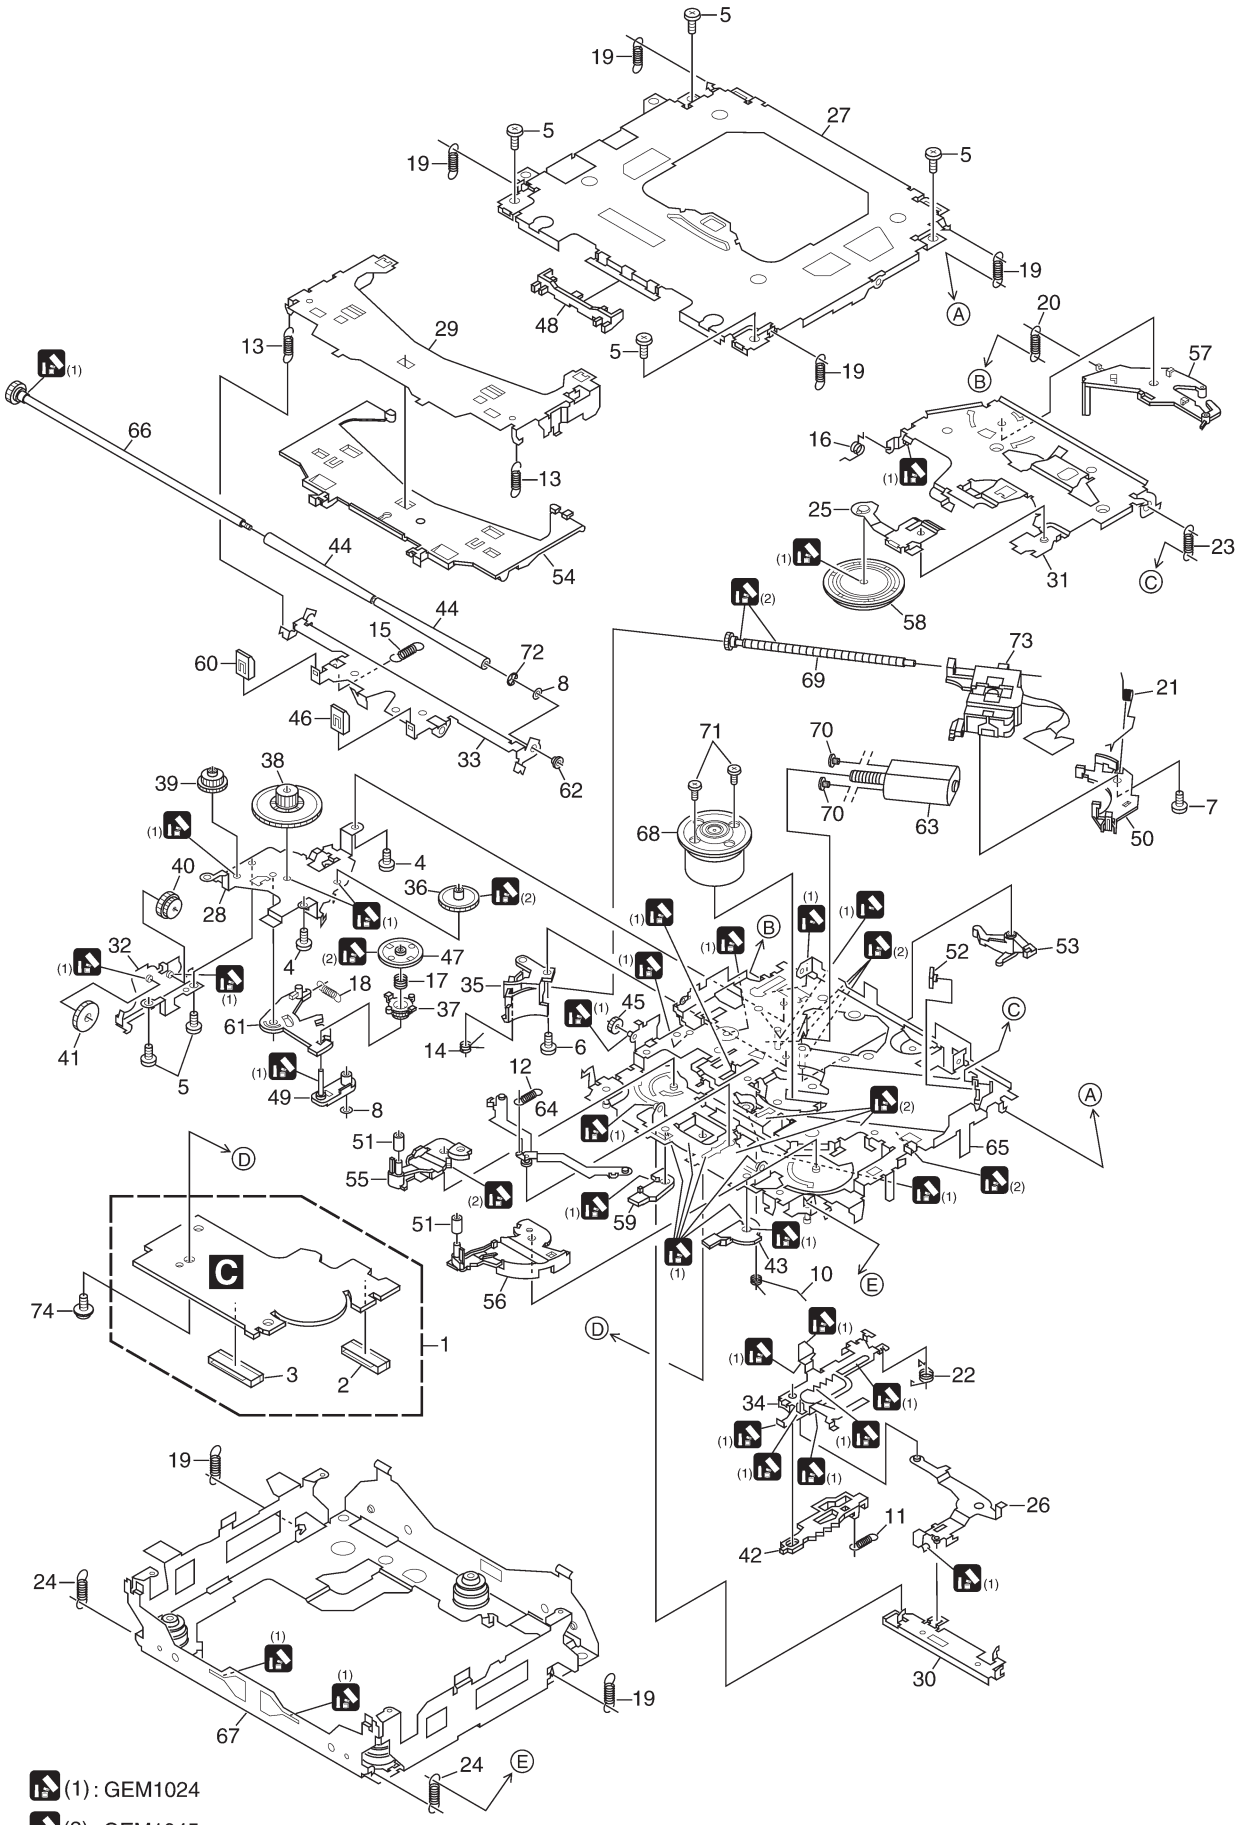

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP2)	CWX3350
	2	Connector(CN101)	CKS4911
	3	Connector(CN701)	CKS4808
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	•••••	
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND2584
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV8189
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV8448
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV8347
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8447
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC7134
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : YWM5129

Unit Name : Tuner Amp Unit

Unit Number :

Unit Name : Keyboard Unit

Unit Number : CWX3350

Unit Name : CD Core

Unit(S10.5COMP2)

A

Unit Number : YWM5129

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(B,91,67) IC	HA12241FP
IC 151	(B,120,101) IC	PML015B
IC 301	(A,91,132) IC	PAL007C
IC 601	(B,125,42) IC	PN5011A
IC 751	(B,57,69) IC	NJM4558MD
IC 911	(A,20,79) IC	BA4918-V12
Q 101	(B,54,105) Transistor	2SA1576A
Q 102	(B,60,118) Transistor	DTC114EUA
Q 201	(B,125,128) Transistor	UMD2N
Q 351	(B,157,125) Transistor	UMH3N
Q 352	(B,135,123) Transistor	UMH3N
Q 601	(A,147,65) Transistor	2SD1858
Q 801	(B,15,32) Transistor	2SA1576A
Q 802	(B,16,26) Transistor	DTC114EUA
Q 821	(B,27,12) Transistor	2SA1036K
Q 822	(B,21,17) Transistor	DTC114EUA
Q 931	(B,61,112) Transistor	2SC4081
Q 991	(A,4,113) Transistor	2SD2396
Q 992	(B,9,104) Transistor	UMD2N
D 301	(A,62,125) Diode	MPG06G-6415G3
D 302	(A,50,127) Diode	MPG06G-6415G3
D 840	(B,71,6) Diode	FTZ6R8E
D 841	(B,84,7) Diode	FTZ6R8E

Circuit Symbol and No. **Part No.**

D 901	(A,45,108) Diode	MPG06G-6415G3
D 902	(A,45,105) Diode	MPG06G-6415G3
D 911	(A,48,79) Diode	MPG06G-6415G3
D 912	(A,42,79) Diode	MPG06G-6415G3
D 931	(A,60,106) Diode	HZS7L(A1)
D 991	(A,16,111) Diode	HZS7L(C3)
L 101	(A,85,68) Inductor	LAU2R2K
L 151	(A,124,117) Inductor	LAU2R2K
L 401	(A,146,80) Inductor	LAU2R2K
L 402	(A,143,94) Inductor	LAU2R2K
L 407	(B,160,64) Inductor	CTF1379
L 601	(B,117,20) Inductor	CTF1389
L 602	(A,148,24) Inductor	LAUR47K
L 603	(A,109,78) Inductor	LAU2R2K
L 604	(A,117,65) Inductor	LAUR47K
L 605	(A,124,67) Inductor	LAUR47K
L 606	(A,143,67) Inductor	LAU1R0K
L 607	(A,144,59) Inductor	LAU1R0K
L 608	(A,131,67) Inductor	LAU1R5K
L 609	(A,128,67) Inductor	LAU1R5K
L 610	(A,141,64) Inductor	LAU1R2J
L 611	(B,133,78) Inductor	CTF1379
L 612	(B,130,78) Inductor	CTF1379
L 613	(B,141,59) Inductor	CTF1379
L 614	(B,120,60) Inductor	CTF1379
L 615	(B,143,51) Inductor	CTF1389
L 616	(B,148,73) Inductor	CTF1379
L 617	(B,139,75) Inductor	CTF1379
L 901	(A,32,96) Choke Coil 600 µH	CTH1280
X 601	(A,138,60) Crystal 74.100 MHz	CSS1728
X 602	(A,111,56) Crystal 4.718 6 MHz	CSS1727
⚠FU351	(B,129,132) Fuse 3 A	CEK1286
AR401	(B,161,109) Surge Protector	IMSA-6801-01Y901
⚠	Fuse 10 A	CEK1208
	FM/AM Tuner Unit	CWE2025

RESISTORS

R 101	(B,28,119)	RS1/16S181J
R 102	(B,33,120)	RS1/16S222J
R 103	(B,24,129)	RS1/16S181J
R 104	(B,85,85)	RS1/16S101J

Circuit Symbol and No.		Part No.
R 105	(B,89,85)	RS1/16S101J
R 106	(B,26,121)	RS1/16S223J
R 107	(B,23,126)	RS1/16S223J
R 108	(B,23,122)	RS1/16S102J
R 109	(B,24,122)	RS1/16S102J
R 110	(B,57,110)	RS1/16S332J
R 111	(B,57,114)	RS1/16S562J
R 112	(B,103,34)	RS1/16S102J
R 113	(B,105,36)	RS1/16S472J
R 114	(B,109,36)	RS1/16S472J
R 116	(B,85,87)	RS1/16S470J
R 117	(B,89,86)	RS1/16S150J
R 151	(B,110,9)	RAB4C102J
R 201	(B,124,121)	RS1/16S103J
R 202	(B,120,132)	RS1/16S153J
R 203	(B,118,132)	RS1/16S221J
R 301	(B,91,105)	RS1/16S153J
R 351	(B,162,129)	RS1/16S223J
R 352	(B,162,133)	RS1/16S223J
R 353	(B,143,118)	RS1/16S821J
R 354	(B,161,124)	RS1/16S821J
R 355	(B,131,129)	RS1/16S223J
R 356	(B,144,130)	RS1/16S223J
R 357	(B,143,126)	RS1/16S821J
R 358	(B,137,127)	RS1/16S821J
R 401	(B,157,42)	RS1/16S102J
R 404	(B,157,55)	RS1/16S472J
R 405	(B,157,52)	RS1/16S682J
R 406	(B,157,58)	RS1/16S102J
R 407	(B,157,60)	RS1/16S102J
R 408	(B,166,46)	RAB4C104J
R 409	(B,157,45)	RS1/16S391J
R 410	(B,157,47)	RS1/16S681J
R 411	(B,157,49)	RS1/16S681J
R 412	(B,157,51)	RS1/16S681J
R 601	(B,121,26)	RS1/16S473J
R 602	(B,107,45)	RS1/16S104J
R 603	(B,104,38)	RS1/16S473J
R 606	(B,105,68)	RS1/16S473J
R 607	(B,134,26)	RAB4C104J
R 608	(B,137,58)	RS1/16S470J
R 609	(B,104,45)	RS1/16S473J
R 610	(B,115,66)	RS1/16S203J
R 611	(B,135,69)	RS1/16S182J
R 612	(B,112,71)	RS1/16S563J
R 613	(B,138,50)	RS1/16S302J
R 615	(B,109,70)	RS1/16S563J
R 616	(B,154,38)	RS1/16S104J
R 617	(B,133,31)	RS1/16S473J
R 618	(B,144,39)	RS1/16S473J
R 619	(B,144,37)	RS1/16S104J
R 622	(B,127,25)	RS1/16S104J
R 638	(B,156,86)	RS1/16S273J
R 643	(B,154,36)	RS1/16S104J
R 651	(B,30,28)	RS1/16S104J
R 652	(B,30,33)	RS1/16S102J
R 653	(B,30,32)	RS1/16S102J
R 654	(B,30,30)	RS1/16S221J
R 656	(B,103,24)	RS1/16S104J
R 657	(B,103,26)	RS1/16S104J

Circuit Symbol and No.		Part No.
R 658	(B,34,37)	RS1/16S104J
R 659	(B,103,28)	RS1/16S472J
R 660	(B,103,30)	RS1/16S472J
R 661	(B,106,26)	RS1/16S221J
R 662	(B,106,28)	RS1/16S221J
R 663	(B,106,30)	RS1/16S221J
R 664	(B,20,43)	RS1/16S104J
R 666	(B,146,53)	RS1/16S103J
R 670	(B,129,24)	RS1/16S473J
R 751	(B,65,69)	RS1/16S103J
R 752	(B,57,85)	RS1/16S103J
R 753	(B,61,65)	RS1/16S103J
R 754	(B,59,81)	RS1/16S103J
R 755	(B,50,67)	RS1/16S103J
R 756	(B,50,71)	RS1/16S103J
R 757	(B,59,19)	RS1/16S103J
R 758	(B,58,22)	RS1/16S103J
R 759	(B,70,83)	RS1/16S103J
R 760	(B,67,82)	RS1/16S103J
R 801	(B,12,33)	RS1/16S103J
R 802	(B,13,29)	RS1/16S472J
R 803	(B,51,12)	RS1/16S222J
R 821	(B,22,14)	RS1/16S562J
R 822	(B,22,12)	RS1/16S103J
R 831	(B,32,11)	RS1/16S1R0J
R 832	(B,82,24)	RS1/16S473J
R 833	(A,80,26)	RD1/4PU222J
R 834	(A,78,26)	RD1/4PU222J
R 835	(A,68,22)	RD1/4PU222J
R 836	(B,64,26)	RS1/16S104J
R 837	(A,73,23)	RD1/4PU103J
R 839	(A,86,11)	RD1/4PU222J
R 840	(A,83,11)	RD1/4PU222J
R 871	(B,15,120)	RS1/16S102J
R 872	(B,14,124)	RS1/16S102J
R 873	(B,130,21)	RS1/16S103J
R 874	(B,139,29)	RS1/16S103J
R 911	(B,18,80)	RS1/16S104J
R 931	(B,102,37)	RS1/16S104J
R 932	(B,63,115)	RS1/16S223J
R 933	(A,57,122)	RD1/4PU102J
R 934	(B,65,120)	RS1/16S472J
R 935	(B,65,116)	RS1/16S473J
R 991	(A,10,119)	RD1/4PU271J

CAPACITORS

C 101	(B,32,133)	CKSRYB104K16
C 104	(B,89,72)	CKSRYB103K50
C 151	(B,111,95)	CKSRYB224K16
C 152	(B,135,96)	CKSRYB224K16
C 153	(B,102,98)	CKSRYB105K10
C 154	(B,133,95)	CKSRYB105K10
C 155	(A,115,113)	CEJQ470M10
C 156	(B,134,99)	CKSRYB105K10
C 157	(B,101,100)	CKSRYB105K10
C 158	(B,101,101)	CKSRYB105K10
C 159	(B,109,100)	CKSRYB105K10
C 160	(B,134,103)	CKSRYB105K10
C 161	(B,134,101)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 162	(B,129,105)	CKSRYB153K50
C 163	(A,111,112)	CEJQ100M16
C 164	(A,111,103)	CEJQ100M16
C 165	(B,121,112)	CKSRYB104K16
C 167	(B,111,106)	CKSRYB153K50
C 201	(A,123,131)	CEJQ330M10
C 301	(B,122,123)	CKSQYB474K16
C 302	(B,118,121)	CKSQYB474K16
C 303	(B,120,123)	CKSQYB474K16
C 304	(B,115,121)	CKSQYB474K16
C 305	(B,121,127)	CKSRYB474K10
C 306	(B,117,125)	CKSRYB474K10
C 307	(B,119,127)	CKSRYB474K10
C 308	(B,115,125)	CKSRYB474K10
C 309	(B,120,136)	CKSQYB225K10
C 310	(B,112,141)	CKSQYB225K10
C 312	(A,97,120)	CEJQ100M16
C 313	(B,97,139)	CKSRYB104K16
C 353	(A,141,117)	CEJQ2R2M50
C 354	(A,142,110)	CEJQ2R2M50
C 357	(A,141,124)	CEJQ2R2M50
C 358	(A,132,126)	CEJQ2R2M50
C 359	(B,160,135)	CCSQCH102J50
C 403	(B,151,75)	CKSRYB103K50
C 404	(A,147,94)	CEJQ101M10
C 405	(B,142,97)	CKSRYB103K50
C 410	(B,137,92)	CKSRYB103K50
C 413	(A,151,80)	CEJQ470M6R3
C 601	(B,116,25)	CKSRYB105K10
C 602	(B,116,28)	CKSRYB103K50
C 603	(B,119,26)	CKSRYB103K50
C 605	(B,105,71)	CKSRYB104K16
C 606	(B,102,59)	CKSRYB103K50
C 607	(B,114,53)	CKSRYB103K50
C 608	(B,91,79)	CKSRYB103K50
C 609	(B,112,69)	CKSRYB331K50
C 610	(A,94,81)	CEJQ101M6R3
C 611	(B,112,68)	CKSRYB331K50
C 612	(B,116,57)	CKSRYB103K50
C 613	(A,100,56)	CEAL101M6R3
C 614	(B,164,86)	CKSRYB102K50
C 615	(B,120,58)	CKSRYB331K50
C 616	(B,119,64)	CKSRYB105K10
C 617	(B,126,59)	CKSRYB105K10
C 618	(B,108,52)	CCSRCH270J50
C 620	(B,141,55)	CKSRYB105K10
C 621	(B,148,68)	CKSRYB103K50
C 622	(B,138,52)	CKSRYB104K16
C 623	(B,130,63)	CKSRYB102K50
C 624	(B,128,64)	CKSRYB102K50
C 625	(B,133,70)	CCSRCH270J50
C 626	(B,127,70)	CCSRCH270J50
C 627	(B,131,76)	CCSRCH150J50
C 628	(B,139,62)	CKSRYB102K50
C 629	(B,132,57)	CCSRCH4R0C50
C 630	(B,140,67)	CCSRCH8R0D50
C 631	(B,105,69)	CKSRYB472K50
C 632	(B,126,21)	CKSRYB104K16
C 633	(B,143,29)	CKSRYB104K16
C 634	(B,108,56)	CCSRCH270J50
C 635	(B,142,52)	CKSRYB104K16
C 639	(B,109,59)	CKSRYB103K50
C 640	(B,140,69)	CKSRYB103K50
C 641	(B,120,56)	CKSRYB104K16
C 642	(B,106,101)	CKSRYB182K50
C 643	(B,132,100)	CKSRYB182K50
C 645	(B,113,20)	CKSRYB103K50
C 652	(B,45,29)	CKSRYB221K50
C 751	(B,63,69)	CCSRCH101J50
C 752	(B,57,81)	CKSRYB105K10
C 753	(B,65,65)	CCSRCH101J50
C 754	(B,52,67)	CCSRCH101J50
C 755	(B,52,71)	CCSRCH101J50
C 756	(B,59,85)	CKSRYB105K10
C 757	(B,61,22)	CKSRYB105K10
C 758	(B,60,24)	CKSRYB105K10
C 759	(B,69,87)	CKSRYB105K10
C 760	(B,67,86)	CKSRYB105K10
C 761	(B,62,84)	CKSRYB103K50
C 762	(A,54,82)	CEJQ101M6R3
C 802	(B,53,14)	CKSRYB104K16
C 821	(B,32,10)	CKSRYB104K16
C 822	(B,49,11)	CKSRYB104K16
C 824	(B,68,17)	CKSRYB104K16
C 831	(B,59,7)	CCSRCH221J50
C 832	(B,63,7)	CCSRCH221J50
C 833	(B,61,7)	CKSRYB104K16
C 834	(B,58,7)	CCSRCH221J50
C 835	(B,66,6)	CCSRCH221J50
C 836	(B,67,6)	CCSRCH221J50
C 839	(B,77,11)	CCSRCH221J50
C 840	(B,70,25)	CKSRYB104K16
C 871	(B,9,130)	CKSRYB103K50
C 872	(B,8,135)	CKSRYB103K50
C 901	(A,48,112) 3 300 µF/16 V	CCH1732
C 911	(A,52,60)	CEJQ100M16
C 912	(A,44,65)	CEAT102M16
C 913	(B,25,70)	CKSRYB104K16
C 914	(A,46,60)	CEAT221M10
C 915	(A,43,52)	CEJQ100M16
C 916	(A,51,50)	CEAT102M6R3
C 917	(B,24,75)	CKSRYB104K16
C 991	(B,7,106)	CKSRYB473K25
C 992	(A,8,95)	CEJQ101M10

B

Unit Number :

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,29,113)	IC	PD6340A
IC 1802	(A,19,161)	Remote IC	GP1UX51RK
D 1803	(A,7,148)	LED	SML-310PT
D 1804	(A,7,155)	LED	SML-310PT
D 1805	(A,40,148)	LED	SML-310PT
D 1806	(A,40,137)	LED	SML-310PT
D 1807	(A,40,127)	LED	SML-310PT
D 1808	(A,40,116)	LED	SML-310PT
D 1809	(A,40,74)	LED	SML-310PT

Circuit Symbol and No.		Part No.
D 1810	(A,25,151) LED	NESW505C-5273
D 1812	(A,34,10) LED	SML-310PT
D 1813	(A,22,19) LED	SML-310PT
D 1814	(A,40,84) LED	SML-310PT
D 1815	(A,40,95) LED	SML-310PT
D 1816	(A,40,105) LED	SML-310PT
D 1817	(A,13,41) LED	SML-310PT
D 1818	(A,17,51) LED	SML-310PT
D 1819	(A,41,41) LED	SML-310PT
D 1820	(A,13,9) LED	SML-310PT
D 1821	(A,13,23) LED	SML-310PT
D 1823	(A,27,56) LED	SML-310PT
D 1824	(A,37,32) LED	SML-310PT
D 1825	(A,27,27) LED	SML-310PT
D 1826	(B,27,149) Diode	MALS068X
D 1827	(B,27,151) Diode	MALS068X
D 1828	(B,30,149) Diode	MALS068X
X 1801	(B,35,101) Ceramic Resonator 5 MHz	CSS1731
S 1827	Rotary Encoder(VOLUME/SOURCE)	YSD5010
	LCD	CAW1930

RESISTORS

R 1801	(B,27,77)	RS1/16S222J
R 1802	(B,26,77)	RS1/16S222J
R 1803	(B,26,137)	RS1/4SA471J
R 1804	(B,28,141)	RS1/4SA471J
R 1805	(B,38,94)	RS1/4SA471J
R 1806	(B,38,89)	RS1/4SA471J
R 1807	(B,23,18)	RS1/4SA471J
R 1808	(B,20,15)	RS1/4SA561J
R 1809	(B,26,145)	RS1/4SA821J
R 1816	(B,33,26)	RS1/4SA471J
R 1831	(B,36,105)	RS1/16S0R0J
R 1832	(B,24,55)	RS1/16S473J
R 1833	(B,21,152)	RS1/16S2R2J
R 1835	(B,16,149)	RS1/16S101J
R 1836	(B,10,157)	RS1/16S103J
R 1837	(B,23,147)	RS1/16S101J
R 1838	(B,24,147)	RS1/16S101J

CAPACITORS

C 1801	(B,32,127)	CKSRYB105K10
C 1802	(A,25,154)	CKSRYF104Z25
C 1803	(B,19,159)	CKSYF106Z10
C 1810	(B,23,149)	CKSRYB472K50
C 1811	(B,23,151)	CKSRYB472K50

C

Unit Number : CWX3350
Unit Name : CD Core Unit(S10.5COMP2)

MISCELLANEOUS

IC 201	(A,34,46)	IC	PE5547A
IC 202	(A,32,67)	IC	S-93C56BD0I-J8
IC 301	(A,27,14)	IC	BA5839FP
Q 101	(B,56,72)	Transistor	2SA1577
Q 102	(B,47,57)	Transistor	2SB1689

Circuit Symbol and No.		Part No.
X 201	(A,23,35) Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,53,37) Switch(HOME)	CSN1067
S 903	(B,19,58) Switch(DSCSNS)	CSN1067
S 904	(B,38,67) Switch(12EJ)	CSN1068
S 905	(B,24,68) Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,60,73)	RS1/10SR2R4J
R 102	(B,59,71)	RS1/10SR2R4J
R 103	(B,60,71)	RS1/10SR2R7J
R 104	(B,52,69)	RS1/16SS222J
R 105	(B,41,57)	RS1/16SS102J
R 107	(B,41,59)	RS1/16SS105J
R 201	(A,32,62)	RS1/16S472J
R 202	(B,32,62)	RS1/16SS473J
R 203	(B,42,45)	RS1/16S473J
R 204	(A,25,61)	RS1/16SS221J
R 206	(B,26,53)	RS1/16SS104J
R 210	(B,13,32)	RS1/16SS102J
R 214	(B,36,34)	RS1/16SS472J
R 216	(B,47,49)	RS1/16SS472J
R 221	(B,36,32)	RS1/16SS103J
R 222	(B,35,32)	RS1/16SS103J
R 225	(A,49,49)	RS1/16SS103J
R 226	(A,49,50)	RS1/16SS393J
R 227	(B,45,51)	RS1/16SS562J
R 228	(B,42,53)	RS1/16SS122J
R 229	(B,44,53)	RS1/16SS472J
R 230	(B,21,28)	RS1/16SS0R0J
R 232	(B,43,51)	RS1/16SS122J
R 233	(B,29,52)	RS1/16SS103J
R 234	(B,30,61)	RS1/16SS473J
R 235	(A,25,63)	RS1/16SS473J
R 239	(B,26,48)	RS1/16SS473J
R 240	(B,10,31)	RS1/16SS473J
R 241	(B,9,32)	RS1/16SS103J
R 243	(A,35,69)	RS1/16S0R0J
R 244	(A,20,52)	RS1/16SS473J
R 255	(A,27,63)	RAB4CQ104J
R 307	(A,34,19)	RS1/16SS183J
R 308	(A,38,20)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J
R 310	(A,38,21)	RS1/16SS183J
R 601	(B,28,38)	RS1/16SS0R0J
R 602	(B,27,41)	RS1/16SS0R0J
R 606	(B,23,41)	RS1/16SS0R0J
R 701	(B,16,35)	RS1/16SS221J
R 702	(A,23,55)	RS1/16SS221J

CAPACITORS

C 106	(B,56,69)	CKSQYB475K6R3
C 201	(A,28,67)	CKSRYB104K16
C 202	(A,27,57)	CKSSYB104K10
C 204	(A,24,63)	CKSSYB103K16
C 205	(B,23,43)	CKSQYB475K6R3
C 206	(A,22,39)	CKSSYB104K10
C 207	(A,24,37)	CKSRYB104K16
C 209	(B,33,40)	CEVW220M6R3
C 210	(B,29,42)	CKSSYB104K10
C 211	(A,27,34)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 212	(B,29,32)	CKSRYB104K16
C 213	(A,44,37)	CKSSYB104K10
C 214	(A,28,33)	CKSSYB104K10
C 216	(A,50,51)	CKSSYB332K50
C 217	(A,46,51)	CKSSYB104K10
C 218	(A,49,51)	CKSSYB473K10
C 219	(A,45,53)	CKSSYB104K10
C 220	(A,46,53)	CKSSYB182K50
C 221	(A,44,53)	CKSSYB104K10
C 222	(B,43,53)	CCSSCH560J50
C 223	(B,45,53)	CCSSCH4R0C50
C 224	(A,43,55)	CKSSYB104K10
C 226	(A,40,58)	CCSSCH680J50
C 227	(A,40,60)	CCSSCH470J50
C 228	(A,39,62)	CKSSYB103K16
C 229	(B,49,59)	CKSSYB104K10
C 236	(A,42,61)	CKSSYB104K10
C 239	(B,44,51)	CCSSCH220J50
C 240	(A,35,61)	CKSSYB104K10
C 250	(B,36,30)	CKSSYB102K50
C 251	(B,33,29)	CKSSYB102K50
C 303	(A,35,19)	CKSSYB472K25
C 304	(A,34,21)	CKSSYB223K16
C 307	(B,25,9)	CKSRYB104K16
C 308	(B,10,27)	CKSRYB105K10
C 703	(B,11,37)	CCSSCH101J50
C 704	(B,8,36)	CKSSYB102K50
C 711	(A,25,26)	CKSSYB104K10

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026