
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

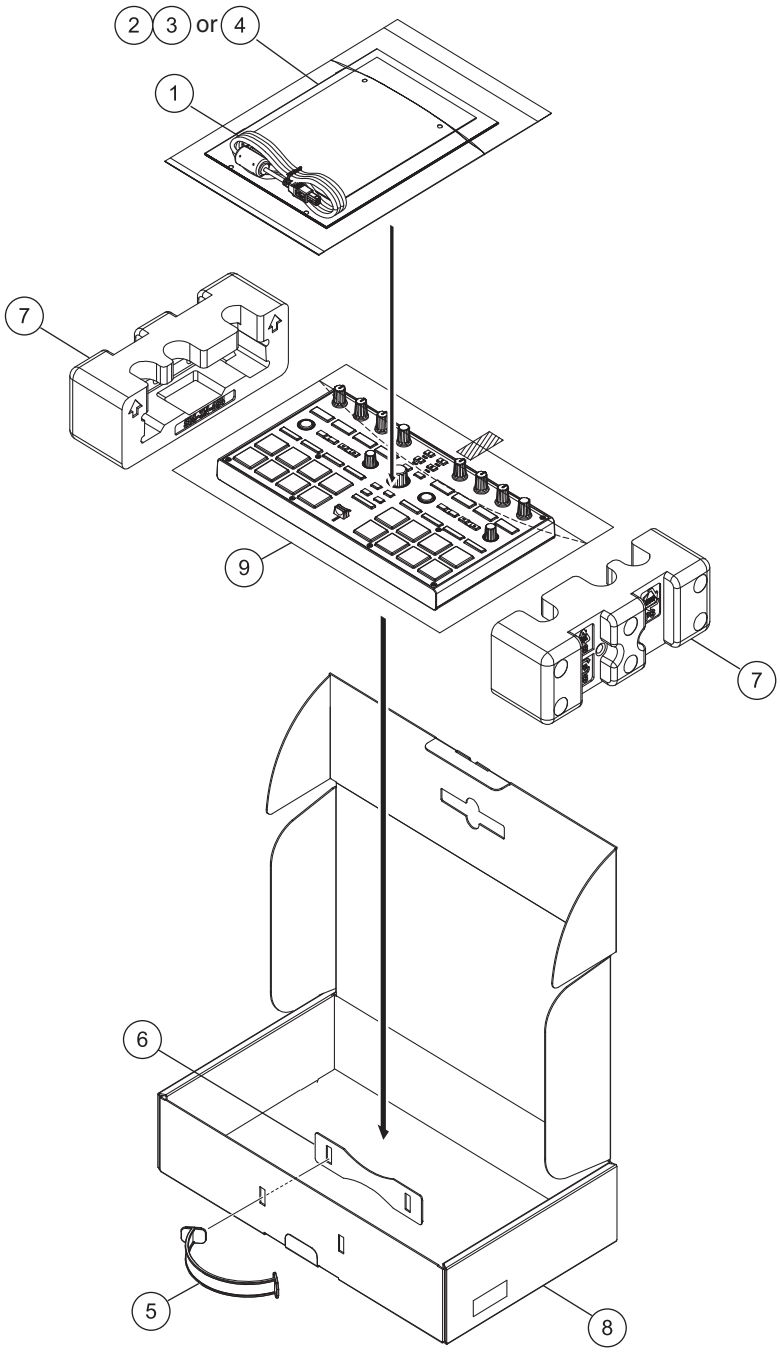

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	USB Cable (L = 1500 mm)	408-SUB-132
	2	Operating Instructions	See Contrast table (2)
	3	Operating Instructions	See Contrast table (2)
	4	Operating Instructions	See Contrast table (2)
	5	Handle	100-DDJLE-3012
	6	Handle Base	100-DDJLE-3013
	7	Polyfoam	506-SN-654
	8	Gift Box	See Contrast table (2)
	9	Soft Bag	509-SN-325

(2) CONTRAST TABLE

DDJ-SP1/CKSUVYXE5 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SP1 /CKSUVYXE5	DDJ-SP1 /XECN5
	2	Operating Instructions (En, Fr, De, It, Nl)	502-DDJSCA-3311	Not used
	3	Operating Instructions (Es, Pt, Ru, Ko, Ja)	502-DDJSCA-3312	Not used
	4	Operating Instructions (Zhcn)	Not used	502-DDJSCB-3313
	8	Gift Box	507-SN-3429	507-SCB-3429

9.2 EXTERIOR SECTION

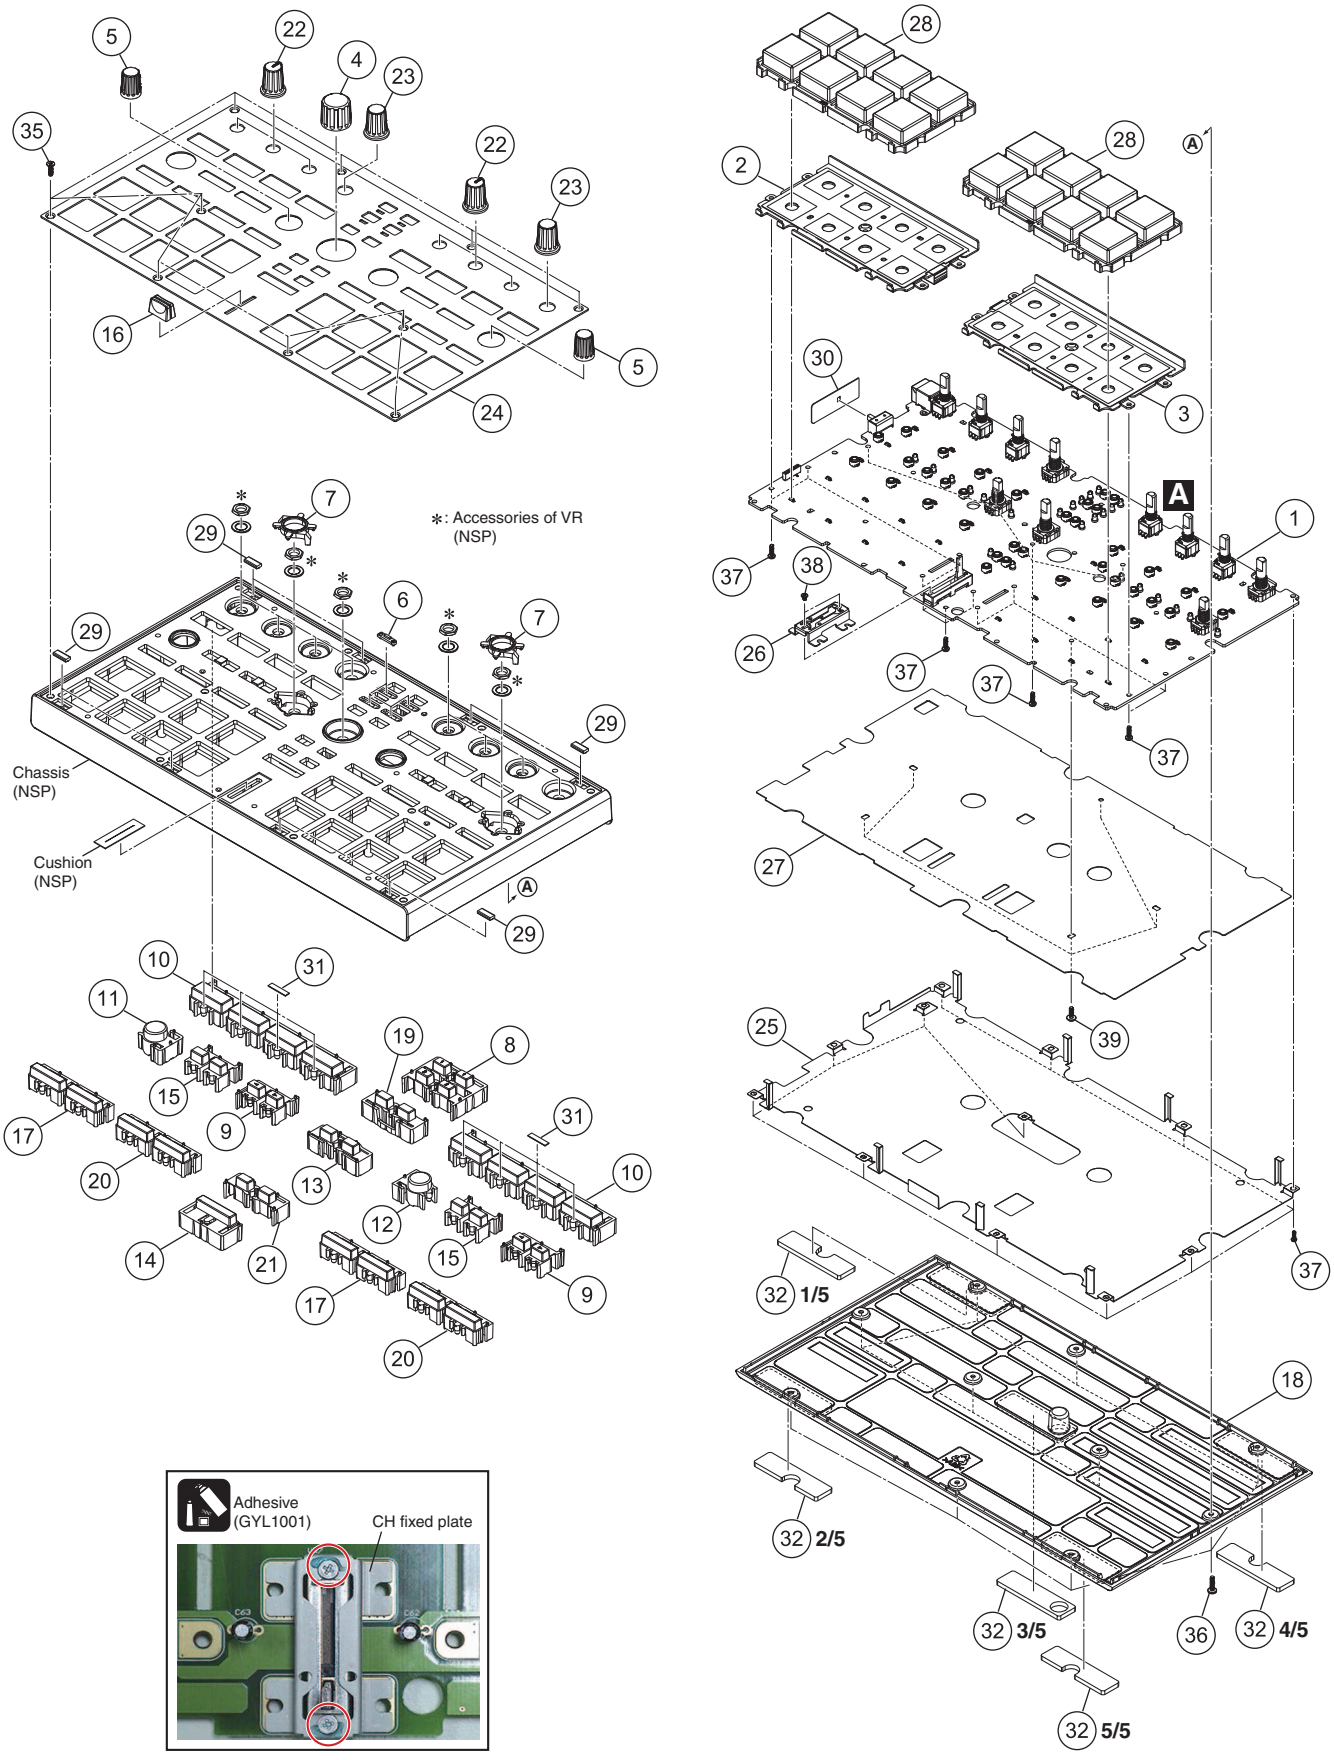

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN PCB Assy	704-SUB-A570
	2	FSR Plate Assy L	704-SUB-A571
	3	FSR Plate Assy R	704-SUB-A572
	4	Browser Knob	100-SN-3010A
	5	Little Knob	100-SN-3030
	6	LED Lens	100-SN-3032
	7	LIMPID Lens	100-SN-3033
	8	4 Key Button	100-SN-3034
	9	2 Key Button	100-SN-3035
	10	FX Button	100-SN-3036
	11	Left Sync Button	100-SN-3037
	12	Right Sync Button	100-SN-3038
	13	2 Key Black Button	100-SN-3040S
	14	Shift Button	100-SN-3041
	15	Twin Key Button	100-SN-3042
	16	Small VR Knob	100-SN-3083
	17	HOT CUE Button	100-SNA-2993
	18	Base	See Contrast table (2)
	19	3&4 Button	100-SNA-3039
	20	Slicer Button	100-SNB-2993
	21	Load Button	100-SNB-3039
	22	FX Rotate Knob	100-S1-3006
	23	Rotate Knob	100-S1-3007
	24	Front Panel	300-SN-2079
	25	Large Ground Plate	300-SN-2080
	26	CH Fixed Plate	300-SN-2082
	27	Isolation Slice	501-SN-2569
	28	Pad Soft Knob	604-SN-612
	29	Gasket	612-SN-476
	30	Power Himilon	612-SN-493
	31	Button Cushion	612-SN-494
	32	Foot Pad Assy	701-SN-5314
	33	•••••	
	34	•••••	
	35	Screw 2.6*9	602-BTF2609-685B
	36	Screw 2.6*10	602-CDN88-563
	37	Screw	602-SL24F-099
	38	Screw	602-STS2003-677
	39	Screw WBTP2.6*8 TTB	602-900-565

(2) CONTRAST TABLE

DDJ-SP1/CKSUVYXE5 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SP1 /CKSUVYXE5	DDJ-SP1 /XECN5
	18	Base	100-SNA-3029	100-SNB-3029

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *Although the cables that are directly mounted on each PCB Assy are listed individually as electrical parts of the corresponding PCB Assy in the parts list, those cables are included with each PCB Assy for service when it is supplied.*

Mark	No.	Description	Part No.

LIST OF ASSEMBLIES

		MAIN PCB ASSY	704-SUB-A570

Mark	No.	Description	Part No.

A MAIN PCB ASSY

SEMICONDUCTORS

	Q 1-7	CHIP TRANSISTOR	416-MC6000-374
	D 110	ESD DIODE	414-DJ1100G-207
	D 1-4,6-43,106-109	SWITCHING DIODE	414-CD1000-075A
	D 111,112	ESD DIODE	414-RMP3-285
	D 5	TVS DIODE	414-UDJ200-284
	D 54,58	LED(YELLOW GREEN)	410-DJ5000-252T
	D 52,53,55-57,59-67	LED (RED)	410-DJ5000-253T
	D 94,95,98,100	LED (RED)	410-DJ5000-253T
	D 68-91	CHIP LED BLUE	410-SUB-424
	D 44-51	CHIP LED RED	410-SUB-425
	D 92,93,96,97,99,101	CHIP LED WHITE	410-S1-419

MISCELLANEOUS

	JK 1	USB FIXED PLATE	300-SN-2083
	L 4	COMMON MODE FILTERS	415-FU800-305
	JK 1	USB JACK	420-S1-377
	L 1,3,5	TDK CHIP BEAD	415-FU801-316
	L 6	CHIP BEAD	415-IS201-382
	CN 2,3	10P FFC CONNECTOR	404-CDMIX2-1142
	SW 43	SLIDE SW	403-DV300-5007
	SW 2,4	ENCODER	403-COMBO-424
	SW 6-42	TACT SW	403-DDJLE-419
	SW 1,3,5	ENCODER	403-DDJLE-418
	X 1	QUARTZ CRYSTAL (8 MHz)	427-DV300-5017V

RESISTORS

	VR 1-6	ROTARY VR	418-S1-694
	VR 7	SLIDE VR	418-SUB-704
	0	CHIP RESISTOR	412-900-975
	R 133,143	CHIP RESISTOR	412-I1-1261
	R 95,99,147-149,171,172	CHIP RESISTOR	412-CDVD2001-554

CAPACITORS

	C 62,63	CAPACITOR	413-SPPW3-236
	C 14	ELEC.CAPACITOR	413-810-920
	C 15	CHIP CAPACITOR	413-U5000-1005
	0	ELEC.CAPACITOR	413-HT801K-192
	C 7	ELEC.CAPACITOR	413-HMA2200-5017
	C 1,2,4,5,8,9,12,13	CHIP CAPACITOR	413-DCM280-773
	C 16-19,32-40,42-44	CHIP CAPACITOR	413-DCM280-773
	C 61,64,91	CHIP CAPACITOR	413-DCM280-773