
8. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

8.1 PACKING SECTION

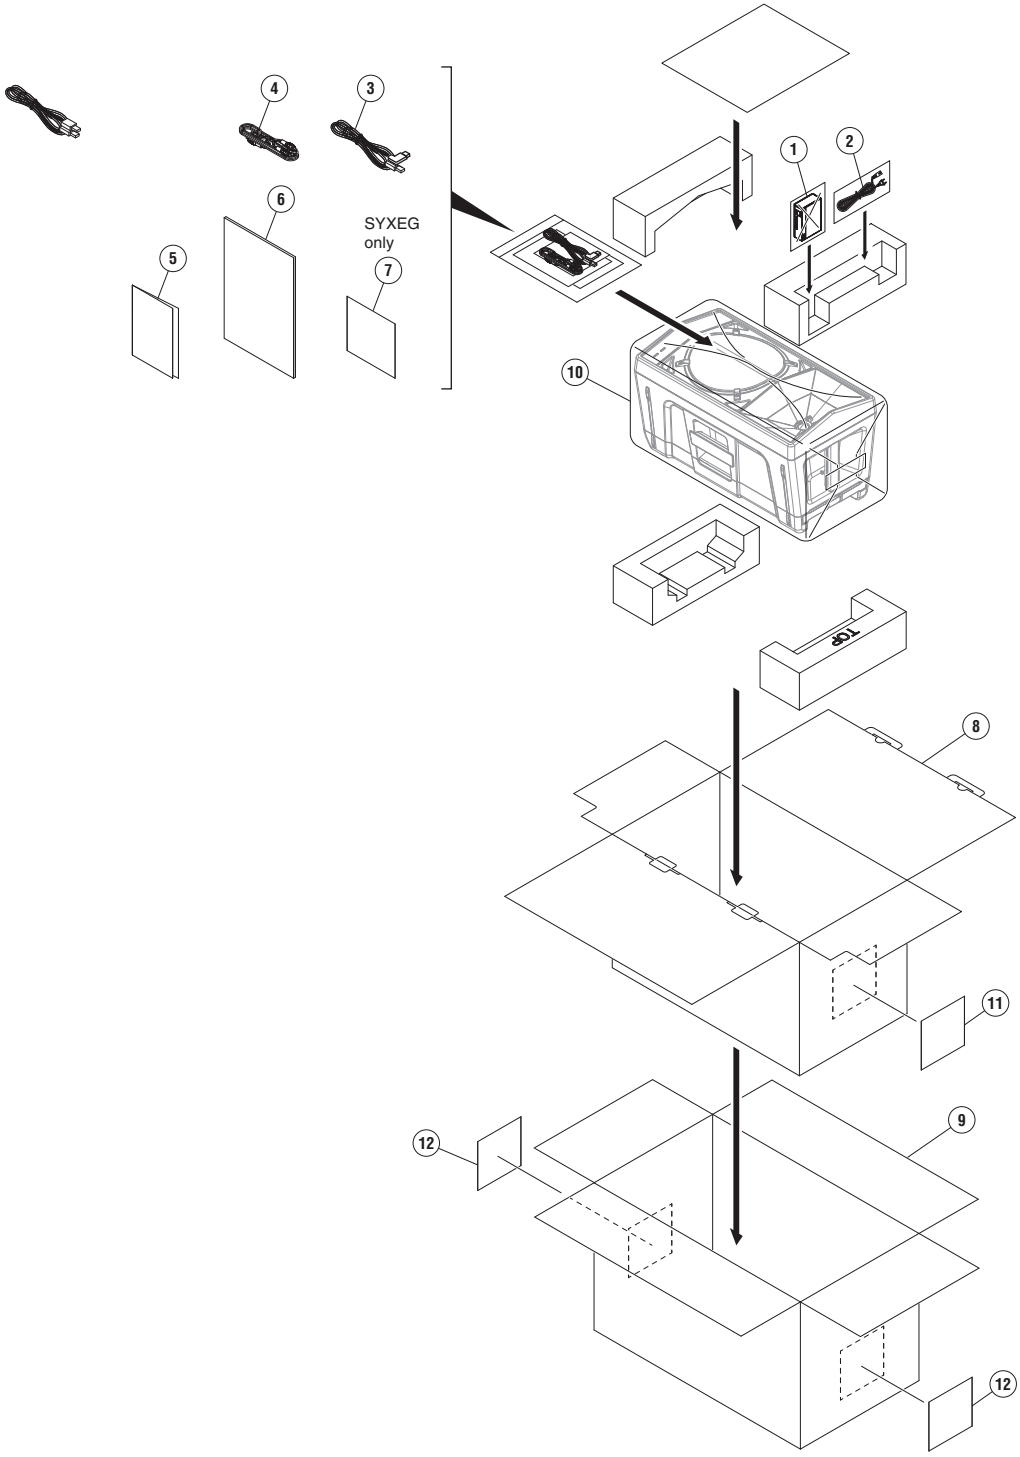

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Transmitter	2S1E-AA03960
⚠	2	Power cord	See Contrast table (2)
	3	Transmitter charging/transmission cable	2S1E-AA03969
	4	RCA cable	2S1E-AA03970
NSP	5	Quick Start Guide	• • • • •
NSP	6	Precautions for Use	• • • • •
NSP	7	Warranty	See Contrast table (2)
	8	Gift Box	2S1E-AA04030
	9	Carton	2S1E-AA04031
	10	EPE Bag	2S1E-AA04021
	11	Gift_box_label	See Contrast table (2)
	12	Carton_box_label	See Contrast table (2)

(2) CONTRAST TABLE

WAVE-EIGHT/CUXEG, SYXEG and AXEG are constructed the same except for the following:

Mark	No.	Symbol and Description	WAVE-EIGHT/CUXEG	WAVE-EIGHT/SYXEG	WAVE-EIGHT/AXEG
⚠	2	Power cord	2S1E-AA03966	2S1E-AA03965	2S1E-AA03968
NSP	7	Warranty	• • • • •	Not used	• • • • •
	11	Gift_box_label	2S1E-AA04023	2S1E-AA04022	2S1E-AA04025
	12	Carton_box_label	2S1E-AA04027	2S1E-AA04026	2S1E-AA04029

8.2 FRONT/BODY SECTION

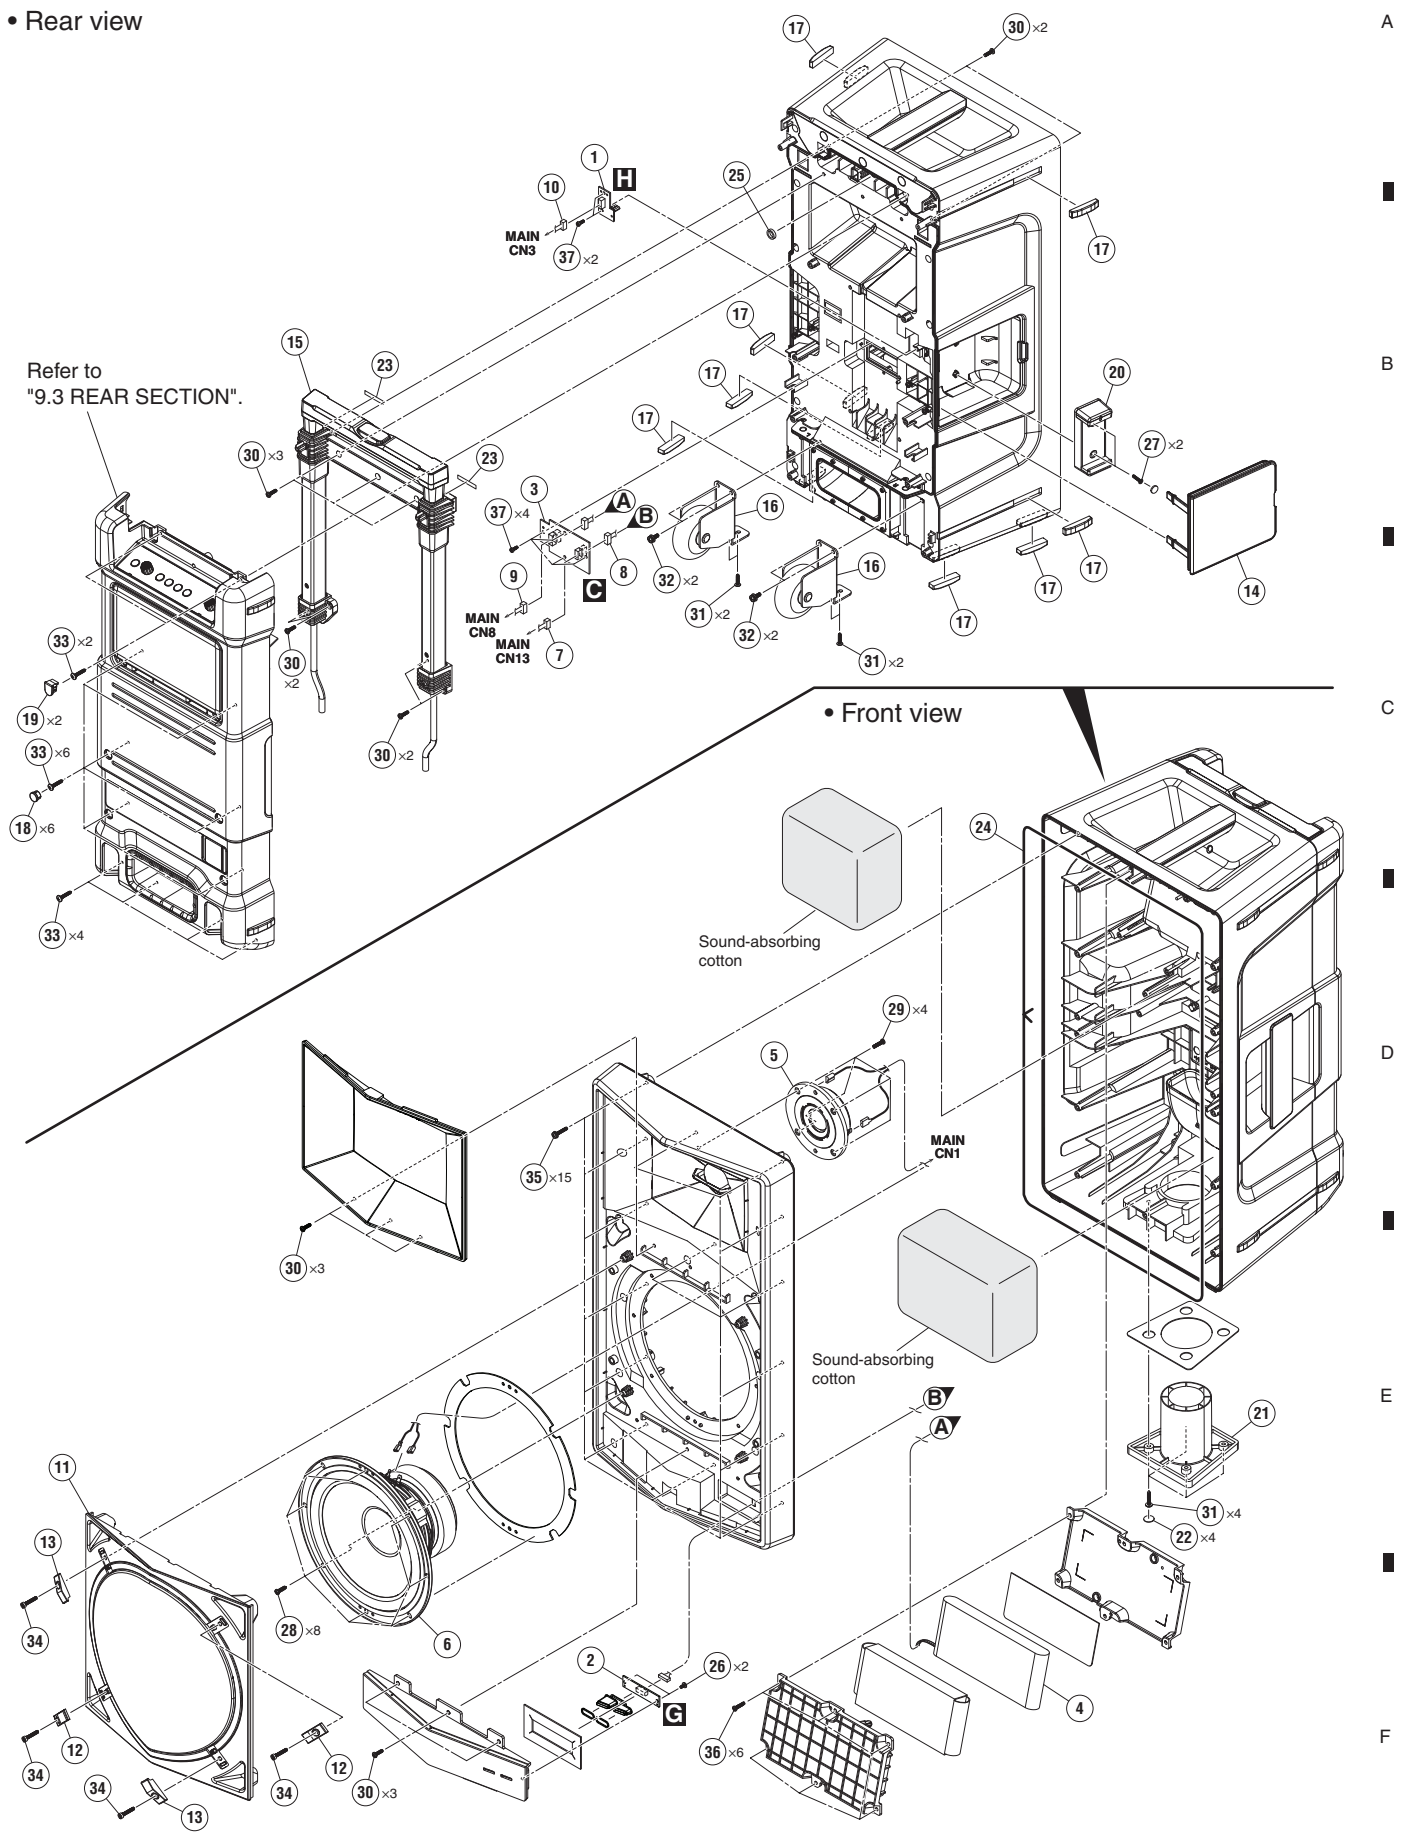

(1) FRONT/BODY SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	TYPE-C BOARD Assy	2S1E-AA04038
	2	FRONT LED BOARD Assy	2S1E-AA04039
	3	TRANSFER BOARD Assy	2S1E-AA04040
⚠	4	Pack Battery	See Contrast table (2)
	5	Tweeter	2S1E-AA04032
	6	Woofer	2S1E-AA04033
	7	Front LED Wire 1	2S1E-AA04051
	8	Front LED Wire 2	2S1E-AA04052
	9	Battery Wire	2S1E-AA04053
	10	USB-C Wire 2	2S1E-AA04056
	11	Speaker Cover Assembly	2S1E-AA03809
	12	Support 1	2S1E-AA03979
	13	Support 2	2S1E-AA03980
	14	TX Water Cover	2S1E-AA03985
	15	Telescopic Handle	2S1E-0003657
	16	Caster Wheel	2S1E-AA03993
	17	SP Feet	2S1E-AA04011
	18	Plug 1	2S1E-AA04012
	19	Plug 2	2S1E-AA04013
	20	TX Bracket	2S1E-AA04066
	21	Pole Cover	2S1E-AA03981
	22	Pad 1	2S1E-AA03991
	23	Gasket 16	2S1E-AA04019
	24	Gasket 2	2S1E-AA04018
	25	O Ring 2	2S1E-AA04016
	26	Screw (3 x 6)	2S1E-AA03994
	27	Screw (3 x 15, countersunk head)	2S1E-AA03995
	28	Screw (4 x 15)	2S1E-AA03997
	29	Screw (3.5 x 15)	2S1E-AA04001
	30	Screw (3.5 x 12)	2S1E-AA04002
	31	Screw (3.5 x 15, truss φ7)	2S1E-AA04003
	32	Screw (M4 x 10)	2S1E-AA04004
	33	Screw (4 x 20)	2S1E-AA04008
	34	Screw (3.5 x 20 with hex socket)	2S1E-AA04009
	35	Screw (4 x 20 with spring washer)	2S1E-AA04010
	36	Screw (3.5 x 20)	2S1E-AA04130
	37	Screw (3 x 10)	2S1E-AA04132


(2) CONTRAST TABLE

WAVE-EIGHT/CUXEG, SYXEG and AXEG are constructed the same except for the following:

Mark	No.	Symbol and Description	WAVE-EIGHT/CUXEG	WAVE-EIGHT/SYXEG	WAVE-EIGHT/AXEG
⚠	4	Pack Battery	2S1E-AA03977	2S1E-AA03977	2S1E-AA03978

8.3 REAR SECTION

• Rear view

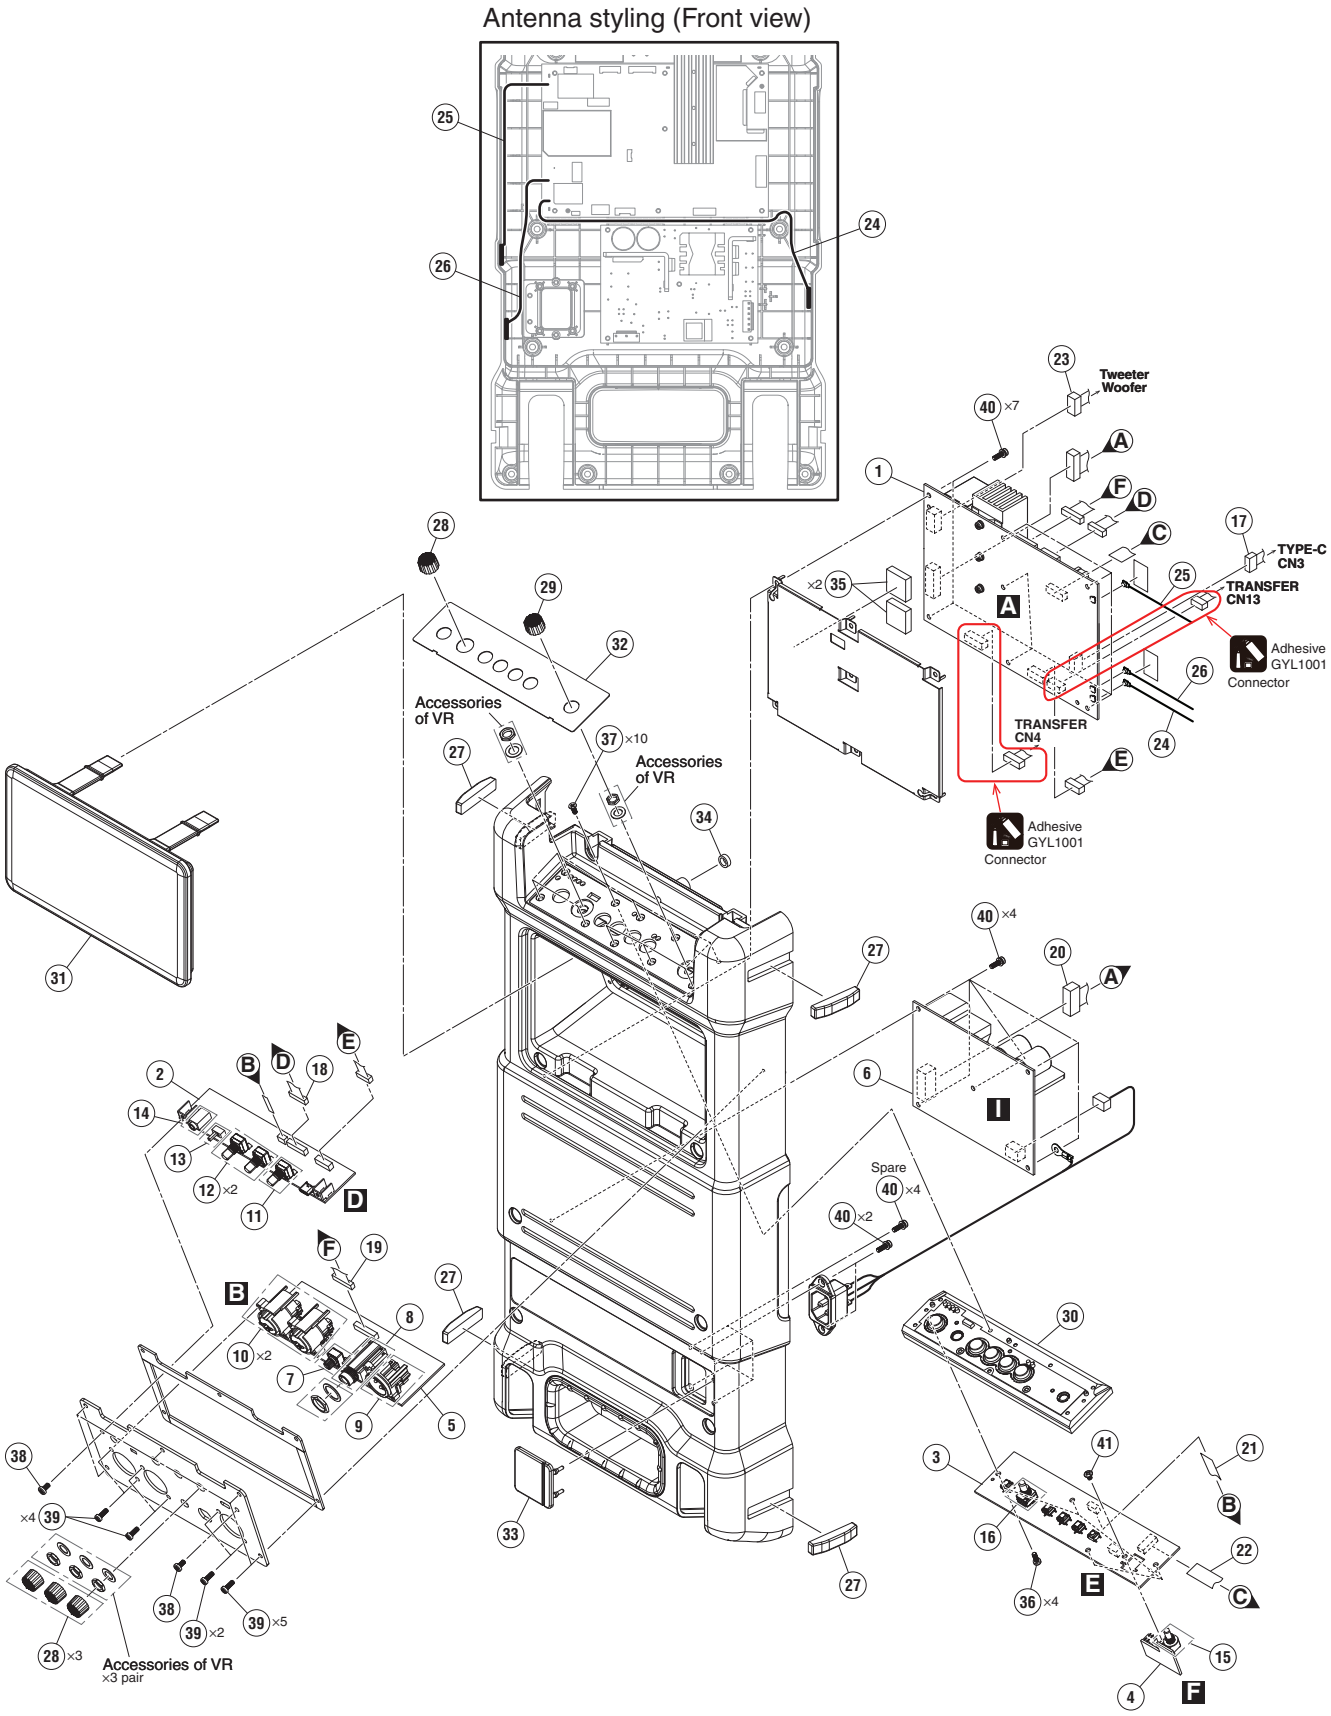

(1) REAR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN BOARD Assy	2S1E-AA04034
	2	ECHO VR BOARD Assy	2S1E-AA04035
	3	KEY/LED BOARD Assy	2S1E-AA04036
	4	ROTARY SW BOARD Assy	2S1E-AA04037
	5	LINE IN/OUT BOARD Assy	2S1E-AA04059
⚠	6	SW POWER SUPPLY (SMPS)	2S1E-AA03971
	7	MIC VR (VR1)	2S1E-AA04041
	8	TRS Jack (JK14)	2S1E-AA04042
	9	XLR Jack (Female) (JK1)	2S1E-AA04043
	10	XLR/TRS Jack (JK2, JK3)	2S1E-AA04044
	11	MIC ECHO VR (VR3)	2S1E-AA04045
	12	MIC EQ VR (VR1, VR2)	2S1E-AA04046
	13	Slide Switch (SW1)	2S1E-AA04047
	14	Stereo Mini Jack (JK1)	2S1E-AA04048
	15	Sound Mode Switch (SW7)	2S1E-AA04049
	16	Master VR (VR1)	2S1E-AA04050
	17	USB-C Wire 1	2S1E-AA04054
	18	AUX ECT Wire	2S1E-AA04055
	19	Line In ECT Wire	2S1E-AA04057
	20	SMPS Wire	2S1E-AA04058
	21	FFC Cable	2S1E-AA03962
	22	FFC Cable	2S1E-AA03963
	23	Speaker Wire	2S1E-AA03964
	24	Antenna 2	2S1E-AA03973
	25	Antenna 3	2S1E-AA03974
	26	Antenna 5	2S1E-AA03976
	27	SP Feet	2S1E-AA04011
	28	Knob 1	2S1E-AA03982
	29	Knob 2	2S1E-AA03983
	30	PCBA Support	2S1E-AA03984
	31	IO Water Cover	2S1E-AA03986
	32	UI Sheet	2S1E-AA03990
	33	AC Inlet Cover	2S1E-AA04014
	34	O Ring 1	2S1E-AA04015
	35	Thermal Pad	2S1E-AA04020
	36	Screw (3 x 8, pan head)	2S1E-AA03996
	37	Screw (3 x 8, countersunk head)	2S1E-AA03999
	38	Screw (M3 x 6)	2S1E-AA04005
	39	Screw (3 x 8)	2S1E-AA04006
	40	Screw (3 x 9.5)	2S1E-AA04134
	41	Screw (M3 x 8)	2S1E-AA04133