

EXPLODED VIEW

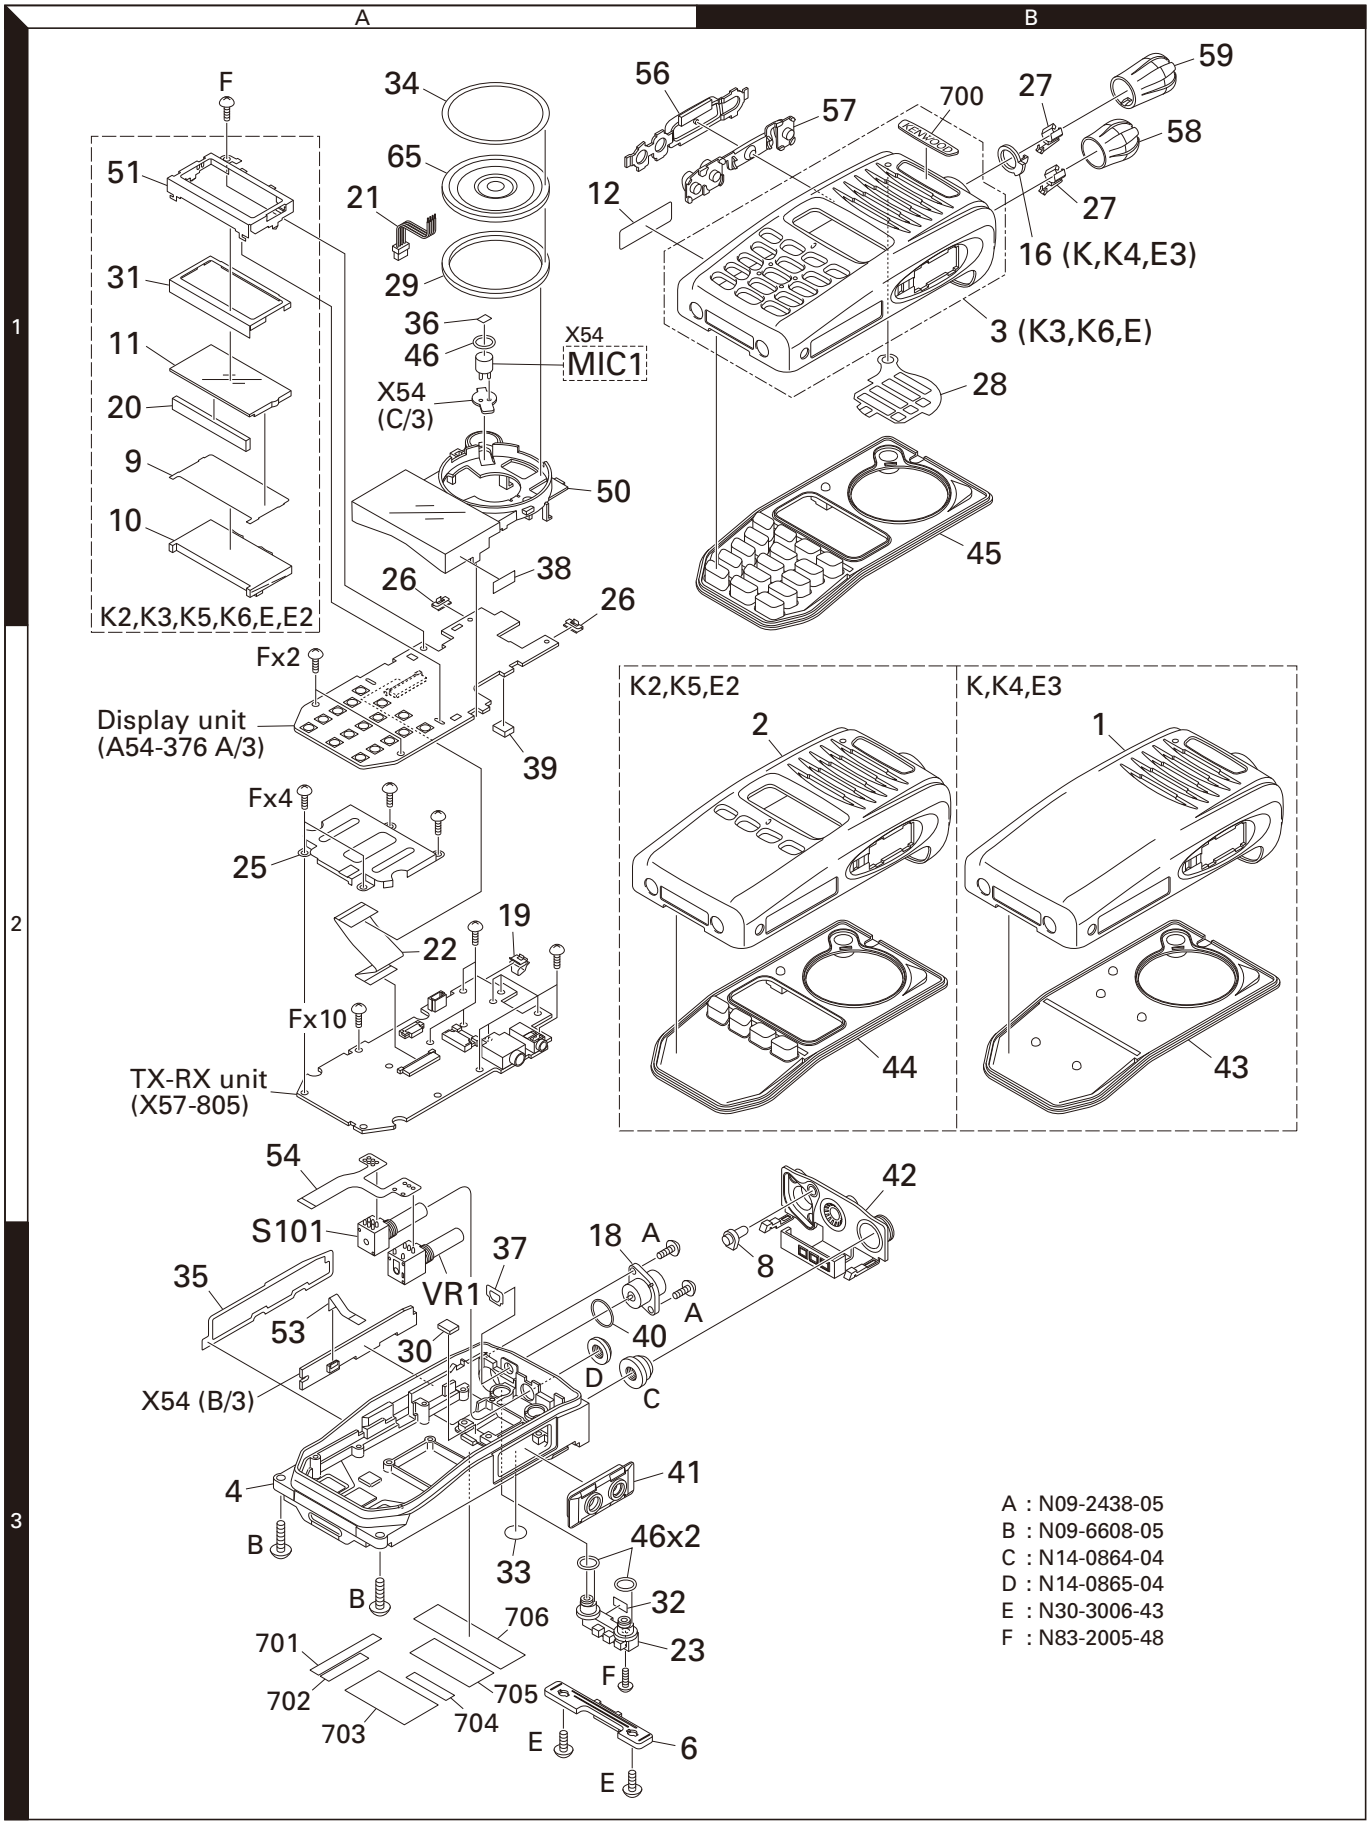

A : N09-2438-05
B : N09-6608-05
C : N14-0864-04
D : N14-0865-04
E : N30-3006-43
F : N83-2005-48

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

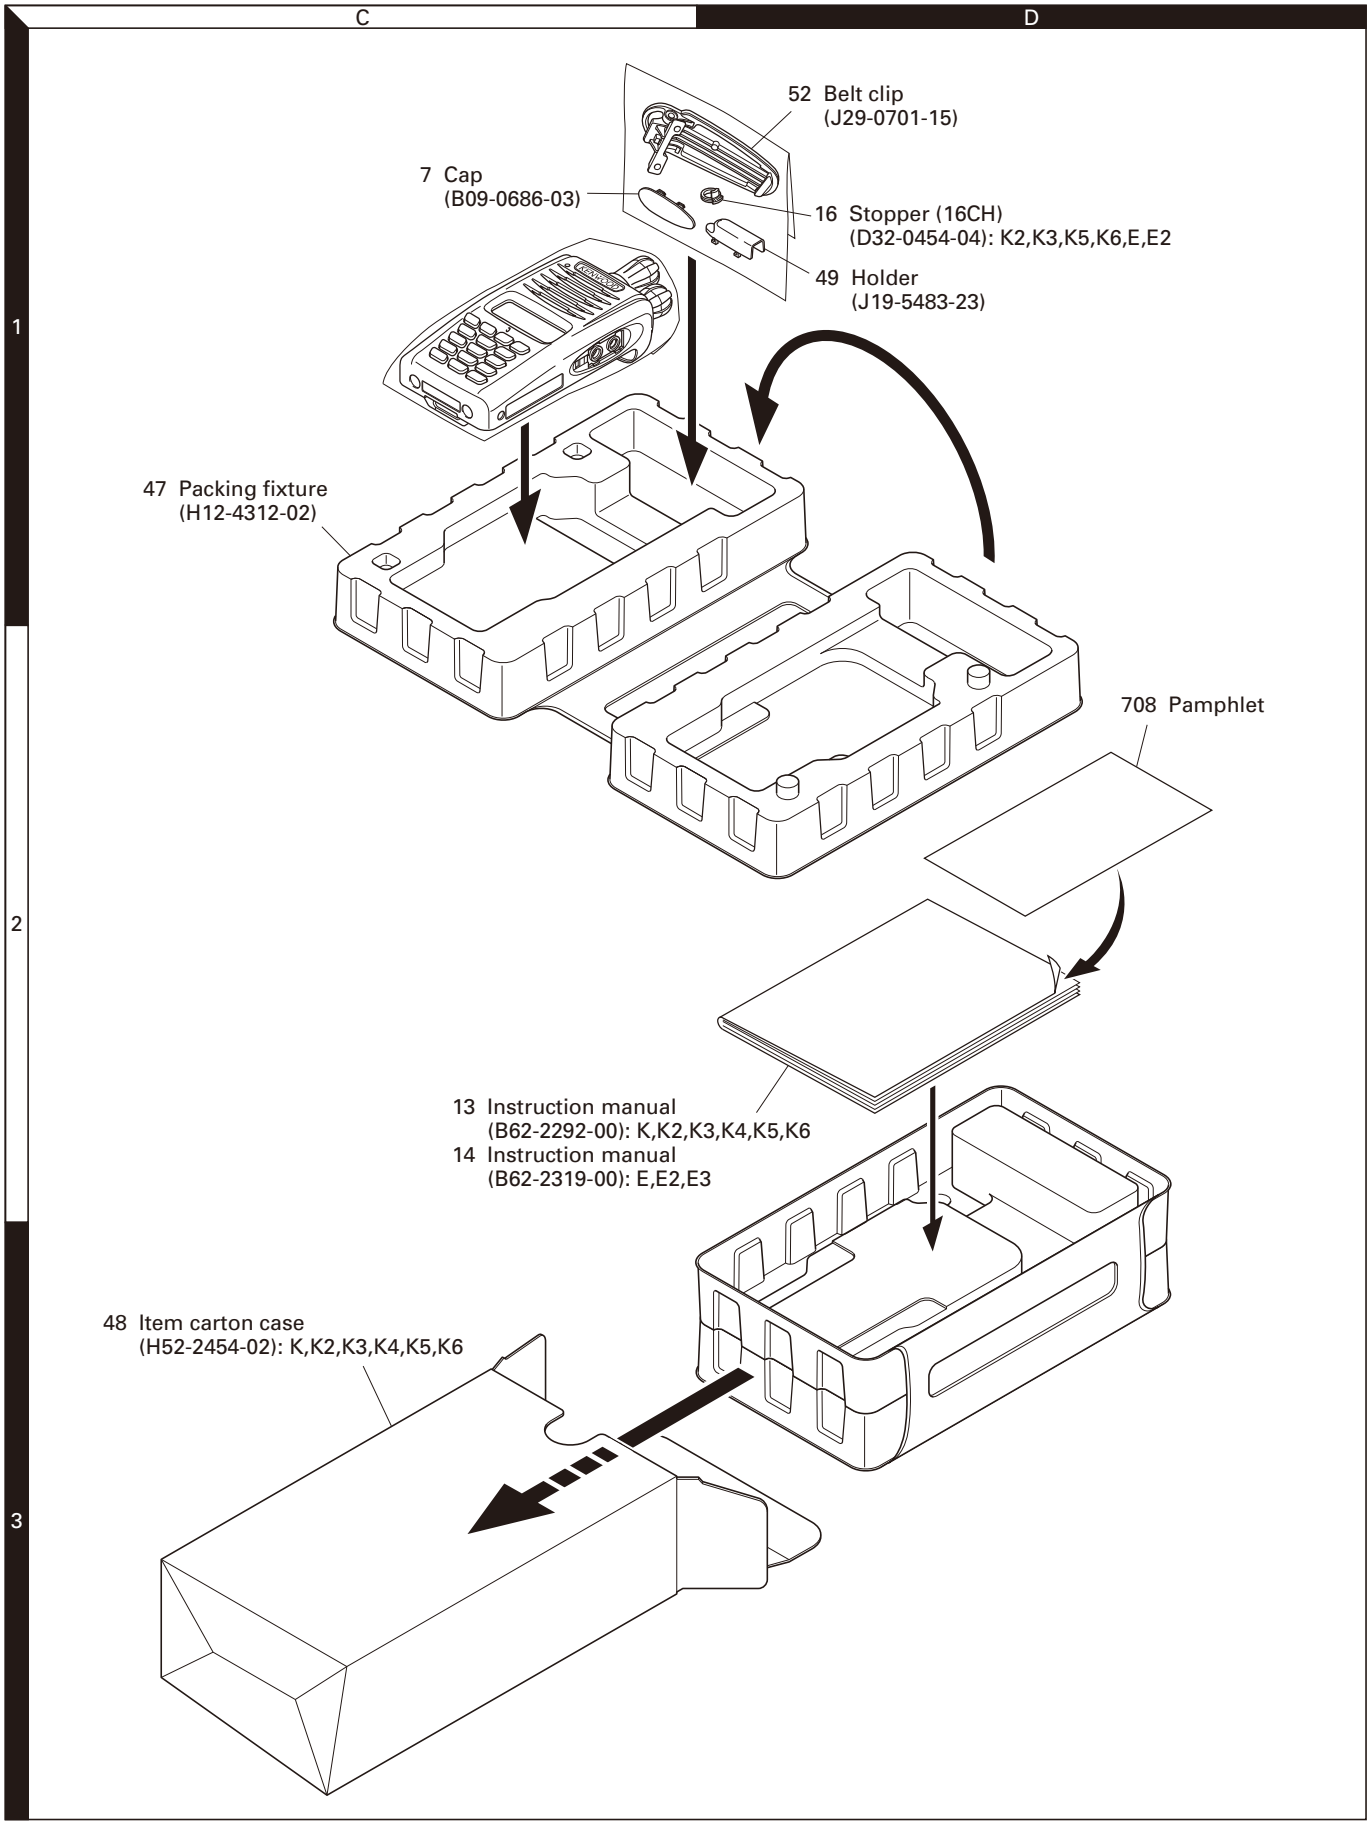

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-320
DISPLAY UNIT (X54-3760-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
			NX-320		
1	2B	✻	A02-4130-03	PLASTIC CABINET ASSY	K,K4,E3
2	2B	✻	A02-4131-03	PLASTIC CABINET ASSY (4KEY)	K2,K5,E2
3	1B	✻	A02-4132-03	PLASTIC CABINET ASSY (16KEY)	K3,K6,E
4	3A	✻	A10-4148-01	CHASSIS	
6	3A		B01-0694-13	ESCUTCHEON	
7	1C		B09-0686-03	CAP ACCESSORY	
8	3B		B11-1869-04	ILLUMINATION GUIDE (TX/BUSY)	
9	1A	✻	B11-1890-04	FILTER (LCD)	K2,K3,K5
9	1A	✻	B11-1890-04	FILTER (LCD)	K6,E,E2
10	1A	✻	B11-1891-02	ILLUMINATION GUIDE (LCD)	K2,K3,K5
10	1A	✻	B11-1891-02	ILLUMINATION GUIDE (LCD)	K6,E,E2
11	1A		B38-0935-05	LCD	K2,K3,K5
11	1A		B38-0935-05	LCD	K6,E,E2
12	1A		B42-7417-04	STICKER	
13	2D	✻	B62-2292-00	INSTRUCTION MANUAL (K TYPE)	K,K2,K3
13	2D	✻	B62-2292-00	INSTRUCTION MANUAL (K TYPE)	K4,K5,K6
14	2D	✻	B62-2319-00	INSTRUCTION MANUAL (E TYPE)	E,E2,E3
16	1B,1D	✻	D32-0454-04	STOPPER (16CH)	
18	3A		E04-0467-15	RF COAXIAL RECEPTACLE (SMA)	
19	2A	✻	E23-1363-04	TERMINAL (ANT)	
20	1A	✻	E29-1232-05	INTER CONNECTOR (LCD)	K2,K3,K5
20	1A	✻	E29-1232-05	INTER CONNECTOR (LCD)	K6,E,E2
21	1A	✻	E37-1532-05	LEAD WIRE WITH CONNECTOR (SP/ECM)	
22	2A	✻	E37-1537-05	FLAT CABLE (TXRX-DISPLAY)	
23	3A	✻	E72-0435-03	TERMINAL BLOCK	
25	2A	✻	F10-3149-03	SHIELDING COVER	
26	1A	✻	G02-1864-04	EARTH SPRING (DISPLAY PCB)	
27	1B	✻	G09-0443-04	KNOB SPRING (VOL/SELECTOR)	
28	1B	✻	G10-1827-04	FIBROUS SHEET (SP)	
29	1A		G11-4272-14	RUBBER CUSHION (SP)	
30	3A		G11-4315-14	SHEET (FET)	
31	1A		G11-4335-14	SHEET (LCD)	K2,K3,K5
31	1A		G11-4335-14	SHEET (LCD)	K6,E,E2
32	3A		G11-4368-04	SHEET (TERMINAL BLOCK)	
33	3A		G11-4500-04	SHEET (AIR)	
34	1A		G11-4527-04	SHEET (SP)	
35	3A	✻	G11-4543-04	SHEET (PTT)	
36	1A	✻	G11-4558-04	SHEET (ECM)	
37	3A	✻	G11-4561-04	SHEET (CHASSIS:TX/BUSY)	
38	1A	✻	G11-4562-04	SHEET (SP HOLDER)	
39	2A		G13-2220-04	CUSHION (DISPLAY PCB)	
40	3A		G53-1603-04	PACKING (SMA)	
41	3A		G53-1832-03	PACKING (JACK)	
42	2B	✻	G53-1862-02	PACKING (TOP)	
43	2B	✻	G53-1863-01	PACKING	K,K4,E3
44	2B	✻	G53-1864-01	PACKING (4KEY)	K2,K5,E2
45	1B	✻	G53-1865-01	PACKING (16KEY)	K3,K6,E
46	1A,3A	✻	G53-1866-04	PACKING (TERMINAL,ECM)	
47	1C	✻	H12-4312-02	PACKING FIXTURE	
48	3C	✻	H52-2454-02	ITEM CARTON CASE	K,K2,K3
48	3C	✻	H52-2454-02	ITEM CARTON CASE	K4,K5,K6
49	1D		J19-5483-23	HOLDER ACCESSORY	
50	1A	✻	J19-5547-01	HOLDER (FG-SP)	
51	1A	✻	J21-8631-03	MOUNTING HARDWARE (LCD)	K2,K3,K5
51	1A	✻	J21-8631-03	MOUNTING HARDWARE (LCD)	K6,E,E2
52	1D		J29-0701-15	BELT CLIP ACCESSORY	
53	3A		J87-0027-05	FPC (LEAD FREE) (PTT)	
54	2A	✻	J87-0040-05	FPC (LEAD FREE) (VOL/SELECTOR)	
56	1A	✻	K29-9500-03	KNOB (PTT)	
57	1B	✻	K29-9501-03	BUTTON KNOB (SIDE1/SIDE2/AUX)	
58	1B	✻	K29-9485-03	KNOB (VOL)	
59	1B	✻	K29-9486-03	KNOB (SELECTOR)	
A	3A		N09-2438-05	BINDING HEAD SCREW (ANT)	
B	3A	✻	N09-6608-05	SPECIAL SCREW (CASE)	
C	3A	✻	N14-0864-04	CIRCULAR NUT (VOL)	
D	3A	✻	N14-0865-04	CIRCULAR NUT (SELECTOR)	
E	3A		N30-3006-43	PAN HEAD MACHINE SCREW (ESCUT)	
F	1A,2A,3A		N83-2005-48	PAN HEAD TAPTITE SCREW (PCB)	
VR1	3A	✻	R31-0685-05	VARIABLE RESISTOR (VOL)	
S101	3A	✻	S60-0448-05	ROTARY SWITCH (SELECTOR)	
65	1A		T07-0787-05	SPEAKER	
-		✻	X57-8050-12	SERVICE TX-RX UNIT	K,K2,K3
-		✻	X57-8050-13	SERVICE TX-RX UNIT	K4,K5,K6
-		✻	X57-8050-13	SERVICE TX-RX UNIT	E,E2,E3
			DISPLAY UNIT (X54-3760-XX) -10: K3,K6,E -11: K2,K5,E2 -12: K,K4,E3		
D1			B30-2278-05	LED (RED/YELLOW)	
D7-14			B30-2337-05	LED (YELLOW)	K3,K6,E
D13,14			B30-2337-05	LED (YELLOW)	K2,K5,E2
D18,19			B30-2210-05	LED (TLY)	K2,K3,K5
D18,19			B30-2210-05	LED (TLY)	K6,E,E2
C1			CK73HB1H471K	CHIP C 470PF K	
C2			CK73HB1H681K	CHIP C 680PF K	
C3			CC73HCH1H270J	CHIP C 27PF J	
C4			CK73HB1H471K	CHIP C 470PF K	
C5			CK73HB1A104K	CHIP C 0.10UF K	
C6			CK73HB1H102K	CHIP C 1000PF K	
C7,8			CC73HCH1H470J	CHIP C 47PF J	
C10			CC73HCH1H101J	CHIP C 100PF J	
C11			CK73HB1H681K	CHIP C 680PF K	
C13			CC73HCH1H101J	CHIP C 100PF J	
C15			CK73HB1E103K	CHIP C 0.010UF K	
C16			CK73HB1H102K	CHIP C 1000PF K	
C19			CK73HB1A104K	CHIP C 0.10UF K	
C20			CK73HB1H102K	CHIP C 1000PF K	
C21			CK73HB1E103K	CHIP C 0.010UF K	
C22			CK73HB1A224K	CHIP C 0.22UF K	
C23			CC73HCH1H470J	CHIP C 47PF J	
C25			CK73HB1A224K	CHIP C 0.22UF K	
C26			CC73HCH1H470J	CHIP C 47PF J	
C28,29			CC73HCH1H470J	CHIP C 47PF J	
C30			CK73HB0J105K	CHIP C 1.0UF K	
C31			CC73HCH1H470J	CHIP C 47PF J	

PARTS LIST

DISPLAY UNIT (X54-3760-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C32			CK73HB1H122K	CHIP C 1200PF K	
C33,34			CC73HCH1H470J	CHIP C 47PF J	
C35			CK73HB1A104K	CHIP C 0.10UF K	
C36			CC73HCH1H470J	CHIP C 47PF J	
C37			CK73HB1H472K	CHIP C 4700PF K	
C38			CC73HCH1H181J	CHIP C 180PF J	
C39			CK73HB1A104K	CHIP C 0.10UF K	
C40			CC73HCH1H470J	CHIP C 47PF J	
C42-44			CC73HCH1H470J	CHIP C 47PF J	
C45			CK73HB1H102K	CHIP C 1000PF K	
C47			CK73HB1A104K	CHIP C 0.10UF K	
C48			CK73HB0J105K	CHIP C 1.0UF K	
C49			CK73HB1H102K	CHIP C 1000PF K	
C52,53			CK73HB1A104K	CHIP C 0.10UF K	
C54			CK73HB1H331K	CHIP C 330PF K	
C58			CC73HCH1H680J	CHIP C 68PF J	
C62			CC73HCH1H101J	CHIP C 100PF J	
C63,64			CK73HB0J105K	CHIP C 1.0UF K	
C67			CK73HB1H102K	CHIP C 1000PF K	
C68			CK73HB1E103K	CHIP C 0.010UF K	
C70			CK73HB0J105K	CHIP C 1.0UF K	
C71			CK73HB1A104K	CHIP C 0.10UF K	
C73			CK73GB0J106K	CHIP C 10UF K	
C74			CK73HB0J105K	CHIP C 1.0UF K	
C78			CK73HB1E103K	CHIP C 0.010UF K	K2,K3,K5
C78			CK73HB1E103K	CHIP C 0.010UF K	K6,E,E2
C79			CK73HB1A473K	CHIP C 0.047UF K	K2,K3,K5
C79			CK73HB1A473K	CHIP C 0.047UF K	K6,E,E2
C83			CK73HB1H102K	CHIP C 1000PF K	K2,K3,K5
C83			CK73HB1H102K	CHIP C 1000PF K	K6,E,E2
C84			CK73HB1A473K	CHIP C 0.047UF K	K2,K3,K5
C84			CK73HB1A473K	CHIP C 0.047UF K	K6,E,E2
C85			CK73HB1H681K	CHIP C 680PF K	K2,K3,K5
C85			CK73HB1H681K	CHIP C 680PF K	K6,E,E2
C90			CK73HB1E103K	CHIP C 0.010UF K	K2,K3,K5
C90			CK73HB1E103K	CHIP C 0.010UF K	K6,E,E2
C91			CK73HB1H471K	CHIP C 470PF K	
C92			CK73HB1H102K	CHIP C 1000PF K	
C93,94			CK73HB1E103K	CHIP C 0.010UF K	
CN5		*	E40-6893-05	FLAT CABLE CONNECTOR (24P)	
CN6			E40-6883-05	FLAT CABLE CONNECTOR (6P)	
L1,2			L92-0408-05	CHIP FERRITE	
L3			L92-0138-05	CHIP FERRITE	K2,K3,K5
L3			L92-0138-05	CHIP FERRITE	K6,E,E2
CP1			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP2			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K2,K3,K5
CP2			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K6,E,E2
CP3			RK74HB1J471J	CHIP-COM 470 J 1/16W	K2,K3,K5
CP3			RK74HB1J471J	CHIP-COM 470 J 1/16W	K6,E,E2
CP4,5			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K2,K3,K5
CP4,5			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K6,E,E2
CP6			RK74HB1J471J	CHIP-COM 470 J 1/16W	K3,K6,E
CP7-9			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K2,K3,K5
CP7-9			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K6,E,E2
CP10			RK74HB1J101J	CHIP-COM 100 J 1/16W	K2,K3,K5
CP10			RK74HB1J101J	CHIP-COM 100 J 1/16W	K6,E,E2
CP11-13			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K2,K3,K5
CP11-13			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	K6,E,E2
CP14			RK74HA1J102J	CHIP-COM 1.0K J 1/16W	K2,K3,K5
CP14			RK74HA1J102J	CHIP-COM 1.0K J 1/16W	K6,E,E2
R1			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R2			RK73HB1J103J	CHIP R 10K J 1/16W	
R3			RK73HB1J391J	CHIP R 390 J 1/16W	
R4			RK73HB1J823J	CHIP R 82K J 1/16W	
R5			RK73HB1J100J	CHIP R 10 J 1/16W	
R6			RK73HB1J821J	CHIP R 820 J 1/16W	
R7			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R8			RK73HB1J153J	CHIP R 15K J 1/16W	
R9			RK73HB1J333J	CHIP R 33K J 1/16W	
R10			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R11,12			RK73HB1J334J	CHIP R 330K J 1/16W	
R13			RK73HB1J471J	CHIP R 470 J 1/16W	
R14			RK73HB1J334J	CHIP R 330K J 1/16W	
R15			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R16			RK73HB1J470J	CHIP R 47 J 1/16W	
R17			RK73HB1J104J	CHIP R 100K J 1/16W	
R18			RK73HB1J393J	CHIP R 39K J 1/16W	
R19,20			RK73HB1J224J	CHIP R 220K J 1/16W	
R21,22			RK73HB1J563J	CHIP R 56K J 1/16W	
R23			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R24			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R26			RK73HB1J683J	CHIP R 68K J 1/16W	
R28-30			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R33-35			RK73HB1J104J	CHIP R 100K J 1/16W	
R37			RK73HB1J154J	CHIP R 150K J 1/16W	
R39,40			RK73HB1J103J	CHIP R 10K J 1/16W	
R41,42			RK73HB1J683J	CHIP R 68K J 1/16W	
R44,45			RK73HB1J104J	CHIP R 100K J 1/16W	
R47			RK73HB1J223J	CHIP R 22K J 1/16W	
R50			RK73HB1J223J	CHIP R 22K J 1/16W	
R52			RK73HB1J471J	CHIP R 470 J 1/16W	
R53			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R61-64			RK73HB1J332J	CHIP R 3.3K J 1/16W	K3,K6,E
R64			RK73HB1J332J	CHIP R 3.3K J 1/16W	K2,K5,E2
R65			RK73HB1J682J	CHIP R 6.8K J 1/16W	K2,K3,K5
R65			RK73HB1J682J	CHIP R 6.8K J 1/16W	K6,E,E2
R66			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2,K3,K5
R66			RK73HB1J000J	CHIP R 0.0 J 1/16W	K6,E,E2
R67			RK73HB1J471J	CHIP R 470 J 1/16W	K2,K3,K5
R67			RK73HB1J471J	CHIP R 470 J 1/16W	K6,E,E2
R69			RK73HB1J222J	CHIP R 2.2K J 1/16W	K2,K3,K5
R69			RK73HB1J222J	CHIP R 2.2K J 1/16W	K6,E,E2
R70-72			RK73HB1J103J	CHIP R 10K J 1/16W	K2,K3,K5
R70-72			RK73HB1J103J	CHIP R 10K J 1/16W	K6,E,E2
R73			RK73GB2A433J	CHIP R 43K J 1/10W	K2,K3,K5
R73			RK73GB2A433J	CHIP R 43K J 1/10W	K6,E,E2
R74			RK73HB1J121J	CHIP R 120 J 1/16W	K2,K3,K5
R74			RK73HB1J121J	CHIP R 120 J 1/16W	K6,E,E2
R75			RK73HB1J222J	CHIP R 2.2K J 1/16W	K2,K3,K5
R75			RK73HB1J222J	CHIP R 2.2K J 1/16W	K6,E,E2
R76			RK73HB1J681J	CHIP R 680 J 1/16W	K2,K3,K5
R76			RK73HB1J681J	CHIP R 680 J 1/16W	K6,E,E2
R77			RK73HB1J103J	CHIP R 10K J 1/16W	
R78			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R79			RK73HB1J563J	CHIP R 56K J 1/16W	
R81			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R82			RK73HB1J332J	CHIP R 3.3K J 1/16W	K,K4,E3
R83			RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2,K4
R83			RK73HB1J000J	CHIP R 0.0 J 1/16W	K5,E2,E3

PARTS LIST

DISPLAY UNIT (X54-3760-XX)
TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R83,84			RK73HB1J000J	CHIP R 0.0 J 1/16W	K3,K6,E
R85			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2,K5,E2
R86			RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K4,E3
R88			RK73HB1J000J	CHIP R 0.0 J 1/16W	
S1-4		✻	S70-0516-05	TACT SWITCH	
S5		✻	S70-0519-05	TACT SWITCH	K2,K5,E2
S5-20		✻	S70-0519-05	TACT SWITCH	K3,K6,E
S10		✻	S70-0519-05	TACT SWITCH	K2,K5,E2
S15		✻	S70-0519-05	TACT SWITCH	K2,K5,E2
S20		✻	S70-0519-05	TACT SWITCH	K2,K5,E2
MIC1	1A	✻	T91-0673-05	MIC ELEMENT	
D2			KDR731	DIODE	
D3,4			DA221	DIODE	
D15			HN2S03FE	DIODE	K2,K3,K5
D15			HN2S03FE	DIODE	K6,E,E2
D16			1SS388F	DIODE	K2,K3,K5
D16			1SS388F	DIODE	K6,E,E2
IC1,2			TC75W51FK(F)	MOS-IC	
IC4			R2A20178NP	MICROCONTROLLER IC	
IC6			TC75W51FK(F)	MOS-IC	
IC8			LC75857W-E	MOS-IC	K2,K3,K5
IC8			LC75857W-E	MOS-IC	K6,E,E2
Q1			UMG9N	TRANSISTOR	
Q2			SSM3K15TE(F)	FET	
Q3			KTC4075E(Y,GR)	TRANSISTOR	
Q4			2SC4738(GR)F	TRANSISTOR	
Q5			2SA1832(GR)F	TRANSISTOR	
Q6			2SA1362-F(GR)	TRANSISTOR	K2,K3,K5
Q6			2SA1362-F(GR)	TRANSISTOR	K6,E,E2
Q7,8			2SC5383-T111	TRANSISTOR	K2,K3,K5
Q7,8			2SC5383-T111	TRANSISTOR	K6,E,E2
TH1			ERTJ0EV104H	THERMISTOR	

TX-RX UNIT (X57-8050-XX) -10: K,K2,K3 -11: K4,K5,K6,E,E2,E3

C101,102			CK73HB1H471K	CHIP C 470PF K	
C106			CC73HCH1H150J	CHIP C 15PF J	K4,K5,K6
C106			CC73HCH1H150J	CHIP C 15PF J	E,E2,E3
C106			CC73HCH1H220J	CHIP C 22PF J	K,K2,K3
C107			CC73HCH1H120J	CHIP C 12PF J	K4,K5,K6
C107			CC73HCH1H120J	CHIP C 12PF J	E,E2,E3
C107			CC73HCH1H150J	CHIP C 15PF J	K,K2,K3
C109-111			CK73HB1H471K	CHIP C 470PF K	
C112			CK73HB1A104K	CHIP C 0.10UF K	
C113			CC73HCH1H060B	CHIP C 6.0PF B	K,K2,K3
C113			CC73HCH1H120J	CHIP C 12PF J	K4,K5,K6
C113			CC73HCH1H120J	CHIP C 12PF J	E,E2,E3
C114			CC73HCH1H100B	CHIP C 10PF B	K,K2,K3
C114			CC73HCH1H220J	CHIP C 22PF J	K4,K5,K6
C114			CC73HCH1H220J	CHIP C 22PF J	E,E2,E3
C115			CC73HCH1H030B	CHIP C 3.0PF B	K,K2,K3
C116			CK73HB1H471K	CHIP C 470PF K	
C118			CC73HCH1H120J	CHIP C 12PF J	K4,K5,K6
C118			CC73HCH1H120J	CHIP C 12PF J	E,E2,E3
C119			CK73HB1H471K	CHIP C 470PF K	
C120			CC73HCH1H221J	CHIP C 220PF J	
C121,122			CK73HB1H471K	CHIP C 470PF K	
C124			CC73HCH1H180G	CHIP C 18PF G	K,K2,K3

Ref. No.	Address	New parts	Parts No.	Description	Destination
C124			CC73HCH1H270G	CHIP C 27PF G	K4,K5,K6
C124			CC73HCH1H270G	CHIP C 27PF G	E,E2,E3
C125			CC73HCH1H151J	CHIP C 150PF J	
C126			CK73GB1E105K	CHIP C 1.0UF K	
C127			CC73HCH1H151J	CHIP C 150PF J	
C128			CK73GB1C104K	CHIP C 0.10UF K	
C129			CK73HB1E103K	CHIP C 0.010UF K	
C130			CK73HB1H471K	CHIP C 470PF K	
C131			CC73GCH1H390J	CHIP C 39PF J	K,K2,K3
C131			CC73GCH1H470J	CHIP C 47PF J	K4,K5,K6
C131			CC73GCH1H470J	CHIP C 47PF J	E,E2,E3
C135			CC73GCH1H330J	CHIP C 33PF J	K,K2,K3
C136			CC73GCH1H330J	CHIP C 33PF J	K4,K5,K6
C136			CC73GCH1H330J	CHIP C 33PF J	E,E2,E3
C138			CC73GCH1H060B	CHIP C 6.0PF B	K,K2,K3
C141			CC73GCH1H100C	CHIP C 10PF C	K4,K5,K6
C141			CC73GCH1H100C	CHIP C 10PF C	E,E2,E3
C144			CC73GCH1H070B	CHIP C 7.0PF B	K,K2,K3
C144			CC73GCH1H080B	CHIP C 8.0PF B	K4,K5,K6
C144			CC73GCH1H080B	CHIP C 8.0PF B	E,E2,E3
C148			CC73GCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C148			CC73GCH1H050B	CHIP C 5.0PF B	E,E2,E3
C148			CC73GCH1H060B	CHIP C 6.0PF B	K,K2,K3
C149			CC73GCH1H470J	CHIP C 47PF J	K,K2,K3
C149			CC73GCH1H680J	CHIP C 68PF J	K4,K5,K6
C149			CC73GCH1H680J	CHIP C 68PF J	E,E2,E3
C150			CK73HB1H471K	CHIP C 470PF K	
C151			CC73GCH1H101J	CHIP C 100PF J	
C152			CC73GCH1H030B	CHIP C 3.0PF B	K4,K5,K6
C152			CC73GCH1H030B	CHIP C 3.0PF B	E,E2,E3
C152			CC73GCH1H2R5B	CHIP C 2.5PF B	K,K2,K3
C153			CC73GCH1H010B	CHIP C 1.0PF B	K4,K5,K6
C153			CC73GCH1H010B	CHIP C 1.0PF B	E,E2,E3
C153			CC73GCH1H020B	CHIP C 2.0PF B	K,K2,K3
C154			CC73GCH1H080B	CHIP C 8.0PF B	K4,K5,K6
C154			CC73GCH1H080B	CHIP C 8.0PF B	E,E2,E3
C154			CC73GCH1H3R5B	CHIP C 3.5PF B	K,K2,K3
C155			CC73GCH1H030B	CHIP C 3.0PF B	
C156			CC73GCH1H090B	CHIP C 9.0PF B	K4,K5,K6
C156			CC73GCH1H090B	CHIP C 9.0PF B	E,E2,E3
C156			CC73GCH1H3R5B	CHIP C 3.5PF B	K,K2,K3
C157			CC73GCH1H010B	CHIP C 1.0PF B	K4,K5,K6
C157			CC73GCH1H010B	CHIP C 1.0PF B	E,E2,E3
C157			CC73GCH1H1R5B	CHIP C 1.5PF B	K,K2,K3
C158			CC73GCH1H050B	CHIP C 5.0PF B	K4,K5,K6
C158			CC73GCH1H050B	CHIP C 5.0PF B	E,E2,E3
C158			CC73GCH1H2R5B	CHIP C 2.5PF B	K,K2,K3
C160			CC73GCH1H030B	CHIP C 3.0PF B	K4,K5,K6
C160			CC73GCH1H030B	CHIP C 3.0PF B	E,E2,E3
C160			CC73GCH1H040B	CHIP C 4.0PF B	K,K2,K3
C161			CC73HCH1H040B	CHIP C 4.0PF B	K,K2,K3
C161			CC73HCH1H060B	CHIP C 6.0PF B	K4,K5,K6
C161			CC73HCH1H060B	CHIP C 6.0PF B	E,E2,E3
C163			CC73HCH1H020B	CHIP C 2.0PF B	K,K2,K3
C163			CC73HCH1H030B	CHIP C 3.0PF B	K4,K5,K6
C163			CC73HCH1H030B	CHIP C 3.0PF B	E,E2,E3
C164			CC73GCH1H180J	CHIP C 18PF J	K,K2,K3
C170			CK73HB1H471K	CHIP C 470PF K	
C173			CK73HB1H471K	CHIP C 470PF K	
C174			CK73FB1E225K	CHIP C 2.2UF K	

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C175			CK73HB1A104K	CHIP C	0.10UF	K	
C177			CK73HB1H471K	CHIP C	470PF	K	
C178			CC73HCH1H470J	CHIP C	47PF	J	
C179			CC73HCH1H100B	CHIP C	10PF	B	
C180,181			CK73HB1H471K	CHIP C	470PF	K	
C182			CK73HB1A104K	CHIP C	0.10UF	K	
C201,202			CK73HB1E103K	CHIP C	0.010UF	K	
C203			CK73HB1H471K	CHIP C	470PF	K	
C204			CK73FB1E475K	CHIP C	4.7UF	K	
C205			CK73HB1H471K	CHIP C	470PF	K	
C207			CK73HB1H471K	CHIP C	470PF	K	
C208			CC73HCH1H060B	CHIP C	6.0PF	B	
C209			CC73HCH1H120J	CHIP C	12PF	J	
C210			CK73HB1E103K	CHIP C	0.010UF	K	
C211			CC73HCH1H020B	CHIP C	2.0PF	B	
C212			CC73HCH1H100B	CHIP C	10PF	B	K,K2,K3
C212			CC73HCH1H120J	CHIP C	12PF	J	K4,K5,K6
C212			CC73HCH1H120J	CHIP C	12PF	J	E,E2,E3
C213			CC73HCH1H020B	CHIP C	2.0PF	B	
C214			CC73HCH1H070B	CHIP C	7.0PF	B	K,K2,K3
C214			CC73HCH1H080B	CHIP C	8.0PF	B	K4,K5,K6
C214			CC73HCH1H080B	CHIP C	8.0PF	B	E,E2,E3
C215,216			CK73HB1H471K	CHIP C	470PF	K	
C217			CC73HCH1H030B	CHIP C	3.0PF	B	K,K2,K3
C217			CC73HCH1H040B	CHIP C	4.0PF	B	K4,K5,K6
C217			CC73HCH1H040B	CHIP C	4.0PF	B	E,E2,E3
C218			CK73HB1H471K	CHIP C	470PF	K	
C219			CC73HCH1H010B	CHIP C	1.0PF	B	K,K2,K3
C219			CC73HCH1H3R5B	CHIP C	3.5PF	B	K4,K5,K6
C219			CC73HCH1H3R5B	CHIP C	3.5PF	B	E,E2,E3
C220			CC73HCH1H100B	CHIP C	10PF	B	K,K2,K3
C220			CC73HCH1H180G	CHIP C	18PF	G	K4,K5,K6
C220			CC73HCH1H180G	CHIP C	18PF	G	E,E2,E3
C221			CK73HB1H471K	CHIP C	470PF	K	
C223			CK73HB1H471K	CHIP C	470PF	K	
C224			CC73HCH1H020B	CHIP C	2.0PF	B	
C225			CC73HCH1H100B	CHIP C	10PF	B	K,K2,K3
C225			CC73HCH1H220G	CHIP C	22PF	G	K4,K5,K6
C225			CC73HCH1H220G	CHIP C	22PF	G	E,E2,E3
C226			CC73HCH1H010B	CHIP C	1.0PF	B	
C227			CK73HB1H471K	CHIP C	470PF	K	
C228			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C229			CC73HCH1H100B	CHIP C	10PF	B	K,K2,K3
C229			CC73HCH1H220G	CHIP C	22PF	G	K4,K5,K6
C229			CC73HCH1H220G	CHIP C	22PF	G	E,E2,E3
C230			CC73HCH1H010B	CHIP C	1.0PF	B	K,K2,K3
C230			CC73HCH1H020B	CHIP C	2.0PF	B	K4,K5,K6
C230			CC73HCH1H020B	CHIP C	2.0PF	B	E,E2,E3
C232			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C233			CK73HB1E103K	CHIP C	0.010UF	K	
C235			CK73HB1H471K	CHIP C	470PF	K	
C236			CK73GB1E105K	CHIP C	1.0UF	K	
C237			CK73HB1A104K	CHIP C	0.10UF	K	
C240			CK73HB1H471K	CHIP C	470PF	K	
C242			CK73HB1A104K	CHIP C	0.10UF	K	
C244			CK73HB1H471K	CHIP C	470PF	K	
C246			CK73HB1H471K	CHIP C	470PF	K	
C247			CC73HCH1H020B	CHIP C	2.0PF	B	
C249			CC73HCH1H100B	CHIP C	10PF	B	K,K2,K3
C249			CC73HCH1H180G	CHIP C	18PF	G	K4,K5,K6

Ref. No.	Address	New parts	Parts No.	Description			Destination
C249			CC73HCH1H180G	CHIP C	18PF	G	E,E2,E3
C251			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C255			CK73HB1H471K	CHIP C	470PF	K	
C256			CC73HCH1H030B	CHIP C	3.0PF	B	K,K2,K3
C256			CC73HCH1H040B	CHIP C	4.0PF	B	K4,K5,K6
C256			CC73HCH1H040B	CHIP C	4.0PF	B	E,E2,E3
C258			CC73HCH1H100B	CHIP C	10PF	B	K,K2,K3
C258			CC73HCH1H200G	CHIP C	20PF	G	K4,K5,K6
C258			CC73HCH1H200G	CHIP C	20PF	G	E,E2,E3
C259			CC73HCH1H060B	CHIP C	6.0PF	B	K,K2,K3
C259			CC73HCH1H070B	CHIP C	7.0PF	B	K4,K5,K6
C259			CC73HCH1H070B	CHIP C	7.0PF	B	E,E2,E3
C260			CC73HCH1H030B	CHIP C	3.0PF	B	K,K2,K3
C260			CC73HCH1H040B	CHIP C	4.0PF	B	K4,K5,K6
C260			CC73HCH1H040B	CHIP C	4.0PF	B	E,E2,E3
C261			CC73HCH1H060B	CHIP C	6.0PF	B	K,K2,K3
C261			CC73HCH1H070B	CHIP C	7.0PF	B	K4,K5,K6
C261			CC73HCH1H070B	CHIP C	7.0PF	B	E,E2,E3
C293			CK73HB1H471K	CHIP C	470PF	K	
C301,302			CK73HB1E103K	CHIP C	0.010UF	K	
C303			CK73HB1A104K	CHIP C	0.10UF	K	
C307			CC73HCH1H100B	CHIP C	10PF	B	
C308			CC73HCH1H101J	CHIP C	100PF	J	
C310			CC73HCH1H101J	CHIP C	100PF	J	
C311			CC73HCH1H151J	CHIP C	150PF	J	
C313			CC73HCH1H330G	CHIP C	33PF	G	
C314-316			CK73HB1A104K	CHIP C	0.10UF	K	
C317			CK73FB1A106K	CHIP C	10UF	K	
C318			CC73HCH1H680J	CHIP C	68PF	J	
C319			CK73HB1E103K	CHIP C	0.010UF	K	
C320-323			CK73HB1A104K	CHIP C	0.10UF	K	
C324			CK73FB1A106K	CHIP C	10UF	K	
C327			CC73HCH1H100B	CHIP C	10PF	B	
C330			CK73HB1A104K	CHIP C	0.10UF	K	
C332			CK73HB1E103K	CHIP C	0.010UF	K	
C335			CK73HB1A104K	CHIP C	0.10UF	K	
C338			CK73HB1E103K	CHIP C	0.010UF	K	
C339-341			CK73HB1A104K	CHIP C	0.10UF	K	
C343			CK73GB1A474K	CHIP C	0.47UF	K	
C346			CC73HCH1H470J	CHIP C	47PF	J	
C350			CK73HB1H471K	CHIP C	470PF	K	
C351			CK73HB1E103K	CHIP C	0.010UF	K	
C353,354			CK73HB1E103K	CHIP C	0.010UF	K	
C356			CC73HCH1H030B	CHIP C	3.0PF	B	
C357			CC73HCH1H180J	CHIP C	18PF	J	
C358			CC73HCH1H060B	CHIP C	6.0PF	B	
C359			CC73HCH1H470J	CHIP C	47PF	J	
C360			CK73HB1E103K	CHIP C	0.010UF	K	
C361,362			CC73HCH1H101J	CHIP C	100PF	J	
C398			CC73HCH1H100B	CHIP C	10PF	B	
C401			CK73HB1E103K	CHIP C	0.010UF	K	
C402			CK73GB1C225K	CHIP C	2.2UF	K	
C405			CC73HCH1H101J	CHIP C	100PF	J	
C406			CC73HCH1H100B	CHIP C	10PF	B	
C408			CK73HB1E103K	CHIP C	0.010UF	K	
C409			CC73HCH1H100B	CHIP C	10PF	B	
C410			CC73HCH1H101J	CHIP C	100PF	J	
C411			CK73HB1E103K	CHIP C	0.010UF	K	
C412			CC73HCH1H100B	CHIP C	10PF	B	
C413-415			CK73HB1E103K	CHIP C	0.010UF	K	

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C416-420			CC73HCH1H101J	CHIP C	100PF	J	
C421			CK73HB1A104K	CHIP C	0.10UF	K	
C422			CC73HCH1H101J	CHIP C	100PF	J	
C423			CK73HB1A104K	CHIP C	0.10UF	K	
C424,425			CC73HCH1H101J	CHIP C	100PF	J	
C426			CS77CA1VR15M	CHIP TNTL	0.15UF	35WV	
C427			CS77BA1D100M	CHIP TNTL	10UF	20WV	
C428			C92-0863-05	CHIP TNTL	0.047UF	35WV	
C429			CK73HB1E103K	CHIP C	0.010UF	K	
C430,431			CC73HCH1H101J	CHIP C	100PF	J	
C432			C93-0787-05	CHIP C	0.1UF	J	
C434-438			CC73HCH1H101J	CHIP C	100PF	J	
C439			CK73HB1A104K	CHIP C	0.10UF	K	
C440			CC73HCH1H331J	CHIP C	330PF	J	K4,K5,K6
C440			CC73HCH1H331J	CHIP C	330PF	J	E,E2,E3
C440,441			CC73HCH1H121J	CHIP C	120PF	J	K,K2,K3
C441			CK73HB1H471K	CHIP C	470PF	K	K4,K5,K6
C441			CK73HB1H471K	CHIP C	470PF	K	E,E2,E3
C442			CC73HCH1H470J	CHIP C	47PF	J	
C443			CK73HB1A105K	CHIP C	1.0UF	K	
C444			CK73HB1H102K	CHIP C	1000PF	K	
C446			CC73HCH1H181J	CHIP C	180PF	J	
C447			CC73HCH1H121J	CHIP C	120PF	J	K,K2,K3
C447			CC73HCH1H271J	CHIP C	270PF	J	K4,K5,K6
C447			CC73HCH1H271J	CHIP C	270PF	J	E,E2,E3
C449			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C450			CS77BP1A100M	CHIP TNTL	10UF	10WV	
C451			CC73HCH1H050B	CHIP C	5.0PF	B	
C453			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C454			CC73HCH1H050B	CHIP C	5.0PF	B	
C455			CC73HCH1H060B	CHIP C	6.0PF	B	K,K2,K3
C455			CC73HCH1H080B	CHIP C	8.0PF	B	K4,K5,K6
C455			CC73HCH1H080B	CHIP C	8.0PF	B	E,E2,E3
C456			CC73HCH1H040B	CHIP C	4.0PF	B	K,K2,K3
C456,457			CC73HCH1H040B	CHIP C	4.0PF	B	K4,K5,K6
C456,457			CC73HCH1H040B	CHIP C	4.0PF	B	E,E2,E3
C457			CC73HCH1H030B	CHIP C	3.0PF	B	K,K2,K3
C458			CC73HCH1H050B	CHIP C	5.0PF	B	K,K2,K3
C458			CC73HCH1H060B	CHIP C	6.0PF	B	K4,K5,K6
C458			CC73HCH1H060B	CHIP C	6.0PF	B	E,E2,E3
C459			CC73HCH1H030B	CHIP C	3.0PF	B	
C460			CK73GB0J475K	CHIP C	4.7UF	K	
C461			CK73HB1H471K	CHIP C	470PF	K	
C462			CC73HCH1H040B	CHIP C	4.0PF	B	K,K2,K3
C462			CC73HCH1H080B	CHIP C	8.0PF	B	K4,K5,K6
C462			CC73HCH1H080B	CHIP C	8.0PF	B	E,E2,E3
C463			CC73HCH1H020B	CHIP C	2.0PF	B	K,K2,K3
C463			CC73HCH1H050B	CHIP C	5.0PF	B	K4,K5,K6
C463			CC73HCH1H050B	CHIP C	5.0PF	B	E,E2,E3
C464			CK73HB1H471K	CHIP C	470PF	K	
C466,467			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C468			CC73HCH1H050B	CHIP C	5.0PF	B	
C469			CK73HB1H471K	CHIP C	470PF	K	
C470			CK73HB1H102K	CHIP C	1000PF	K	
C471			CC73HCH1H100B	CHIP C	10PF	B	K4,K5,K6
C471			CC73HCH1H100B	CHIP C	10PF	B	E,E2,E3
C471			CC73HCH1H180G	CHIP C	18PF	G	K,K2,K3
C473			CC73HCH1H050B	CHIP C	5.0PF	B	
C474			CK73HB1H471K	CHIP C	470PF	K	
C475			CC73HCH1H100B	CHIP C	10PF	B	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C476			CK73HB1H471K	CHIP C	470PF	K	K,K2,K3
C476-478			CK73HB1H471K	CHIP C	470PF	K	K4,K5,K6
C476-478			CK73HB1H471K	CHIP C	470PF	K	E,E2,E3
C477			CC73HCH1H050B	CHIP C	5.0PF	B	K,K2,K3
C478			CK73HB1H471K	CHIP C	470PF	K	K,K2,K3
C480			CK73HB1A104K	CHIP C	0.10UF	K	
C481			CK73HB1H471K	CHIP C	470PF	K	
C482			CC73HCH1H070B	CHIP C	7.0PF	B	
C483			CK73HB1H102K	CHIP C	1000PF	K	
C484			CK73HB1H471K	CHIP C	470PF	K	
C486			CC73HCH1H101J	CHIP C	100PF	J	
C487,488			CK73HB1H471K	CHIP C	470PF	K	
C491			CC73HCH1H101J	CHIP C	100PF	J	
C492			CC73GCH1H101J	CHIP C	100PF	J	
C498			CC73HCH1HR75B	CHIP C	0.75PF	B	K,K2,K3
C498,499			CC73HCH1H010B	CHIP C	1.0PF	B	K4,K5,K6
C498,499			CC73HCH1H010B	CHIP C	1.0PF	B	E,E2,E3
C501,502			CK73HB1H471K	CHIP C	470PF	K	
C503			CK73HB1H102K	CHIP C	1000PF	K	
C504			CK73HB1E682K	CHIP C	6800PF	K	
C505			CK73HB1H471K	CHIP C	470PF	K	
C506			CC73HCH1H220J	CHIP C	22PF	J	
C507			CK73HB1H471K	CHIP C	470PF	K	
C508,509			CK73HB1A105K	CHIP C	1.0UF	K	
C510			CK73HB1H471K	CHIP C	470PF	K	
C511			CK73GB1E105K	CHIP C	1.0UF	K	
C512			CK73HB1H102K	CHIP C	1000PF	K	
C513			CK73HB1E682K	CHIP C	6800PF	K	
C514			CK73GB0J475K	CHIP C	4.7UF	K	
C515			CK73HB1A105K	CHIP C	1.0UF	K	
C516			CK73HB1A104K	CHIP C	0.10UF	K	
C517,518			CK73HB1A105K	CHIP C	1.0UF	K	
C519			CK73HB1H102K	CHIP C	1000PF	K	
C520			CK73HB1A104K	CHIP C	0.10UF	K	
C521			CK73GB0J106K	CHIP C	10UF	K	
C522			CK73HB1A224K	CHIP C	0.22UF	K	
C523			CK73HB1H471K	CHIP C	470PF	K	
C524			CK73HB1A105K	CHIP C	1.0UF	K	
C525			CK73HB1H102K	CHIP C	1000PF	K	
C526			CS77CP1A100M	CHIP TNTL	10UF	10WV	
C527			CK73GB0J106K	CHIP C	10UF	K	
C528			CK73HB1A105K	CHIP C	1.0UF	K	
C529			CK73GB1E105K	CHIP C	1.0UF	K	
C530			CK73HB1A105K	CHIP C	1.0UF	K	
C532			CC73HCH1H560J	CHIP C	56PF	J	
C533-535			CK73HB1H102K	CHIP C	1000PF	K	
C536			CK73HB1E682K	CHIP C	6800PF	K	
C537			CK73HB1E103K	CHIP C	0.010UF	K	
C538			CK73HB1H471K	CHIP C	470PF	K	
C539			CK73HB1H102K	CHIP C	1000PF	K	
C540			CK73FB1E475K	CHIP C	4.7UF	K	
C541			CK73HB1H471K	CHIP C	470PF	K	
C543			CS77BP1C010M	CHIP TNTL	1.0UF	16WV	
C545			CK73GB1E105K	CHIP C	1.0UF	K	
C548			CK73HB1H471K	CHIP C	470PF	K	
C549			CK73HB1A104K	CHIP C	0.10UF	K	
C550-552			CK73HB1H471K	CHIP C	470PF	K	
C553			CK73FB1C106K	CHIP C	10UF	K	
C554,555			CK73HB1H471K	CHIP C	470PF	K	
C557			CK73HB1H471K	CHIP C	470PF	K	

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C558			CK73GB0J106K	CHIP C	10UF	K	
C599			CK73HB1H471K	CHIP C	470PF	K	
C601			CC73HCH1H101J	CHIP C	100PF	J	
C602			CK73HB1A104K	CHIP C	0.10UF	K	
C603			CK73HB1E103K	CHIP C	0.010UF	K	
C604			CK73HB1A683K	CHIP C	0.068UF	K	
C605			CK73HB1A104K	CHIP C	0.10UF	K	
C606-608			CK73HB1E103K	CHIP C	0.010UF	K	
C609,610			CK73GB0J106K	CHIP C	10UF	K	
C614			CC73HCH1H470J	CHIP C	47PF	J	
C616			CC73HCH1H470J	CHIP C	47PF	J	
C618			CC73HCH1H470J	CHIP C	47PF	J	
C620			CC73HCH1H470J	CHIP C	47PF	J	
C622,623			CC73HCH1H470J	CHIP C	47PF	J	
C628			CC73HCH1H470J	CHIP C	47PF	J	
C631			CC73HCH1H470J	CHIP C	47PF	J	
C638-644			CC73HCH1H470J	CHIP C	47PF	J	
C646,647			CK73HB1A104K	CHIP C	0.10UF	K	
C648			CK73HB1E103K	CHIP C	0.010UF	K	
C649,650			CK73HB1H102K	CHIP C	1000PF	K	
C652			CK73HB1A105K	CHIP C	1.0UF	K	
C653			CK73HB1E103K	CHIP C	0.010UF	K	
C655			CK73HB1H102K	CHIP C	1000PF	K	
C657-660			CK73HB1A104K	CHIP C	0.10UF	K	
C661			CK73HB1A105K	CHIP C	1.0UF	K	
C663			CK73HB1A105K	CHIP C	1.0UF	K	
C664-667			CC73HCH1H470J	CHIP C	47PF	J	
C668			CK73HB1E103K	CHIP C	0.010UF	K	
C669			CK73HB1C473K	CHIP C	0.047UF	K	
C670			CK73HB1E103K	CHIP C	0.010UF	K	
C673			CK73HB1A104K	CHIP C	0.10UF	K	
C674			CK73HB1E103K	CHIP C	0.010UF	K	
C675			CK73HB1A104K	CHIP C	0.10UF	K	
C677			CK73GB0J106K	CHIP C	10UF	K	
C678,679			CK73HB1E103K	CHIP C	0.010UF	K	
C680			CK73HB1A105K	CHIP C	1.0UF	K	
C681			CK73HB1A104K	CHIP C	0.10UF	K	
C682			CK73HB1H102K	CHIP C	1000PF	K	
C683			CK73HB1A104K	CHIP C	0.10UF	K	
C684			CK73HB1E682K	CHIP C	6800PF	K	
C685			CK73GB0J106K	CHIP C	10UF	K	
C686			CC73HCH1H030B	CHIP C	3.0PF	B	
C687			CK73HB1E103K	CHIP C	0.010UF	K	
C688			CK73HB1A105K	CHIP C	1.0UF	K	
C689			CK73HB1A104K	CHIP C	0.10UF	K	
C691			CK73HB1E103K	CHIP C	0.010UF	K	
C692			CK73HB1A105K	CHIP C	1.0UF	K	
C693			CK73HB1A104K	CHIP C	0.10UF	K	
C695			CK73HB1E103K	CHIP C	0.010UF	K	
C696,697			CK73HB1H102K	CHIP C	1000PF	K	
C698-700			CK73HB1E103K	CHIP C	0.010UF	K	
C701			CK73HB1A104K	CHIP C	0.10UF	K	
C901,902			CK73HB1H102K	CHIP C	1000PF	K	
C903			CK73HB1A105K	CHIP C	1.0UF	K	
C904			CC73HCH1H221J	CHIP C	220PF	J	
C905			CK73HB1A105K	CHIP C	1.0UF	K	
C906			CK73HB1A104K	CHIP C	0.10UF	K	
C907			CK73GB0J106K	CHIP C	10UF	K	
C908			CC73HCH1H101J	CHIP C	100PF	J	
C909			CK73HB1A473K	CHIP C	0.047UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C910			CK73GB1E105K	CHIP C	1.0UF	K	
C913			CK73GB1E105K	CHIP C	1.0UF	K	
C914			CS77BB20J101M	CHIP TNTL	100UF	6.3WV	
C915,916			CC73HCH1H101J	CHIP C	100PF	J	
C917			CK73HB1H102K	CHIP C	1000PF	K	
C918			CC73HCH1H101J	CHIP C	100PF	J	
C920			CK73HB1H102K	CHIP C	1000PF	K	
C921			CC73HCH1H101J	CHIP C	100PF	J	
C922			CK73HB1H102K	CHIP C	1000PF	K	
C923			CC73HCH1H470J	CHIP C	47PF	J	
C927			CC73HCH1H470J	CHIP C	47PF	J	
CN1			E40-6573-05	FLAT CABLE CONNECTOR (11P)			
CN2		*	E40-6893-05	FLAT CABLE CONNECTOR (24P)			
CN3			E40-6568-05	FLAT CABLE CONNECTOR (6P)			
CN4			E41-2359-05	PIN ASSY			
J1			E11-0484-05	3.5D PHONE JACK (3.5D/3P)			
J2			E11-0715-05	2.5D PHONE JACK			
F1			F53-0324-15	FUSE (2.5A)			
F2			F53-0319-15	FUSE (1A)			
CF1			L72-1017-05	CERAMIC FILTER			
CF2			L72-1040-05	CERAMIC FILTER			
L102			L40-1275-71	SMALL FIXED INDUCTOR (12NH)			K4,K5,K6
L102			L40-1275-71	SMALL FIXED INDUCTOR (12NH)			E,E2,E3
L102			L40-8265-71	SMALL FIXED INDUCTOR (8.2NH)			K,K2,K3
L103			L40-2275-71	SMALL FIXED INDUCTOR (22NH)			
L104			L40-1875-71	SMALL FIXED INDUCTOR (18NH)			K,K2,K3
L105			L41-2275-43	SMALL FIXED INDUCTOR (22NH)			
L106			L92-0149-05	CHIP FERRITE			
L108			L92-0149-05	CHIP FERRITE			
L109			L34-4565-05	AIR-CORE COIL			
L114-116			L34-4564-05	AIR-CORE COIL			
L117			L41-2285-43	SMALL FIXED INDUCTOR (220NH)			
L118			L34-4564-05	AIR-CORE COIL			K,K2,K3
L118			L34-4565-05	AIR-CORE COIL			K4,K5,K6
L118			L34-4565-05	AIR-CORE COIL			E,E2,E3
L119			L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)			K4,K5,K6
L119			L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)			E,E2,E3
L119			L40-8265-92	SMALL FIXED INDUCTOR (8.2NH)			K,K2,K3
L120			L92-0163-05	BEADS CORE			
L201			L92-0138-05	CHIP FERRITE			
L202			L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)			
L203			L41-2785-39	SMALL FIXED INDUCTOR (0.27UH)			
L204,205			L40-1575-71	SMALL FIXED INDUCTOR (15NH)			K,K2,K3
L204,205			L40-1875-71	SMALL FIXED INDUCTOR (18NH)			K4,K5,K6
L204,205			L40-1875-71	SMALL FIXED INDUCTOR (18NH)			E,E2,E3
L206			L41-1875-53	SMALL FIXED INDUCTOR (18NH)			K,K2,K3
L206			L41-2275-53	SMALL FIXED INDUCTOR (22NH)			K4,K5,K6
L206			L41-2275-53	SMALL FIXED INDUCTOR (22NH)			E,E2,E3
L207-209			L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)			
L210			L92-0138-05	CHIP FERRITE			
L211			L41-2285-14	SMALL FIXED INDUCTOR (220NH)			
L212,213			L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)			
L214			L41-3978-45	SMALL FIXED INDUCTOR (39NH)			K,K2,K3
L214			L41-4778-45	SMALL FIXED INDUCTOR (47NH)			K4,K5,K6
L214			L41-4778-45	SMALL FIXED INDUCTOR (47NH)			E,E2,E3
L302			L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)			
L305			L40-5675-92	SMALL FIXED INDUCTOR (56NH)			
L306			L40-1085-57	SMALL FIXED INDUCTOR (100NH)			

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L307			L40-1591-86	SMALL FIXED INDUCTOR (1.5UH)	
L308			L92-0138-05	CHIP FERRITE	
L401			L41-4795-39	SMALL FIXED INDUCTOR (4.7UH)	
L402,403			L92-0163-05	BEADS CORE	
L404			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L404-413			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K4,K5,K6
L404-413			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	E,E2,E3
L405,406			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K,K2,K3
L407			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L408			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K,K2,K3
L409			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L410			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K,K2,K3
L411			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L412			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K,K2,K3
L413			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L415			L40-1578-67	SMALL FIXED INDUCTOR (15NH)	K,K2,K3
L415			L40-1878-67	SMALL FIXED INDUCTOR (18NH)	K4,K5,K6
L415			L40-1878-67	SMALL FIXED INDUCTOR (18NH)	E,E2,E3
L416			L40-1878-67	SMALL FIXED INDUCTOR (18NH)	K,K2,K3
L416			L40-2278-67	SMALL FIXED INDUCTOR (22NH)	K4,K5,K6
L416			L40-2278-67	SMALL FIXED INDUCTOR (22NH)	E,E2,E3
L417			L92-0446-05	BEADS CORE	
L418			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K,K2,K3
L418,419			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K4,K5,K6
L418,419			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	E,E2,E3
L419			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L421			L40-1275-92	SMALL FIXED INDUCTOR (12NH)	
L422			L40-2775-71	SMALL FIXED INDUCTOR (27NH)	K,K2,K3
L422			L40-3375-71	SMALL FIXED INDUCTOR (33NH)	K4,K5,K6
L422			L40-3375-71	SMALL FIXED INDUCTOR (33NH)	E,E2,E3
L423			L40-5675-71	SMALL FIXED INDUCTOR (56NH)	
L424			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	
L425			L92-0163-05	BEADS CORE	
L426			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K,K2,K3
L426,427			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	K4,K5,K6
L426,427			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	E,E2,E3
L427			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	K,K2,K3
L428,429			L92-0163-05	BEADS CORE	
L502			L92-0163-05	BEADS CORE	
L503			L33-1494-05	SMALL FIXED INDUCTOR (4.7UH)	
L504			L92-0149-05	CHIP FERRITE	
L505			L92-0467-05	CHIP FERRITE	
L506			L92-0162-05	BEADS CORE	
L508			L92-0467-05	CHIP FERRITE	
L509			L33-1530-05	SMALL FIXED INDUCTOR (15UH)	
L511		✻	L41-1092-02	SMALL FIXED INDUCTOR (1.0UH)	
L602-604			L92-0408-05	CHIP FERRITE	
L607			L92-0444-05	CHIP FERRITE	
L609			L92-0444-05	CHIP FERRITE	
L611			L92-0444-05	CHIP FERRITE	
L613			L92-0163-05	BEADS CORE	
L614-616			L92-0444-05	CHIP FERRITE	
L617			L92-0162-05	BEADS CORE	
L901-903			L92-0408-05	CHIP FERRITE	
L904,905			L92-0163-05	BEADS CORE	
X401		✻	L77-3073-05	TCXO (16.8MHZ)	
X601			L77-3015-05	TCXO (18.432MHZ)	
XF1			L71-0655-05	MCF (49.95MHZ)	
CP401			RK74HB1J100J	CHIP-COM 10 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
CP501			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP601			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP602			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP603			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP605,606			RK74HB1J104J	CHIP-COM 100K J 1/16W	
CP607			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP608			RK74HB1J000J	CHIP-COM 0.0 J 1/16W	
CP610			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2,K3
R2			RK73HB1J000J	CHIP R 0.0 J 1/16W	K4,K5,K6
R2			RK73HB1J000J	CHIP R 0.0 J 1/16W	E,E2,E3
R101			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R102			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R110			RK73HB1J103J	CHIP R 10K J 1/16W	
R111			RK73HB1J222J	CHIP R 2.2K J 1/16W	K4,K5,K6
R111			RK73HB1J222J	CHIP R 2.2K J 1/16W	E,E2,E3
R111			RK73HB1J272J	CHIP R 2.7K J 1/16W	K,K2,K3
R112			RK73HB1J561J	CHIP R 560 J 1/16W	
R113			RK73HB1J220J	CHIP R 22 J 1/16W	
R114			RK73GB2A270J	CHIP R 27 J 1/10W	
R115			RK73HB1J120J	CHIP R 12 J 1/16W	
R116,117			RK73HB1J471J	CHIP R 470 J 1/16W	
R118			RK73HB1J470J	CHIP R 47 J 1/16W	
R119			RK73HB1J393J	CHIP R 39K J 1/16W	
R120			RK73HB1J223J	CHIP R 22K J 1/16W	
R121			RK73HB1J331J	CHIP R 330 J 1/16W	
R122			RK73HB1J270J	CHIP R 27 J 1/16W	
R123,124			RK73HH1J333D	CHIP R 33K D 1/16W	
R126			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R128			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R129,130			RK73HB1J271J	CHIP R 270 J 1/16W	
R131			RK73GB2A823J	CHIP R 82K J 1/10W	
R132			RK73GB2A000J	CHIP R 0.0 J 1/10W	K4,K5,K6
R132			RK73GB2A000J	CHIP R 0.0 J 1/10W	E,E2,E3
R141,142			RK73HB1J474J	CHIP R 470K J 1/16W	
R143			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R144			RK73HB1J273J	CHIP R 27K J 1/16W	
R146			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R147			RK73HB1J561J	CHIP R 560 J 1/16W	
R148-150			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R152			RK73HB1J103J	CHIP R 10K J 1/16W	
R153-155			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R156,157			RK73HH1J154D	CHIP R 150K D 1/16W	
R158			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R159			RK73HH1J474D	CHIP R 470K D 1/16W	
R160			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R161			RK73HH1J474D	CHIP R 470K D 1/16W	
R162			RK73HB1J103J	CHIP R 10K J 1/16W	
R163			RK73HB1J274J	CHIP R 270K J 1/16W	
R164			RK73HB1J104J	CHIP R 100K J 1/16W	
R165			RK73HB1J563J	CHIP R 56K J 1/16W	
R166			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R167			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R168			RK73HB1J823J	CHIP R 82K J 1/16W	
R169			RK73HB1J104J	CHIP R 100K J 1/16W	
R170			RK73HB1J000J	CHIP R 0.0 J 1/16W	K4,K5,K6
R170			RK73HB1J000J	CHIP R 0.0 J 1/16W	E,E2,E3
R201			RK73HB1J470J	CHIP R 47 J 1/16W	
R203			RK73HB1J681J	CHIP R 680 J 1/16W	
R204			RK73HB1J472J	CHIP R 4.7K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R205			RK73HB1J221J	CHIP R	220	J	1/16W	K4,K5,K6
R205			RK73HB1J221J	CHIP R	220	J	1/16W	E,E2,E3
R205			RK73HB1J271J	CHIP R	270	J	1/16W	K,K2,K3
R207			RK73HB1J104J	CHIP R	100K	J	1/16W	
R208			RK73HB1J184J	CHIP R	180K	J	1/16W	K,K2,K3
R208			RK73HH1J154D	CHIP R	150K	D	1/16W	K4,K5,K6
R208			RK73HH1J154D	CHIP R	150K	D	1/16W	E,E2,E3
R209			RK73HB1J104J	CHIP R	100K	J	1/16W	
R210			RK73HB1J224J	CHIP R	220K	J	1/16W	
R212			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R213			RK73HB1J104J	CHIP R	100K	J	1/16W	
R216			RK73HB1J563J	CHIP R	56K	J	1/16W	
R217			RK73HB1J104J	CHIP R	100K	J	1/16W	
R220			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R221			RK73HB1J103J	CHIP R	10K	J	1/16W	
R224			RK73HB1J103J	CHIP R	10K	J	1/16W	
R225			RK73HB1J680J	CHIP R	68	J	1/16W	
R226			RK73HH1J151D	CHIP R	150	D	1/16W	
R227			RK73HB1J224J	CHIP R	220K	J	1/16W	
R228,229			RK73HB1J104J	CHIP R	100K	J	1/16W	
R231			RK73HB1J104J	CHIP R	100K	J	1/16W	
R232			RK73HB1J683J	CHIP R	68K	J	1/16W	
R233			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R234			RK73HB1J104J	CHIP R	100K	J	1/16W	
R235			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R236-238			RK73HB1J104J	CHIP R	100K	J	1/16W	
R241			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R245			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R301			RK73HB1J561J	CHIP R	560	J	1/16W	
R302			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R304			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R305			RK73HB1J100J	CHIP R	10	J	1/16W	
R306			RK73HH1J334D	CHIP R	330K	D	1/16W	
R308			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R310			RK73HB1J103J	CHIP R	10K	J	1/16W	
R317			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R320			RK73HB1J274J	CHIP R	270K	J	1/16W	
R321			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R326			RK73HB1J104J	CHIP R	100K	J	1/16W	
R327			RK73HB1J103J	CHIP R	10K	J	1/16W	
R328			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R329			RK73HB1J223J	CHIP R	22K	J	1/16W	
R330			RK73HB1J183J	CHIP R	18K	J	1/16W	
R331			RK73HB1J103J	CHIP R	10K	J	1/16W	
R332			RK73HB1J473J	CHIP R	47K	J	1/16W	
R335			RK73HB1J221J	CHIP R	220	J	1/16W	
R338			RK73HB1J101J	CHIP R	100	J	1/16W	
R340			RK73HB1J564J	CHIP R	560K	J	1/16W	
R341			RK73HB1J104J	CHIP R	100K	J	1/16W	
R344			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R345,346			RK73HB1J271J	CHIP R	270	J	1/16W	
R349			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R351			RK73HB1J104J	CHIP R	100K	J	1/16W	
R352			RK73HB1J103J	CHIP R	10K	J	1/16W	
R354			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R355,356			RK73HB1J822J	CHIP R	8.2K	J	1/16W	
R357			RK73GB2A821J	CHIP R	820	J	1/10W	
R400			RK73HB1J470J	CHIP R	47	J	1/16W	
R404			RK73HB1J470J	CHIP R	47	J	1/16W	
R407			RK73HB1J100J	CHIP R	10	J	1/16W	
R408,409			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R410			RK73HH1J124D	CHIP R	120K	D	1/16W	
R411,412			RK73HB1J100J	CHIP R	10	J	1/16W	
R413			RK73HB1J473J	CHIP R	47K	J	1/16W	
R414			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R415			RK73HB1J100J	CHIP R	10	J	1/16W	
R416,417			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R418			RK73HH1J181D	CHIP R	180	D	1/16W	
R419			RK73HH1J391D	CHIP R	390	D	1/16W	
R420			RK73HH1J473D	CHIP R	47K	D	1/16W	
R421			RK73HB1J103J	CHIP R	10K	J	1/16W	
R422			RK73HB1J106J	CHIP R	10M	J	1/16W	
R423			RK73HH1J474D	CHIP R	470K	D	1/16W	
R426			RK73HB1J473J	CHIP R	47K	J	1/16W	
R427			RK73HB1J683J	CHIP R	68K	J	1/16W	
R428,429			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R432			RK73HB1J124J	CHIP R	120K	J	1/16W	
R433,434			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R436			RK73HB1J104J	CHIP R	100K	J	1/16W	K,K2,K3
R436			RK73HB1J823J	CHIP R	82K	J	1/16W	K4,K5,K6
R436			RK73HB1J823J	CHIP R	82K	J	1/16W	E,E2,E3
R437,438			RK73HB1J473J	CHIP R	47K	J	1/16W	
R439			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R440			RK73HB1J104J	CHIP R	100K	J	1/16W	
R441			RK73HB1J474J	CHIP R	470K	J	1/16W	
R443			RK73HH1J181D	CHIP R	180	D	1/16W	K,K2,K3
R443			RK73HH1J221D	CHIP R	220	D	1/16W	K4,K5,K6
R443			RK73HH1J221D	CHIP R	220	D	1/16W	E,E2,E3
R444			RK73HH1J151D	CHIP R	150	D	1/16W	
R446			RK73HB1J220J	CHIP R	22	J	1/16W	K,K2,K3
R446,447			RK73HB1J220J	CHIP R	22	J	1/16W	K4,K5,K6
R446,447			RK73HB1J220J	CHIP R	22	J	1/16W	E,E2,E3
R447			RK73HB1J100J	CHIP R	10	J	1/16W	K,K2,K3
R448			RK73HB1J474J	CHIP R	470K	J	1/16W	
R449			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R450			RK73HB1J473J	CHIP R	47K	J	1/16W	
R451			RK73HH1J154D	CHIP R	150K	D	1/16W	
R452			RK73HB1J101J	CHIP R	100	J	1/16W	
R455			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R456			RK73HB1J103J	CHIP R	10K	J	1/16W	
R457			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R458			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R459			RK73HB1J331J	CHIP R	330	J	1/16W	
R460			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R461			RK73HB1J470J	CHIP R	47	J	1/16W	
R462			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R463			RK73HB1J224J	CHIP R	220K	J	1/16W	
R464			RK73HB1J183J	CHIP R	18K	J	1/16W	
R467			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R468			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R469			RK73HB1J104J	CHIP R	100K	J	1/16W	
R470-472			RK73HB1J000J	CHIP R	0.0	J	1/16W	K4,K5,K6
R470-472			RK73HB1J000J	CHIP R	0.0	J	1/16W	E,E2,E3
R470,471			RK73HB1J000J	CHIP R	0.0	J	1/16W	K,K2,K3
R472			RK73HB1J330J	CHIP R	33	J	1/16W	K,K2,K3
R474			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R475			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R501			RK73HH1J274D	CHIP R	270K	D	1/16W	
R502			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R503			RK73HB1J000J	CHIP R	0.0	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R504			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R505			RK73HH1J184D	CHIP R 180K D 1/16W	
R506			RK73HB1J101J	CHIP R 100 J 1/16W	
R507			RK73HB1J683J	CHIP R 68K J 1/16W	
R508			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R509			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R510			RK73HB1J100J	CHIP R 10 J 1/16W	
R511			RK73HB1J471J	CHIP R 470 J 1/16W	
R512			RK73HH1J683D	CHIP R 68K D 1/16W	
R513			RK73HH1J333D	CHIP R 33K D 1/16W	
R514			RK73HH1J394D	CHIP R 390K D 1/16W	
R515			RK73HH1J154D	CHIP R 150K D 1/16W	
R516			RK73HB1J103J	CHIP R 10K J 1/16W	
R517,518			RK73HB1J474J	CHIP R 470K J 1/16W	
R519			RK73HB1J103J	CHIP R 10K J 1/16W	
R520			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R524			RK73HB1J474J	CHIP R 470K J 1/16W	
R529			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R530-533			RK73HB1J104J	CHIP R 100K J 1/16W	
R539,540			RK73HB1J474J	CHIP R 470K J 1/16W	
R542,543			RK73HB1J474J	CHIP R 470K J 1/16W	
R544			RK73HB1J103J	CHIP R 10K J 1/16W	
R545			RK73HB1J474J	CHIP R 470K J 1/16W	
R546			RK73HB1J103J	CHIP R 10K J 1/16W	
R547			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R548			RK73GB2A101J	CHIP R 100 J 1/10W	
R549,550			RK73HB1J474J	CHIP R 470K J 1/16W	
R551			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R552			RK73HB1J101J	CHIP R 100 J 1/16W	
R553			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R554			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R604			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R606			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R609			RK73HB1J101J	CHIP R 100 J 1/16W	
R610,611			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R612-614			RK73HB1J101J	CHIP R 100 J 1/16W	
R615,616			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R617			RK73HB1J101J	CHIP R 100 J 1/16W	
R618			RK73HB1J474J	CHIP R 470K J 1/16W	
R619,620			RK73HB1J100J	CHIP R 10 J 1/16W	
R623			RK73HB1J103J	CHIP R 10K J 1/16W	
R624,625			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R628,629			RK73HB1J220J	CHIP R 22 J 1/16W	
R630			RK73HB1J474J	CHIP R 470K J 1/16W	
R631			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R632			RK73HB1J104J	CHIP R 100K J 1/16W	
R633,634			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R635			RK73HH1J103D	CHIP R 10K D 1/16W	
R636			RK73HB1J104J	CHIP R 100K J 1/16W	
R637			RK73HH1J104D	CHIP R 100K D 1/16W	
R638			RK73HB1J183J	CHIP R 18K J 1/16W	
R639			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R640-642			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R646,647			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R649			RK73HB1J104J	CHIP R 100K J 1/16W	
R650			RK73HB1J474J	CHIP R 470K J 1/16W	
R653			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R655			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R656			RK73HB1J563J	CHIP R 56K J 1/16W	
R657,658			RK73HB1J103J	CHIP R 10K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R659			RK73HB1J563J	CHIP R 56K J 1/16W	
R660			RK73HB1J823J	CHIP R 82K J 1/16W	
R661			RK73HB1J184J	CHIP R 180K J 1/16W	
R662			RK73HB1J103J	CHIP R 10K J 1/16W	
R663			RK73HB1J223J	CHIP R 22K J 1/16W	
R664			RK73HB1J153J	CHIP R 15K J 1/16W	
R665			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R666,667			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R668			RK73HB1J103J	CHIP R 10K J 1/16W	
R690			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R901			RK73HB1J103J	CHIP R 10K J 1/16W	
R902			RK73HB1J563J	CHIP R 56K J 1/16W	
R903			RK73HB1J473J	CHIP R 47K J 1/16W	
R904			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R905			RK73HB1J474J	CHIP R 470K J 1/16W	
R906			RK73HH1J151D	CHIP R 150 D 1/16W	
R907			RK73HB1J103J	CHIP R 10K J 1/16W	
R908			RK73HH1J334D	CHIP R 330K D 1/16W	
R909			RK73HB1J274J	CHIP R 270K J 1/16W	
R910			RK73HB1J473J	CHIP R 47K J 1/16W	
R911			RK73HB1J273J	CHIP R 27K J 1/16W	
R912			RK73HB1J681J	CHIP R 680 J 1/16W	
R913			RK73HB1J101J	CHIP R 100 J 1/16W	
R914			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R919			RK73GB2A104J	CHIP R 100K J 1/10W	
R920			RK73HB1J473J	CHIP R 47K J 1/16W	
R921			RK73HB1J682J	CHIP R 6.8K J 1/16W	
D101			HZU5CLL	ZENER DIODE	
D102,103			HVC131	DIODE	
D105,106			RN142S	DIODE	
D201-204			1SV305F	VARIABLE CAPACITANCE DIODE	
D206,207			1SV305F	VARIABLE CAPACITANCE DIODE	
D401			DA221	DIODE	
D402			1SV282-F	VARIABLE CAPACITANCE DIODE	
D403,404			1SV323F	VARIABLE CAPACITANCE DIODE	
D405-409			1SV282-F	VARIABLE CAPACITANCE DIODE	
D410			1SV278F	VARIABLE CAPACITANCE DIODE	
D411			1SV282-F	VARIABLE CAPACITANCE DIODE	
D412,413			HSC277	DIODE	
D414			HSC119	DIODE	
D415			1SV282-F	VARIABLE CAPACITANCE DIODE	
D501			1SR154-400	DIODE	
D502			1SS388F	DIODE	
D505			1SS388F	DIODE	
D506			HRB0502A	DIODE	
D508			DAN222	DIODE	
D509			1SS388F	DIODE	
D511,512			1SS416	DIODE	
D901			1SS416	DIODE	
D902			DAN222	DIODE	
IC101			TA75W01FUF	MOS-IC	
IC201			TC75W51FK(F)	MOS-IC	
IC302			TK10931VTL-G	ANALOGUE IC	
IC304			TC75W51FK(F)	MOS-IC	
IC402			XC221A1200MRG	MOS-IC	
IC403			SKY72310-362	MOS-IC	
IC404			TC75W51FK(F)	MOS-IC	
IC501,502			NJM2878F4-33	BI-POLAR IC	
IC503			XC9235A15CM-G	MOS-IC	

PARTS LIST

TX-RX UNIT (X57-8050-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC504			XC6209B502P-G	MOS-IC	
IC505			XC6209B332M-G	MOS-IC	
IC506			LT1616ES6-PBF	ANALOGUE IC	
IC507			XC61CC5602N-G	MOS-IC	
IC509			TC7W53FK(F)	MOS-IC	
IC601			**Note 1**	ROM IC	
IC603			**Note 1**	MICROPROCESSOR IC	
IC605			**Note 1**	SRAM IC	
IC607			XC6119C29ANR	MOS-IC	
IC609			SM5023CNDH-G	MOS-IC	
IC610			**Note 1**	MOS-IC	
IC611,612			TC7SH08FU-F	MOS-IC	
IC613		✻	KXSD9-2050	MOS-IC	
IC901			TA7368FG	MOS-IC	
IC902			XC6209B502P-G	MOS-IC	
IC904			TC75S51FE(F)	MOS-IC	
Q102		✻	2SC5754	TRANSISTOR	
Q103			RD01MUS1-T113	FET	
Q104			RD07MUS2BT112	FET	
Q105			2SC5383-T111	TRANSISTOR	
Q106			RT1N441U-T111	TRANSISTOR	
Q107			SSM3K15TE(F)	FET	
Q108			SSM3J05FU-F	FET	
Q109			SSM3K15TE(F)	FET	
Q110			SSM6L05FU-F	FET	
Q201,202			3SK318	FET	
Q301			2SC5108(Y)F	TRANSISTOR	
Q303			2SC4215-F(Y)	TRANSISTOR	
Q401,402			MCH3914(8)-H	FET	
Q403			2SC5383-T111	TRANSISTOR	
Q405			2SC5108(Y)F	TRANSISTOR	
Q406			SSM6L05FU-F	FET	
Q407			SSM3J05FU-F	FET	
Q408			2SC5636	TRANSISTOR	
Q501			2SJ648-A	FET	
Q502			SSM3K15TE(F)	FET	
Q503			EMD5	TRANSISTOR	
Q505			2SA1955A-F	TRANSISTOR	
Q506,507			SSM6N16FE-F	FET	
Q509			EMD12	TRANSISTOR	
Q510			RT1N141U-T111	TRANSISTOR	
Q511			RT1N441U-T111	TRANSISTOR	
Q512			SSM6L05FU-F	FET	
Q602			SSM3K15TE(F)	FET	
Q901			RT1N141U-T111	TRANSISTOR	
Q902			2SA1362-F(GR)	TRANSISTOR	
Q903			RT1N441U-T111	TRANSISTOR	
Q904,905			2SK3577-A	FET	
Q906			RT1N141U-T111	TRANSISTOR	
Q907			UPA672T-A	FET	
TH101			ERTJ0EV104H	THERMISTOR	
TH402			ERTJ0EV104H	THERMISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.